


Fiat Idea 2003 – 2012 fuse box diagram

Fuse box on the dashboard

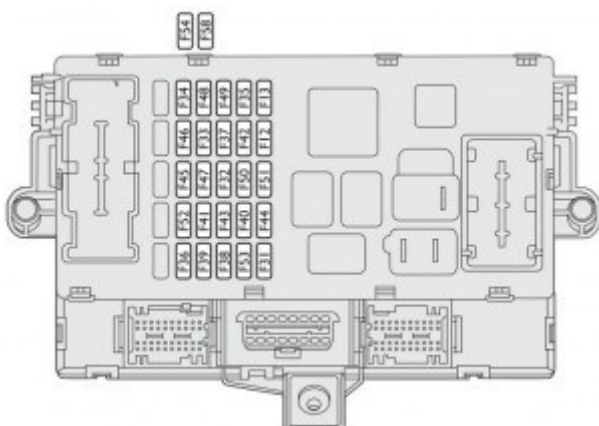

Fiat Idea – fuse box – dashboard


User	Fuse	Ampere rating [A]
Right-hand dipped beam headlight	F12	7,5
Left-hand dipped beam headlight / headlight aiming device	F13	7,5
Reversing lights / engine compartment control box relay coils / body computer	F31	7,5
Available	F32	—
Left rear power window	F33	20
Right rear power window	F34	20
+15 Cruise control, signal from switch on brake pedal for control units (*)	F35	7,5
+30 Presetting for trailer control unit, rear locks front locks with single door control unit (*)	F36	10
+15 Third brake light, instrument panel, brake lights (*)	F37	7,5
Boot unlocking	F38	20
+30 EOBD diagnostic socket, sound system, navigator, tyre pressure control unit (*)	F39	10
Rear heated screen	F40	30
Heated door electric mirrors	F41	7,5
+15 ABS / ESP control unit (*)	F42	7,5
Windscreen wiper/washer	F43	30
Cigar lighter / current socket on tunnel	F44	15
Heated seats	F45	15
Boot current socket	F46	15
Driver's door control unit power supply (power window, lock	F47	20
Passenger's door control unit power supply (power window, lock)	F48	20

+15 utilities (left and central dashboard control lights, electric mirrors, heated seat control lighting, presetting for radiotelephone, navigator, rain / daylight sensors, parking sensor control unit, sunroof control lighting) (*)	F49	7,5
Airbag control unit	F50	7,5
+15 Tyre pressure control unit, ECO / Sport control (*)	F51	7,5
Rear screen wiper/washer	F52	15
+30 Direction indicators, hazard lights, instrument panel (*)	F53	7,5

(*) +30 = battery directive positive terminal (not under key)

(*) +15 = positive terminal under key

Fuse box in engine compartment

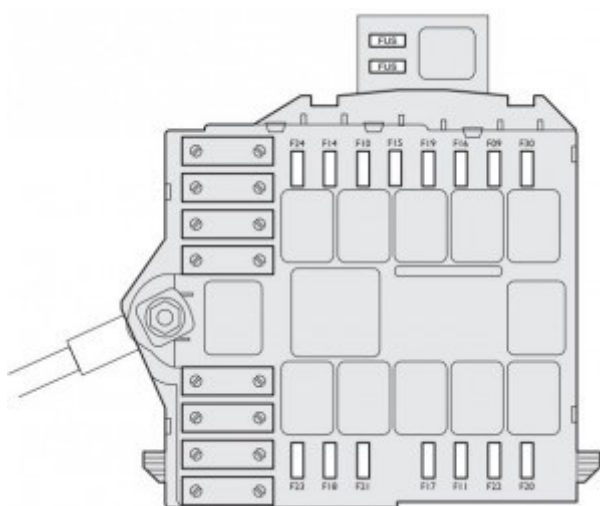

Fiat Idea – fuse box – engine compartment

User	Fuse	Ampere rating [A]
Headlight washer fluid	F09	20
Horn	F10	15
Electronic injection secondary services	F11	15
Right main beam headlight	F14	7,5
Left main beam headlight	F15	7,5
Electronic injection primary services	F17	10
+30 Engine control unit / Radiator electric fan remote control switch (1.9 Multijet) (*)	F18	10
Compressor	F19	7,5
Free	F20	—
Fuel pump	F21	15
Electronic injection primary services (1.2 16V, 1.4 16V)	F22	15
Electronic injection primary services (Multijet engine)	F22	20
Electronic injection primary services (petrol engine)	F22	15

+30 Dualogic gearbox (*)	F23	30
+15 Electric power steering (*)	F24	7,5
Front fog lights	F30	15

(*) +30 = battery directive positive terminal (not under key)

(*) +15 = positive terminal under key

Optional fusebox (on auxiliary bracket)

User	Fuse	Ampere rating [A]
+30 Outside radio amplifier (*)	F54	15
+30 Sunroof (*)	F58	20

(*) +30 = battery directive positive terminal (not under key)

(*) +15 = positive terminal under key