

Citroen C6 (2005 – 2012) – fuse box diagram

Year of production: 2005, 2006, 2007, 2008, 2009, 2010, 2011, 2012

Fuse box under dashboard

There are two fuse boxes under the dashboard, one in the engine compartment and another in the boot under the left hand wing trim

To access the fuses under the dashboard, open the glovebox and detach the stowage cover.

Dashboard fuses (Box B)

Refference	Ampere rating [A]	Function
G29	5	Deflation detection – Changer for 6 CDs
G30	5	Diagnostic socket
G31	5	Telematics according to destination
G32	25	Amplifier
G33	10	Hydraulic suspension system
G34	15	Automatic gearbox
G35	15	Front passenger's heated seat
G36	15	Driver's heated seat
G37	—	—
G38	30	Driver's electric seat
G39	—	—
G40	30	Passenger's electric seat

Dashboard fuses (Box C)

Refference	Ampere rating [A]	Function
F1	—	—
F2	—	—
F3	5	Airbag

F4	10	Braking system – Active bonnet – Cruise control / speed limiter – Photochromic rear view mirror – Diagnostic socket – Multifunction screen inclination motor
F5	30	Front window – Sun roof
F6	30	Rear window
F7	5	Sun visor lighting – Glove box lighting – Interior lamps – Rear cigar-lighter
F8	20	Controls at the steering wheel – Display – Opening of windows (Micro-descent) – Alarm – Radio
F9	30	Front cigar-lighter
F10	15	Boot relay unit – Trailer relay unit
F11	15	Steering lock
F12	15	Driver's and front passenger's seat belt warning lamp – Opening of windows (Micro-descent) – Electric seats – Parking assistance – Audio system JBL
F13	5	Active bonnet – Rain and brightness sensor – Windscreen wiper – Engine relay unit supply
F14	15	Lane Departure Warning System – Air conditioning – Instrument panel – Head-up display – Airbags – Bluetooth® (Handsfree kit) – BHI relay
F15	30	Central locking – Child safety
F16	SHUNT	—
F17	40	Ventilation

Fuse box in engine compartment

To access the fusebox in the engine compartment, undo each screw a 1/4 turn.

Reference	Ampere rating [A]	Function
F1	20	Engine ECU – Cooling fan
F2	15	Horn
F3	10	Screen wash pump

F4	20	Headlamp wash
F5	15	Fuel pump (petrol) – Preheating – Injection (Diesel)
F6	10	Braking system
F7	10	Automatic gearbox
F8	20	Starter
F9	10	Active bonnet – Xenon dual function directional headlamps
F10	30	Injectors – Ignition coil – Electrovalves (petrol) – Engine ECU – Fuel supply (Diesel)
F11	40	Air conditioning (Blower)
F12	30	Windscreen wiper
F13	40	BSI
F14	—	—

Fuse box in the boot

To access the fusebox located under the left hand wing trim:

1. Move aside the trim on the left-hand side.
2. Move aside the electrical cables connecting to the fusebox
3. Open the fusebox

Refference	Ampere rating [A]	Function
F1	15	Fuel flap
F2	—	—
F3	—	—
F4	15	Speed-sensitive rear spoiler (defl ector)
F5	40	Heated rear screen
G36	15/25	Rear LH electric heated seat (Pack Lounge) / Benchseat
G37	15/25	Rear RH electric heated seat (Pack Lounge) / Benchseat
G38	30	Rear electric seat adjustments (Pack Lounge)
G39	30	Cigar-lighter – Rear accessory socket

G40	25	Electric parking brake
-----	----	------------------------

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.