 
 
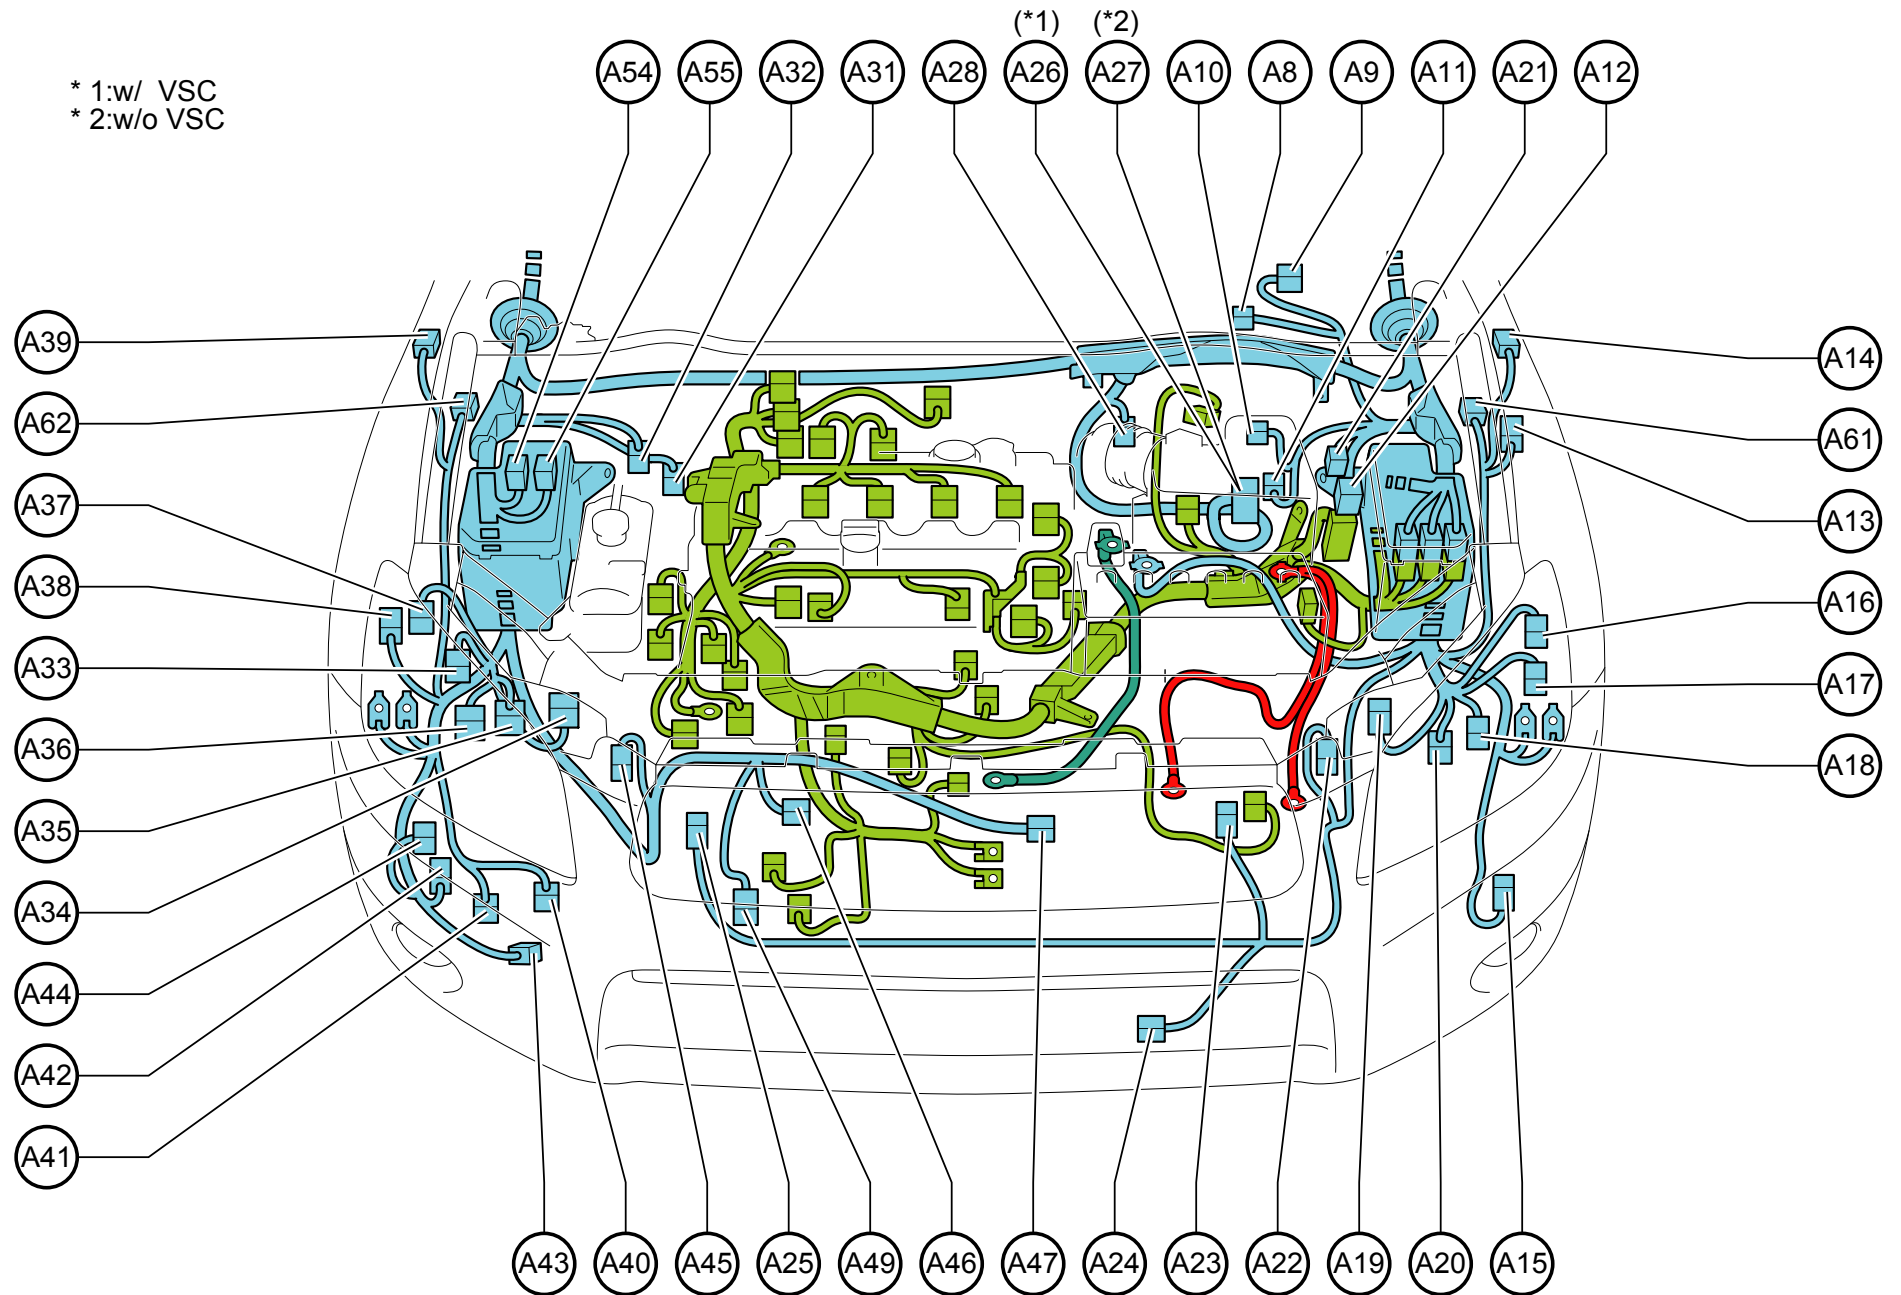 
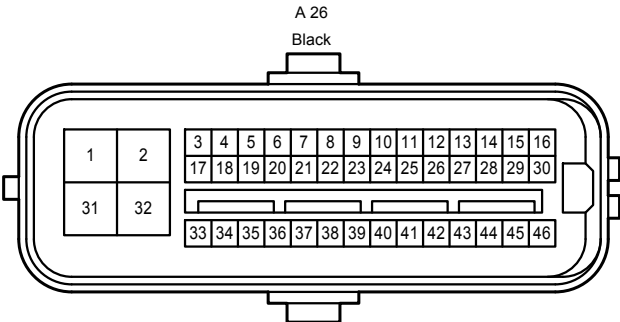 
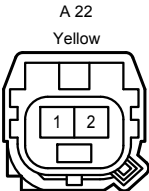 
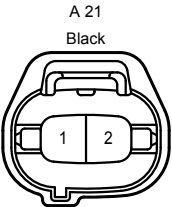 
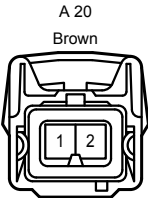 
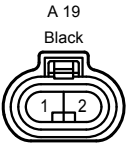 
 
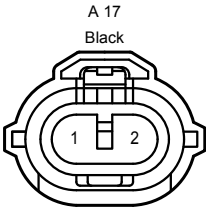 
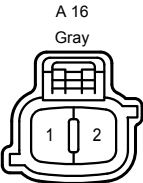 
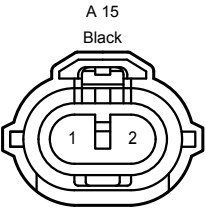 
 






















* 1:w/ VSC
* 2:w/o VSC

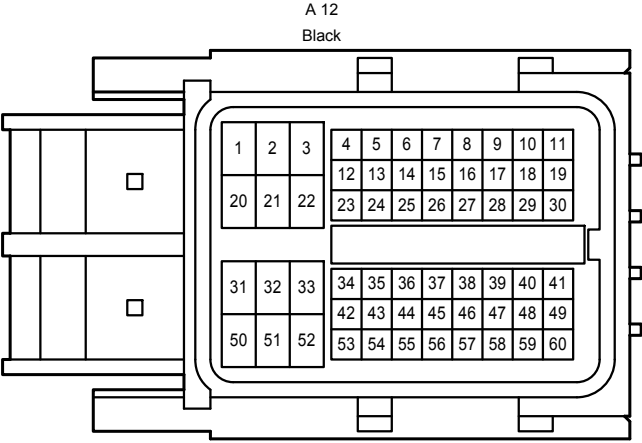


- A 8 Windshield Wiper Motor
- A 9 Front Wiper Deicer
- A 10 Brake Fluid Level Warning SW
- A 11 Fuel Filter Warning SW
- A 12 Engine ECU
- A 13 Wireless Door Lock Buzzer
- A 14 Turn Signal Lamp (Front Side LH)
- A 15 Fog Lamp (Front LH)
- A 16 Turn Signal Lamp (Front LH)
- A 17 Headlamp (LH Low)
- A 18 Headlamp Leveling Motor (LH)
- A 19 Headlamp (LH High)
- A 20 Clearance Lamp (Front LH)
- A 21 Option Connector
- A 22 Airbag Sensor (Front LH)
- A 23 Horn (Low)
- A 24 Ambient Temp. Sensor
- A 25 Horn (High)
- A 26 Skid Control ECU with Actuator
- A 27 Skid Control ECU with Actuator
- A 28 Fuel Pump
- A 31 Power Heater Assembly
- A 32 A/C Pressure Sensor
- A 33 Clearance Lamp (Front RH)
- A 34 Headlamp (RH High)
- A 35 Headlamp Leveling Motor (RH)
- A 36 Headlamp (RH Low)
- A 37 Turn Signal Lamp (Front RH)
- A 38 Tire Pressure Warning Antenna (Front)
- A 39 Turn Signal Lamp (Front Side RH)
- A 40 Rear Washer Motor
- A 41 Front Washer Motor
- A 42 Fog Lamp (Front RH)
- A 43 Headlamp Cleaner Motor
- A 44 Headlamp Cleaner Control Relay
- A 45 Airbag Sensor (Front RH)
- A 46 A/C Condenser Fan Motor
- A 47 Radiator Fan Motor
- A 49 Inlet Air Temp. Sensor
- A 54 Junction Connector
- A 55 Junction Connector
- A 61 Speed Sensor (Front LH)
- A 62 Speed Sensor (Front RH)

                     Position of Parts in Engine Compartment <LHD 2AD-FHV>




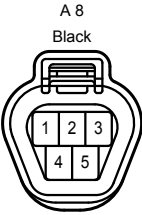


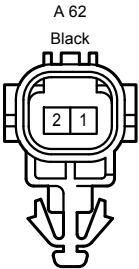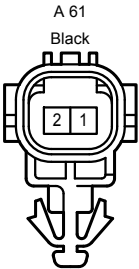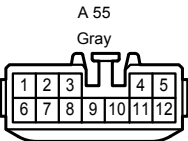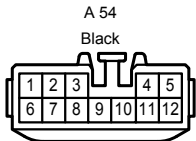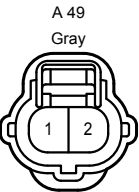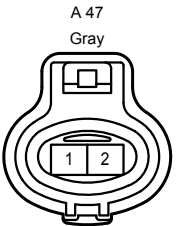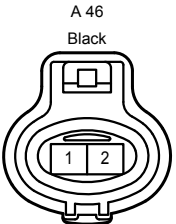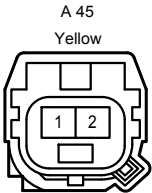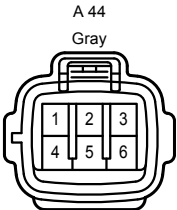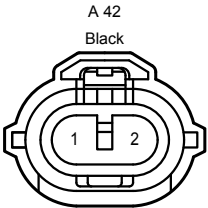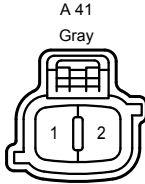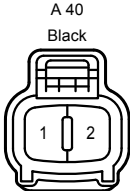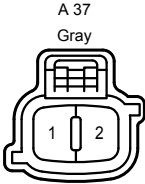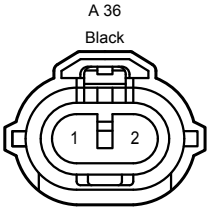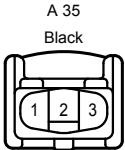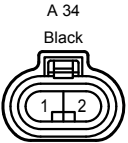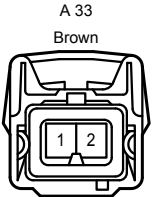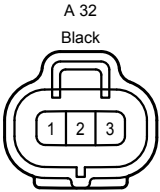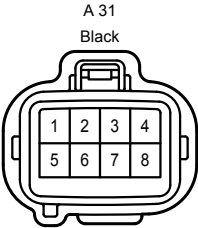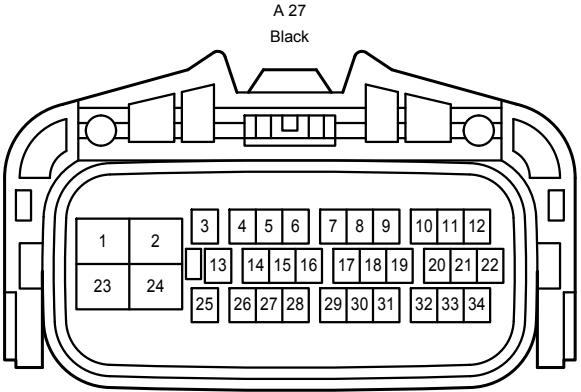


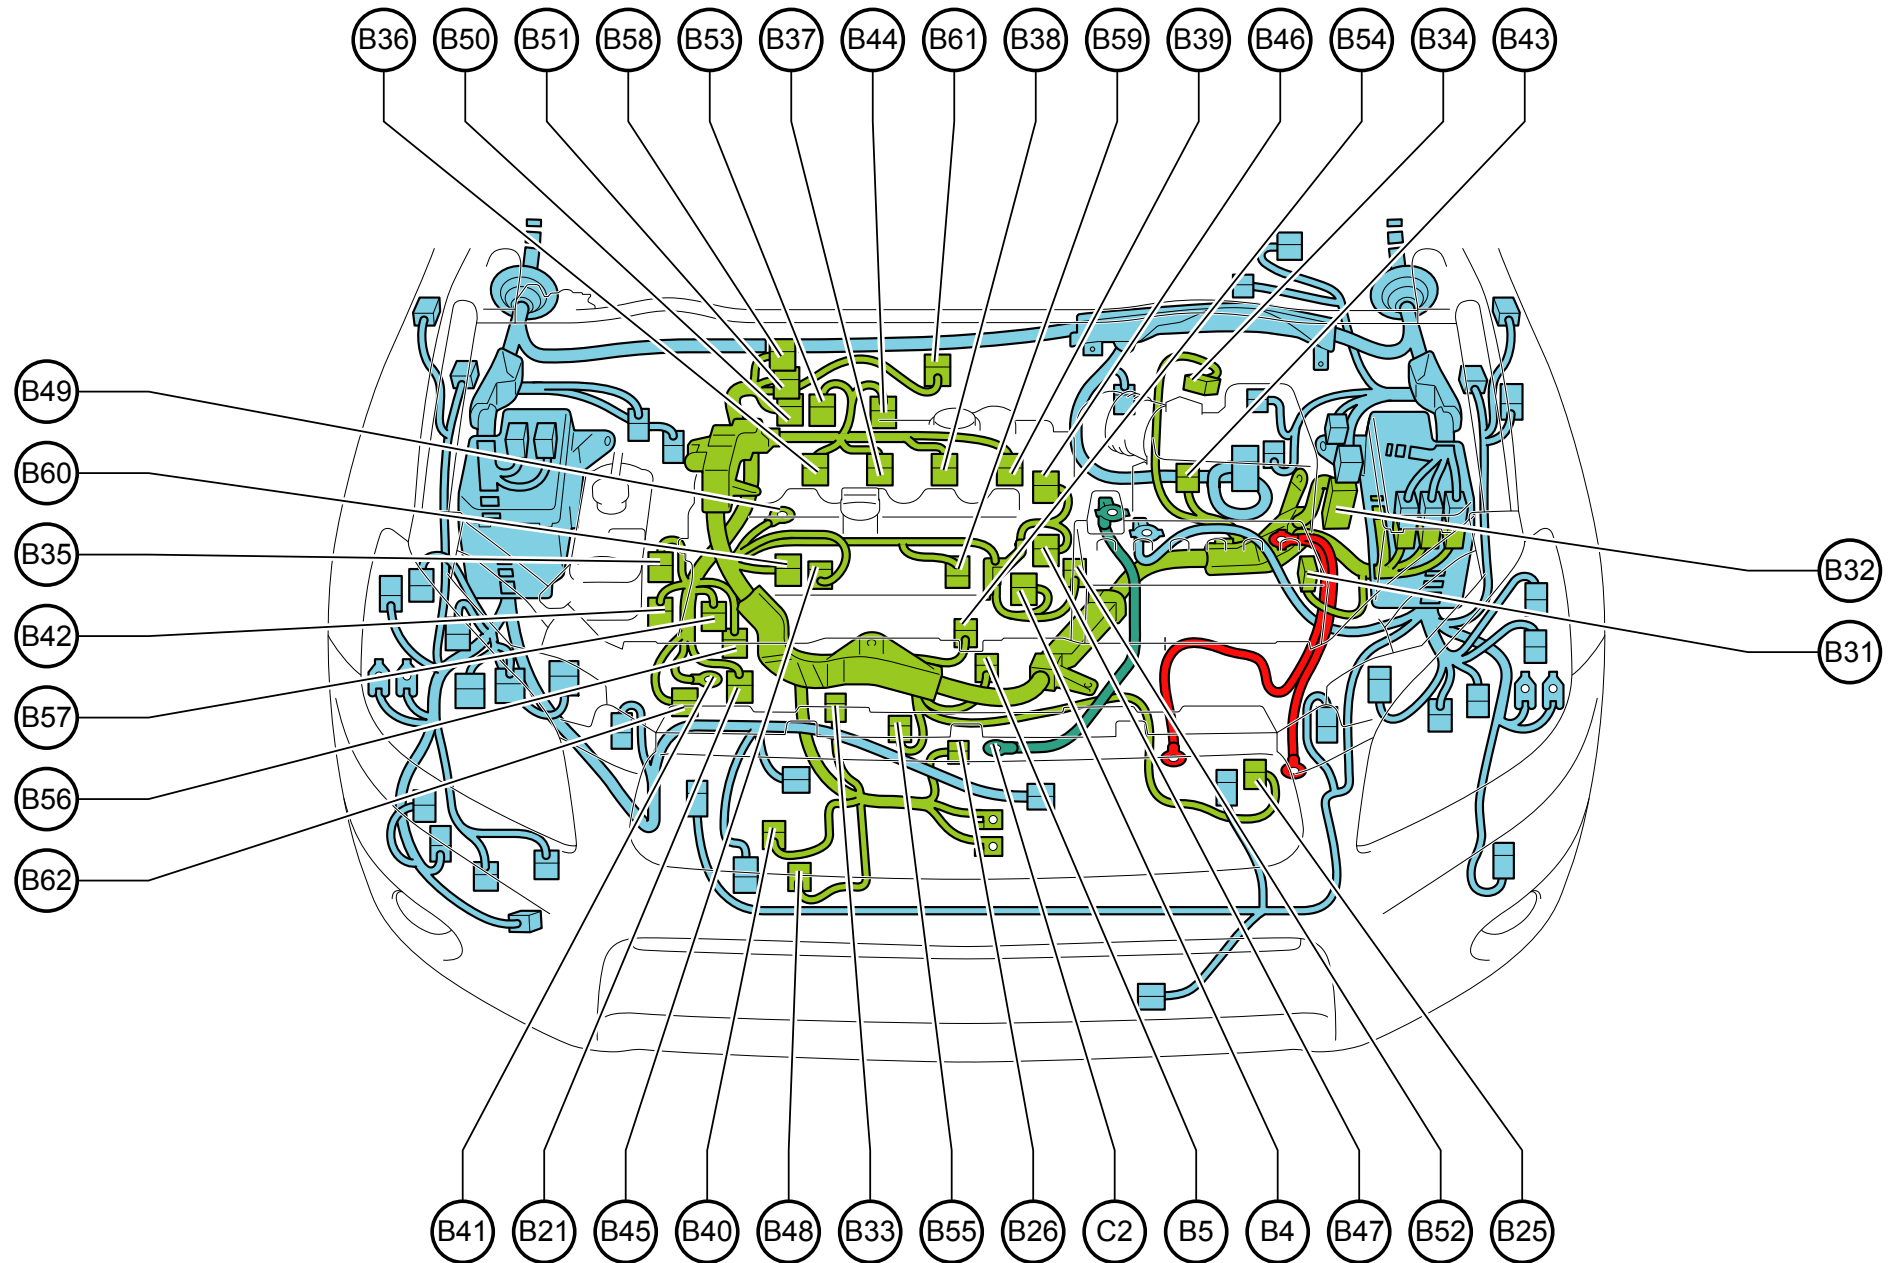



- B 4 Water Temp. Sensor
 - B 5 Engine Oil Pressure SW
 - B 21 Alternator
 - B 25 Back-Up Light SW
 - B 26 Starter
 - B 31 Battery Current Sensor
 - B 32 Engine ECU
 - B 33 Throttle Body Assembly
 - B 34 Air Flow Meter
 - B 35 Camshaft Position Sensor
 - B 36 Fuel Injector (No.1)
 - B 37 Fuel Injector (No.2)
 - B 38 Fuel Injector (No.3)
 - B 39 Fuel Injector (No.4)
 - B 40 A/C Compressor
 - B 41 Alternator
 - B 42 Crankshaft Position Sensor
 - B 43 Glow Plug Relay
 - B 44 VRV (EGR)
 - B 45 Turbo Pressure Sensor
 - B 46 Suction Control Valve
 - B 47 Fuel Temp. Sensor
 - B 48 Engine Oil Level Sensor
 - B 49 Glow Plug
 - B 50 Injector Driver (EDU)
 - B 51 Injector Driver (EDU)
 - B 52 Exhaust Fuel Addition Injector Assembly
 - B 53 VSV (EGR)
 - B 54 EGR Valve Position Sensor
 - B 55 Throttle Body Assembly
 - B 56 Exhaust Gas Temperature Sensor (Front)
 - B 57 Exhaust Gas Temperature Sensor (Rear)
 - B 58 Injector Driver (EDU)
 - B 59 Pressure Discharge Valve
 - B 60 Fuel Pressure Sensor
 - B 61 Differential Pressure Sensor
 - B 62 Air Fuel Ratio Sensor (Bank 1 Sensor 2)
-
- C 2 Starter

    
Position of Parts in Engine Compartment <LHD 2AD-FHV>

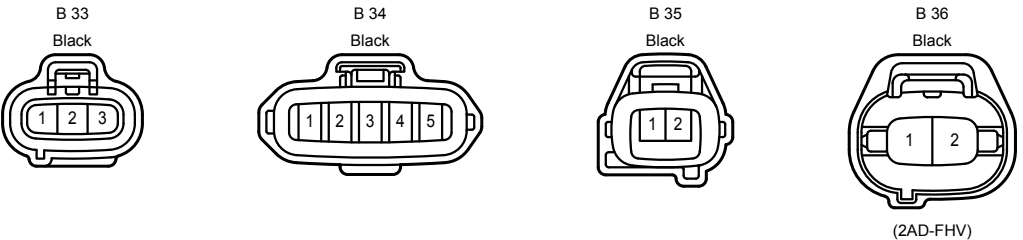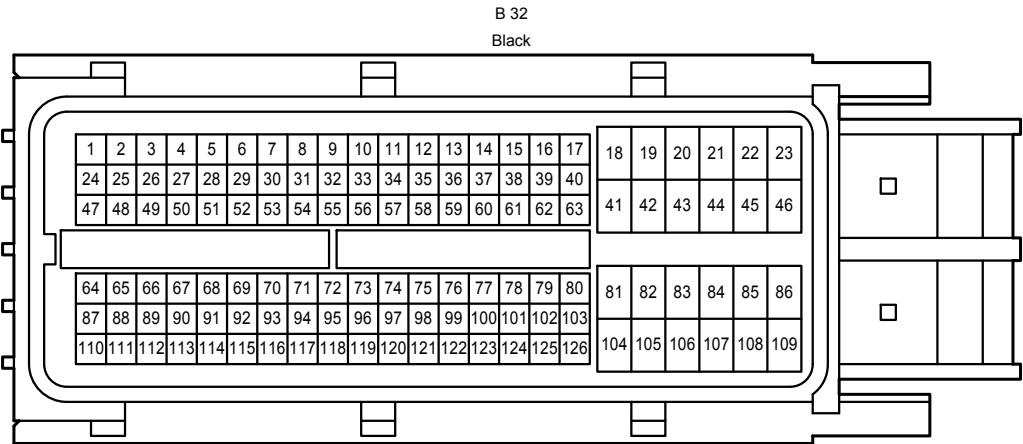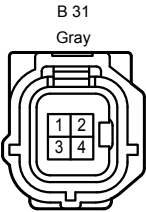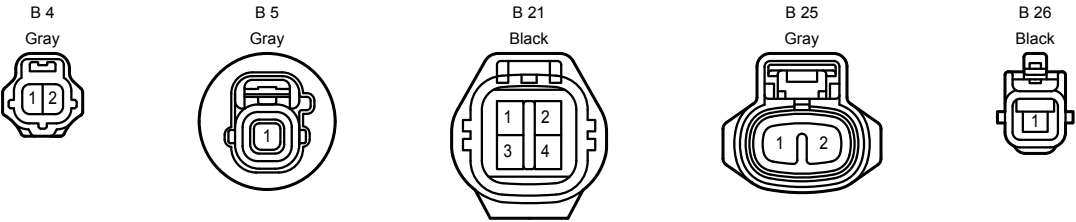



(2AD-FHV)

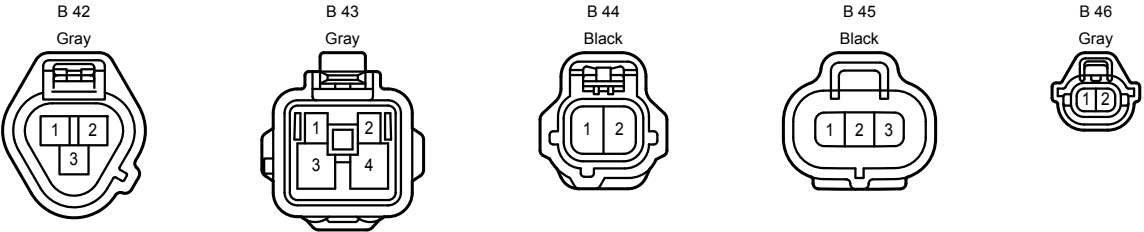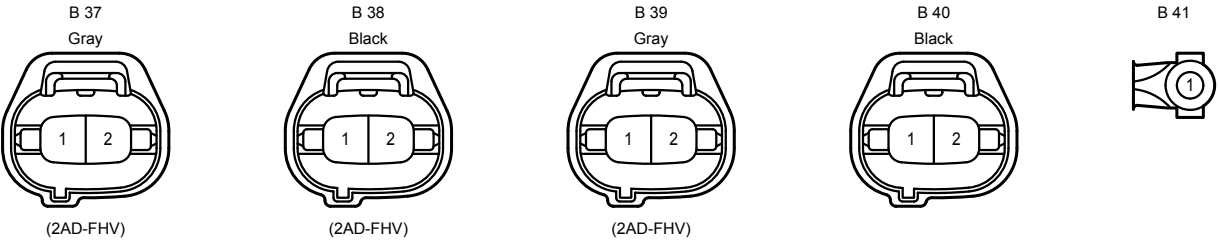  













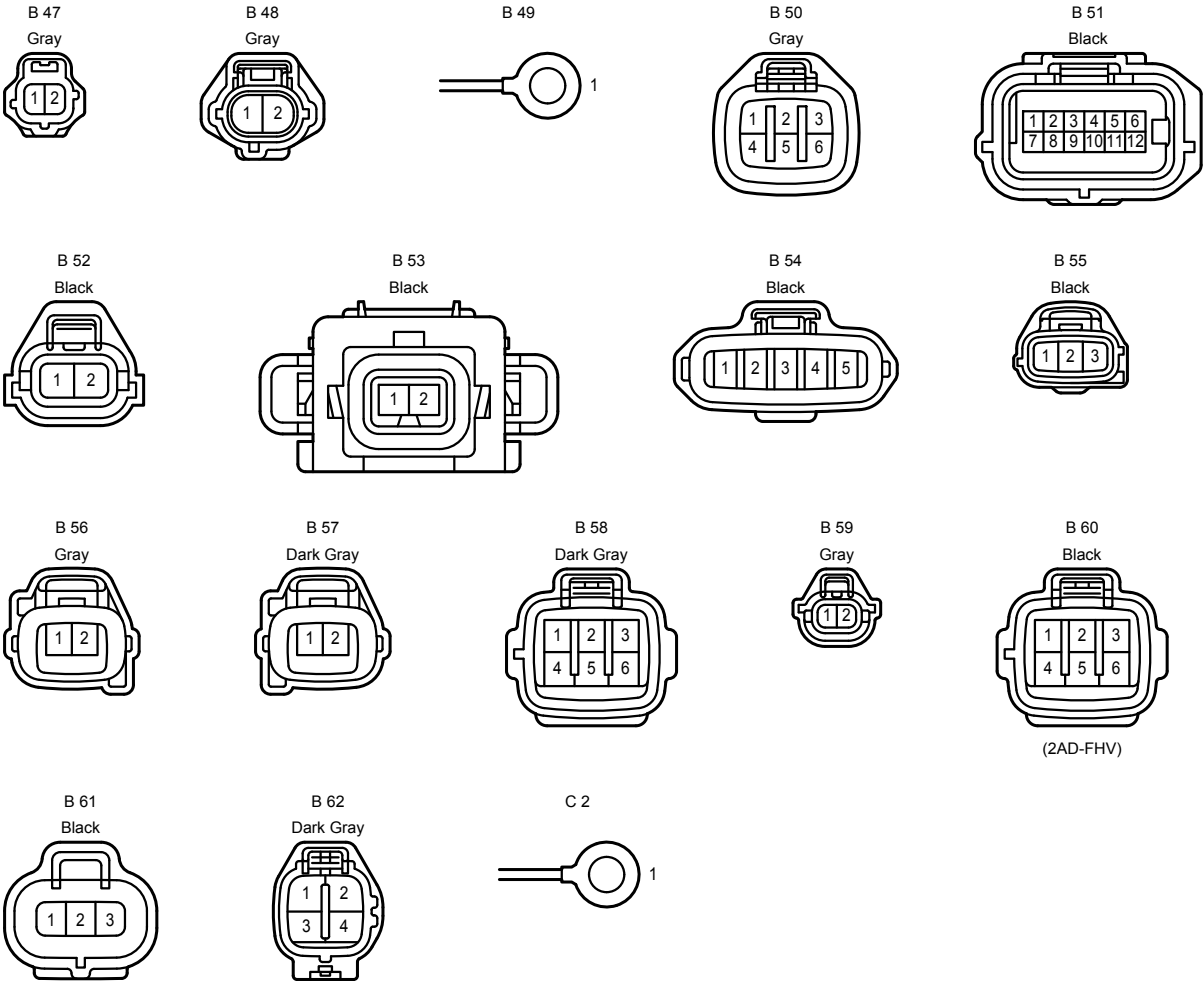 




















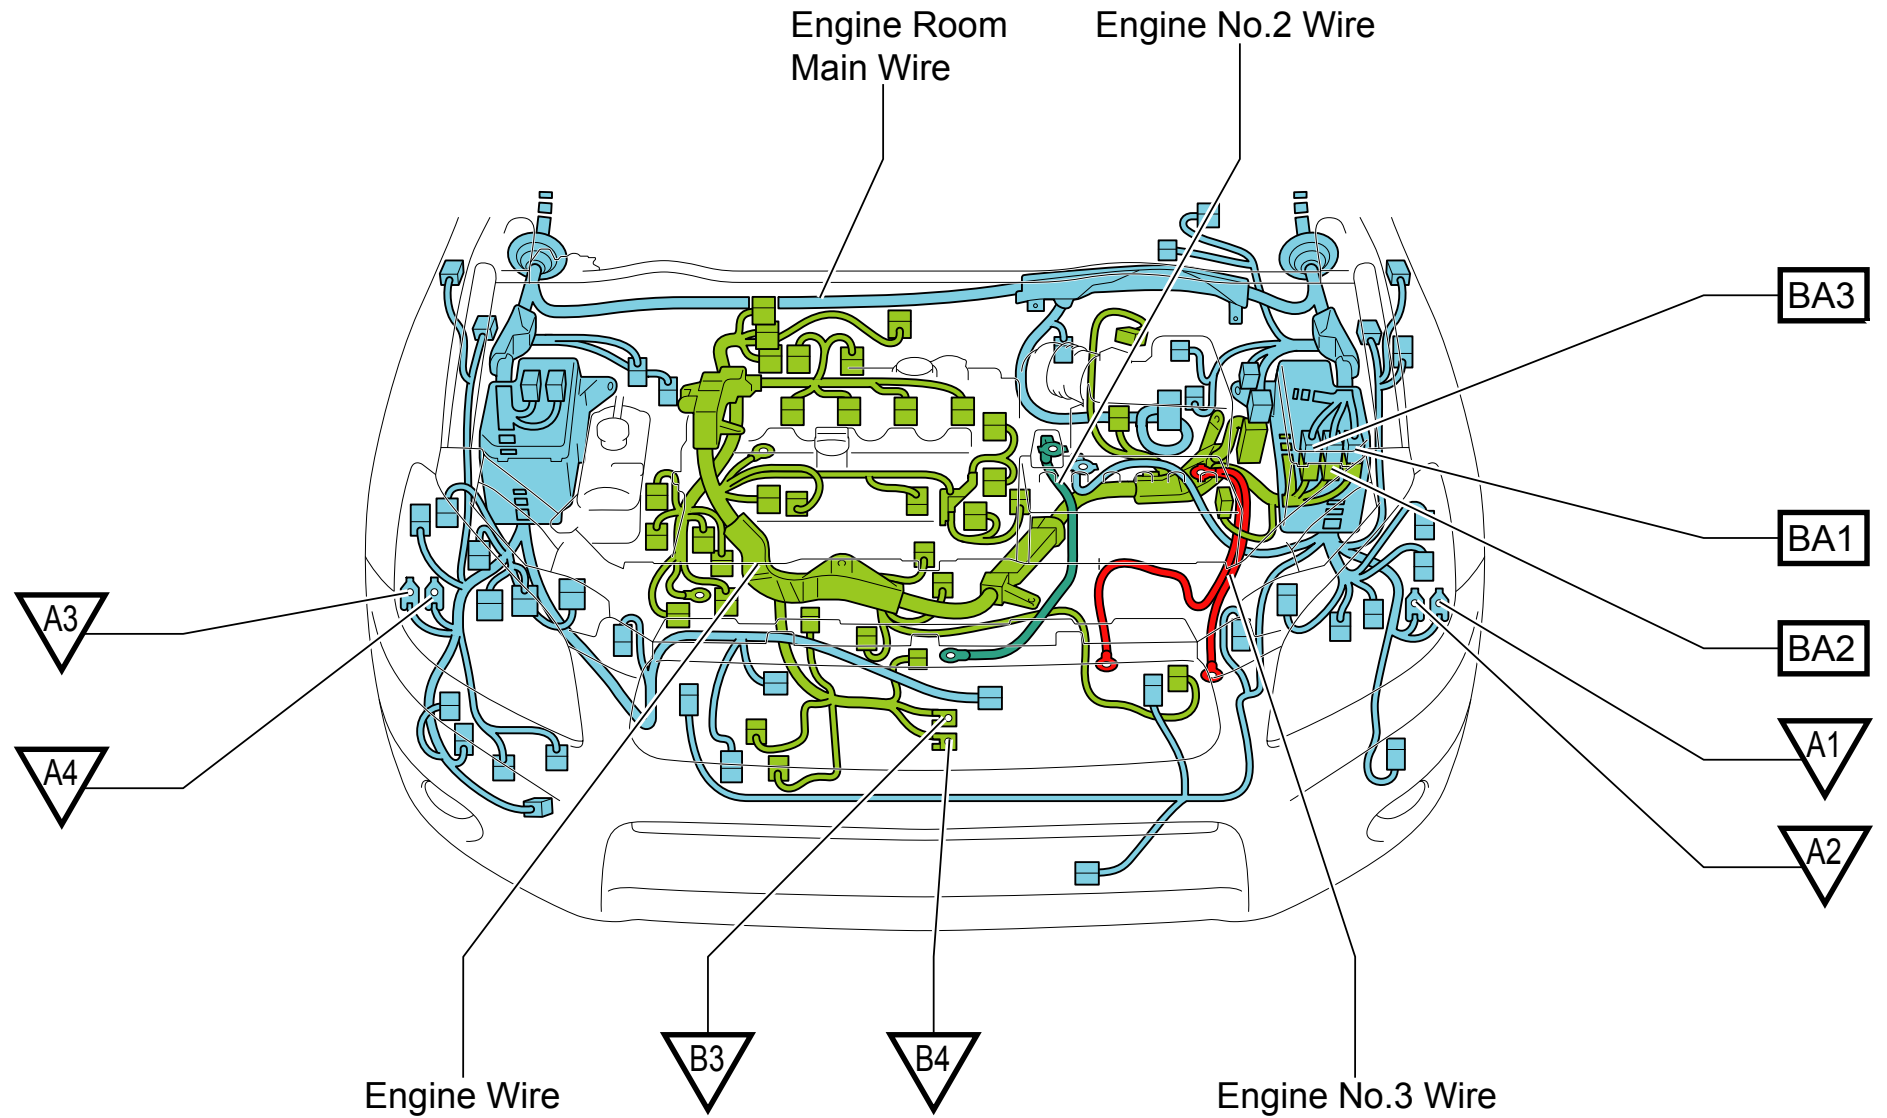 


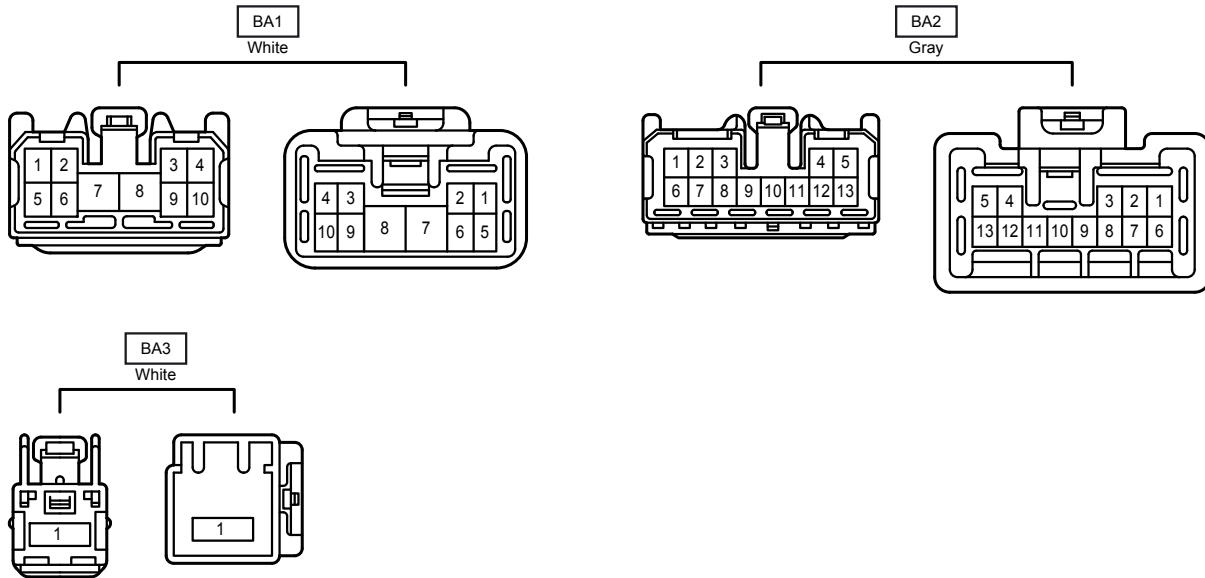 


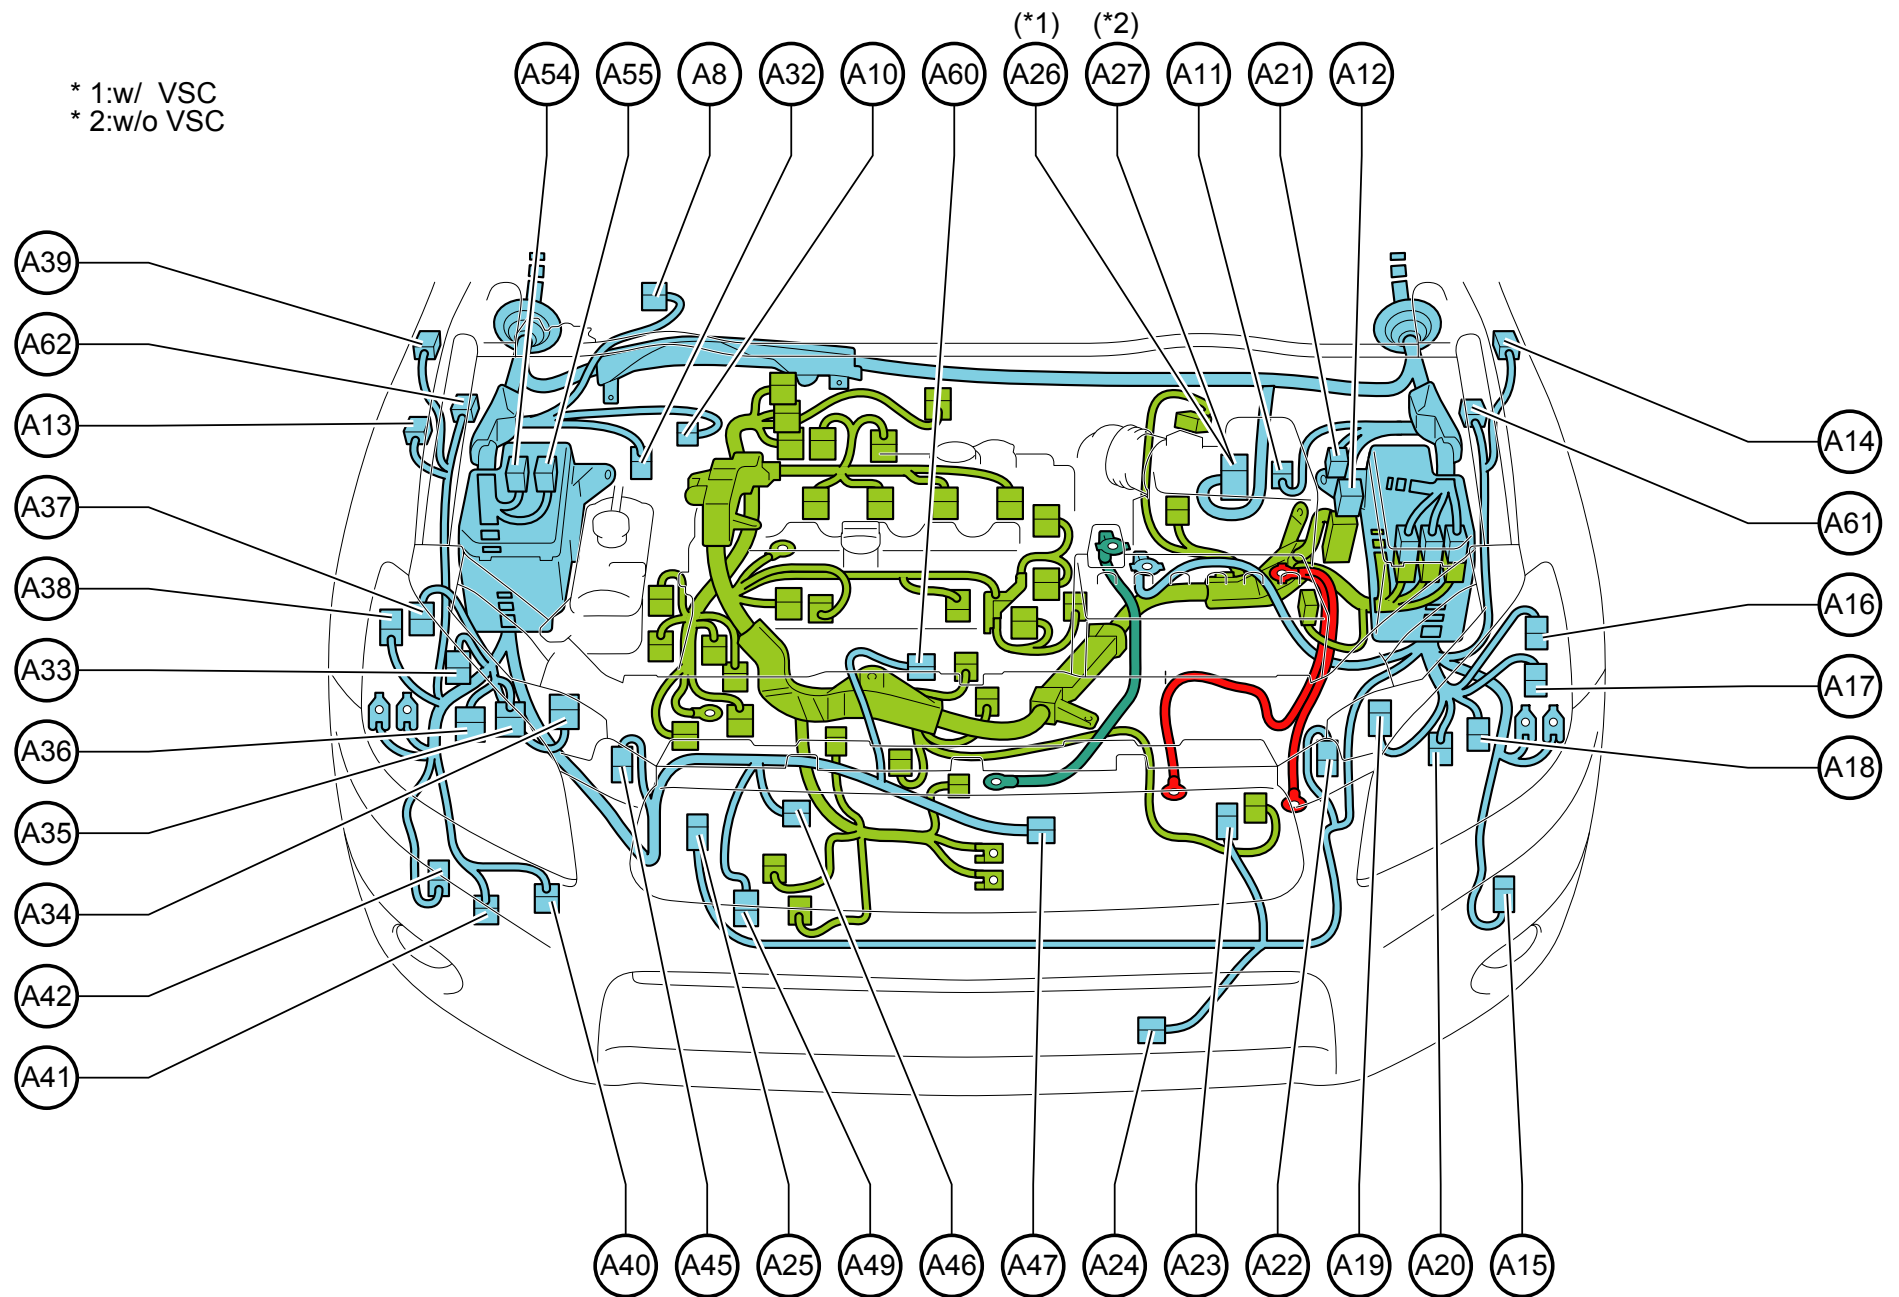 

- A 8 Windshield Wiper Motor
- A 10 Brake Fluid Level Warning SW
- A 11 Fuel Filter Warning SW
- A 12 Engine ECU
- A 13 Wireless Door Lock Buzzer
- A 14 Turn Signal Lamp (Front Side LH)
- A 15 Fog Lamp (Front LH)
- A 16 Turn Signal Lamp (Front LH)
- A 17 Headlamp (LH Low)
- A 18 Headlamp Leveling Motor (LH)
- A 19 Headlamp (LH High)
- A 20 Clearance Lamp (Front LH)
- A 21 Option Connector
- A 22 Airbag Sensor (Front LH)
- A 23 Horn (Low)
- A 24 Ambient Temp. Sensor
- A 25 Horn (High)
- A 26 Skid Control ECU with Actuator
- A 27 Skid Control ECU with Actuator
- A 32 A/C Pressure Sensor
- A 33 Clearance Lamp (Front RH)
- A 34 Headlamp (RH High)
- A 35 Headlamp Leveling Motor (RH)
- A 36 Headlamp (RH Low)
- A 37 Turn Signal Lamp (Front RH)
- A 38 Tire Pressure Warning Antenna (Front)
- A 39 Turn Signal Lamp (Front Side RH)
- A 40 Rear Washer Motor
- A 41 Front Washer Motor
- A 42 Fog Lamp (Front RH)
- A 45 Airbag Sensor (Front RH)
- A 46 A/C Condenser Fan Motor
- A 47 Radiator Fan Motor
- A 49 Inlet Air Temp. Sensor
- A 54 Junction Connector
- A 55 Junction Connector
- A 60 Engine Hood Courtesy SW
- A 61 Speed Sensor (Front LH)
- A 62 Speed Sensor (Front RH)






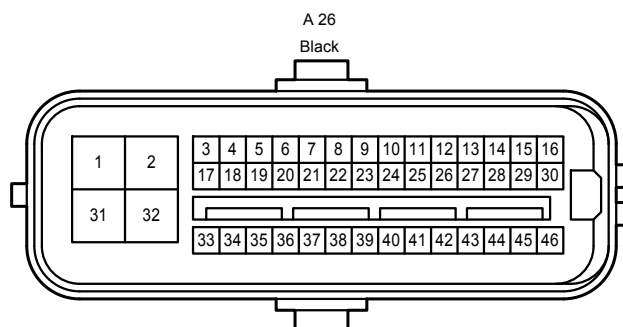 
 
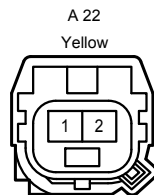 
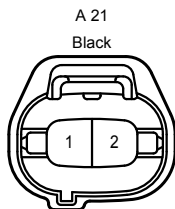 
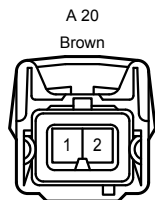 
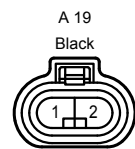 
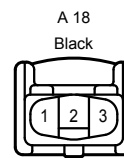 
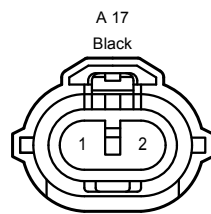 
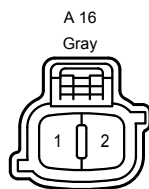 
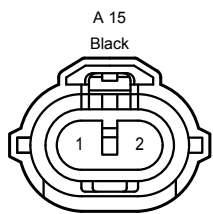 
 
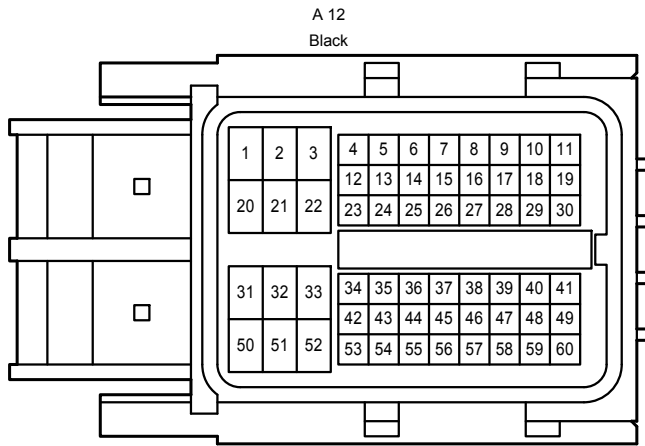 
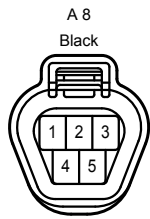 


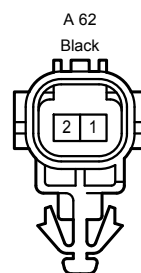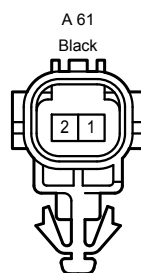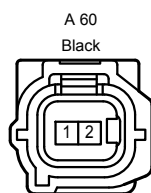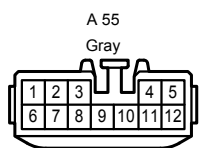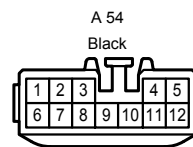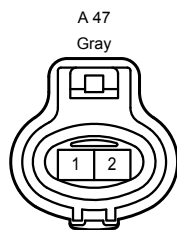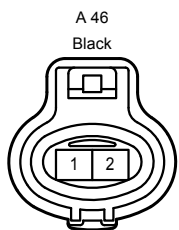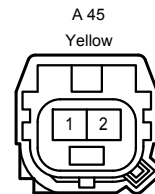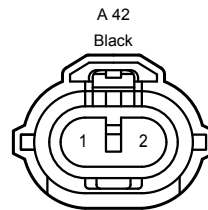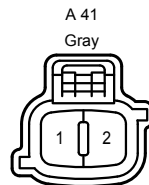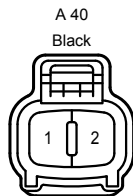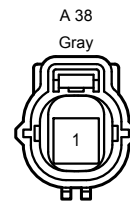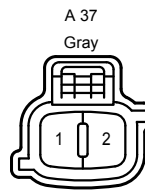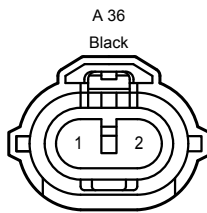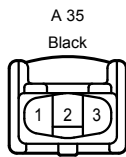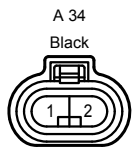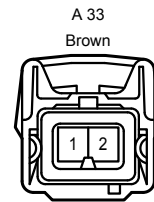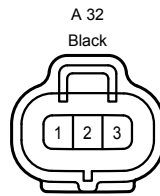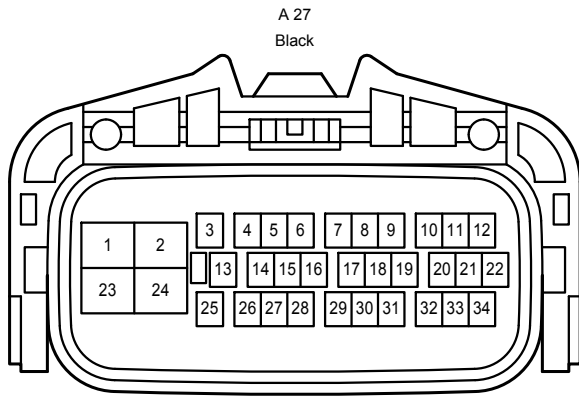                   

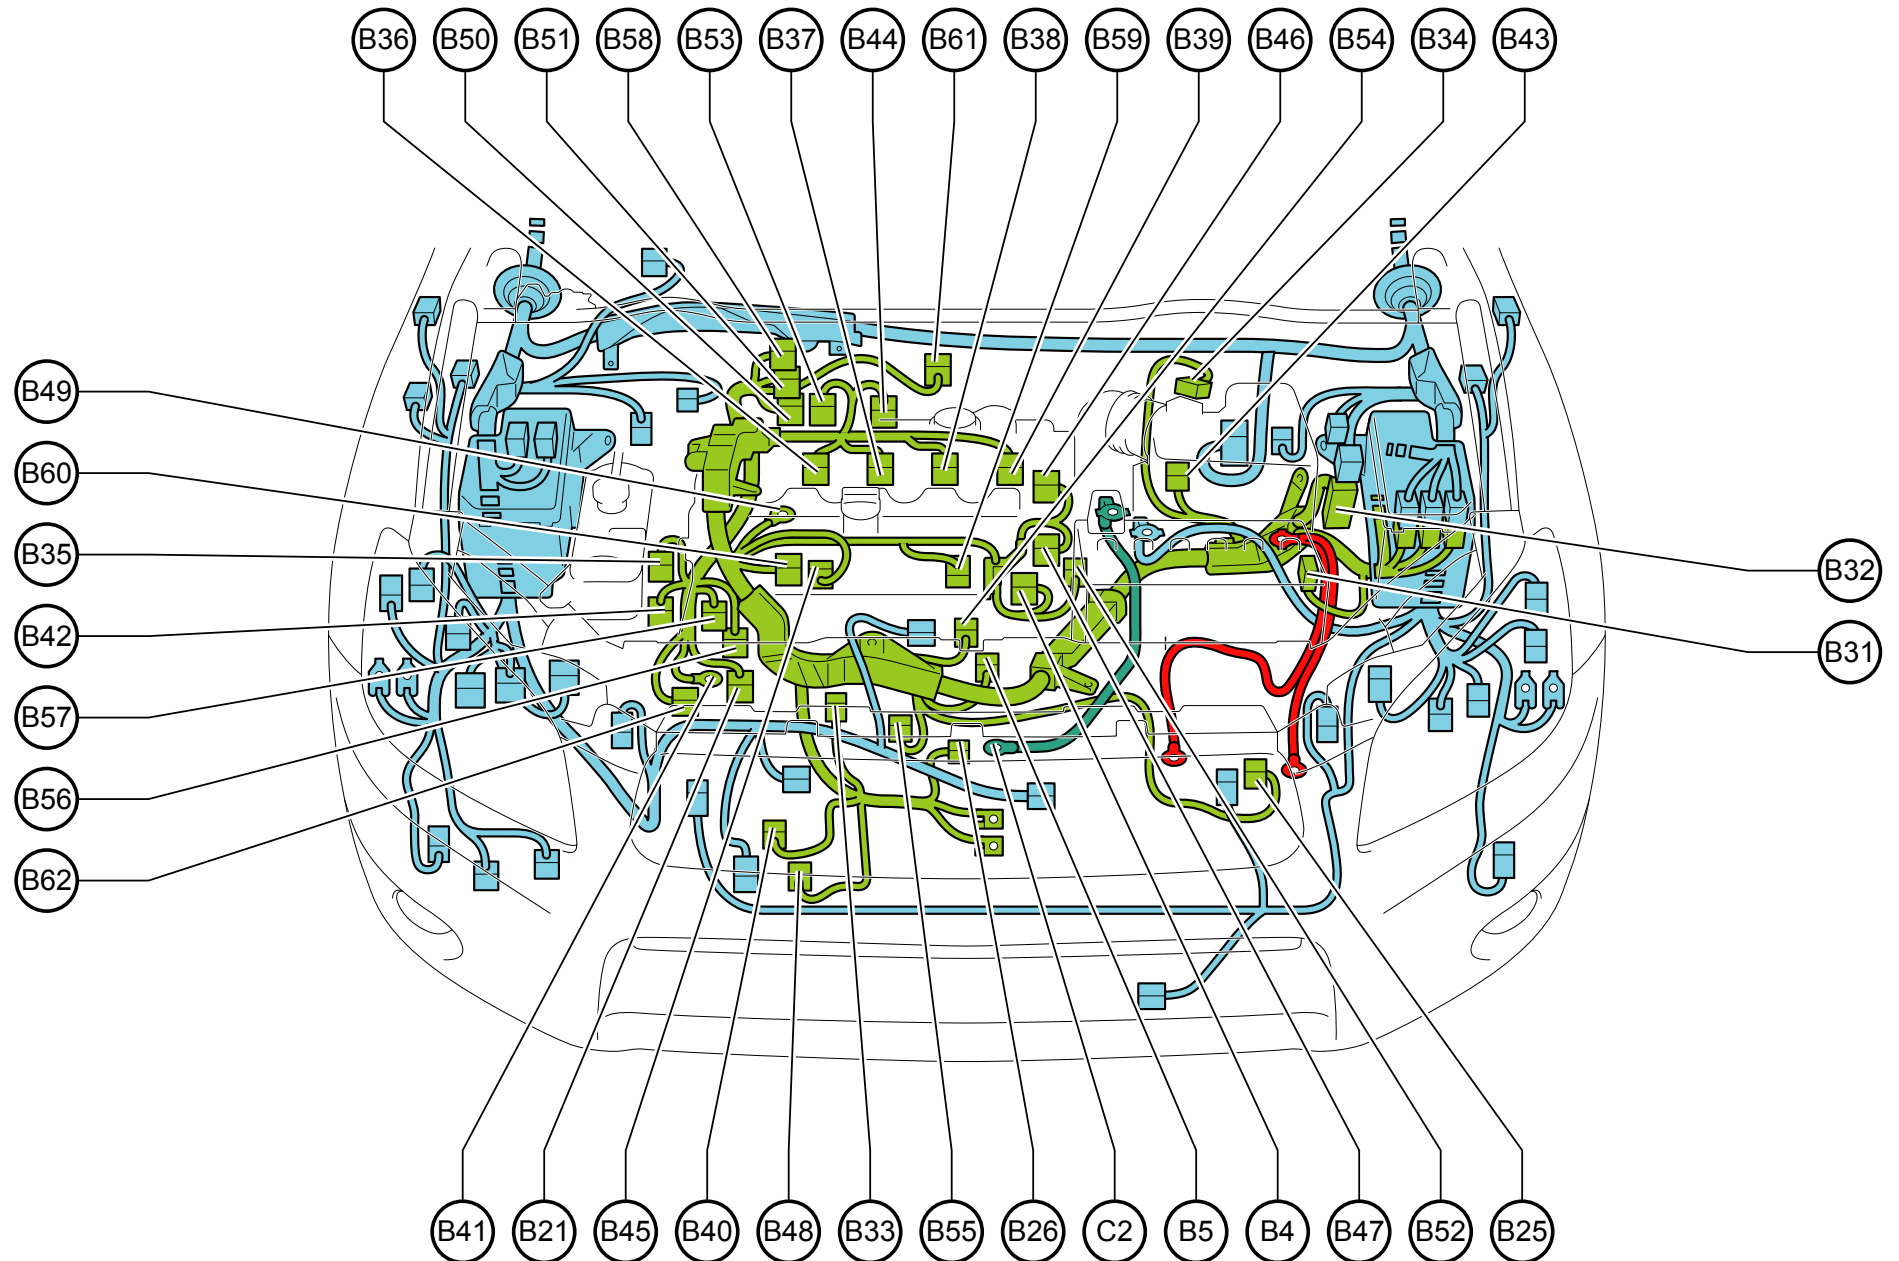 

- B 4 Water Temp. Sensor
 - B 5 Engine Oil Pressure SW
 - B 21 Alternator
 - B 25 Back-Up Light SW
 - B 26 Starter
 - B 31 Battery Current Sensor
 - B 32 Engine ECU
 - B 33 Throttle Body Assembly
 - B 34 Air Flow Meter
 - B 35 Camshaft Position Sensor
 - B 36 Fuel Injector (No.1)
 - B 37 Fuel Injector (No.2)
 - B 38 Fuel Injector (No.3)
 - B 39 Fuel Injector (No.4)
 - B 40 A/C Compressor
 - B 41 Alternator
 - B 42 Crankshaft Position Sensor
 - B 43 Glow Plug Relay
 - B 44 VRV (EGR)
 - B 45 Turbo Pressure Sensor
 - B 46 Suction Control Valve
 - B 47 Fuel Temp. Sensor
 - B 48 Engine Oil Level Sensor
 - B 49 Glow Plug
 - B 50 Injector Driver (EDU)
 - B 51 Injector Driver (EDU)
 - B 52 Exhaust Fuel Addition Injector Assembly
 - B 53 VSV (EGR)
 - B 54 EGR Valve Position Sensor
 - B 55 Throttle Body Assembly
 - B 56 Exhaust Gas Temperature Sensor (Front)
 - B 57 Exhaust Gas Temperature Sensor (Rear)
 - B 58 Injector Driver (EDU)
 - B 59 Pressure Discharge Valve
 - B 60 Fuel Pressure Sensor
 - B 61 Differential Pressure Sensor
 - B 62 Air Fuel Ratio Sensor (Bank 1 Sensor 2)
-
- C 2 Starter

                  Position of Parts in Engine Compartment <RHD 2AD-FHV>

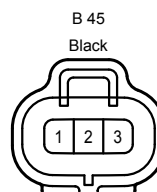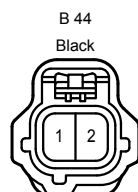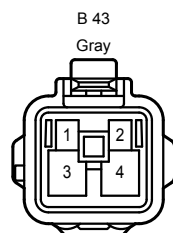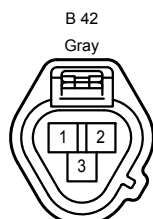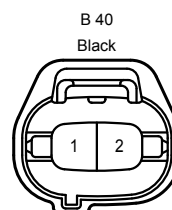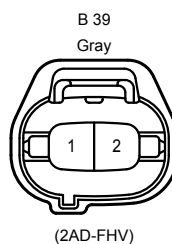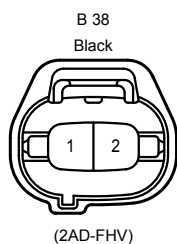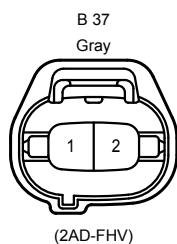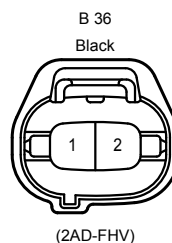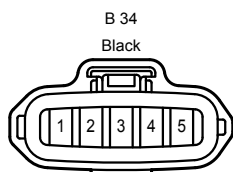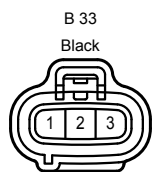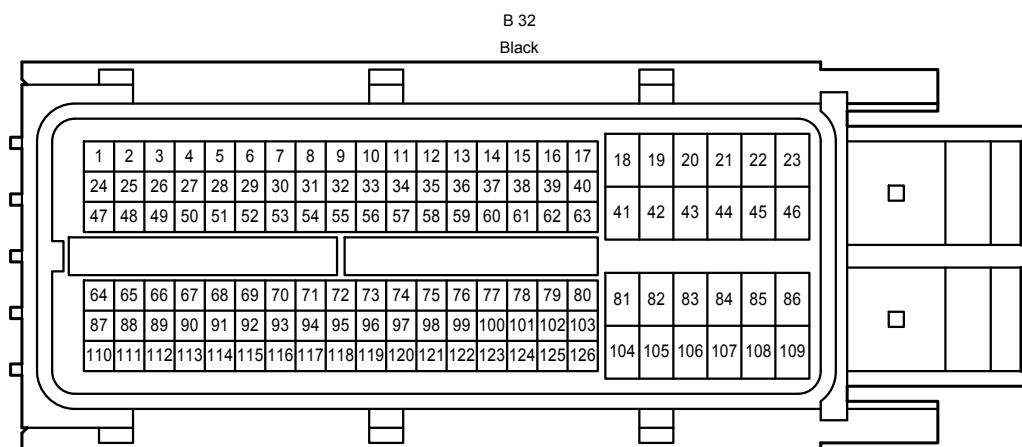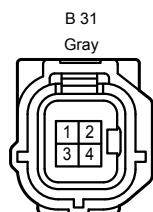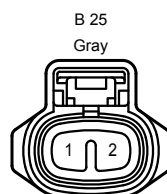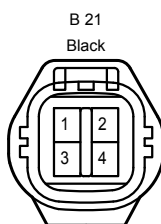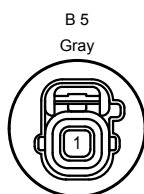

Position of Parts in Engine Compartment <RHD 2AD-FHV>

 
B 47
Gray




B 48
Gray




B 49



B 50
Gray

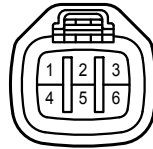 


B 51
Black

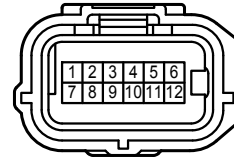 

B 52
Black



 B 53
Black

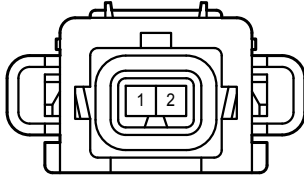

B 54
Black



B 55
Black



B 56
Gray



B 57
Dark Gray



B 58
Dark Gray



B 59
Gray

 


B 60
Black



(2AD-FHV)


B 61
Black

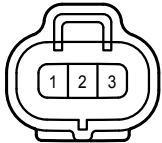



B 62
Dark Gray



   
C 2



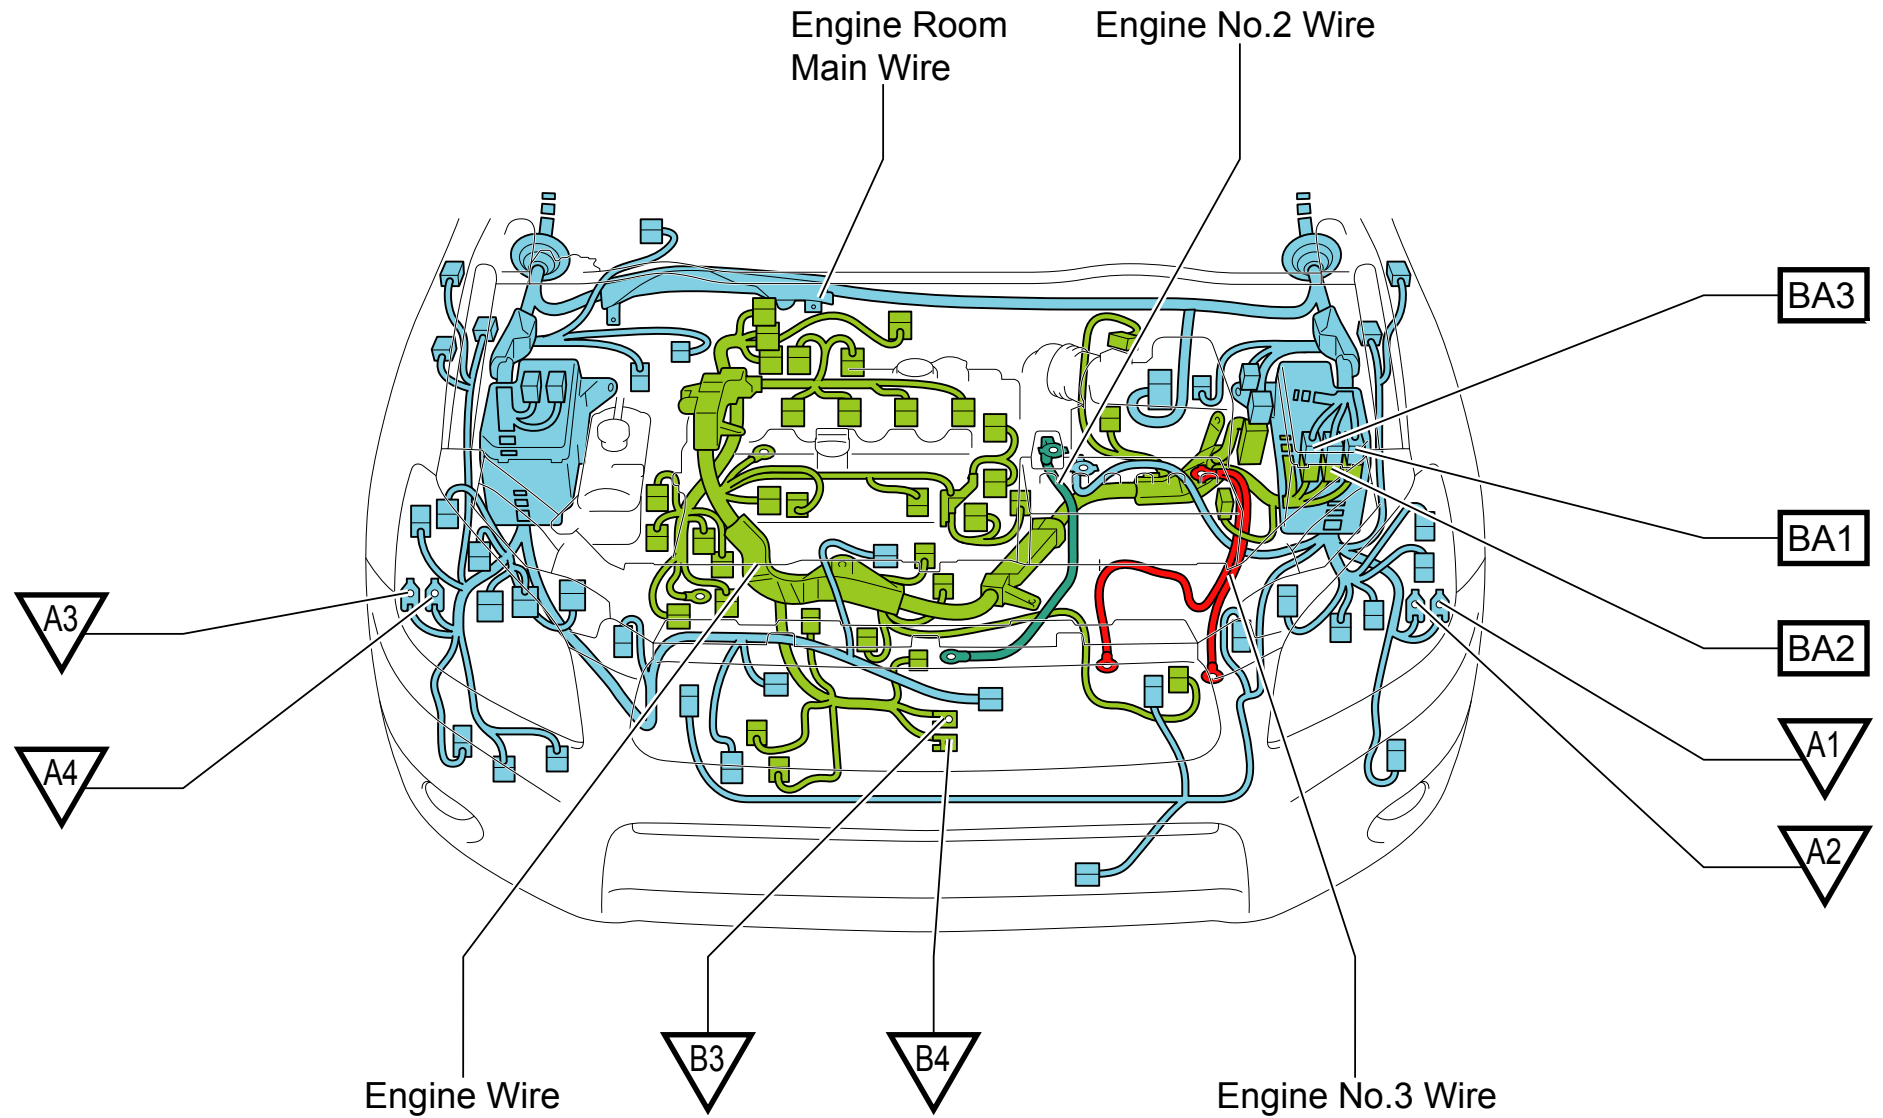













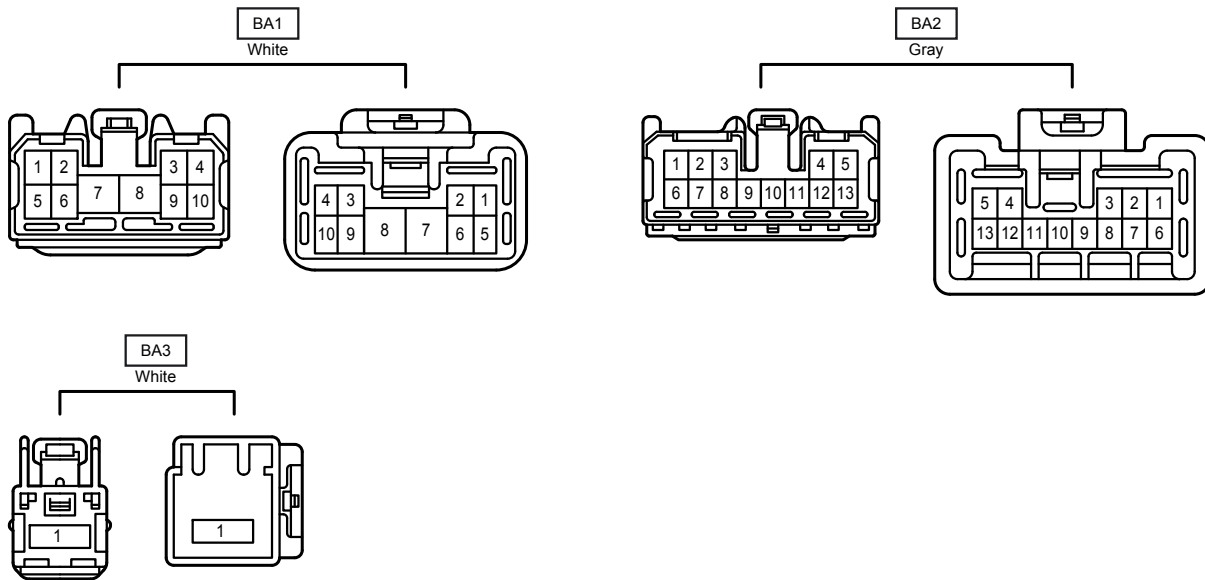

























* 1:w/ VSC
* 2:w/o VSC

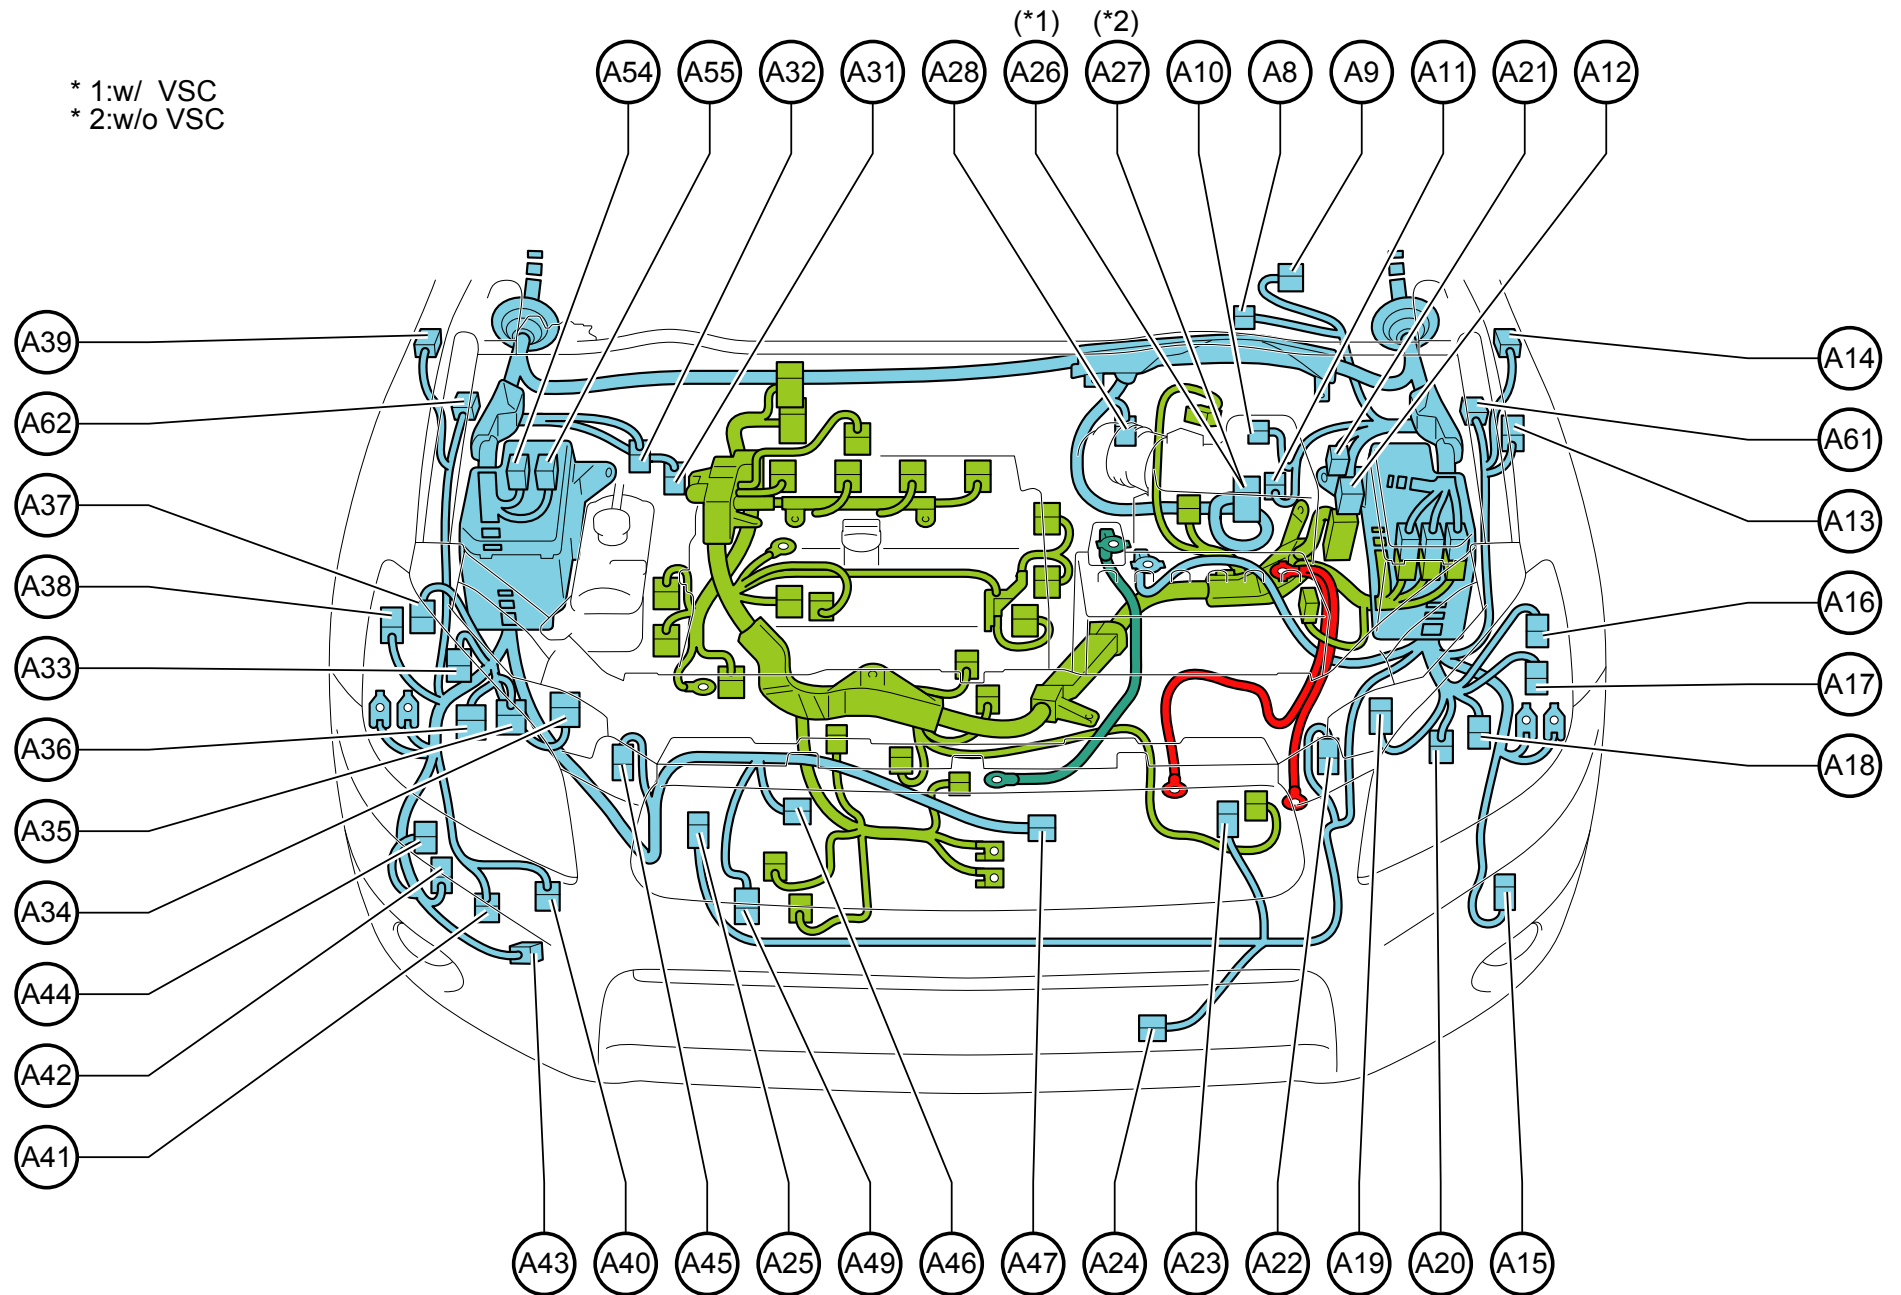 


- A 8 Windshield Wiper Motor
- A 9 Front Wiper Deicer
- A 10 Brake Fluid Level Warning SW
- A 11 Fuel Filter Warning SW
- A 12 Engine ECU
- A 13 Wireless Door Lock Buzzer
- A 14 Turn Signal Lamp (Front Side LH)
- A 15 Fog Lamp (Front LH)
- A 16 Turn Signal Lamp (Front LH)
- A 17 Headlamp (LH Low)
- A 18 Headlamp Leveling Motor (LH)
- A 19 Headlamp (LH High)
- A 20 Clearance Lamp (Front LH)
- A 21 Option Connector
- A 22 Airbag Sensor (Front LH)
- A 23 Horn (Low)
- A 24 Ambient Temp. Sensor
- A 25 Horn (High)
- A 26 Skid Control ECU with Actuator
- A 27 Skid Control ECU with Actuator
- A 28 Fuel Pump
- A 31 Power Heater Assembly
- A 32 A/C Pressure Sensor
- A 33 Clearance Lamp (Front RH)
- A 34 Headlamp (RH High)
- A 35 Headlamp Leveling Motor (RH)
- A 36 Headlamp (RH Low)
- A 37 Turn Signal Lamp (Front RH)
- A 38 Tire Pressure Warning Antenna (Front)
- A 39 Turn Signal Lamp (Front Side RH)
- A 40 Rear Washer Motor
- A 41 Front Washer Motor
- A 42 Fog Lamp (Front RH)
- A 43 Headlamp Cleaner Motor
- A 44 Headlamp Cleaner Control Relay
- A 45 Airbag Sensor (Front RH)
- A 46 A/C Condenser Fan Motor
- A 47 Radiator Fan Motor
- A 49 Inlet Air Temp. Sensor
- A 54 Junction Connector
- A 55 Junction Connector
- A 61 Speed Sensor (Front LH)
- A 62 Speed Sensor (Front RH)

                                     Position of Parts in Engine Compartment <LHD 2AD-FTV>

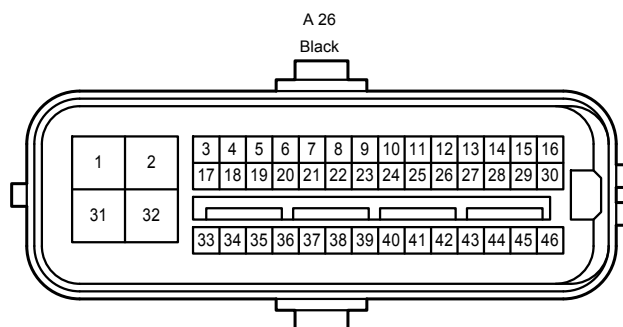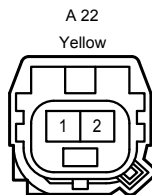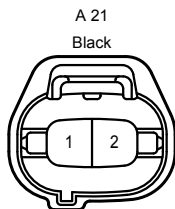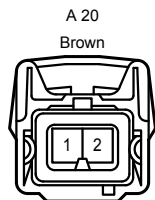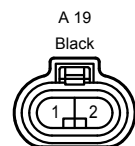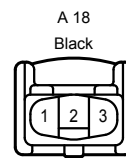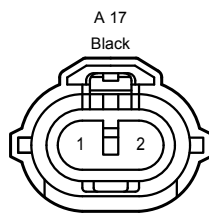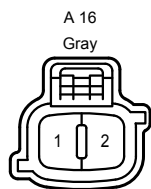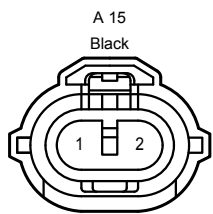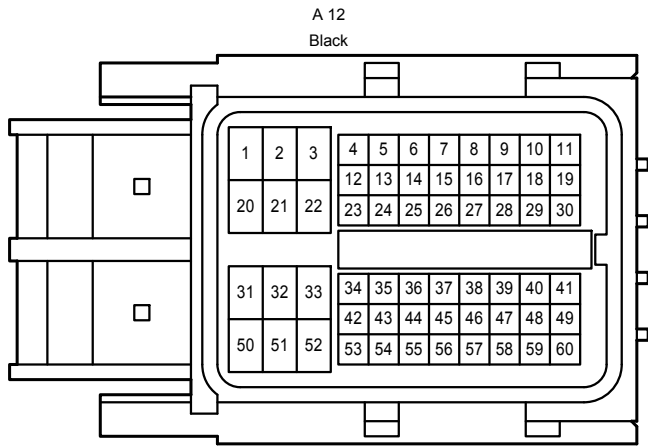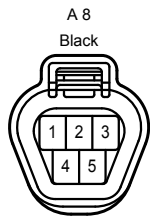

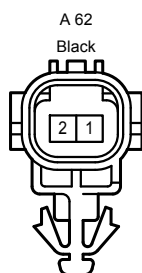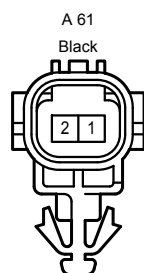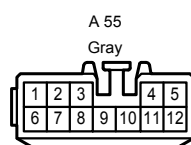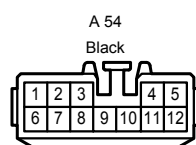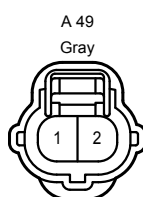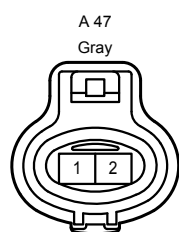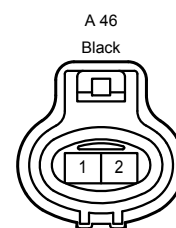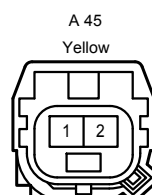
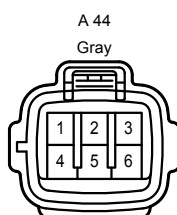

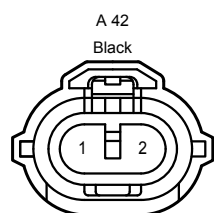
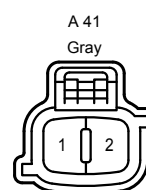
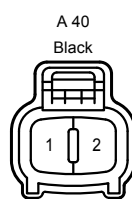
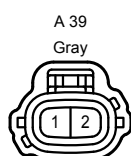
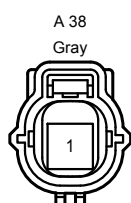
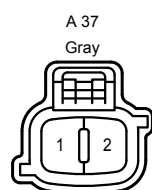
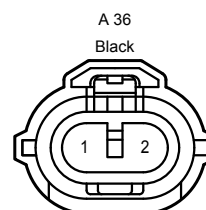
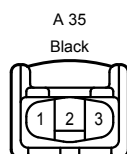
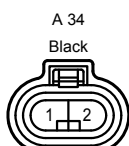
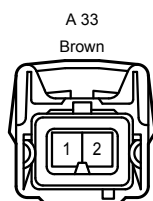
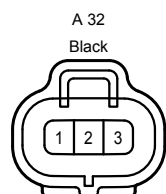
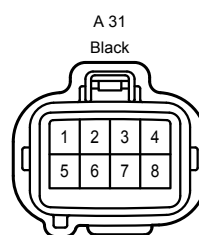
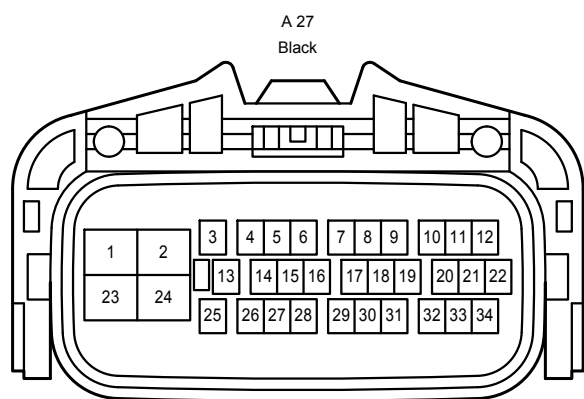


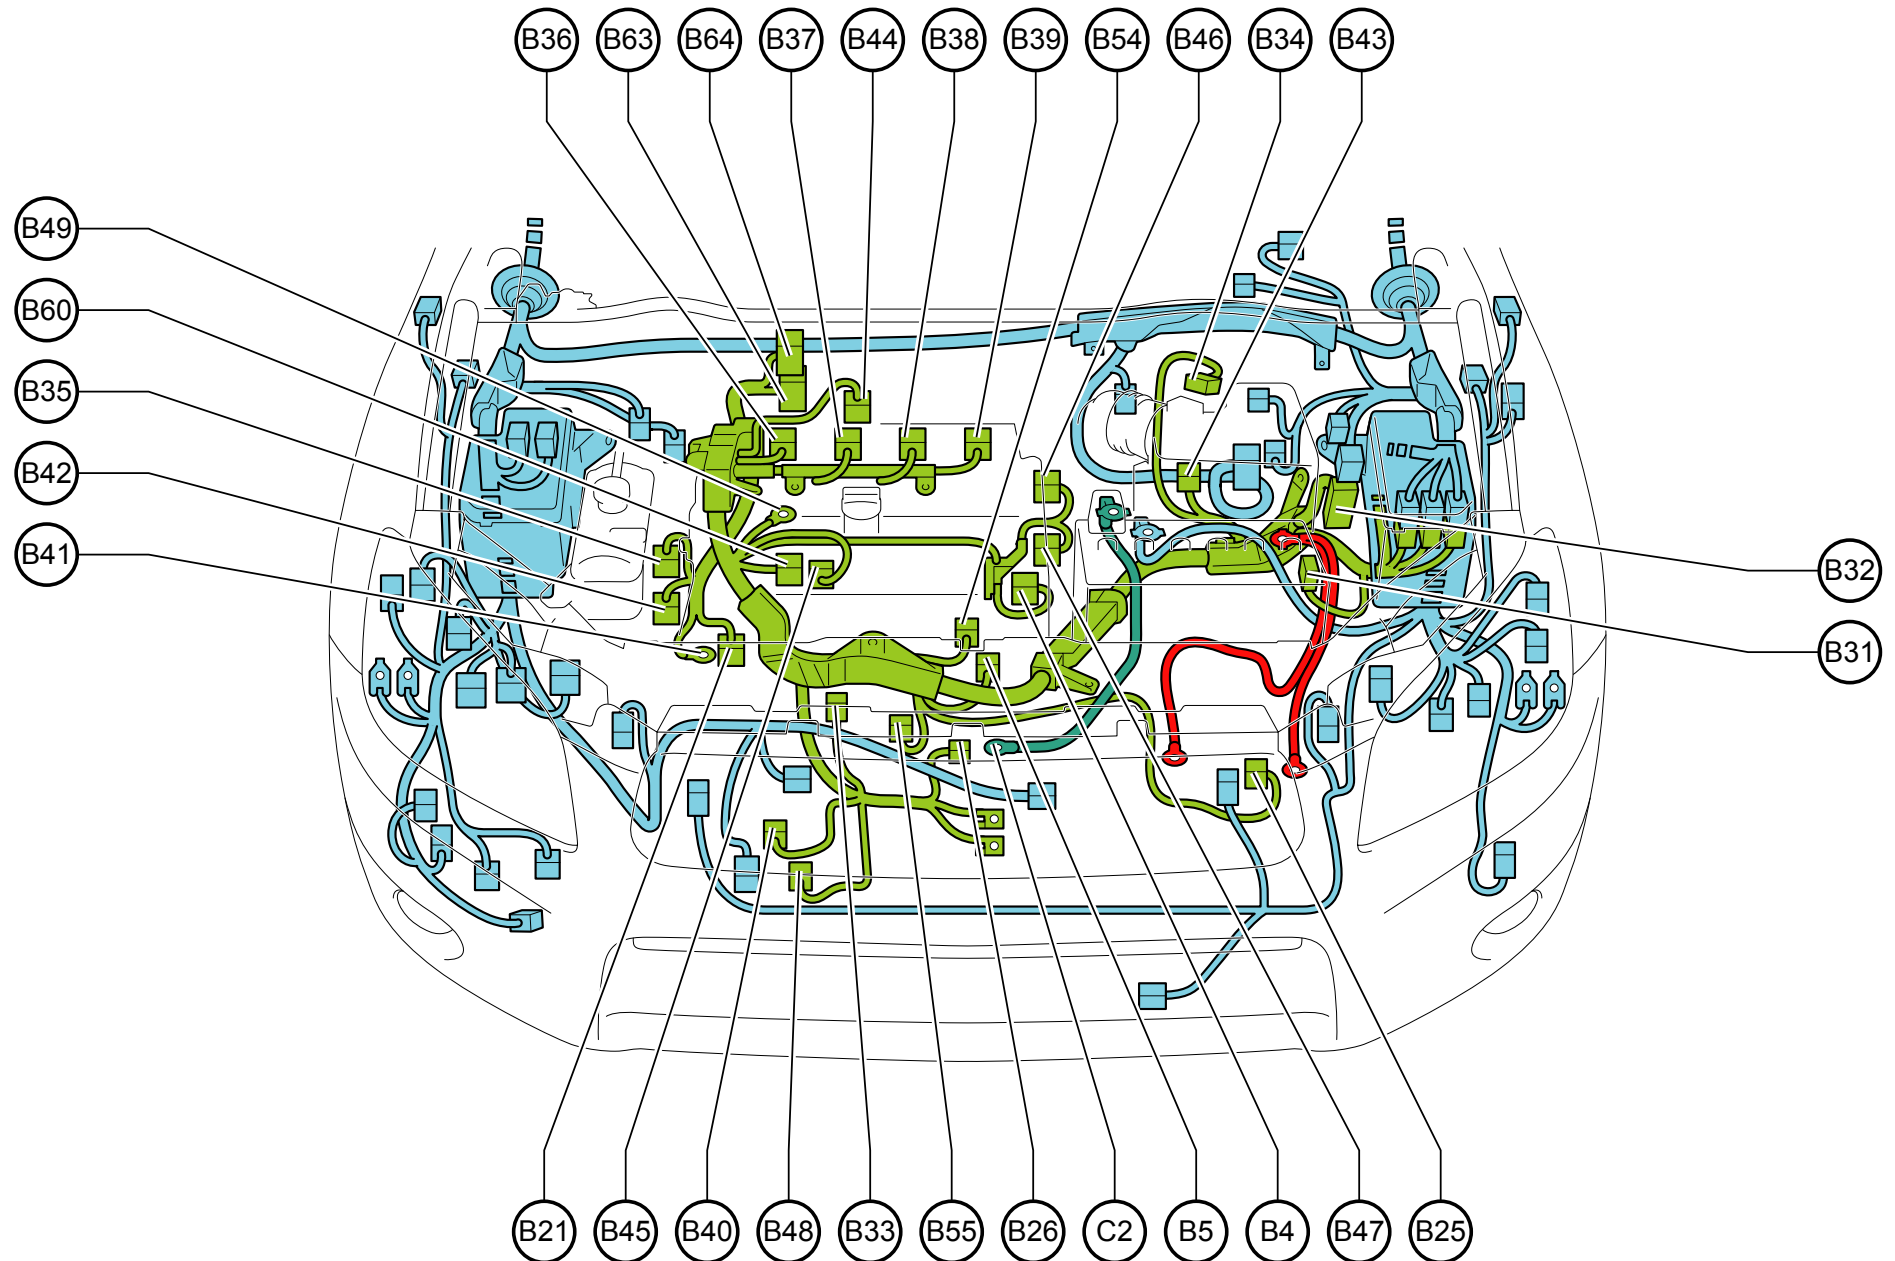



- B 4 Water Temp. Sensor
- B 5 Engine Oil Pressure SW
- B 21 Alternator
- B 25 Back-Up Light SW
- B 26 Starter
- B 31 Battery Current Sensor
- B 32 Engine ECU
- B 33 Throttle Body Assembly
- B 34 Air Flow Meter
- B 35 Camshaft Position Sensor
- B 36 Fuel Injector (No.1)
- B 37 Fuel Injector (No.2)
- B 38 Fuel Injector (No.3)
- B 39 Fuel Injector (No.4)
- B 40 A/C Compressor
- B 41 Alternator
- B 42 Crankshaft Position Sensor
- B 43 Glow Plug Relay
- B 44 VRV (EGR)
- B 45 Turbo Pressure Sensor
- B 46 Suction Control Valve
- B 47 Fuel Temp. Sensor
- B 48 Engine Oil Level Sensor
- B 49 Glow Plug
- B 54 EGR Valve Position Sensor
- B 55 Throttle Body Assembly
- B 60 Fuel Pressure Sensor
- B 63 Injector Driver (EDU)
- B 64 Injector Driver (EDU)


- C 2 Starter

                   Position of Parts in Engine Compartment <LHD 2AD-FTV>

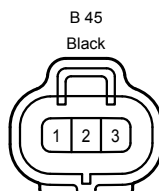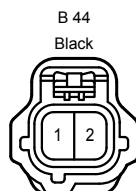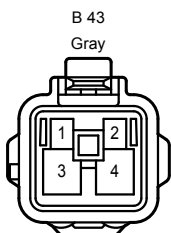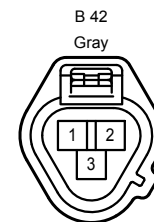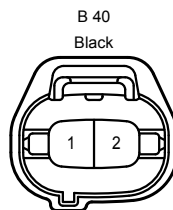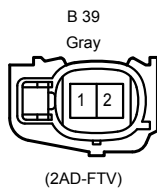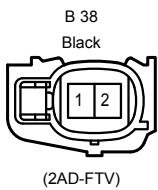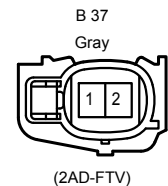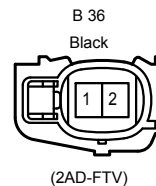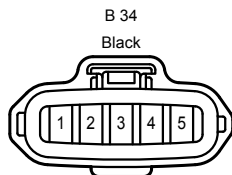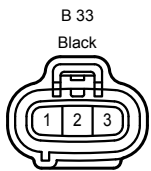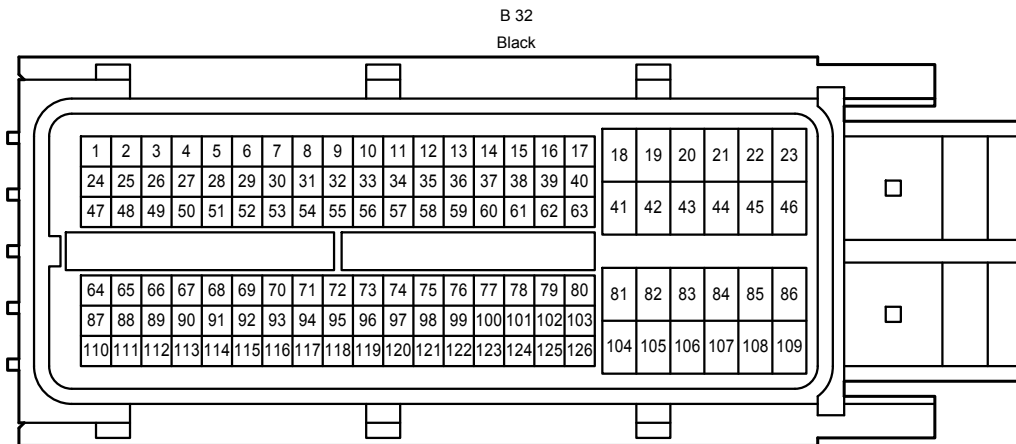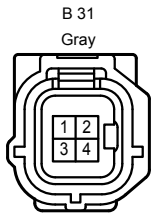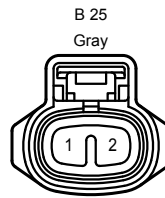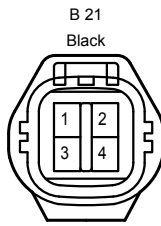


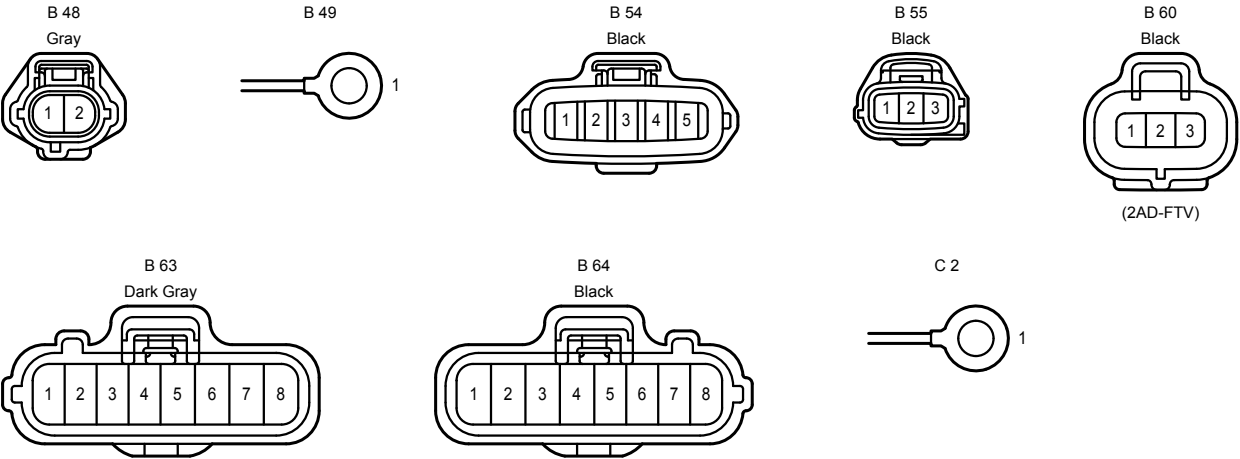












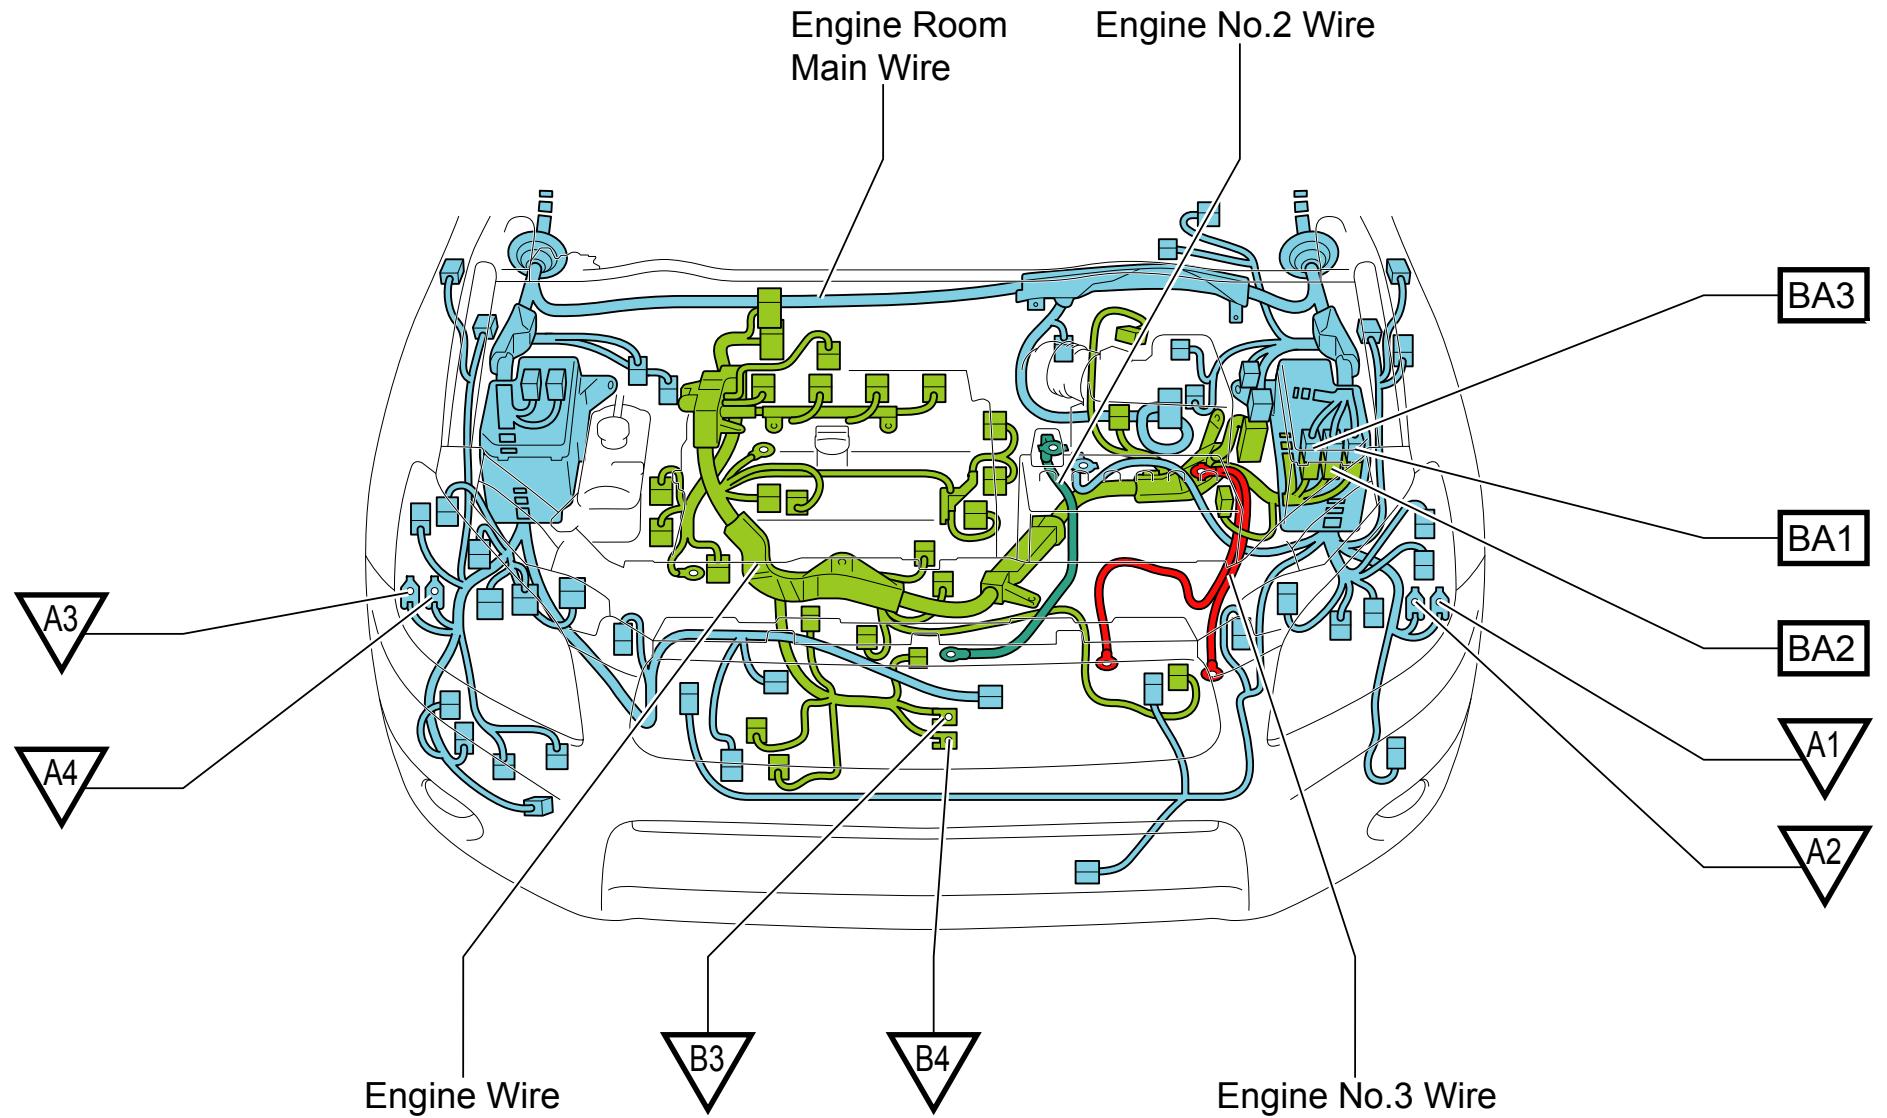




















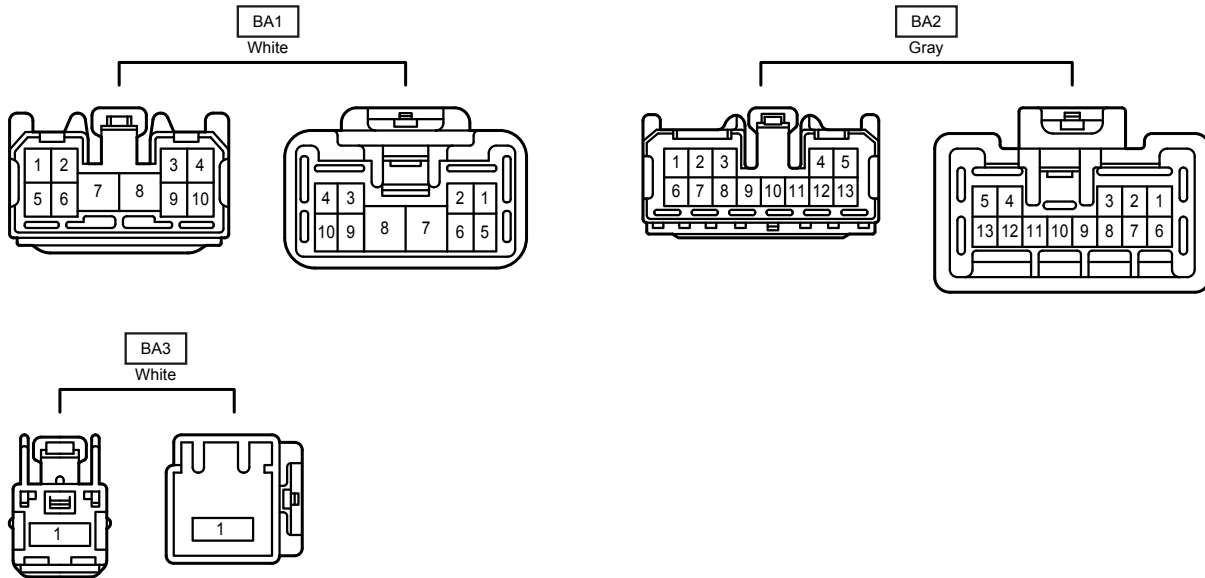



* 1:w/ VSC
* 2:w/o VSC

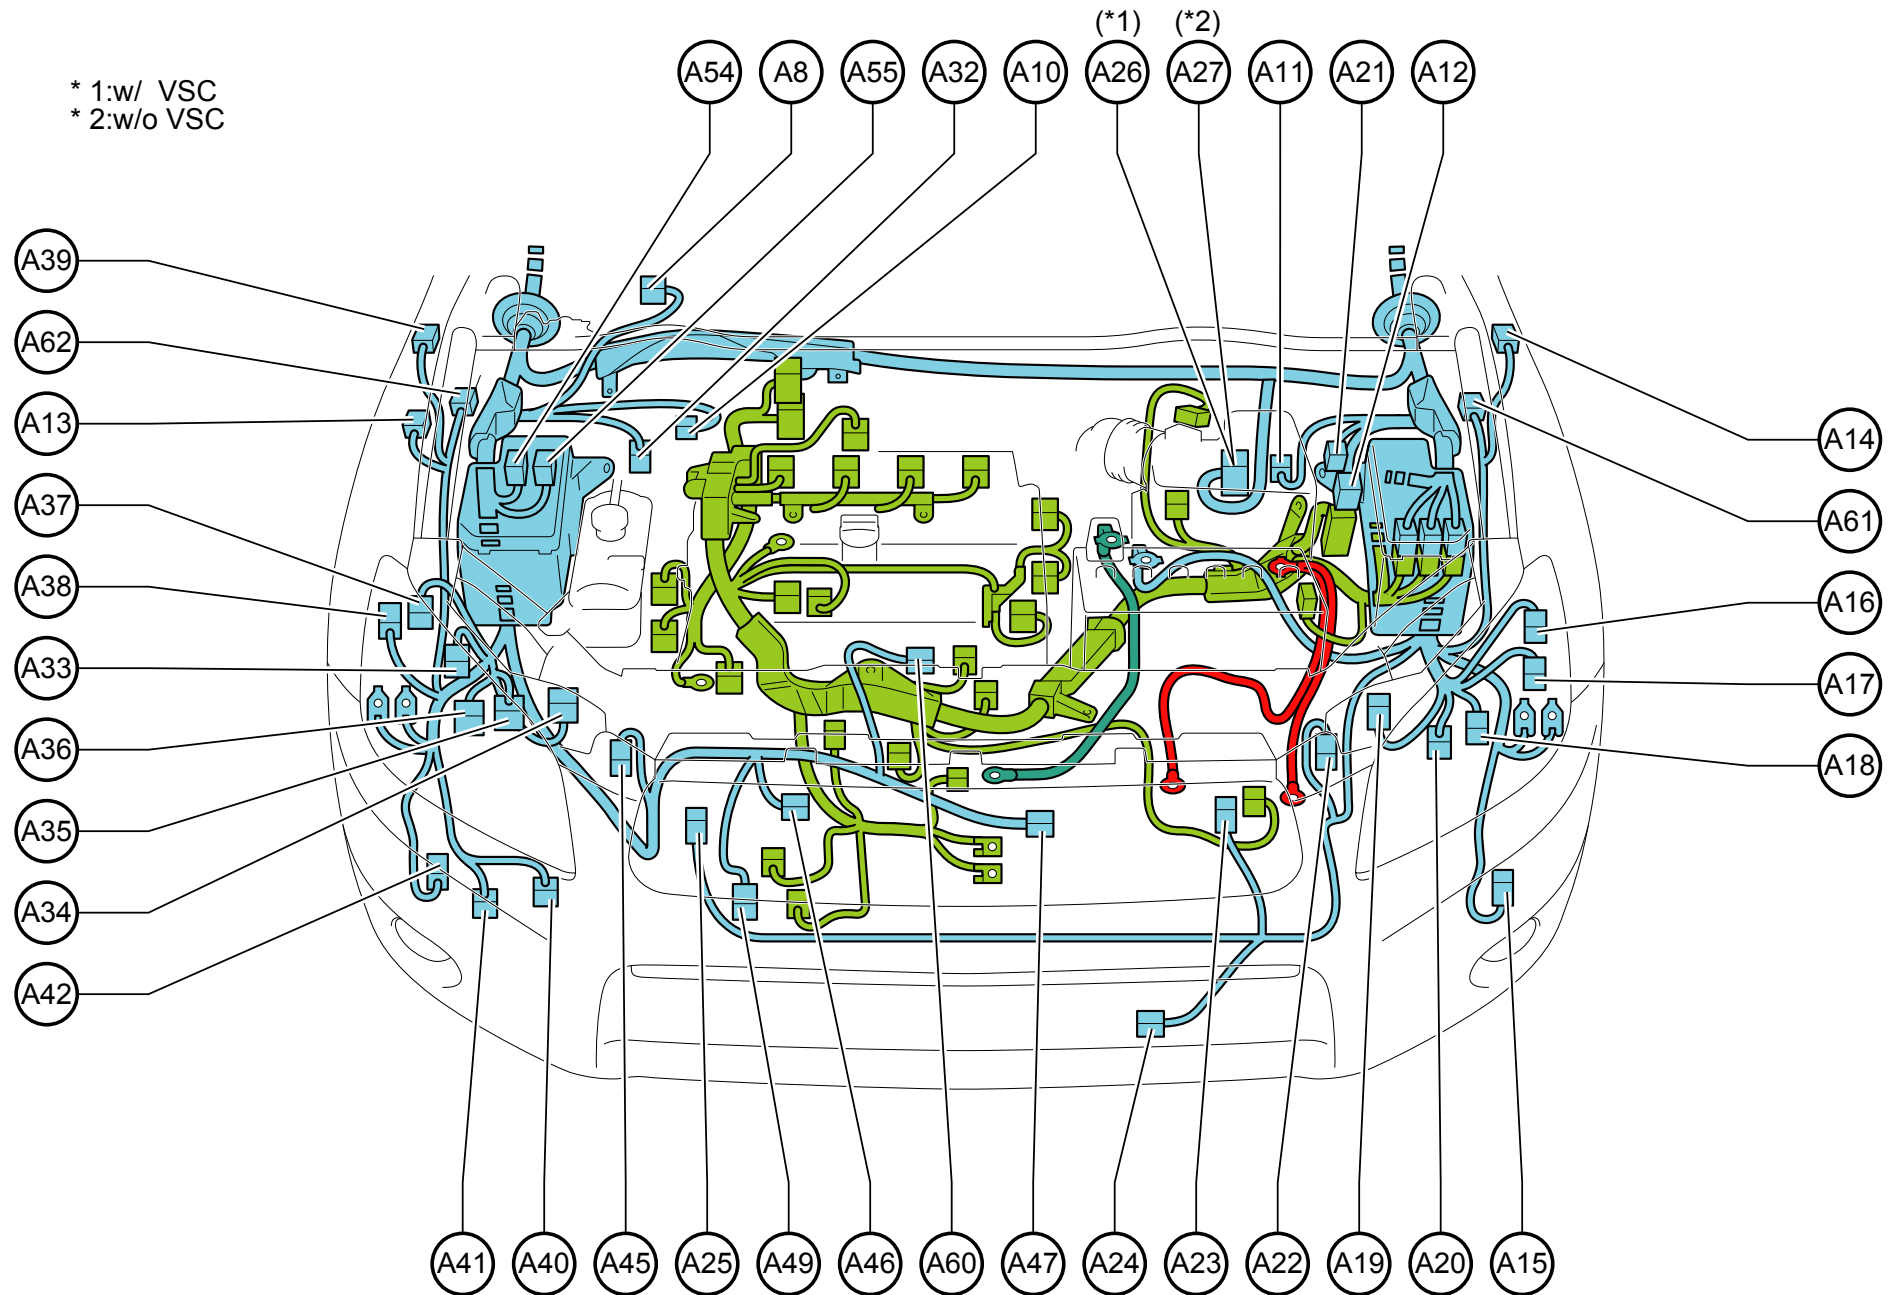 

- A 8 Windshield Wiper Motor
- A 10 Brake Fluid Level Warning SW
- A 11 Fuel Filter Warning SW
- A 12 Engine ECU
- A 13 Wireless Door Lock Buzzer
- A 14 Turn Signal Lamp (Front Side LH)
- A 15 Fog Lamp (Front LH)
- A 16 Turn Signal Lamp (Front LH)
- A 17 Headlamp (LH Low)
- A 18 Headlamp Leveling Motor (LH)
- A 19 Headlamp (LH High)
- A 20 Clearance Lamp (Front LH)
- A 21 Option Connector
- A 22 Airbag Sensor (Front LH)
- A 23 Horn (Low)
- A 24 Ambient Temp. Sensor
- A 25 Horn (High)
- A 26 Skid Control ECU with Actuator
- A 27 Skid Control ECU with Actuator
- A 32 A/C Pressure Sensor
- A 33 Clearance Lamp (Front RH)
- A 34 Headlamp (RH High)
- A 35 Headlamp Leveling Motor (RH)
- A 36 Headlamp (RH Low)
- A 37 Turn Signal Lamp (Front RH)
- A 38 Tire Pressure Warning Antenna (Front)
- A 39 Turn Signal Lamp (Front Side RH)
- A 40 Rear Washer Motor
- A 41 Front Washer Motor
- A 42 Fog Lamp (Front RH)
- A 45 Airbag Sensor (Front RH)
- A 46 A/C Condenser Fan Motor
- A 47 Radiator Fan Motor
- A 49 Inlet Air Temp. Sensor
- A 54 Junction Connector
- A 55 Junction Connector
- A 60 Engine Hood Courtesy SW
- A 61 Speed Sensor (Front LH)
- A 62 Speed Sensor (Front RH)

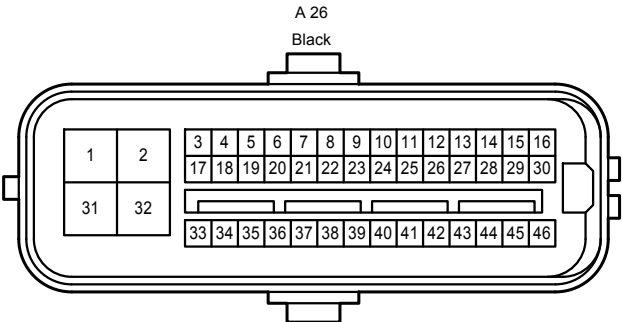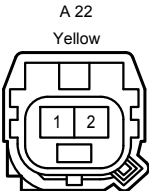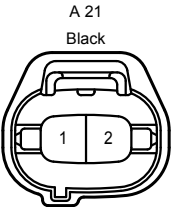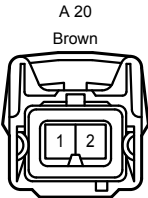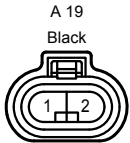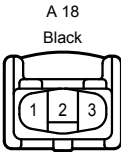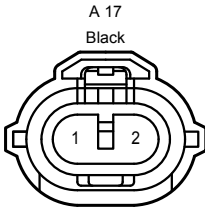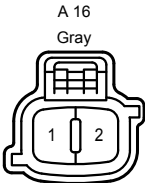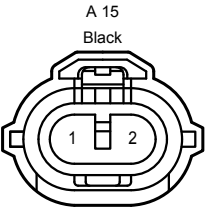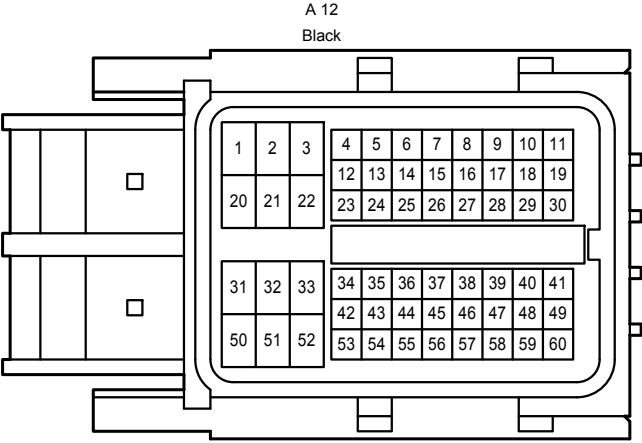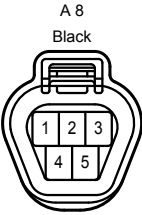            

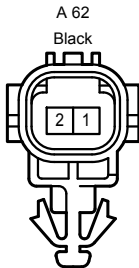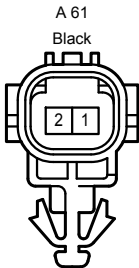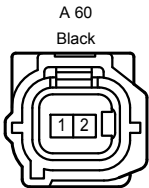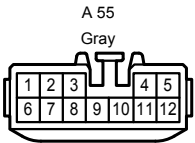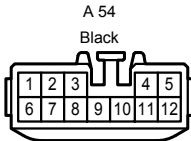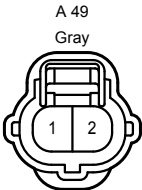      
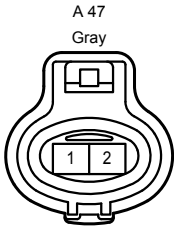 
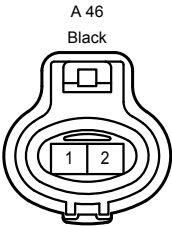 
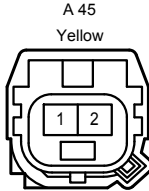 
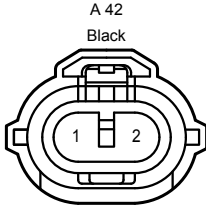 
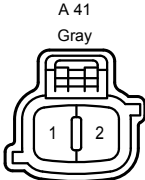 
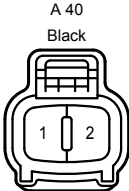 
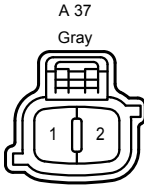 
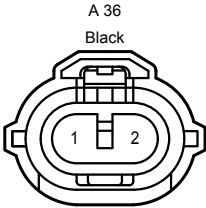 
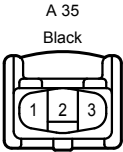 
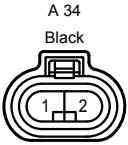 
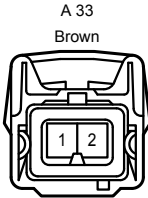 
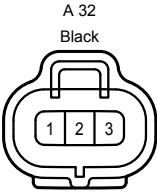 
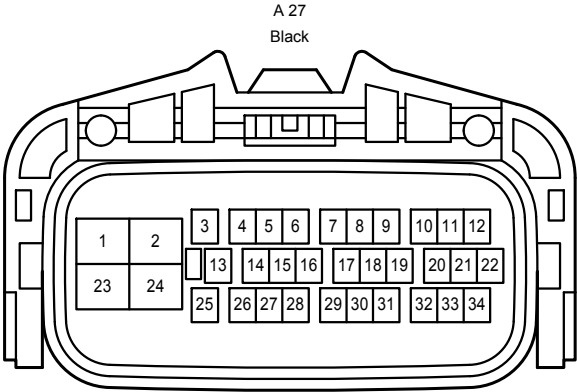 


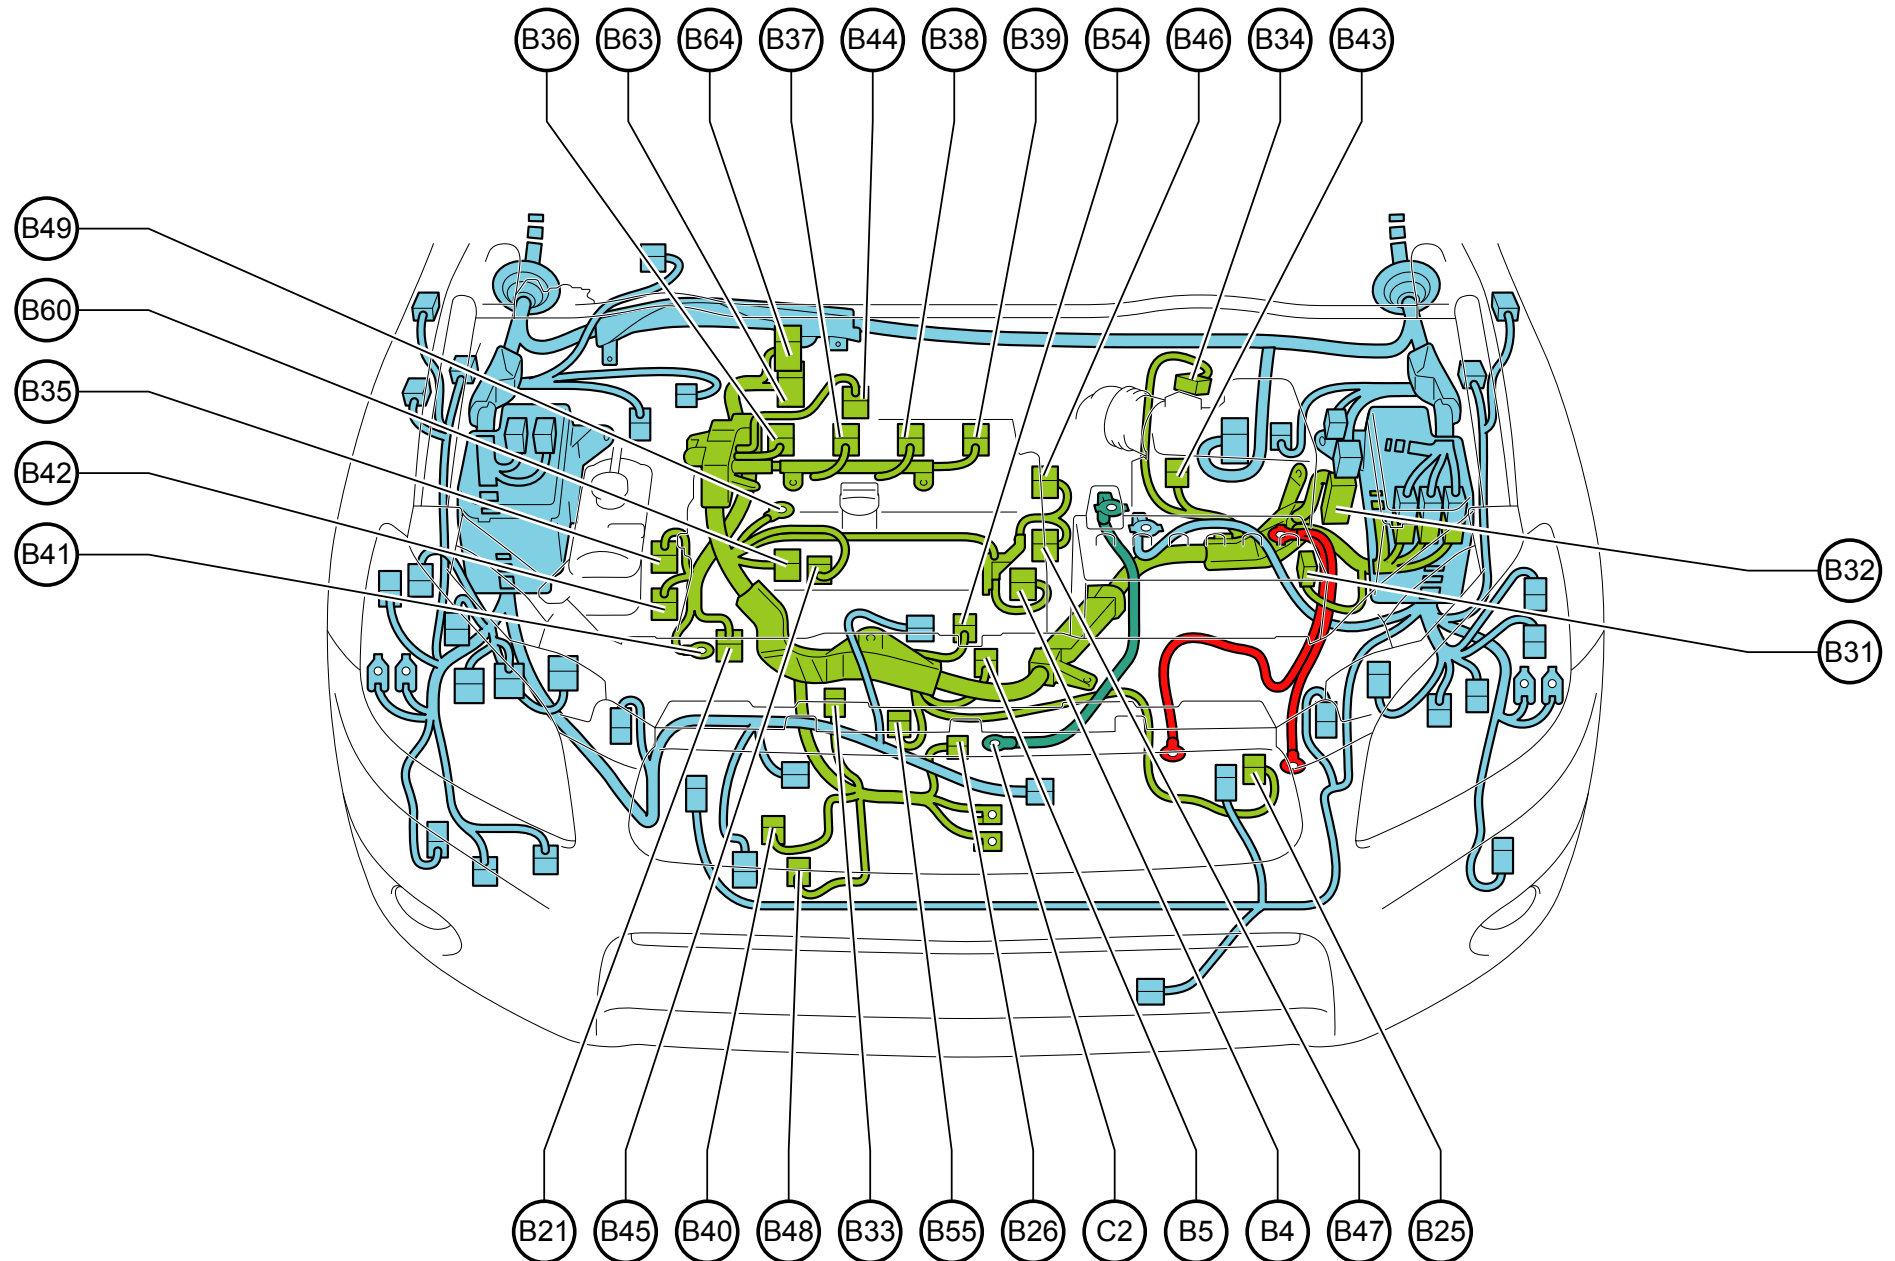 



- B 4 Water Temp. Sensor
- B 5 Engine Oil Pressure SW
- B 21 Alternator
- B 25 Back-Up Light SW
- B 26 Starter
- B 31 Battery Current Sensor
- B 32 Engine ECU
- B 33 Throttle Body Assembly
- B 34 Air Flow Meter
- B 35 Camshaft Position Sensor
- B 36 Fuel Injector (No.1)
- B 37 Fuel Injector (No.2)
- B 38 Fuel Injector (No.3)
- B 39 Fuel Injector (No.4)
- B 40 A/C Compressor
- B 41 Alternator
- B 42 Crankshaft Position Sensor
- B 43 Glow Plug Relay
- B 44 VRV (EGR)
- B 45 Turbo Pressure Sensor
- B 46 Suction Control Valve
- B 47 Fuel Temp. Sensor
- B 48 Engine Oil Level Sensor
- B 49 Glow Plug
- B 54 EGR Valve Position Sensor
- B 55 Throttle Body Assembly
- B 60 Fuel Pressure Sensor
- B 63 Injector Driver (EDU)
- B 64 Injector Driver (EDU)


- C 2 Starter

                 Position of Parts in Engine Compartment <RHD 2AD-FTV>

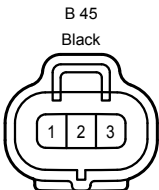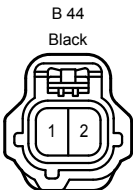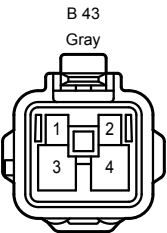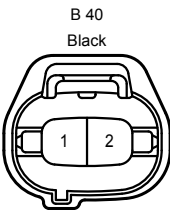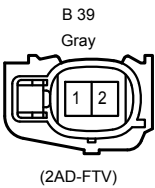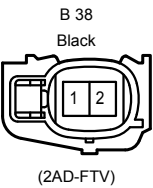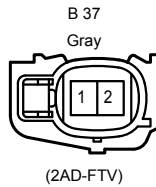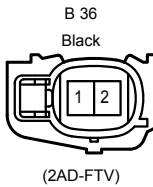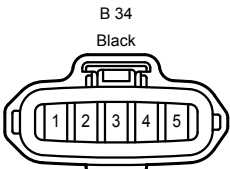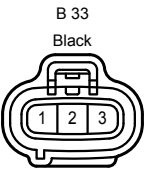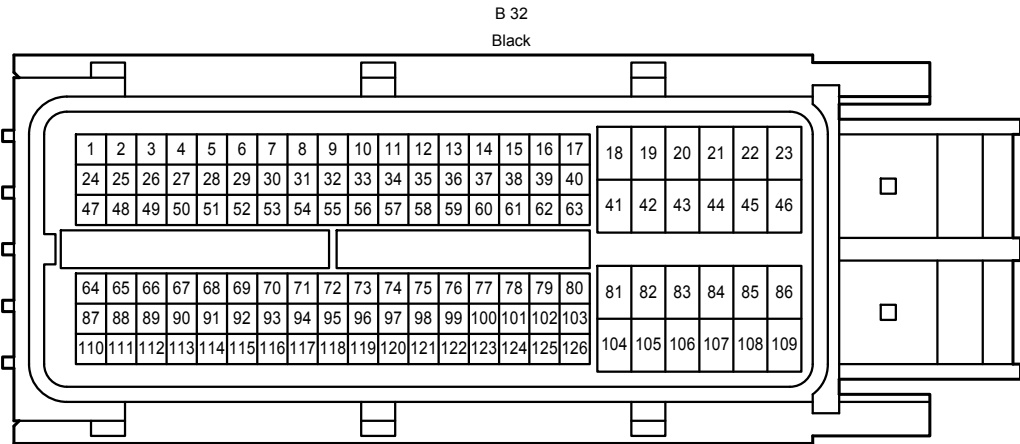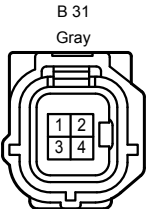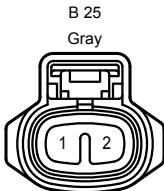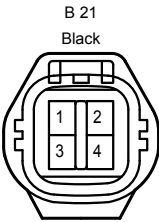


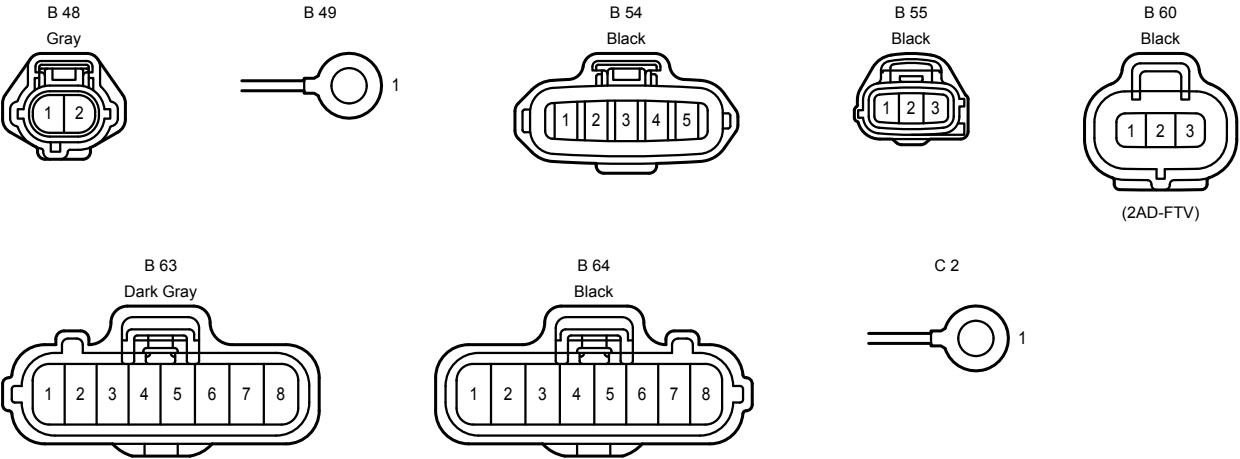














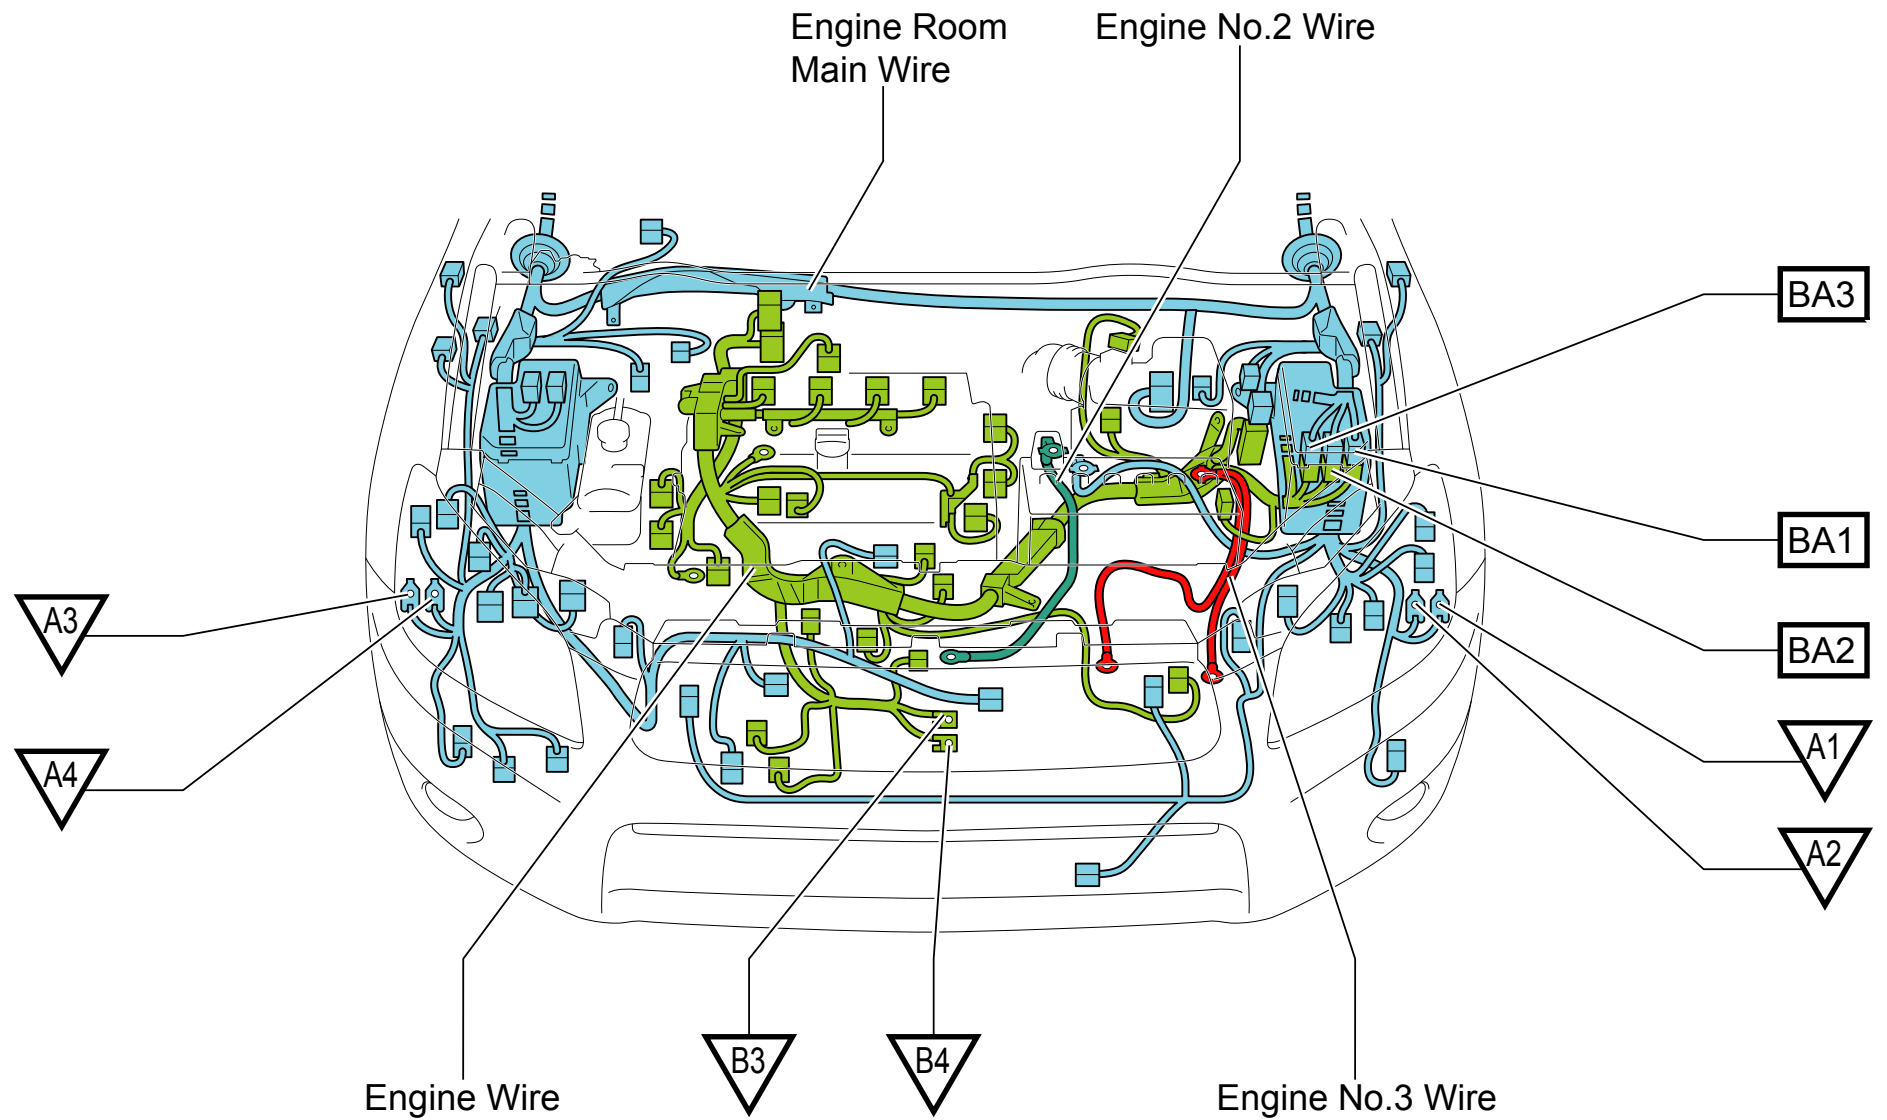


















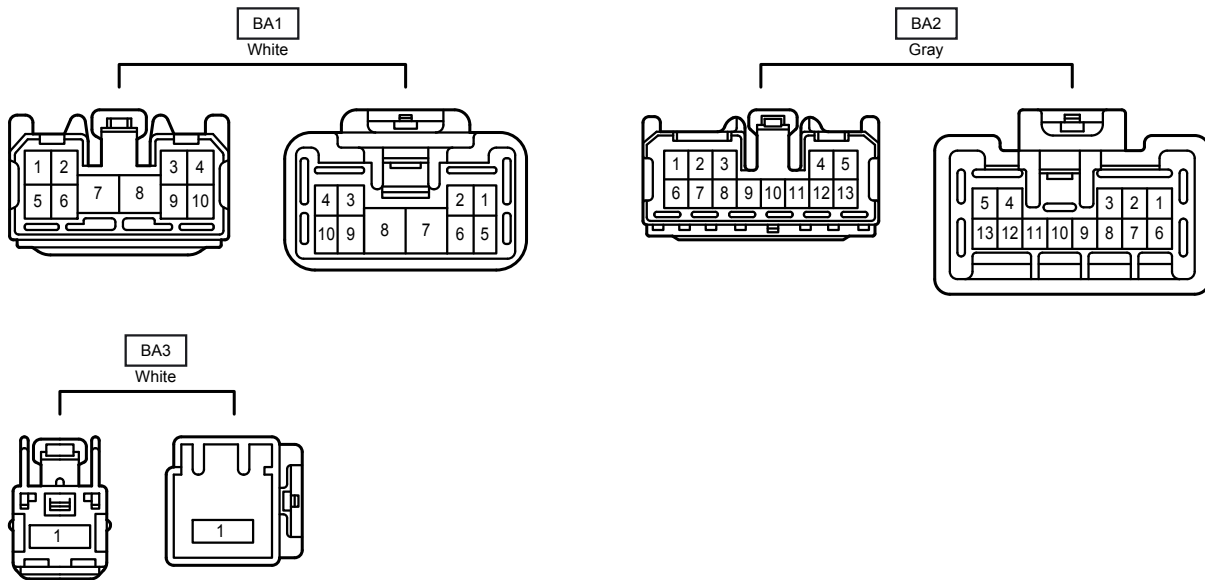



* 1:w/ VSC
* 2:w/o VSC

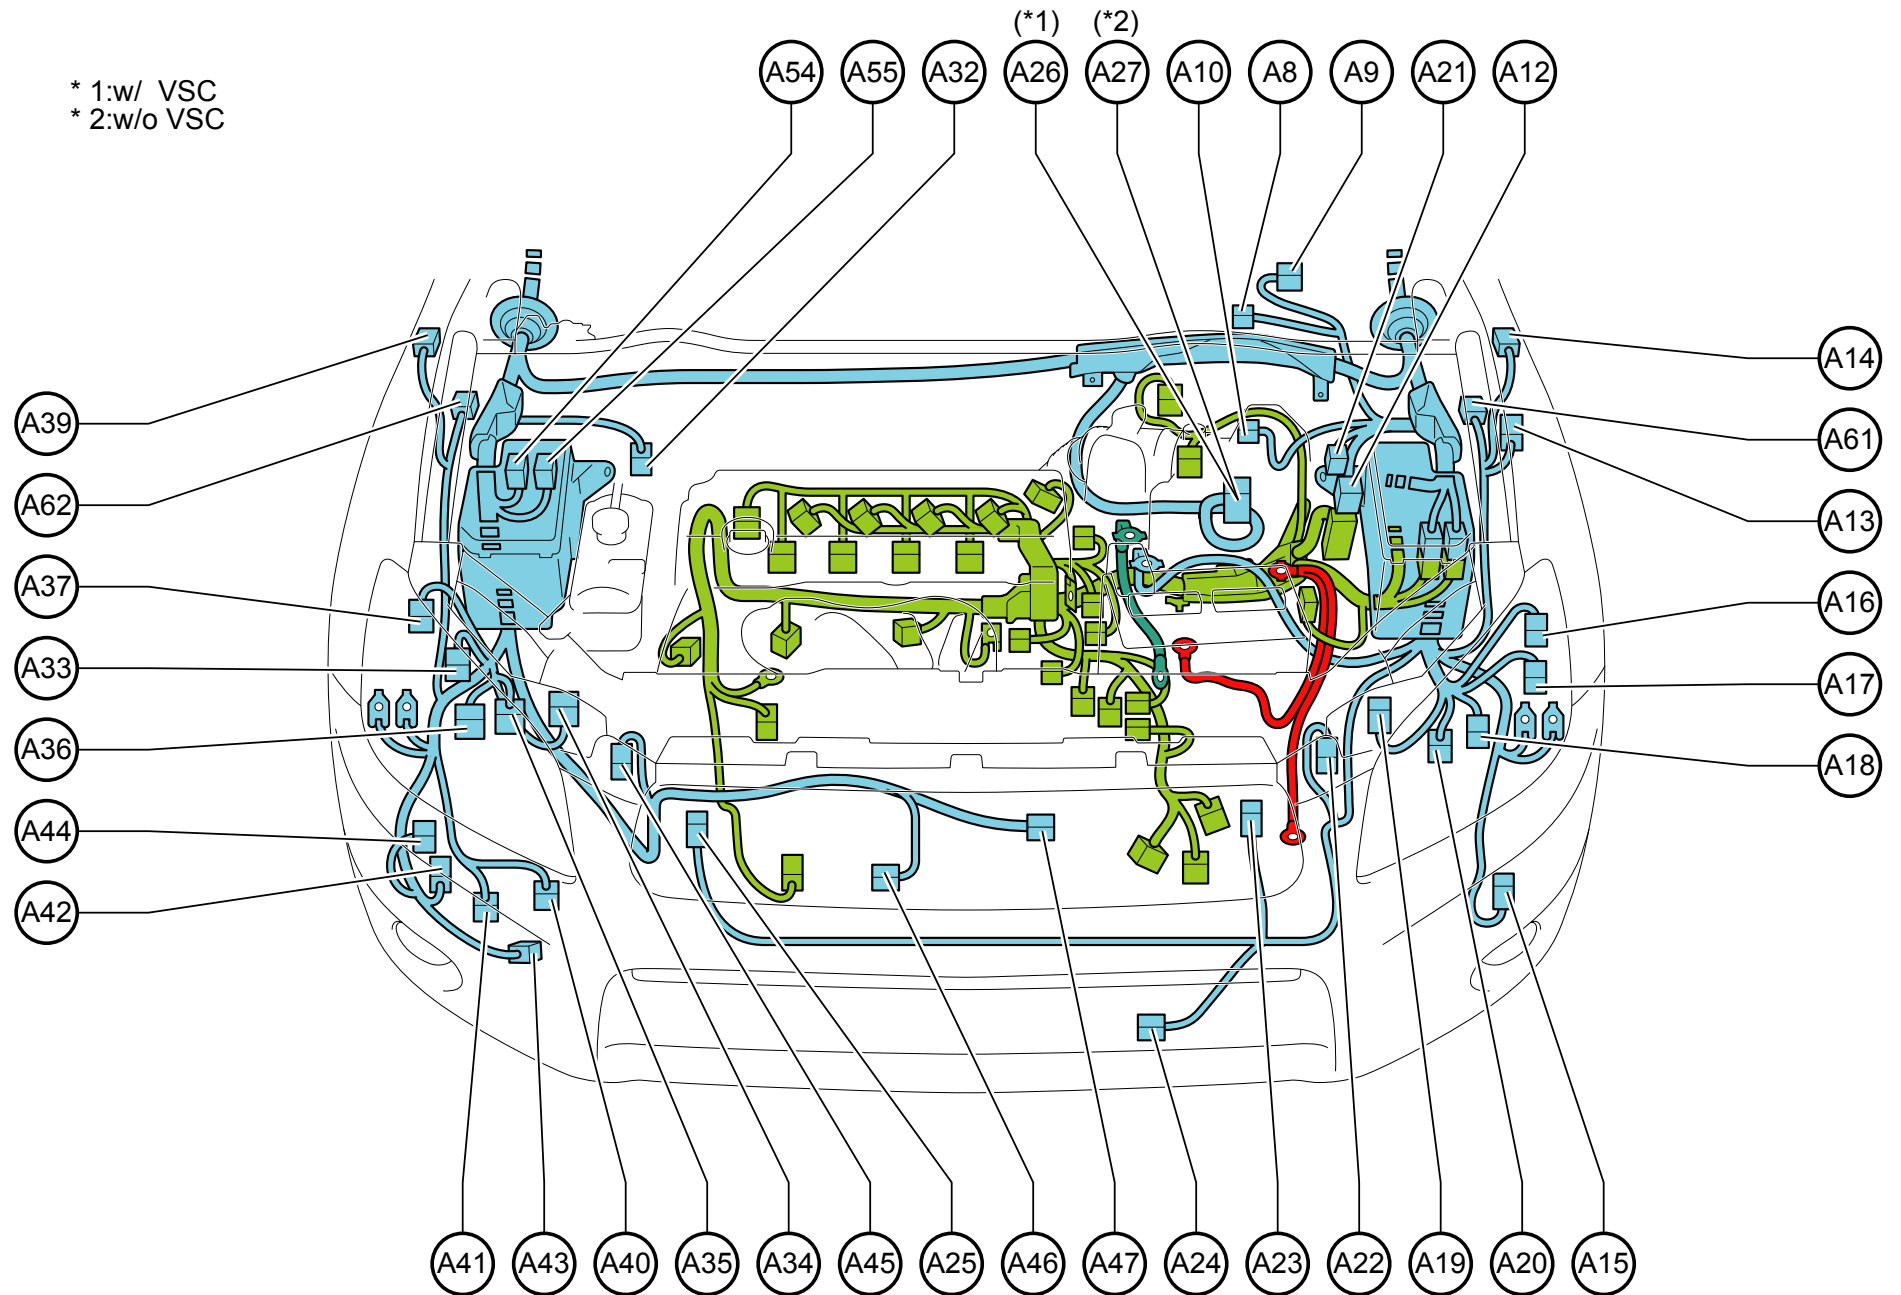 

- A 8 Windshield Wiper Motor
- A 9 Front Wiper Deicer
- A 10 Brake Fluid Level Warning SW
- A 12 Engine ECU
- A 13 Wireless Door Lock Buzzer
- A 14 Turn Signal Lamp (Front Side LH)
- A 15 Fog Lamp (Front LH)
- A 16 Turn Signal Lamp (Front LH)
- A 17 Headlamp (LH Low)
- A 18 Headlamp Leveling Motor (LH)
- A 19 Headlamp (LH High)
- A 20 Clearance Lamp (Front LH)
- A 21 Option Connector
- A 22 Airbag Sensor (Front LH)
- A 23 Horn (Low)
- A 24 Ambient Temp. Sensor
- A 25 Horn (High)
- A 26 Skid Control ECU with Actuator
- A 27 Skid Control ECU with Actuator
- A 32 A/C Pressure Sensor
- A 33 Clearance Lamp (Front RH)
- A 34 Headlamp (RH High)
- A 35 Headlamp Leveling Motor (RH)
- A 36 Headlamp (RH Low)
- A 37 Turn Signal Lamp (Front RH)
- A 39 Turn Signal Lamp (Front Side RH)
- A 40 Rear Washer Motor
- A 41 Front Washer Motor
- A 42 Fog Lamp (Front RH)
- A 43 Headlamp Cleaner Motor
- A 44 Headlamp Cleaner Control Relay
- A 45 Airbag Sensor (Front RH)
- A 46 A/C Condenser Fan Motor
- A 47 Radiator Fan Motor
- A 54 Junction Connector
- A 55 Junction Connector
- A 61 Speed Sensor (Front LH)
- A 62 Speed Sensor (Front RH)

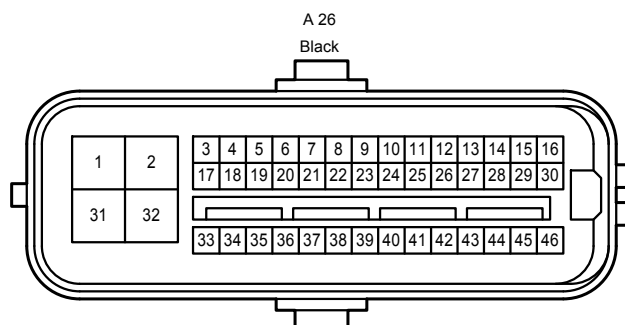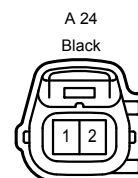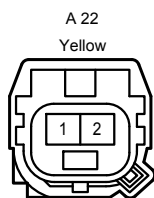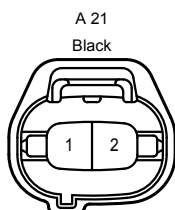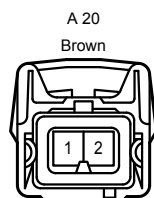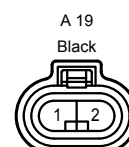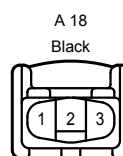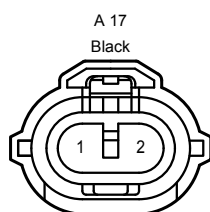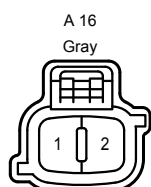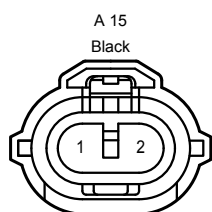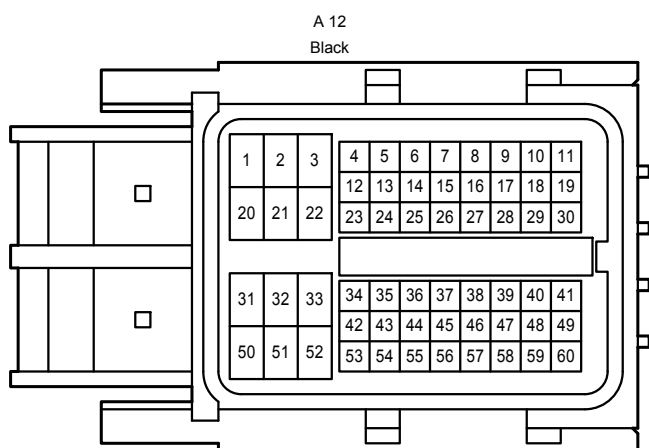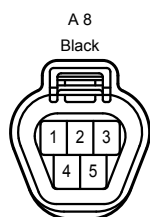              


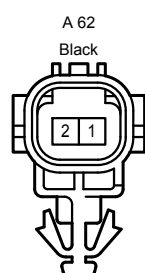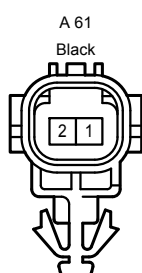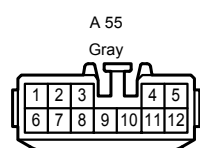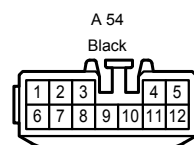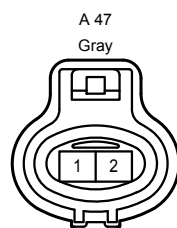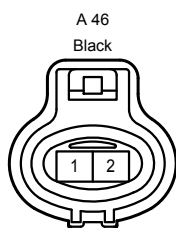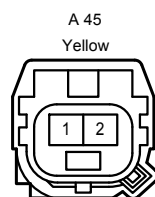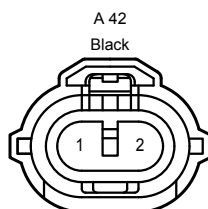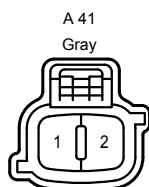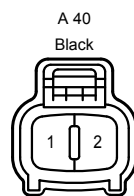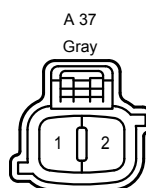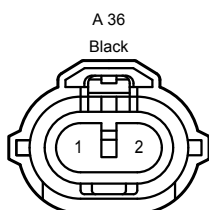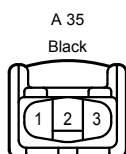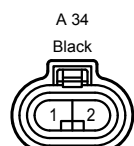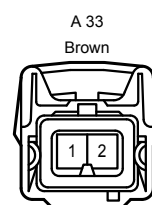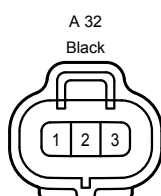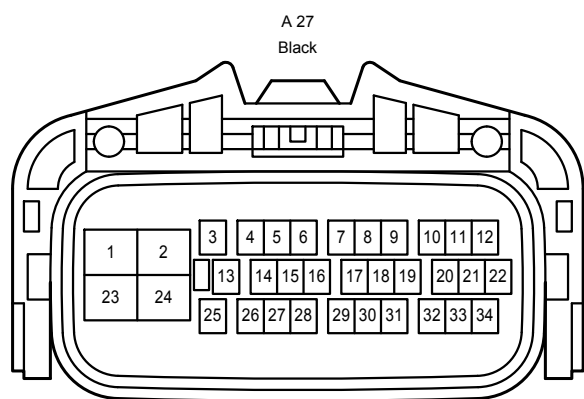                 

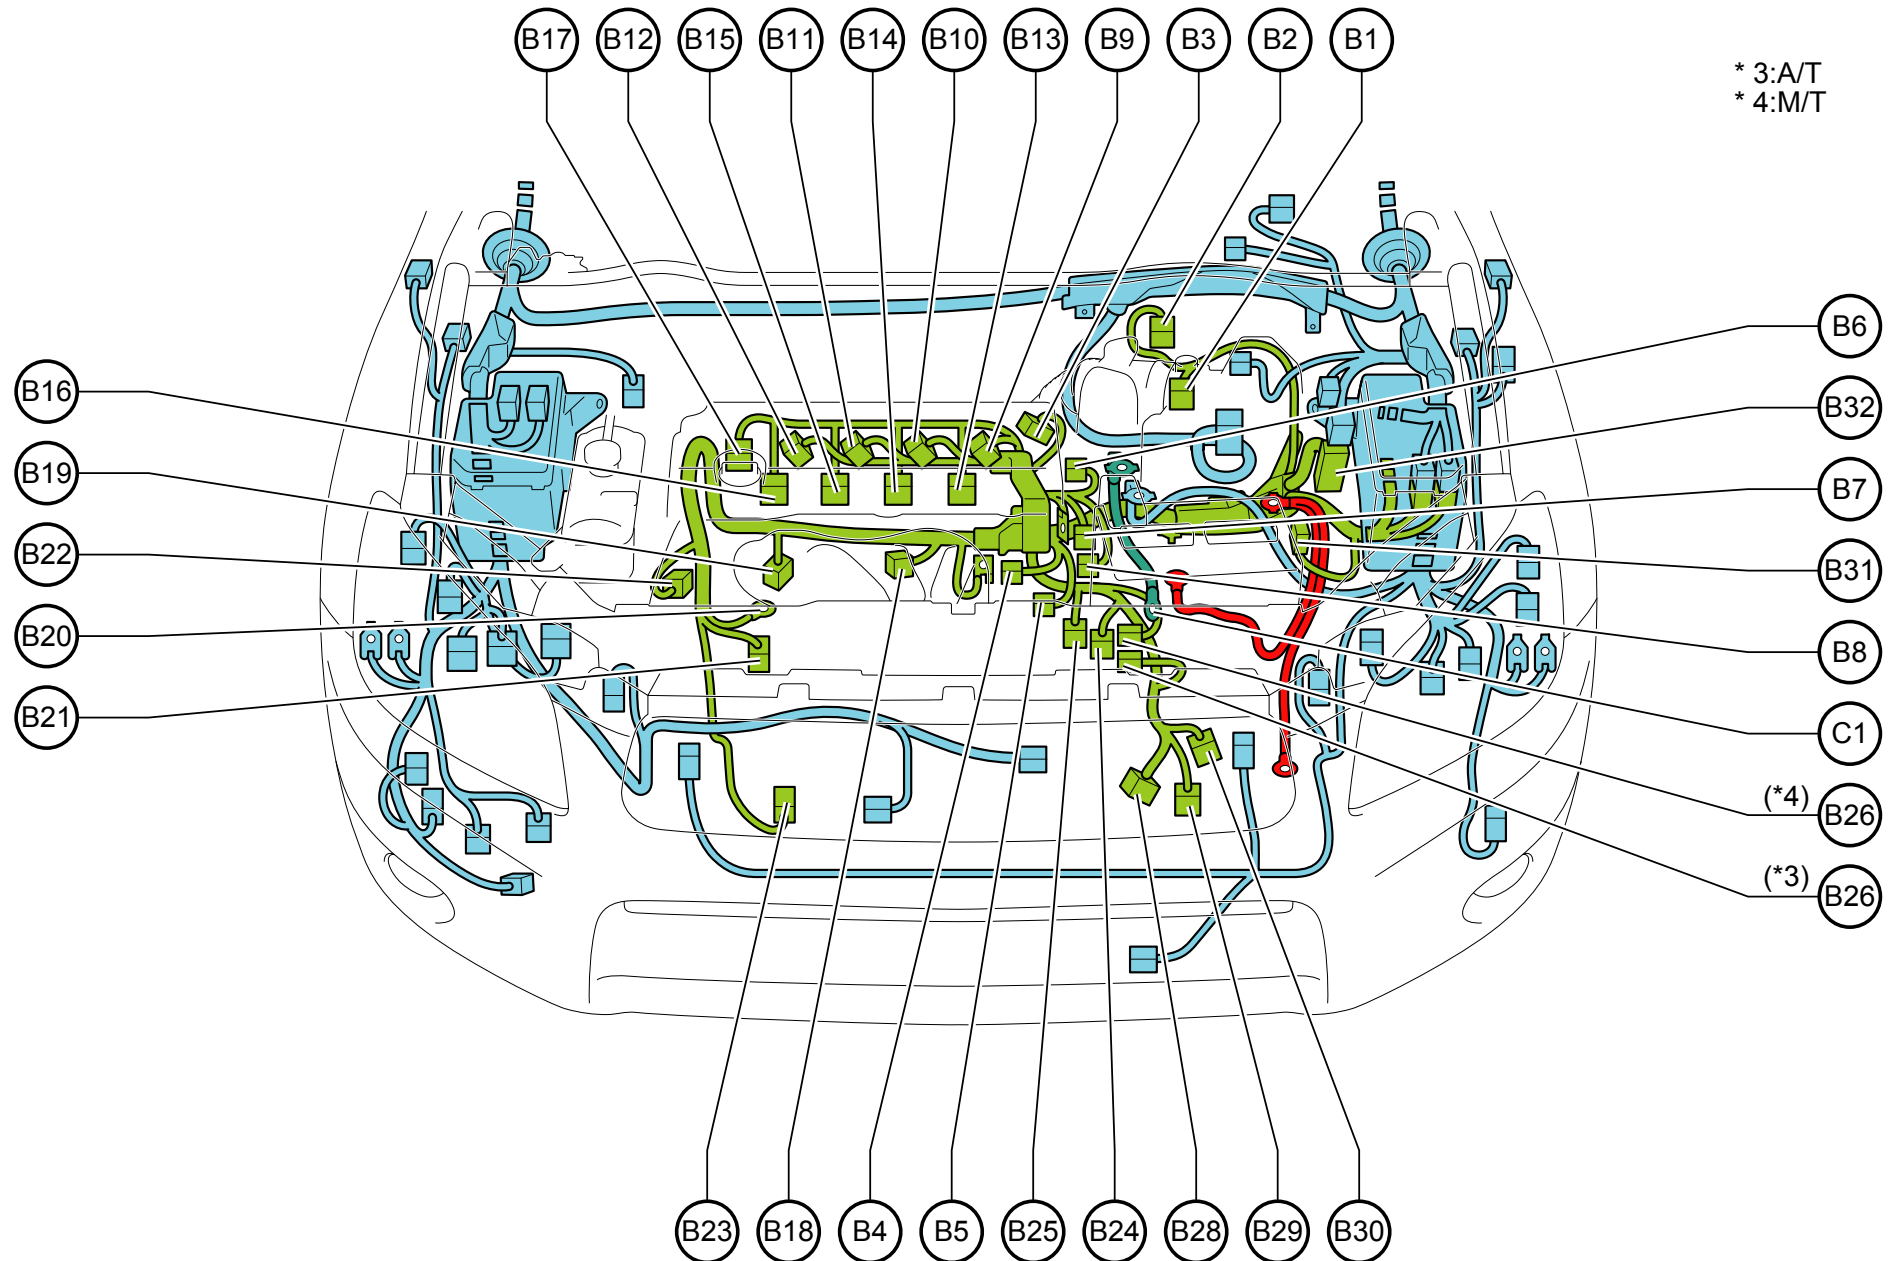 


- B 1 Air Flow Meter
- B 2 VSV (Purge)
- B 3 Throttle Body Assembly
- B 4 Water Temp. Sensor
- B 5 Engine Oil Pressure SW
- B 6 Camshaft Position Sensor
- B 7 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- B 8 Noise Filter (Ignition)
- B 9 Ignition Coil (No.4)
- B 10 Ignition Coil (No.3)
- B 11 Ignition Coil (No.2)
- B 12 Ignition Coil (No.1)
- B 13 Fuel Injector (No.4)
- B 14 Fuel Injector (No.3)
- B 15 Fuel Injector (No.2)
- B 16 Fuel Injector (No.1)
- B 17 Camshaft Timing Oil Control Valve
- B 18 Knock Control Sensor (Bank 1)
- B 19 Heated Oxygen Sensor (Bank 1 Sensor 2)
- B 20 Alternator
- B 21 Alternator
- B 22 Crankshaft Position Sensor
- B 23 A/C Compressor
- B 24 Transmission Revolution Sensor (Counter Gear)
- B 25 Back-Up Light SW
- B 26 Starter
- B 28 Park/Neutral Position SW
- B 29 ECT Solenoid
- B 30 Transmission Revolution Sensor (Turbine)
- B 31 Battery Current Sensor
- B 32 Engine ECU

 
- C 1 Starter

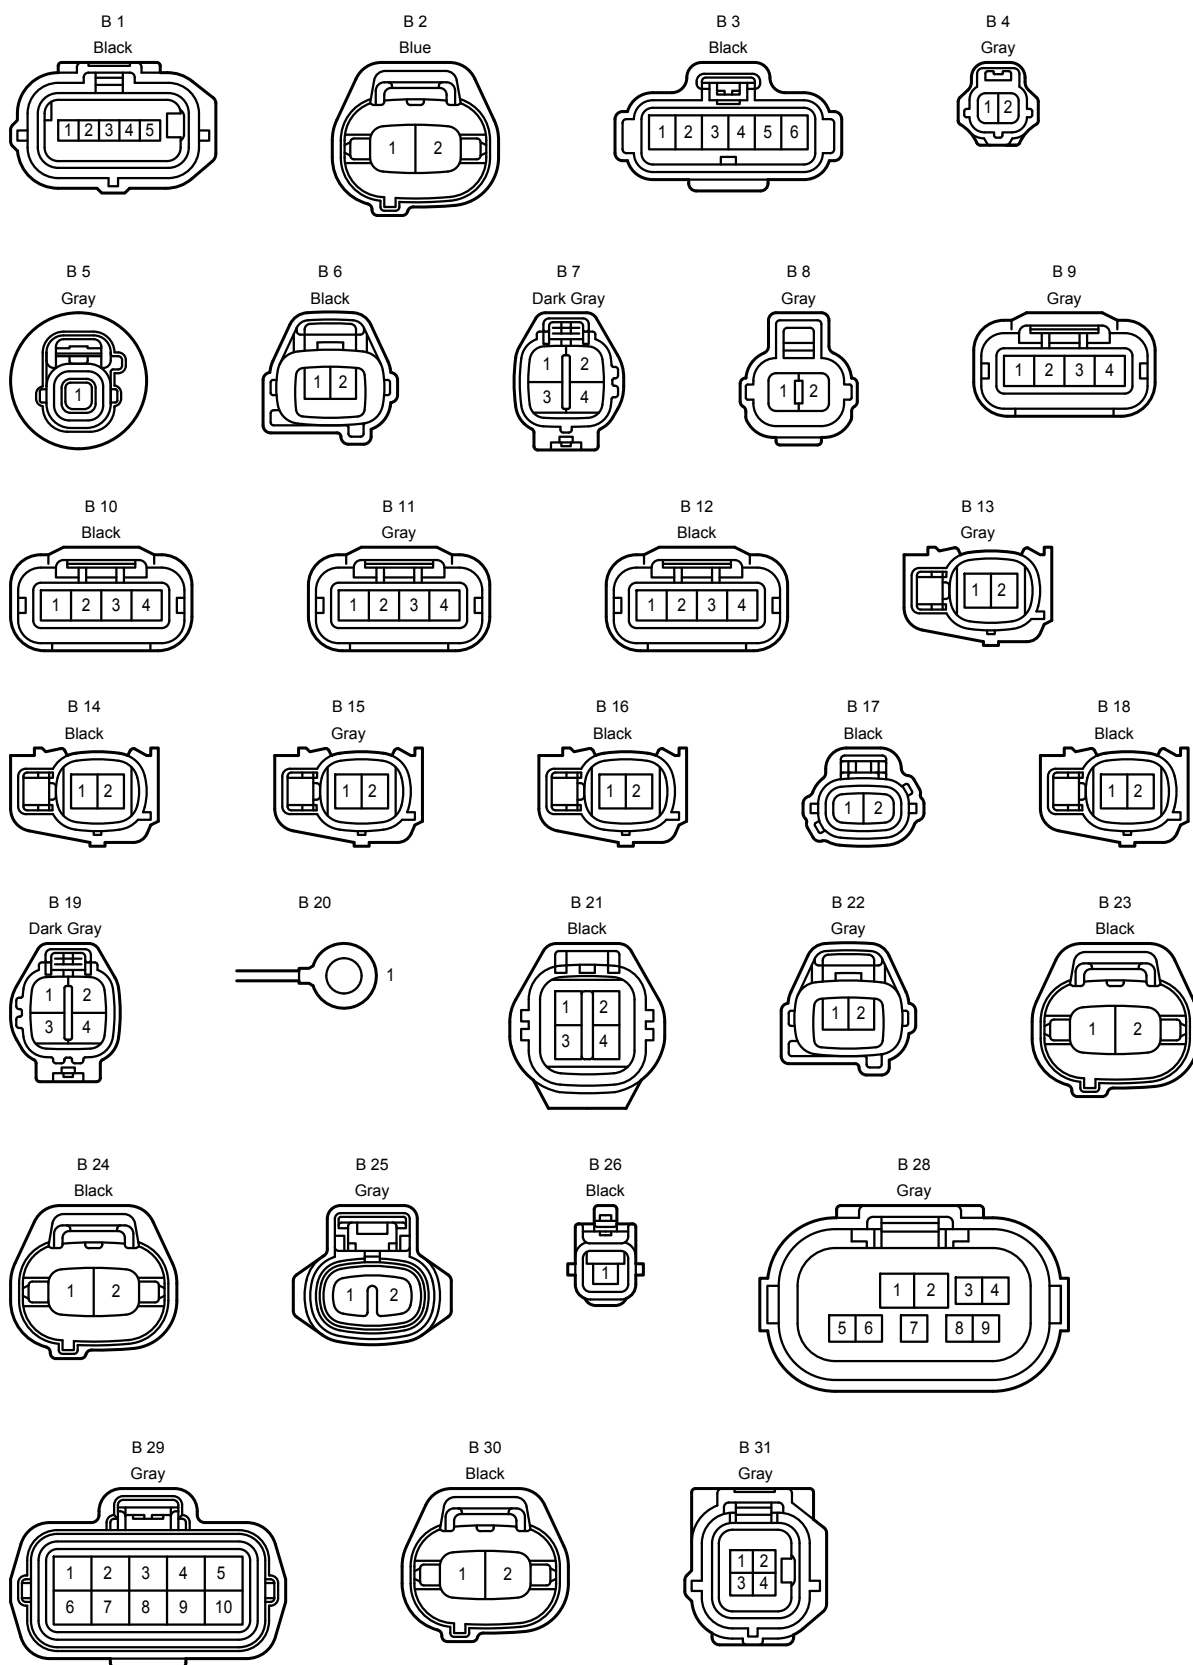


 
Position of Parts in Engine Compartment <LHD 2AZ-FE, 1AZ-FE>

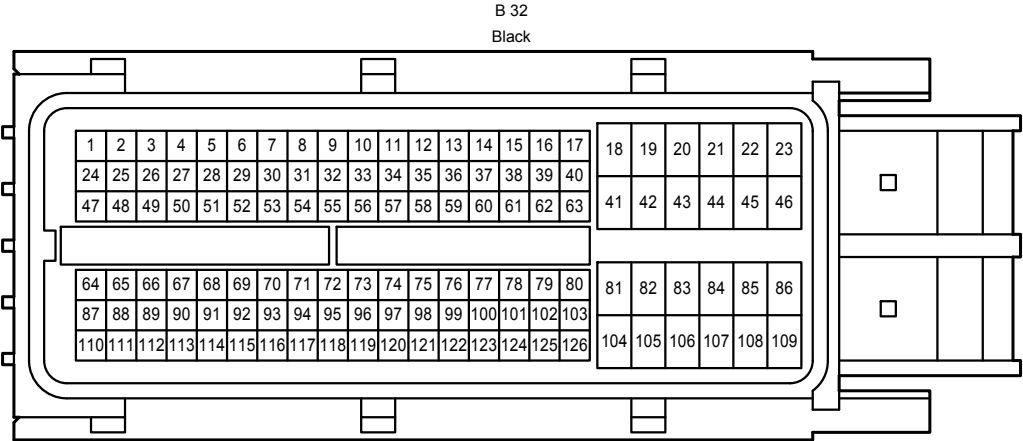


C 1

 














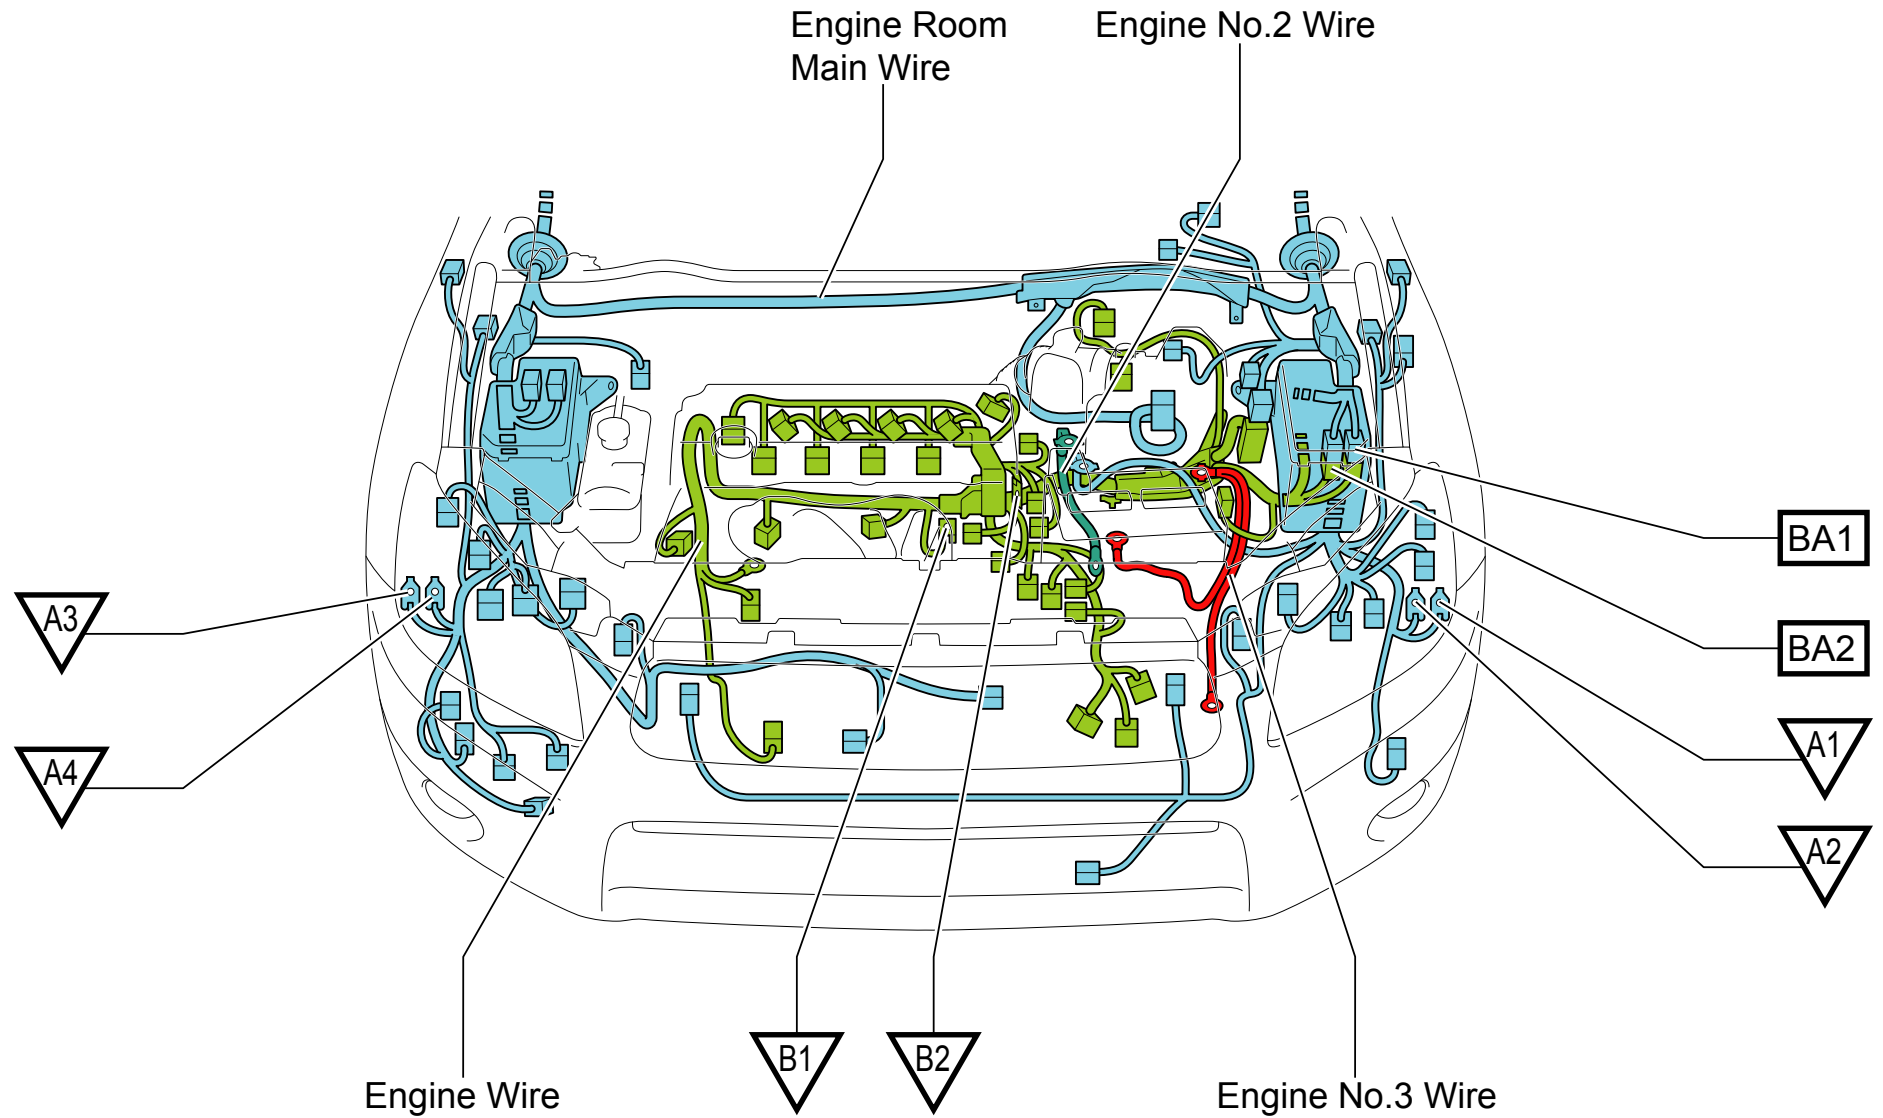 



















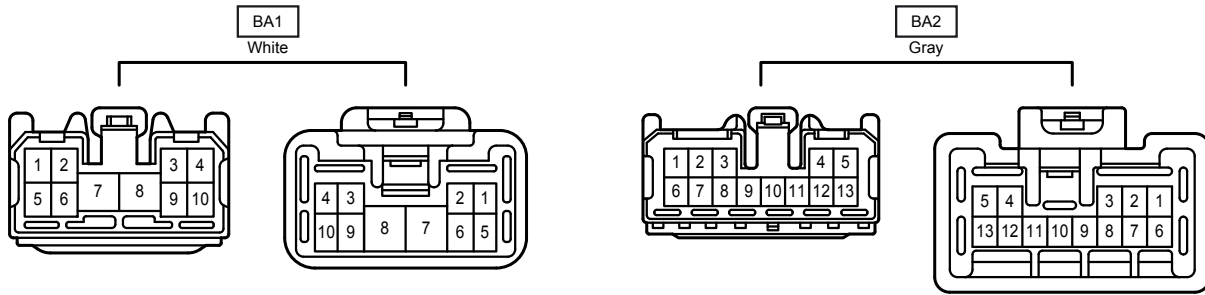 



* 1:w/ VSC
* 2:w/o VSC

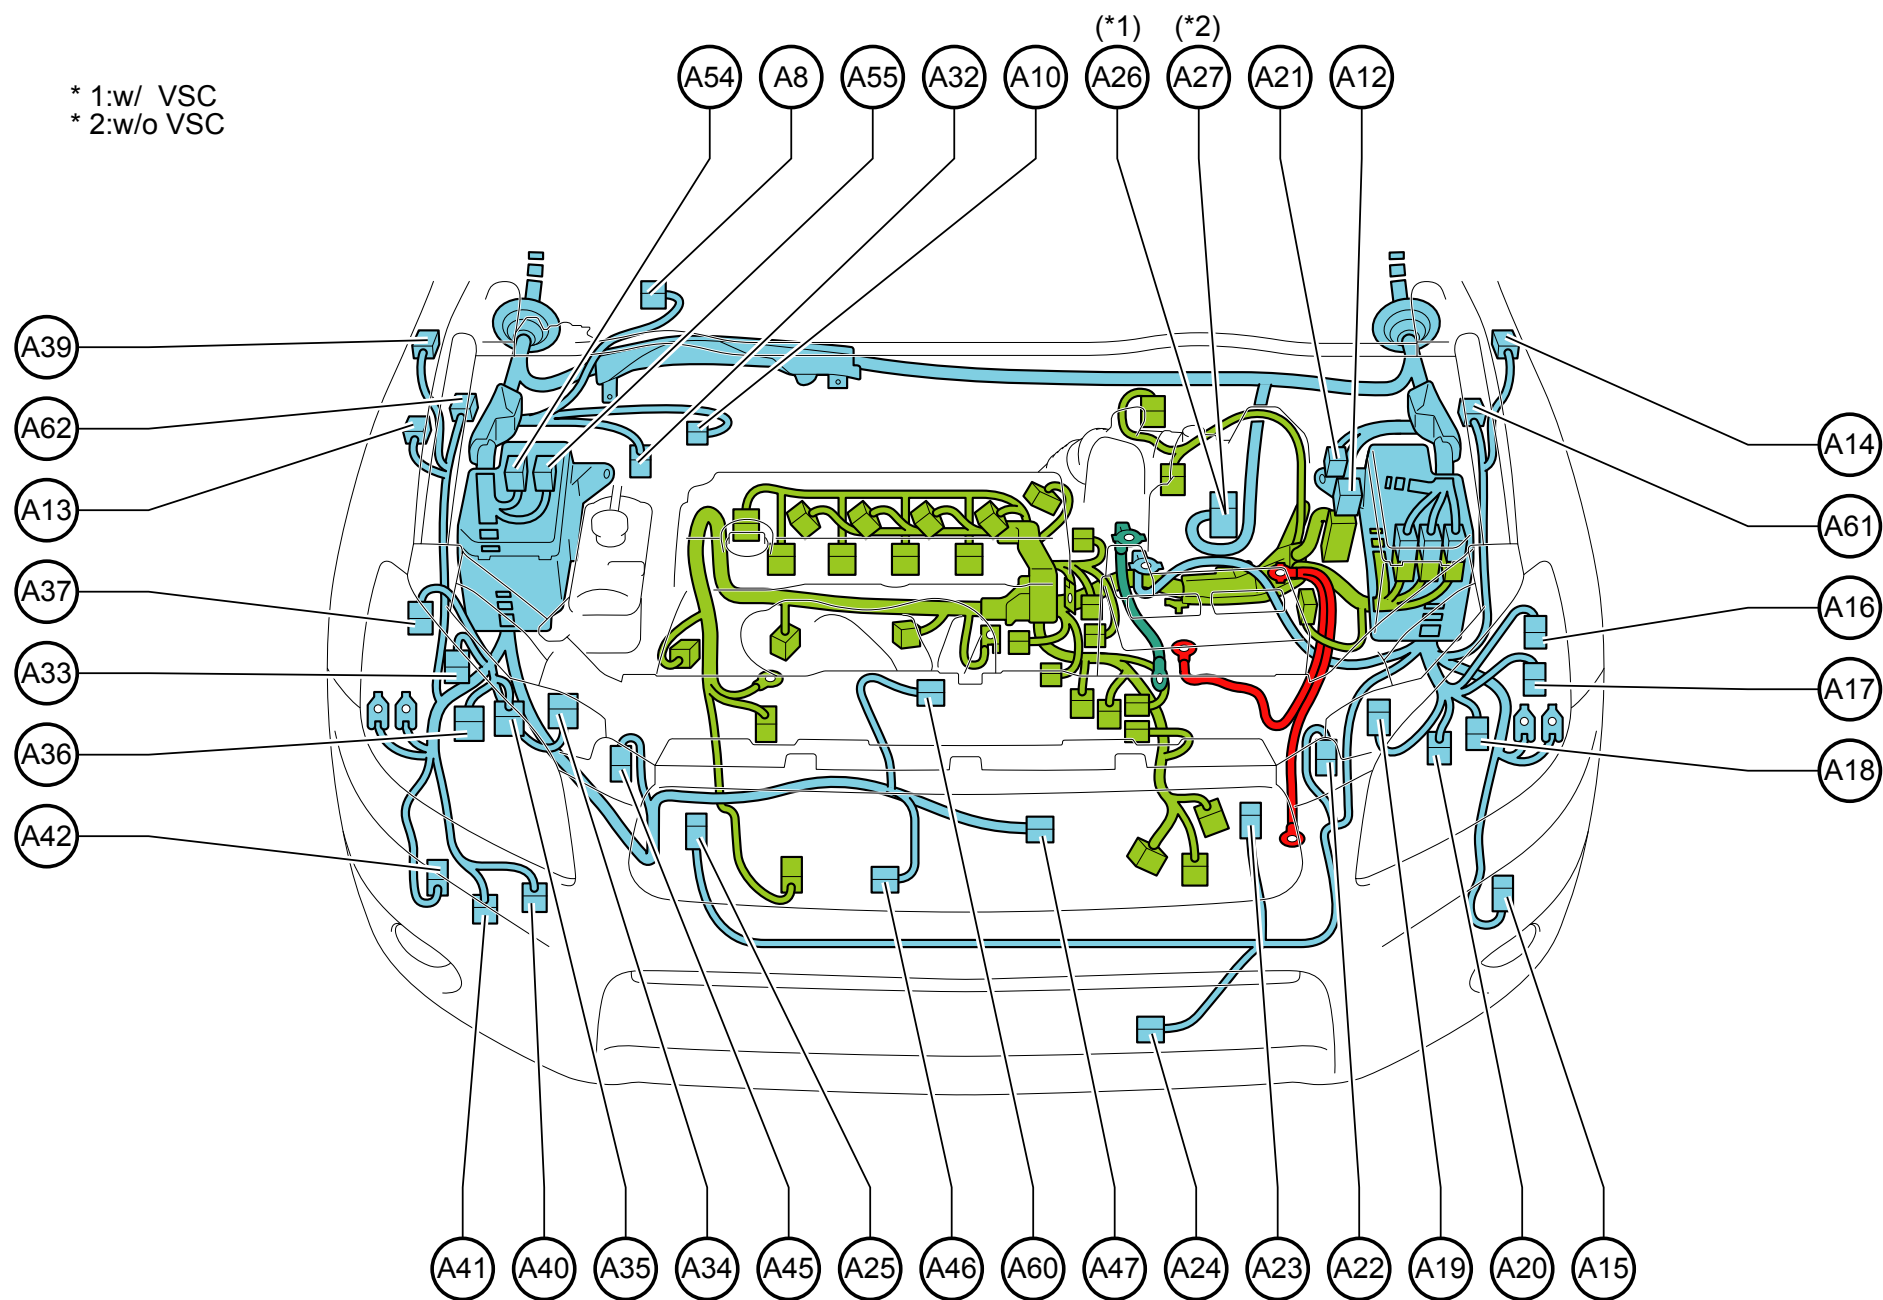 

- A 8 Windshield Wiper Motor
- A 10 Brake Fluid Level Warning SW
- A 12 Engine ECU
- A 13 Wireless Door Lock Buzzer
- A 14 Turn Signal Lamp (Front Side LH)
- A 15 Fog Lamp (Front LH)
- A 16 Turn Signal Lamp (Front LH)
- A 17 Headlamp (LH Low)
- A 18 Headlamp Leveling Motor (LH)
- A 19 Headlamp (LH High)
- A 20 Clearance Lamp (Front LH)
- A 21 Option Connector
- A 22 Airbag Sensor (Front LH)
- A 23 Horn (Low)
- A 24 Ambient Temp. Sensor
- A 25 Horn (High)
- A 26 Skid Control ECU with Actuator
- A 27 Skid Control ECU with Actuator
- A 32 A/C Pressure Sensor
- A 33 Clearance Lamp (Front RH)
- A 34 Headlamp (RH High)
- A 35 Headlamp Leveling Motor (RH)
- A 36 Headlamp (RH Low)
- A 37 Turn Signal Lamp (Front RH)
- A 39 Turn Signal Lamp (Front Side RH)
- A 40 Rear Washer Motor
- A 41 Front Washer Motor
- A 42 Fog Lamp (Front RH)
- A 45 Airbag Sensor (Front RH)
- A 46 A/C Condenser Fan Motor
- A 47 Radiator Fan Motor
- A 54 Junction Connector
- A 55 Junction Connector
- A 60 Engine Hood Courtesy SW
- A 61 Speed Sensor (Front LH)
- A 62 Speed Sensor (Front RH)

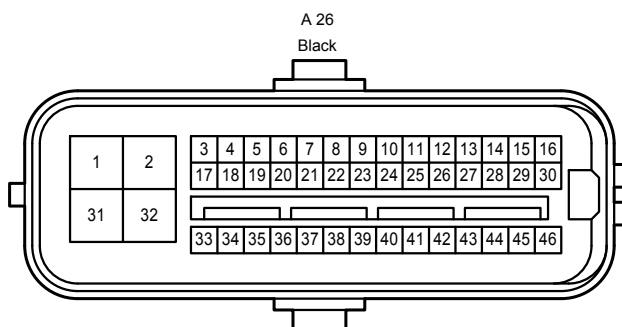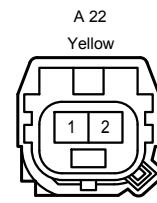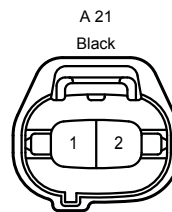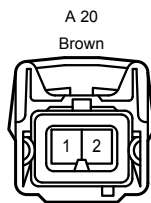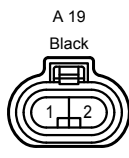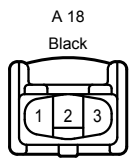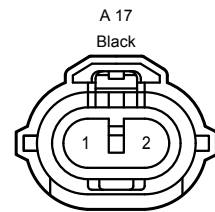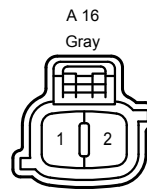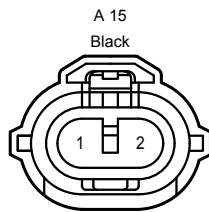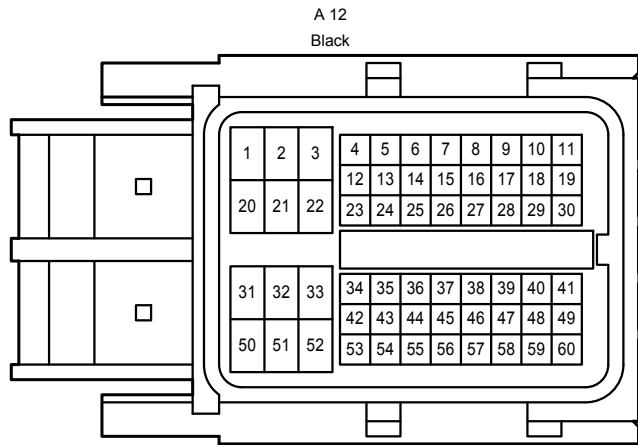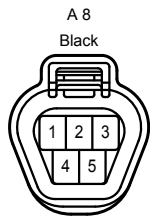              


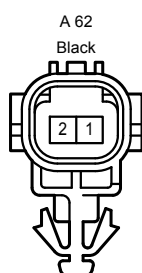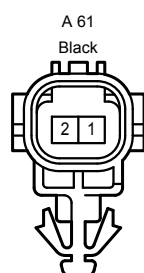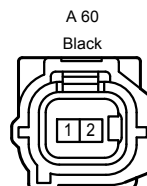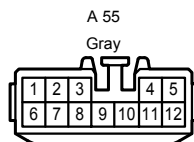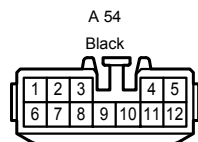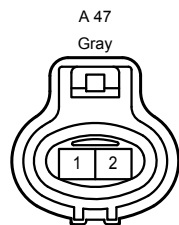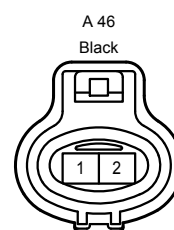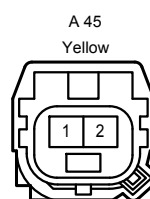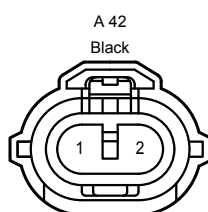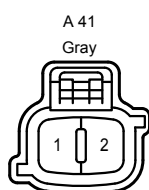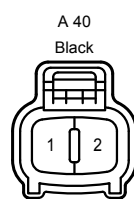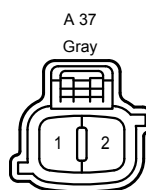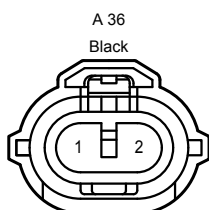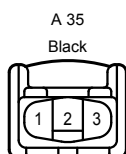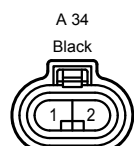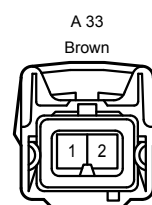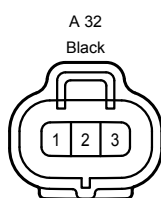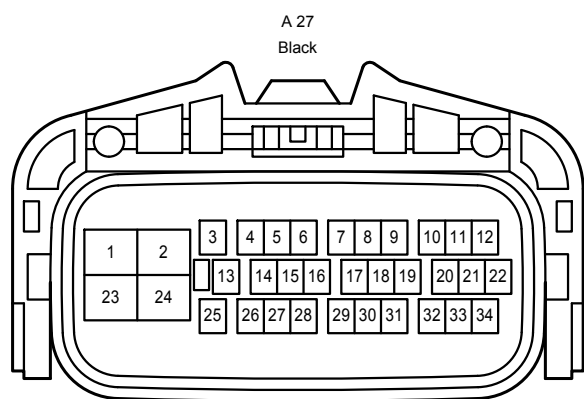                  

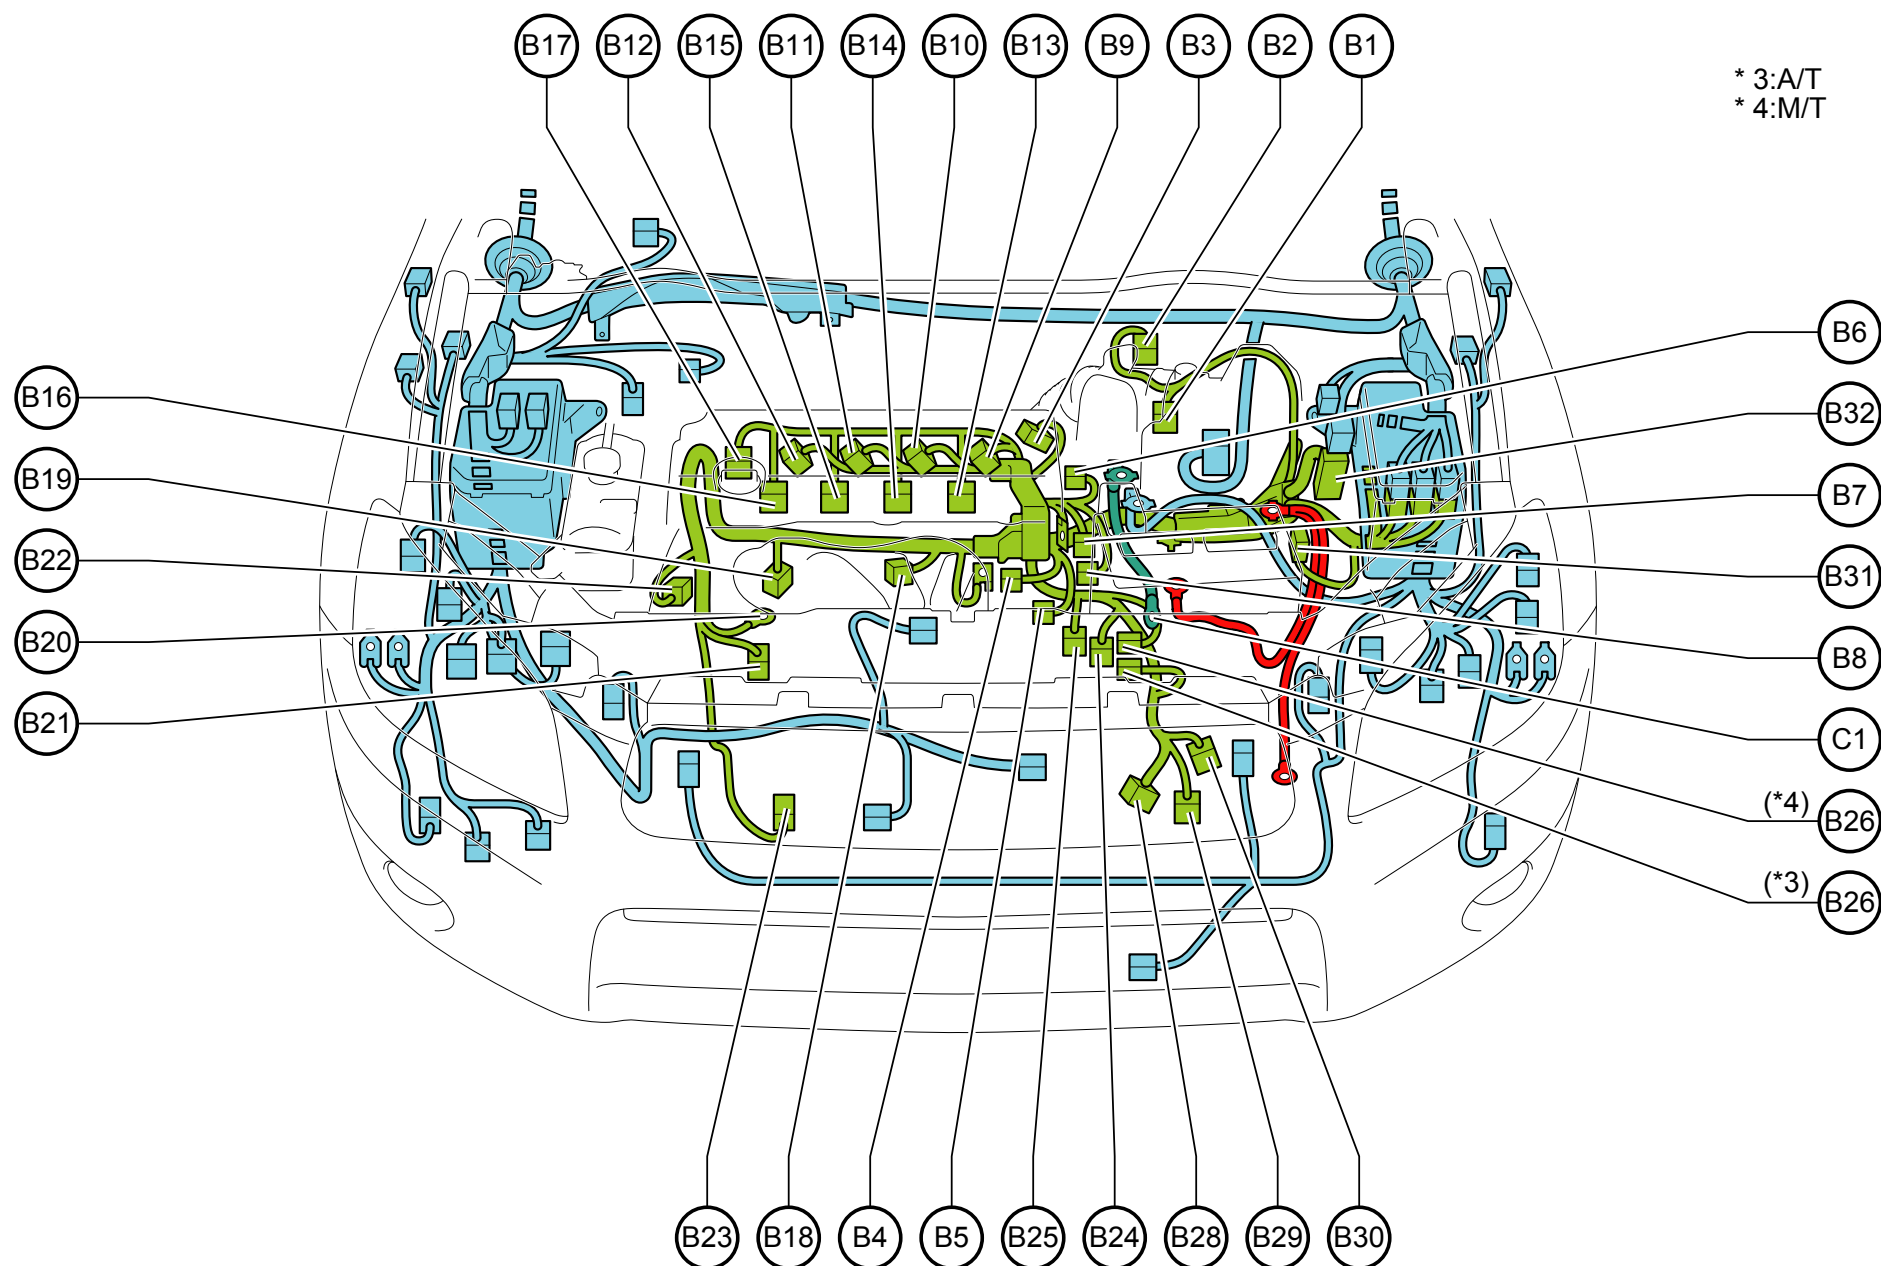 


- B 1 Air Flow Meter
- B 2 VSV (Purge)
- B 3 Throttle Body Assembly
- B 4 Water Temp. Sensor
- B 5 Engine Oil Pressure SW
- B 6 Camshaft Position Sensor
- B 7 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- B 8 Noise Filter (Ignition)
- B 9 Ignition Coil (No.4)
- B 10 Ignition Coil (No.3)
- B 11 Ignition Coil (No.2)
- B 12 Ignition Coil (No.1)
- B 13 Fuel Injector (No.4)
- B 14 Fuel Injector (No.3)
- B 15 Fuel Injector (No.2)
- B 16 Fuel Injector (No.1)
- B 17 Camshaft Timing Oil Control Valve
- B 18 Knock Control Sensor (Bank 1)
- B 19 Heated Oxygen Sensor (Bank 1 Sensor 2)
- B 20 Alternator
- B 21 Alternator
- B 22 Crankshaft Position Sensor
- B 23 A/C Compressor
- B 24 Transmission Revolution Sensor (Counter Gear)
- B 25 Back-Up Light SW
- B 26 Starter
- B 28 Park/Neutral Position SW
- B 29 ECT Solenoid
- B 30 Transmission Revolution Sensor (Turbine)
- B 31 Battery Current Sensor
- B 32 Engine ECU

 
- C 1 Starter

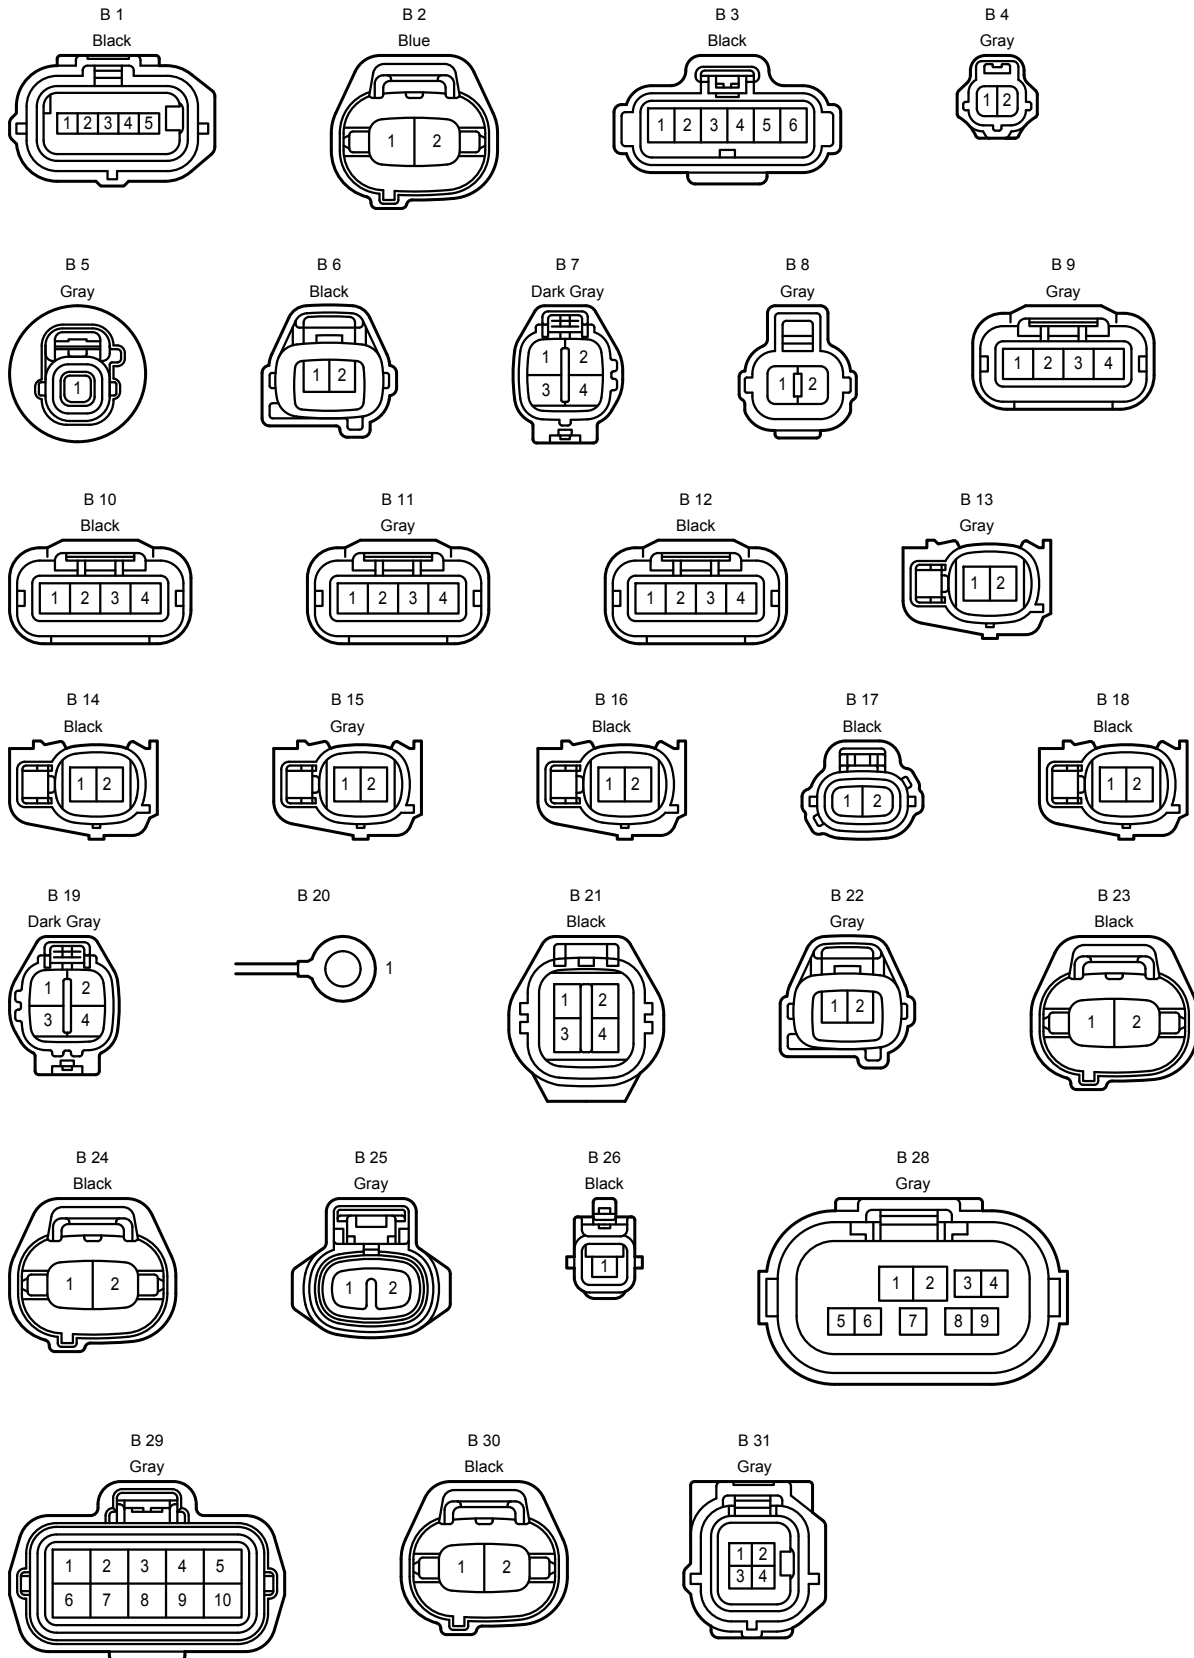


 
Position of Parts in Engine Compartment <RHD 2AZ-FE, 1AZ-FE>

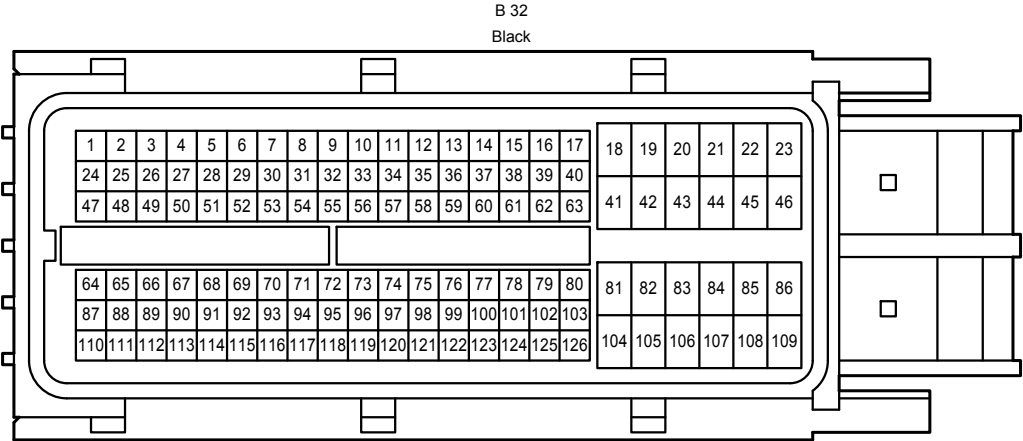


C 1

 

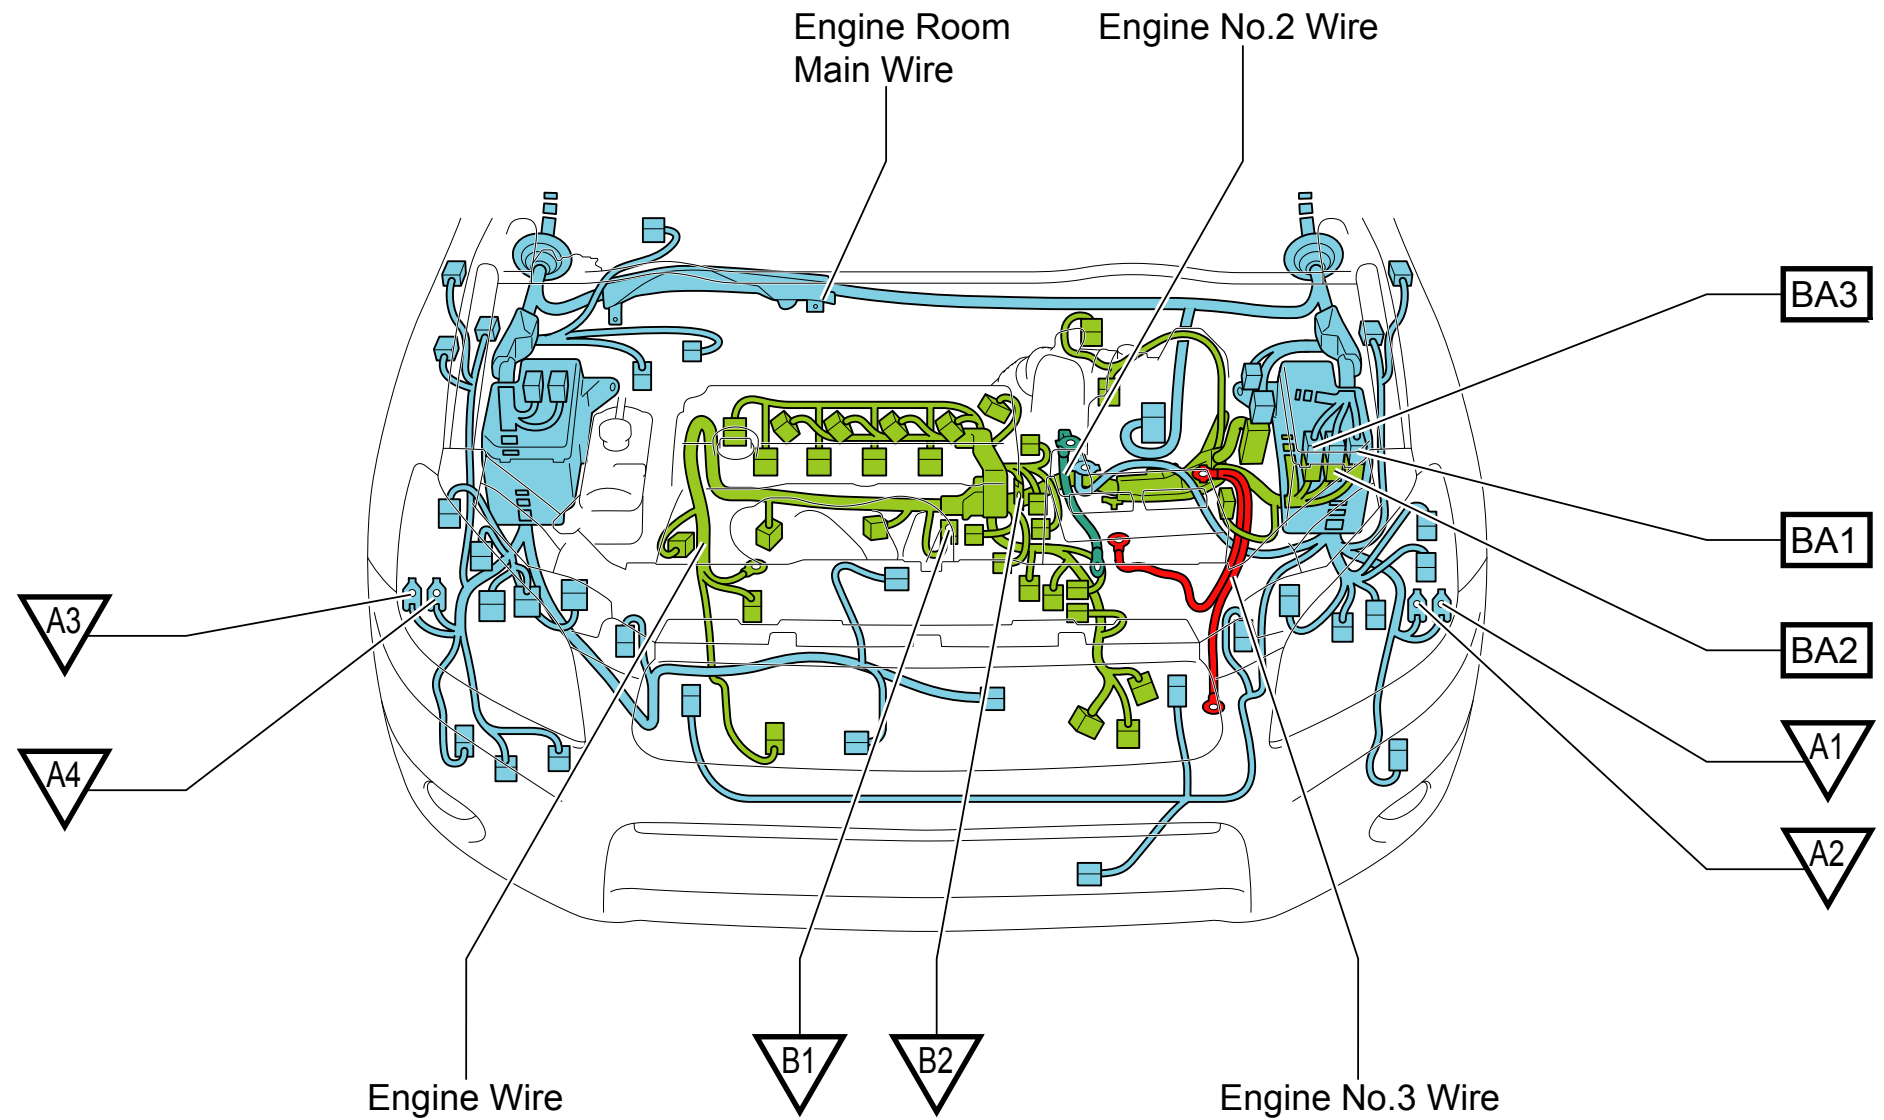 

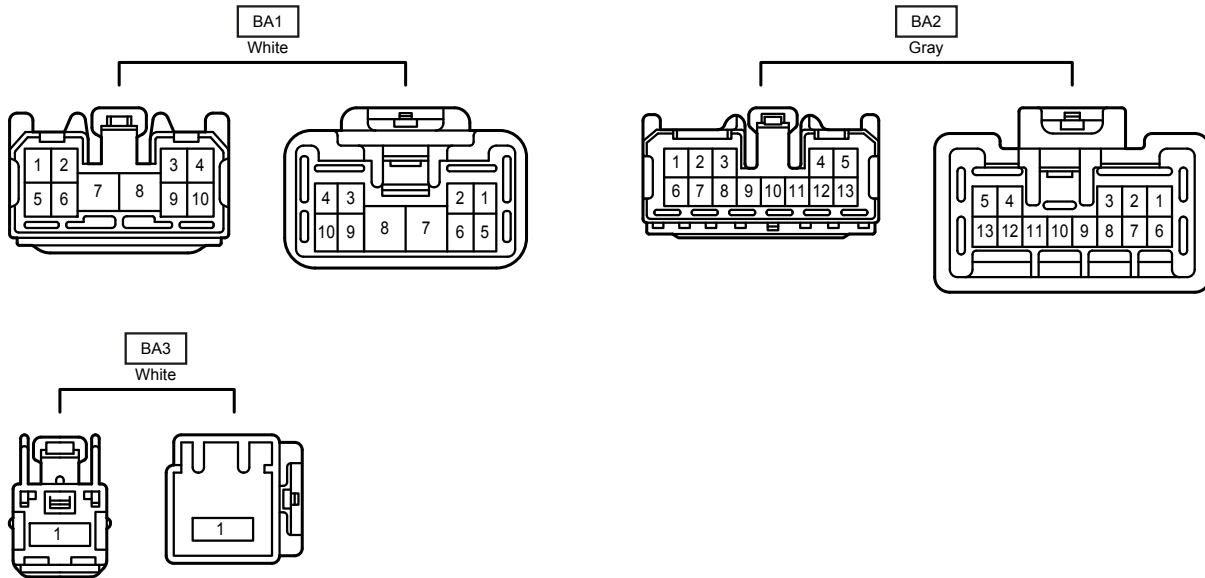 

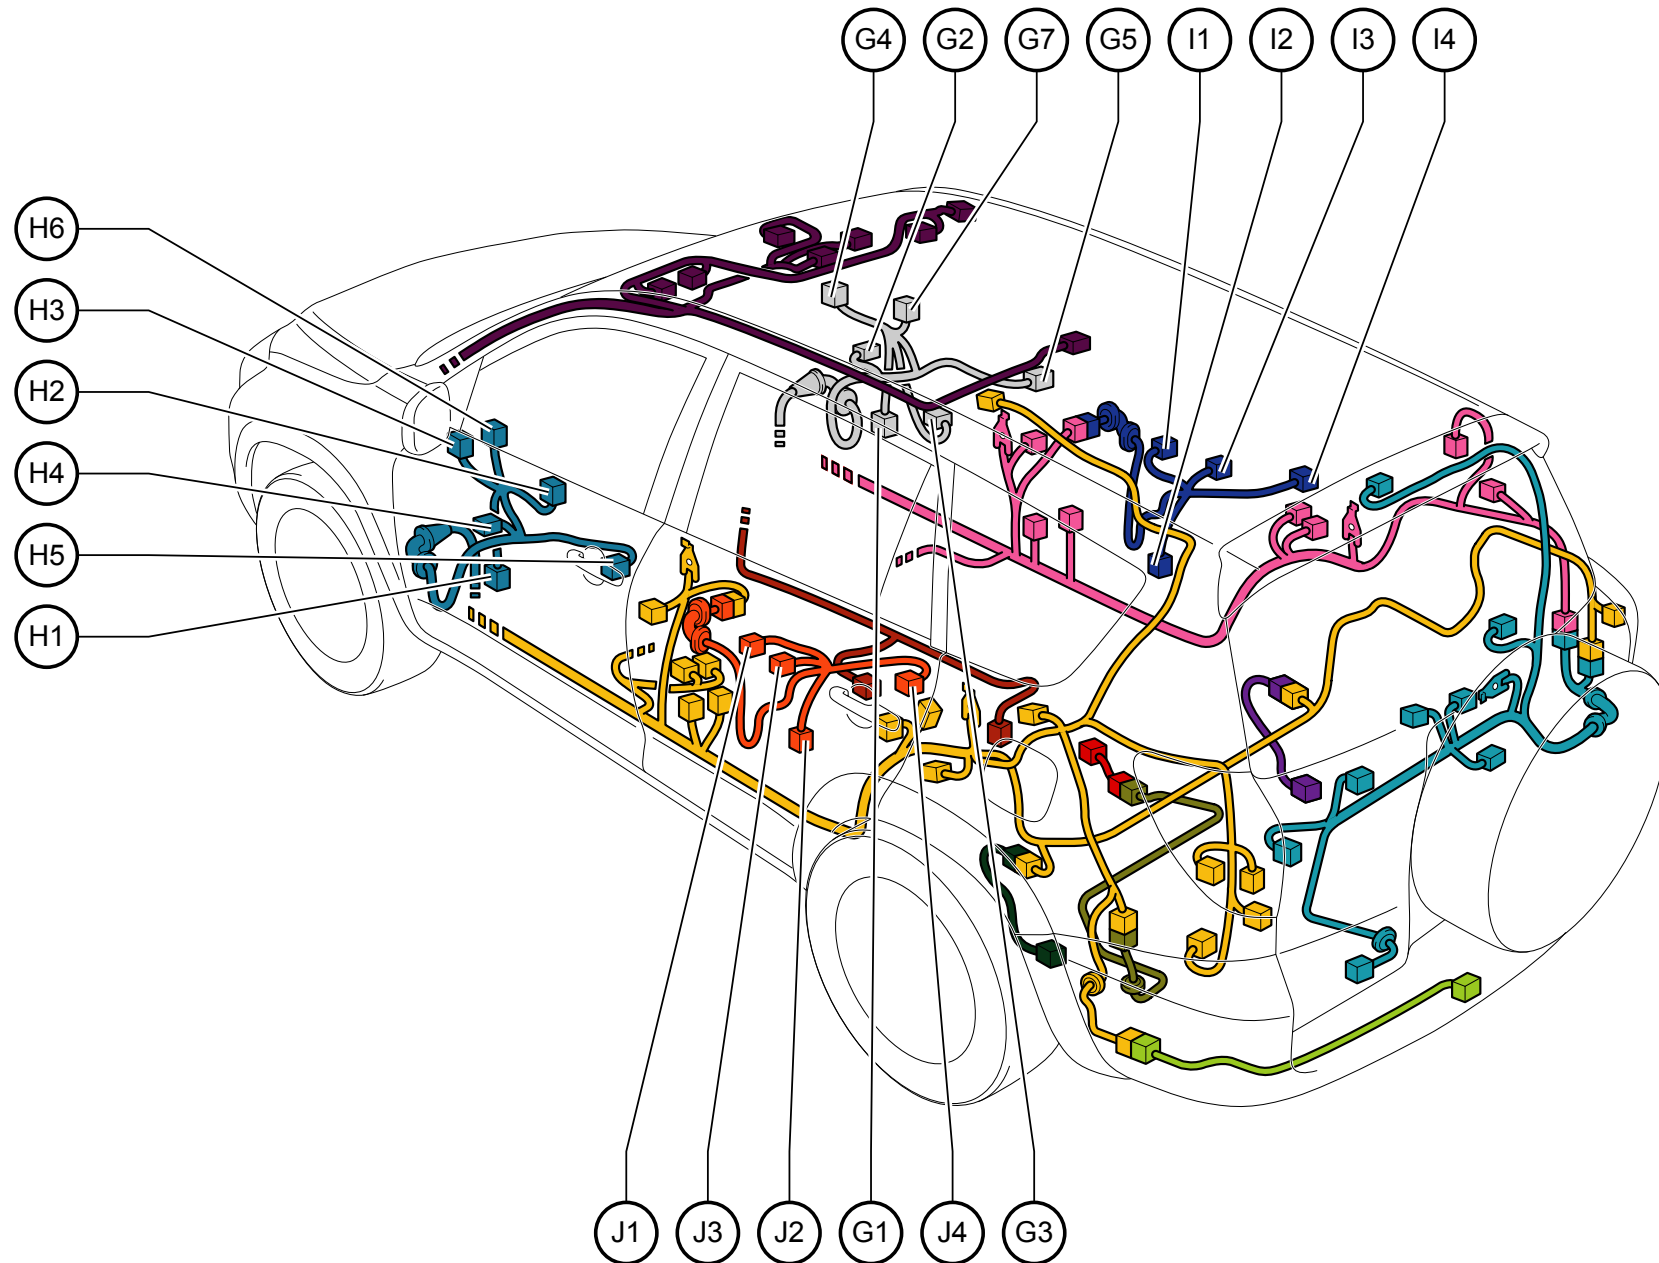 


















- G 1 Speaker (Front Door RH)
- G 2 Power Window Regulator Motor (Front RH)
- G 3 Power Window SW (Front Passenger's Side)
- G 4 Outer Rear View Mirror (RH)
- G 5 Door Lock Assembly (Front RH)
- G 7 Tweeter (Front RH)


- H 1 Speaker (Front Door LH)
- H 2 Power Window SW (Driver's Side)
- H 3 Outer Rear View Mirror (LH)
- H 4 Power Window Regulator Motor (Front LH)
- H 5 Door Lock Assembly (Front LH)
- H 6 Tweeter (Front LH)

- I 1 Power Window SW (Rear RH)
- I 2 Speaker (Rear RH)
- I 3 Power Window Regulator Motor (Rear RH)
- I 4 Door Lock Assembly (Rear RH)

- J 1 Power Window SW (Rear LH)
- J 2 Speaker (Rear LH)
- J 3 Power Window Regulator Motor (Rear LH)
- J 4 Door Lock Assembly (Rear LH)

       
 
 
 
 
 
 
 
 
 
 
 
Position of Parts in Body <LHD Long Body>

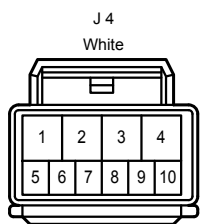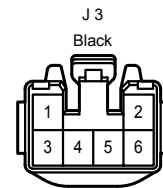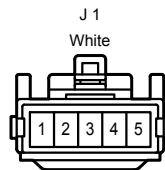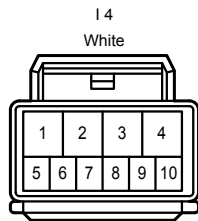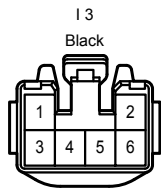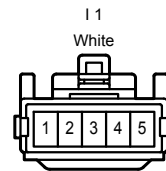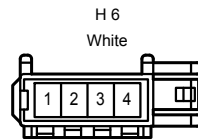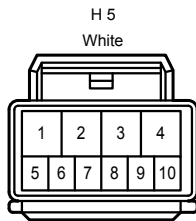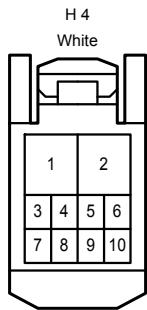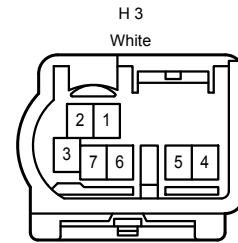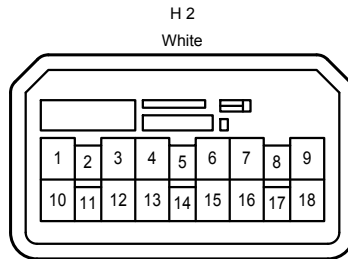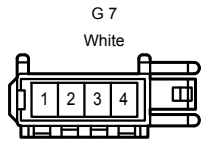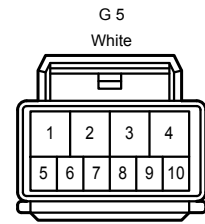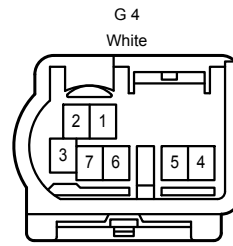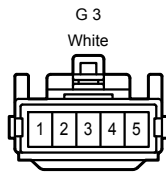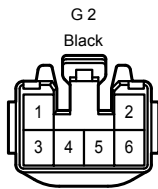


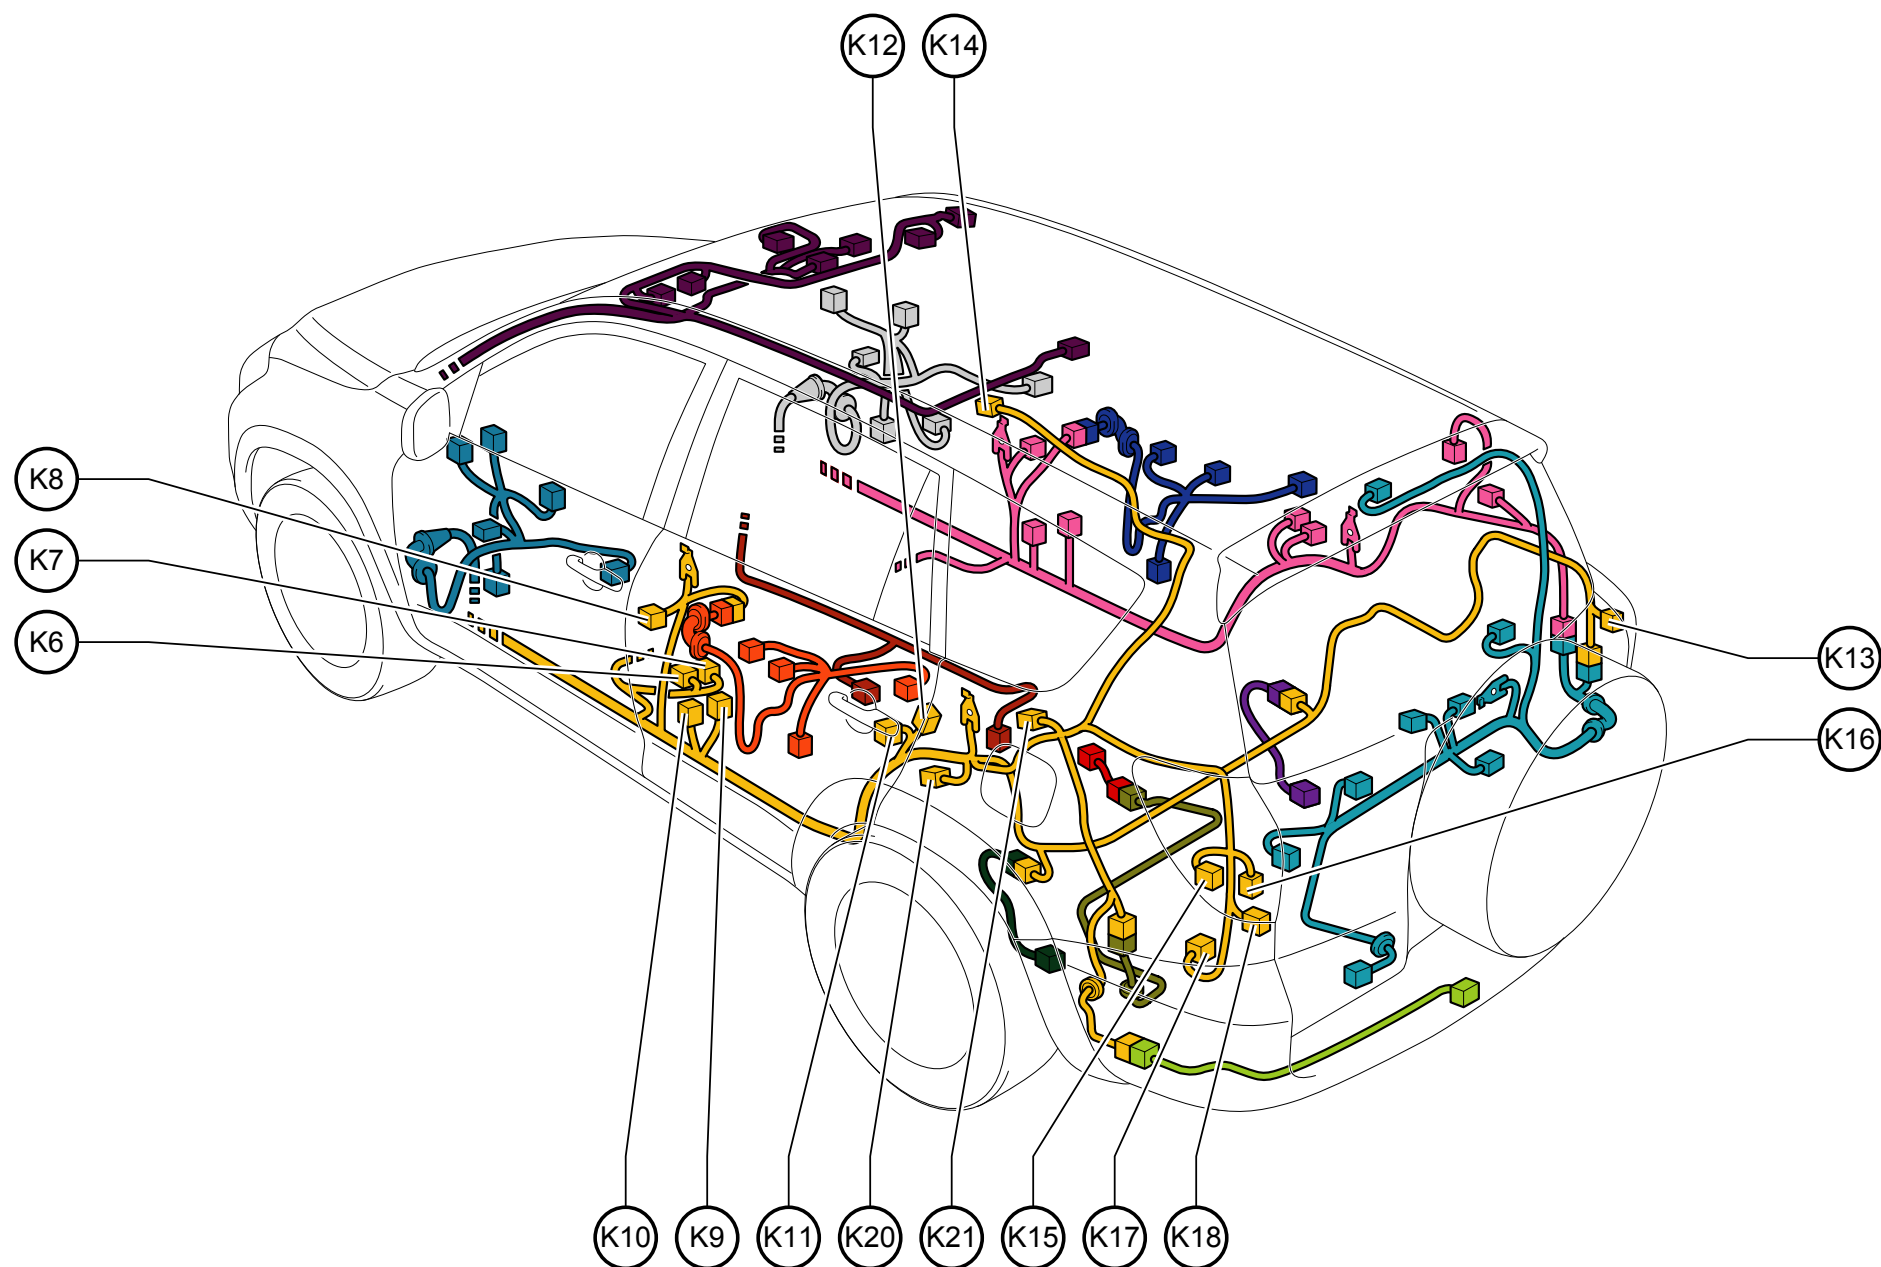

- K 6 Yaw Rate Sensor
- K 7 Deceleration Sensor
- K 8 Door Courtesy SW (Front LH)
- K 9 Pretensioner (LH)
- K 10 Side Airbag Sensor (Front LH)
- K 11 Door Courtesy SW (Rear LH)
- K 12 Side Airbag Sensor (Rear LH)
- K 13 Rear Combination Lamp (RH)
- K 14 Curtain Shield Airbag Squib (LH)
- K 15 Rear Combination Lamp (LH)
- K 16 Diode (Room Lamp)
- K 17 Power Outlet Socket (Rear)
- K 18 Door Courtesy SW (Back Door)
- K 20 Junction Connector
- K 21 Junction Connector

             Position of Parts in Body <LHD Long Body>

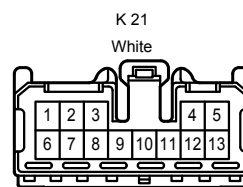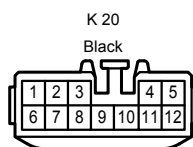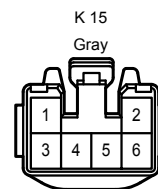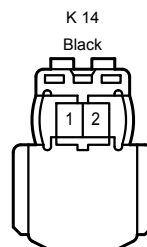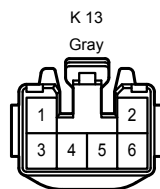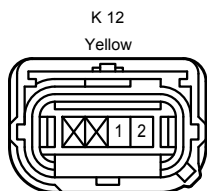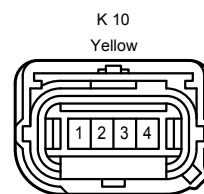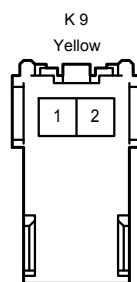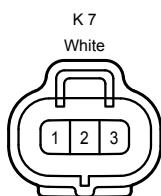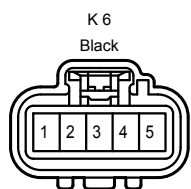





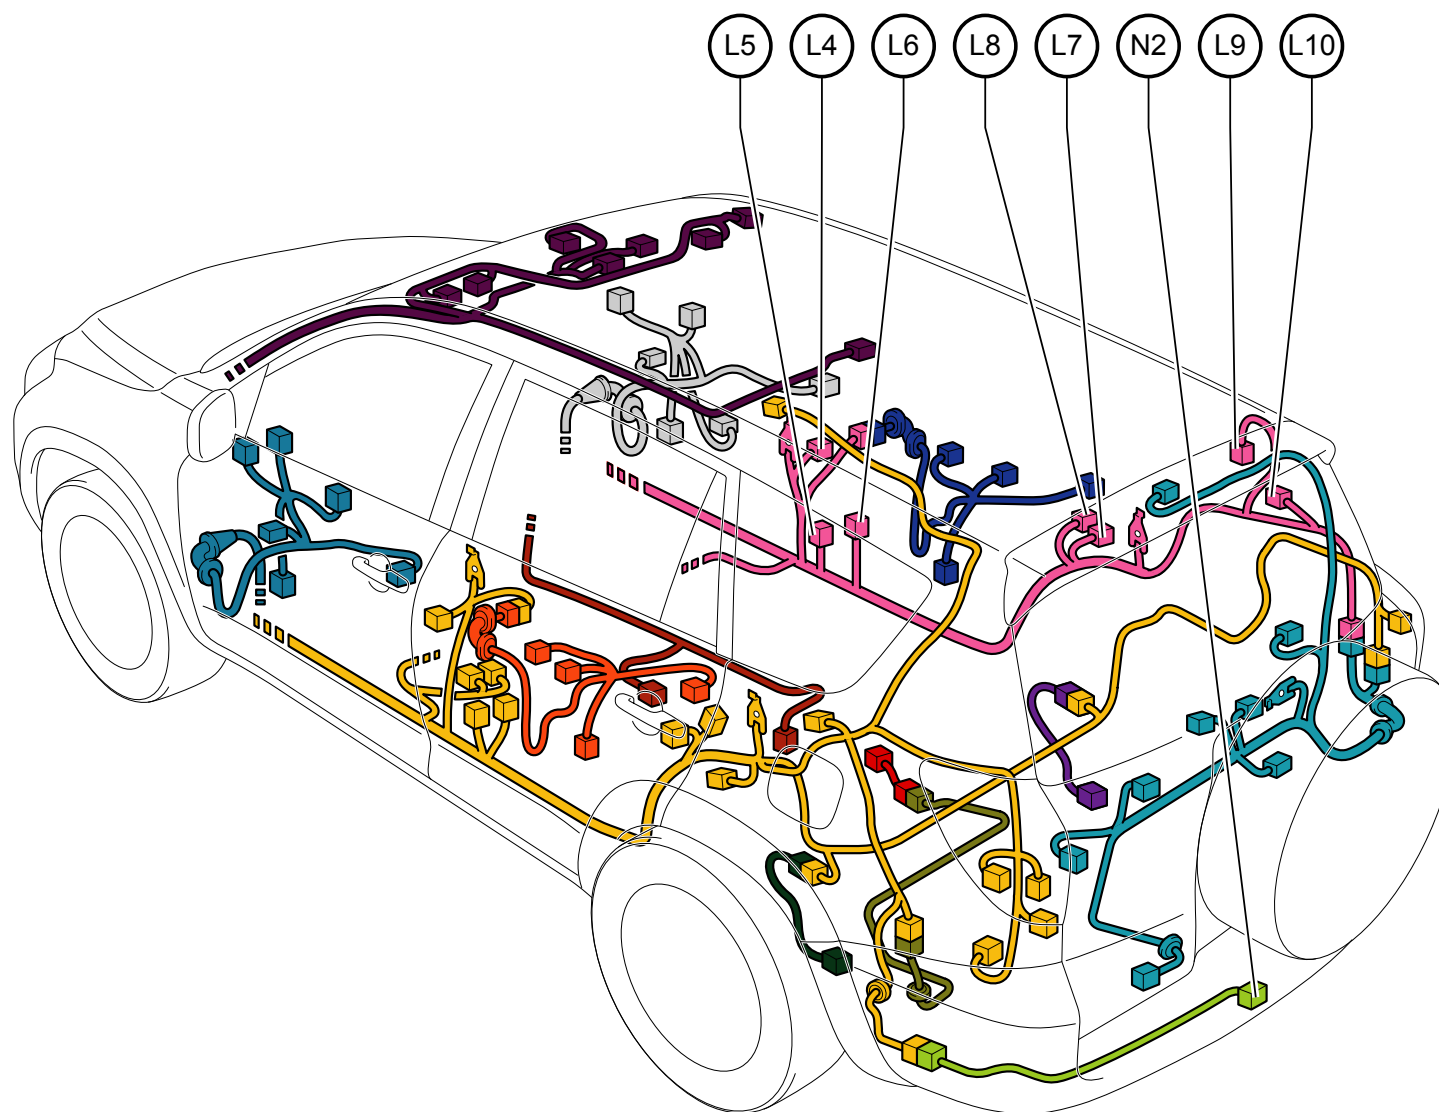


Position of Parts in Body <LHD Long Body>


- L 4 Door Courtesy SW (Front RH)
- L 5 Pretensioner (RH)
- L 6 Side Airbag Sensor (Front RH)
- L 7 Door Courtesy SW (Rear RH)
- L 8 Side Airbag Sensor (Rear RH)
- L 9 Curtain Shield Airbag Squib (RH)
- L 10 Door Control Receiver

- N 2 License Plate Lamp (LH)

     Position of Parts in Body <LHD Long Body>

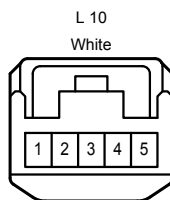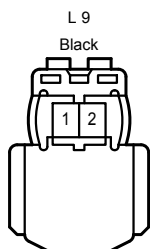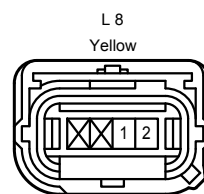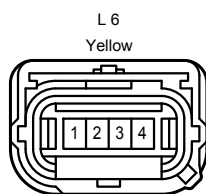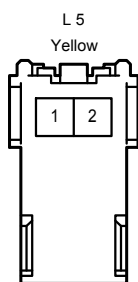

 Position of Parts in Body <LHD Long Body>

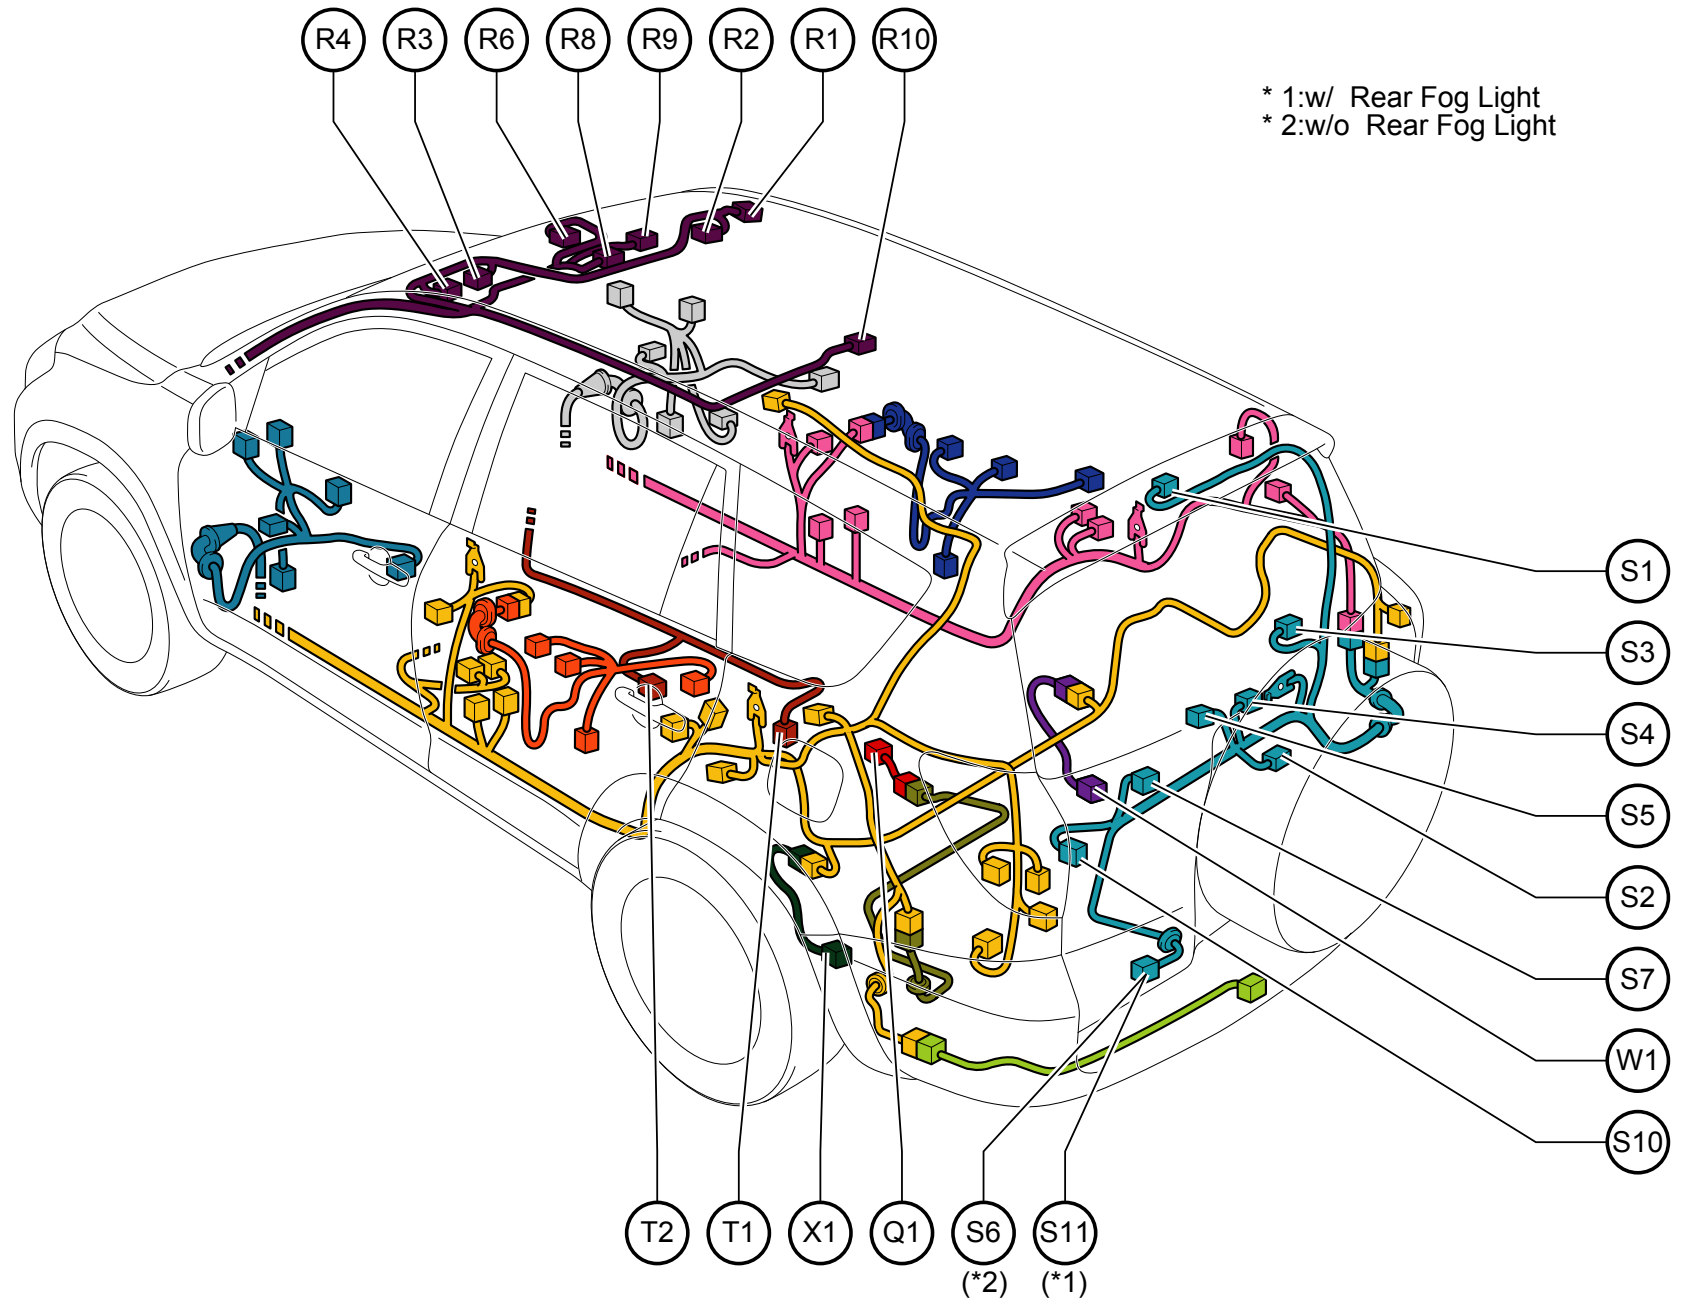

- Q 1 4WD Linear Solenoid

- R 1 Vanity Lamp SW (RH)
- R 2 Vanity Lamp (RH)
- R 3 Vanity Lamp (LH)
- R 4 Vanity Lamp SW (LH)
- R 6 Inner Rear View Mirror
- R 8 Overhead J/B
- R 9 Sliding Roof Control ECU
- R 10 Room Lamp (Front)

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- S 1 Center Stop Lamp
- S 2 Rear Window Defogger
- S 3 Room Lamp (Rear)
- S 4 Noise Filter (Stop and Rear Window Defogger)
- S 5 Rear Wiper Motor
- S 6 License Plate Lamp (RH)
- S 6 License Plate Lamp (RH)
- S 7 Television Camera (Rear)
- S 10 Back Door Lock Assembly
- S 11 Rear Fog Light (Center)

 
- T 1 Fuel Suction Pump
- T 2 Fuel Sender Gage

- W 1 Speed Sensor (Rear RH)

- X 1 Speed Sensor (Rear LH)


Position of Parts in Body <LHD Long Body>

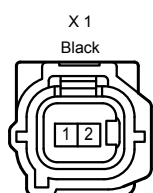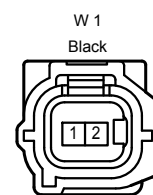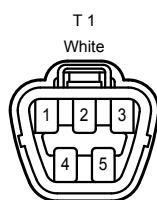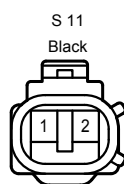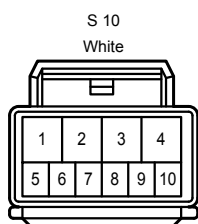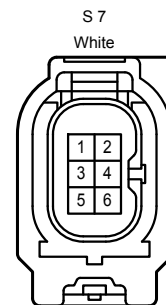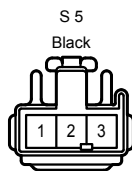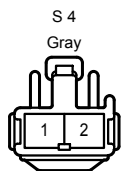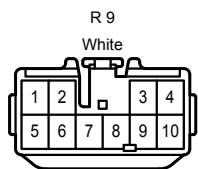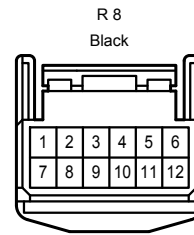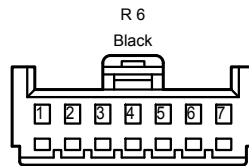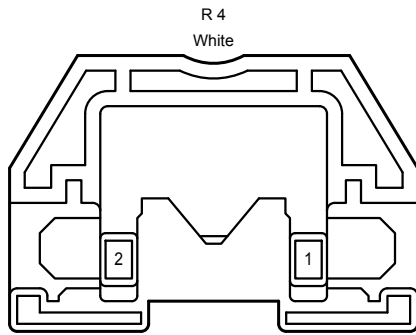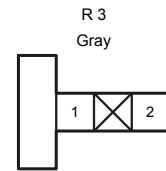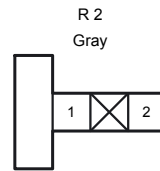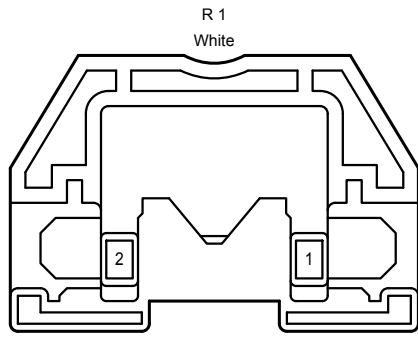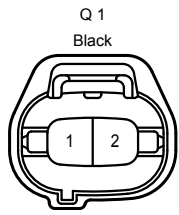

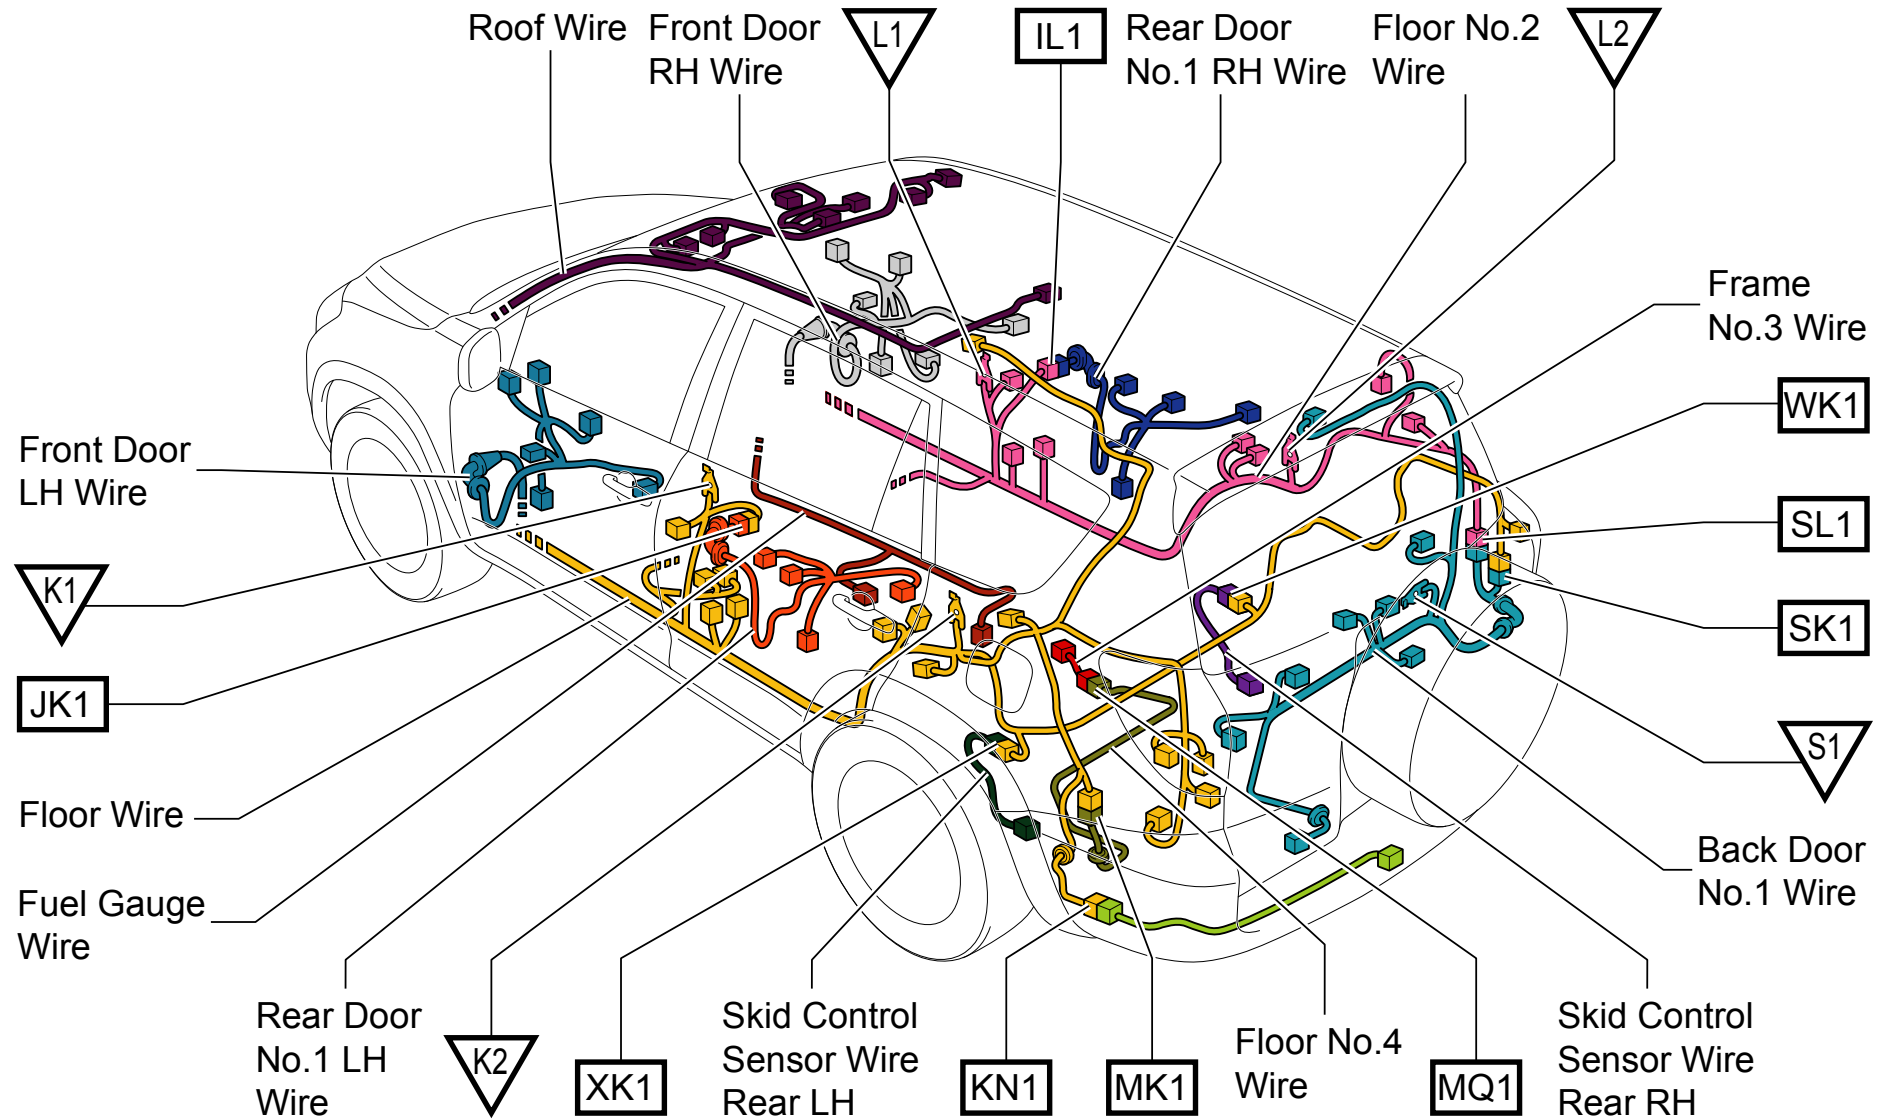


Wire and Wire , Ground Points in Body <LHD Long Body>

 
IL1
White

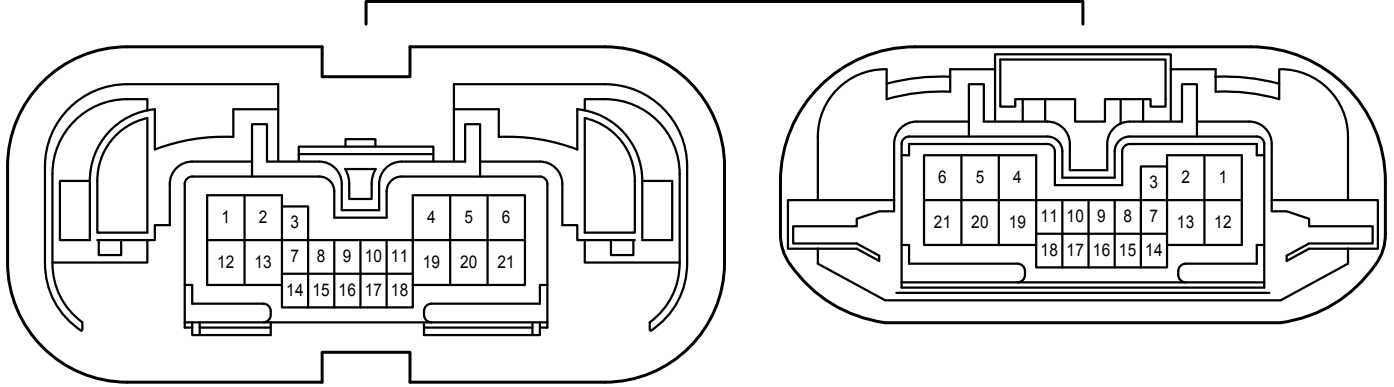


JK1
White

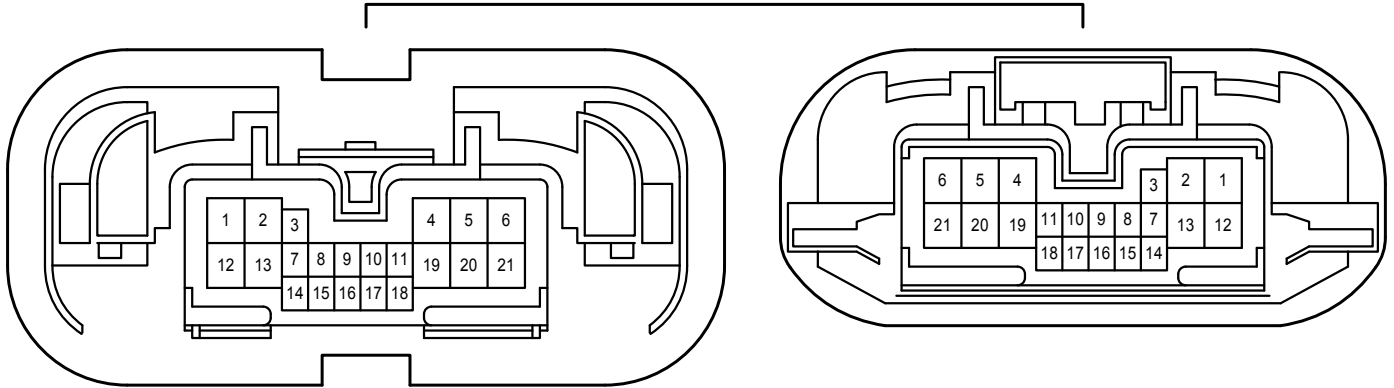 


KN1
White

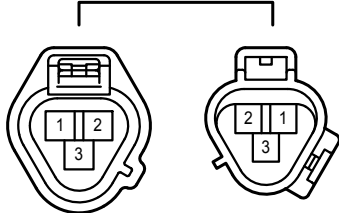 


MK1
White

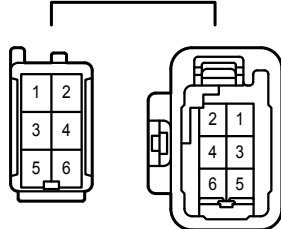 



MQ1
Black

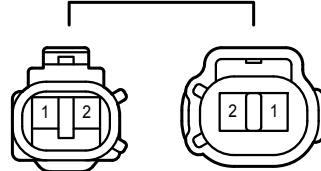 

SK1
White

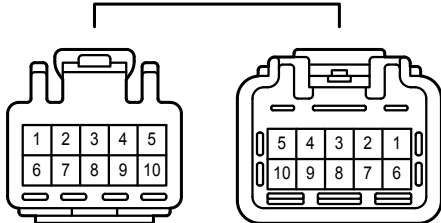 

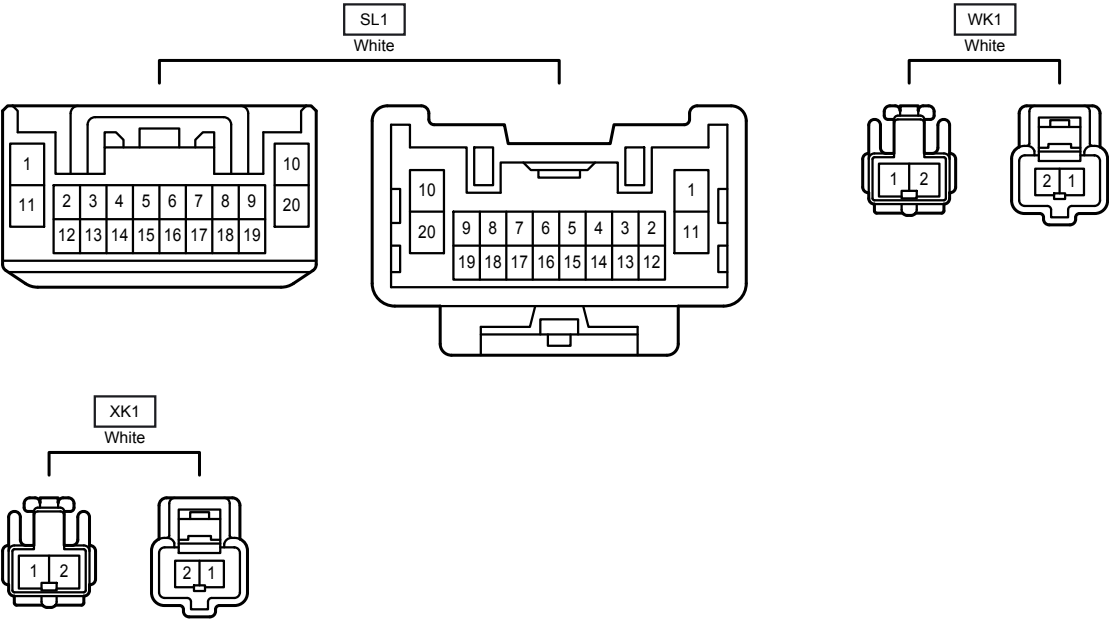 

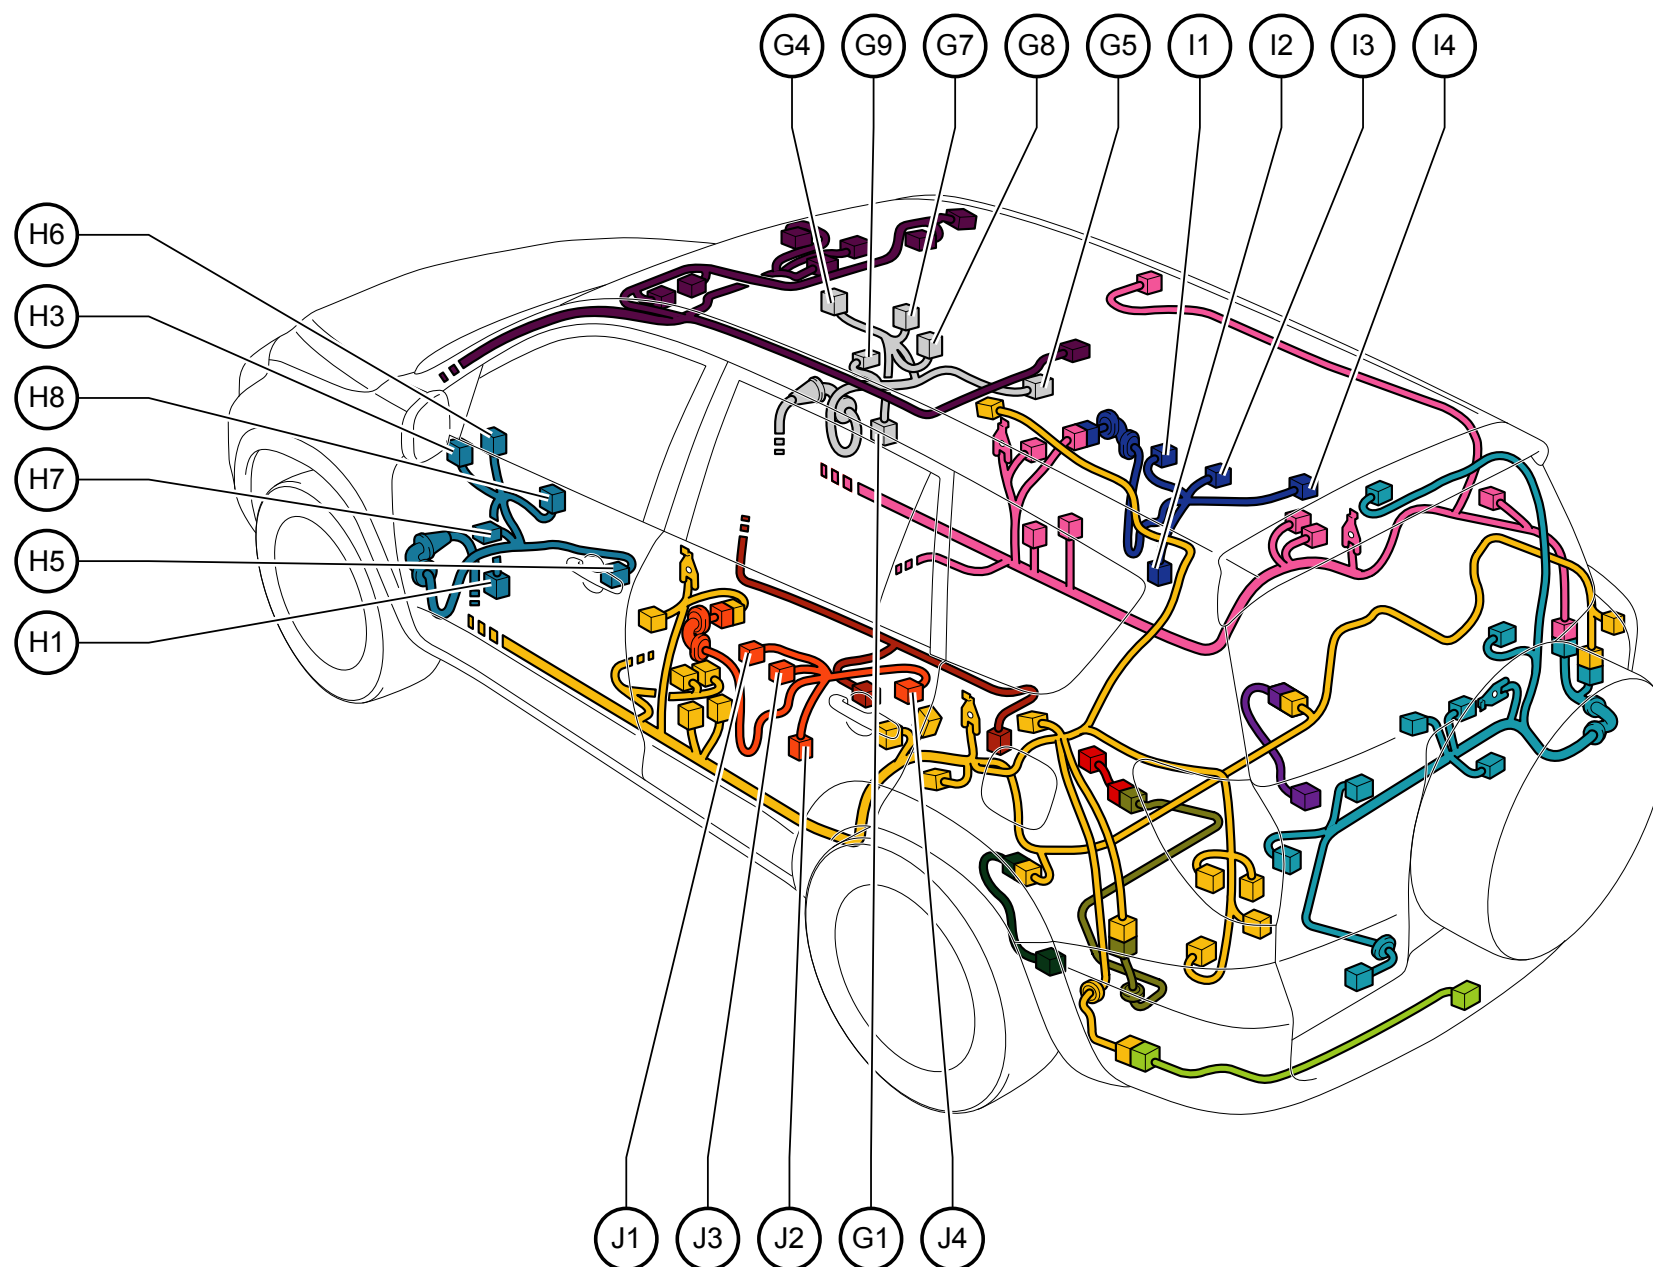 



















G 1 Speaker (Front Door RH)
G 4 Outer Rear View Mirror (RH)
G 5 Door Lock Assembly (Front RH)
G 7 Tweeter (Front RH)
G 8 Power Window SW (Driver's Side)
G 9 Power Window Regulator Motor (Front RH)


H 1 Speaker (Front Door LH)
H 3 Outer Rear View Mirror (LH)
H 5 Door Lock Assembly (Front LH)
H 6 Tweeter (Front LH)
H 7 Power Window Regulator Motor (Front LH)
H 8 Power Window SW (Front Passenger's Side)

I 1 Power Window SW (Rear RH)
I 2 Speaker (Rear RH)
I 3 Power Window Regulator Motor (Rear RH)
I 4 Door Lock Assembly (Rear RH)

J 1 Power Window SW (Rear LH)
J 2 Speaker (Rear LH)
J 3 Power Window Regulator Motor (Rear LH)
J 4 Door Lock Assembly (Rear LH)

        
 
 
 
 
 
 
 
 
 
 
 
Position of Parts in Body <RHD Long Body>

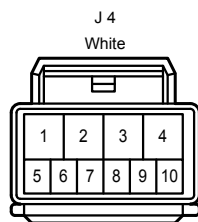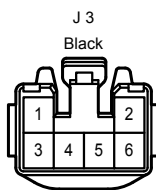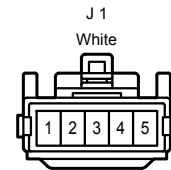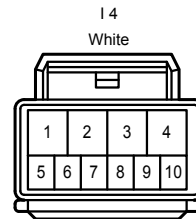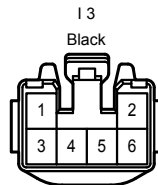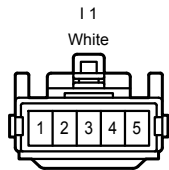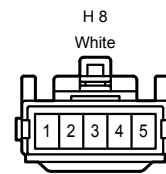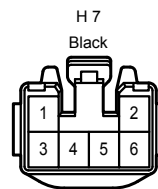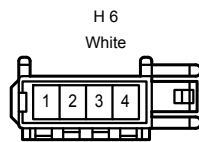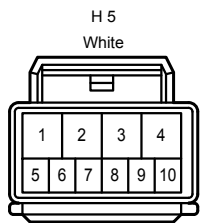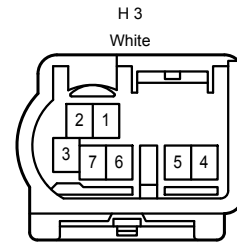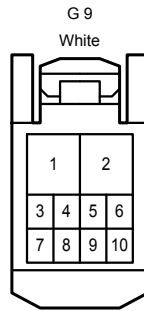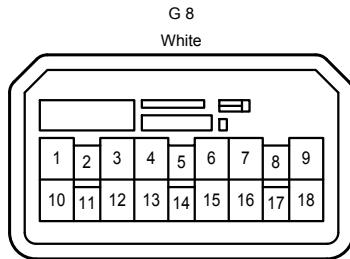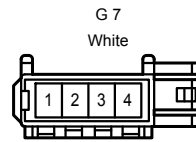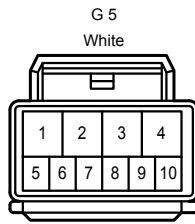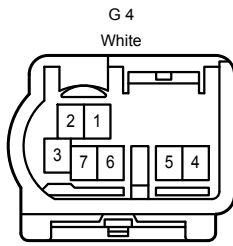


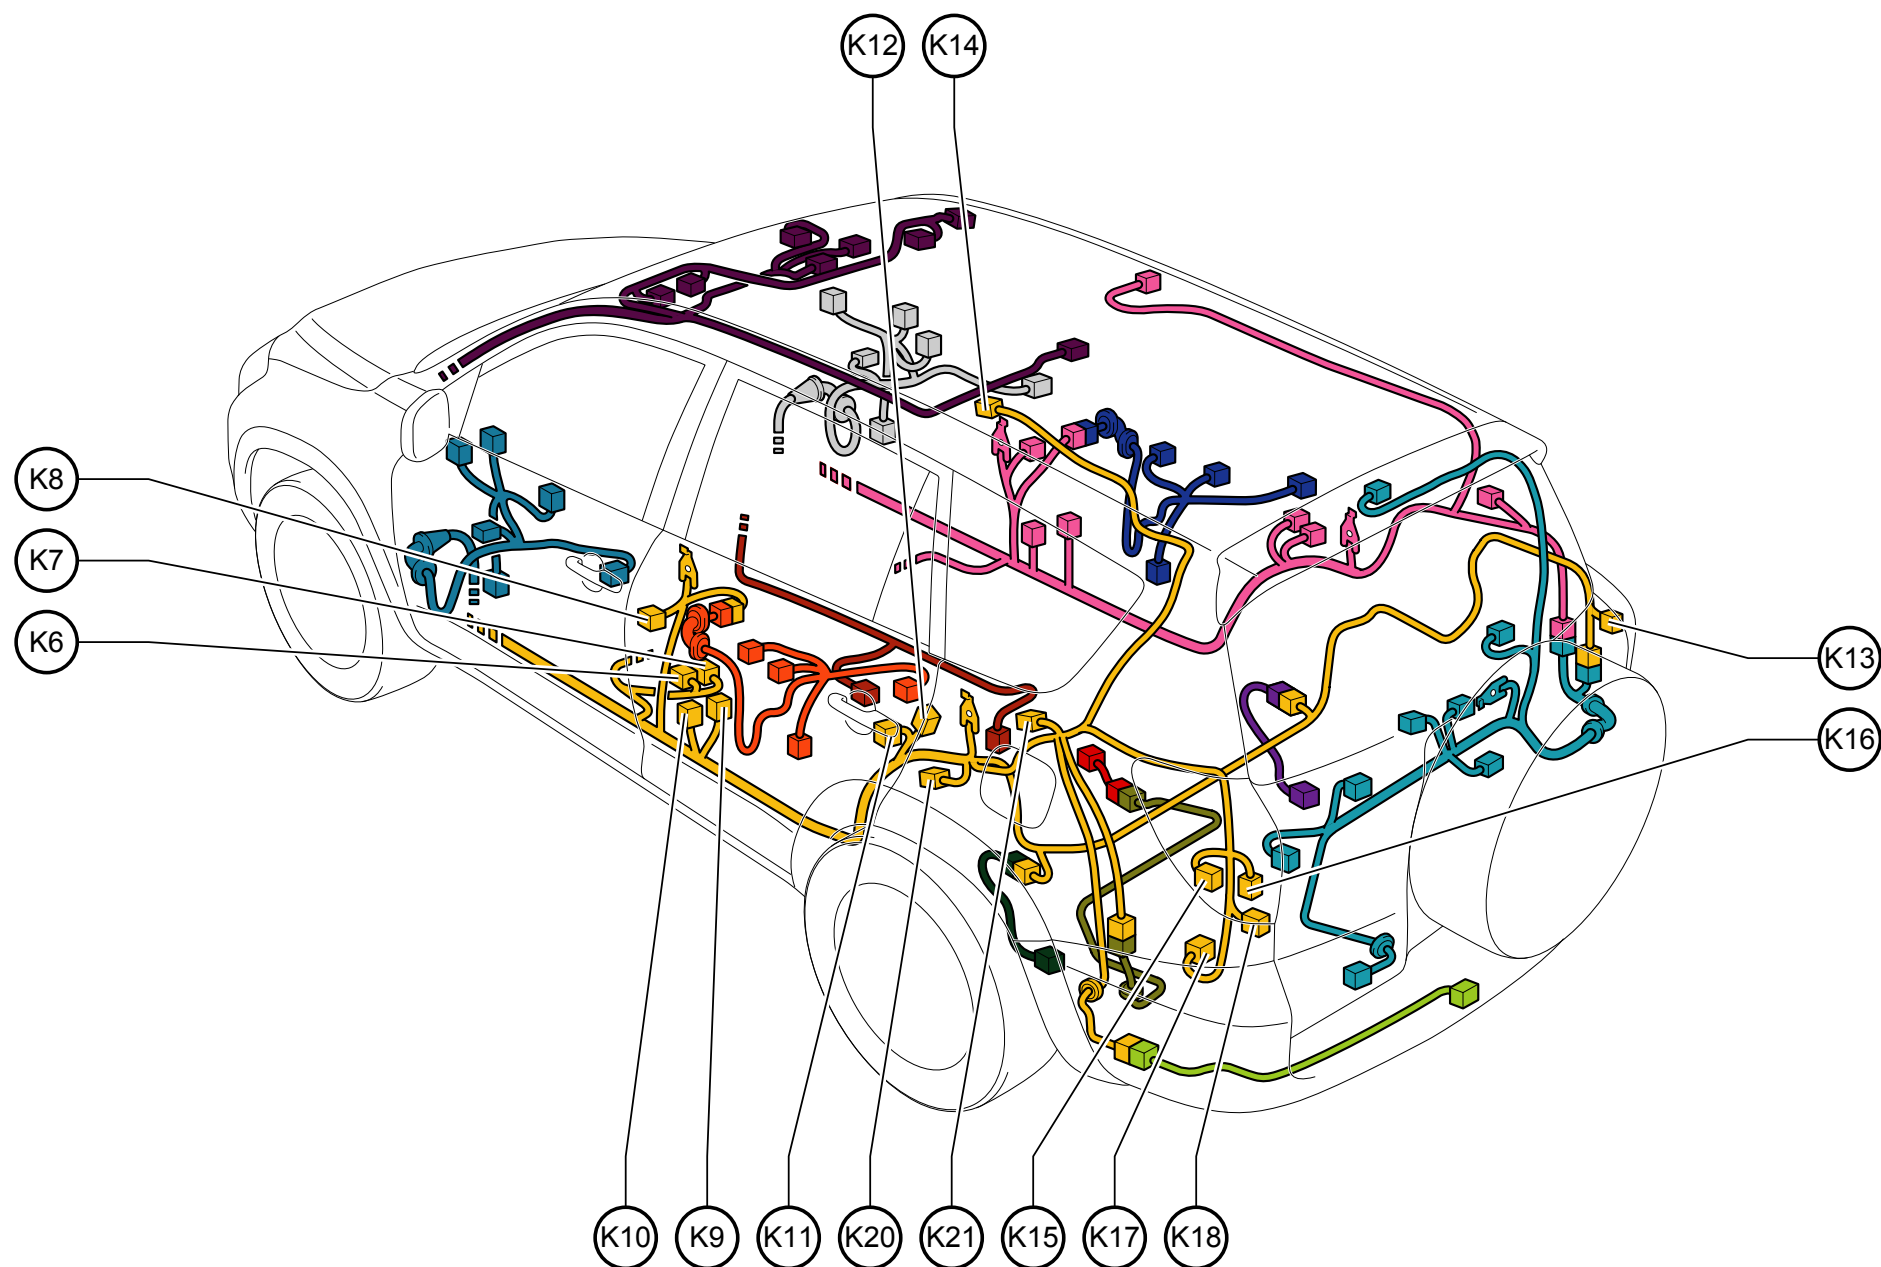

- K 6 Yaw Rate Sensor
- K 7 Deceleration Sensor
- K 8 Door Courtesy SW (Front LH)
- K 9 Pretensioner (LH)
- K 10 Side Airbag Sensor (Front LH)
- K 11 Door Courtesy SW (Rear LH)
- K 12 Side Airbag Sensor (Rear LH)
- K 13 Rear Combination Lamp (RH)
- K 14 Curtain Shield Airbag Squib (LH)
- K 15 Rear Combination Lamp (LH)
- K 16 Diode (Room Lamp)
- K 17 Power Outlet Socket (Rear)
- K 18 Door Courtesy SW (Back Door)
- K 20 Junction Connector
- K 21 Junction Connector

             Position of Parts in Body <RHD Long Body>

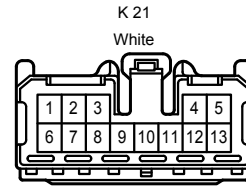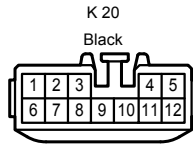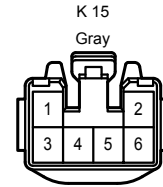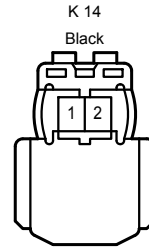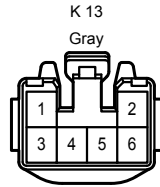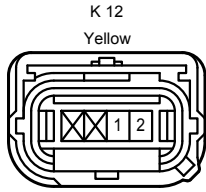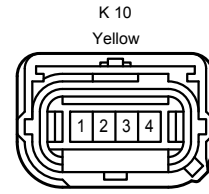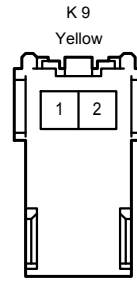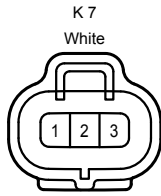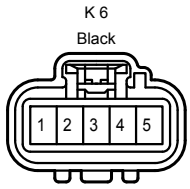





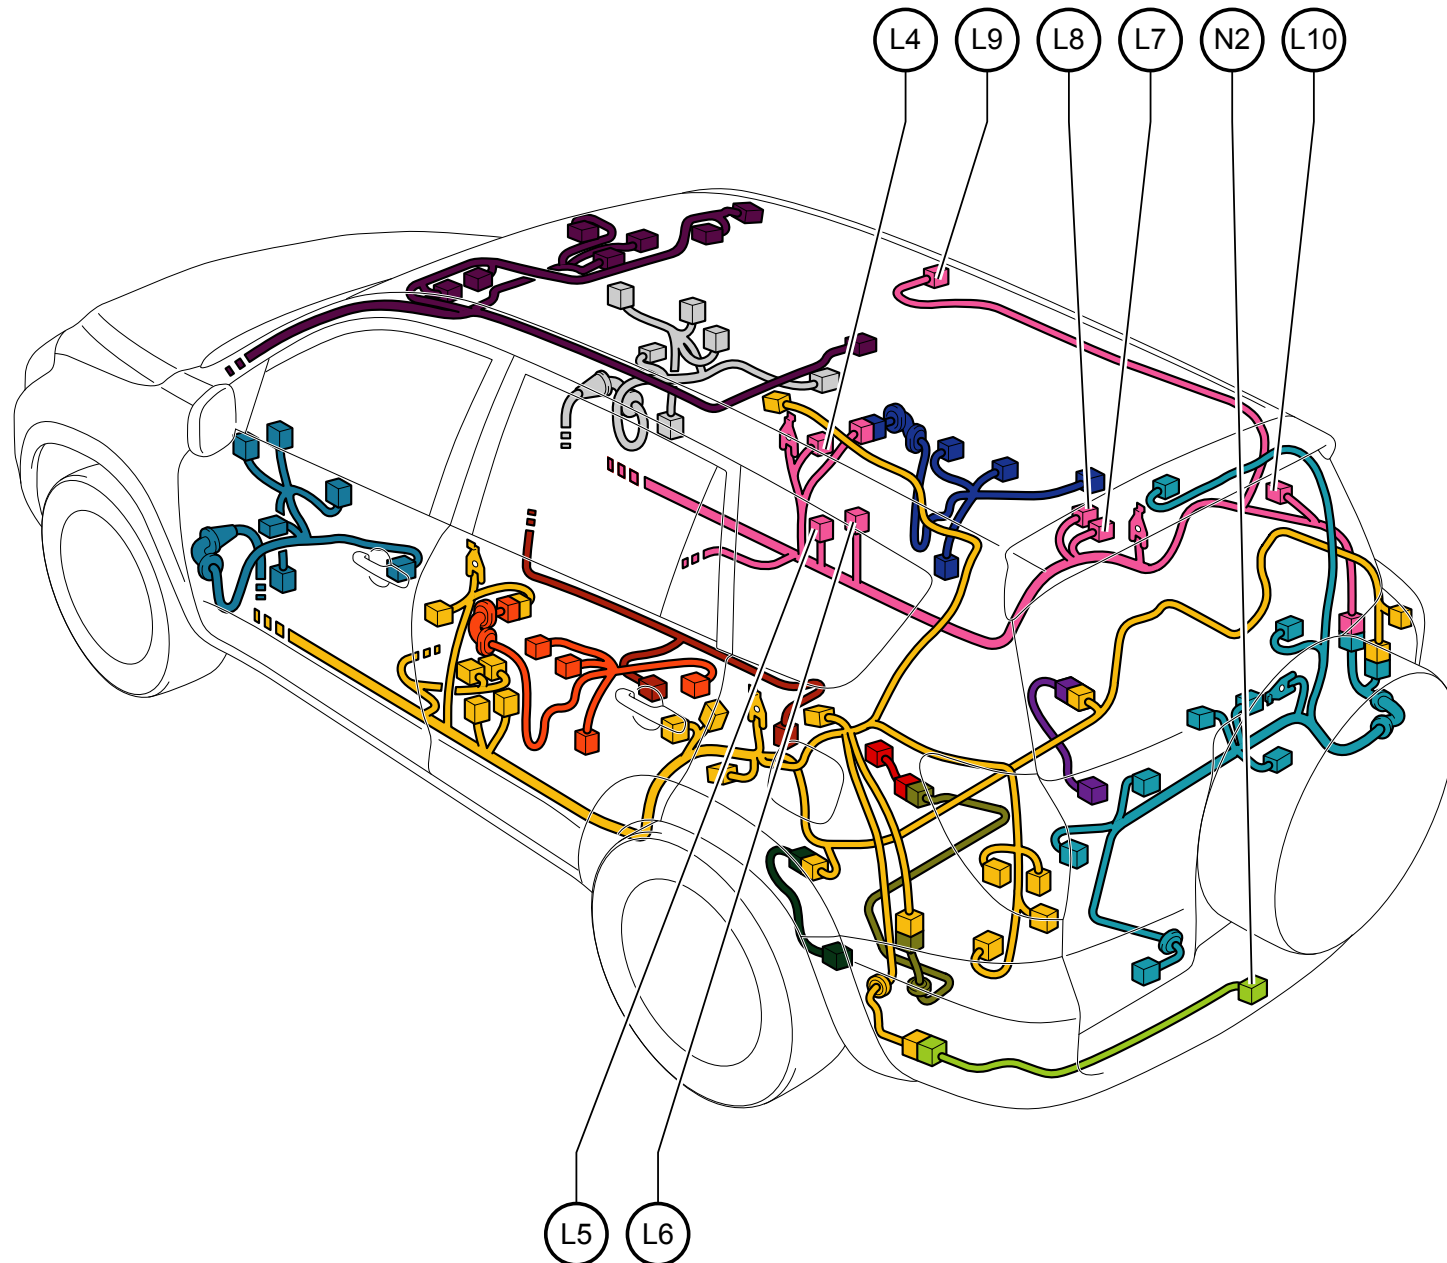


Position of Parts in Body <RHD Long Body>


- L 4 Door Courtesy SW (Front RH)
- L 5 Pretensioner (RH)
- L 6 Side Airbag Sensor (Front RH)
- L 7 Door Courtesy SW (Rear RH)
- L 8 Side Airbag Sensor (Rear RH)
- L 9 Curtain Shield Airbag Squib (RH)
- L 10 Door Control Receiver

- N 2 License Plate Lamp (LH)

     Position of Parts in Body <RHD Long Body>

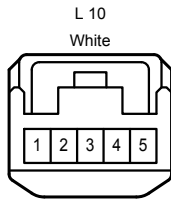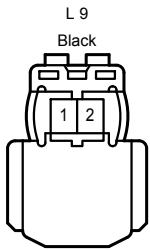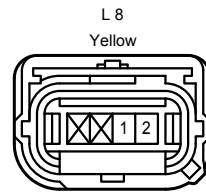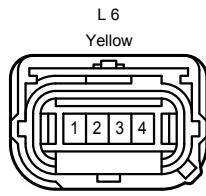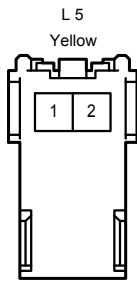

 Position of Parts in Body <RHD Long Body>

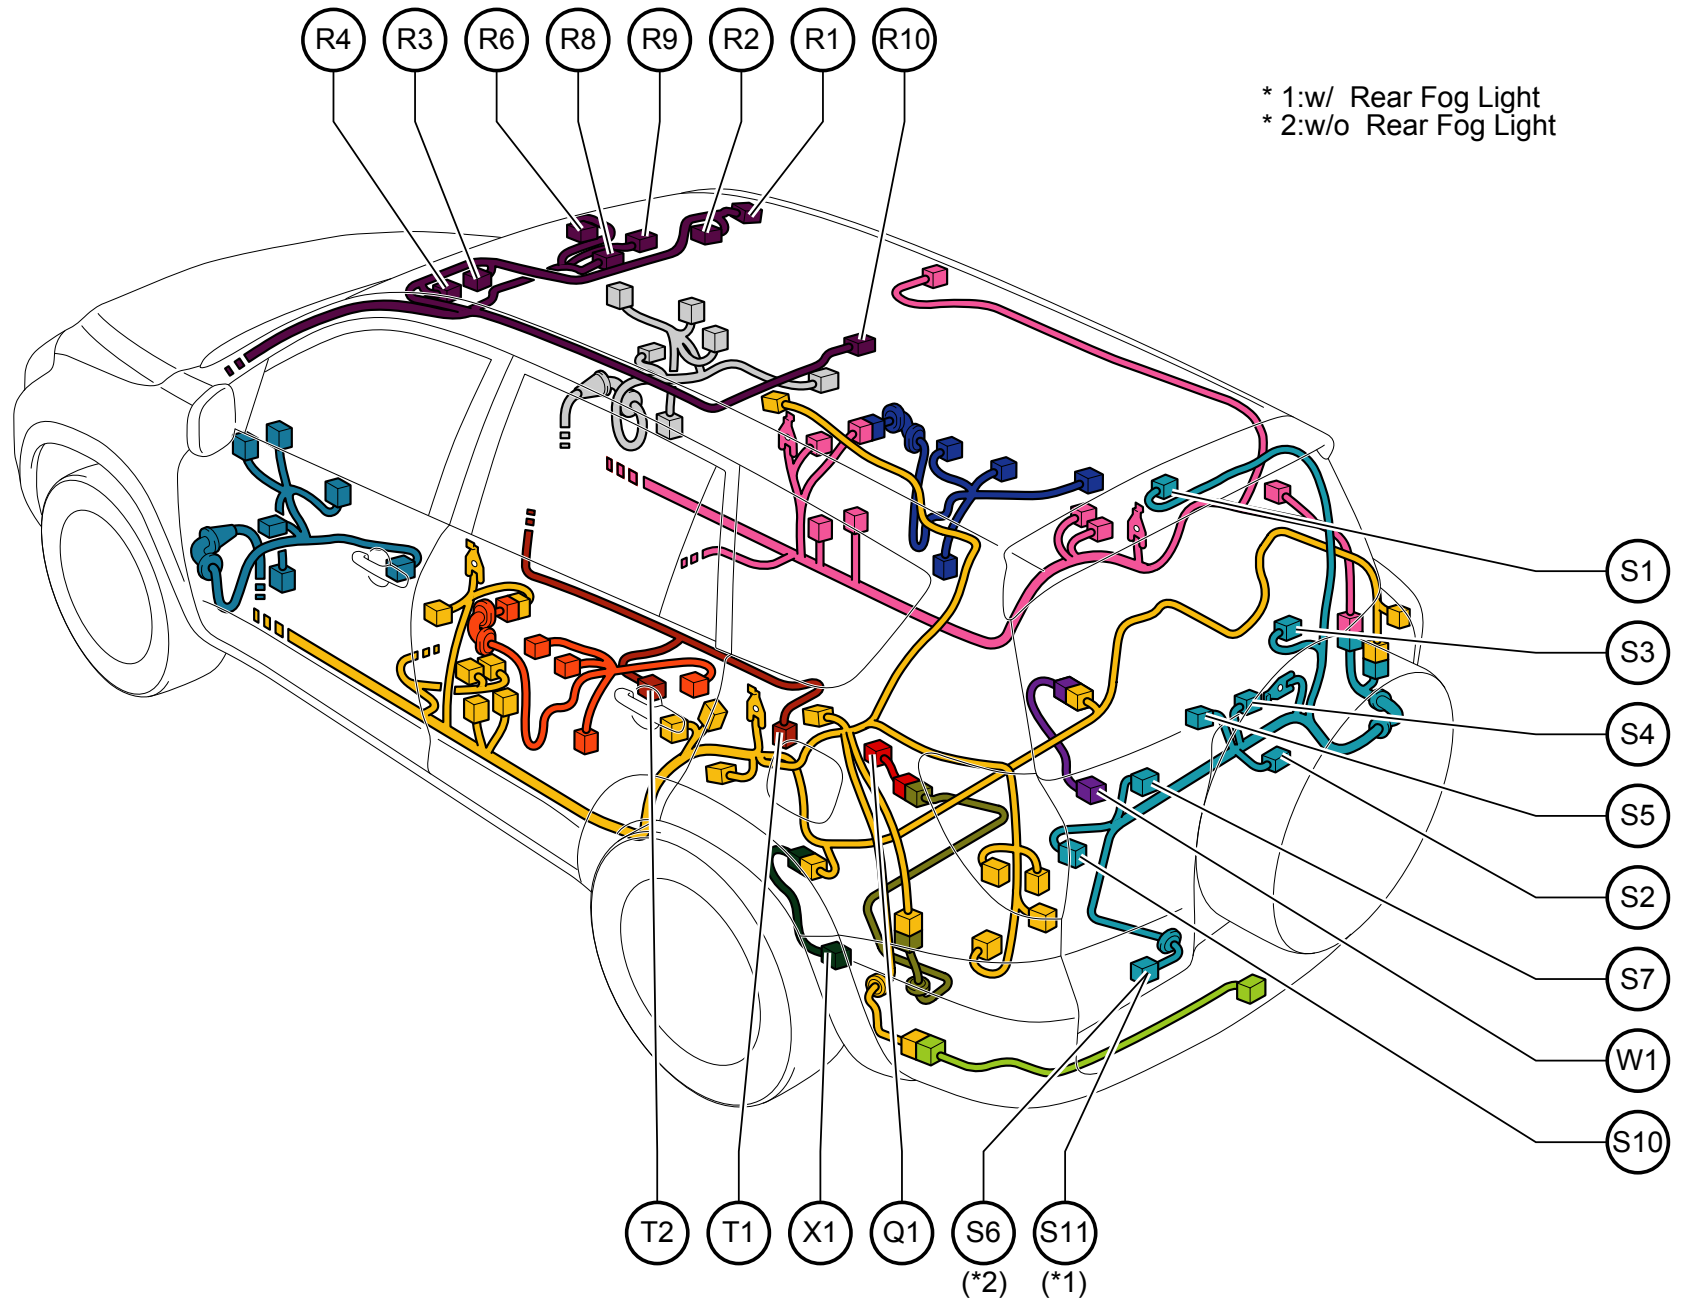

- Q 1 4WD Linear Solenoid

- R 1 Vanity Lamp SW (RH)
- R 2 Vanity Lamp (RH)
- R 3 Vanity Lamp (LH)
- R 4 Vanity Lamp SW (LH)
- R 6 Inner Rear View Mirror
- R 8 Overhead J/B
- R 9 Sliding Roof Control ECU
- R 10 Room Lamp (Front)

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- S 1 Center Stop Lamp
- S 2 Rear Window Defogger
- S 3 Room Lamp (Rear)
- S 4 Noise Filter (Stop and Rear Window Defogger)
- S 5 Rear Wiper Motor
- S 6 License Plate Lamp (RH)
- S 6 License Plate Lamp (RH)
- S 7 Television Camera (Rear)
- S 10 Back Door Lock Assembly
- S 11 Rear Fog Light (Center)

 
- T 1 Fuel Suction Pump
- T 2 Fuel Sender Gage

- W 1 Speed Sensor (Rear RH)


- X 1 Speed Sensor (Rear LH)

Position of Parts in Body <RHD Long Body>

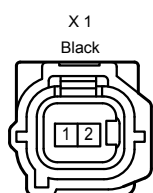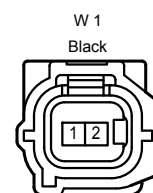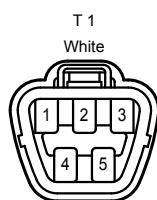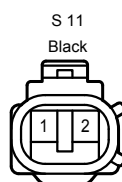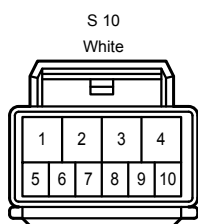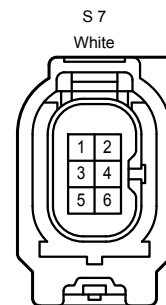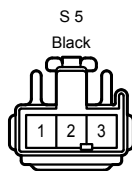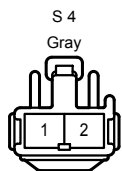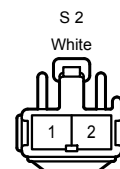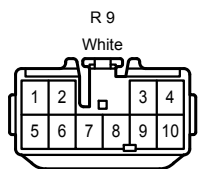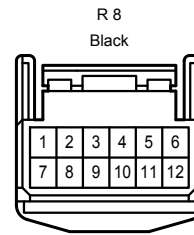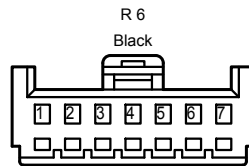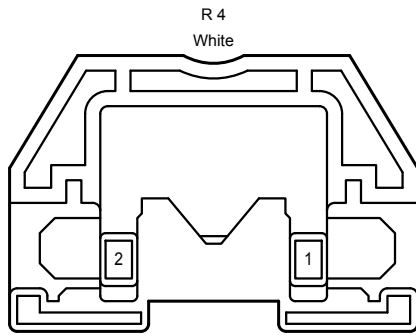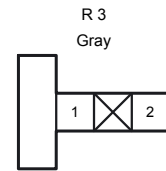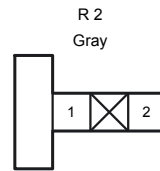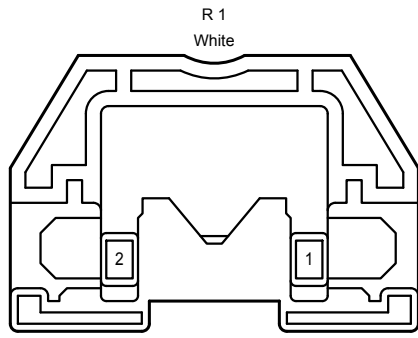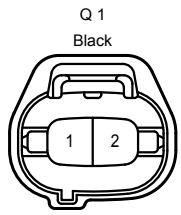


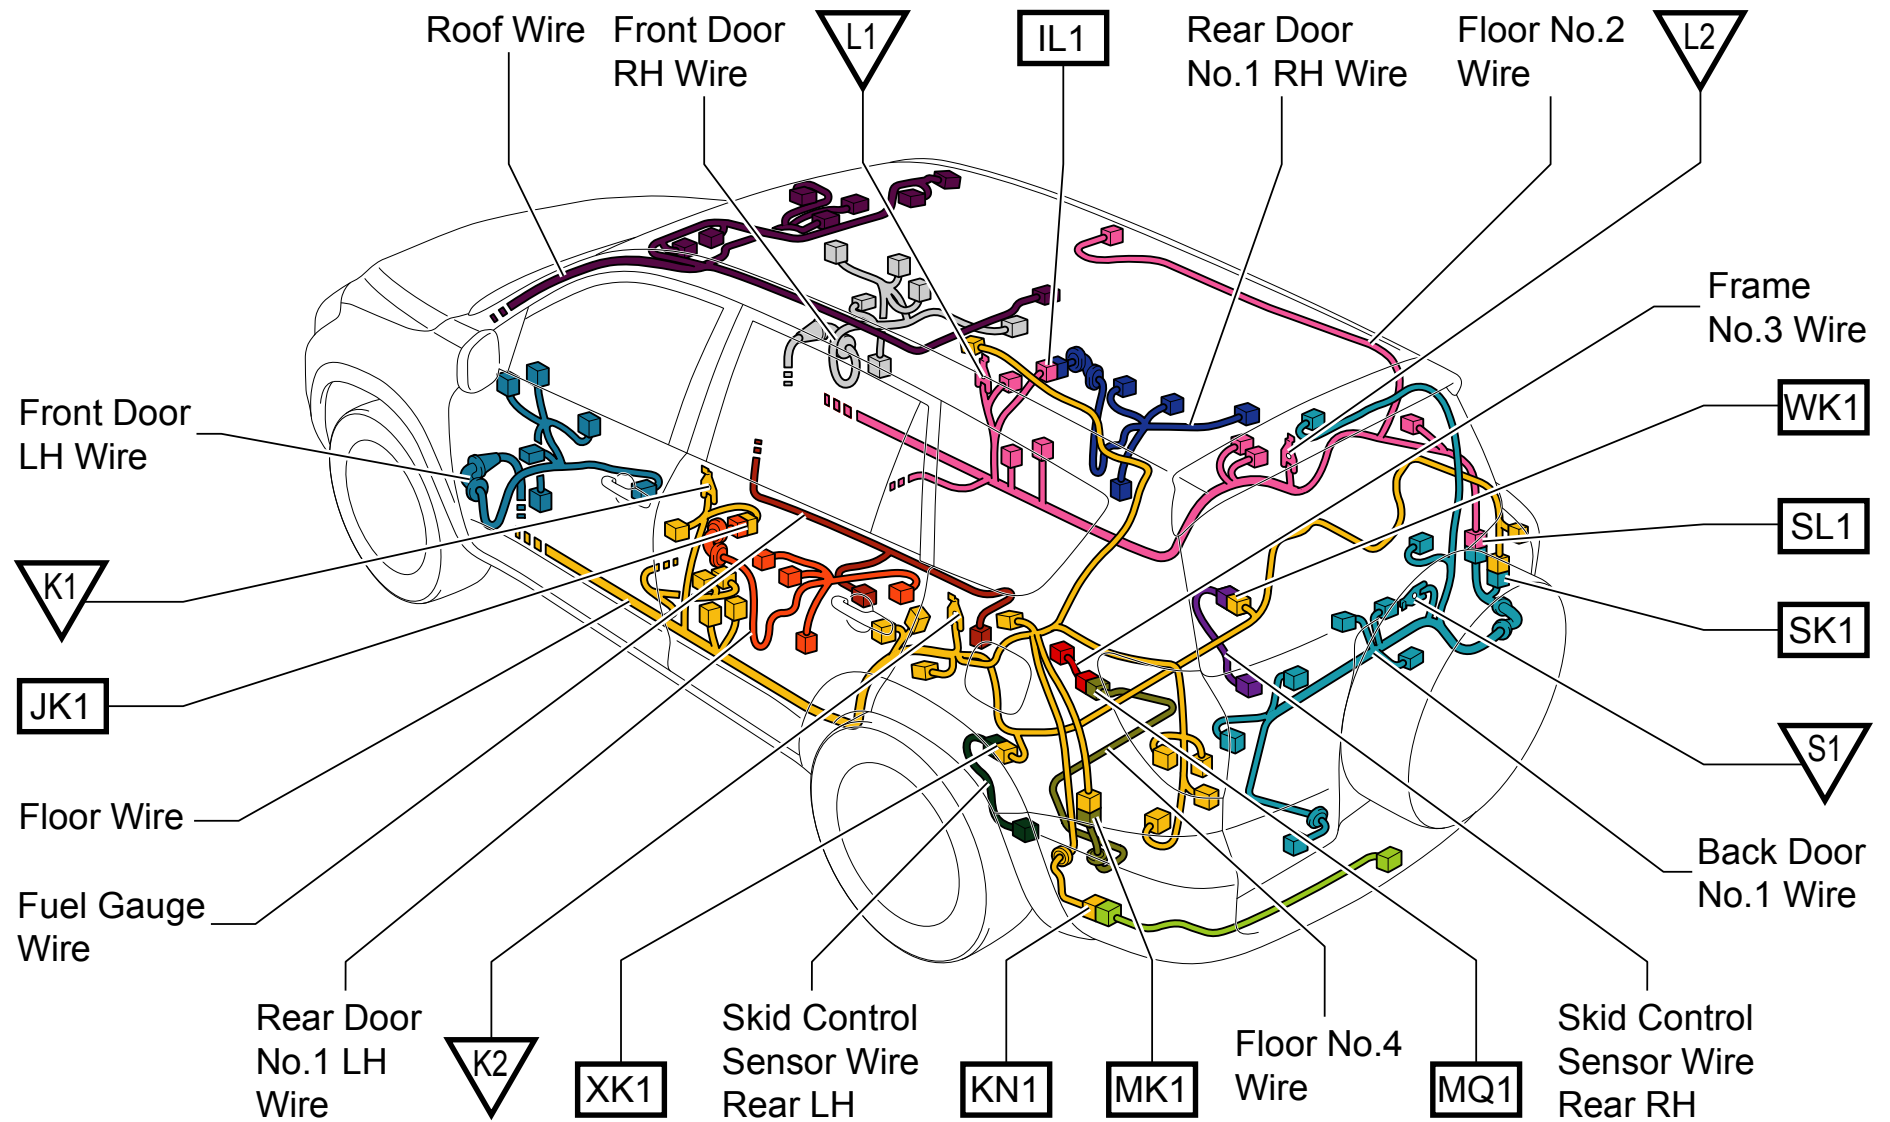


IL1
White

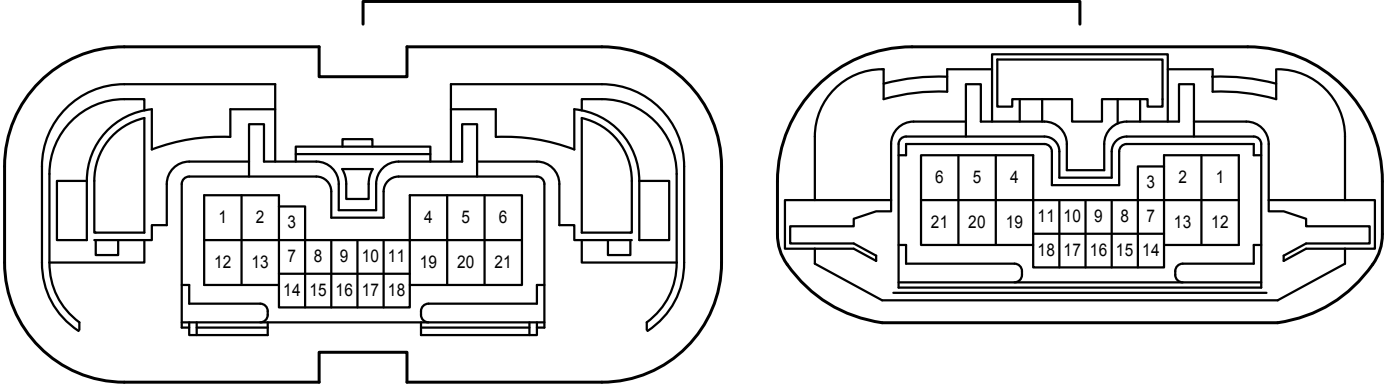 


JK1
White

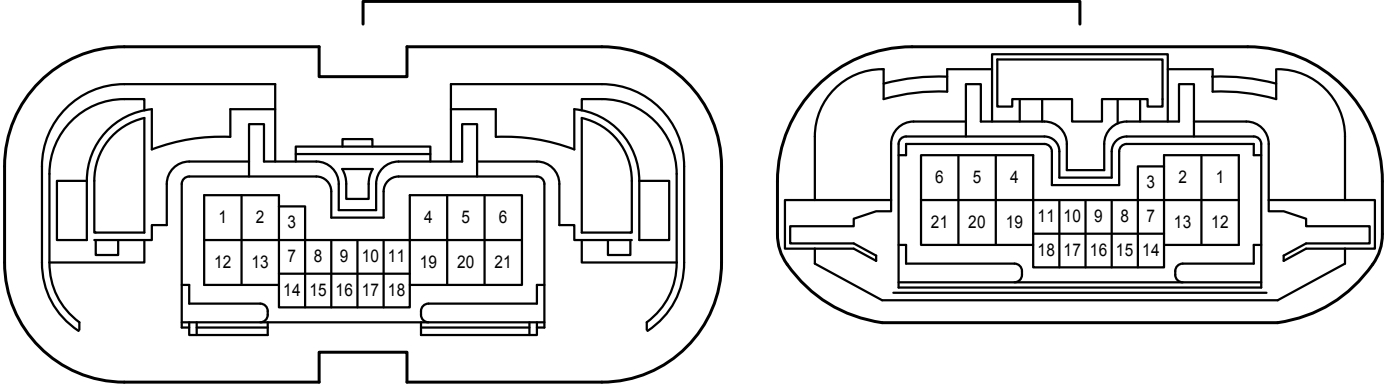 


KN1
White

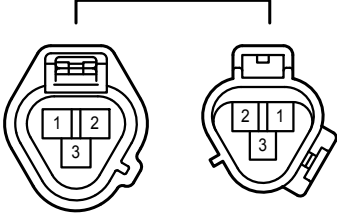 


MK1
White

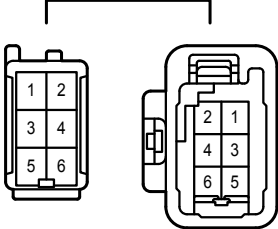 



MQ1
Black

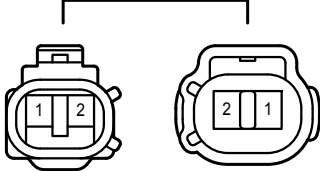 

SK1
White

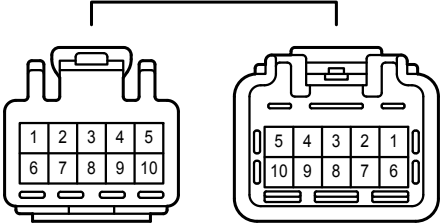 

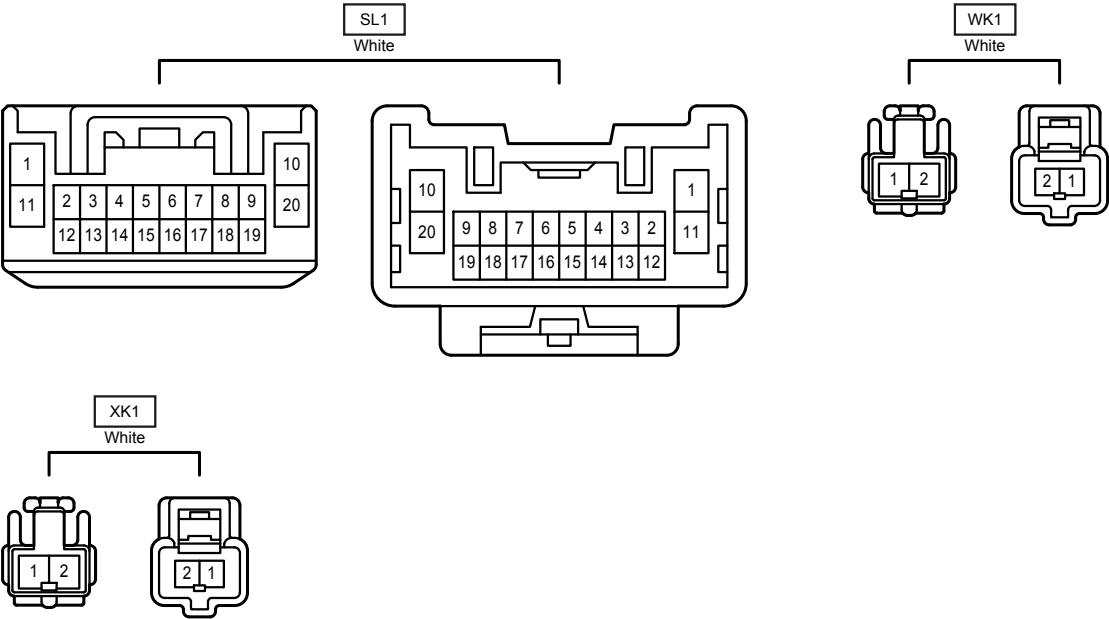 

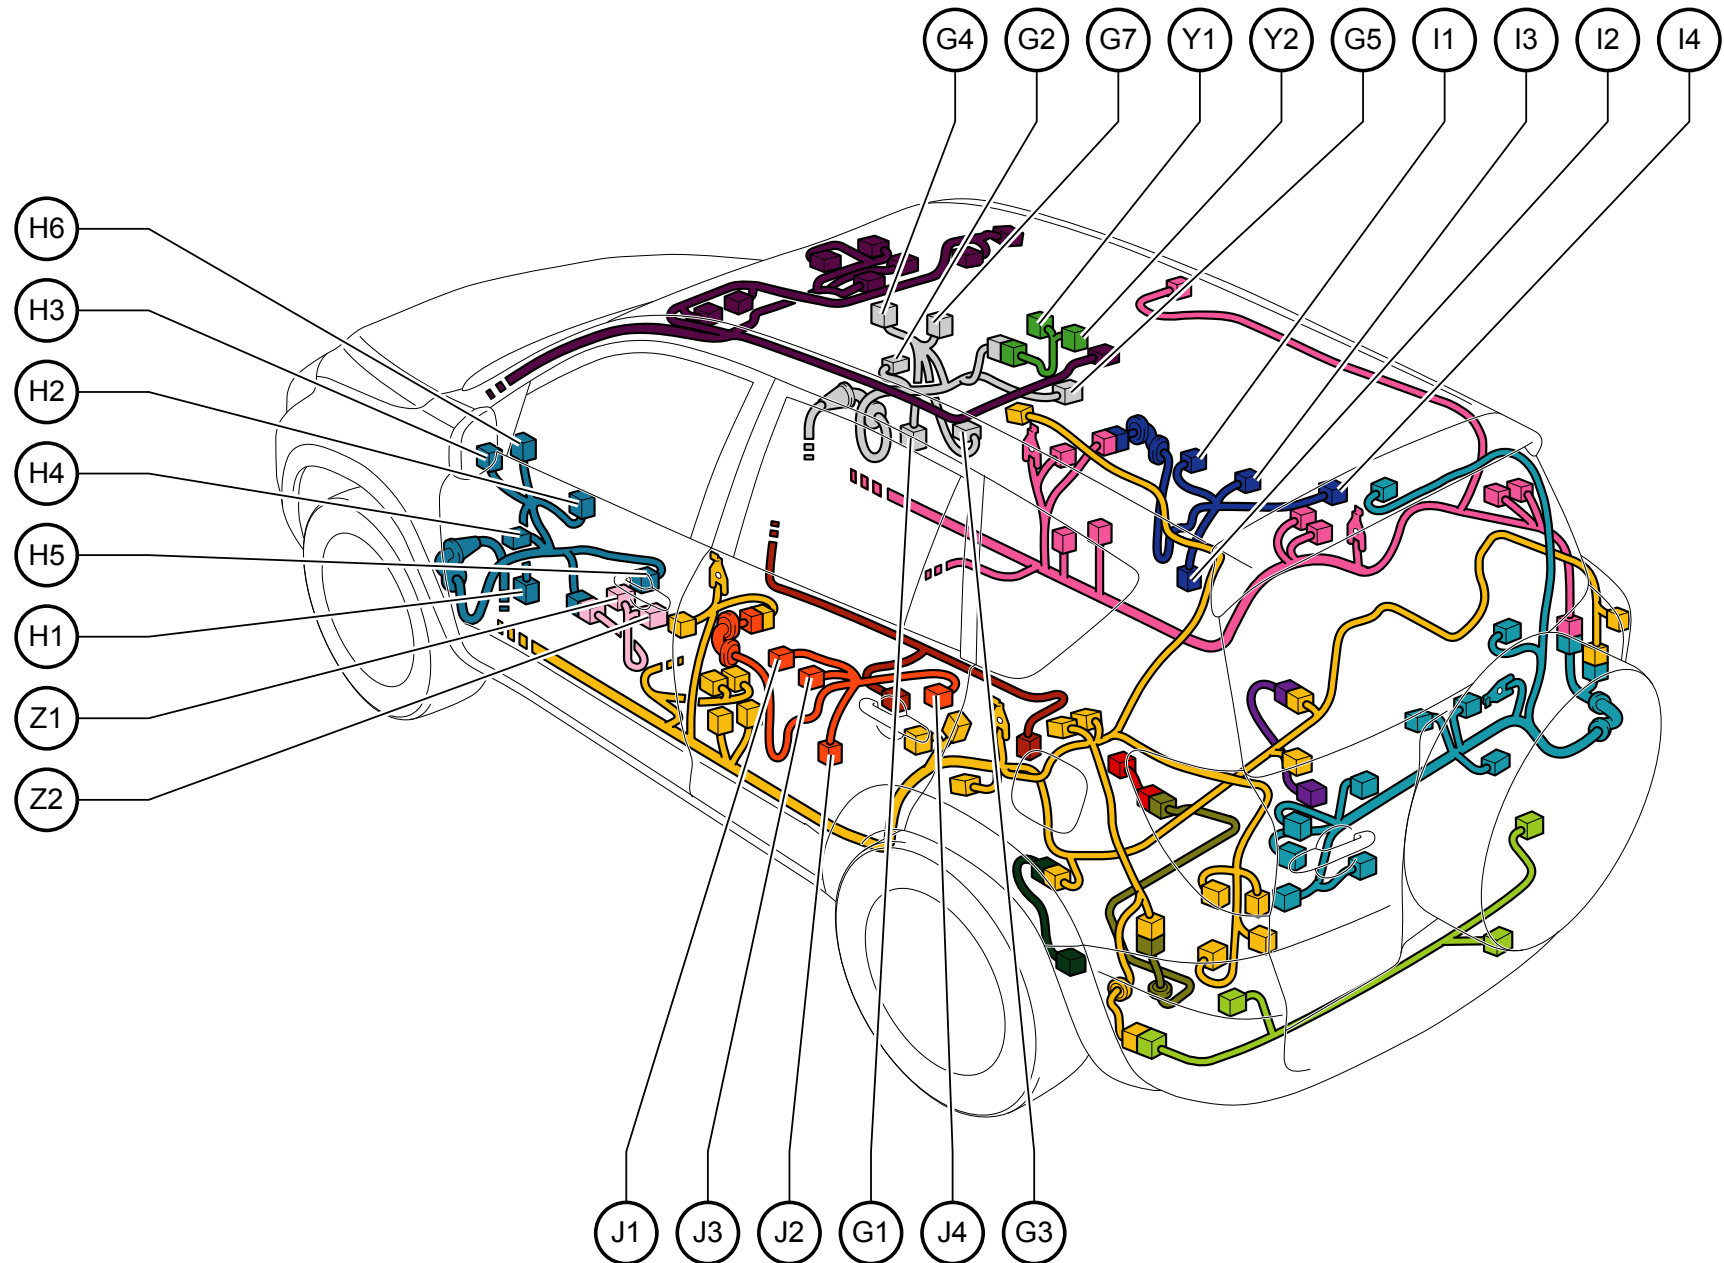 

- G 1 Speaker (Front Door RH)
- G 2 Power Window Regulator Motor (Front RH)
- G 3 Power Window SW (Front Passenger's Side)
- G 4 Outer Rear View Mirror (RH)
- G 5 Door Lock Assembly (Front RH)
- G 7 Tweeter (Front RH)

- H 1 Speaker (Front Door LH)
- H 2 Power Window SW (Driver's Side)
- H 3 Outer Rear View Mirror (LH)
- H 4 Power Window Regulator Motor (Front LH)
- H 5 Door Lock Assembly (Front LH)
- H 6 Tweeter (Front LH)

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- I 1 Power Window SW (Rear RH)
- I 2 Speaker (Rear RH)
- I 3 Power Window Regulator Motor (Rear RH)
- I 4 Door Lock Assembly (Rear RH)

 
- J 1 Power Window SW (Rear LH)
- J 2 Speaker (Rear LH)
- J 3 Power Window Regulator Motor (Rear LH)
- J 4 Door Lock Assembly (Rear LH)

- Y 1 Door Outside Handle (Front RH)
- Y 2 Electrical Key Oscillator (Front Door RH)

- Z 1 Door Outside Handle (Front LH)
- Z 2 Electrical Key Oscillator (Front Door LH)















Position of Parts in Body <LHD Short Body>

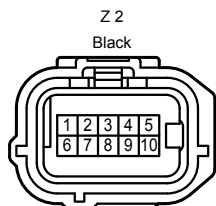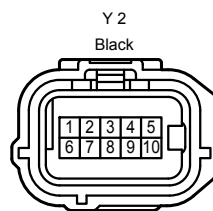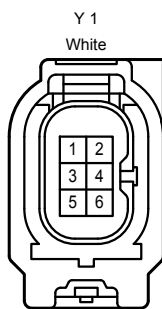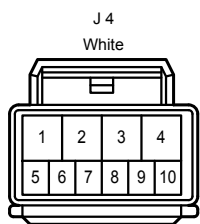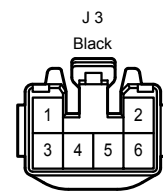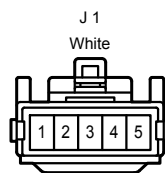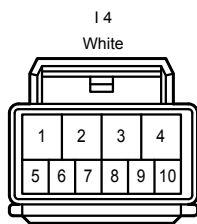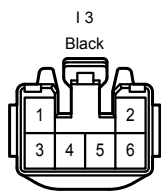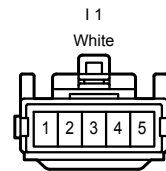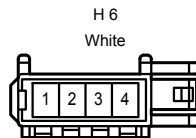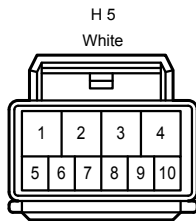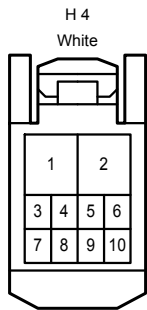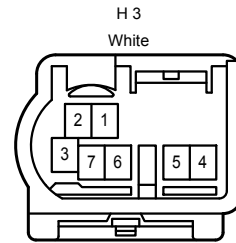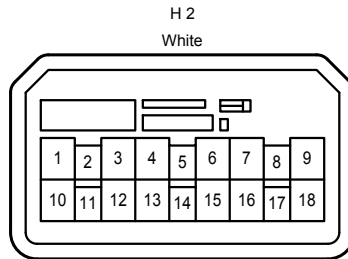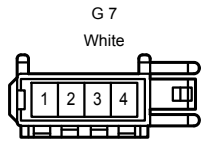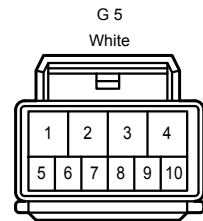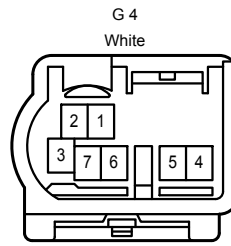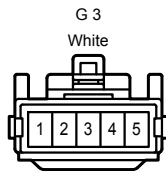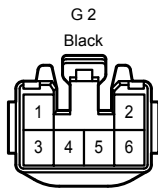


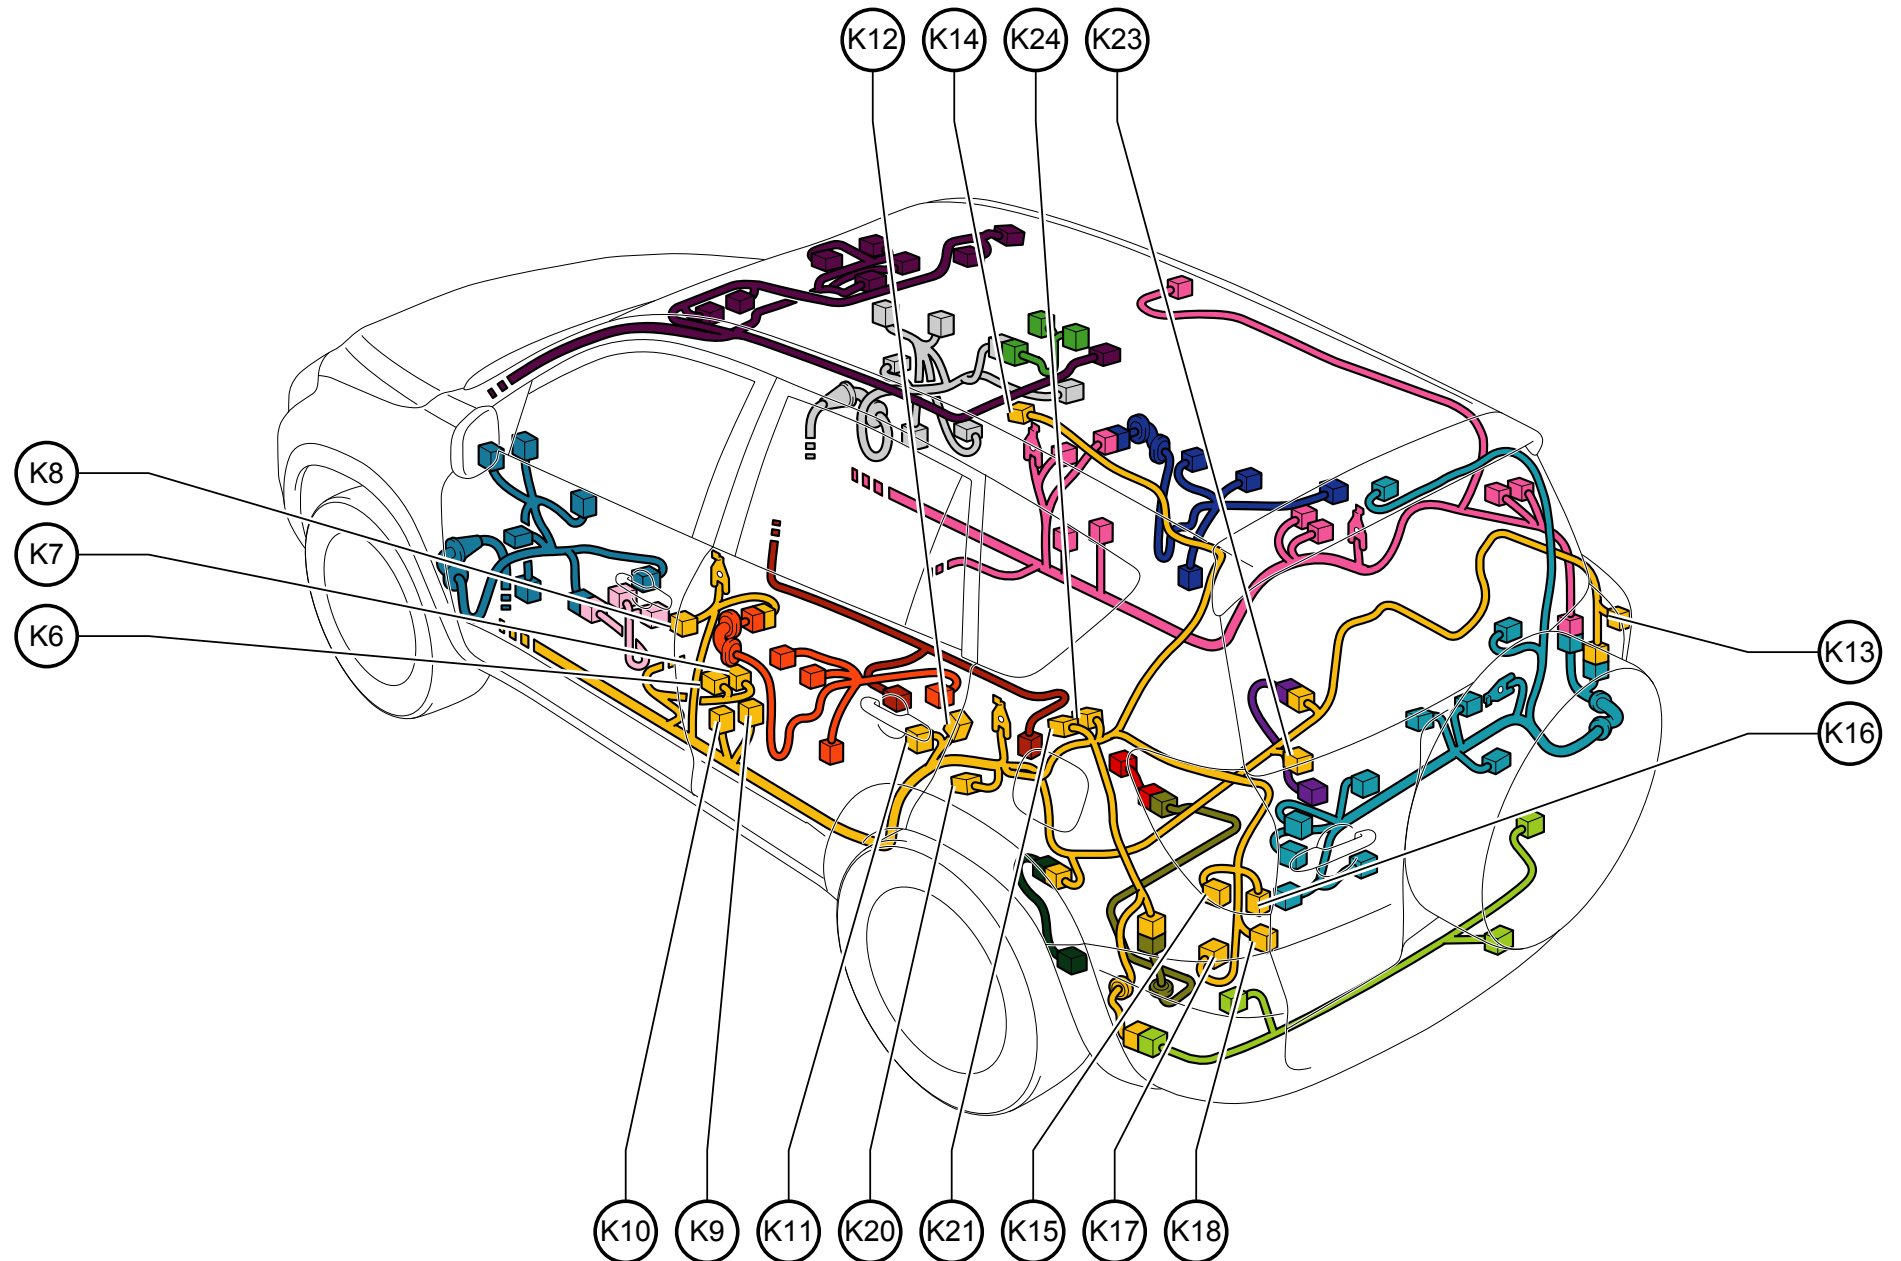

- K 6 Yaw Rate Sensor
- K 7 Deceleration Sensor
- K 8 Door Courtesy SW (Front LH)
- K 9 Pretensioner (LH)
- K 10 Side Airbag Sensor (Front LH)
- K 11 Door Courtesy SW (Rear LH)
- K 12 Side Airbag Sensor (Rear LH)
- K 13 Rear Combination Lamp (RH)
- K 14 Curtain Shield Airbag Squib (LH)
- K 15 Rear Combination Lamp (LH)
- K 16 Diode (Room Lamp)
- K 17 Power Outlet Socket (Rear)
- K 18 Door Courtesy SW (Back Door)
- K 20 Junction Connector
- K 21 Junction Connector
- K 23 Electrical Key Oscillator (Inside Luggage Room)
- K 24 Tire Pressure Warning Antenna (Rear)

               Position of Parts in Body <LHD Short Body>

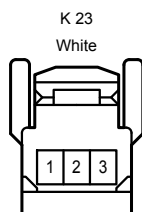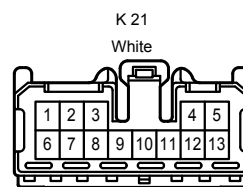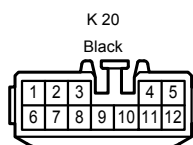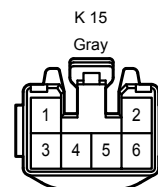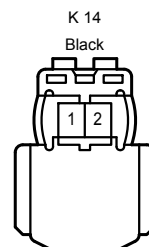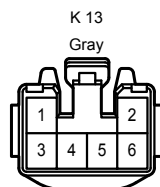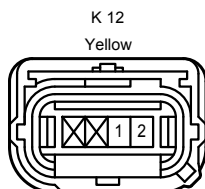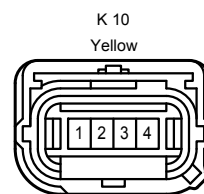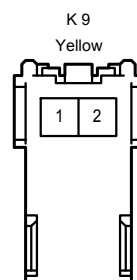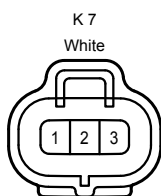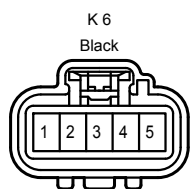









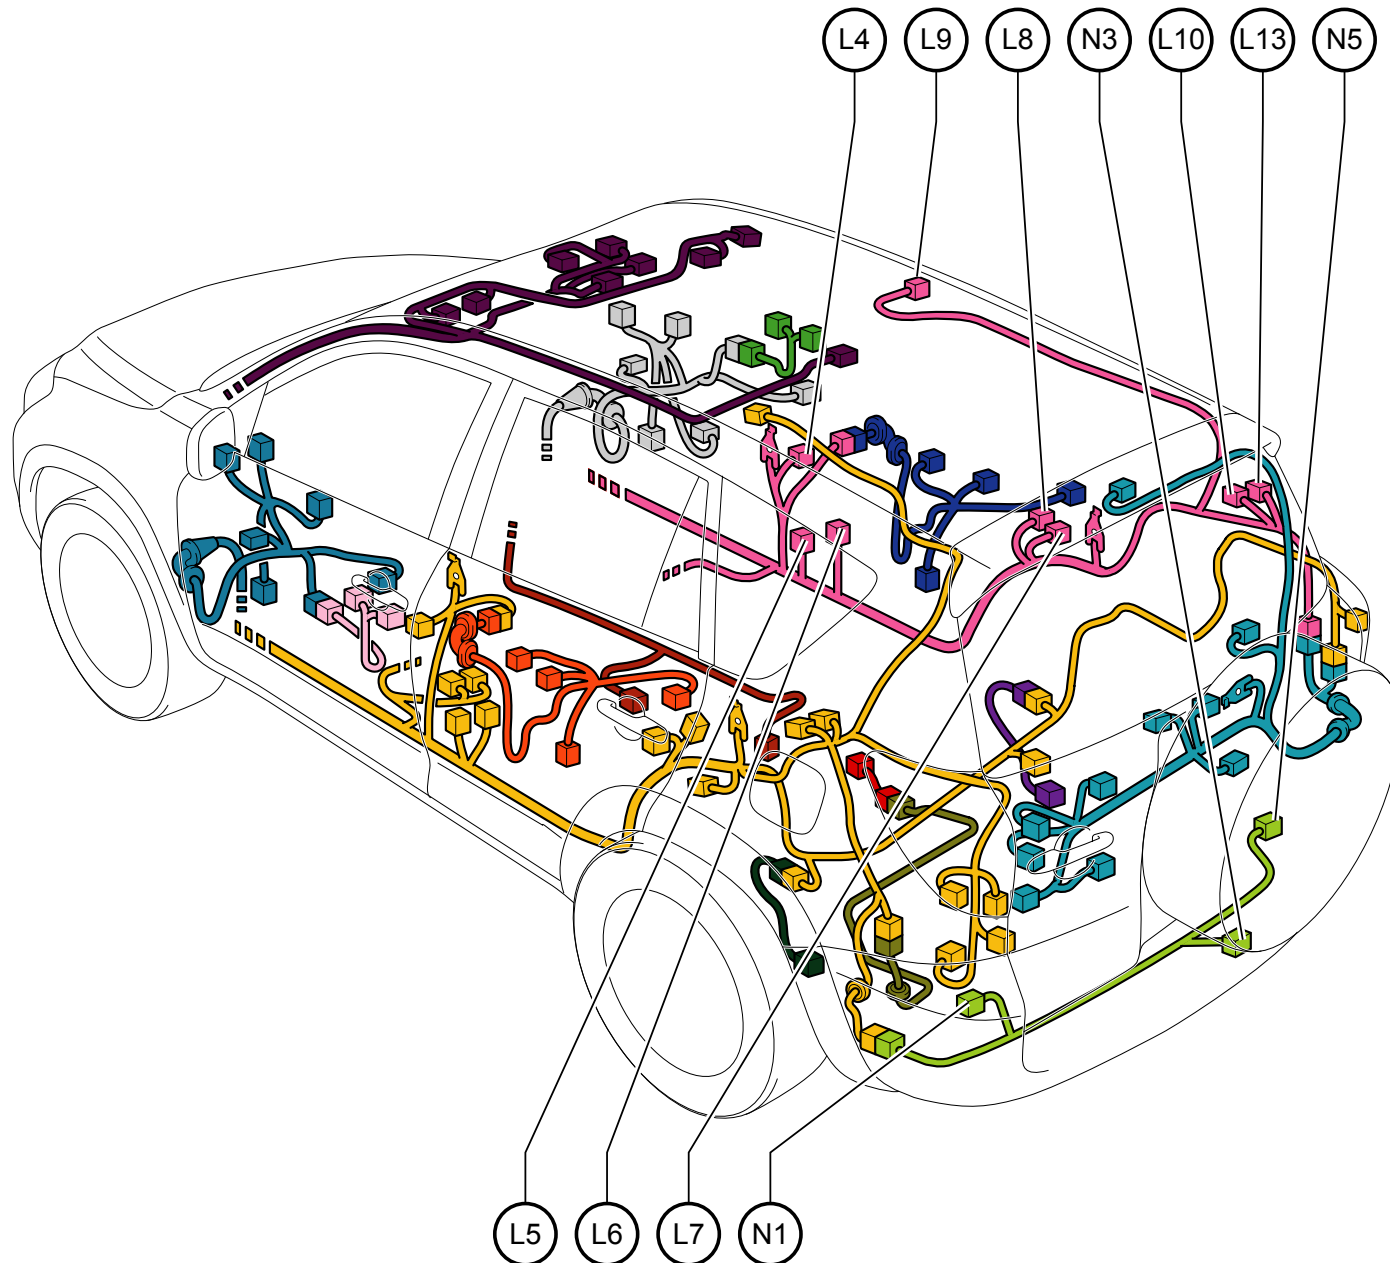


Position of Parts in Body <LHD Short Body>


- L 4 Door Courtesy SW (Front RH)
- L 5 Pretensioner (RH)
- L 6 Side Airbag Sensor (Front RH)
- L 7 Door Courtesy SW (Rear RH)
- L 8 Side Airbag Sensor (Rear RH)
- L 9 Curtain Shield Airbag Squib (RH)
- L 10 Door Control Receiver
- L 13 Door Control Receiver

- N 1 Rear Fog Light (LH)
- N 3 License Plate Lamp
- N 5 Rear Fog Light (RH)

         Position of Parts in Body <LHD Short Body>

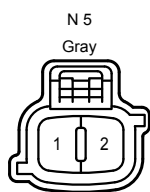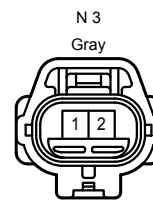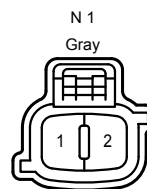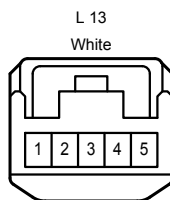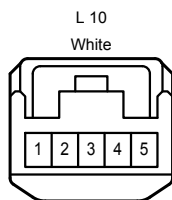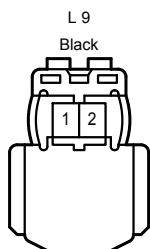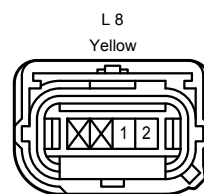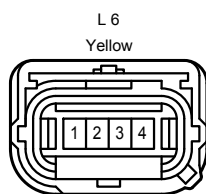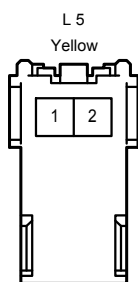

 Position of Parts in Body <LHD Short Body>

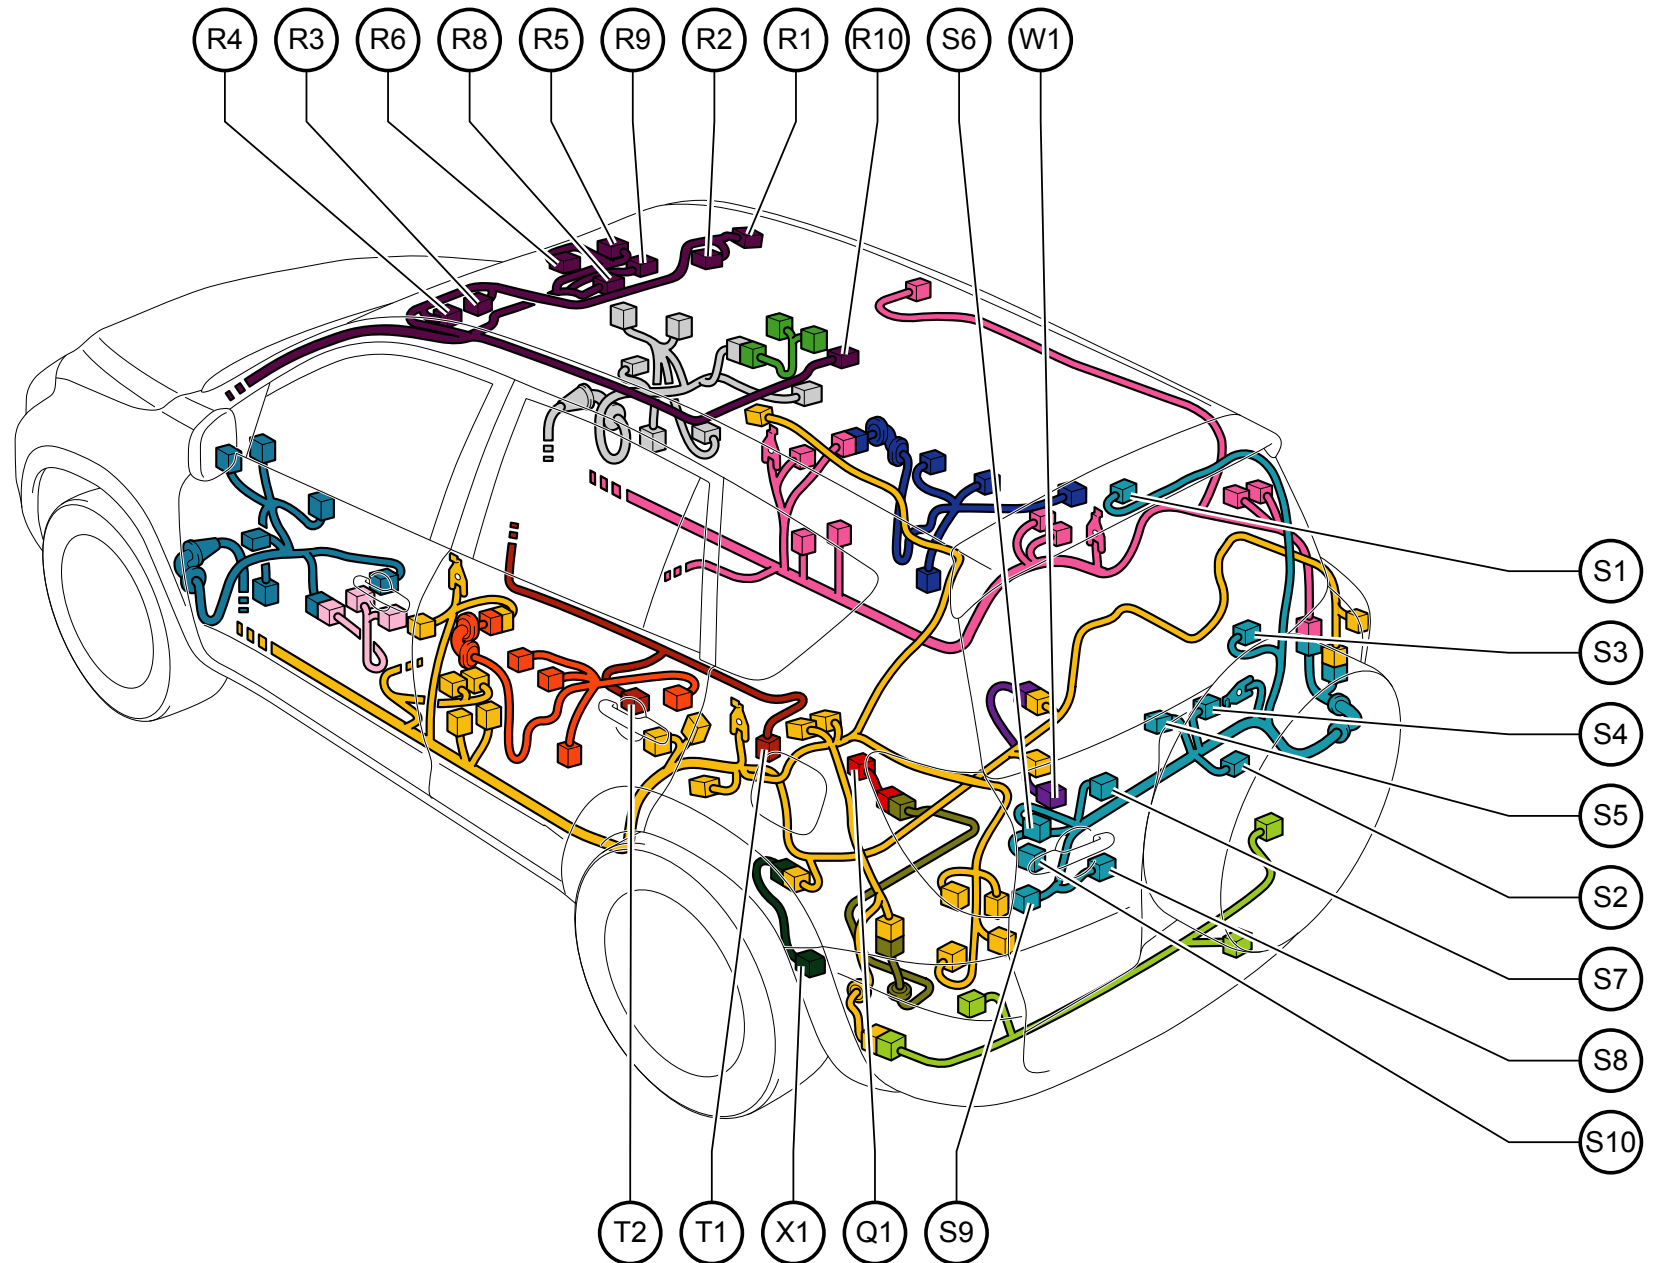

- Q 1 4WD Linear Solenoid

- R 1 Vanity Lamp SW (RH)
- R 2 Vanity Lamp (RH)
- R 3 Vanity Lamp (LH)
- R 4 Vanity Lamp SW (LH)
- R 5 Rain Sensor
- R 6 Inner Rear View Mirror
- R 8 Overhead J/B
- R 9 Sliding Roof Control ECU
- R 10 Room Lamp (Front)

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- S 1 Center Stop Lamp
- S 2 Rear Window Defogger
- S 3 Room Lamp (Rear)
- S 4 Noise Filter (Stop and Rear Window Defogger)
- S 5 Rear Wiper Motor
- S 6 License Plate Lamp (RH)
- S 6 License Plate Lamp (RH)
- S 7 Television Camera (Rear)
- S 8 Electrical Key Oscillator (Back Door)
- S 9 Door Outside Handle (Back Door)
- S 10 Back Door Lock Assembly

 
- T 1 Fuel Suction Pump
- T 2 Fuel Sender Gage

- W 1 Speed Sensor (Rear RH)


- X 1 Speed Sensor (Rear LH)





Position of Parts in Body <LHD Short Body>

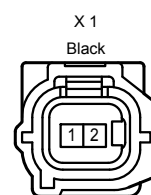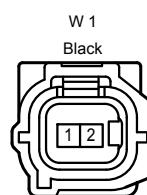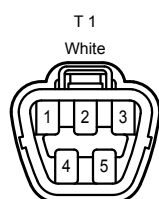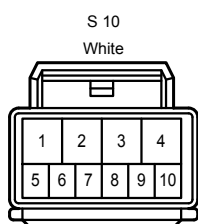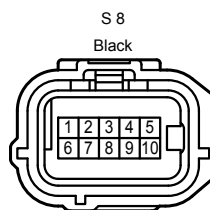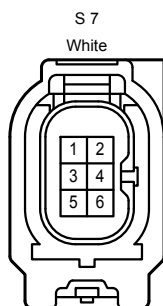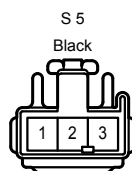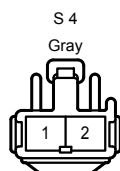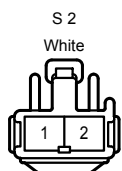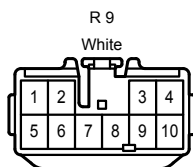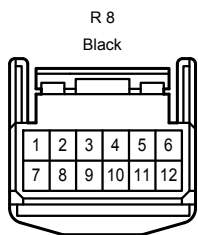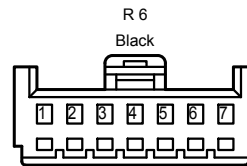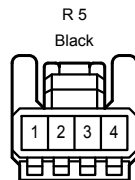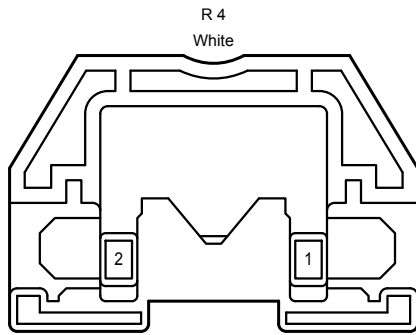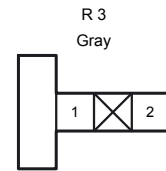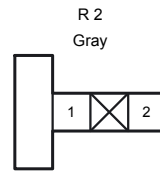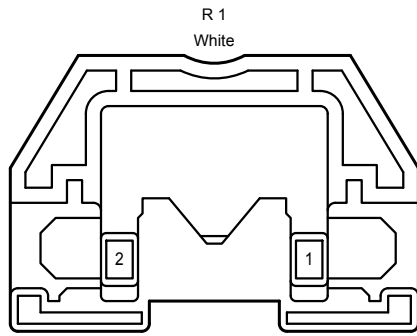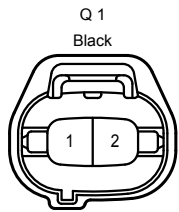


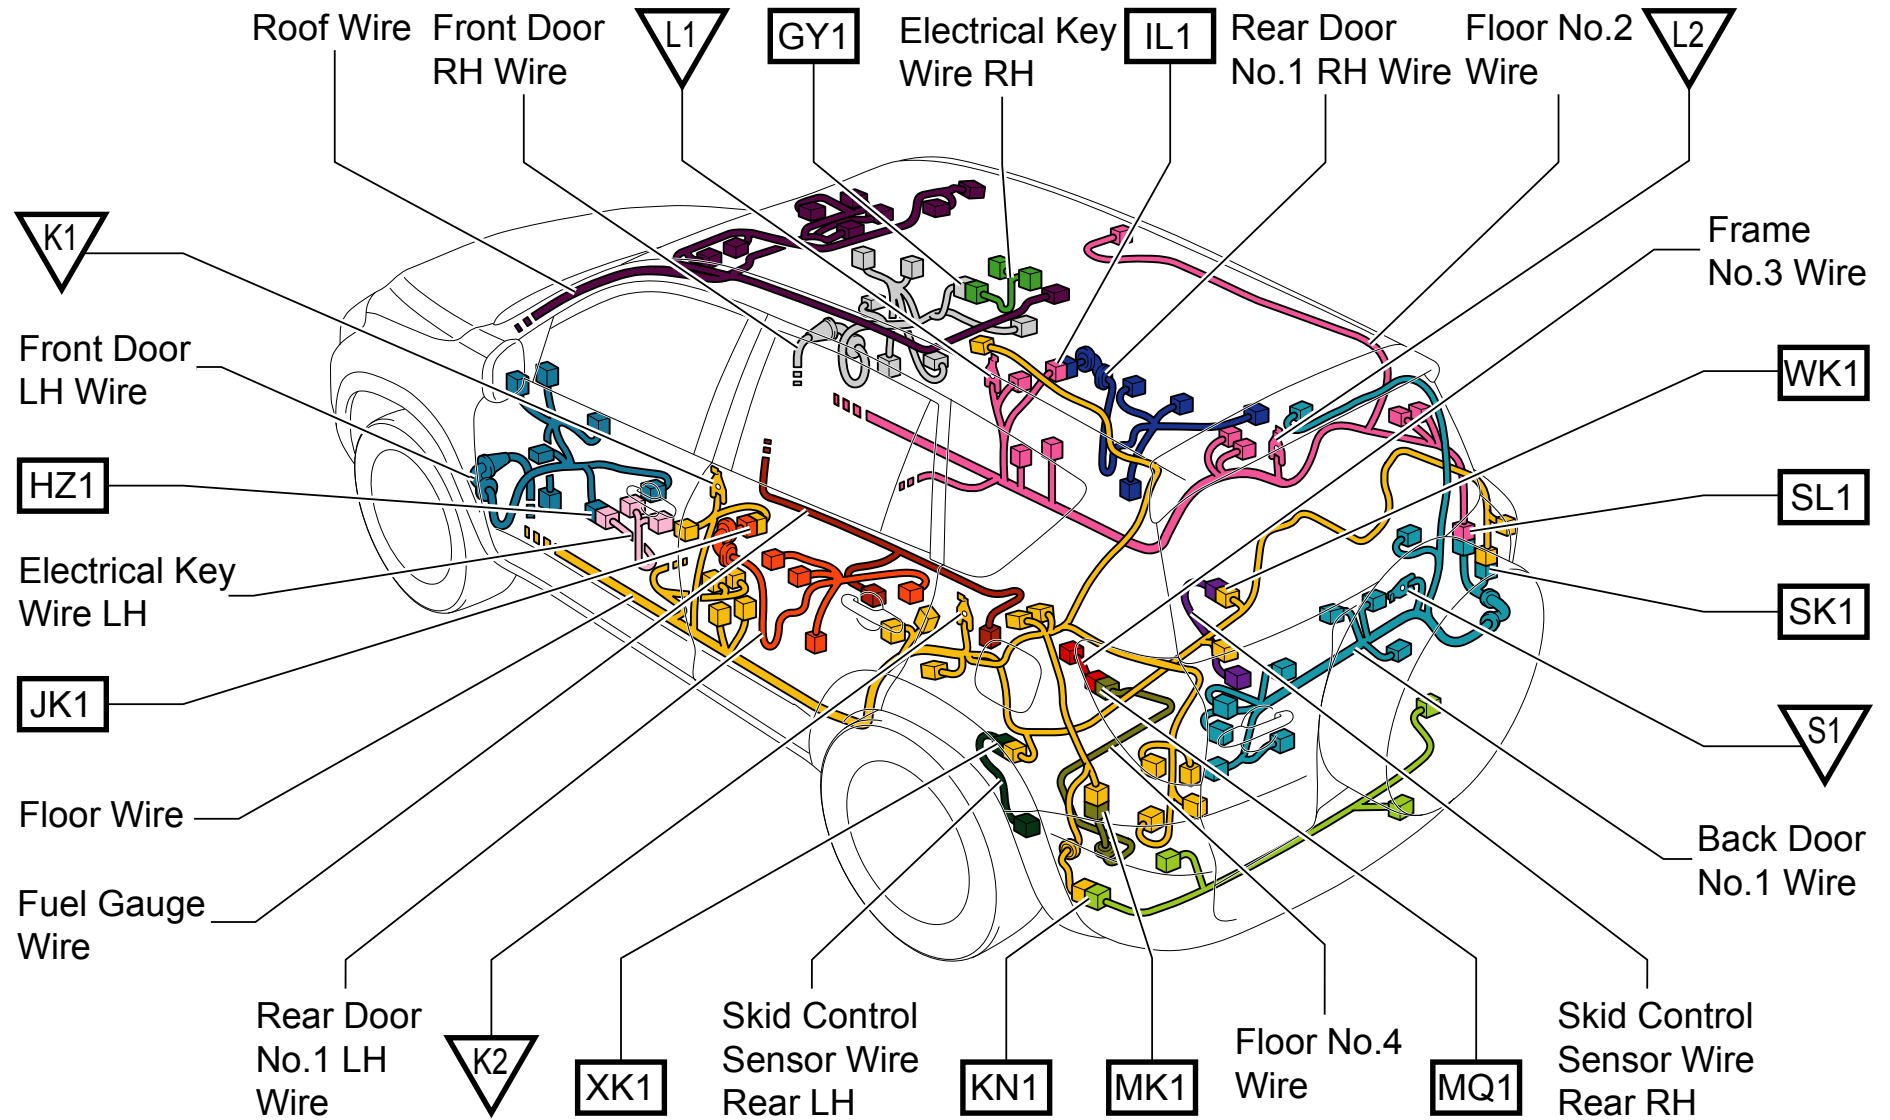

      Wire and Wire , Ground Points in Body <LHD Short Body>

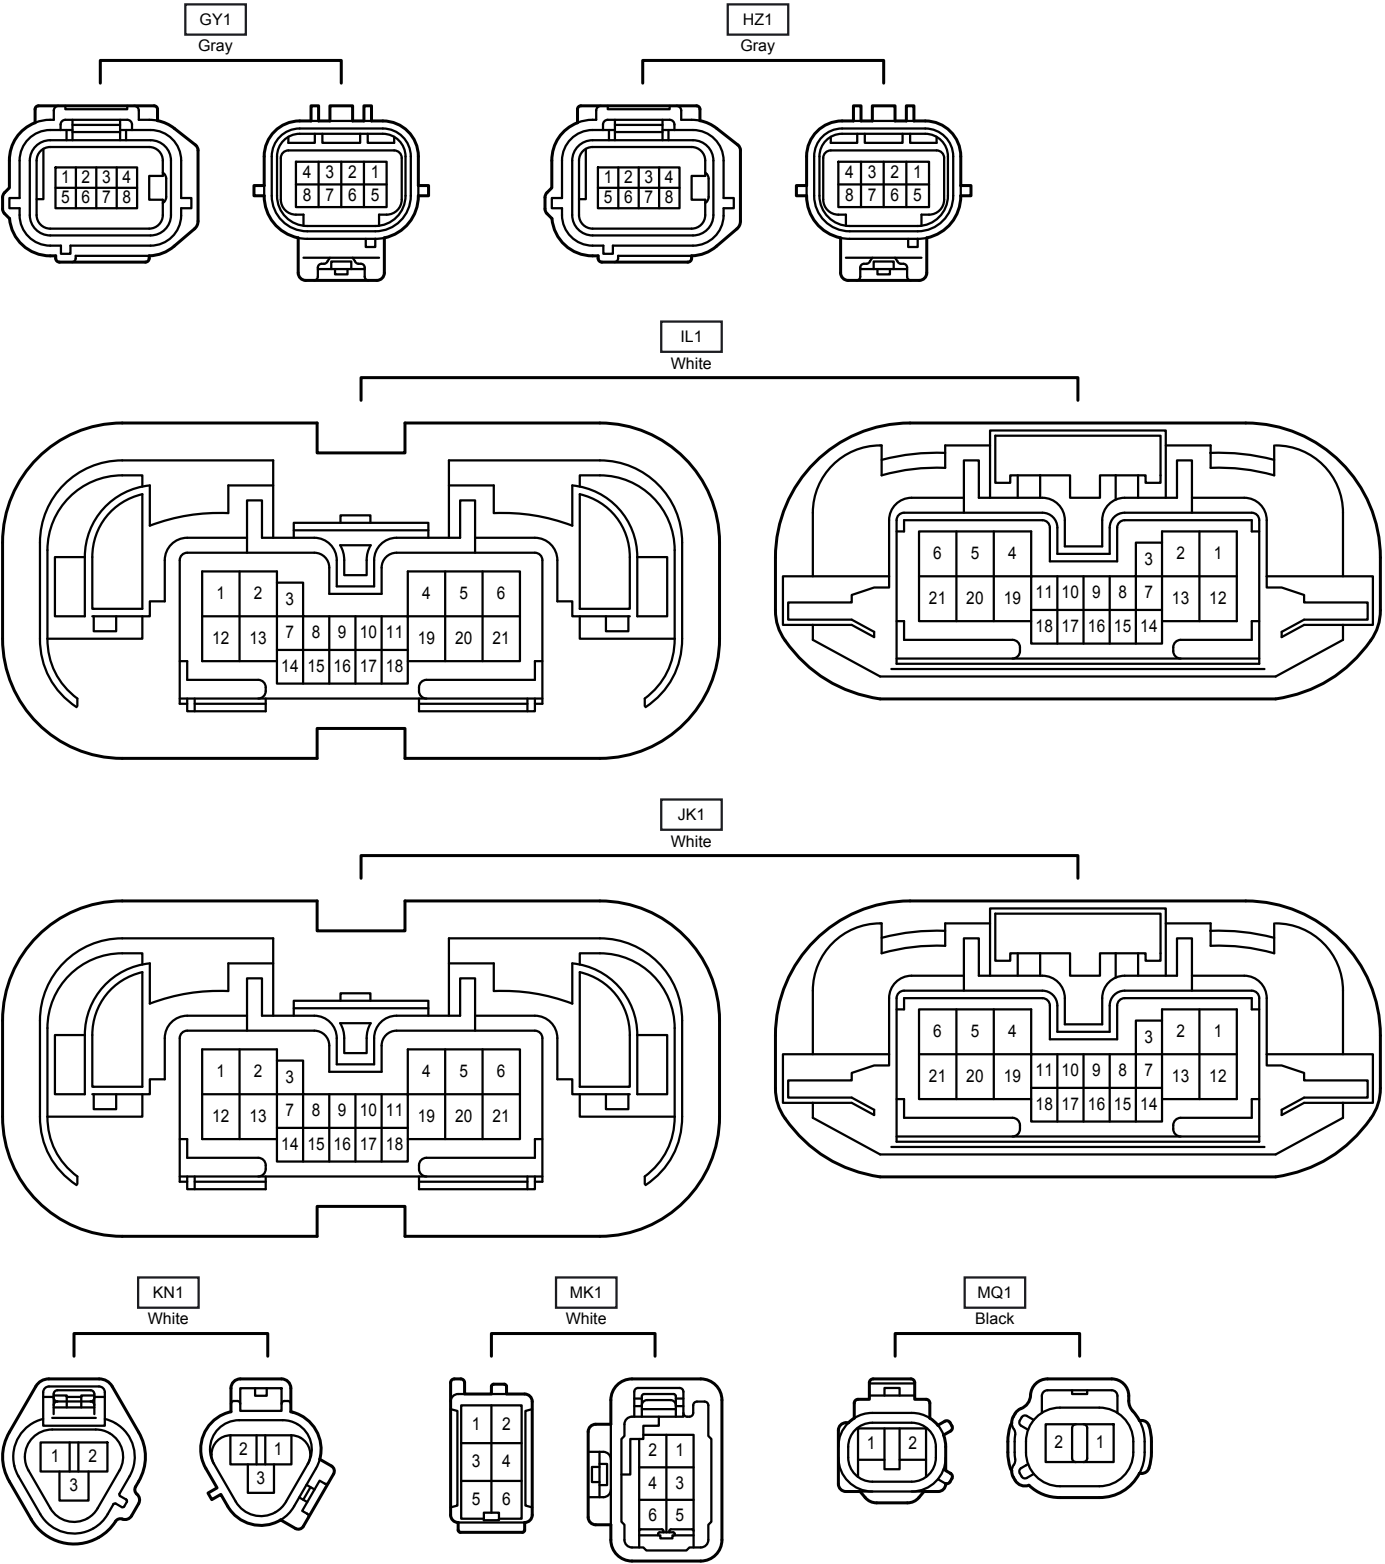

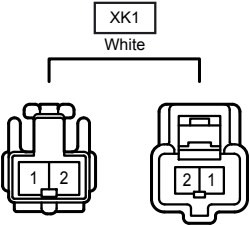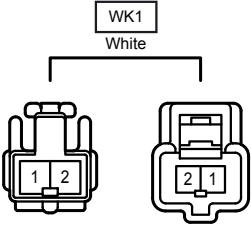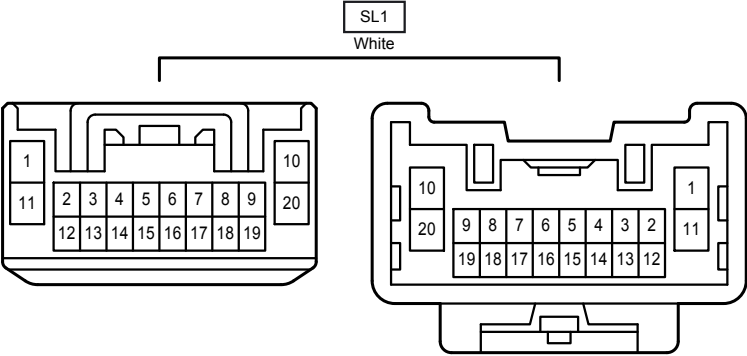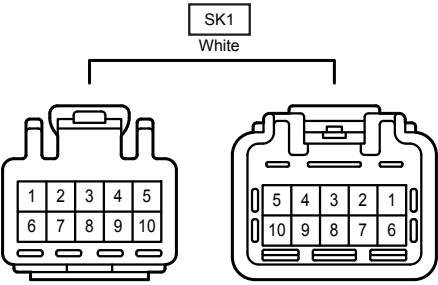

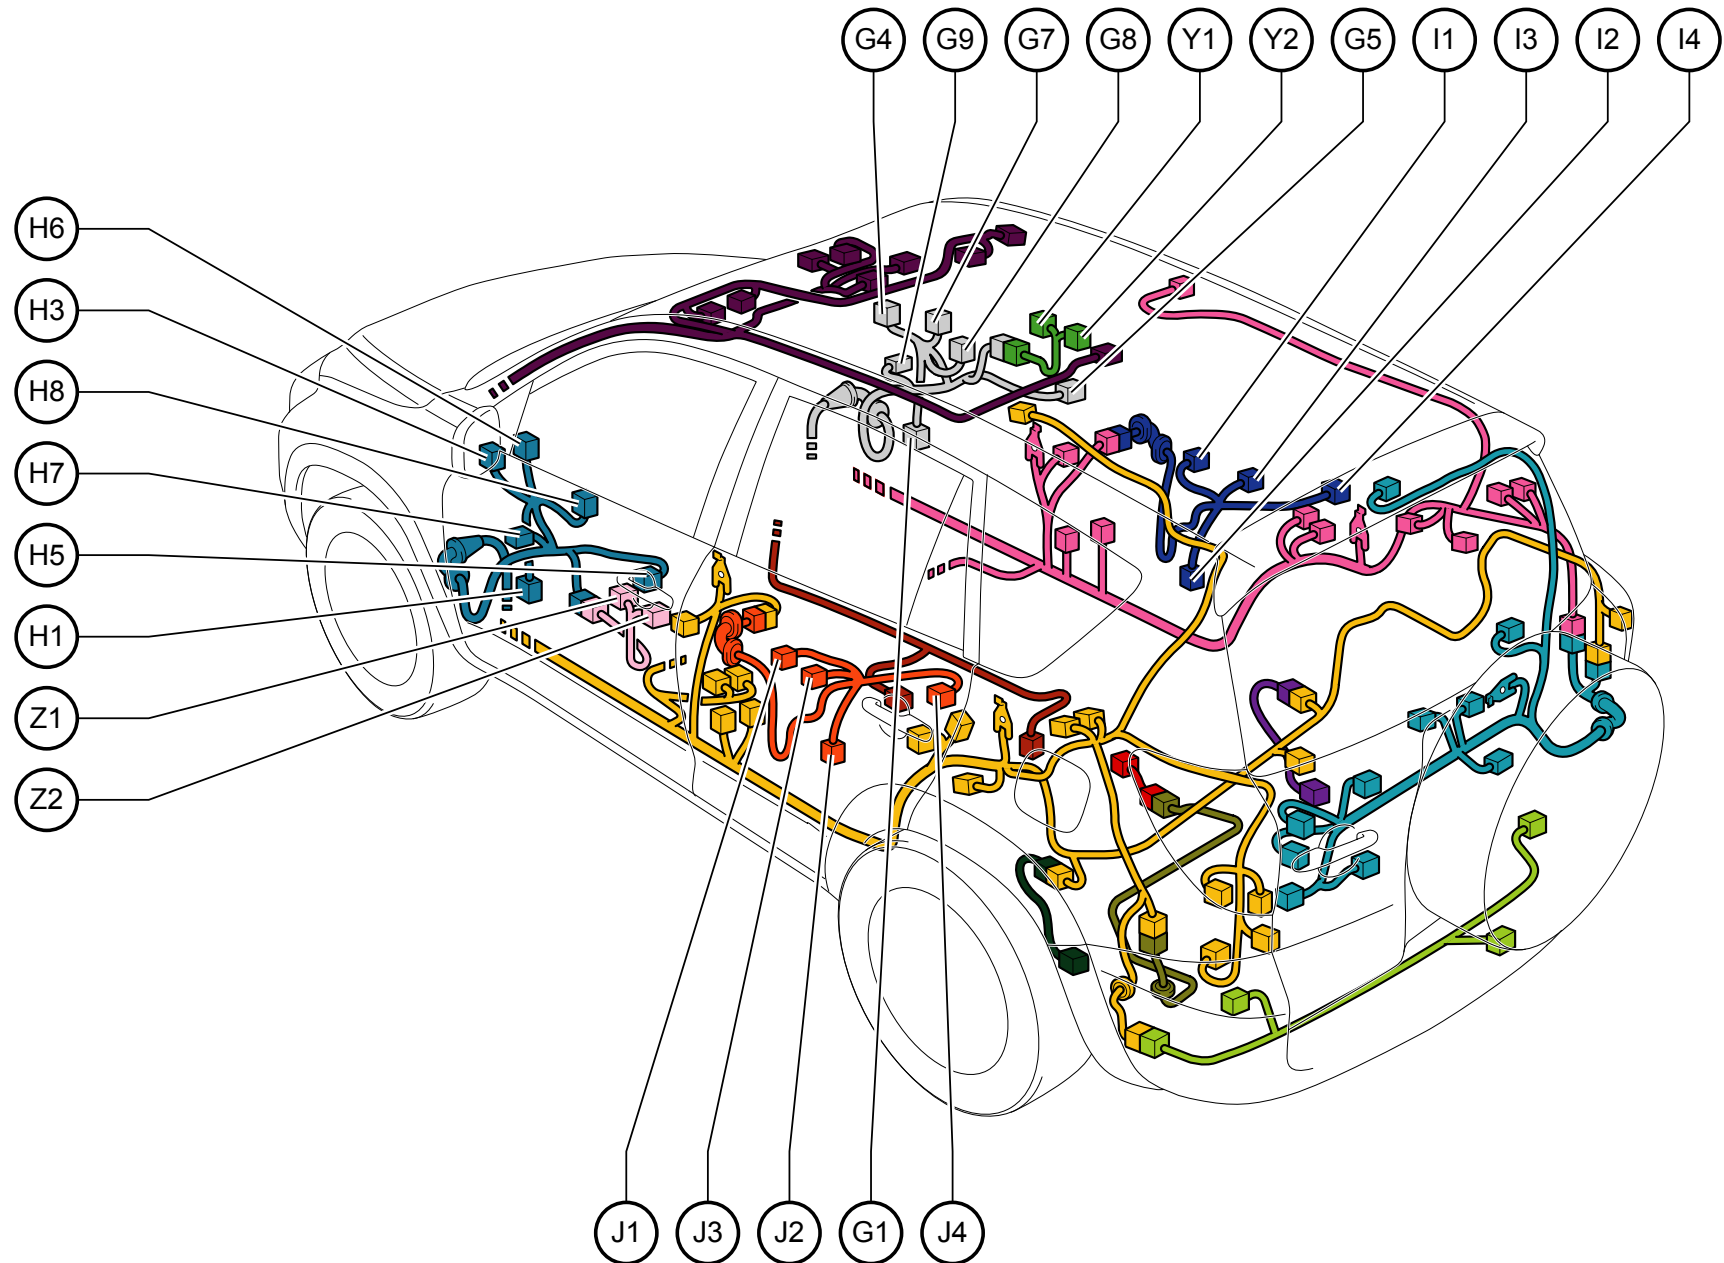

G 1 Speaker (Front Door RH)
G 4 Outer Rear View Mirror (RH)
G 5 Door Lock Assembly (Front RH)
G 7 Tweeter (Front RH)
G 8 Power Window SW (Driver's Side)
G 9 Power Window Regulator Motor (Front RH)

H 1 Speaker (Front Door LH)
H 3 Outer Rear View Mirror (LH)
H 5 Door Lock Assembly (Front LH)
H 6 Tweeter (Front LH)
H 7 Power Window Regulator Motor (Front LH)
H 8 Power Window SW (Front Passenger's Side)

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
I 1 Power Window SW (Rear RH)
I 2 Speaker (Rear RH)
I 3 Power Window Regulator Motor (Rear RH)
I 4 Door Lock Assembly (Rear RH)

 
J 1 Power Window SW (Rear LH)
J 2 Speaker (Rear LH)
J 3 Power Window Regulator Motor (Rear LH)
J 4 Door Lock Assembly (Rear LH)

Y 1 Door Outside Handle (Front RH)
Y 2 Electrical Key Oscillator (Front Door RH)

Z 1 Door Outside Handle (Front LH)
Z 2 Electrical Key Oscillator (Front Door LH)















Position of Parts in Body <RHD Short Body>

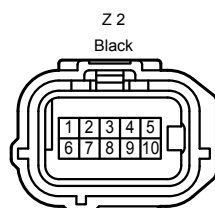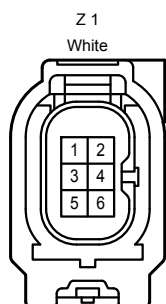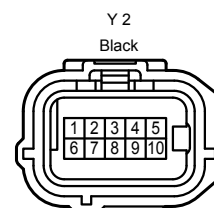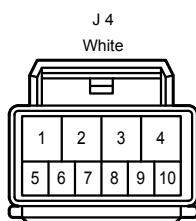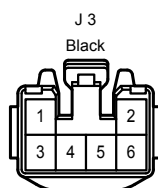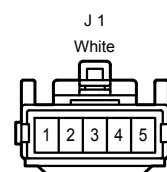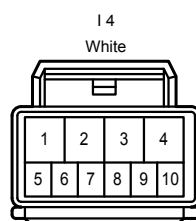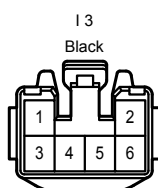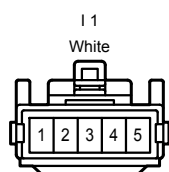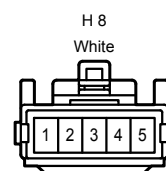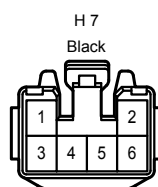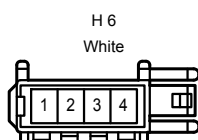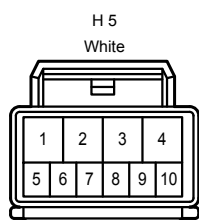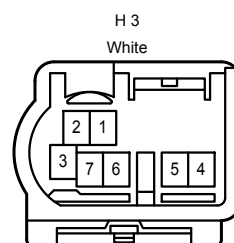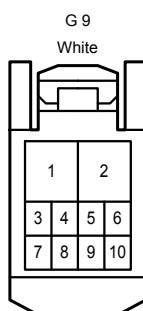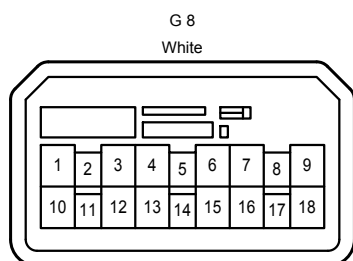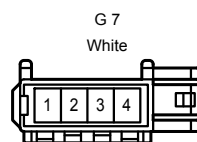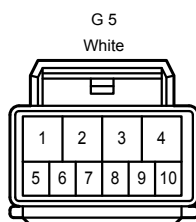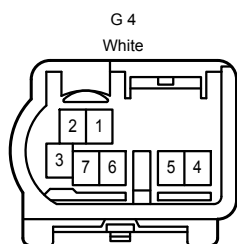


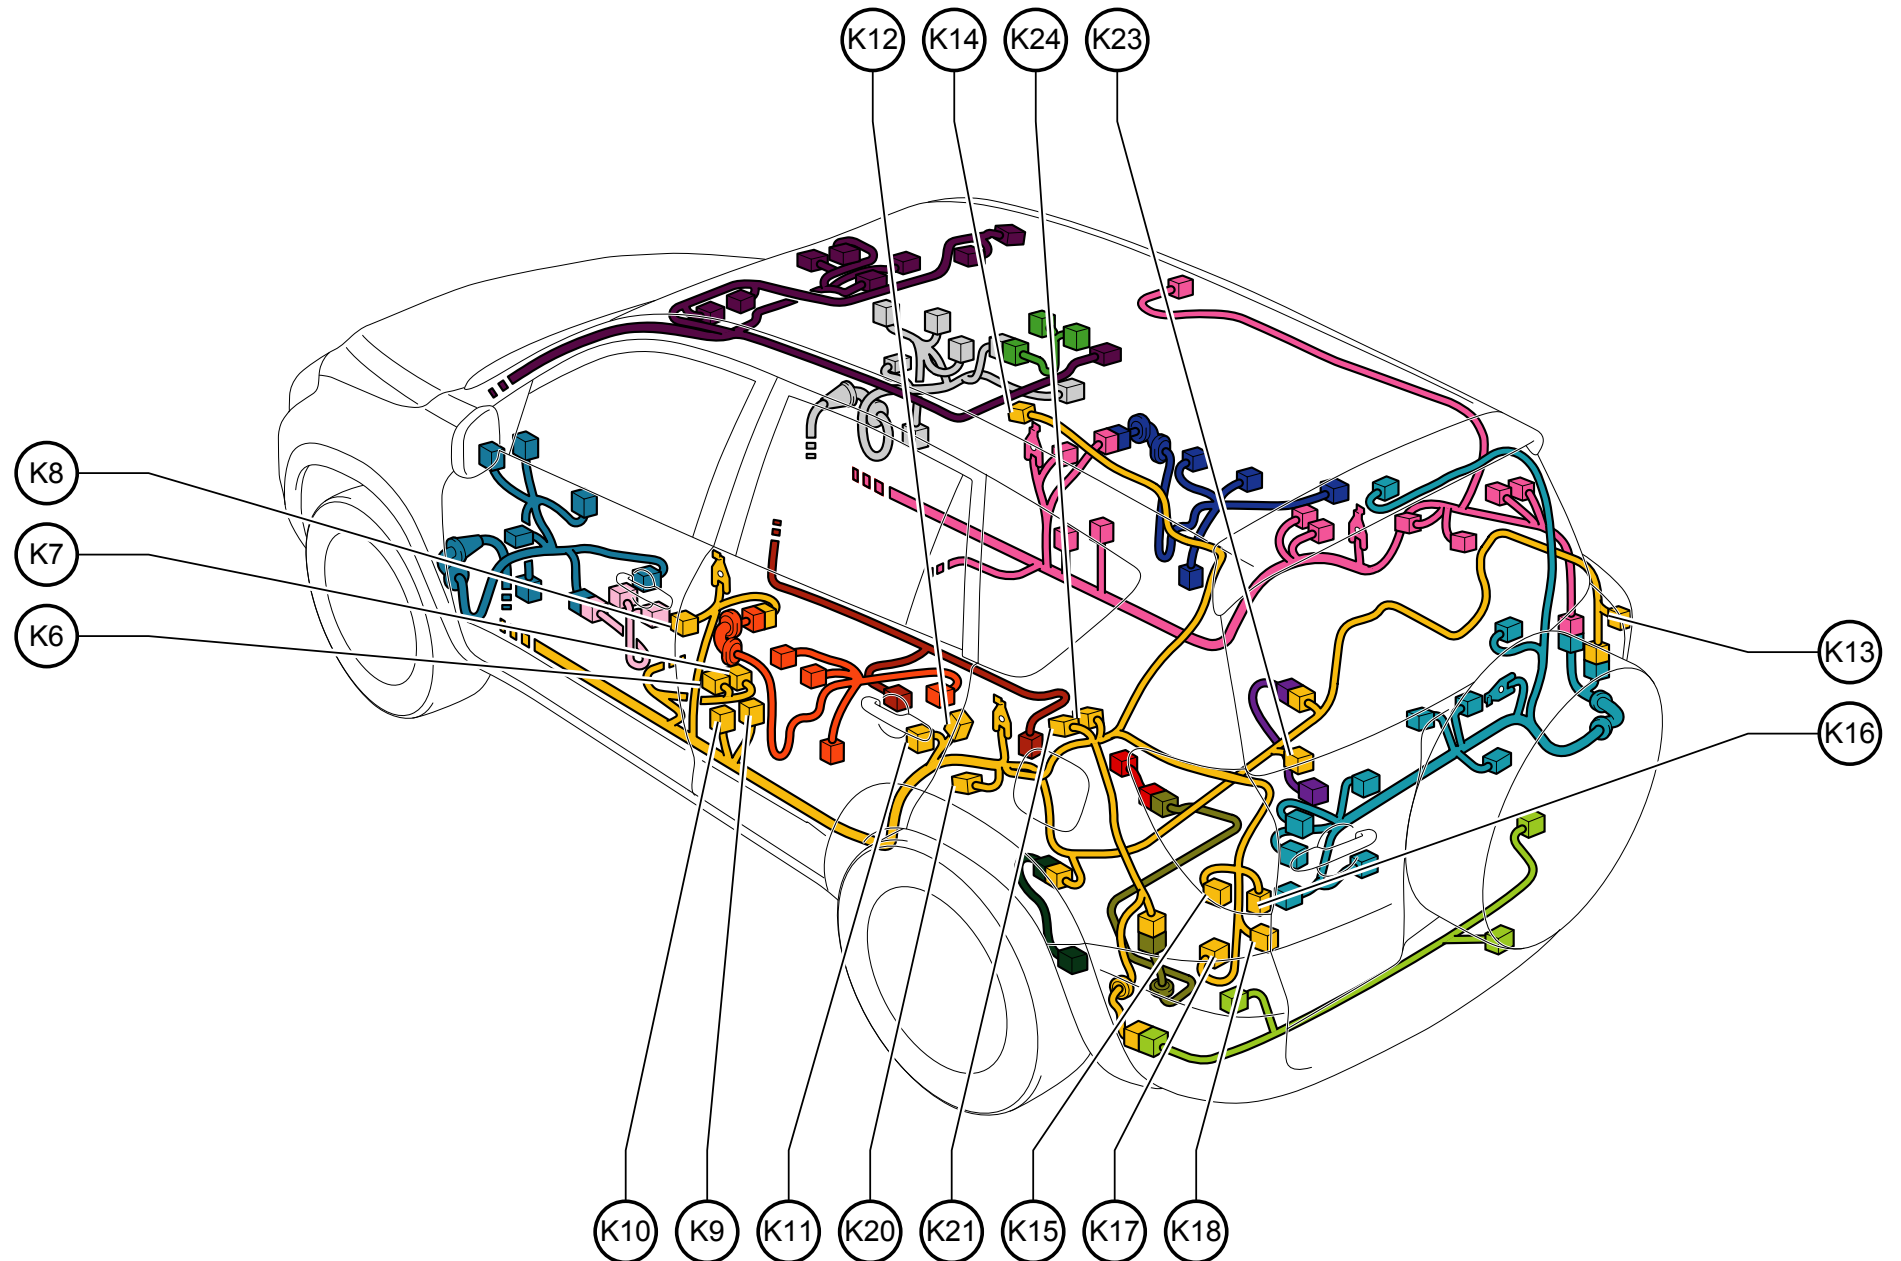

- K 6 Yaw Rate Sensor
- K 7 Deceleration Sensor
- K 8 Door Courtesy SW (Front LH)
- K 9 Pretensioner (LH)
- K 10 Side Airbag Sensor (Front LH)
- K 11 Door Courtesy SW (Rear LH)
- K 12 Side Airbag Sensor (Rear LH)
- K 13 Rear Combination Lamp (RH)
- K 14 Curtain Shield Airbag Squib (LH)
- K 15 Rear Combination Lamp (LH)
- K 16 Diode (Room Lamp)
- K 17 Power Outlet Socket (Rear)
- K 18 Door Courtesy SW (Back Door)
- K 20 Junction Connector
- K 21 Junction Connector
- K 23 Electrical Key Oscillator (Inside Luggage Room)
- K 24 Tire Pressure Warning Antenna (Rear)

               Position of Parts in Body <RHD Short Body>

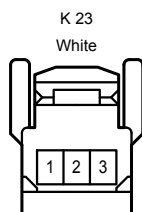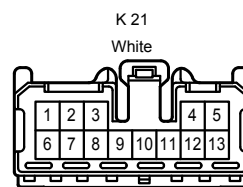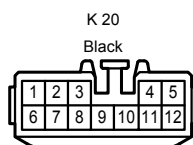
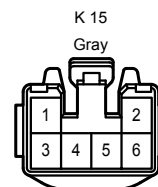
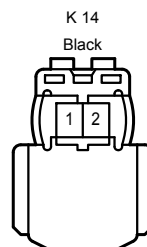
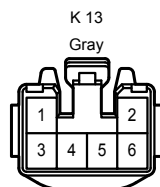
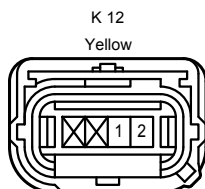
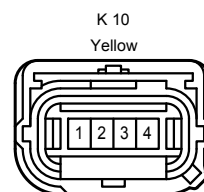
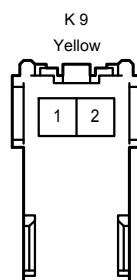
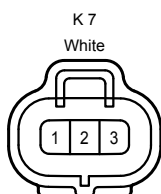
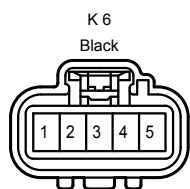


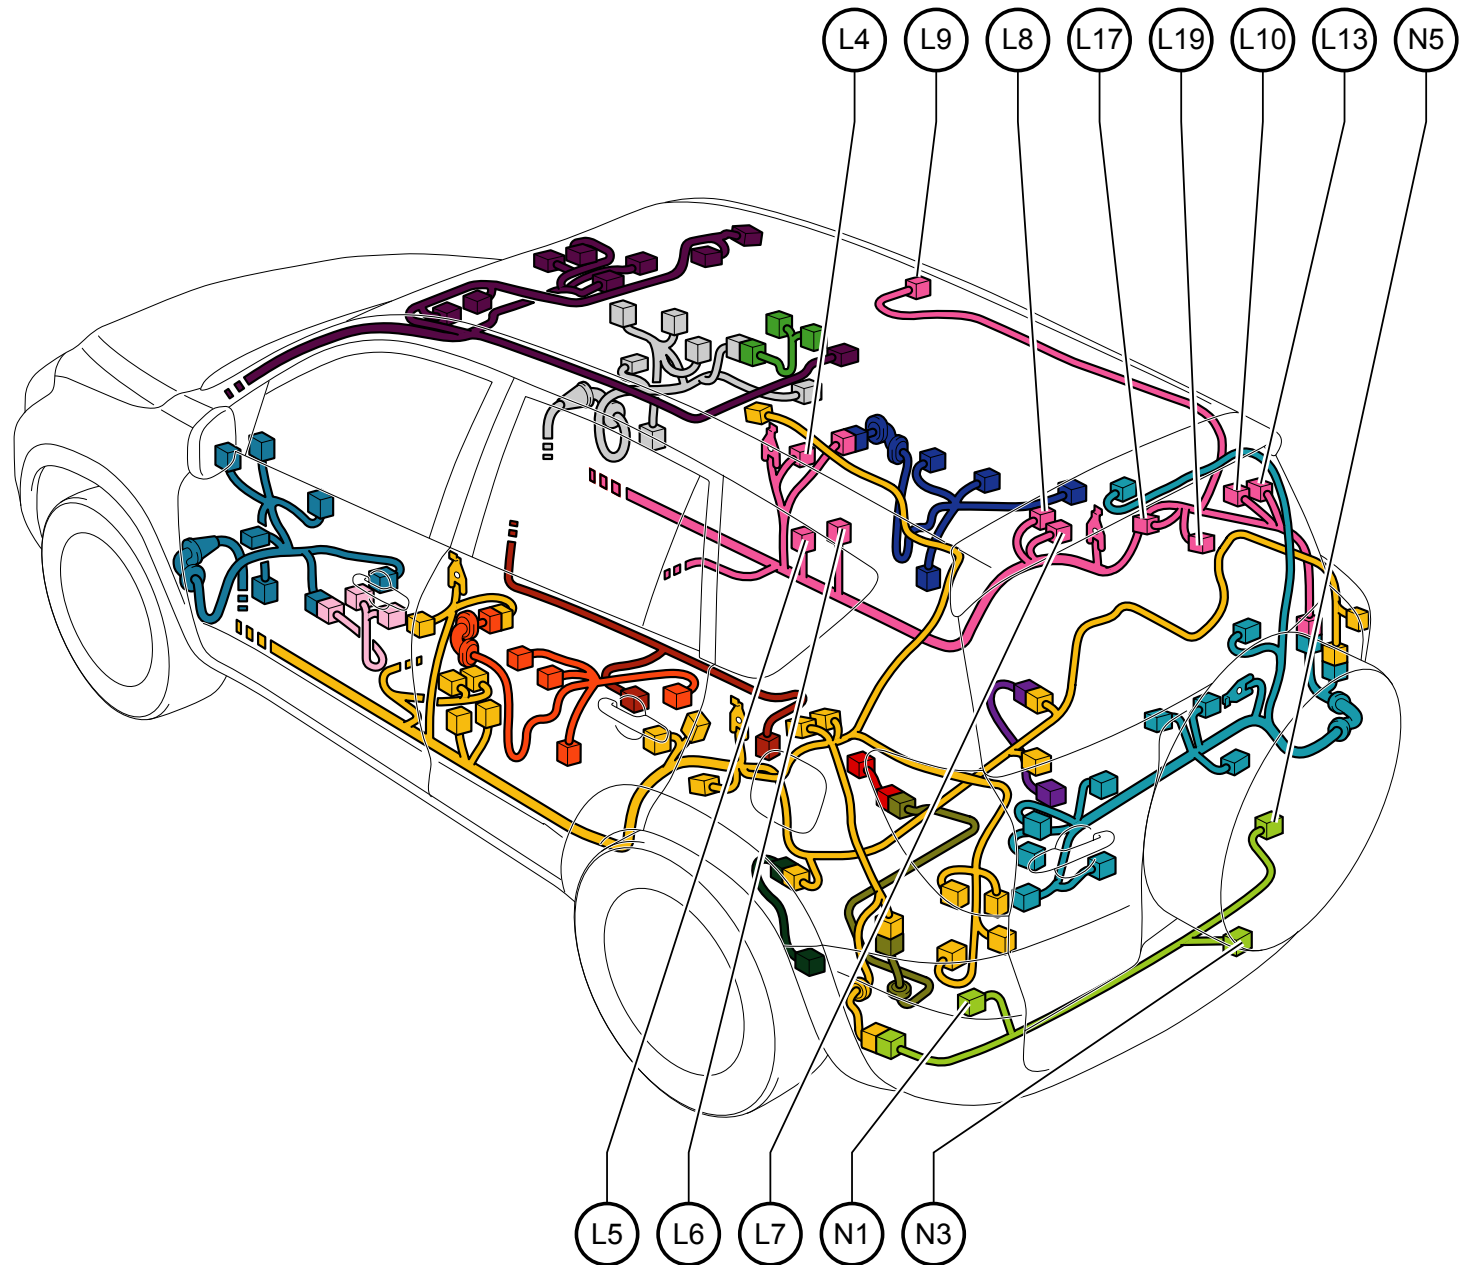


- L 4 Door Courtesy SW (Front RH)
- L 5 Pretensioner (RH)
- L 6 Side Airbag Sensor (Front RH)
- L 7 Door Courtesy SW (Rear RH)
- L 8 Side Airbag Sensor (Rear RH)
- L 9 Curtain Shield Airbag Squib (RH)
- L 10 Door Control Receiver
- L 13 Door Control Receiver
- L 17 Theft Warning Siren
- L 19 Glass Breakage Sensor

- N 1 Rear Fog Light (LH)
- N 3 License Plate Lamp
- N 5 Rear Fog Light (RH)

         Position of Parts in Body <RHD Short Body>

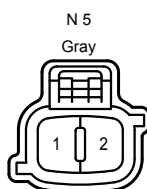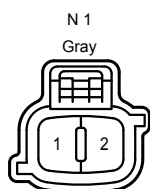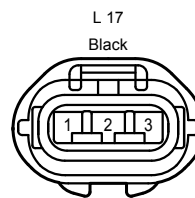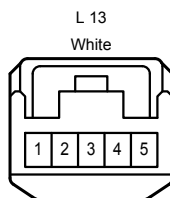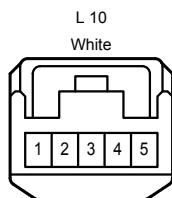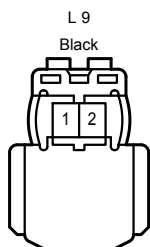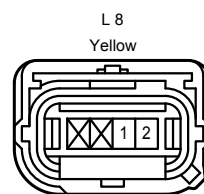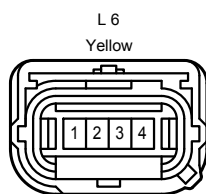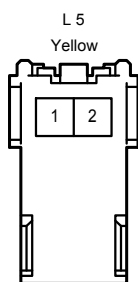

 Position of Parts in Body <RHD Short Body>

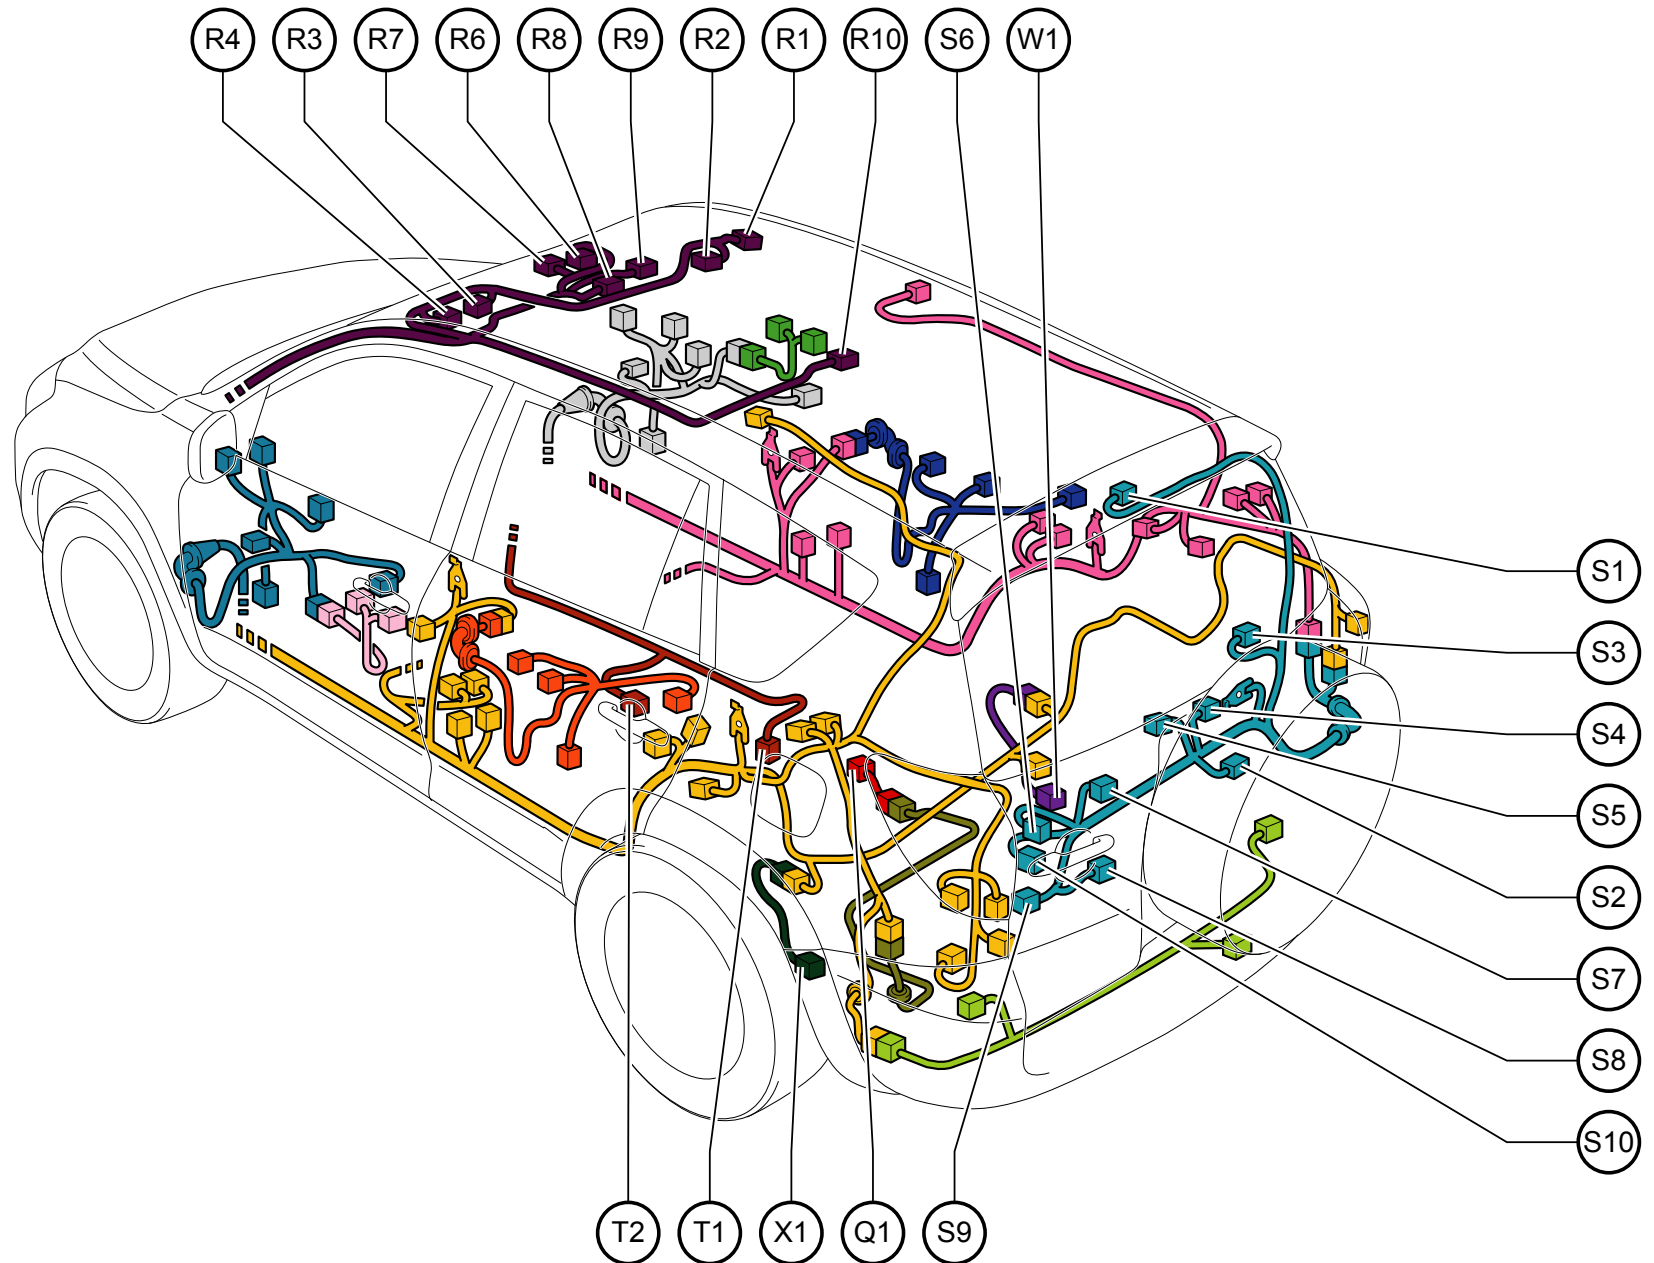

- Q 1 4WD Linear Solenoid

- R 1 Vanity Lamp SW (RH)
- R 2 Vanity Lamp (RH)
- R 3 Vanity Lamp (LH)
- R 4 Vanity Lamp SW (LH)
- R 6 Inner Rear View Mirror
- R 7 Rain Sensor
- R 8 Overhead J/B
- R 9 Sliding Roof Control ECU
- R 10 Room Lamp (Front)

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- S 1 Center Stop Lamp
- S 2 Rear Window Defogger
- S 3 Room Lamp (Rear)
- S 4 Noise Filter (Stop and Rear Window Defogger)
- S 5 Rear Wiper Motor
- S 6 License Plate Lamp (RH)
- S 6 License Plate Lamp (RH)
- S 7 Television Camera (Rear)
- S 8 Electrical Key Oscillator (Back Door)
- S 9 Door Outside Handle (Back Door)
- S 10 Back Door Lock Assembly

 
- T 1 Fuel Suction Pump
- T 2 Fuel Sender Gage

- W 1 Speed Sensor (Rear RH)


- X 1 Speed Sensor (Rear LH)





Position of Parts in Body <RHD Short Body>

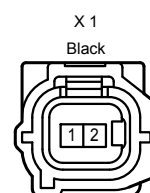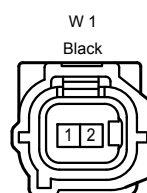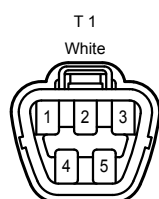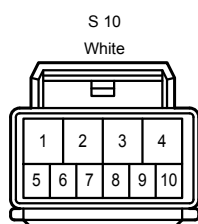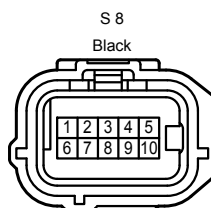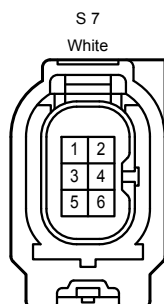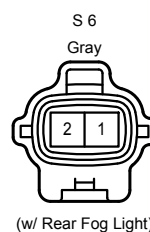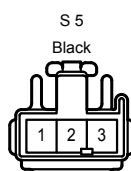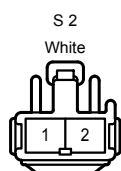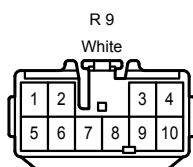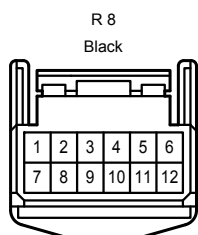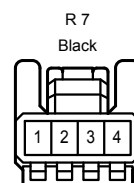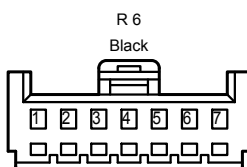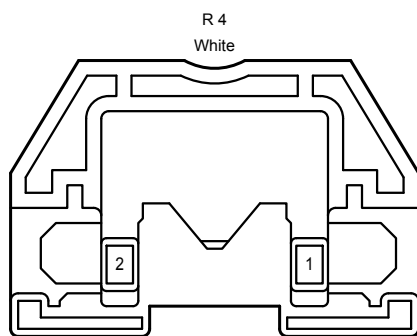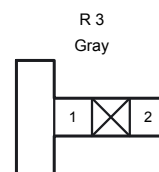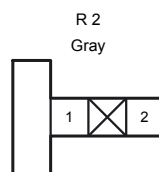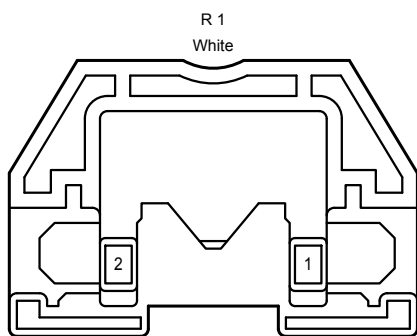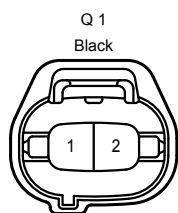


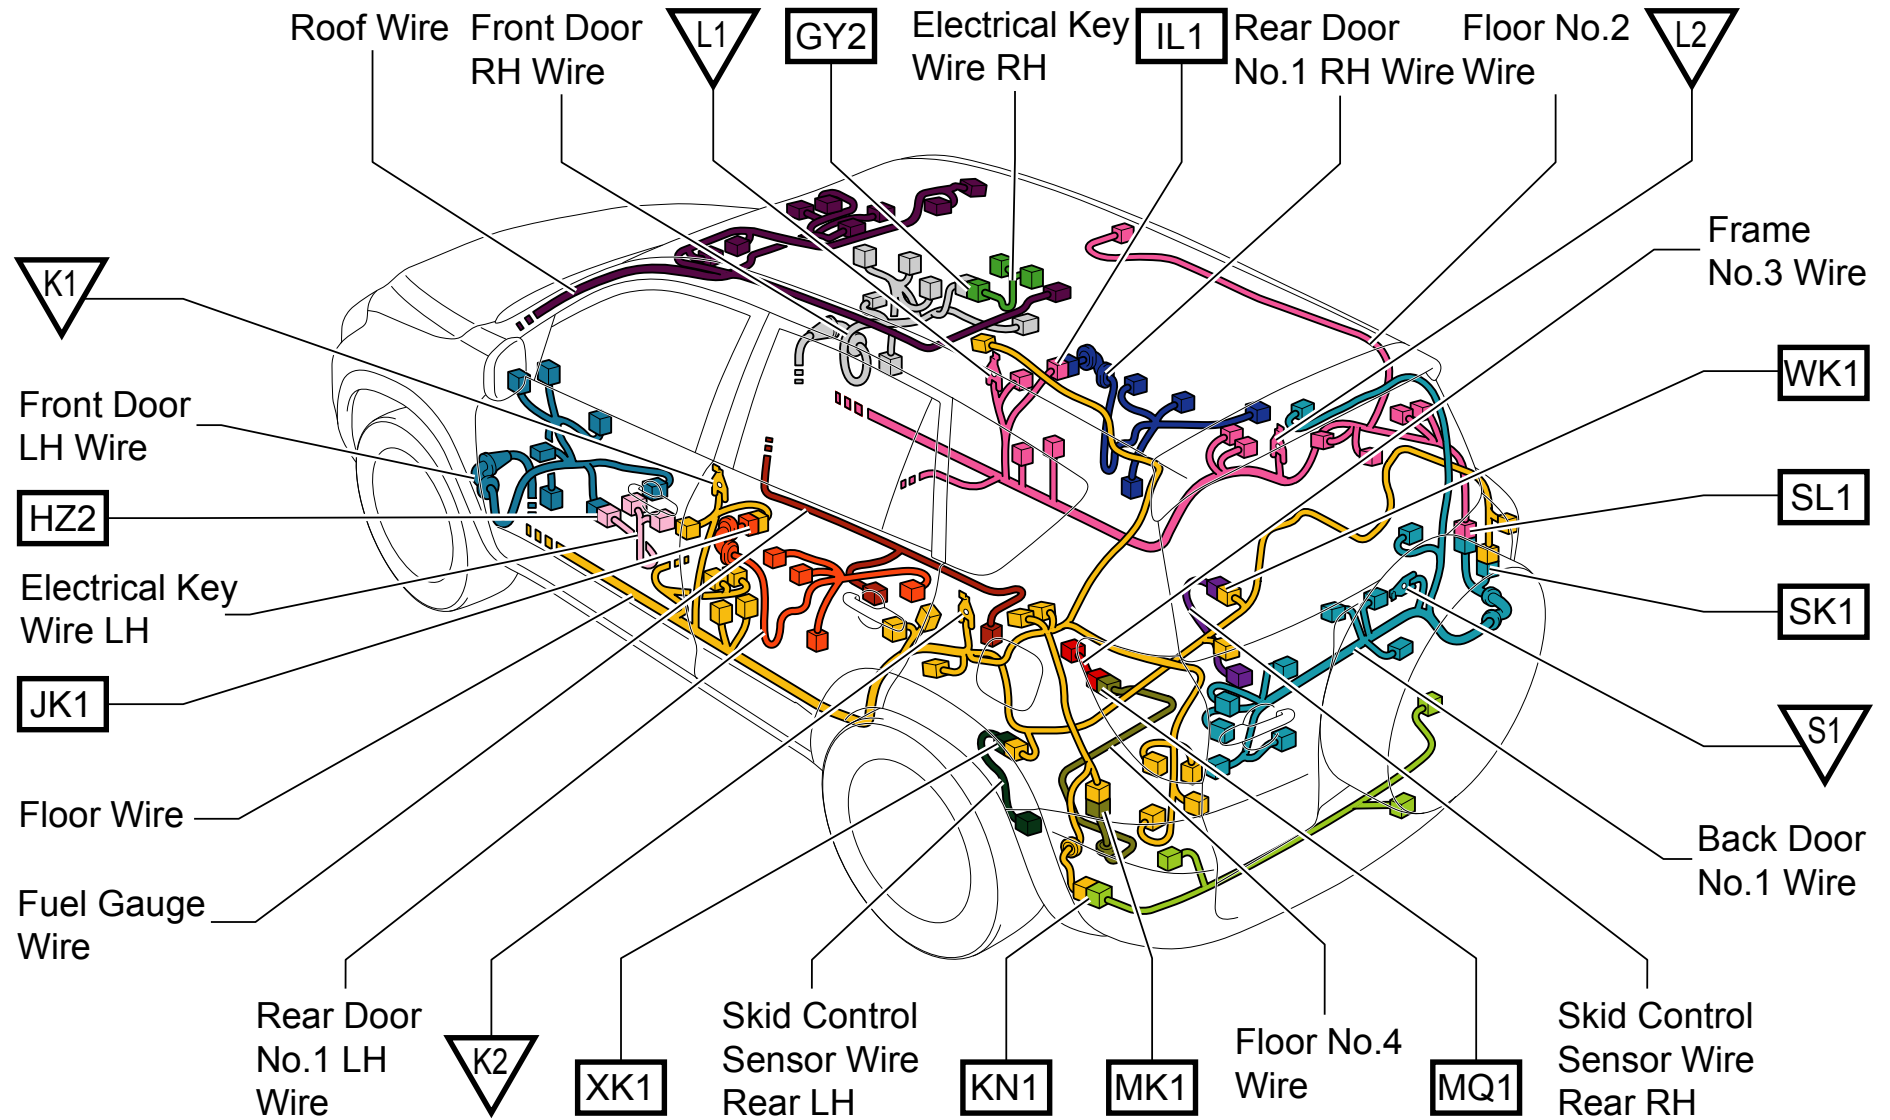


       Wire and Wire , Ground Points in Body <RHD Short Body>

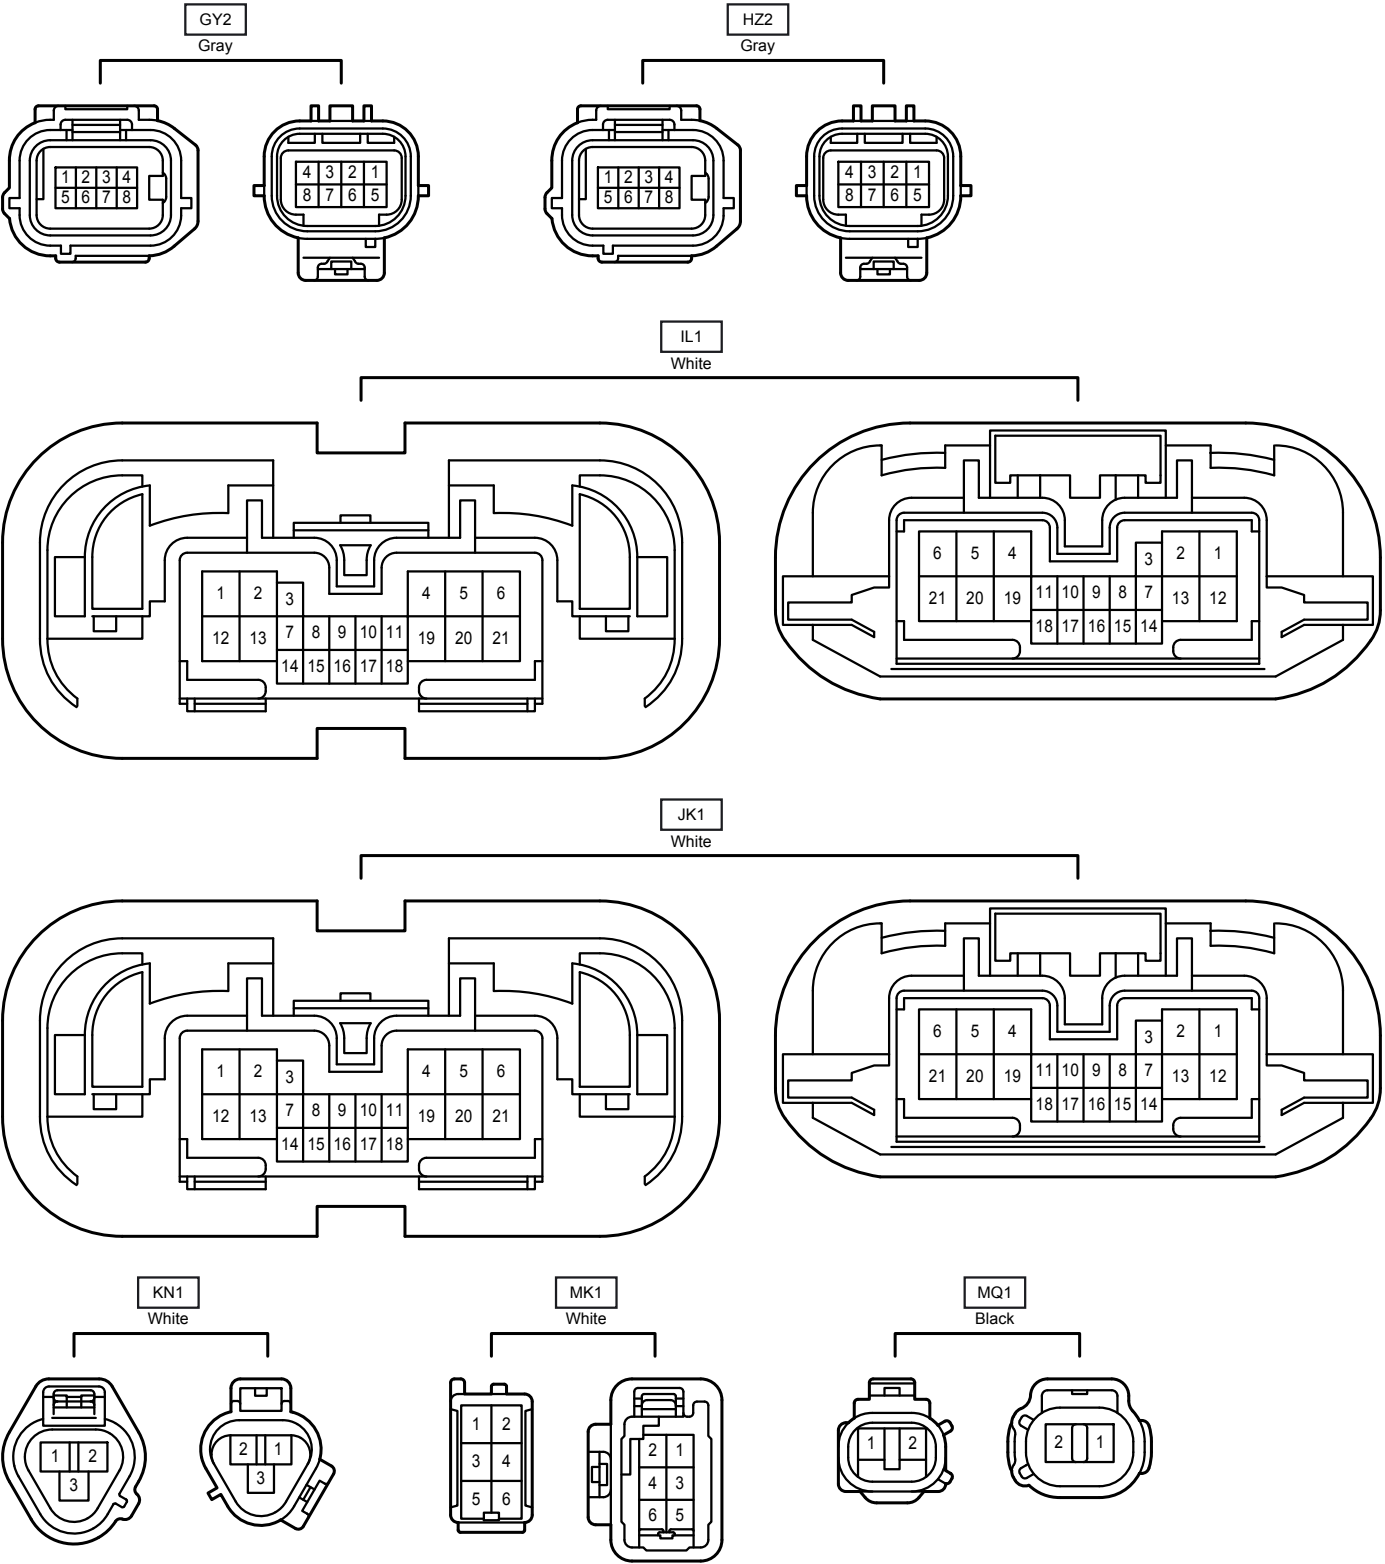




















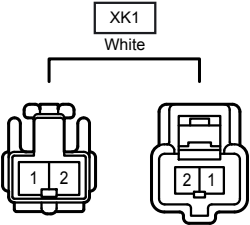
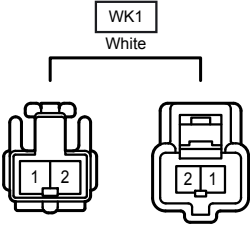
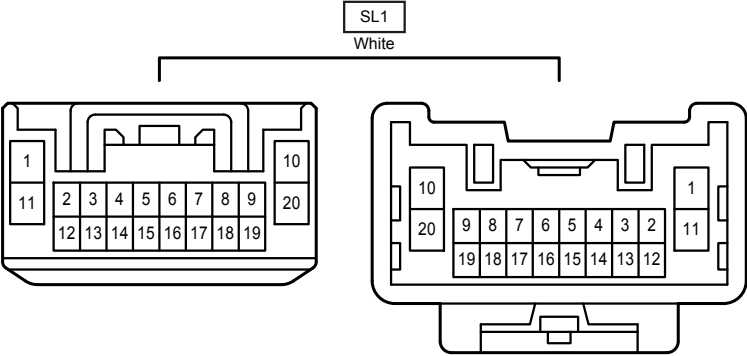
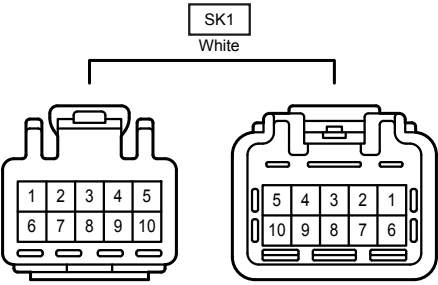


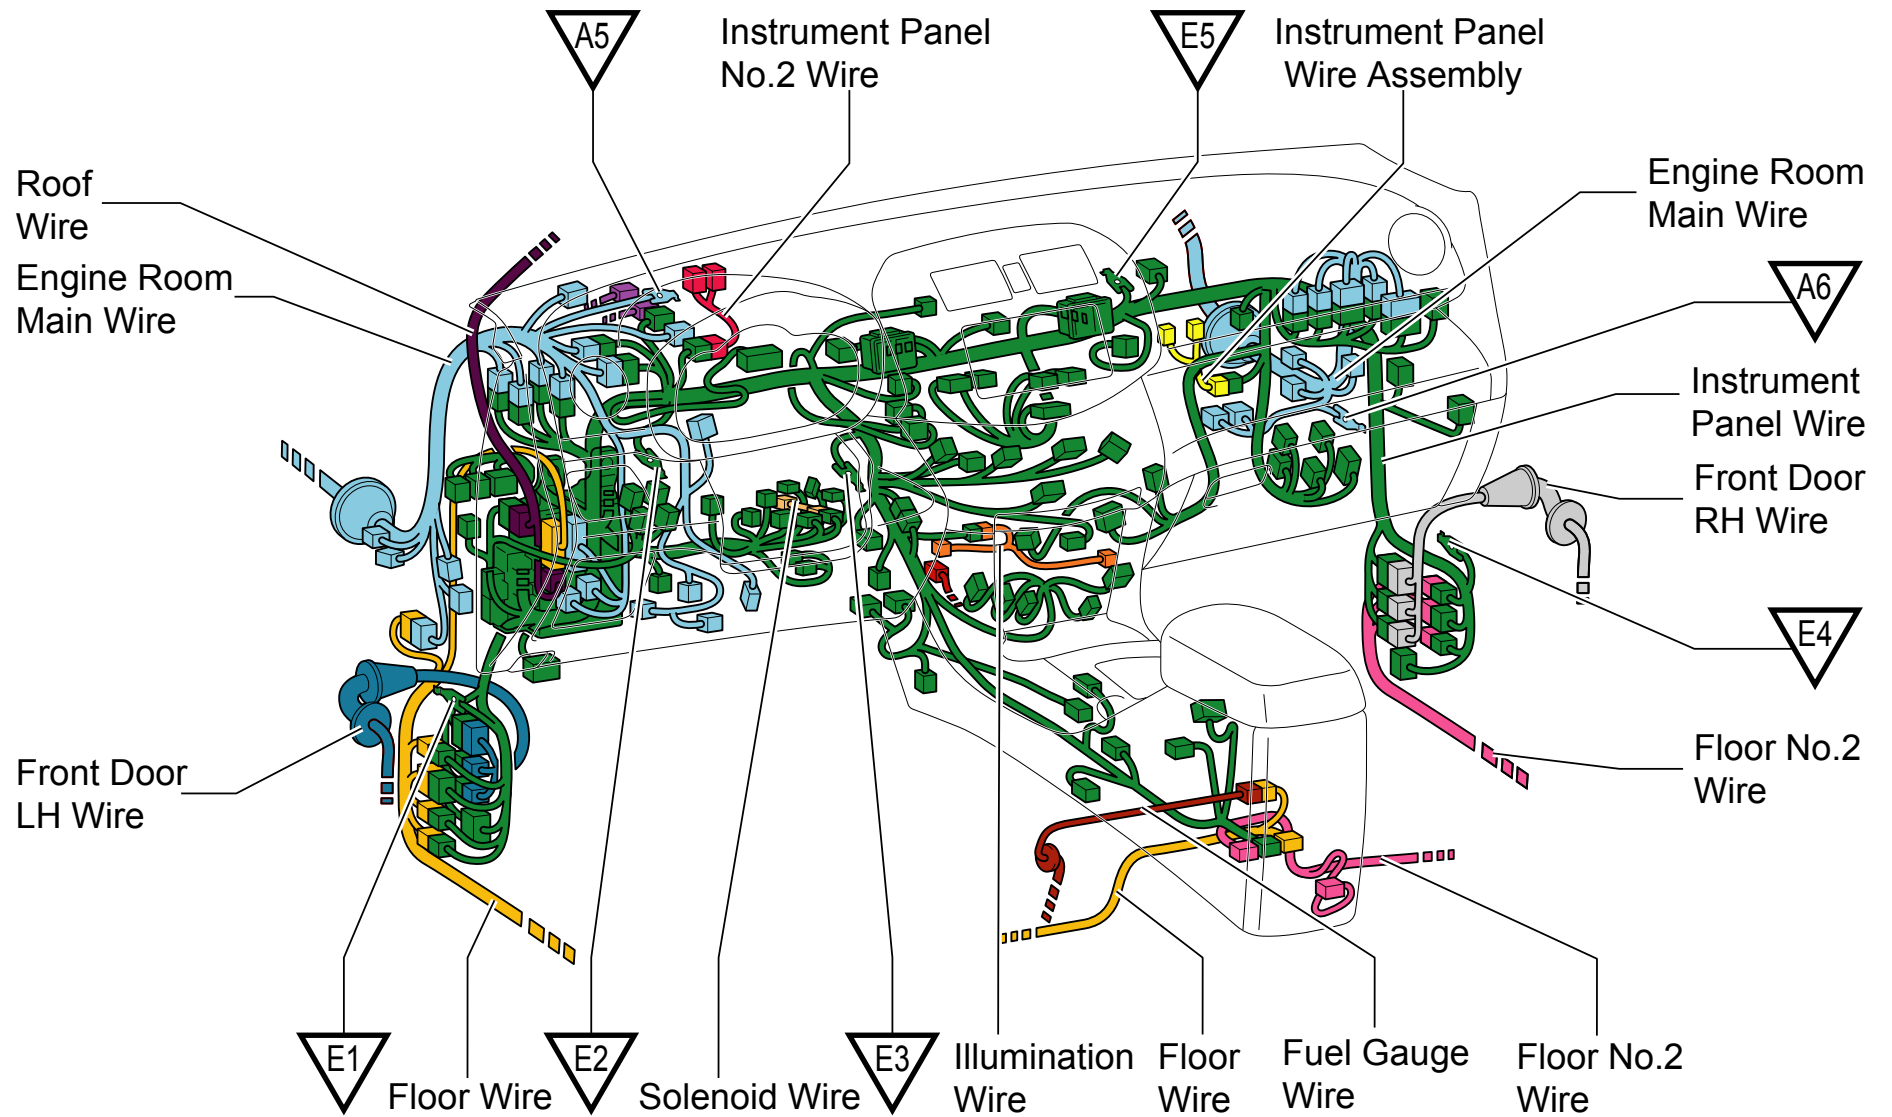

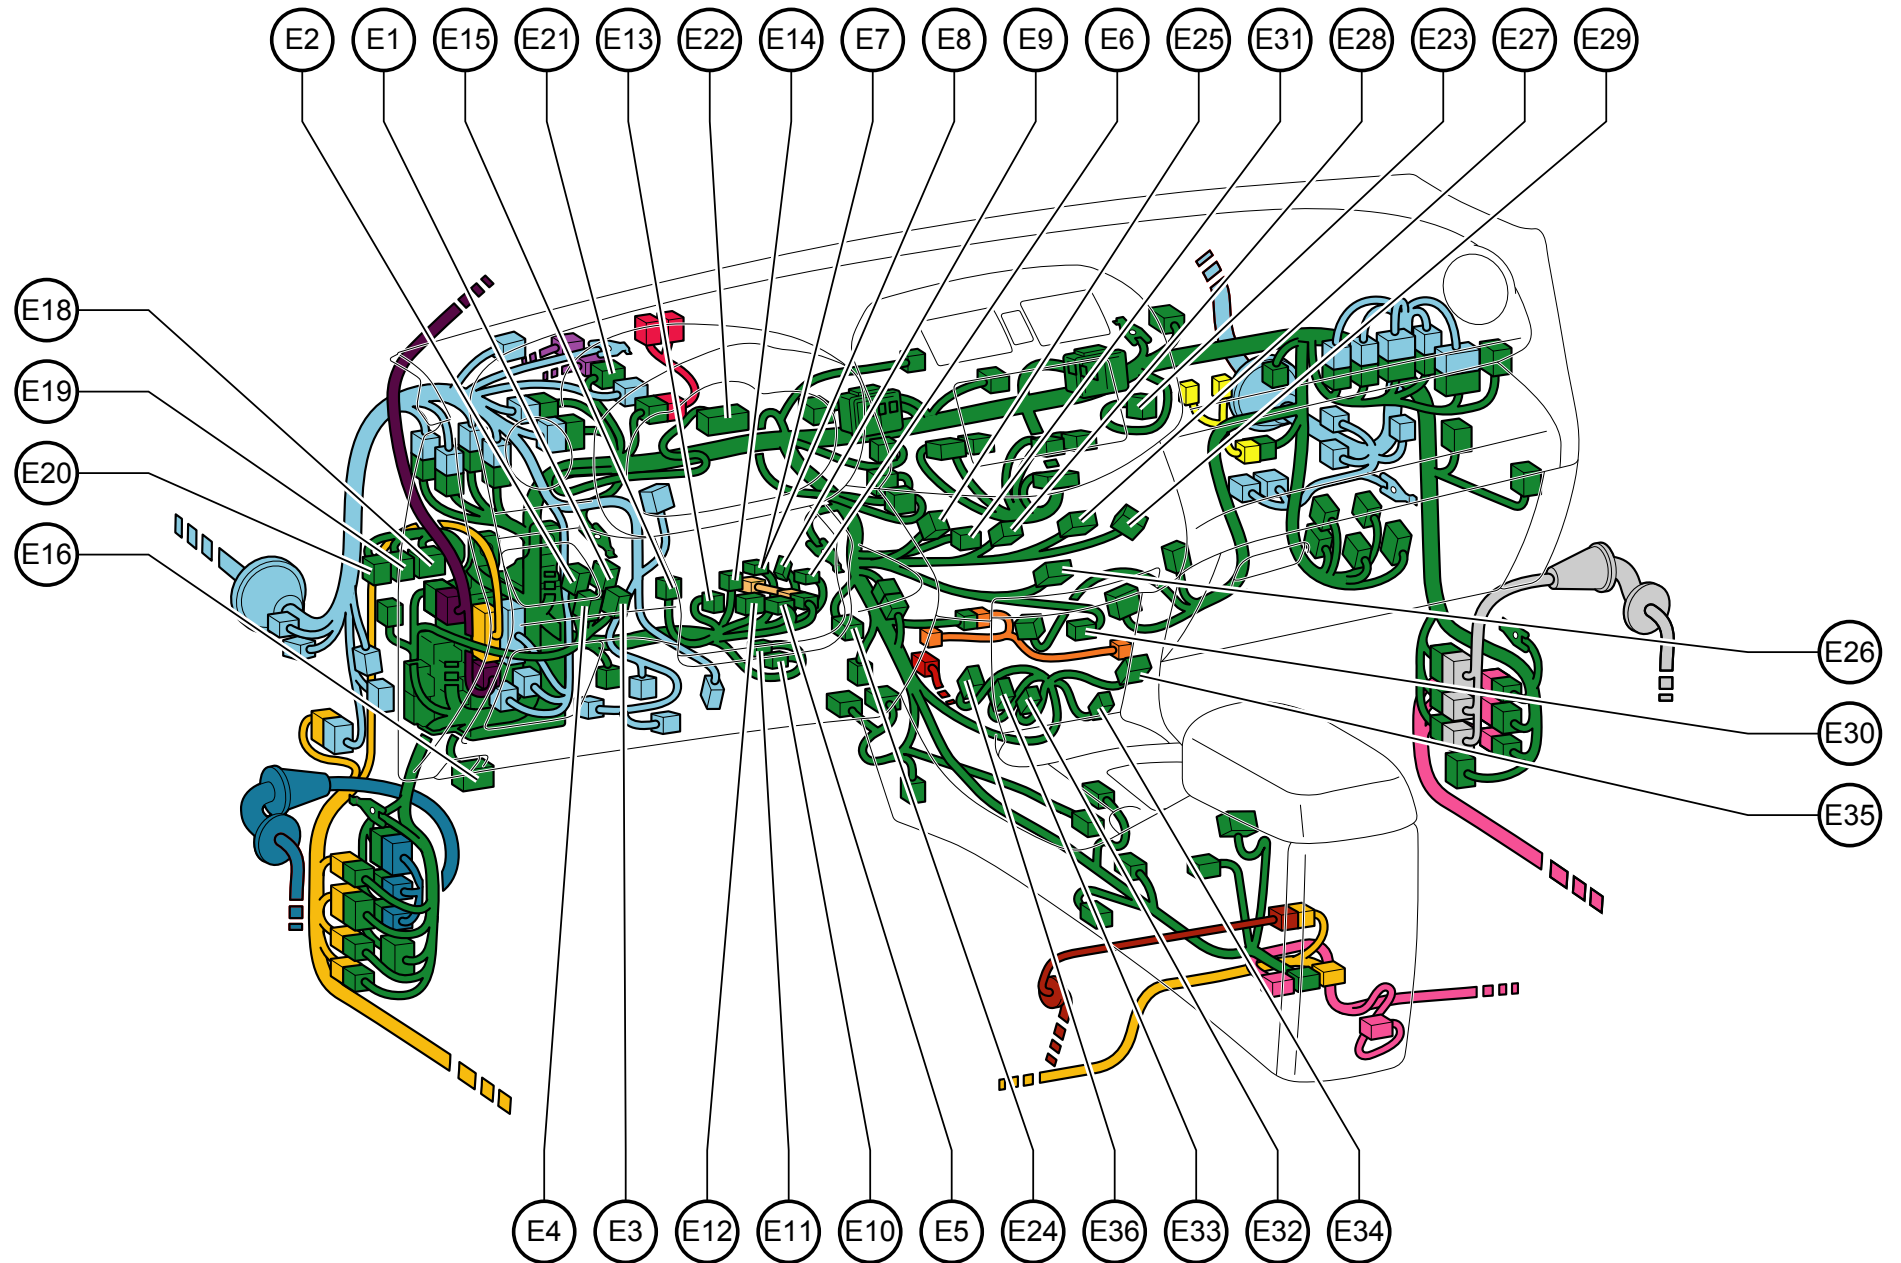


- E 1 Power Heater SW
- E 2 Light Control Rheostat
- E 3 Headlamp Leveling SW
- E 4 Headlamp Cleaner SW
- E 5 Ignition SW
- E 6 Steering Lock ECU
- E 7 Ignition Key Cylinder Lamp
- E 8 Transponder Key Amplifier
- E 9 Unlock Warning SW
- E 10 Spiral Cable
- E 11 Airbag Squib (Steering Wheel Pad)
- E 12 Windshield Wiper SW Assembly
- E 13 Windshield Wiper SW Assembly
- E 14 Steering Sensor
- E 15 Headlamp Dimmer SW Assembly
- E 16 DLC3
- E 18 Main Body ECU
- E 19 Main Body ECU
- E 20 Main Body ECU
- E 21 Power Steering ECU
- E 22 Combination Meter
- E 23 Hazard Warning Signal SW
- E 24 A/C Room Temp. Sensor
- E 25 Clock
- E 26 Integration Control and Panel Assembly
- E 27 Integration Control and Panel Assembly
- E 28 Air Inlet Control SW
- E 29 A/C SW , Max Hot SW
- E 30 Front Console Illumination
- E 31 Power SW
- E 32 Front Wiper Deicer SW
- E 33 Seat Heater SW
- E 34 Cigarette Lighter Illumination
- E 35 Cigarette Lighter
- E 36 Downhill Assist Control SW

                       Position of Parts in Instrument Panel <LHD>

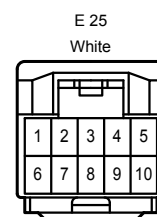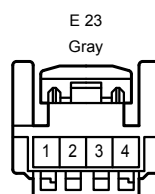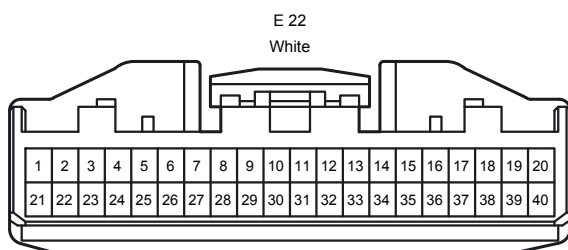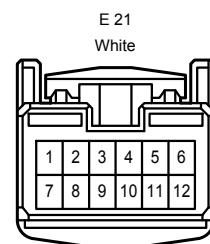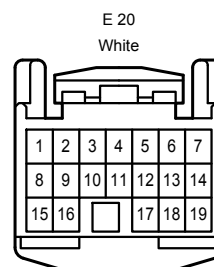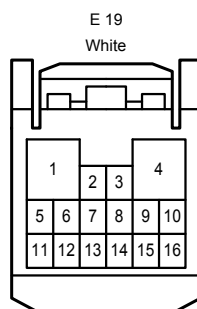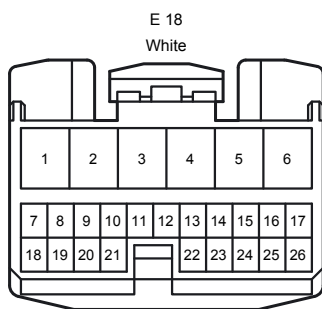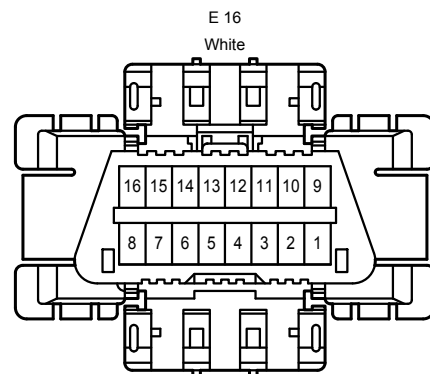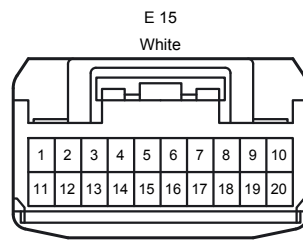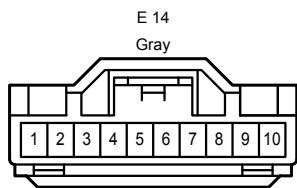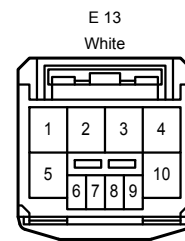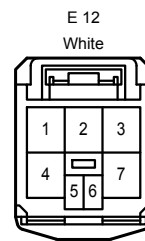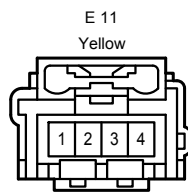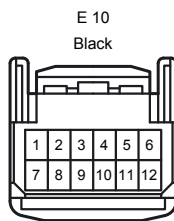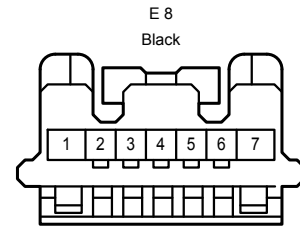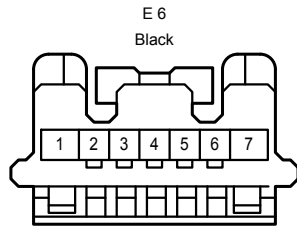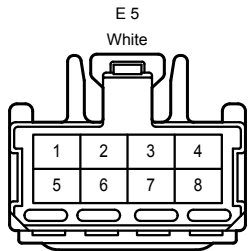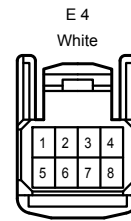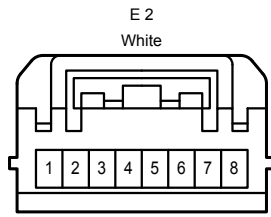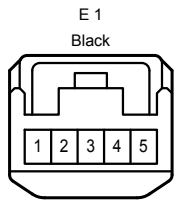


Position of Parts in Instrument Panel <LHD>

 
E 26
White

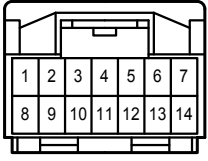


E 27
Black

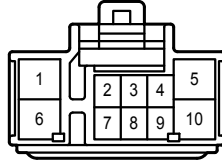 

E 28
Black

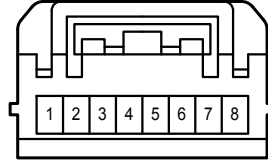 


E 29
Black

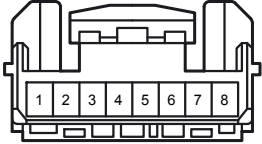 


E 30
White



 
E 31
Black

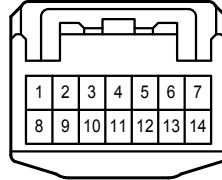

E 32
White

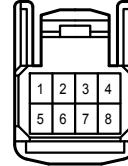 


E 33
Black

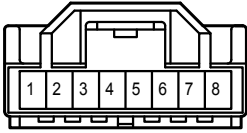 


E 34
Gray




 E 35
White





E 36
Gray

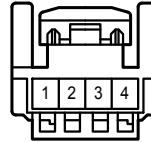 

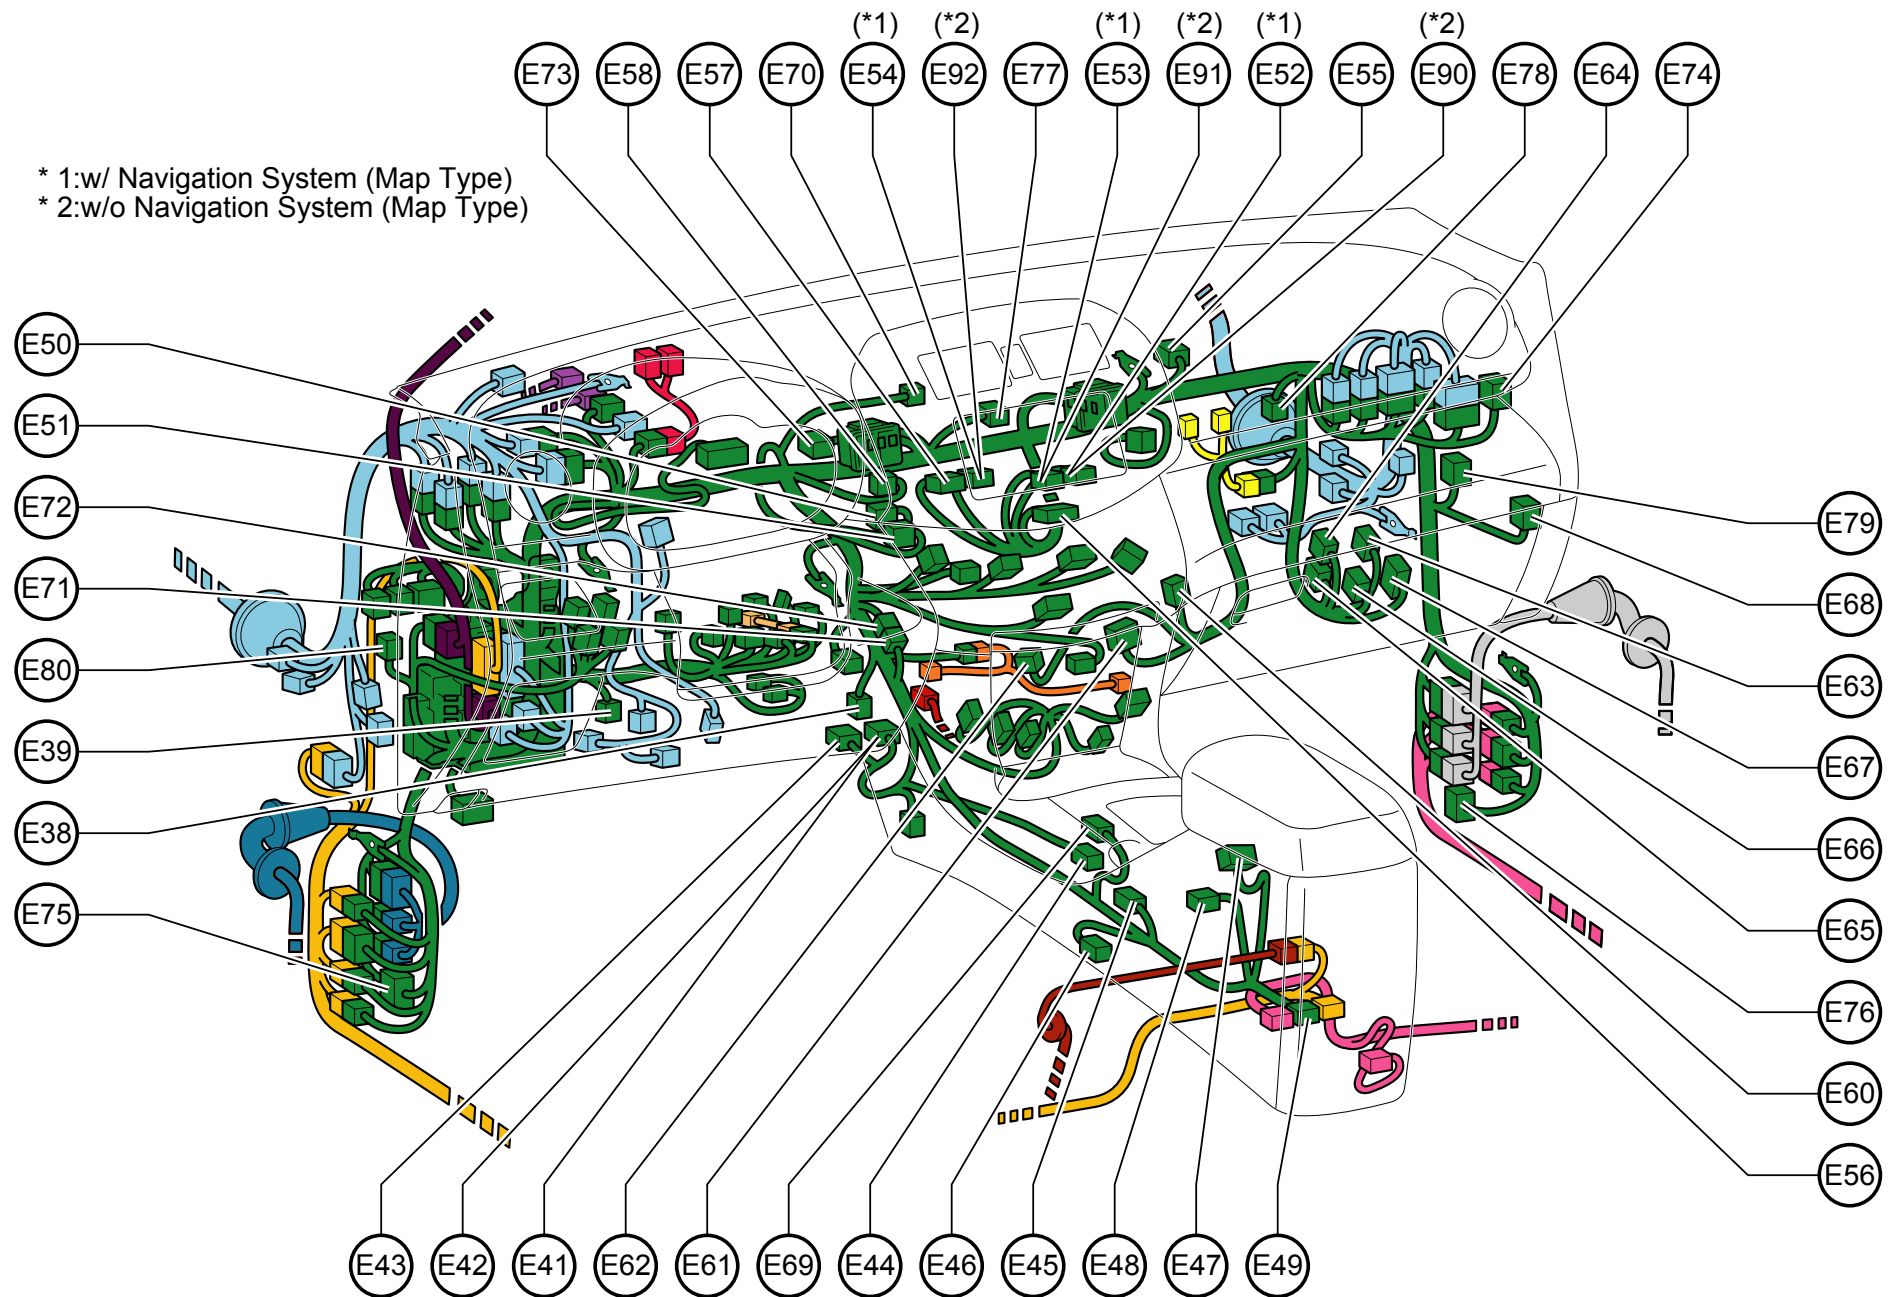 


- E 38 A/C Evaporator Temp. Sensor
- E 39 Knee Airbag Squib
- E 41 A/C Amplifier
- E 42 A/C Amplifier
- E 43 A/C Amplifier
- E 44 Shift Lock Control ECU
- E 45 Transmission Control SW
- E 46 Parking Brake SW
- E 47 Outer Mirror SW
- E 48 Power Outlet Socket (Front)
- E 49 Airbag Sensor Assembly Center
- E 50 Transponder Key ECU
- E 51 ID Code Box
- E 52 Navigation Receiver Assembly
- E 53 Navigation Receiver Assembly
- E 54 Navigation Receiver Assembly
- E 55 Antenna Amplifier
- E 56 Navigation Receiver Assembly
- E 57 Navigation Receiver Assembly
- E 58 4WD Control SW
- E 60 Blower Motor
- E 61 Blower Motor
- E 62 Blower Resistor
- E 63 Certification ECU
- E 64 Tire Pressure Warning ECU and Receiver
- E 65 Tire Pressure Warning ECU and Receiver
- E 66 Auto Wiper Relay
- E 67 4WD Control ECU
- E 68 Airbag Cut Off SW
- E 69 A/T Shift Lever Illumination
- E 70 Air Inlet Control Servo Motor
- E 71 Short Connector
- E 72 Short Connector
- E 73 Junction Connector
- E 74 Junction Connector
- E 75 Junction Connector
- E 76 Junction Connector
- E 77 Junction Connector
- E 78 Diode (Rear Wiper)
- E 79 Junction Connector
- E 80 Junction Connector
- E 90 Radio Receiver Assembly
- E 91 Radio Receiver Assembly
- E 92 Radio Receiver Assembly














 
 
Position of Parts in Instrument Panel <LHD>

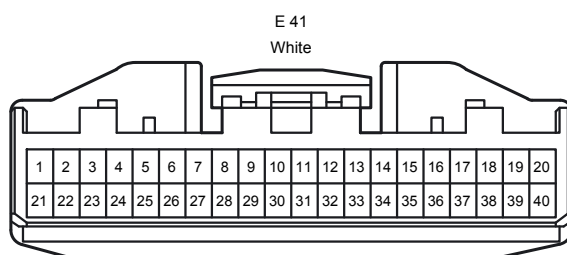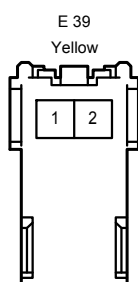






















(Automatic A/C)

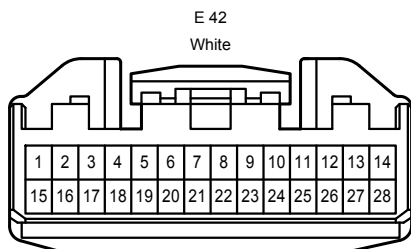 


(Manual A/C)

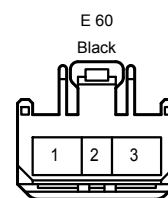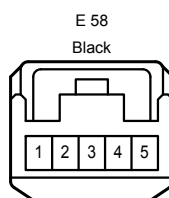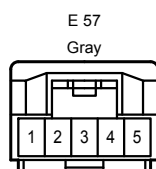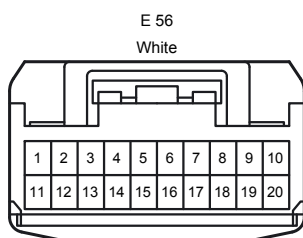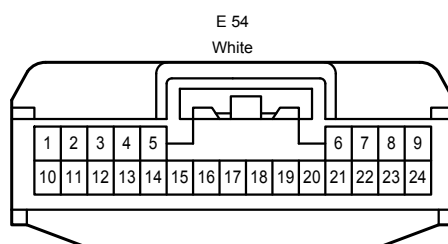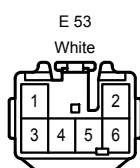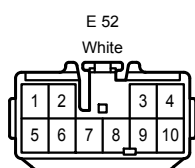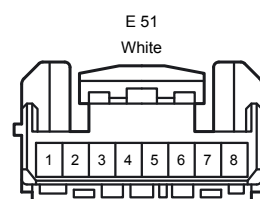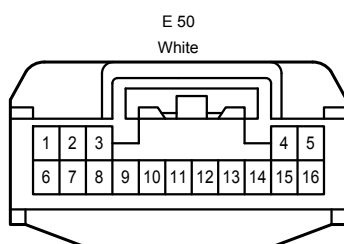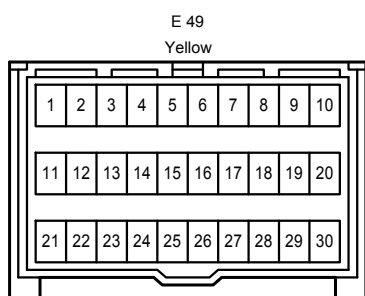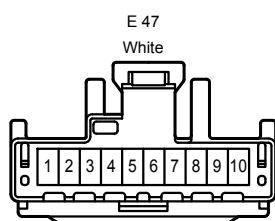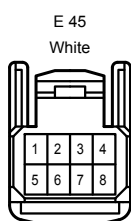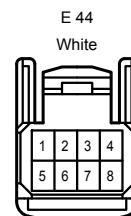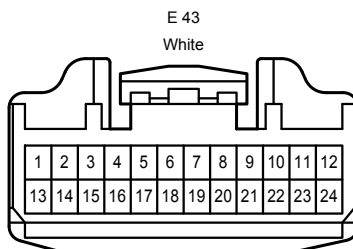               

       
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
Position of Parts in Instrument Panel <LHD>

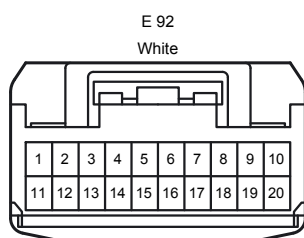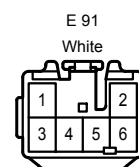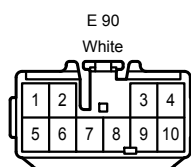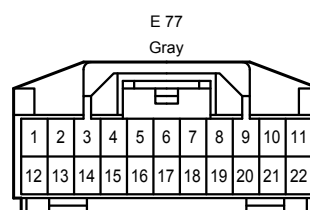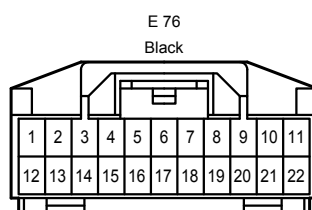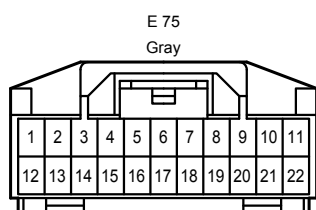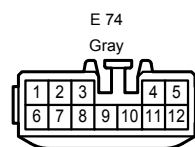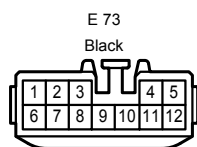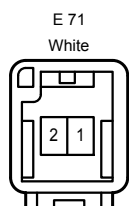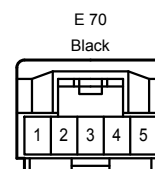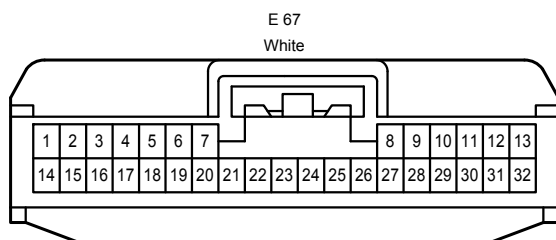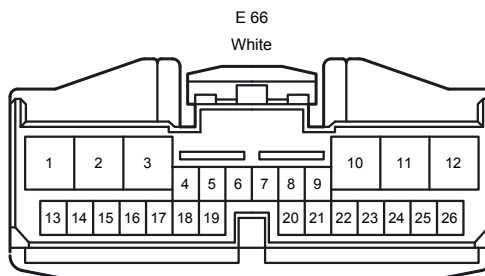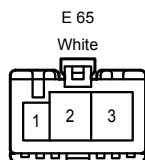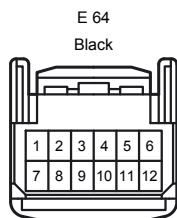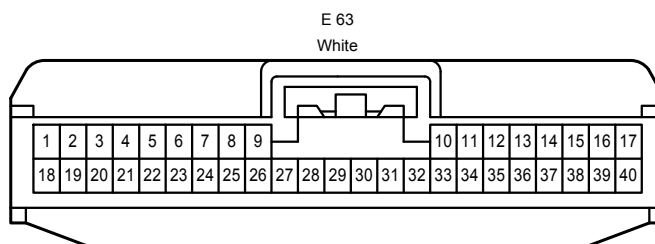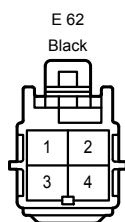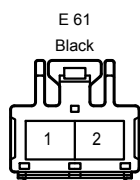


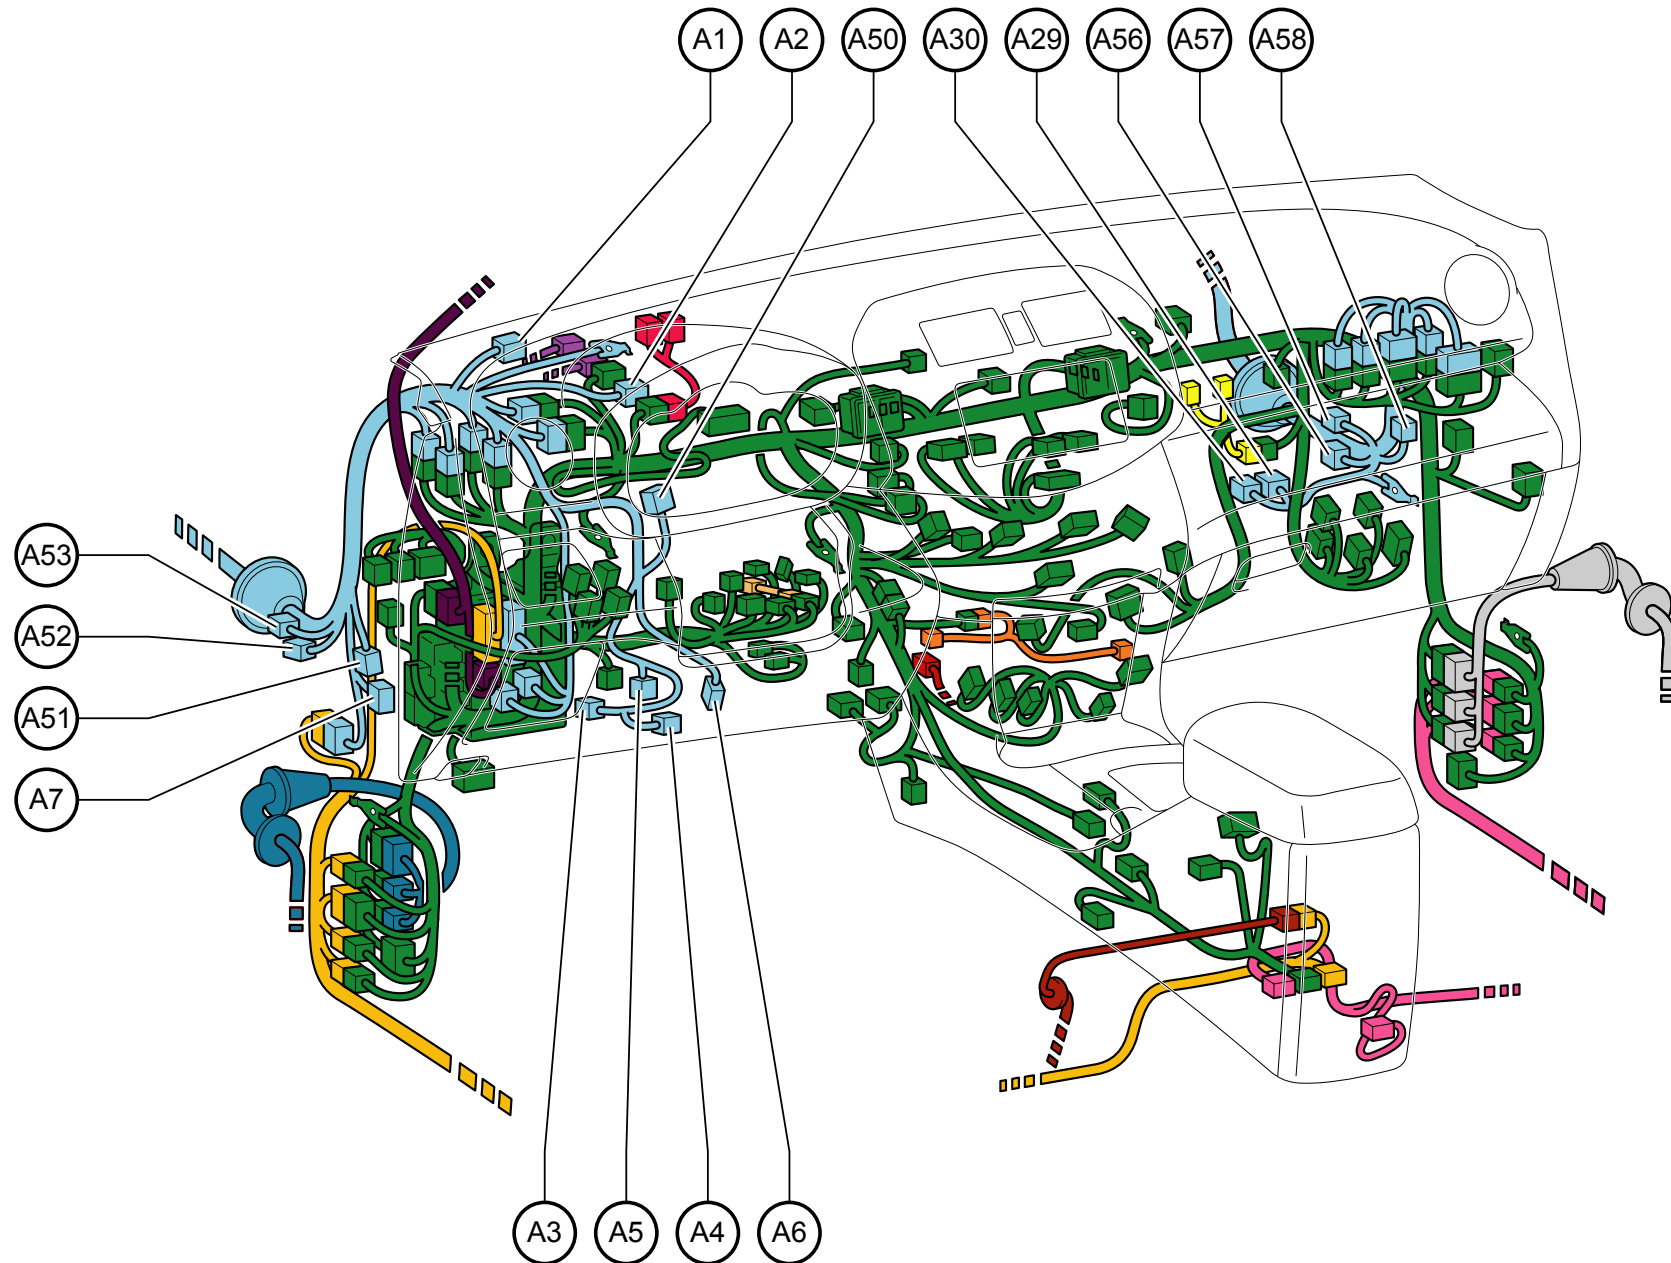

- A 1 Cruise Control Clutch SW
- A 2 Power Steering ECU
- A 3 Brake Pedal Load Sensing SW
- A 4 Clutch Start SW
- A 5 Stop Lamp SW
- A 6 Accelerator Position Sensor
- A 7 Option Connector
- A 29 PTC Heater
- A 30 PTC Heater
- A 50 Junction Connector
- A 51 Junction Connector
- A 52 Junction Connector
- A 53 Junction Connector
- A 56 Diode (Power Heater)
- A 57 Resistor
- A 58 Resistor

                 Position of Parts in Instrument Panel <LHD>

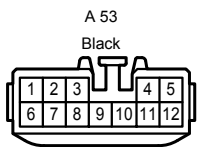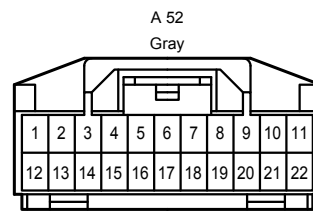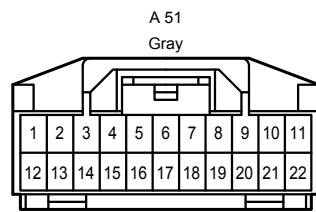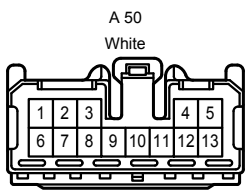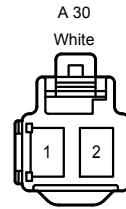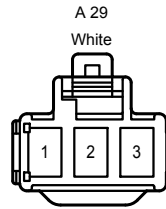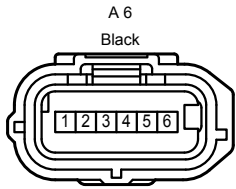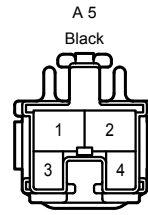

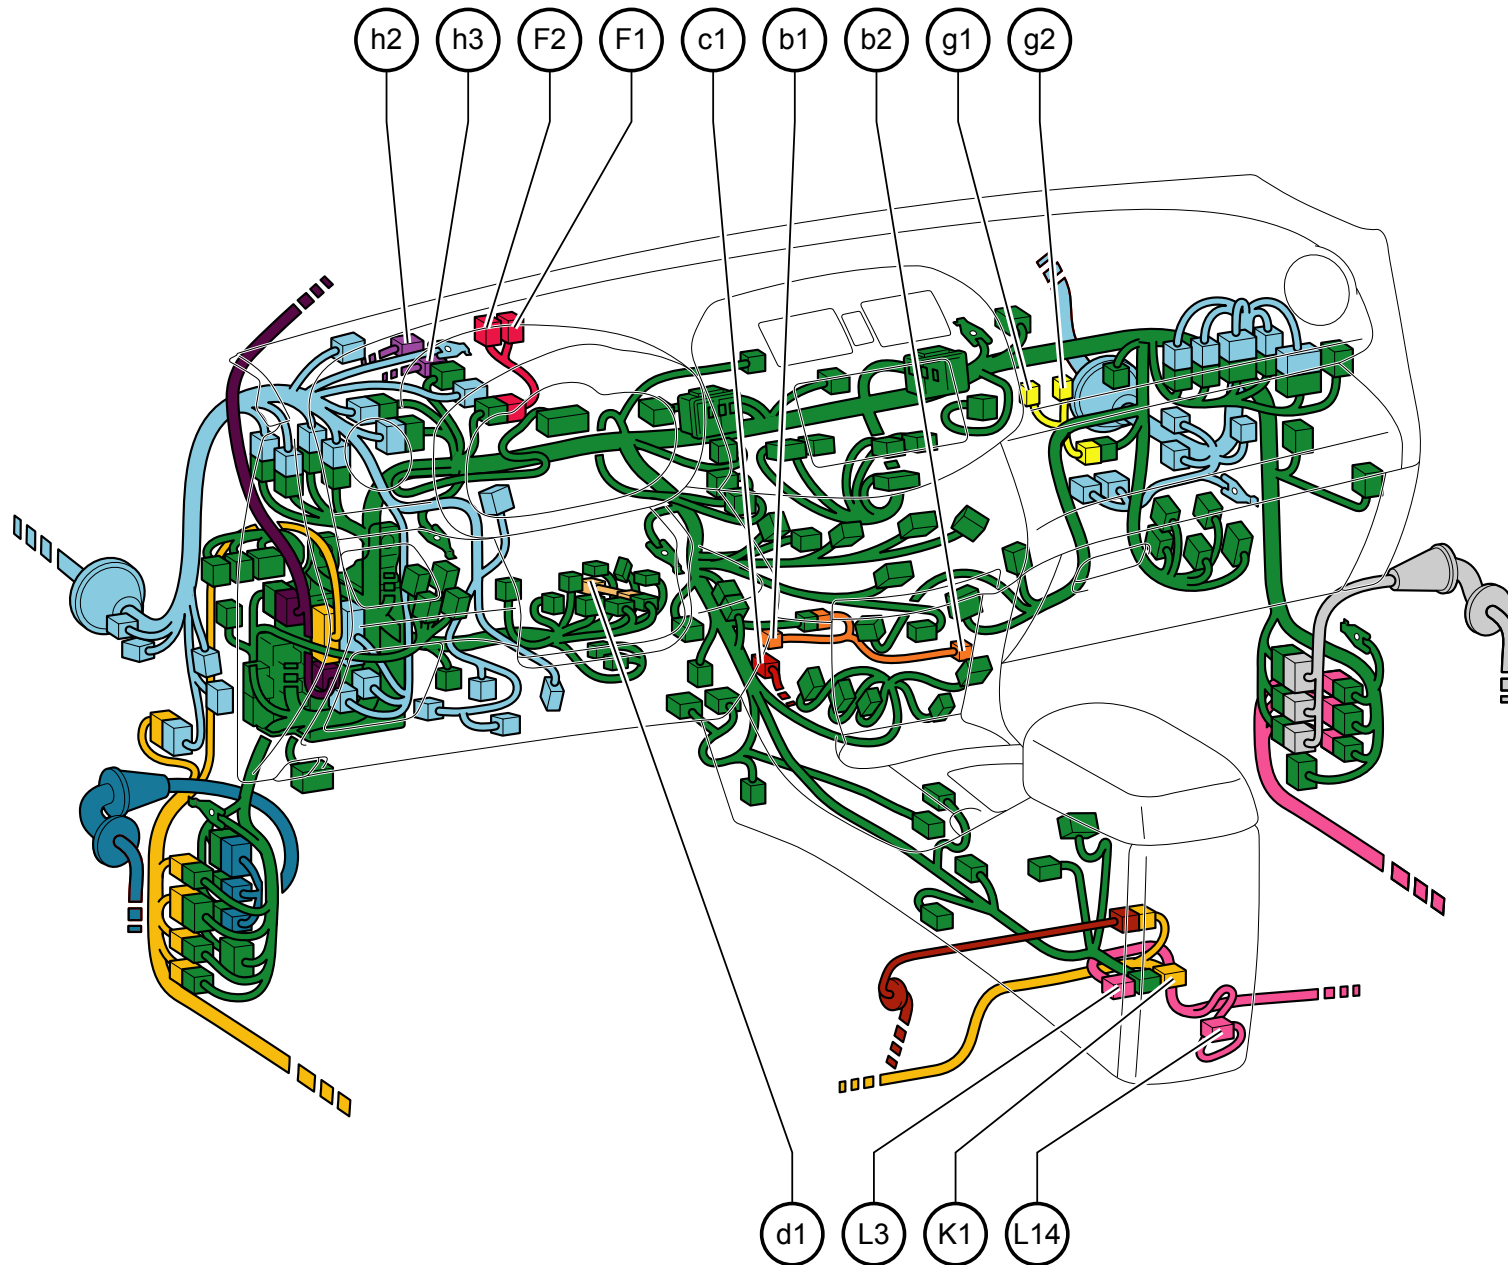

- F 1 A/C Solar Sensor
- F 2 Automatic Light Control Sensor

- K 1 Airbag Sensor Assembly Center

- L 3 Airbag Sensor Assembly Center
- L 14 Electrical Key Oscillator (Front)

- b 1 Foot Lamp (Front LH)
- b 2 Foot Lamp (Front RH)

 
 
 
 
 
 
 
 
 
 
 
- c 1 A/C Amplifier , A/C Blower Assembly

 
- d 1 Key Interlock Solenoid

- g 1 Airbag Squib (Front Passenger's Airbag Assembly)
- g 2 Airbag Squib (Front Passenger's Airbag Assembly)


- h 2 Power Steering ECU , Power Steering Torque Sensor
- h 3 Power Steering ECU , Rotation Angle Sensor

Position of Parts in Instrument Panel <LHD>

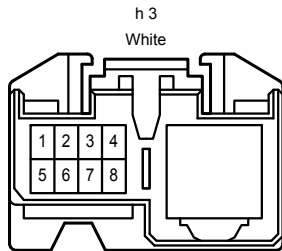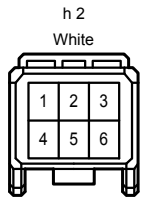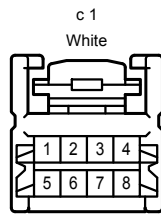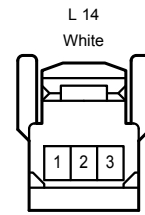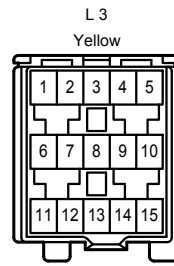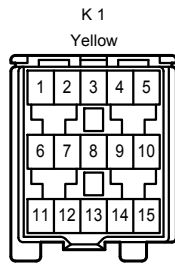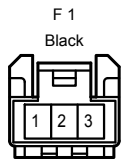


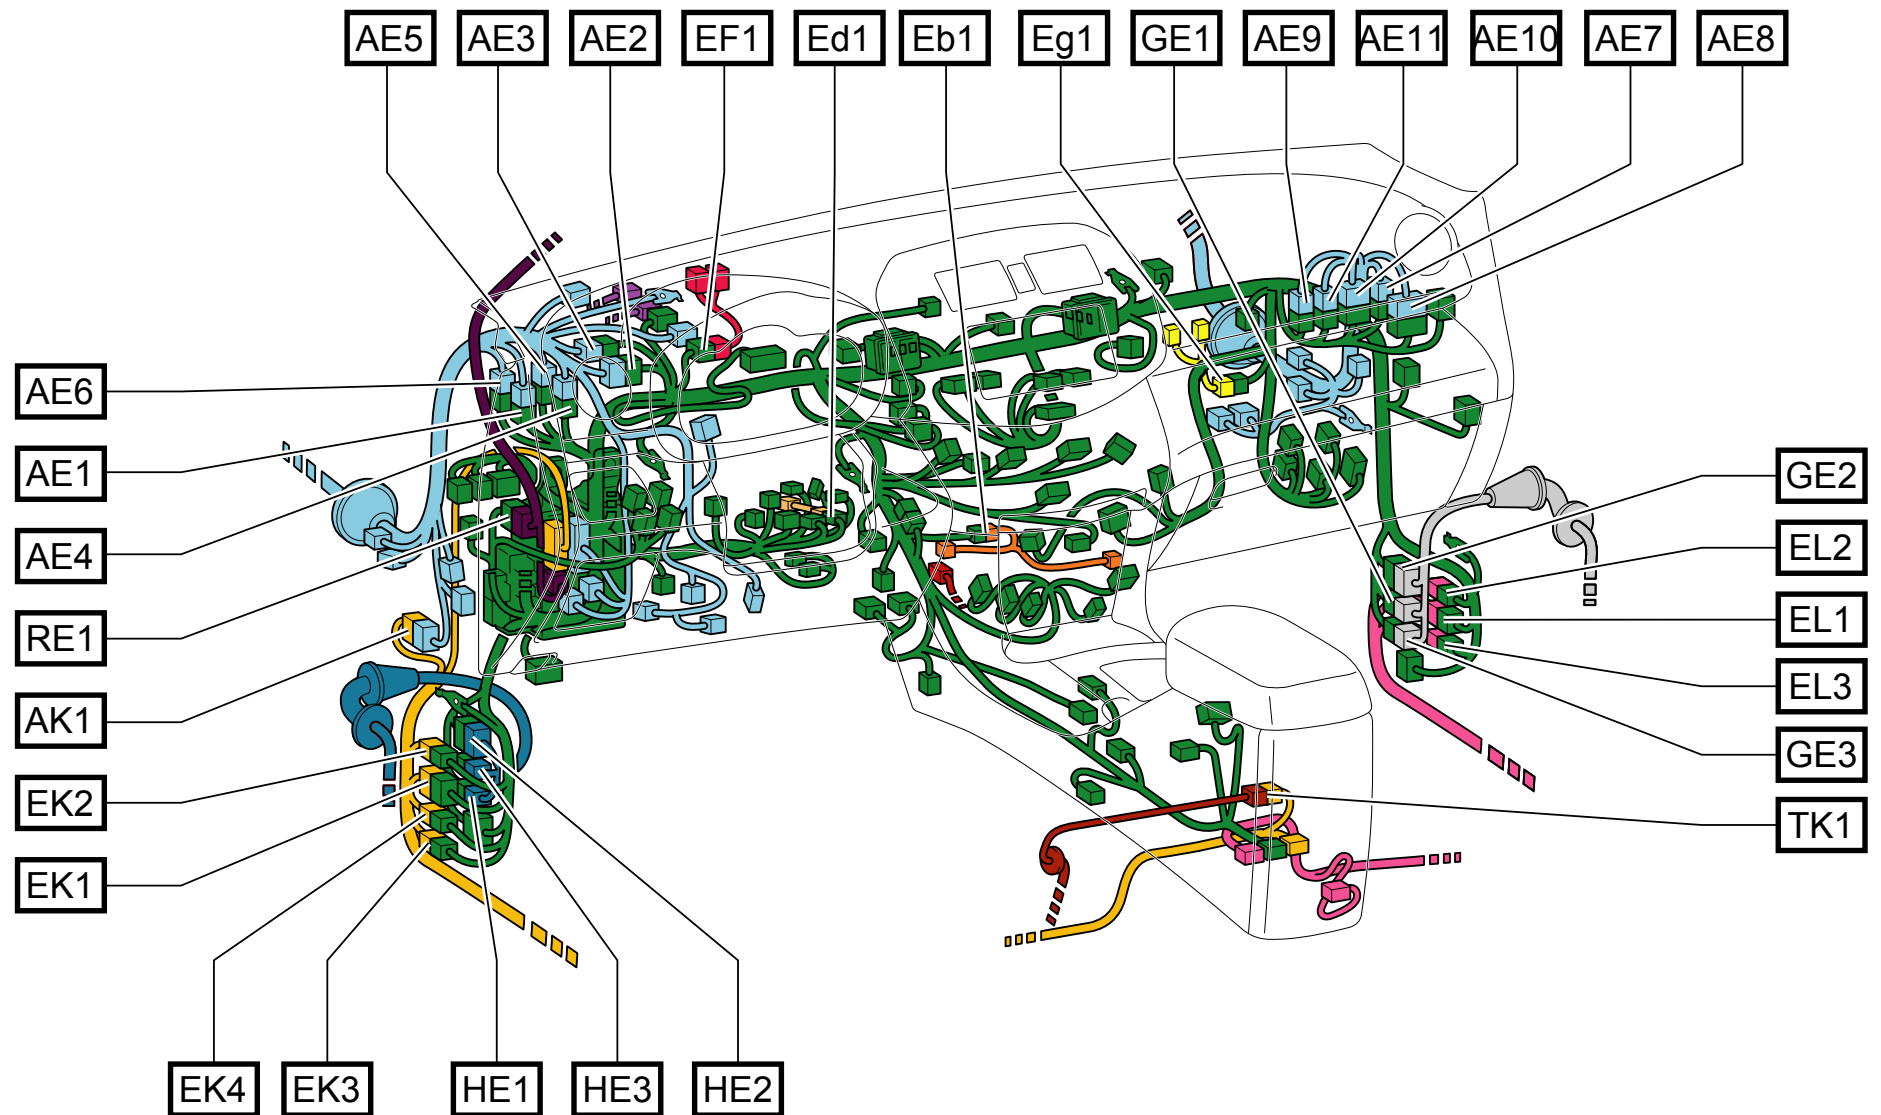


AE1
White

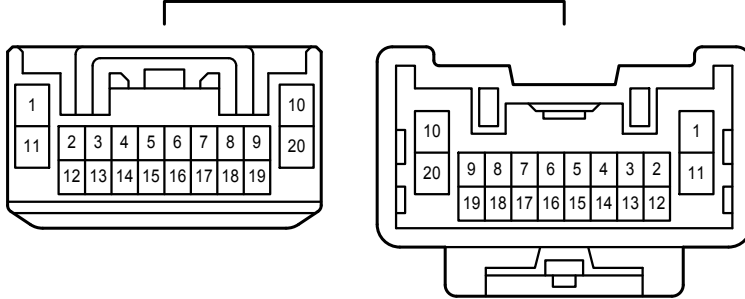 


AE2
White

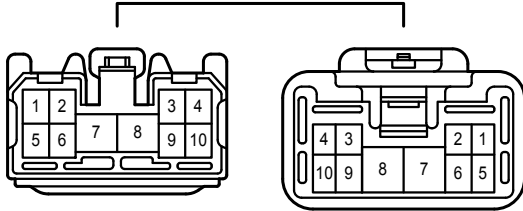 


AE3
Black

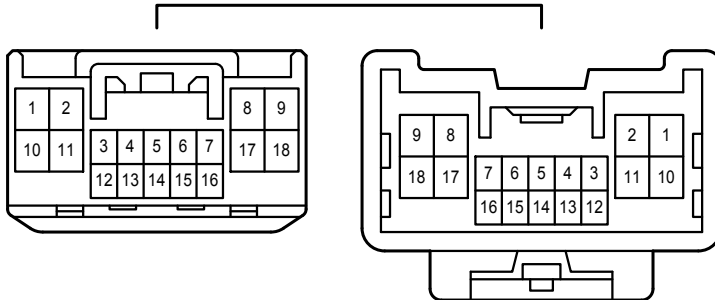 


AE4
Gray

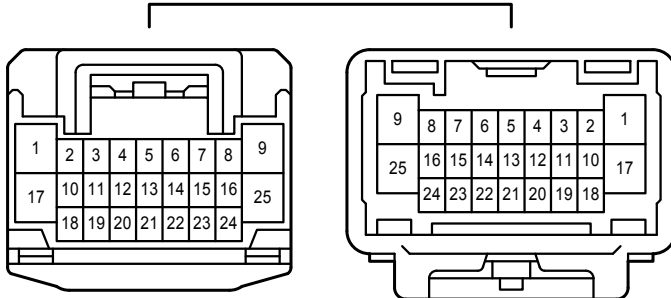 


AE5
Yellow

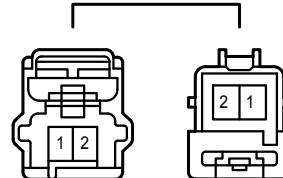 


AE6
White

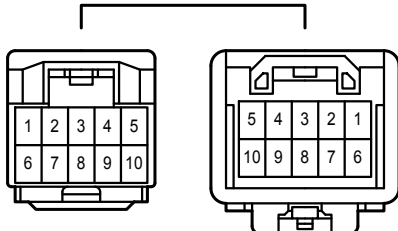 


AE7
White

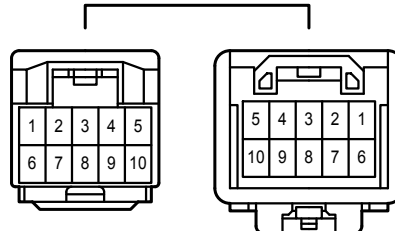 


AE8
White

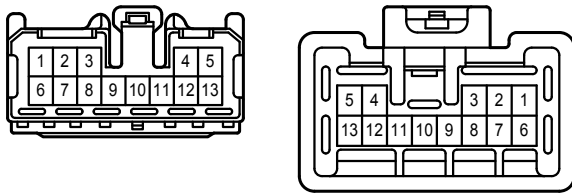 


AE9
Yellow

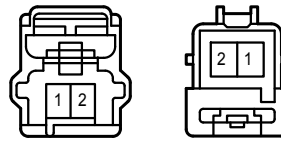 


AE10
White

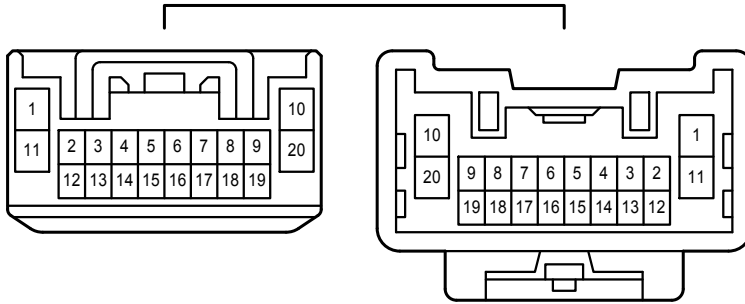 


AE11
Gray

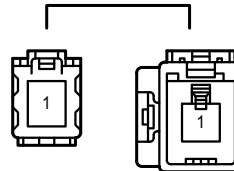 


AK1
White

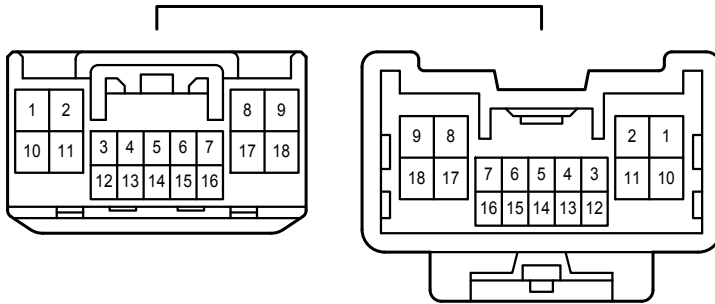 


EF1
Blue

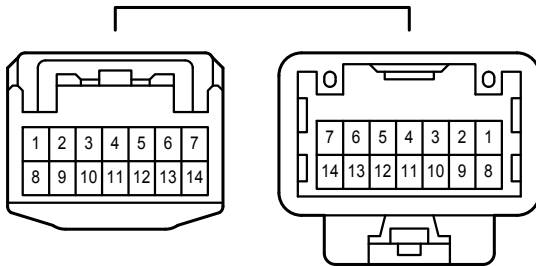 


EK1
White

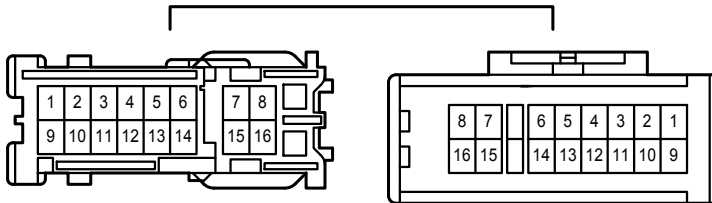 


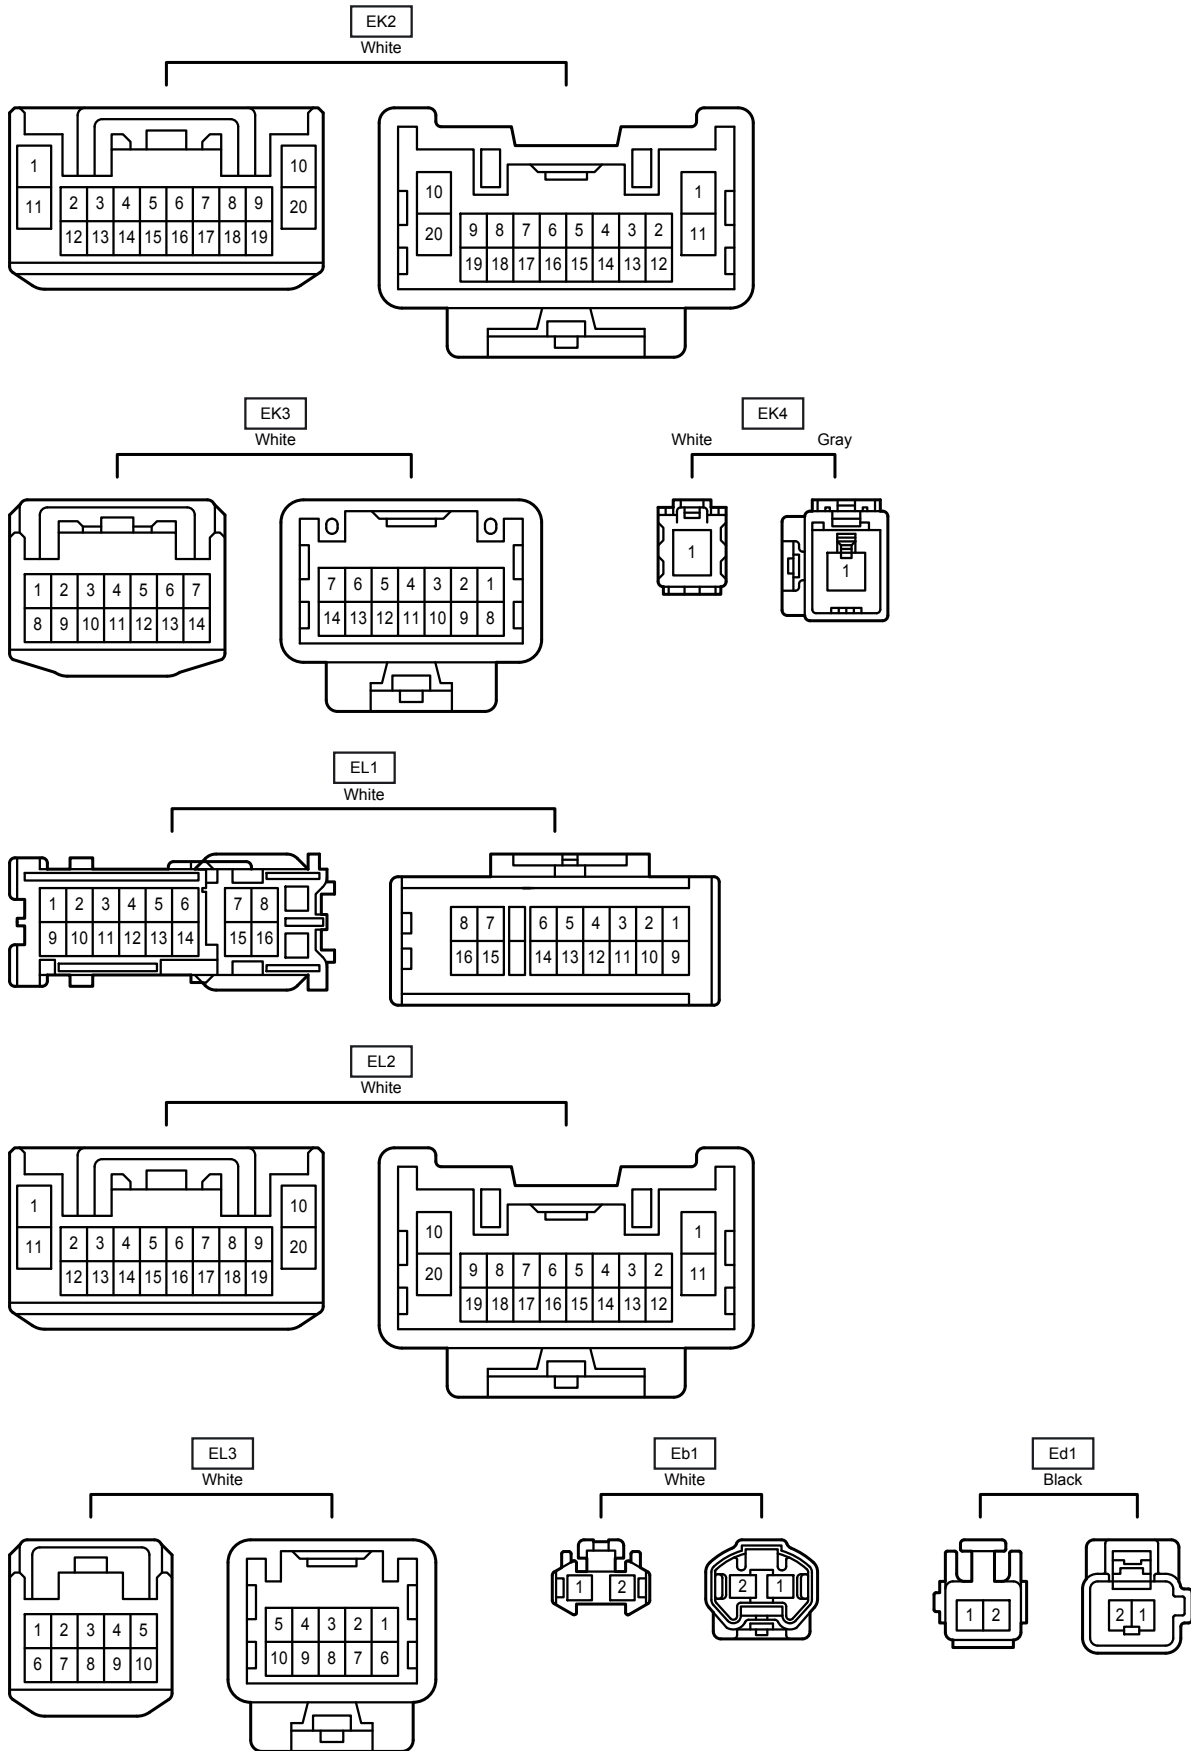 


Eg1
Yellow

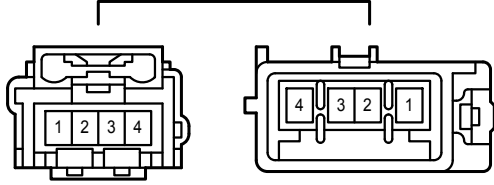 


GE1
White

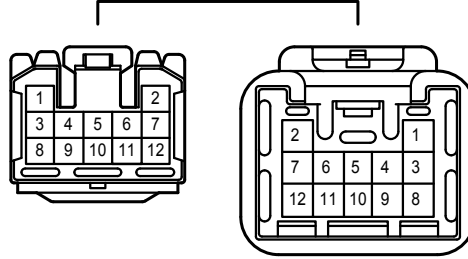 


GE2
White

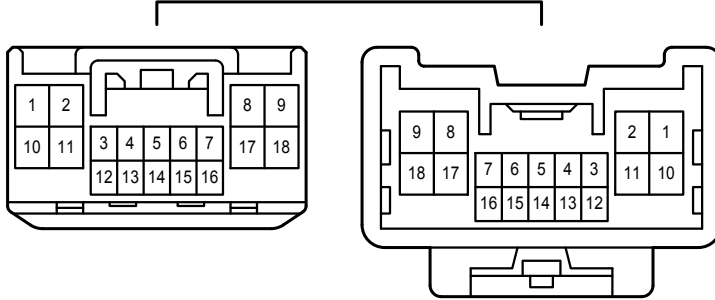 


GE3
White

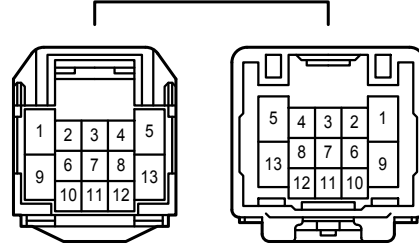 


HE1
White

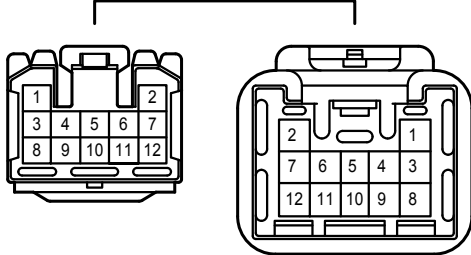 


HE2
White

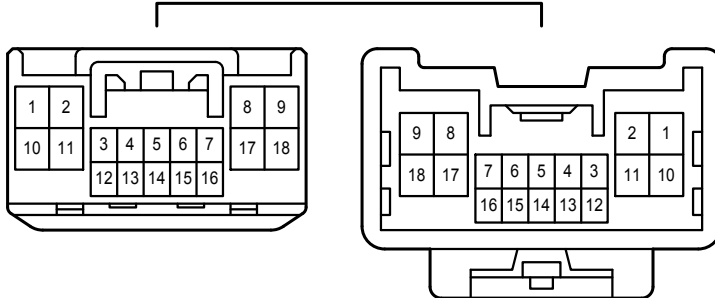 


HE3
White

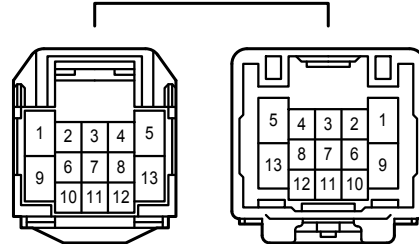 



RE1
White

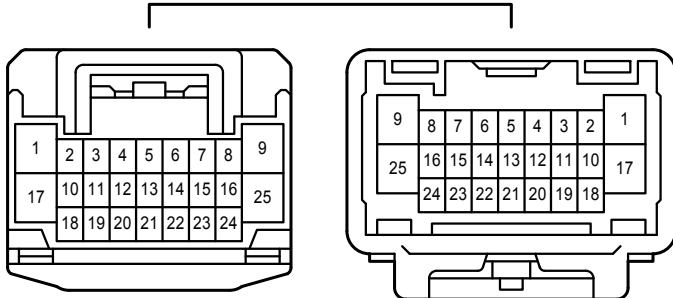 

TK1
White






















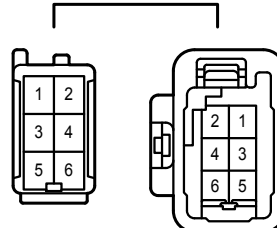 


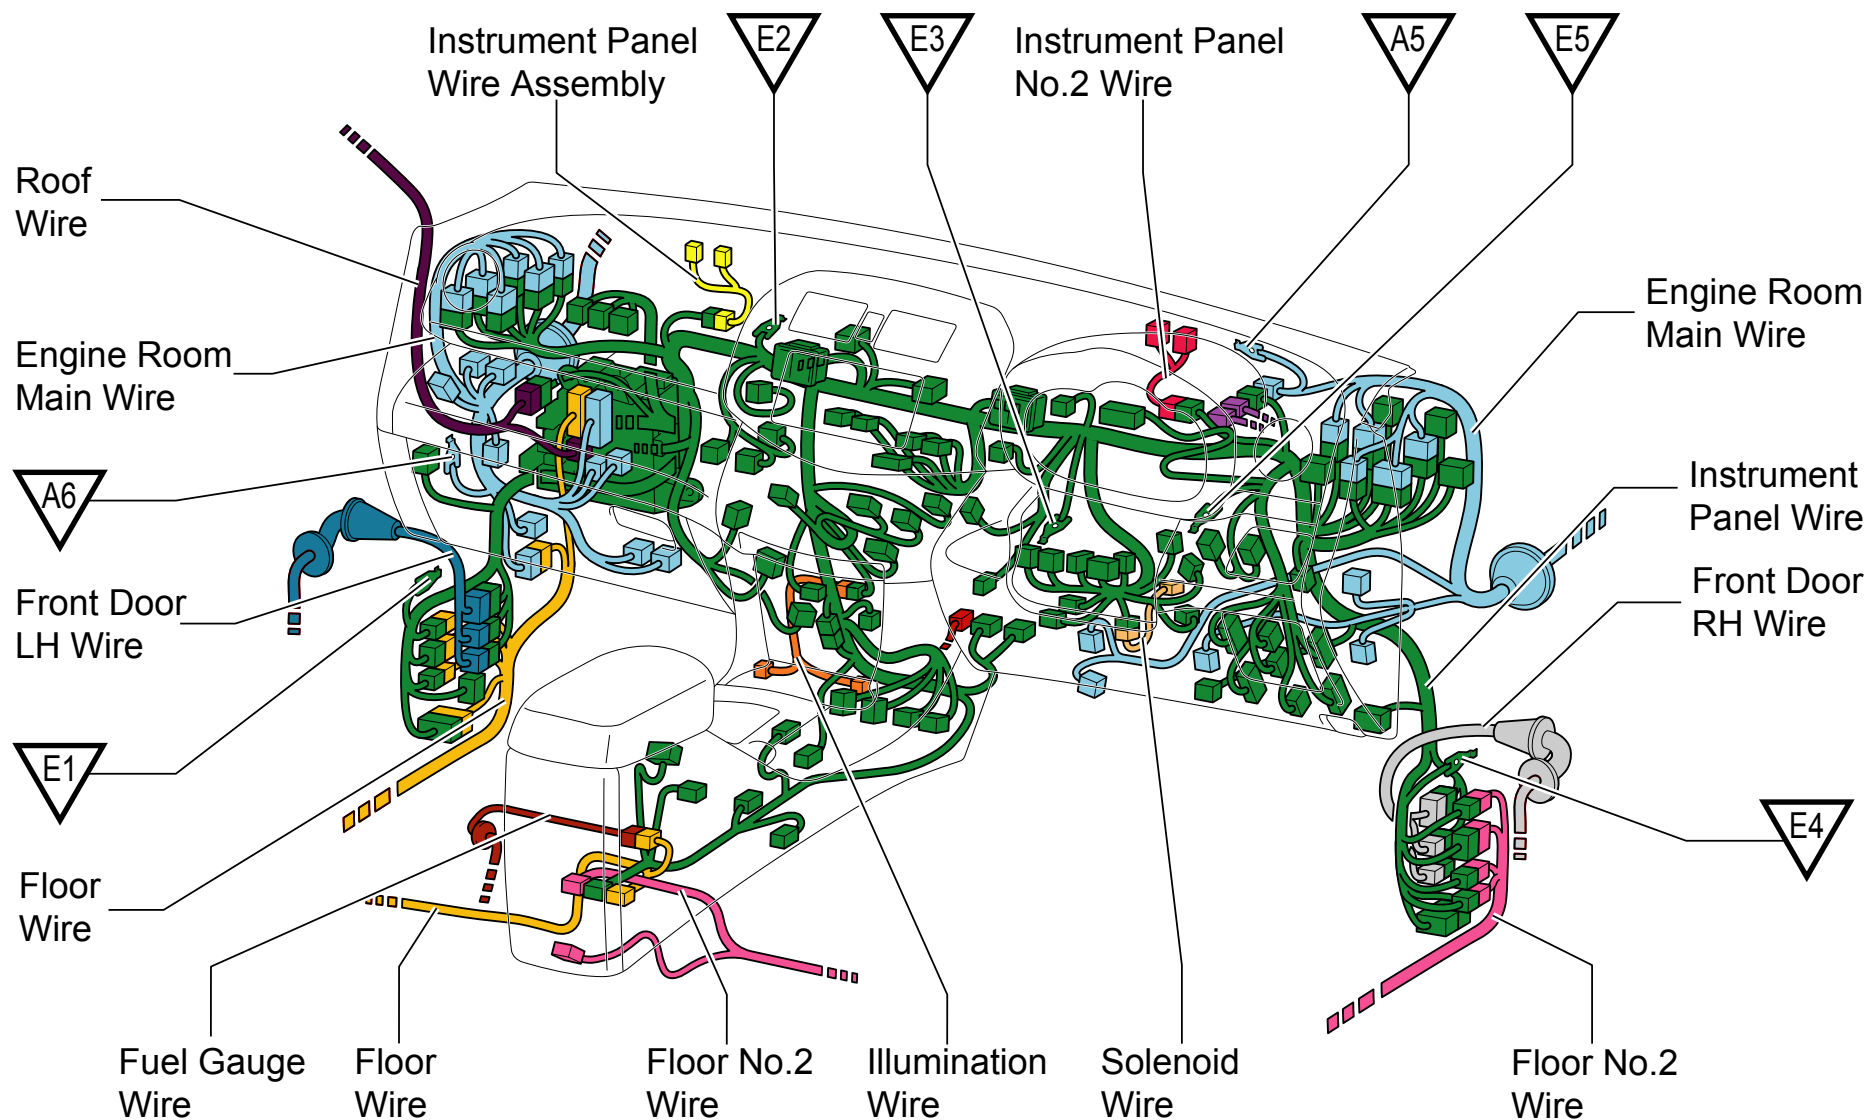 

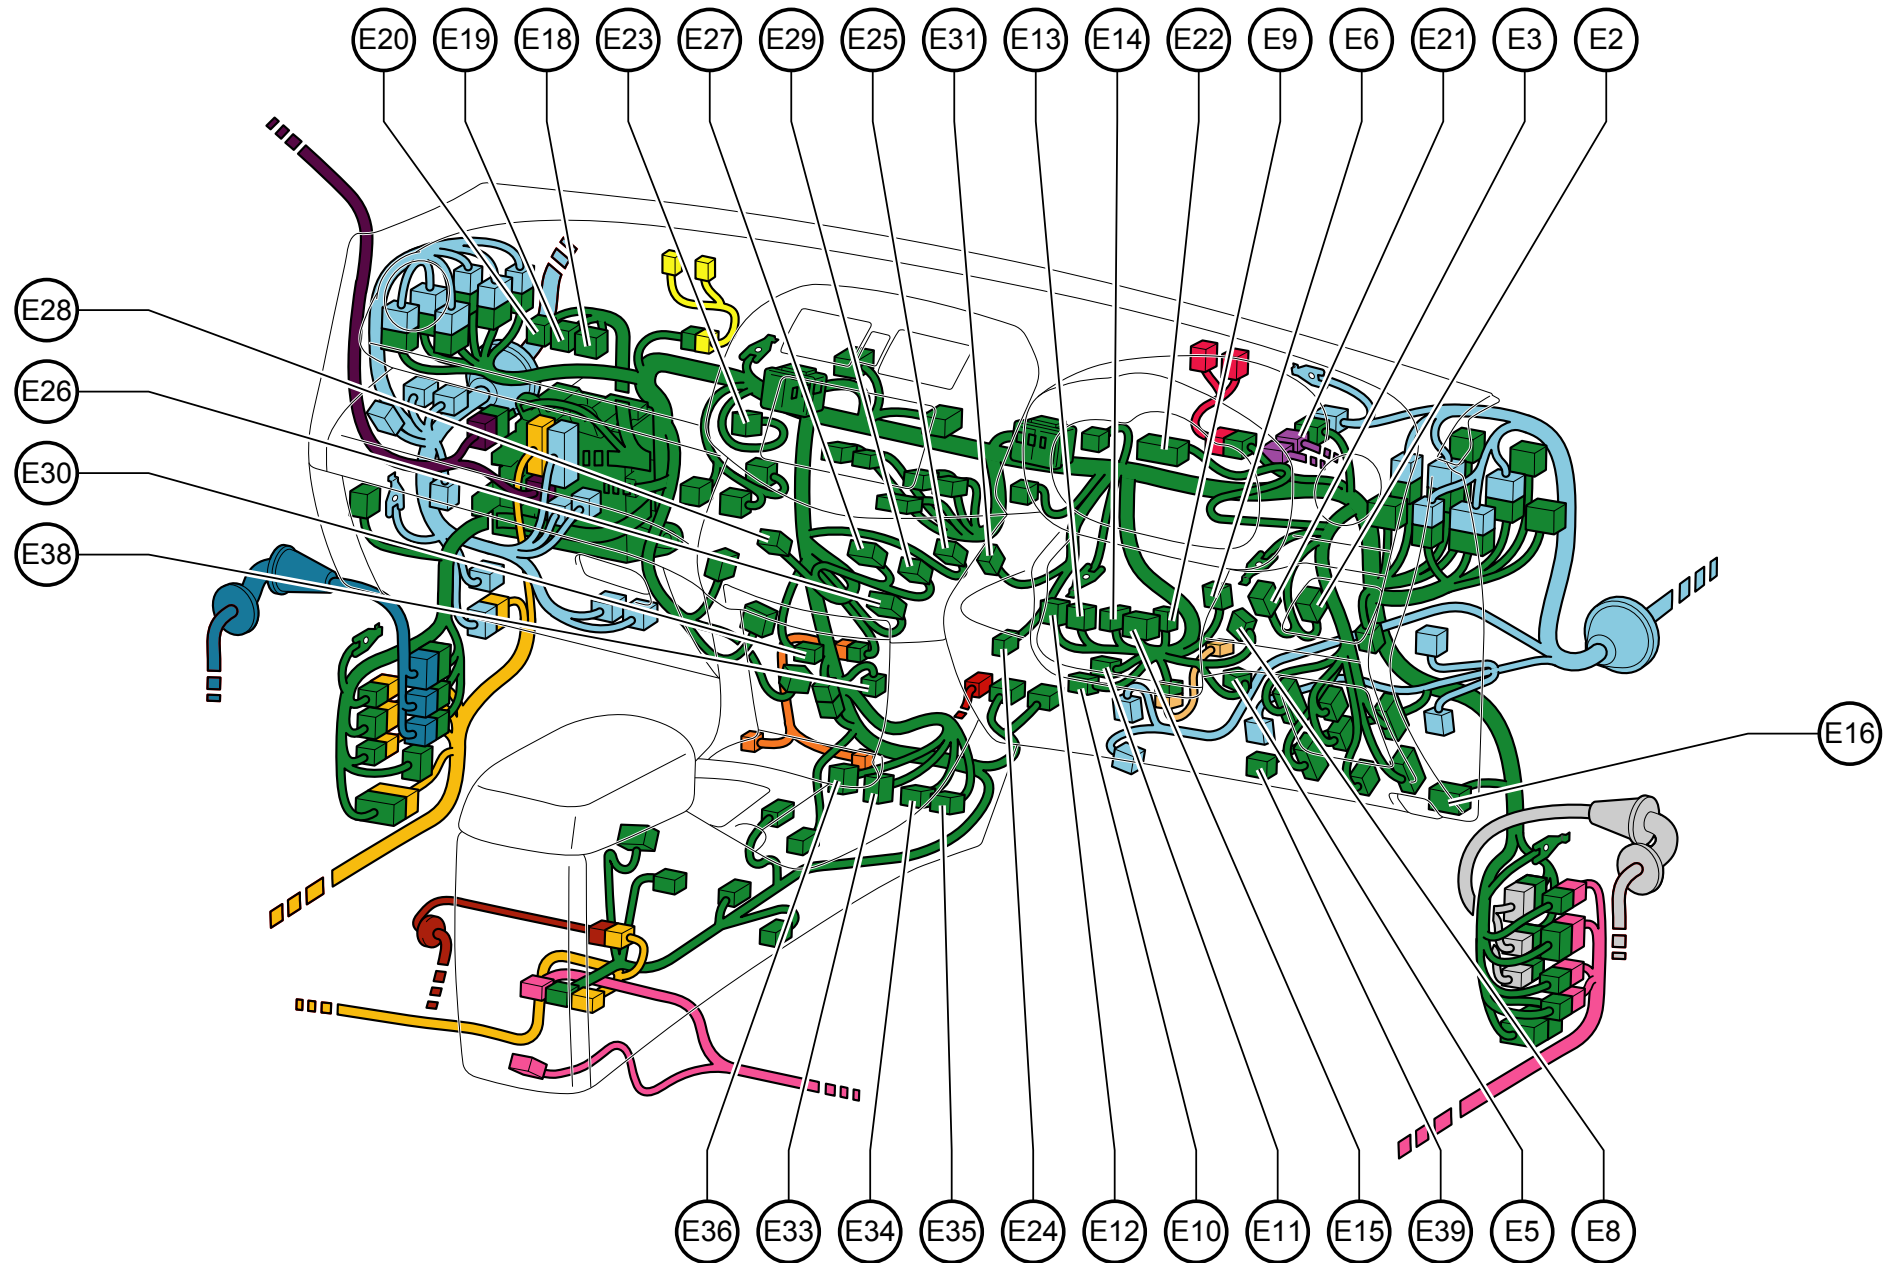 


- E 2 Light Control Rheostat
- E 3 Headlamp Leveling SW
- E 5 Ignition SW
- E 6 Steering Lock ECU
- E 8 Transponder Key Amplifier
- E 9 Unlock Warning SW
- E 10 Spiral Cable
- E 11 Airbag Squib (Steering Wheel Pad)
- E 12 Windshield Wiper SW Assembly
- E 13 Windshield Wiper SW Assembly
- E 14 Steering Sensor
- E 15 Headlamp Dimmer SW Assembly
- E 16 DLC3
- E 18 Main Body ECU
- E 19 Main Body ECU
- E 20 Main Body ECU
- E 21 Power Steering ECU
- E 22 Combination Meter
- E 23 Hazard Warning Signal SW
- E 24 A/C Room Temp. Sensor
- E 25 Clock
- E 26 Integration Control and Panel Assembly
- E 27 Integration Control and Panel Assembly
- E 28 Air Inlet Control SW
- E 29 A/C SW , Max Hot SW
- E 30 Front Console Illumination
- E 31 Power SW
- E 33 Seat Heater SW
- E 34 Cigarette Lighter Illumination
- E 35 Cigarette Lighter
- E 36 Downhill Assist Control SW
- E 38 A/C Evaporator Temp. Sensor
- E 39 Knee Airbag Squib

                      Position of Parts in Instrument Panel <RHD>

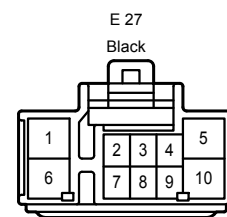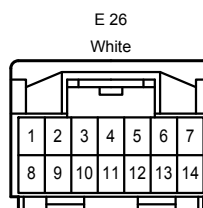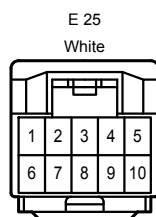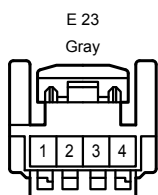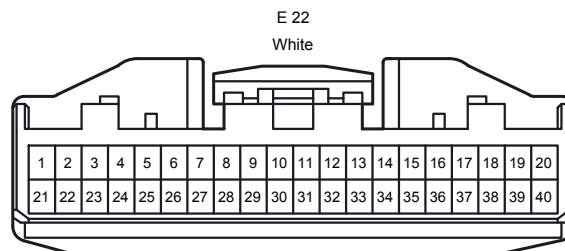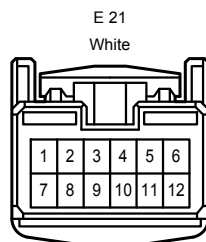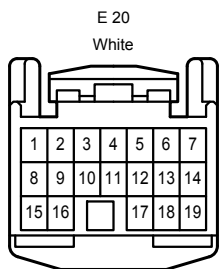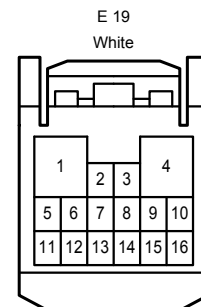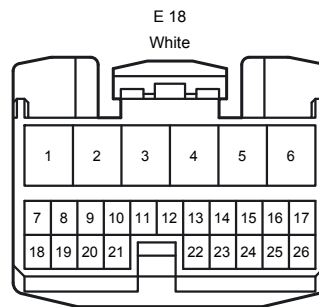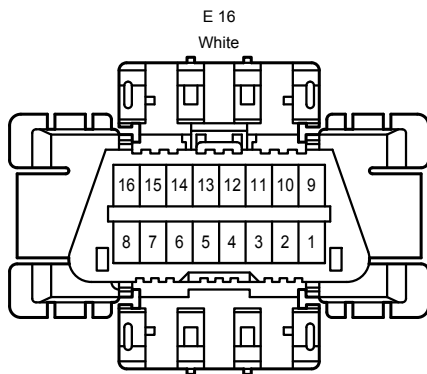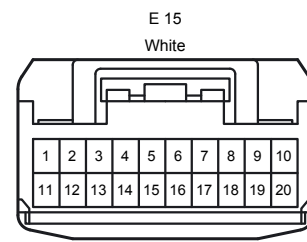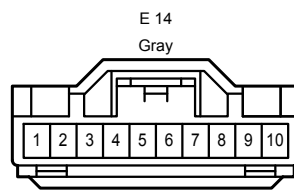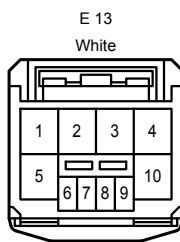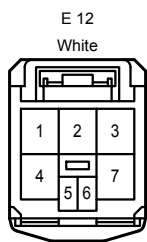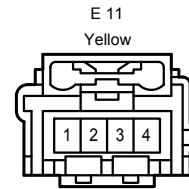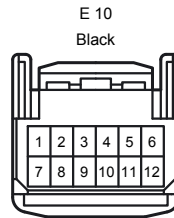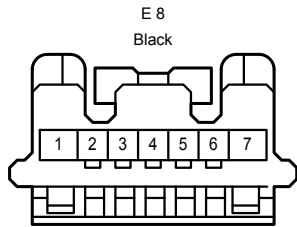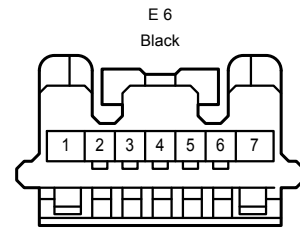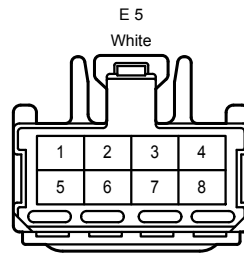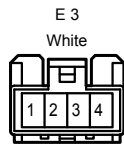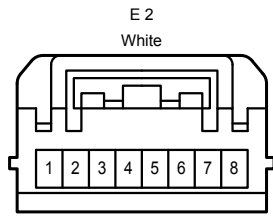


Position of Parts in Instrument Panel <RHD>

 E 28
Black

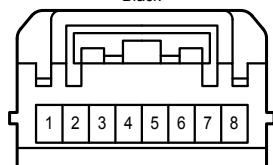


E 29
Black

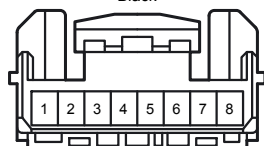 


E 30
White



 E 31
Black

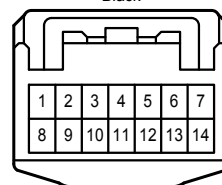


E 33
Black

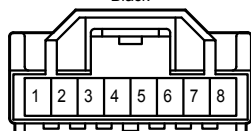 


E 34
Gray



 E 35
White




E 36
Gray

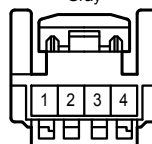 


E 38
White



 E 39
Yellow

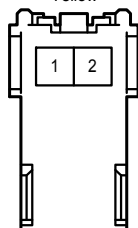

 
Position of Parts in Instrument Panel <RHD>

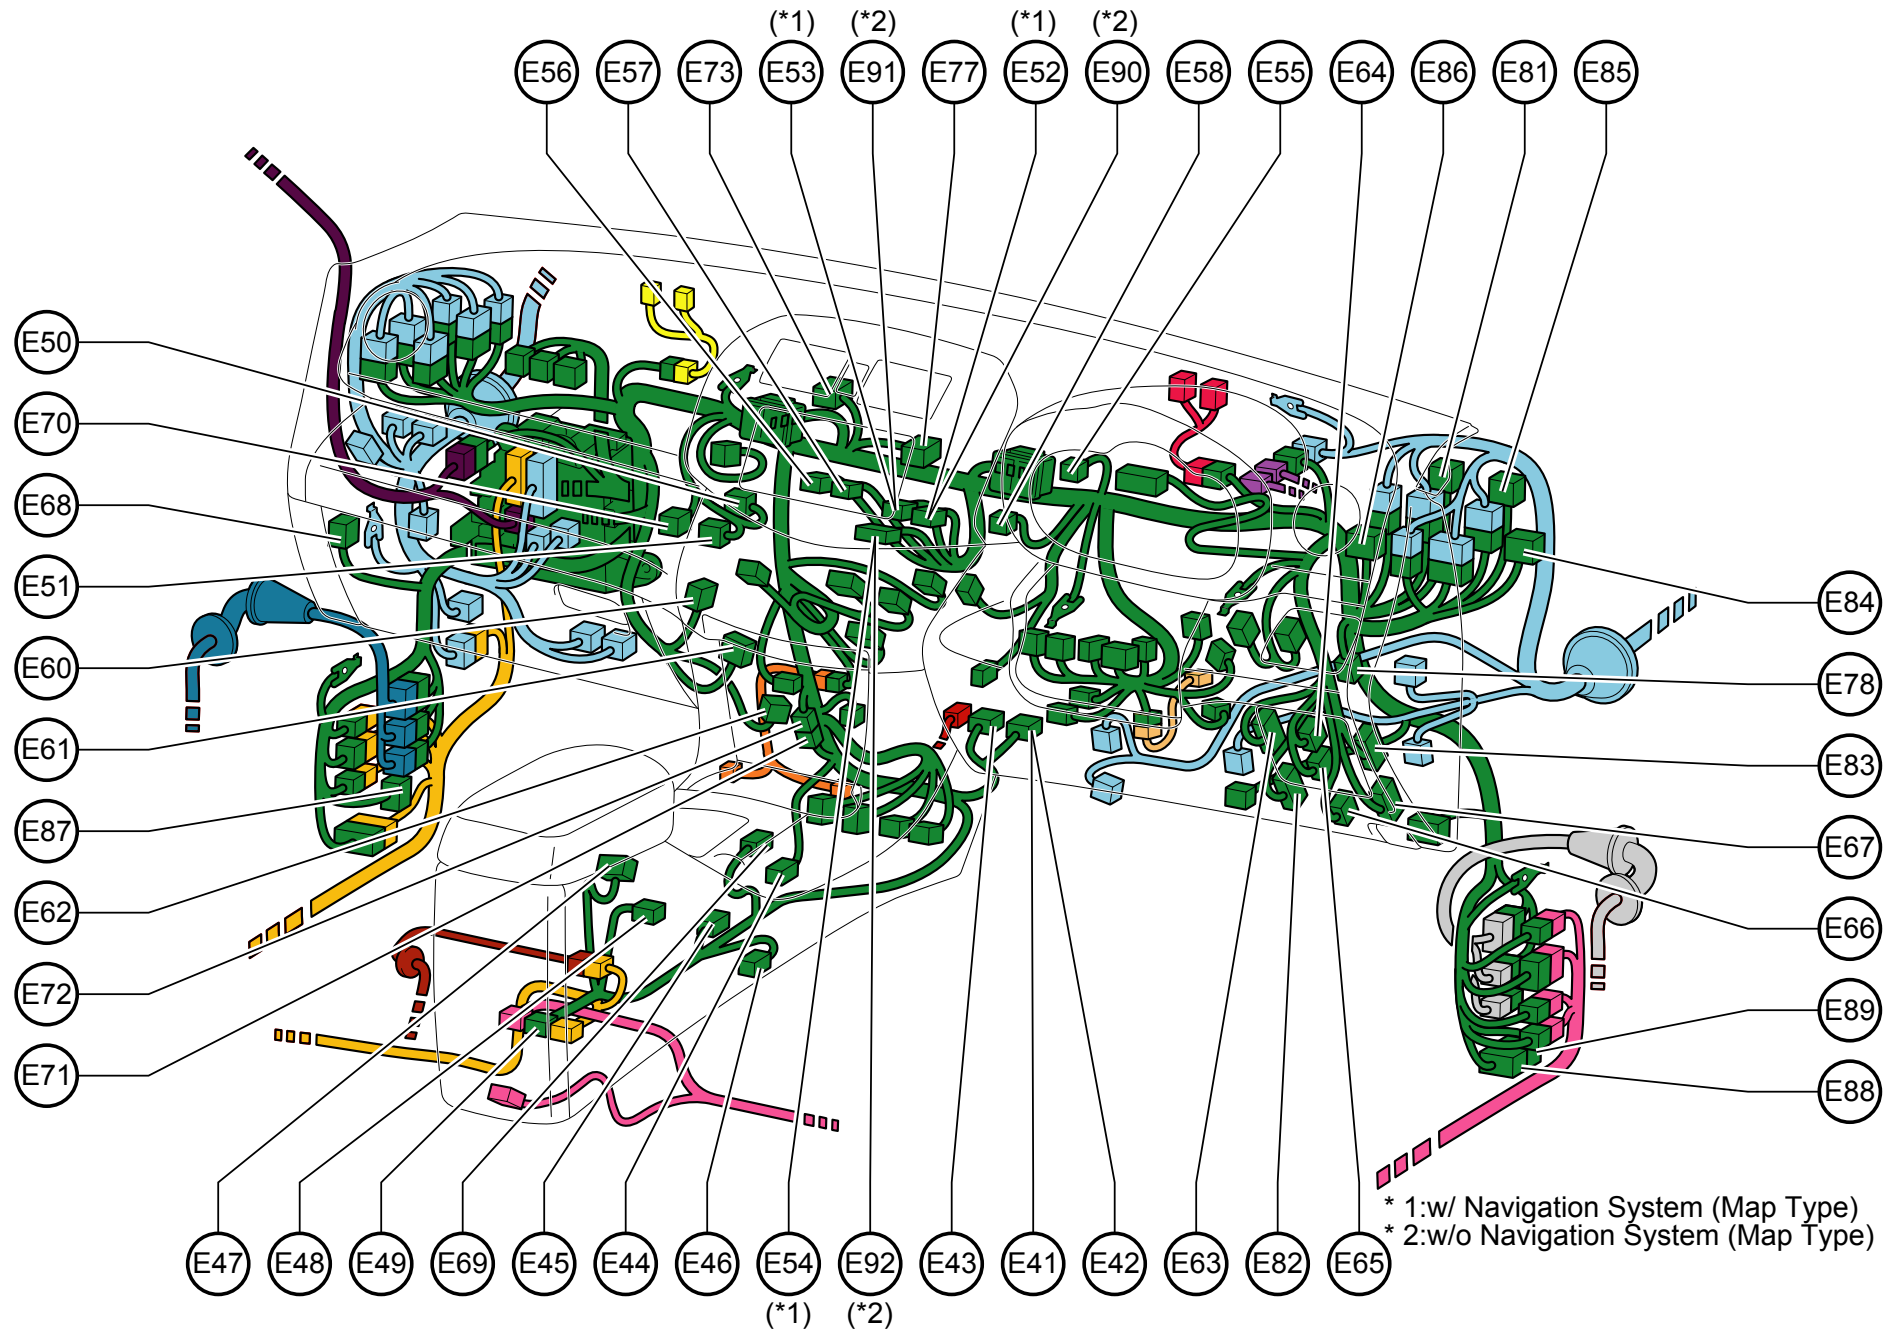

E 41	A/C Amplifier
E 42	A/C Amplifier
E 43	A/C Amplifier
E 44	Shift Lock Control ECU
E 45	Transmission Control SW
E 46	Parking Brake SW
E 47	Outer Mirror SW
E 48	Power Outlet Socket (Front)
E 49	Airbag Sensor Assembly Center
E 50	Transponder Key ECU
E 51	ID Code Box
E 52	Navigation Receiver Assembly
E 53	Navigation Receiver Assembly
E 54	Navigation Receiver Assembly
E 55	Antenna Amplifier
E 56	Navigation Receiver Assembly
E 57	Navigation Receiver Assembly
E 58	4WD Control SW
E 60	Blower Motor
E 61	Blower Motor
E 62	Blower Resistor
E 63	Certification ECU
E 64	Tire Pressure Warning ECU and Receiver
E 65	Tire Pressure Warning ECU and Receiver
E 66	Auto Wiper Relay
E 67	4WD Control ECU
E 68	Airbag Cut Off SW
E 69	A/T Shift Lever Illumination
E 70	Air Inlet Control Servo Motor
E 71	Short Connector
E 72	Short Connector
E 73	Junction Connector
E 77	Junction Connector
E 78	Diode (Rear Wiper)
E 81	Turn Signal Flasher
E 82	Double Locking ECU
E 83	Theft Warning ECU
E 84	Junction Connector
E 85	Junction Connector
E 86	Junction Connector
E 87	Junction Connector
E 88	Junction Connector
E 89	Junction Connector
E 90	Radio Receiver Assembly
E 91	Radio Receiver Assembly
E 92	Radio Receiver Assembly


Position of Parts in Instrument Panel <RHD>

 E 41
White

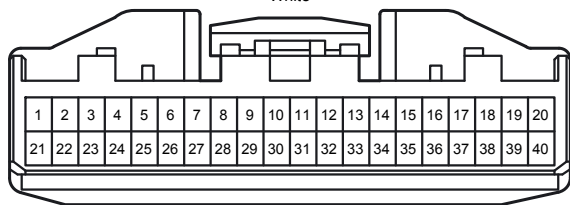


(Automatic A/C)

 E 42
White

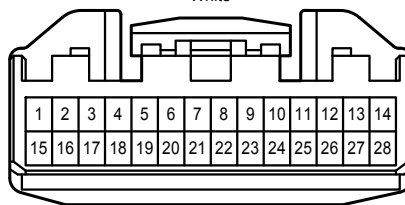


(Manual A/C)

 
E 43
White

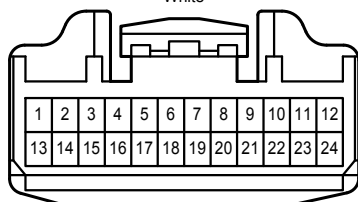

E 44
White

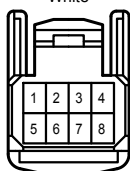 


E 45
White

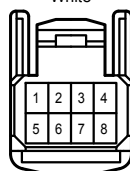 


E 46
Black



 
E 47
White

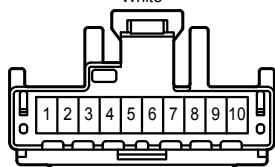


E 48
White

 


E 49
Yellow

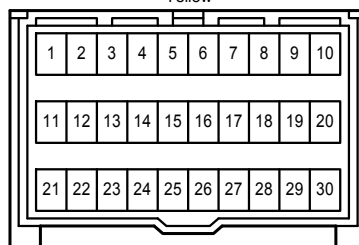 


E 50
White

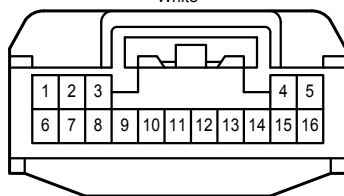 

E 51
White

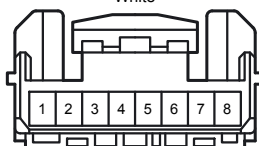 


E 52
White

 

E 53
White



 
E 54
White

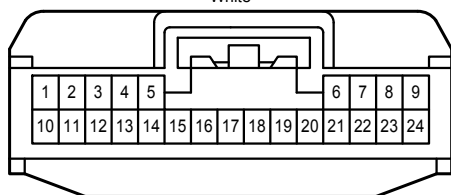


E 55
White



 
E 56
White

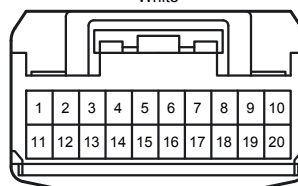


E 57
Gray

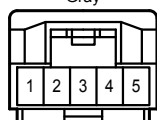 


E 58
Black

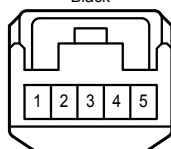 


E 60
Black

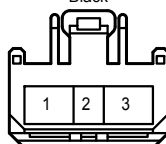 


E 61
Black

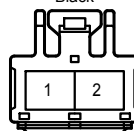 


E 62
Black

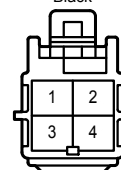 


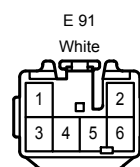 

E 92












 
 
White

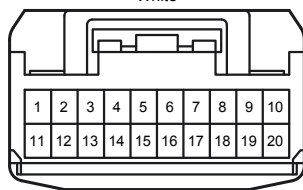


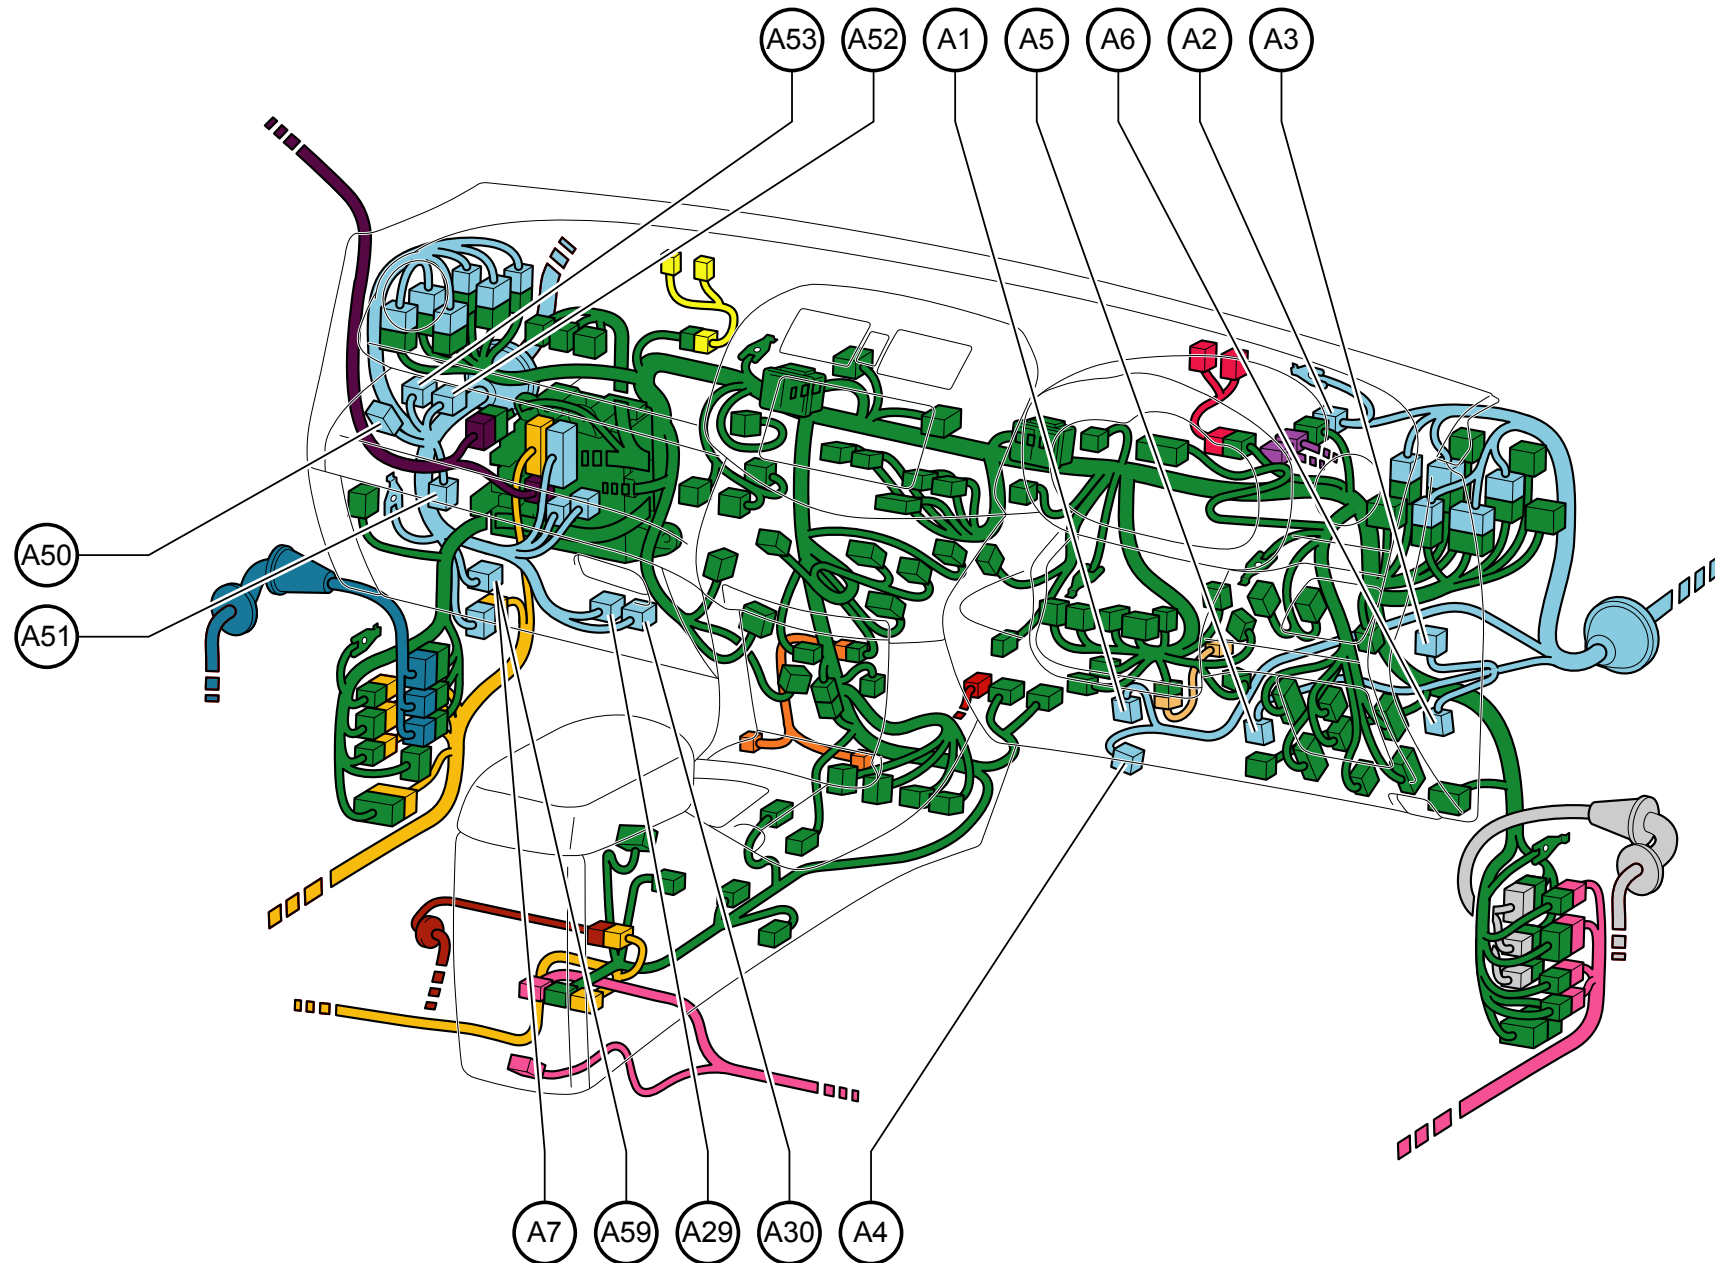

- A 1 Cruise Control Clutch SW
- A 2 Power Steering ECU
- A 3 Brake Pedal Load Sensing SW
- A 4 Clutch Start SW
- A 5 Stop Lamp SW
- A 6 Accelerator Position Sensor
- A 7 Option Connector
- A 29 PTC Heater
- A 30 PTC Heater
- A 50 Junction Connector
- A 51 Junction Connector
- A 52 Junction Connector
- A 53 Junction Connector
- A 59 Option Connector

              Position of Parts in Instrument Panel <RHD>

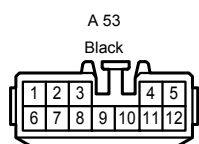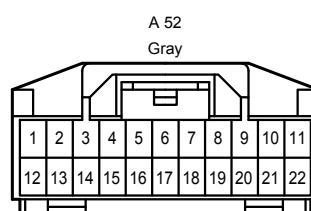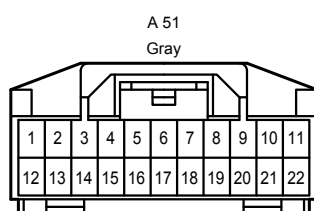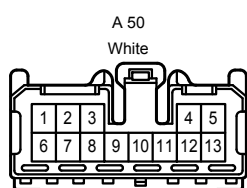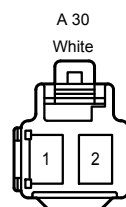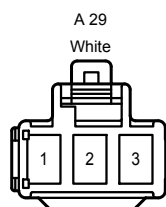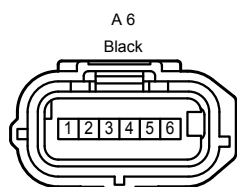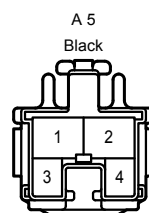

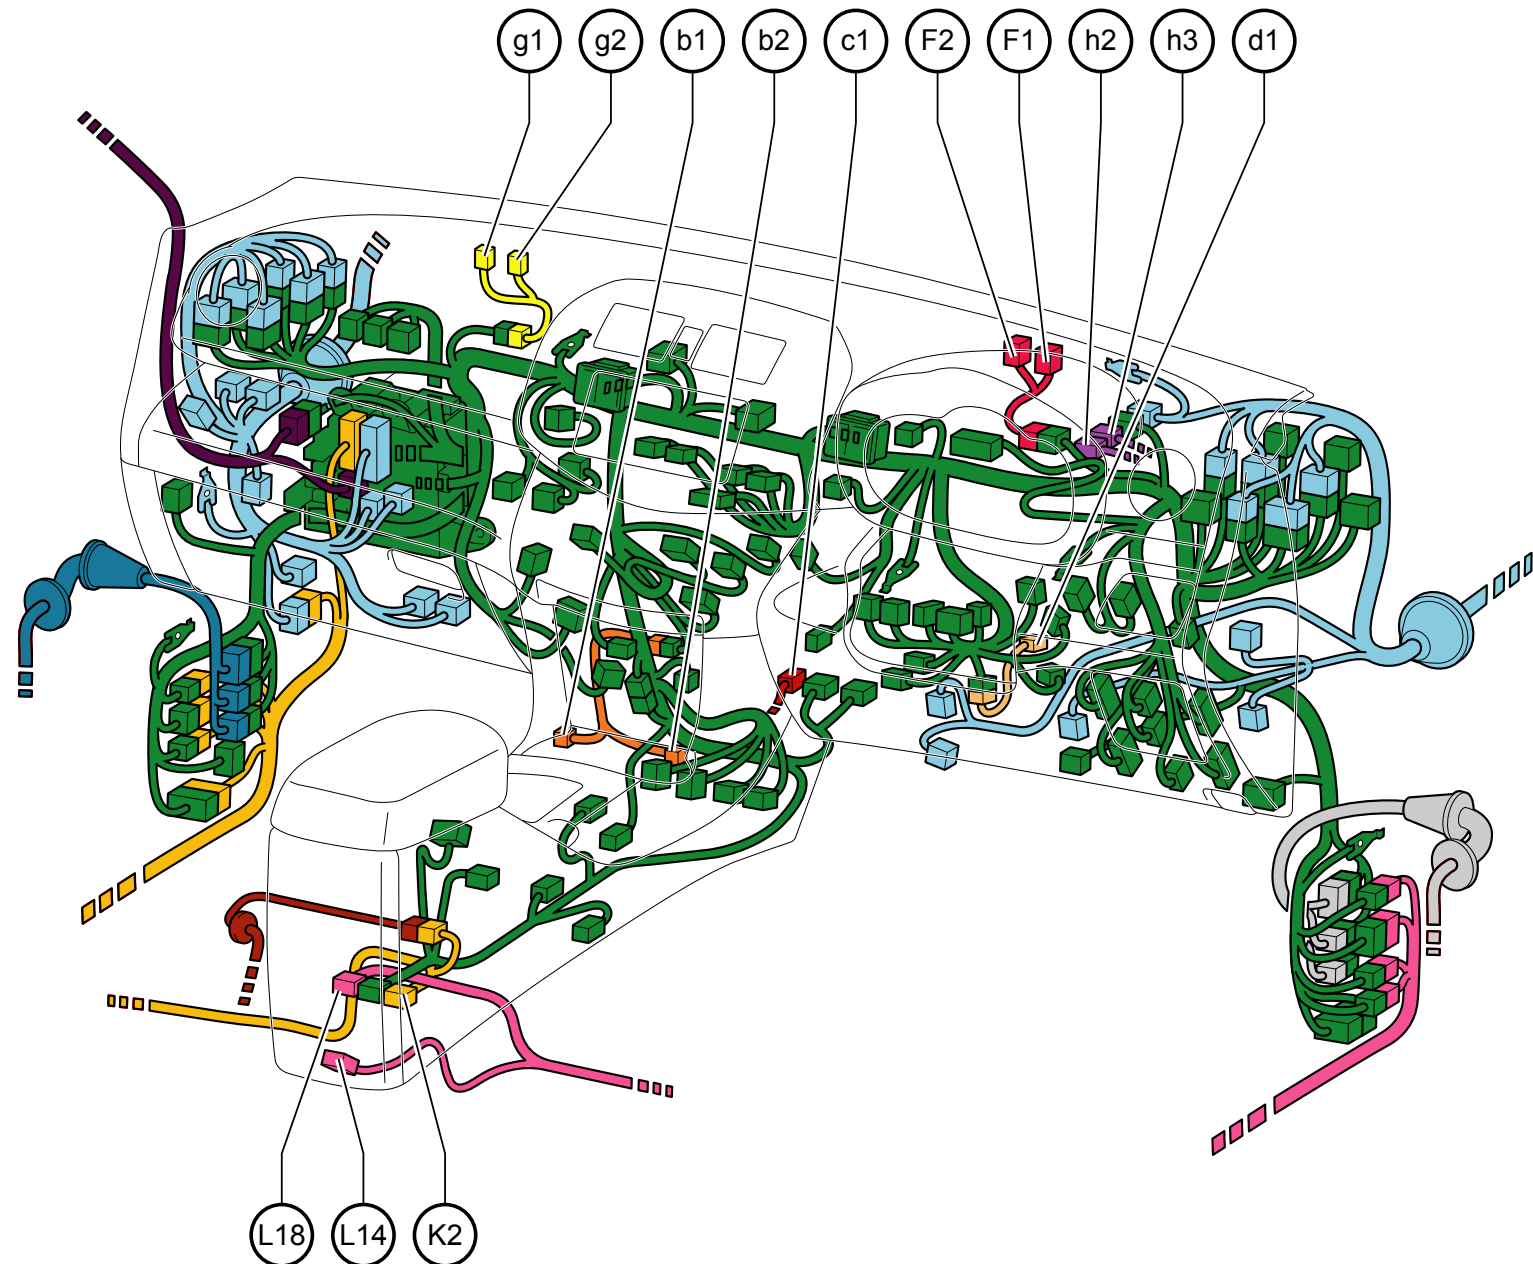

- F 1 A/C Solar Sensor
- F 2 Automatic Light Control Sensor

- K 2 Airbag Sensor Assembly Center

- L 14 Electrical Key Oscillator (Front)
- L 18 Airbag Sensor Assembly Center

- b 1 Foot Lamp (Front LH)
- b 2 Foot Lamp (Front RH)

 
 
 
 
 
 
 
 
 
 
 
- c 1 A/C Amplifier , A/C Blower Assembly

 
- d 1 Key Interlock Solenoid

- g 1 Airbag Squib (Front Passenger's Airbag Assembly)
- g 2 Airbag Squib (Front Passenger's Airbag Assembly)


- h 2 Power Steering ECU , Power Steering Torque Sensor
- h 3 Power Steering ECU , Rotation Angle Sensor

Position of Parts in Instrument Panel <RHD>

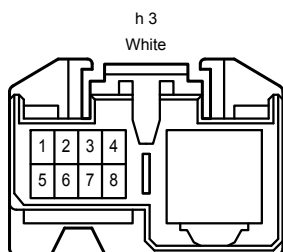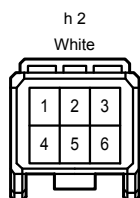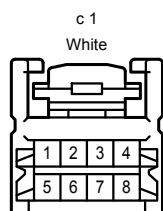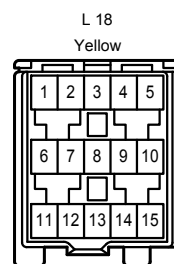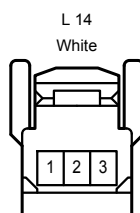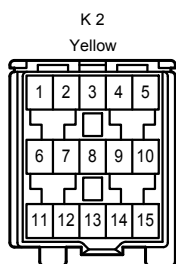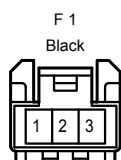


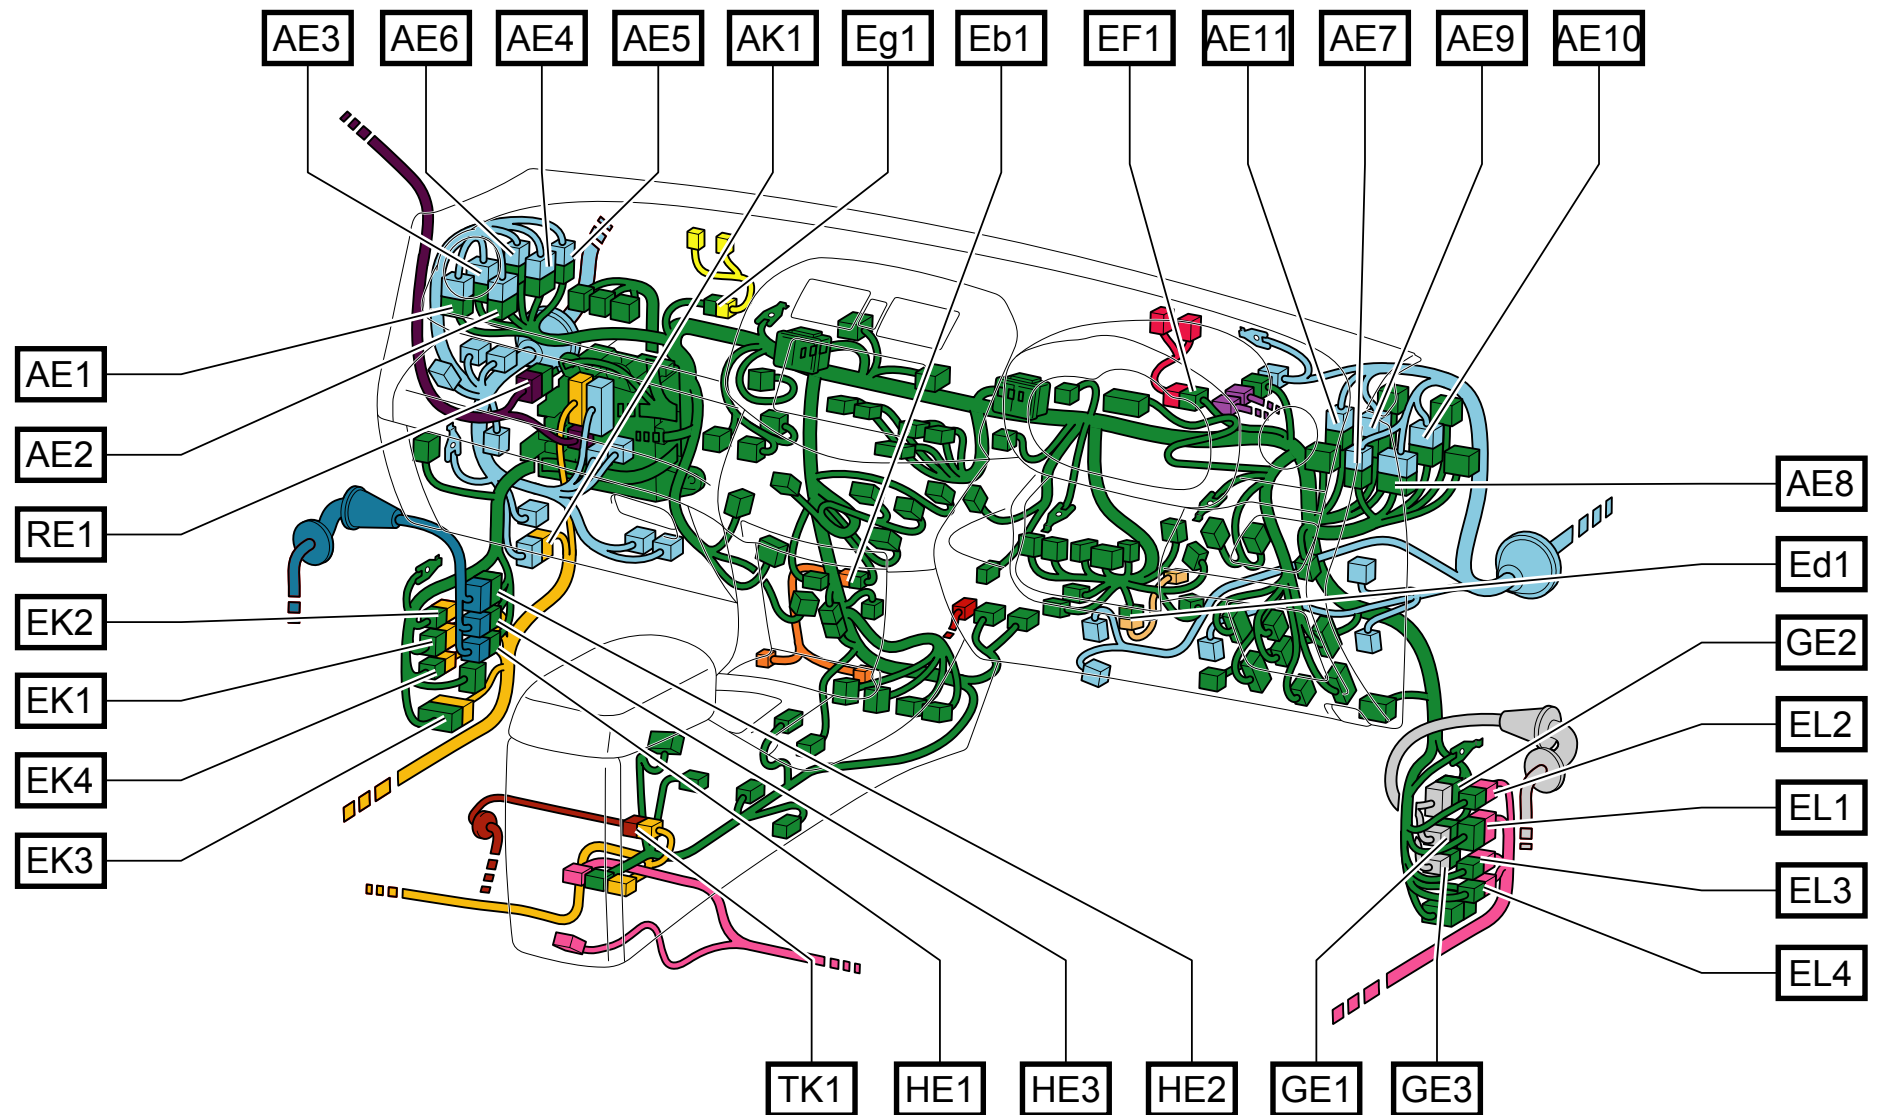


AE1
White

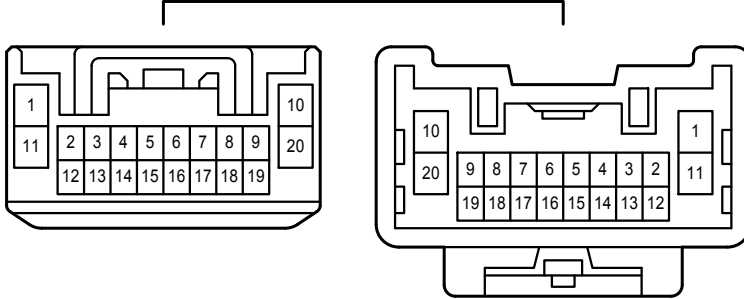 


AE2
White

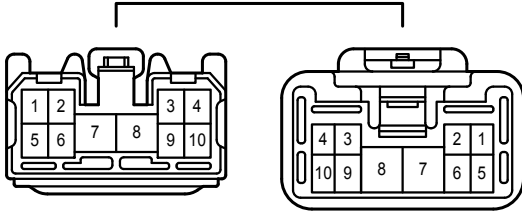 


AE3
Black

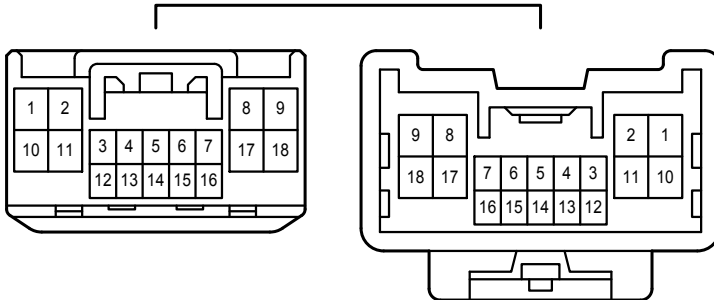 


AE4
Gray

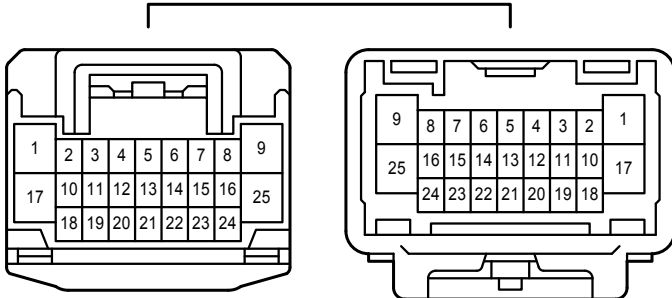 


AE5
Yellow

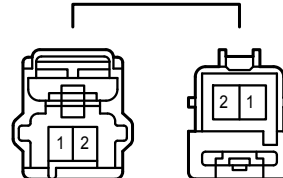 


AE6
White

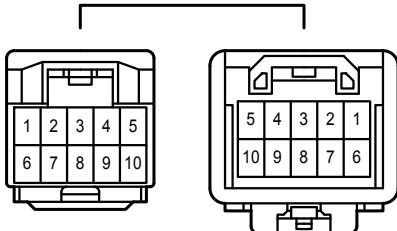 


AE7
White

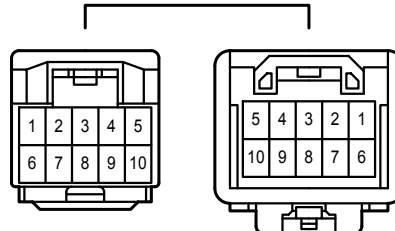 


AE8
White

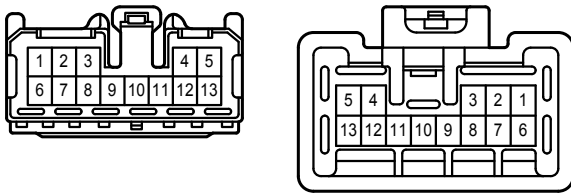 


AE9
Yellow

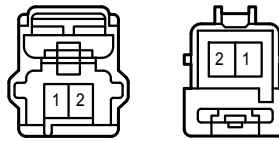 


AE10
White

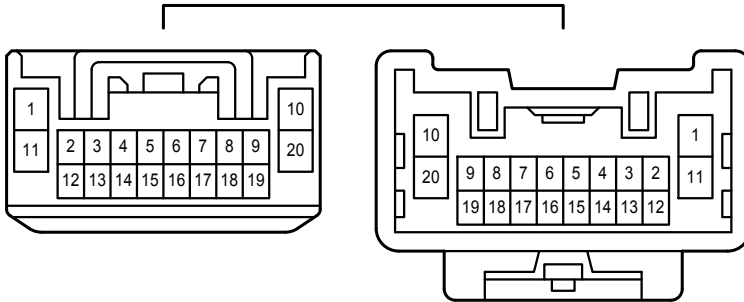 


AE11
Gray

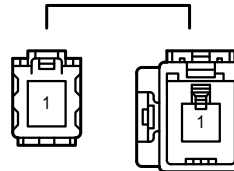 


AK1
White





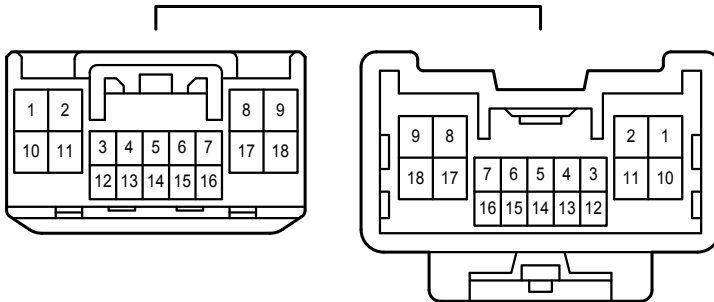 



EF1
Blue

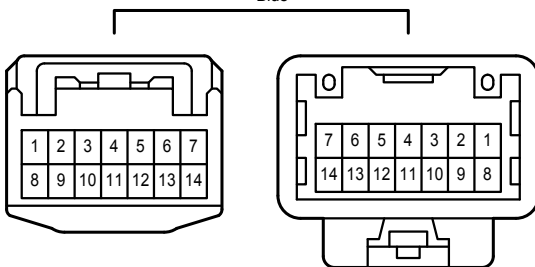 



EK1
White

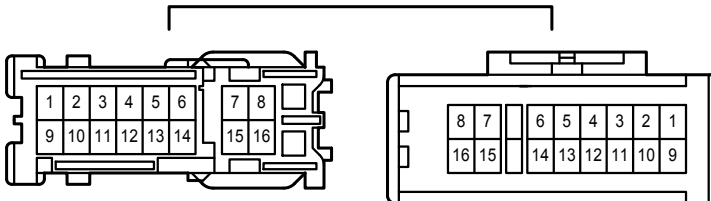 

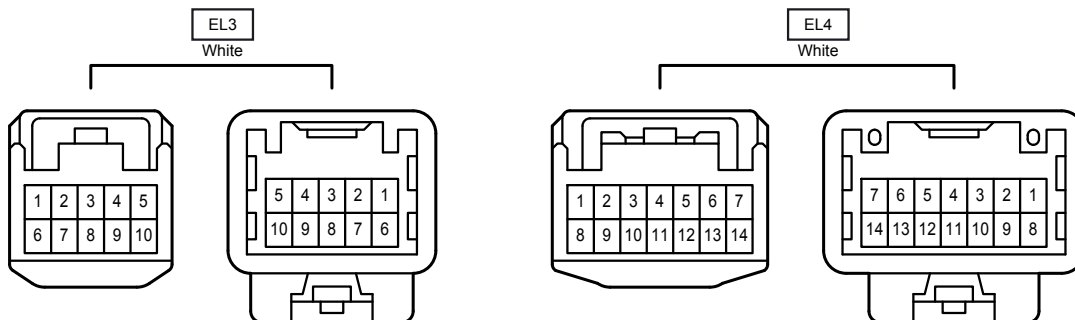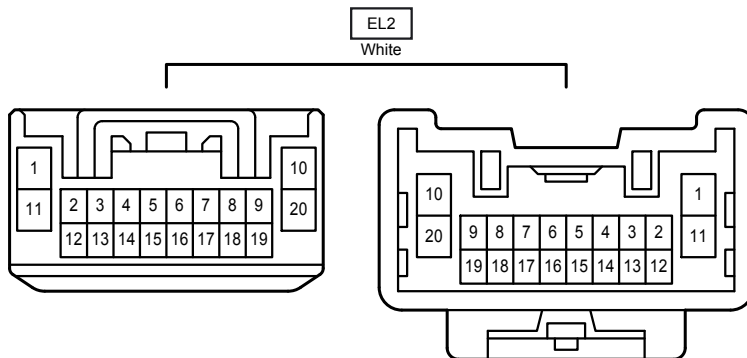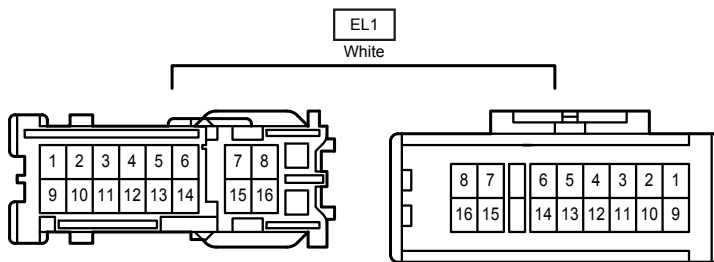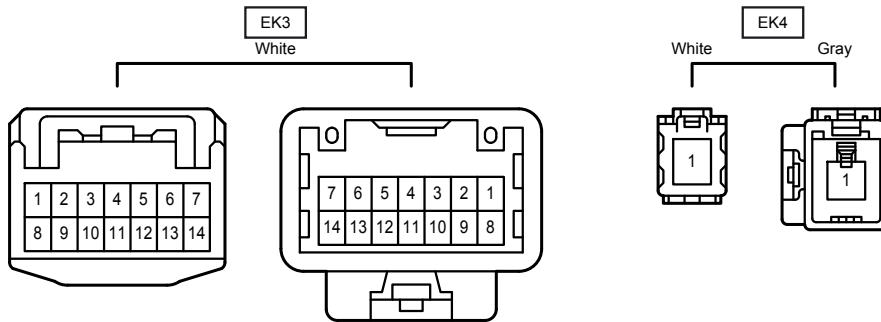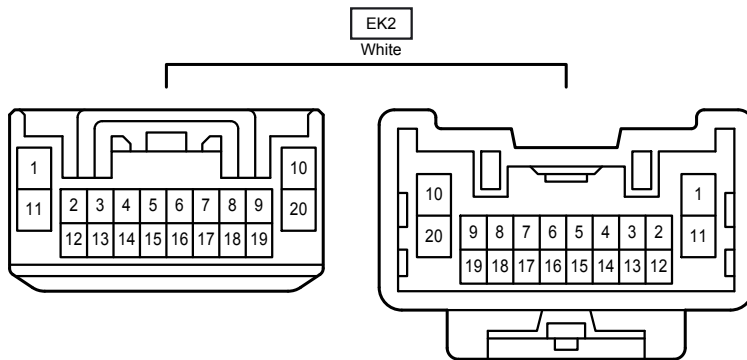     

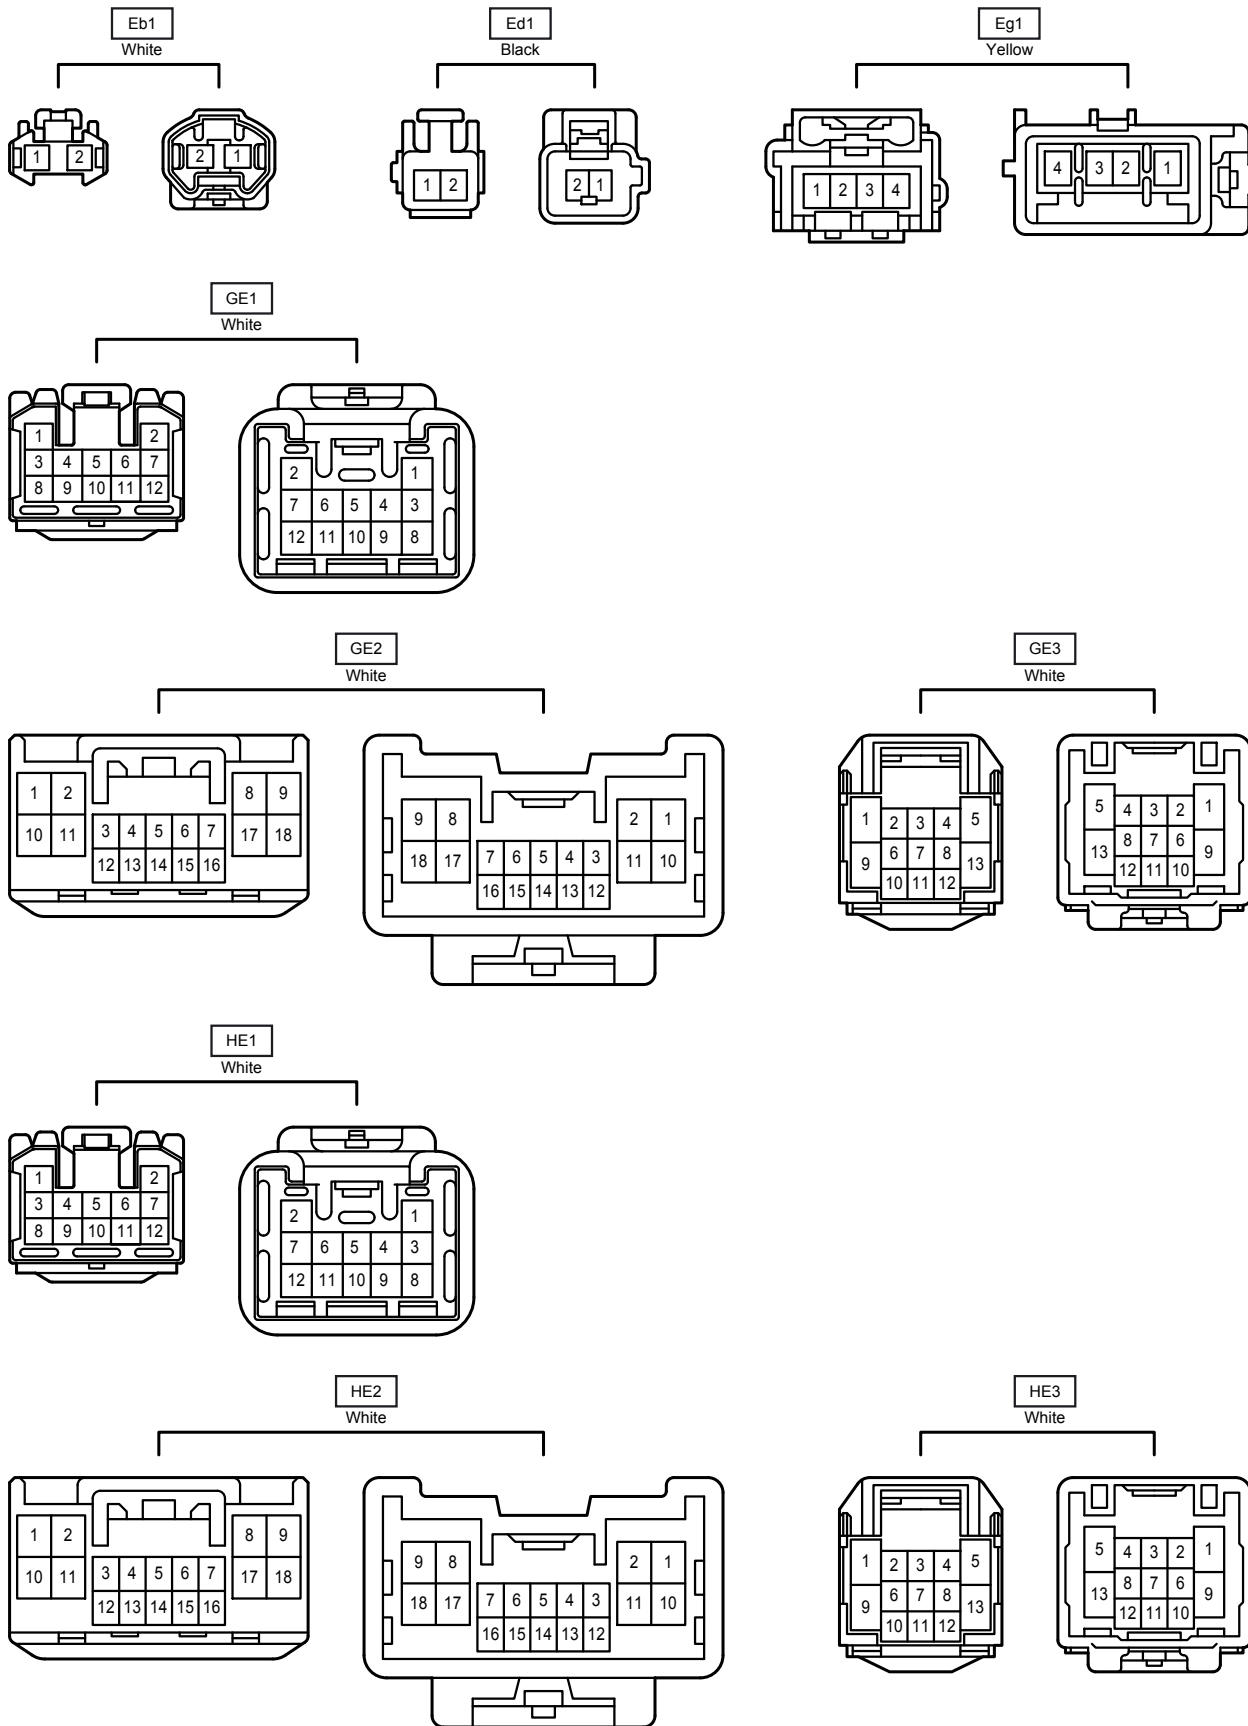 

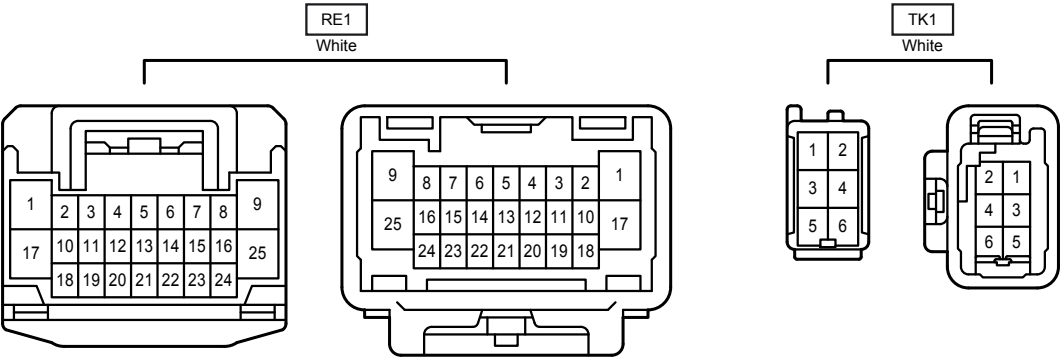 

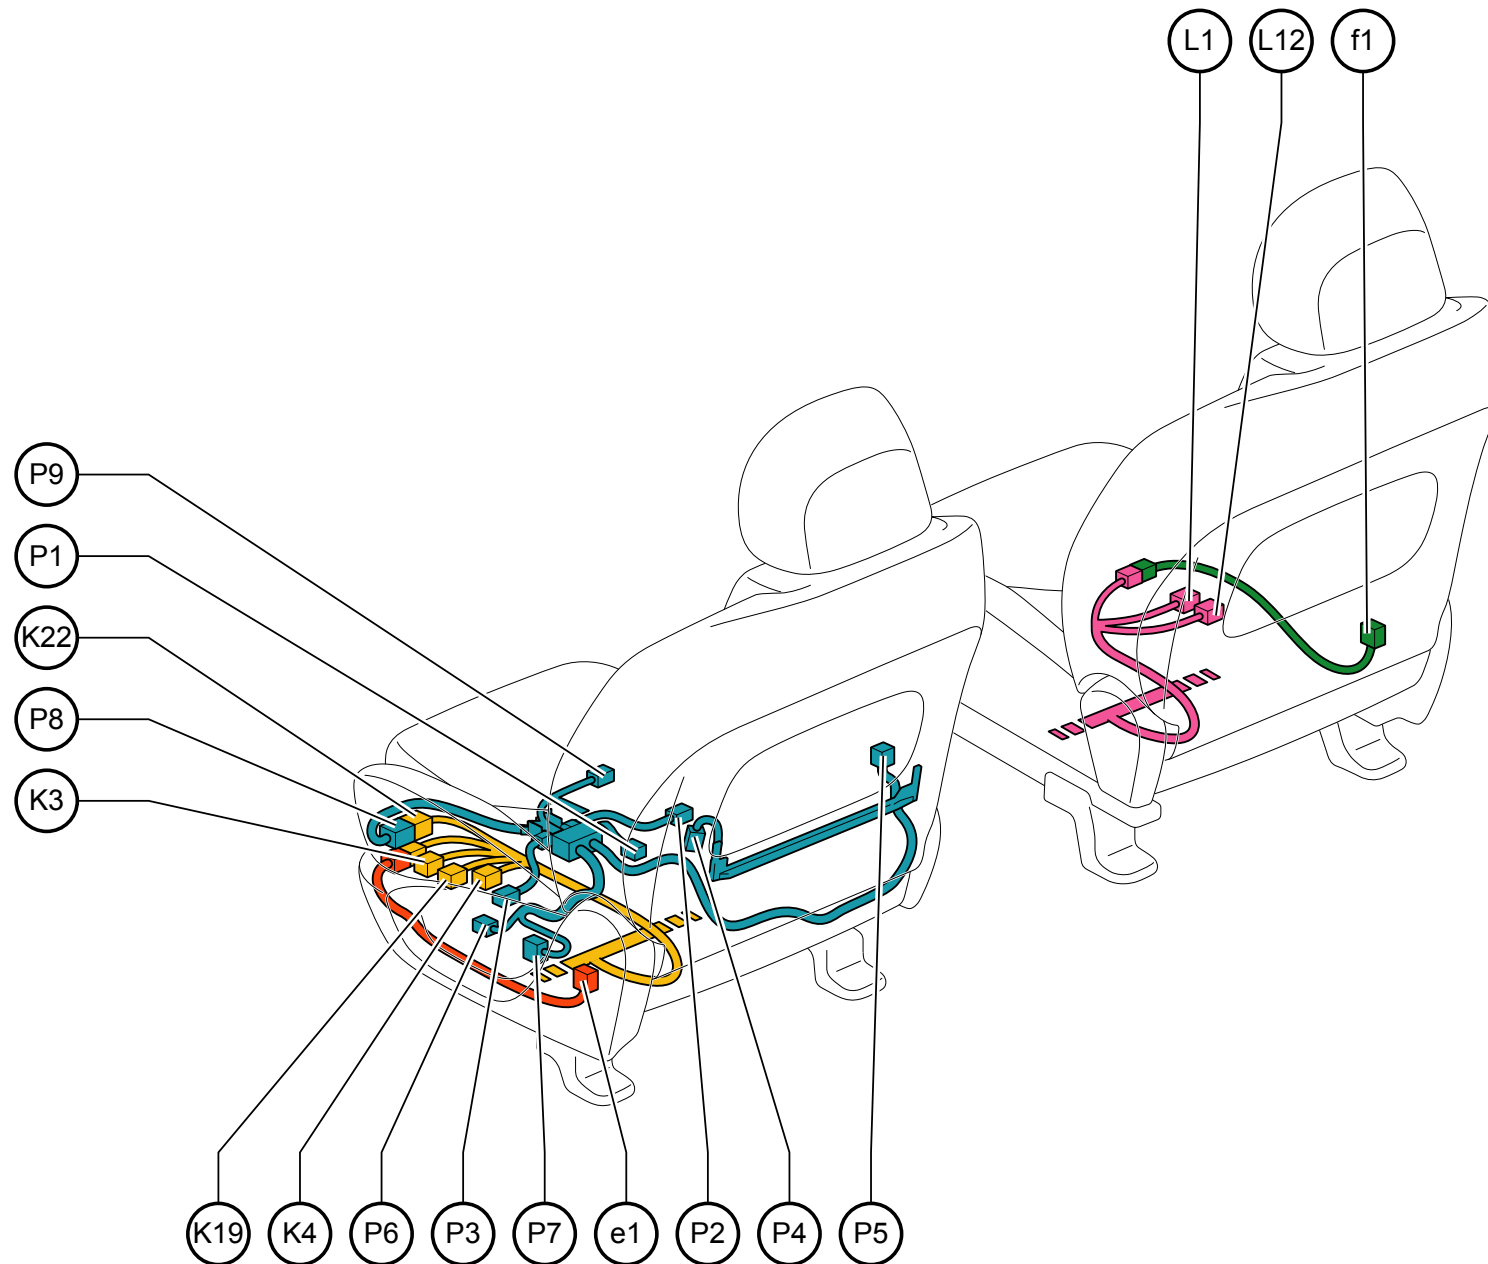 

- K 3 Front Seat Inner Belt (Driver's Side)
- K 4 Seat Heater (LH)
- K 19 Front Seat Inner Belt (Front Passenger's Side)
- K 22 Junction Connector

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- L 1 Seat Heater (RH)
- L 12 Front Seat Inner Belt (Front Passenger's Side)

 
- P 1 Power Seat Motor (Driver's Seat Slide Control)
- P 2 Power Seat Motor (Driver's Seat Lifter Control)
- P 3 Power Seat Motor (Driver's Seat Front Vertical Control)
- P 4 Power Seat Motor (Driver's Seat Reclining Control)
- P 5 Power Seat Motor (Driver's Seat Lumbar Support Control)
- P 6 Power Seat SW (Driver's Seat)
- P 7 Power Seat SW (Lumbar Support)
- P 8 Junction Connector
- P 9 Seat Heater (LH)

 
- e 1 Side Airbag Squib (LH)

 
- f 1 Side Airbag Squib (RH)

Position of Parts in Seat <LHD>

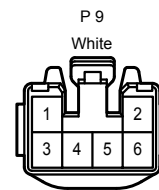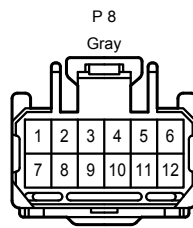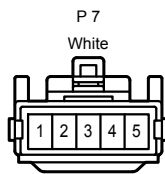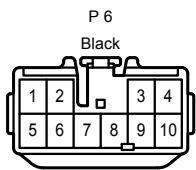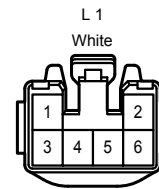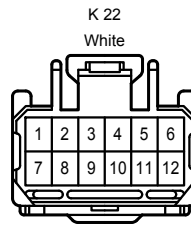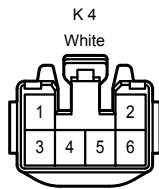

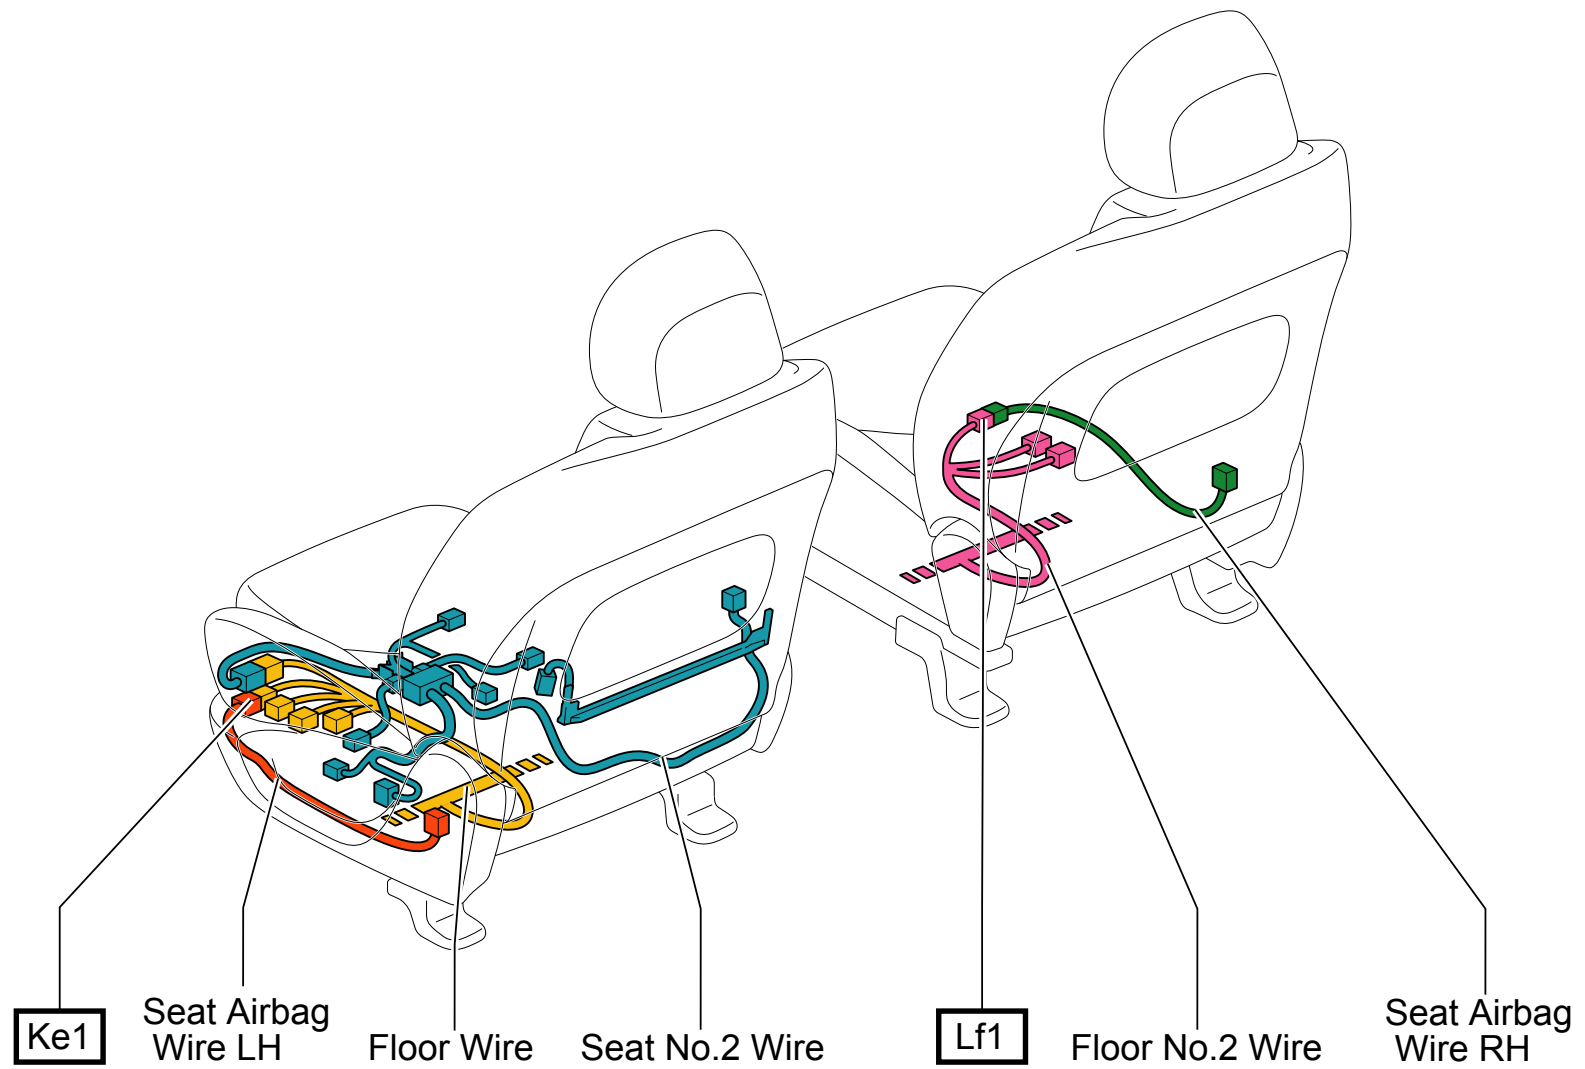

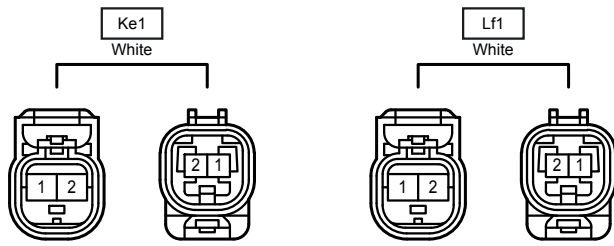

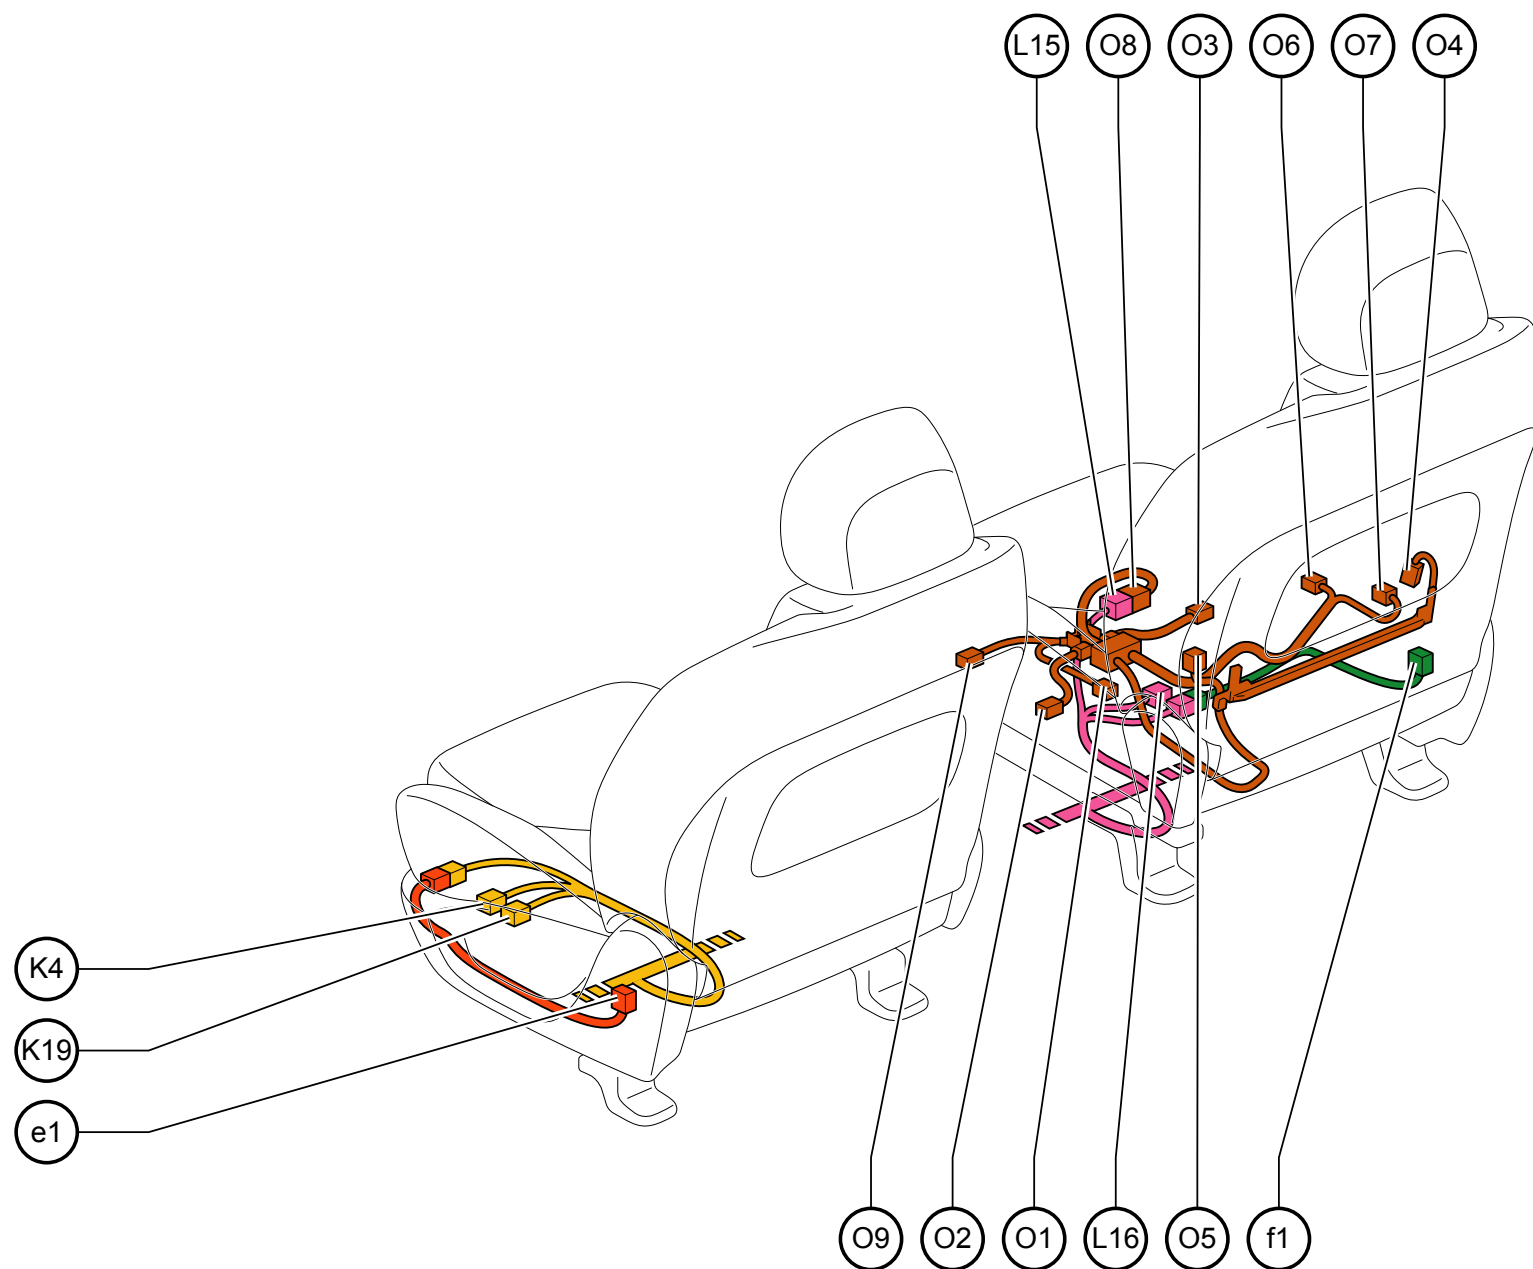

- K 4 Seat Heater (LH)
- K 19 Front Seat Inner Belt (Front Passenger's Side)

- L 15 Junction Connector
- L 16 Front Seat Inner Belt (Driver's Side)

- O 1 Power Seat Motor (Driver's Seat Slide Control)
- O 2 Power Seat Motor (Driver's Seat Lifter Control)
- O 3 Power Seat Motor (Driver's Seat Front Vertical Control)
- O 4 Power Seat Motor (Driver's Seat Reclining Control)
- O 5 Power Seat Motor (Driver's Seat Lumbar Support Control)
- O 6 Power Seat SW (Driver's Seat)
- O 7 Power Seat SW (Lumbar Support)
- O 8 Junction Connector
- O 9 Seat Heater (RH)

- e 1 Side Airbag Squib (LH)

- f 1 Side Airbag Squib (RH)

Position of Parts in Seat <RHD>

