


GMC Savana 1999 – 2000 fuse box diagram

Instrument Panel Fuse Block

The fuse block access door is on the driver's side of the instrument panel above the hood release lever.

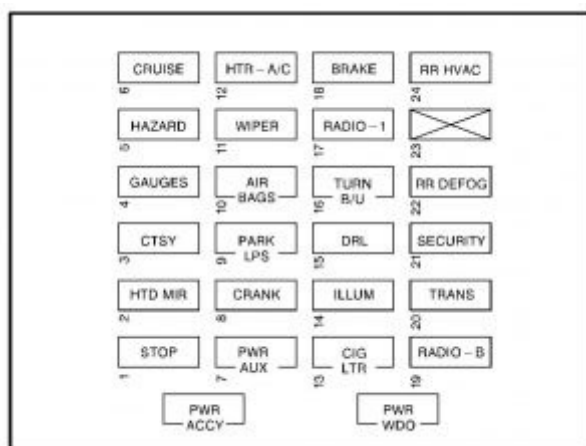

GMC Savana – fuse box – instrument panel


Position	Name	Circuits protected
1	STOP	Stop/CHMSL, Stoplamps
2	HTD MIR	Electric Heated Mirrors
3	CTSY	Courtesy Lamps, Dome/RDG Lamps, Vanity Mirrors, Power Mirrors
4	GAUGES	IP Cluster, DRL Relay, DRL Module, HDLP Switch, Keyless Entry Illumination, Low Coolant Module, CHIME Module, DRAB Module
5	HAZARD	Hazard Lamps/CHIME Module
6	CRUISE	Cruise Control
7	PWR AUX	Auxiliary Power Outlet, DLC
8	CRANK	—
9	PARK LPS	License Plate Lamp, Parking Lamps, Taillamps, Front Sidemarkers, Glove Box Ashtray
10	AIR BAGS	Air Bags
11	WIPER	Wiper Motor, Washer Pump
12	HTR-A/C	A/C, A/C Blower, High Blower Relay, HTD Mirror
13	CIG LTR	Cigarette Lighter
14	ILLUM	IP Cluster, HVAC Controls, RR HVAC Controls, IP Switches, Radio Illumination, Door Switch Illumination
15	DRL	DRL Relay
16	TURN B/U	Front Turn, RR Turn, Back-up Lamps, BTSI Solenoid
17	RADIO-1	Radio (Ign, Accy), Upfitter Provision Relay
18	BRAKE	4WAL PCM, ABS, Cruise Control
19	RADIO-B	Radio (Battery), Power Antenna

20	TRANS	PRNDL, Automatic Transmission
21	SECURITY	Passlock
22	RR DEFOG	Rear Window Defog
23	Not Used	—
24	RR HVAC	RR HVAC Controls, HIGH, MED, LOW Relays
A	PWR ACCY	Power Door Lock, Six-Way Power Seat, Keyless Entry Illumination Module
B	PWR WDO	Power Windows

Fuse amperage levels are imprinted on the fuse panel under the dash.

Engine Compartment Fuse Relay Center

The fuse block is on the driver's side of the engine compartment at the rear.

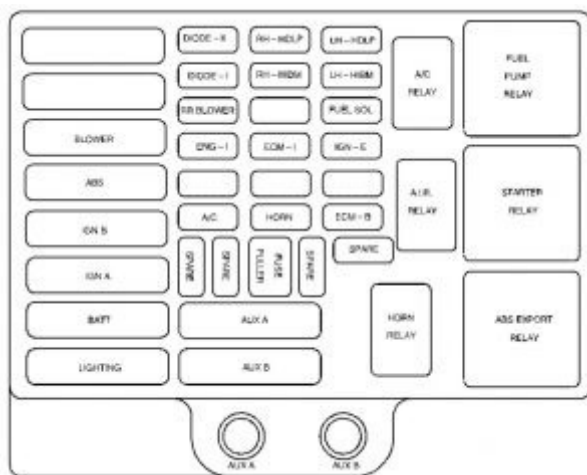

GMC Savana – fuse box – engine compartment

Name	Circuit protected
BLOWER	Front Blower Motor
ABS	Electronic Brake Control Module
IGN B	Ignition Switch
IGN A	Starter Relay, Ignition Switch
BATT	Instrument Panel Fuse Block
LIGHTING	Instrument Panel Fuse Block, Headlamp Switch
RR BLOWER	Rear Auxiliary Blower Motor Relays
ENG-I	Heated O2 Sensors, Mass Air Flow Sensor, EGR Valve Solenoid, Evap Canister Purge Valve, Crankshaft Position Sensor, Secondary Air Injection Relay (Diesel), Water in Fuel Sensor (Diesel), Fuel Heater (Diesel), Glowplug Relay (Diesel), Wastegate Solenoid (Diesel)
A/C	Air Conditioning Clutch Relay
SPARE	Spare Fuses
AUX A	Upfitter Provisions

AUX B	Upfitter Provisions
RH-HDLP	Right-hand Headlamp (Export only)
RH-HIBM	Right-hand High-beam Headlamp (Export only)
ECM-I	Ignition Coil, Camshaft Position Sensor, VCM, Fuel Injectors, Coil Driver
HORN	Horn Relay, Underhood Lamp(s)
LH-HDLP	Left-hand Headlamp (Export only)
LH-HIBM	Left-hand High-beam Headlamp (Export only)
FUEL SOL	PCM, Fuel Solenoid Driver, Engine Shutoff Solenoid
IGN-E	Air Conditioning Clutch Relay
ECM-B	Fuel Pump Relay, VCM, PCM, Fuel Pump and Engine Oil Pressure Switch