


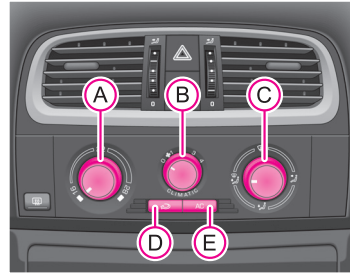


Škoda Fabia BRIEF INSTRUCTIONS

Climatic*


- A** - Heating: Controls
- B** - Controlling blower
- C** - Using air distribution regulator
- D** - Recirculating air system
- E** - Switching cooling on and off




Tailgate*

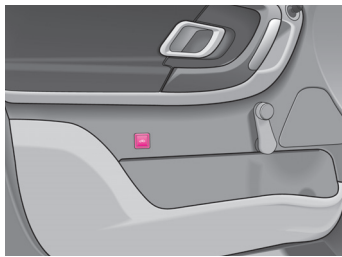

Filling the tank

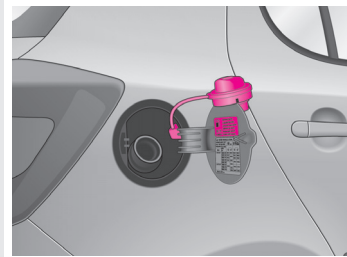

Rear seats

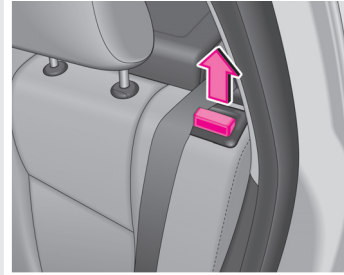


Folding rear seat forward.

Pull up seat cushion and fold forward.

Pull release knob in rear seat backrest and fold seat forward.

Pull out the head restraints and fold the rear seat backrest fully forward.

Front seats

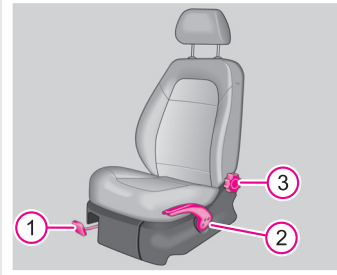


1 - To move seat forward and back

2 - Adjusting seat height*




3 - Adjusting backrest angle

Checking oil level

- a** - Oil **must not** be topped up
- b** - Oil **may** be topped up
- c** - Oil **must** be topped up

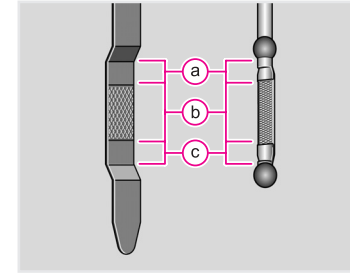

Bonnet

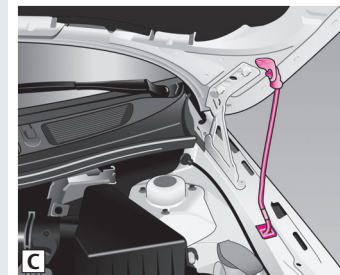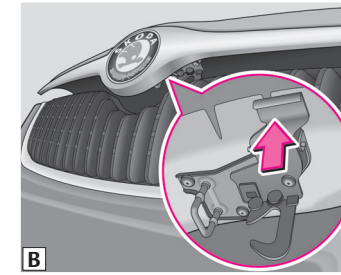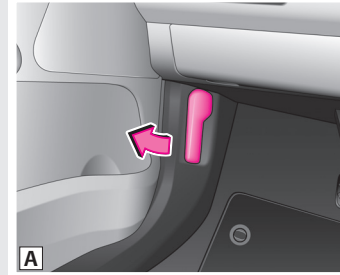

Warning!

For safety reasons, the bonnet must always be properly closed when vehicle is moving.


Always check therefore after closing the bonnet that the lock is engaged!

Child safety lock




The rear doors are equipped additionally with a child safety lock.

Gearshift (manual gearbox)

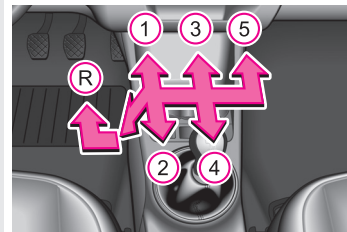

Shift pattern

Automatic gearbox*

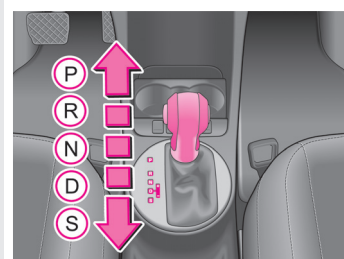

P - Parklock

R - Reverse gear

N - Neutral


D - Drive position for driving forward

S - Position for sporty style of driving


Shifting manually (Tiptronic)

- + - Shifting up
- - Shifting down

Head restraints

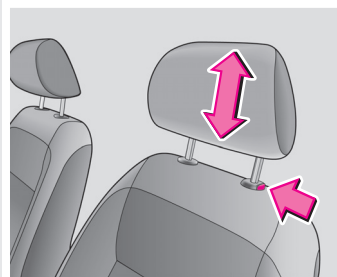


Switching lights on and off

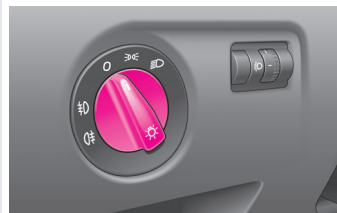

- O** - Switching off all lights
- Switching on side lights
- Switching on low beam

Lever for windscreen wiper/washer with switch for multi-functional display*

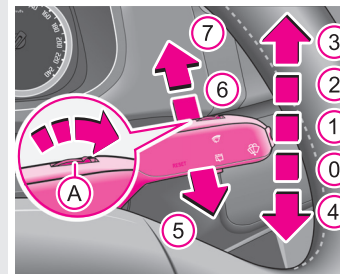

Windscreen wiper and washer system

- 0** - Switching off wiper
- 1** - Intermittent wipe
- A** - Intermittent switch
- 2** - Slow wipe
- 3** - Fast wipe
- 4** - Flick wipe
- 5** - Automatic wipe/wash

Rear window wiper*

- 6** - The rear window wiper operates every 6 seconds
- 7** - Automatic wipe/wash

Škoda Auto is constantly working on the further development of all types and models. Please understand that, for this reason, changes to the scope of supply in terms of shape, equipment and engineering may be introduced at any time. It is therefore not possible to derive any claims from the information, illustrations and descriptions contained in this Owner's Manual.

Reprinting, reproduction, translation or any other use of this document, in whole or in parts, is not permitted without the written consent of Škoda Auto.

Škoda Auto expressly reserves all rights in respect of copyright.

Subject to modification.

Published by: ŠKODA AUTO a.s.

© ŠKODA AUTO a.s. 2006

Zkrácený návod

S55.56111.01.20

Fabia anglicky 12.06

5J6 012 040 C

You have opted for a Škoda – our sincere thanks for your confidence in us.

These brief instructions are intended to enable you to quickly familiarise yourself with the individual controls. The brief instructions are not a substitute for the **Fabia** Owner's Manual.

Equipment marked with * are fitted as standard only to certain model versions or are available only for certain models as optional equipment.

We wish you pleasant motoring at all times.


ŠkodaAuto

1

Power window lifters*

2

Electrically adjustable exterior mirrors*

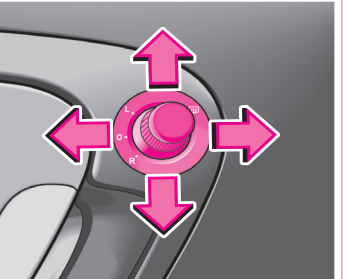

Position **L** - Left-hand mirror

Position  - Heating exterior mirror (applies only to models with power windows)

Position **R** - Right-hand mirror

3, 11


Air outlet vents

4

Multi-function module*

5

Multi-functional switch

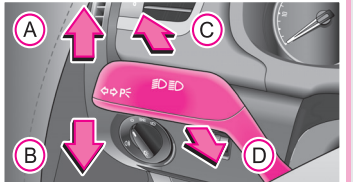

A - Right turn signals
B - Left turn signals
C - High and low beam
D - Headlight flasher



6





Headlight flasher, driver airbag

7

Instrument cluster:
Instruments and indicator lights

Turn signals	
Main beam	
Low beam	
Rear fog light	
Dynamo	
Fog lights*	
Cornering light*	
Power steering	

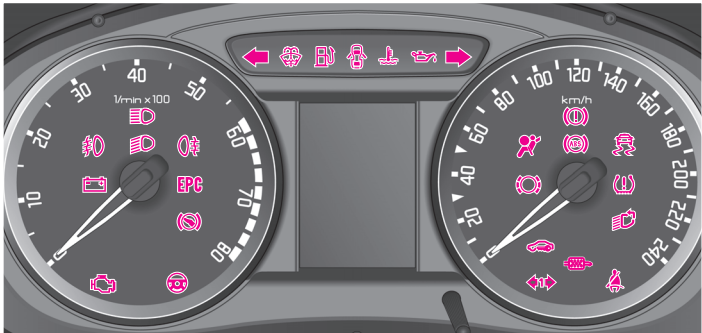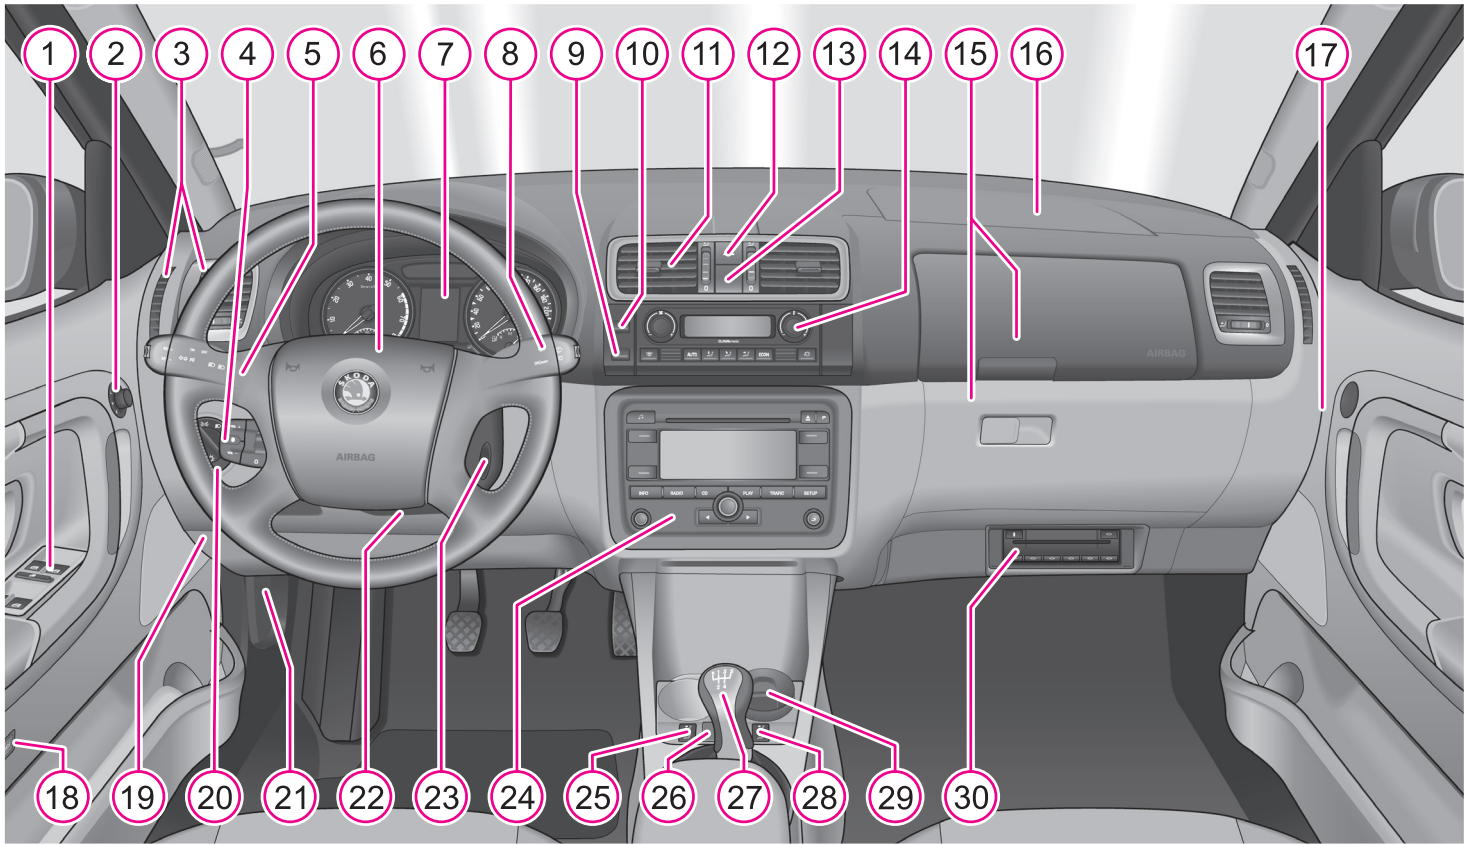

     EPC fault light (petrol engine)	 EPC	Electronic immobiliser	
 Glow plug system (diesel engine)		Fuel reserve	
 Trailer turn signal system*		Engine oil pressure	
 Coolant temperature/ Coolant level		Brake pad worn*	

Open door*	
Washer fluid level*	
Control system for exhaust	
Traction control system (TCS)*/ Electronic stability programme (ASR)*	
Tyre pressure control system*	
Antilock brake system (ABS)*	
Brake system	
Airbag system	
Diesel particle filter* (diesel engine)	
Seat belt warning light*	

9

Switch for the ESP*
Switch for the TCS*

10

Switch for rear window heater

12

Switch for hazard warning lights

13

Switched off front seat passenger airbag*

14

Heating and air conditioning system*

15

Storage compartments*

16

Front passenger airbag*

17

Switch for front passenger airbag*

18

Tailgate*
Interior monitor*

19

Fuse carrier

20


Light switch and control dial for headlight beam range regulation

21

Bonnet release lever


22

Lever for adjusting the steering wheel

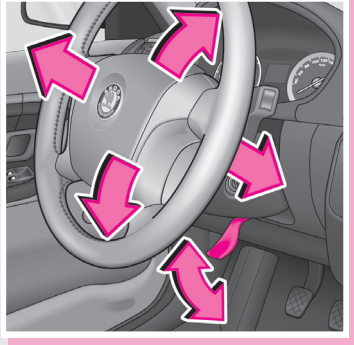

23

Ignition lock

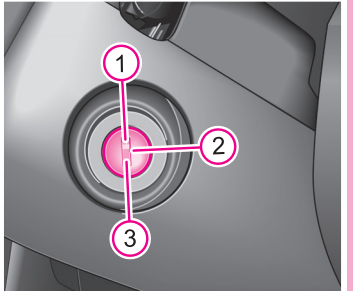

Petrol engines

1 - Ignition off, engine off
2 - Ignition on
3 - Starting engine

Diesel engines

1 - Fuel supply cut off, engine off
2 - Glow and drive positions
3 - Starting engine

24

Radio*

25, 28

Switch for seat heater*

26

Button for central locking switch*

27

Gearshift

29

Ashtray*
Storage compartments

30

CD changer *