

Cadillac Catera 1998 fuse box diagram

Instrument Panel Fuse Block (Driver's Side)

The fuse block is located below the steering wheel on the driver's side.



Cadillac Catera – fuse box diagram – instrument panel

(driver's side)


Fuse	Usage
1	RH and LH Front Side Door Window Regulator Motor, LH Front Side Door Window Switch
2	Stoplamp Switch
3	Automatic Transmission Range Switch and Control Indicator, Power Steering Control Module, Hazard Warning Switch, Automatic Transmission Winter Mode Switch
4	RH and LH Rear Seat Cushion Heater Relay
5	Transmission Control Module
6	Radio Speaker Amplifier
7	RH and LH Rear Side Door Window Regulator Motor
8	Headlamp Switch, Turn Signal Switch, Horn Relay, CD Changer, Multifunction Relays
9	Windshield Wiper Motor and Relay, Windshield Wiper and Windshield Washer Switch
10	Body Control Module (BCM), Heater Water Auxiliary Pump, Fan Control Relays, ECM Relay, Auxiliary Water Pump Relay
11	Heater and A/C Control, RH and LH Outside Rearview Mirrors, Outside Remote Control Rearview Mirror Switch
12	Hazard Warning Switch, Instrument Cluster, Data Link Connector (DLC), Stoplamp Switch, Gage Cluster, Heater and A/C Control
13	Remote Control Outside Rearview Mirror Switch, A/C Compressor Relay, Coolant Fan Test Connector, A/C Load Switch

14	Cellular Telephone, RH and LH Windshield Washer Nozzle, Driver and Passenger Heated Seat Switch, Heater and A/C Control, Heated Outside Rearview Mirror and Rear Window Defogger Relay
15	Rear Suspension Leveling Air Compressor Relay, Instrument Cluster, Gage Cluster, Cruise Control Switch and Module, Headlamp Switch, Multifunction Relay, Passenger and Driver Heated Seat Relay, BCM, Sunroof Actuator, Automatic Level Control Sensor, RH and LH Heated Rear Seat Switch and Cushion Relay, Driver Seat Adjuster Memory Module, LH Front Side Door Window Switch, Inside Rearview Mirror
16	Cigarette Lighter (Front and Console)
17	Horn #1 and #2
18	Fuel Pump
19	Electronic BrakeD'rraction Control Module
20	Passenger and Driver Heated Seat Relay
21	Daytime Running Lamp (DRL) Relay, LH High-Beam Headlamp Relay
22	Headlamp Switch, LH Headlamp (Low Beam)
23	LH Parking Lamp and Turn Signal Lamp, LH Rear Sidemarkers Lamp, Multifunction Relay, LH Stoplamp and Taillamp
24	Lifting Magnet, BCM, Gage Cluster
25	Sunroof Actuator
26	Headlamp Switch, RH and LH Front Sidemarkers Lamp, Middle Taillamp, RH and LH Rear License Plate Lamp, Radio, Automatic Transmission Control Indicator, Heater and A/C Control
27	Automatic Level Control Sensor, Rear Suspension Leveling Air Compressor and Relay
28	Remote Control Door Lock Receiver, Door Lock Relay, Rear Compartment Lid Release Connector (Not Used)
29	Multifunction Relays
30	RH Parking Lamp and Turn Signal Lamp, RH Rear Sidemarkers Lamp, RH Stoplamp and Taillamp
31	RH Low-Beam Headlamp Turn Signal Switch
32	RH High-Beam Headlamp Relay
33	Blower Controller, A/C Compressor Relay
34	Heated Rear Window Defogger Relay, Heated Outside Rearview Mirror

35	Passenger and Driver Seat Adjuster Switch, Driver Seat Adjuster Memory Module
----	---

Instrument Panel Fuse Block (Passenger's Side)

The relay box is located on the lower part of the instrument panel, to the right of the steering column.

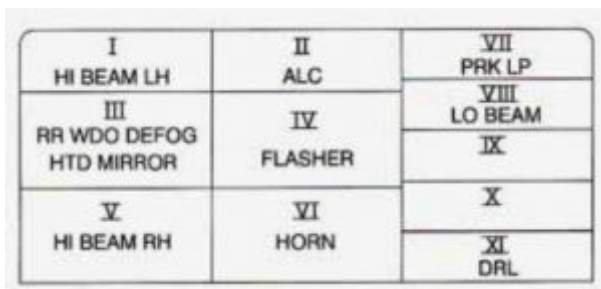


Cadillac Catera – fuse box diagram –

instrument panel (passenger's side)

Fuse/Relay	Usage
I	High-Beam Headlamps I (LH)
II	Automatic Level Control
III	Rear Window Defog, Heated Mirrors
IV	Hazard Warning Flashers
V	High-Beam Headlamp II (RH)
VI	Horn
VII	Parking Lamps and Turn Signal Lam
VIII	Low-Beam Headlamps
IX	—
X	—
XI	Daytime Running Lamps

Engine Compartment Relay Center

The relay center is located next to the battery on the driver's side of the engine. Lift the cover to access.

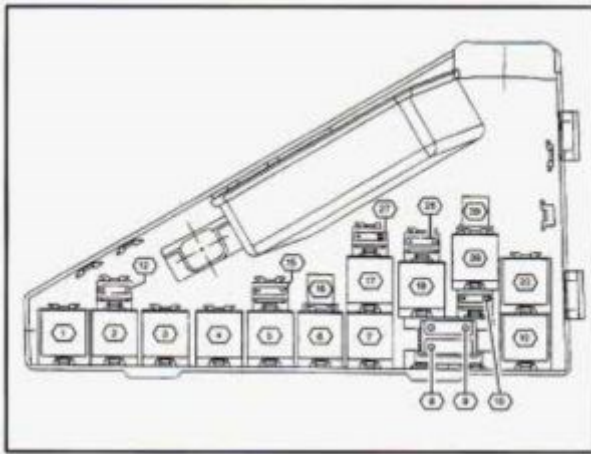

Cadillac Catera – fuse box diagram – engine

compartment

Fuse/relay	Usage
1	Secondary Air Injection Pump (Relay K12)
2	Fan Control (Relay K67)
3	Auxiliary Water Pump (Relay K22)
4	Windshield Wiper Motor (Relay K8)
5	A/C Compressor (Relay K60)
6	Fan Control (Relay K87)
7	Fan Control (Relay K26)
8	Fan Control (Fuse 42)
9	Secondary Air Injection Pump (Fuse 49)
10	Engine Controls Power (Relay K40)
12	Fan Control (Fuse 40)
15	Fan Control (Fuse 52)
16	Connector C11
17	Fan Control (Relay K52)
18	Fan Control (Relay K28)
19	Fan Control Relay, Engine Control Module (ECM) Relay (Fuse 50)
20	Fuel Pump (Relay K44)
27	Heated Oxygen Sensors (Fuse 43)
28	Engine Control Module (ECM) (Fuse 60)

29	Engine Control Module (ECM) (Relay K48)
39	Coolant Fan Test Connect