

Lincoln Navigator 2015 – 2017 fuse box diagram

Power distribution box

The power distribution box is located in the engine compartment.



E100582

Lincoln Navigator – fuse box diagram –

power distribution box

No.	A	Circuit Protected
11	40	Power running boards, heated seats
12	40	Run/start relay
13	30	Starter relay
14	50	Electronic cooling fan
15	20	RH HID headlamp
16	50	Electronic fair
17	20	LH HID headlamp
18	30	Trailer brake

19	20	Power point (console)
20	—	Not used
21	30	Trailer tow module
22	30	Passenger power seat
26	10	ALT sensor
27	20	4×4 all wheel drive module
28	25	Trailer tow park lamp relay
29	10	Integrated wheel end solenoid
30	10	Air conditioner clutch relay
31	15	Trailer tow back up lamp
32	40	Blower motor relay
33	40	110-volt AC power point
34	30	Auxiliary blower motor
35	50	Powertrain control module relay
36	30	Power liftgate

41	10	Powertrain control module keep-alive power
42	5	Run/start relay
43	10	Brake on/off switch
44	20	Fuel pump relay
45	10	Not used (spare)
46	15	Front/rear washer pump
47	30	Rear wiper motor
48	40	Trailer tow module
49	—	Not used
50	30	Front wiper motor relay
51	40	Rear window defroster and heated mirror relay
52	10	Anti-lock brake system run/start feed
53	5	Powertrain control module ISP
54	5	Power steering
55	15	Headlamp control module

56	30	Passenger compartment fuse panel run/start feed
57	5	Blower motor run/start
58	—	Not used
59	15	Heated mirrors
60	—	Not used
61	—	Not used
63	25	Electronic fan
64	30	Moonroof
65	20	Auxiliary power point (instrument panel valance panel)
66	20	Auxiliary power point (rear of center console)
67	40	Front row climate controlled seats
68	30	Anti-lock brake system valves
69	60	Anti-lock brake system pump
70	30	Third row power fold seat
71	20	Auxiliary power point/cigar lighter


72	20	Auxiliary power point (right rear quarter panel)
73	20	Rear seat climate module
74	30	Driver power seat
75	25	Vehicle power 1 – powertrain control module
76	20	Vehicle power 2 – powertrain control module
77	20	Vehicle power 4 – ignition coils
78	–	Not used
79	15	Vehicle power 3 – powertrain control module
80	–	Not used
81	–	Not used
82	5	Rain sensor
83	–	Not used
84	–	Not used
Relay		
1	Rear washer	

2	Starter
3	Blower motor
4	Rear wiper
5	Fuel pump
6	Electronic cooling fan
7	Rear window defroster, heated mirror
8	Electronic cooling fan
9	Run/start
10	Power distribution box
23	Air conditioner clutch
24	Trailer tow park lamp
25	Not used
37	Not used
38	Not used
39	Trailer tow backup lamps

40	Electronic fair 2
62	Not used
85	Wiper motor

Passenger compartment fuse panel

The fuse panel is located under the right-hand side of the instrument panel.

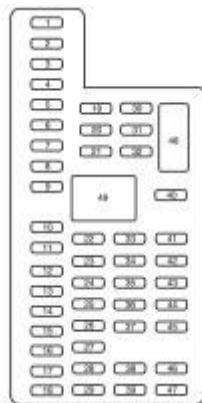

E163182

Lincoln Navigator – fuse box diagram-

passenger compartment

No.	A	Circuit Protected
1	30	Driver window
2	15	Rear seat control, multimedia gateway module
3	30	Passenger window
4	10	Demand lamps
5	20	Amplifier
6	5	Rear electronic automatic temperature control

7	7.5	Power mirror, driver seat memory switch
8	—	Not used
9	10	SYNC, power lift gate, electric finish panel, display
10	10	Run accessory relay
11	10	Passive entry/start module
12	15	Interior lighting, puddle lamps
13	15	Right turn and stop/turn signals
14	15	Left turn and stop/turn signals
15	15	Reverse lamp, center high mount stop lamp, EC mirror
16	10	Right front low beam
17	10	Left front low beam
18	10	Brake shift interlock/start button LED/keypad illumination, third row power folding seat, passive entry touch start
19	20	Subwoofer amplifier, THX amplifier
20	20	Lock/unlock relays
21	—	Not used

22	20	Horn
23	15	Steering wheel control module, cluster
24	15	Adjustable pedals/power adjustable column, Datalink
25	15	Liftgate release decklid, liftglass release motor
26	5	Push to start switch
27	20	Passive entry/start module
28	15	Ignition switch, key inhibit switch
29	20	Radio, GPS
30	15	Front park lamps
31	5	Trailer brake on/off
32	15	Power vent, rear windows ('15-'16), power inverter, front windows motor ('17)
33	10	CCD suspension module
34	10	Rear park assist, rear camera, BLIS, heated seat
35	5	Climate module, O/D switch
36	—	Not used

37	10	4X4 module
38	10	EC mirror, moonroof, DVD
39	15	Left and right front high beams
40	10	Rear park/tail lamps
41	7.5	Restraints control module
42	—	Not used
43	—	Not used
44	—	Not used
45	5	Not used (spare)
46	10	Climate control
47	—	Not used
48	30	Circuit breaker: Front passenger and rear windows
Relay		
49	Windows and vents	