


Chevrolet Malibu 2007 fuse box diagram

Instrument Panel Fuse Block

The instrument panel fuse block is located at on the lower front side of the console, on the passenger side of the vehicle.

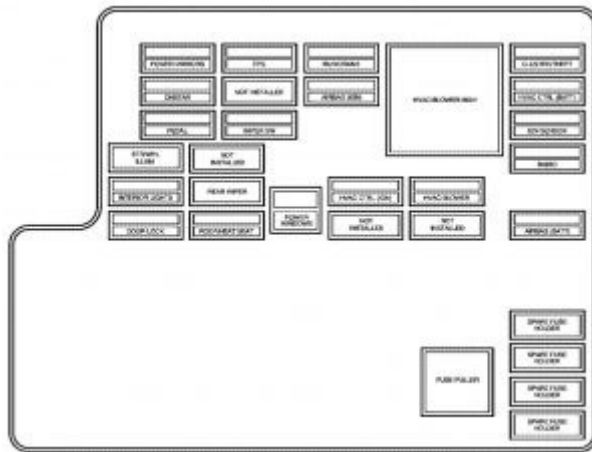

Chevrolet Malibu – fuse box diagram – instrument

panel

Fuses	Usage
POWER MIRRORS	Power Mirrors
EPS	Electric Power Steering
RUN/CRANK	Cruise Control, Electronic Range Select, Driver Shift Control, Passenger Airbag Status Indicator
HVAC BLOWER HIGH (Relay)	Climate Control System
CLUSTER/ THEFT	Instrument Panel Cluster, Theft Deterrent System
ONSTAR	OnStar® System
NOT INSTALLED	Not Used
AIRBAG (IGN)	Airbag System
HVAC CTRL (BATT)	Climate Control System
PEDAL	Adjustable Throttle and Brake Peda
WIPER SW	Windshield Wiper/Washer Switch
IGN SENSOR	Ignition Switch
STR/WHL ILLUM	Steering Wheel Controls Backlighting

NOT INSTALLED	Not Used
RADIO	Audio System
INTERIOR LIGHTS	Overhead Lighting, Trunk/Cargo Lighting
REAR WIPER	Rear Wiper System/ Washer Pump
HVAC CTRL (IGN)	Climate Control System
HVAC BLOWER	Climate Control System
DOOR LOCK	Automatic Door Lock System
ROOF/HEAT SEAT	Sunroof, Heated Seats, Automatic Dimming Rearview Mirror, Compass, Rear Wiper/ Washer System
POWER WINDOWS	Power Window Switch
NOT INSTALLED	Not Used
NOT INSTALLED	Not Used
AIRBAG (BATT)	Airbag System
FUSE PULLER	Fuse Puller
SPARE FUSE HOLDER	Spare
SPARE FUSE HOLDER	Spare
SPARE FUSE HOLDER	Spare
SPARE FUSE HOLDER	Spare

Engine Compartment Fuse Block

The engine compartment fuse block is located on the driver's side of the vehicle, near the battery.



Chevrolet Malibu mk6 – fuse box – engine

compartment

Fuses	Usage
-------	-------

1	Air Conditioning Clutch
2	Electronic Throttle Control
3	Engine Control Module (IGN 1) (V6)
4	Transmission
6	Emission 1
7	Left Headlamp Low-Beam
8	Horn
9	Right Headlamp Low-Beam
10	Front Fog Lamps
11	Left Headlamp High-Beam
12	Right Headlamp High-Beam
13	Engine Control Module (BATT) (L4)
14	Windshield Wiper
15	Anti-lock Brake System
16	Engine Control Module (IGN 1) (L4)
17	Cooling Fan 1
18	Cooling Fan 2
19	Run Relay
20	IBCM 1
21	IBCM (R/C)
22	Rear Electrical Center 1
23	Rear Electrical Center 2
24	Anti-lock Brake System
25	IBCM 2
26	Starter
27 (DIODE)	Windshield Wiper
41	Electric Power Steering

42	Transmission Control Module
43	Ignition Module
44	Fuel Injectors
45	Rear Oxygen Sensors
46 (Resistor)	Brake Lamp Diagnostic
47	Daytime Running Lamps
51	Engine Control Module (BATT) (V6)

Relays	Usage
28	Cooling Fan 1
29	Cooling Fan Mode Series/Parallel
30	Cooling Fan 2
31	Starter
32	Run/Crank, Ignition
33	Powertrain
34	Air Conditioning Clutch
35	High-Beam Headlamps
36	Front Fog Lamps
37	Horn
38	Low-Beam Headlamps
39	Windshield Wiper 1
40	Windshield Wiper 2
48	Daytime Running Lamps

Rear Compartment Fuse Block

The rear compartment fuse block is located in the trunk of the vehicle. Access the fuse block through the trunk panel on the driver's side of the rear cargo area.

22	Trunk
23	Rear Window Defogger
24	Heated Mirror Controls
25	Fuel Pump

Relays	Usage
26	Rear Window Defogger
27	Parklamps
28	Not Used
29	Not Used
30	Not Used
31	Not Used
32	Not Used
33	Back-up Lamps
34	Not Used
35	Not Used
36	Trunk
37	Fuel Pump
38 (Diode)	Trunk, Cargo Lamps