 
 
 


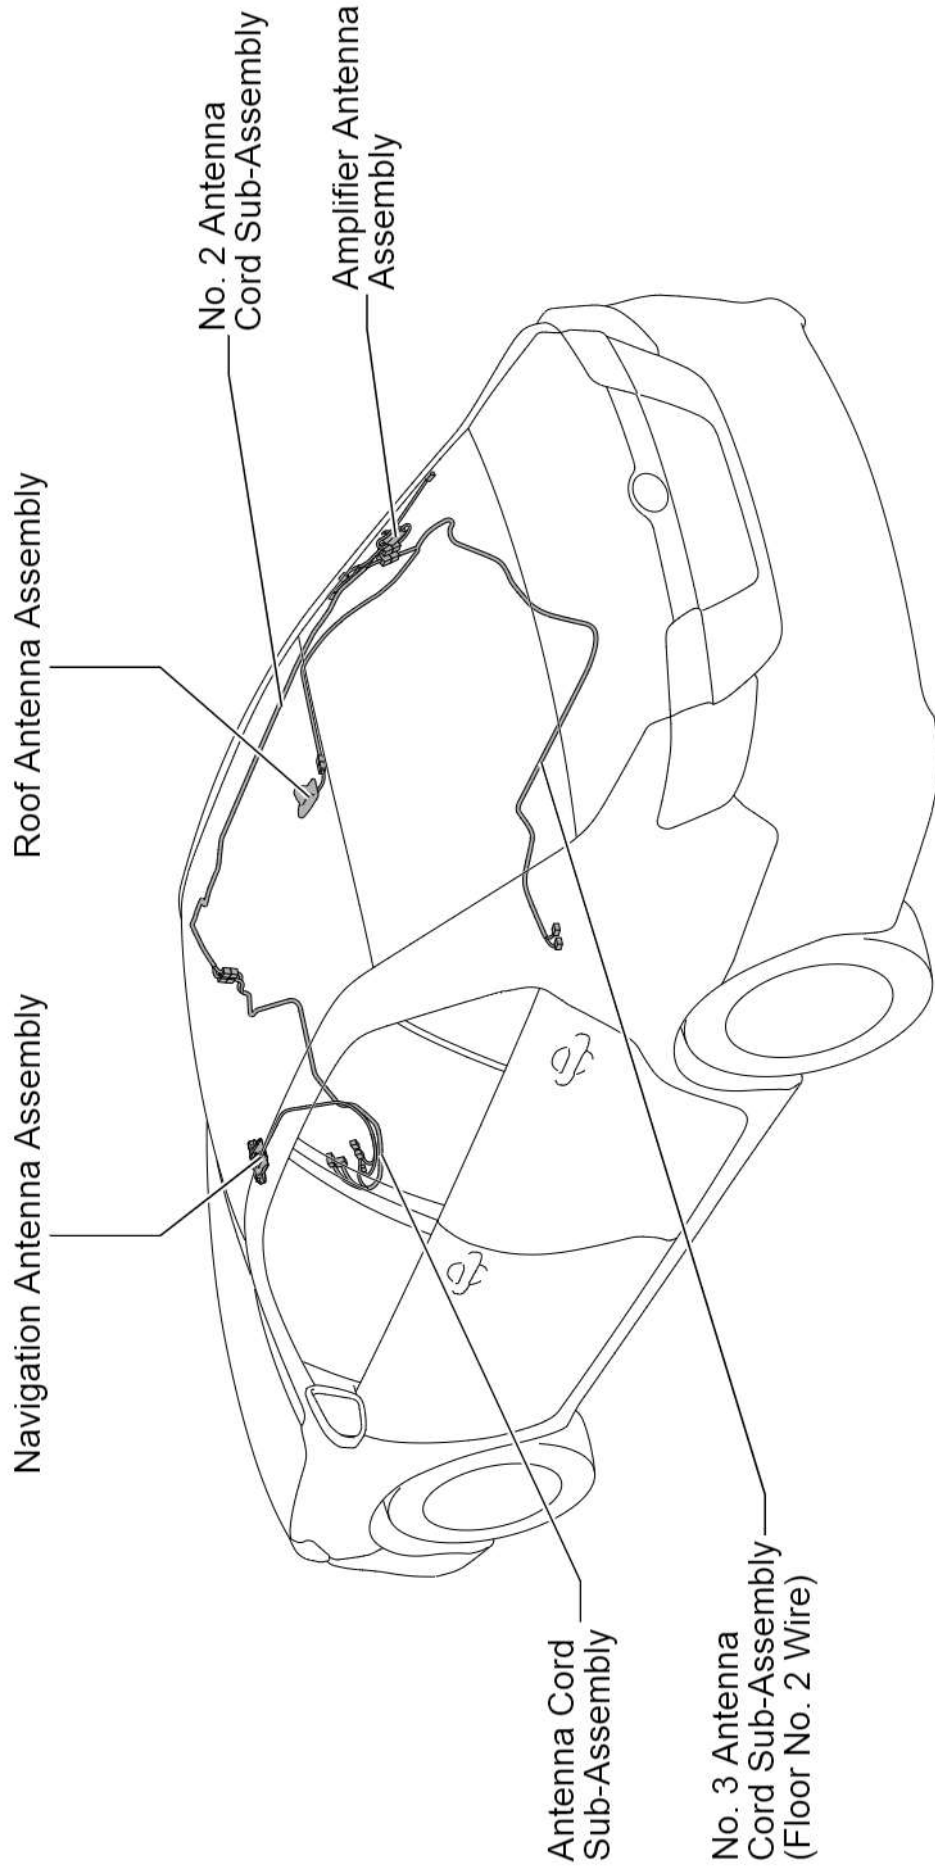

Ground Points in Body

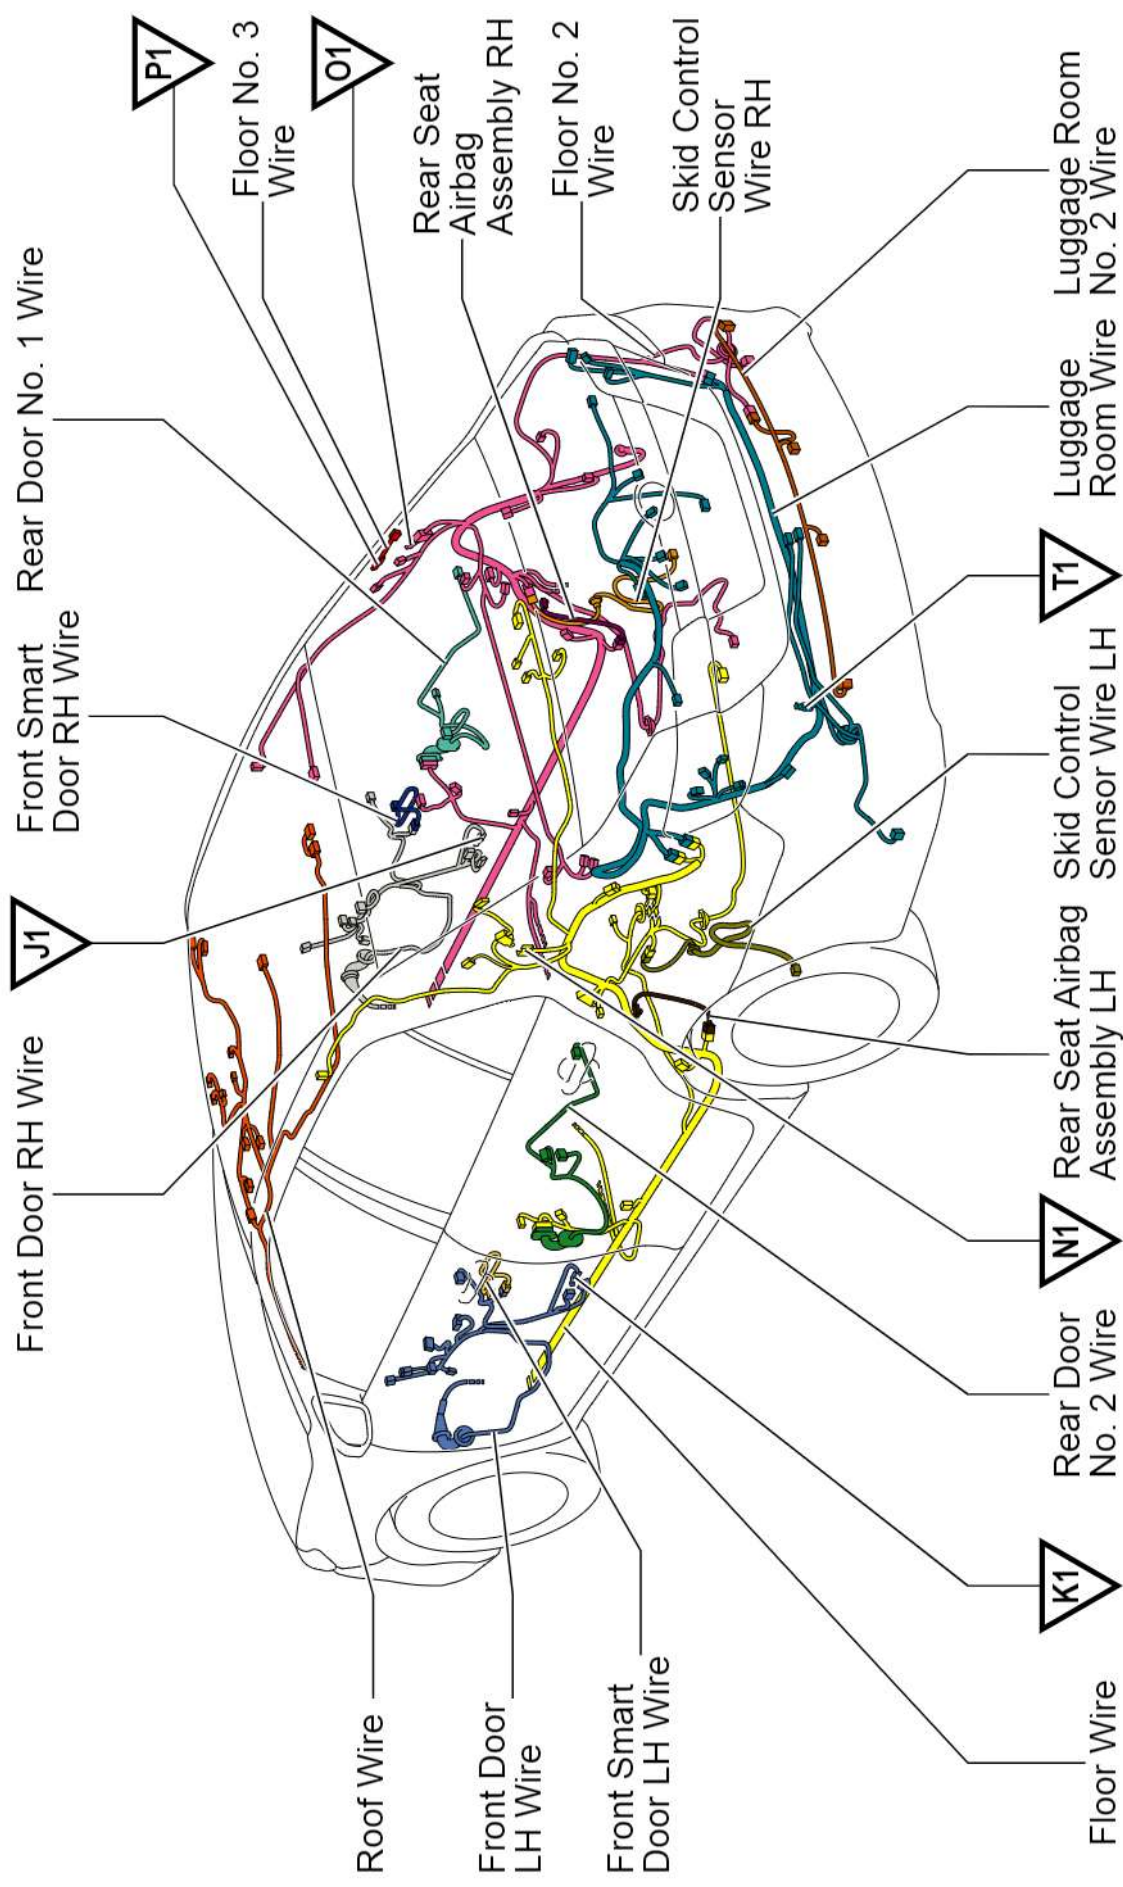





















Position of Parts in Body

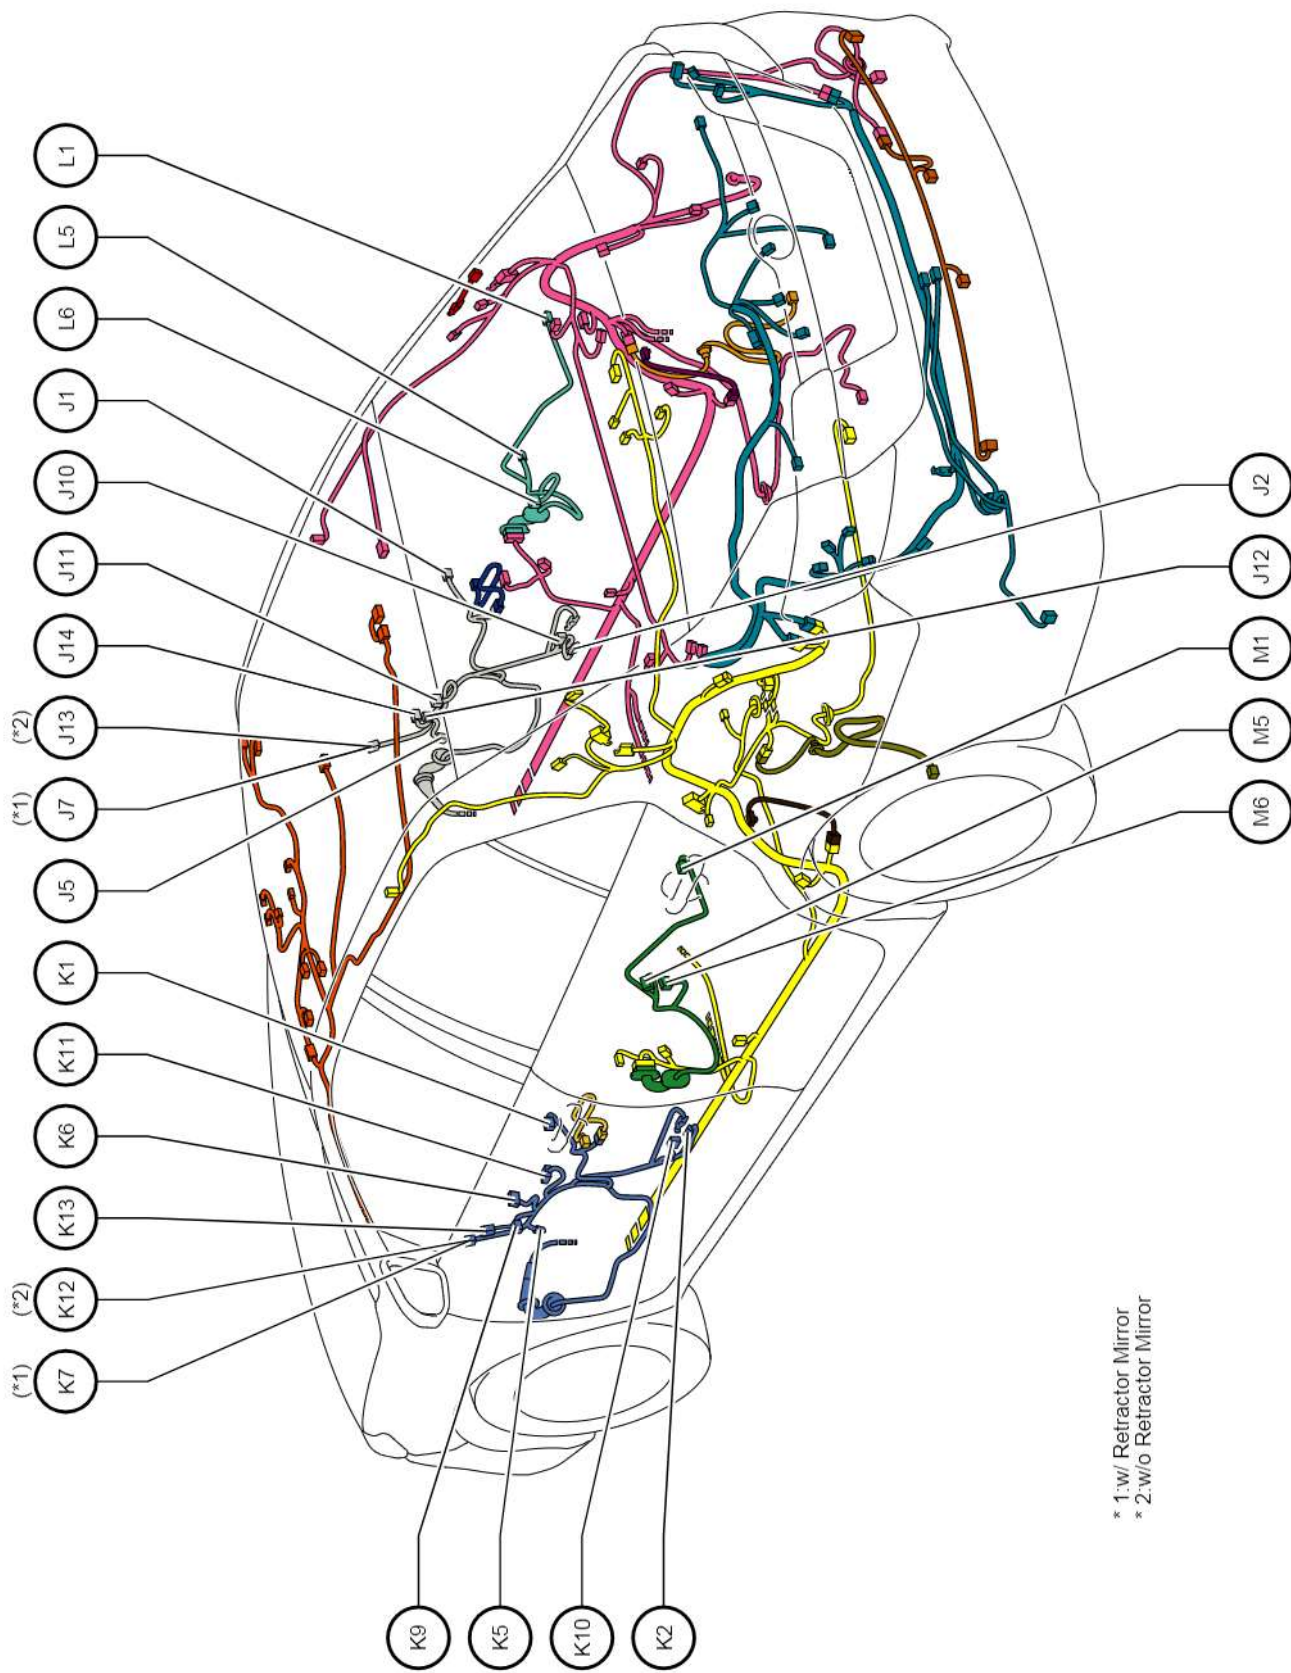


Position of Parts in Body

J	1	Front Door Lock Assembly with Motor RH
J	2	Front Courtesy Light Assembly RH
J	5	Front No. 1 Speaker Assembly RH
J	7	Outer Rear View Mirror Assembly RH
J	10	Door Side Airbag Sensor RH
J	11	Front Power Window Regulator Switch Assembly RH
J	12	Door Control Switch Assembly
J	13	Outer Rear View Mirror Assembly RH
J	14	Front Power Window Regulator Motor Assembly RH
K	1	Front Door Lock Assembly with Motor LH
K	2	Front Courtesy Light Assembly LH
K	5	Front No. 1 Speaker Assembly LH
K	6	Outer Mirror Switch Assembly
K	7	Outer Rear View Mirror Assembly LH
K	9	Front Power Window Regulator Motor Assembly LH
K	10	Door Side Airbag Sensor LH
K	11	Power Window Regulator Master Switch Assembly
K	12	Outer Rear View Mirror Assembly LH
K	13	Junction Connector
L	1	Rear Door Lock Assembly with Motor RH
L	5	Rear Power Window Regulator Motor Assembly RH
L	6	Rear Power Window Regulator Switch Assembly RH
M	1	Rear Door Lock Assembly with Motor LH
M	5	Rear Power Window Regulator Motor Assembly LH
M	6	Rear Power Window Regulator Switch Assembly LH

                    Position of Parts in Body

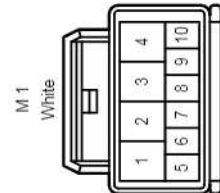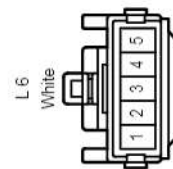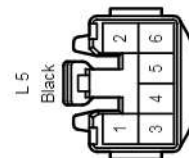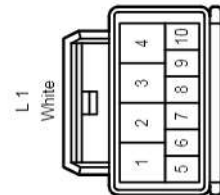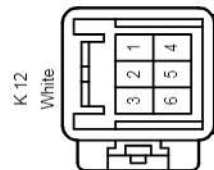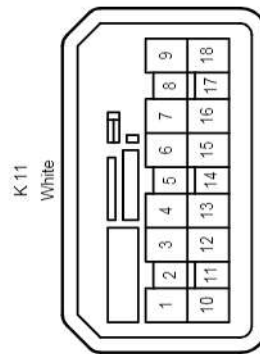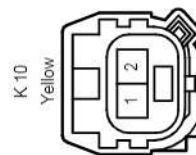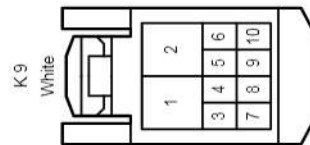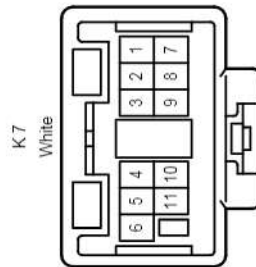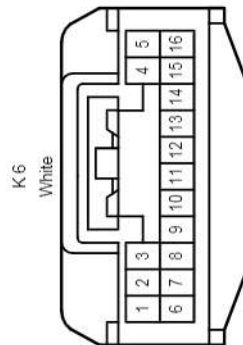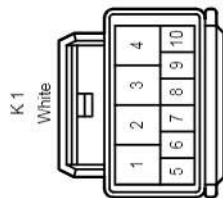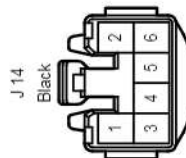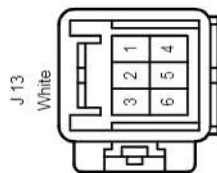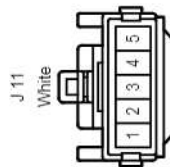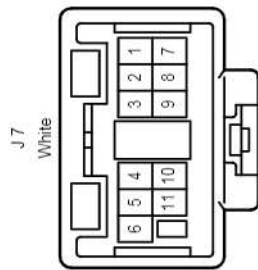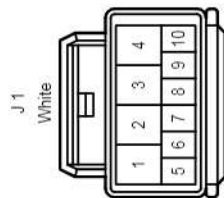
















Position of Parts in Body

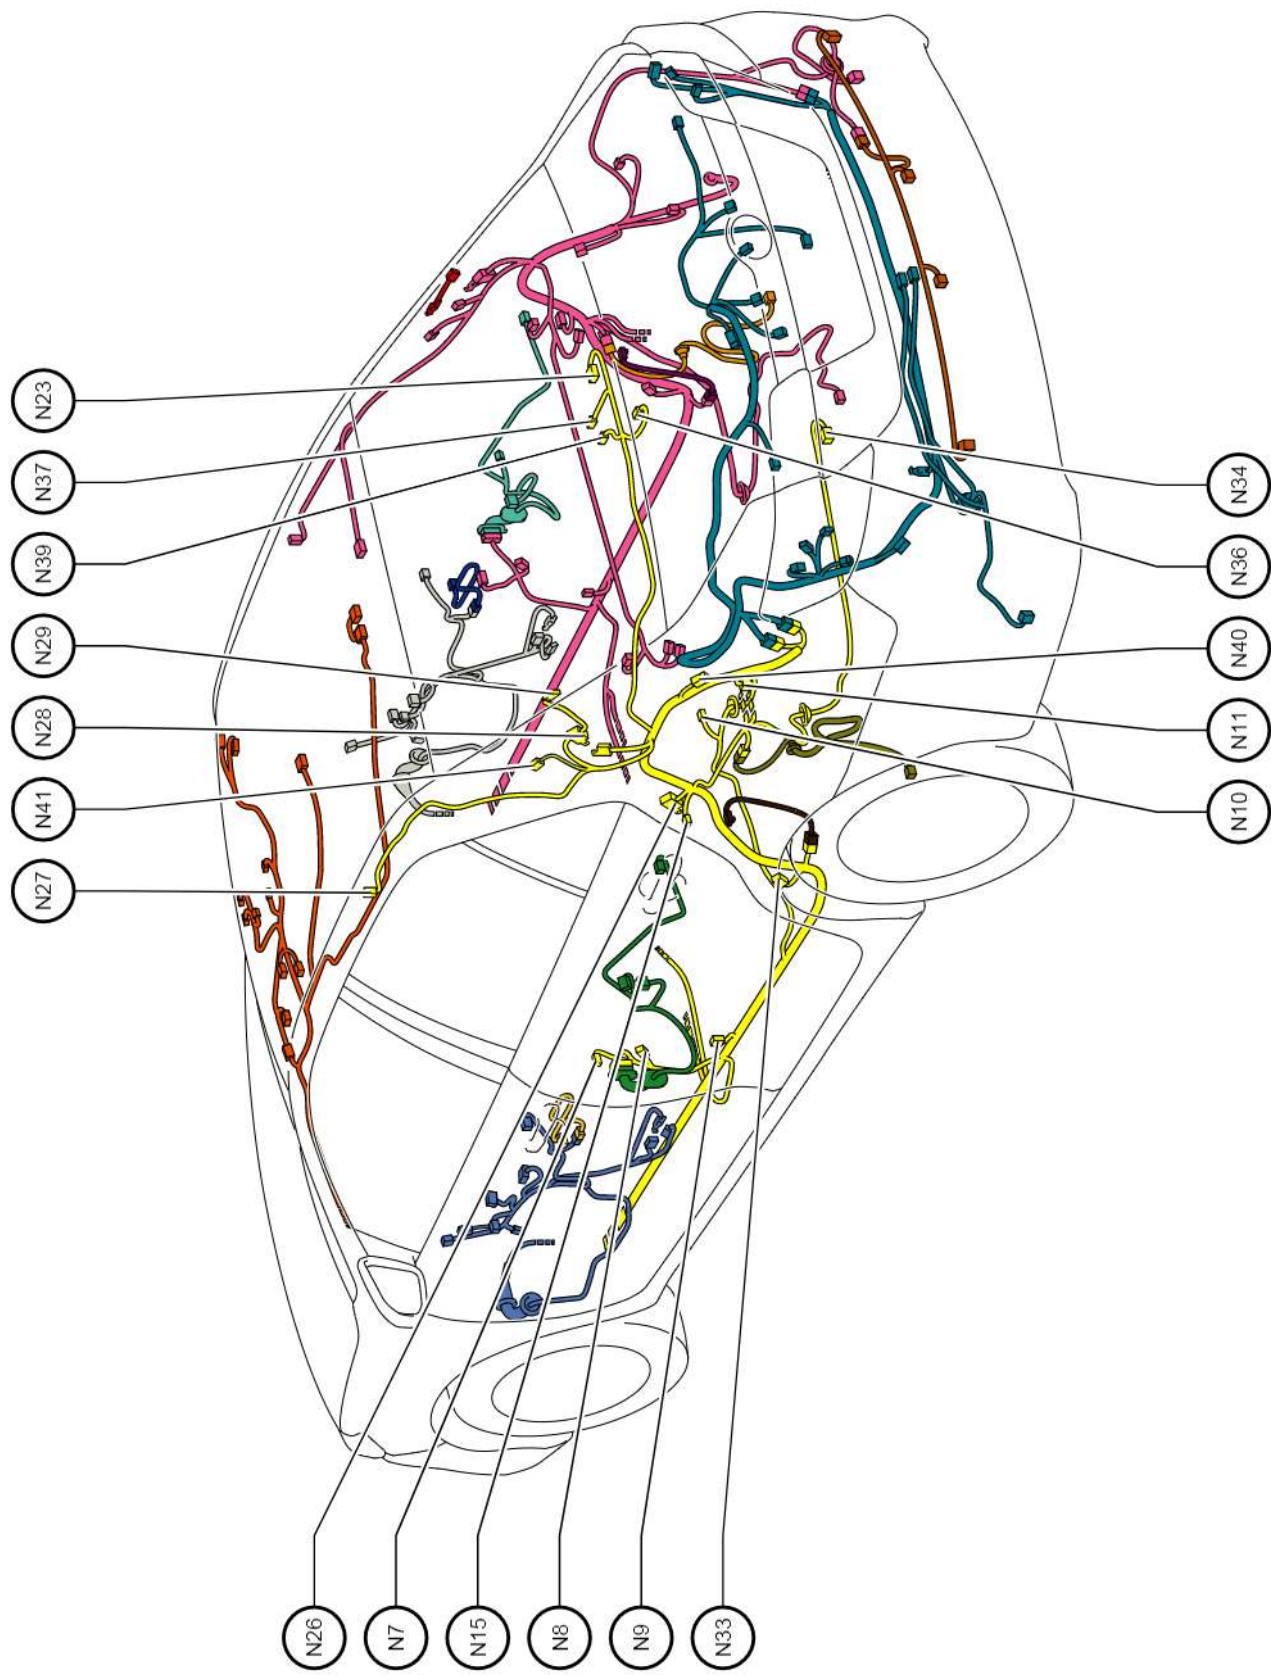 


Position of Parts in Body

N 7	Front Door Courtesy Light Switch Assembly LH
N 8	Side Airbag Sensor Assembly LH
N 9	Front Seat Outer Belt Assembly LH
N 10	No. 2 Indoor Electrical Key Antenna Assembly
N 11	Fuel Suction Tube Assembly with Pump & Gage
N 15	Rear Door Courtesy Light Switch Assembly LH
N 23	No. 1 Luggage Compartment Light Assembly
N 26	Radio Setting Condenser (Center Stop Light)
N 27	Curtain Shield Airbag Assembly LH
N 28	Radio Setting Condenser (Rear Window Defogger)
N 29	Rear Window Defogger (Back Window Glass)
N 33	No. 2 Side Airbag Sensor Assembly LH
N 34	Canister Pump Module
N 36	No. 3 Indoor Electrical Key Antenna Assembly
N 37	Center Stop Light Set
N 39	Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
N 40	Junction Connector
N 41	Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)

               Position of Parts in Body

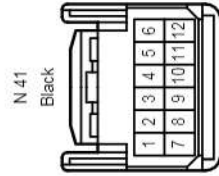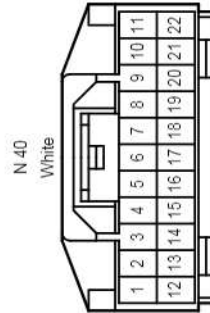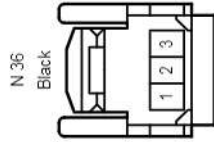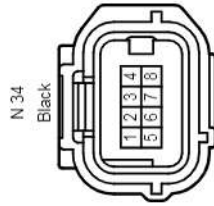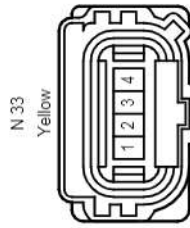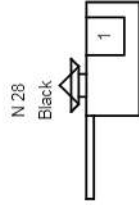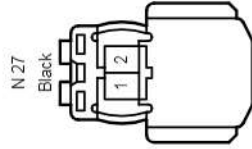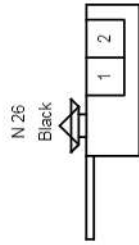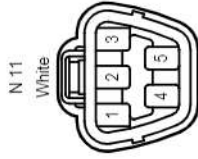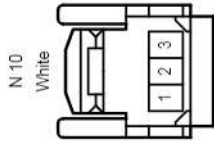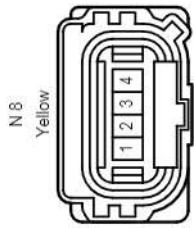

Position of Parts in Body





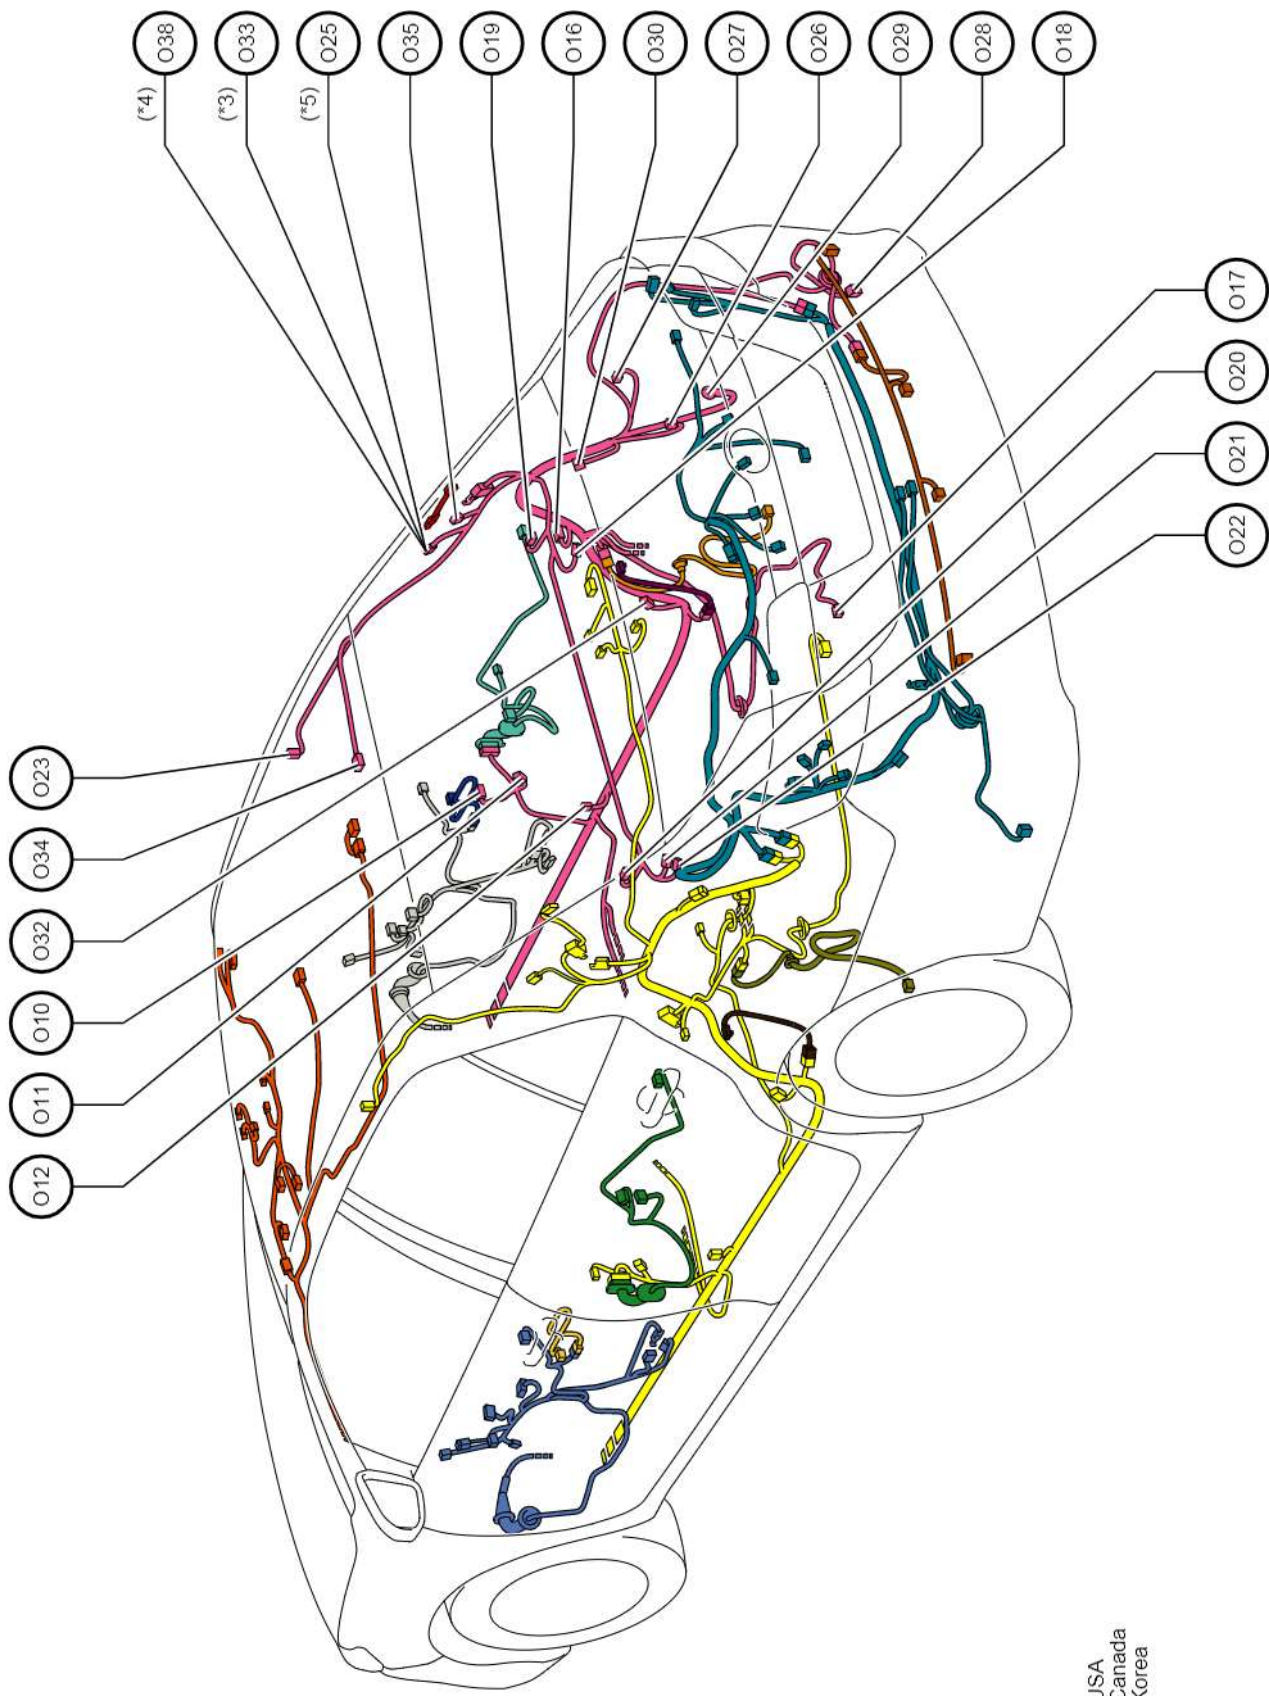 


* 3:USA
* 4:Canada
* 5:Korea


Position of Parts in Body

- O 10 Front Door Courtesy Light Switch Assembly RH
- O 11 Side Airbag Sensor Assembly RH
- O 12 Front Seat Outer Belt Assembly RH
- O 16 Rear Door Courtesy Light Switch Assembly RH
- O 17 Rear Height Control Sensor Sub-Assembly
- O 18 Rear Speaker Assembly RH
- O 19 Rear No. 2 Speaker Assembly RH
- O 20 Rear No. 2 Speaker Assembly LH
- O 21 Rear Speaker Assembly LH
- O 22 Woofer Speaker (Rear Speaker Assembly)
- O 23 Curtain Shield Airbag Assembly RH
- O 25 Door Control Receiver
- O 26 Battery Thermometer Sensor (Thermistor Assembly)
- O 27 Security Horn Assembly
- O 28 Blind Spot Monitor Sensor RH
- O 29 Fusible Link Block Assembly
- O 30 Junction Connector
- O 32 No. 2 Side Airbag Sensor Assembly RH
- O 33 Tire Pressure Warning ECU and Receiver (Door Control and Tire Pressure Monitoring System Receiver Assembly)
- O 34 Roof Antenna Assembly
- O 35 No. 3 Antenna Cord Sub-Assembly
- O 38 Door Control Receiver

     Position of Parts in Body














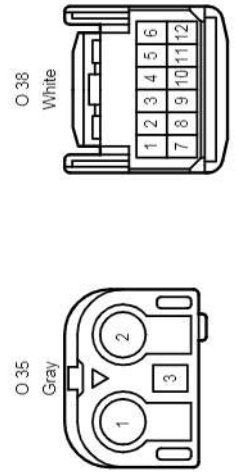
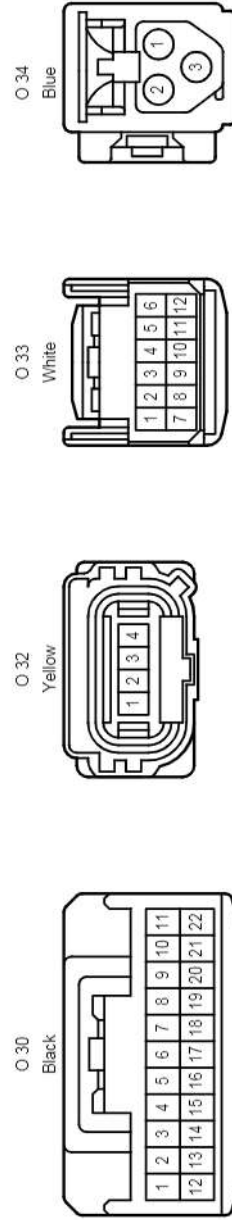
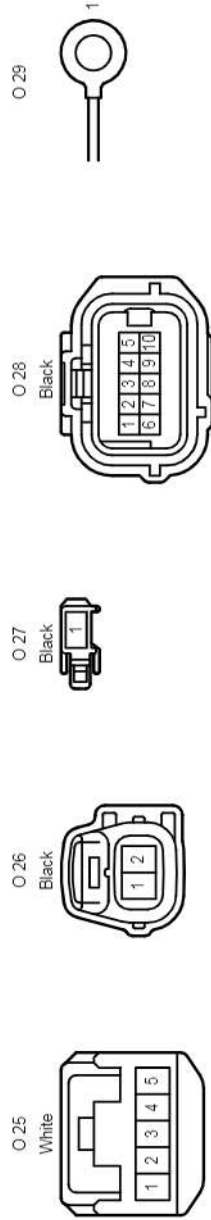
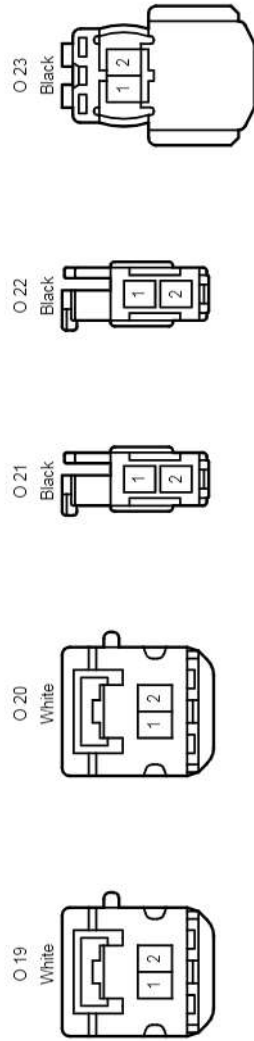
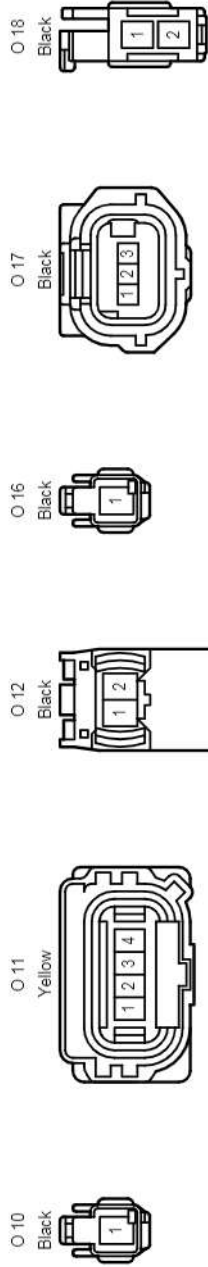


Position of Parts in Body

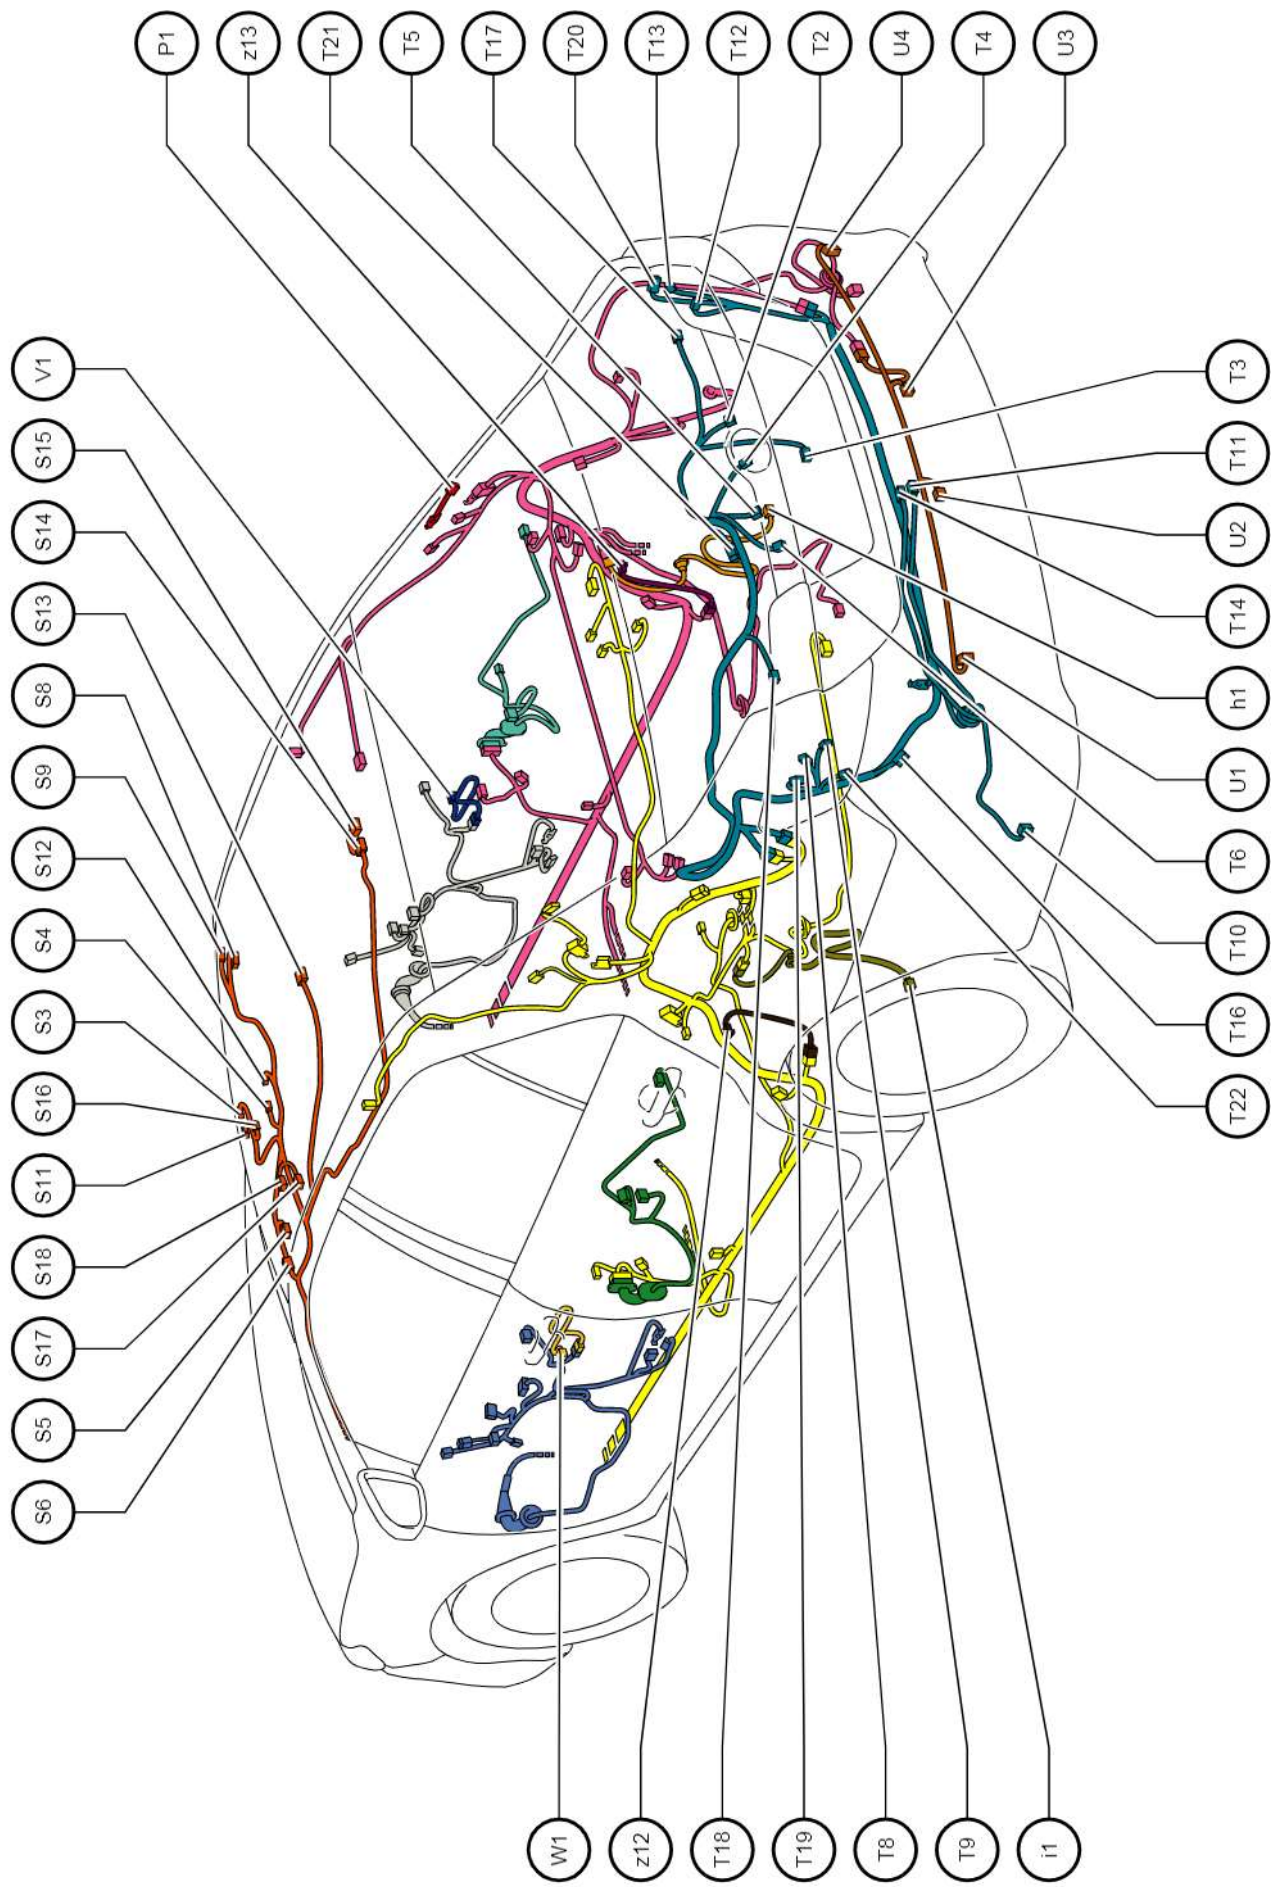 


P	1	Rear Window Defogger (Back Window Glass)
S	3	Humidity Sensor (A/C Thermistor Assembly)
S	4	Sliding Roof Control ECU (Sliding Roof Drive Gear Sub-Assembly)
S	5	Vanity Light Assembly LH
S	6	Visor Assembly LH
S	8	Vanity Light Assembly RH
S	9	Visor Assembly RH
S	11	Inner Rear View Mirror Assembly
S	12	Roof Console Box Assembly
S	13	No. 1 Room Light Assembly
S	14	Spot Light Assembly LH
S	15	Spot Light Assembly RH
S	16	Option Connector (Automatic Glare-Resistant EC Mirror)
S	17	Junction Connector
S	18	Junction Connector
T	2	License Plate Light Assembly RH
T	3	Luggage Compartment Door Lock Assembly
T	4	Luggage Door Opening Switch Assembly
T	5	License Plate Light Assembly LH
T	6	Rear Television Camera Assembly
T	8	Rear Combination Light Assembly LH
T	9	Rear Combination Light Assembly LH
T	10	Blind Spot Monitor Sensor LH
T	11	Rear Electrical Key Antenna
T	12	Rear Combination Light Assembly RH
T	13	Rear Combination Light Assembly RH
T	14	Rear Electrical Key Antenna
T	16	Junction Terminal
T	17	Rear Light Assembly RH
T	18	Rear Light Assembly LH
T	19	Rear Combination Light Assembly LH
T	20	Rear Combination Light Assembly RH
T	21	Junction Connector
T	22	Junction Connector
U	1	Rear No. 1 Ultrasonic Sensor LH
U	2	Rear No. 1 Ultrasonic Sensor Center LH
U	3	Rear No. 1 Ultrasonic Sensor Center RH
U	4	Rear No. 1 Ultrasonic Sensor RH
V	1	Front Door Outside Handle Assembly RH

                  
Position of Parts in Body

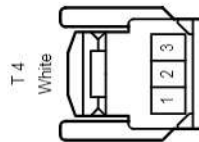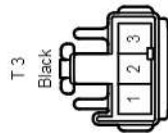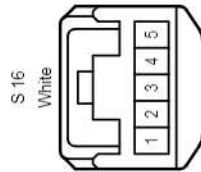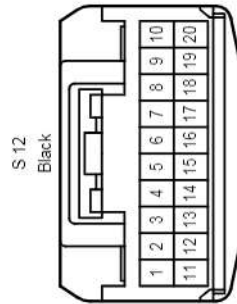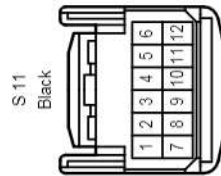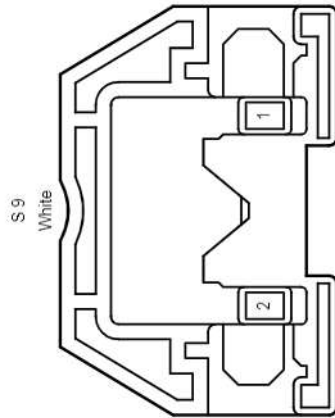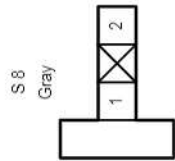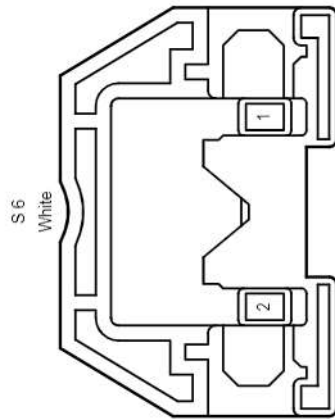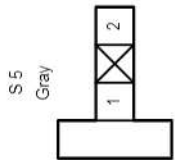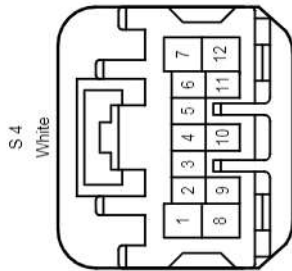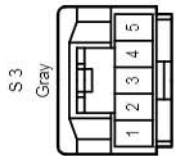

Position of Parts in Body

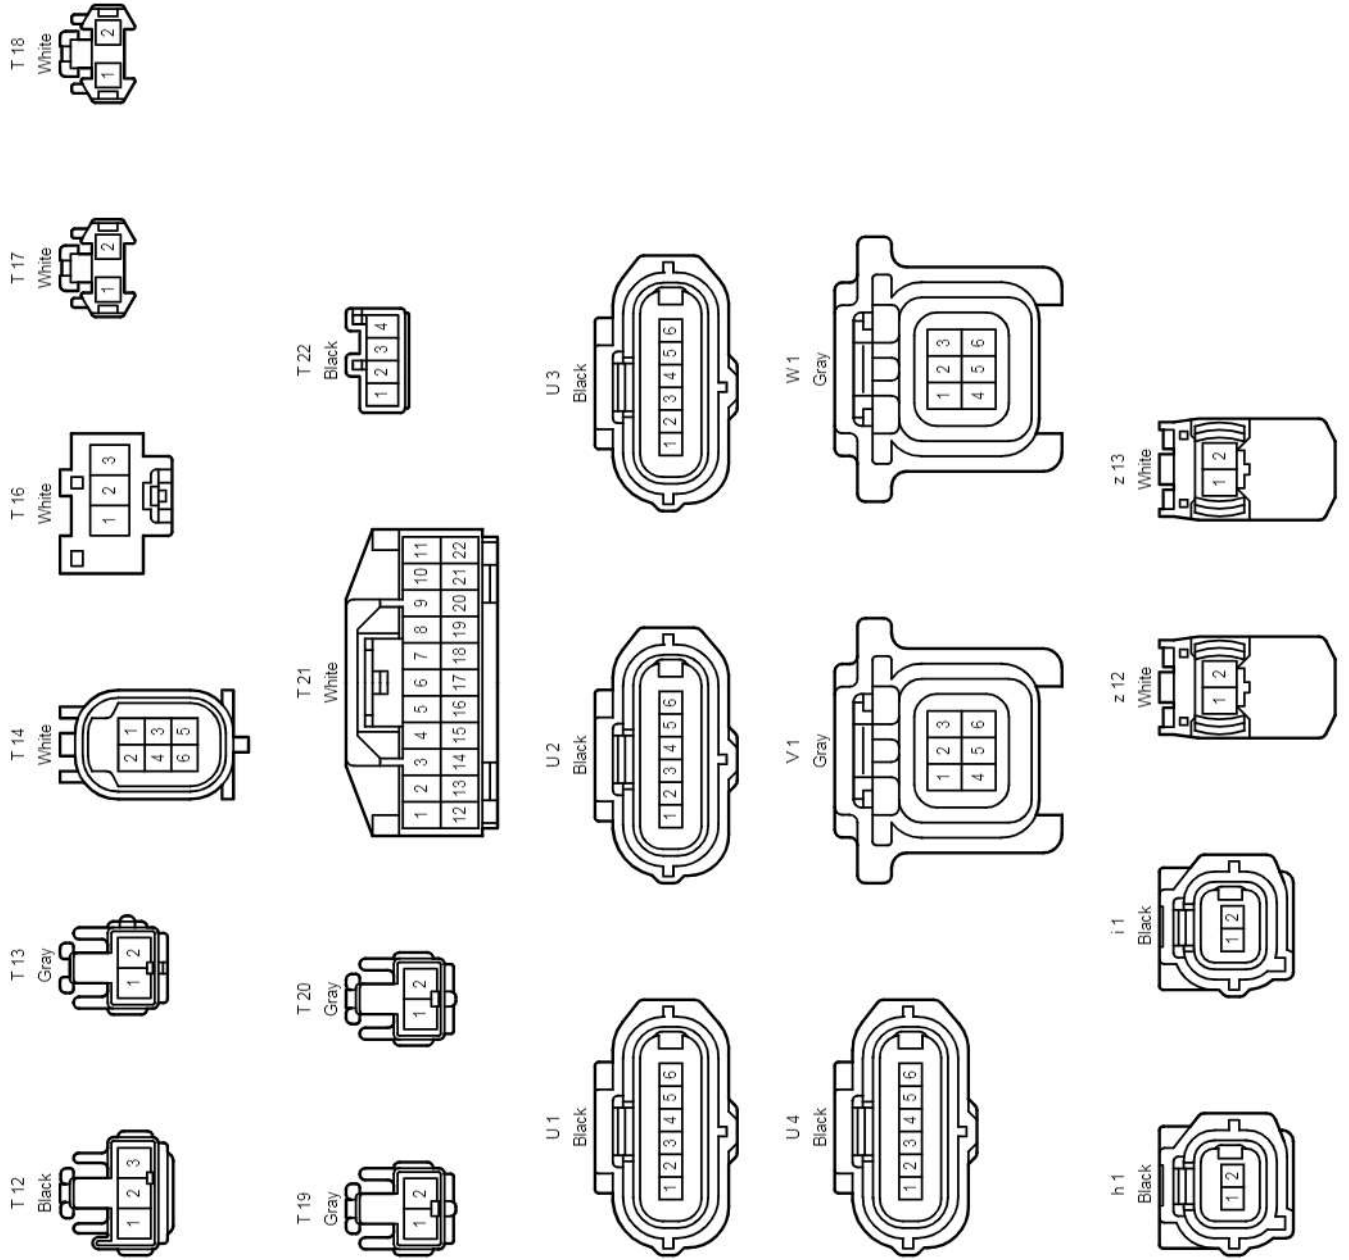 


Position of Parts in Body

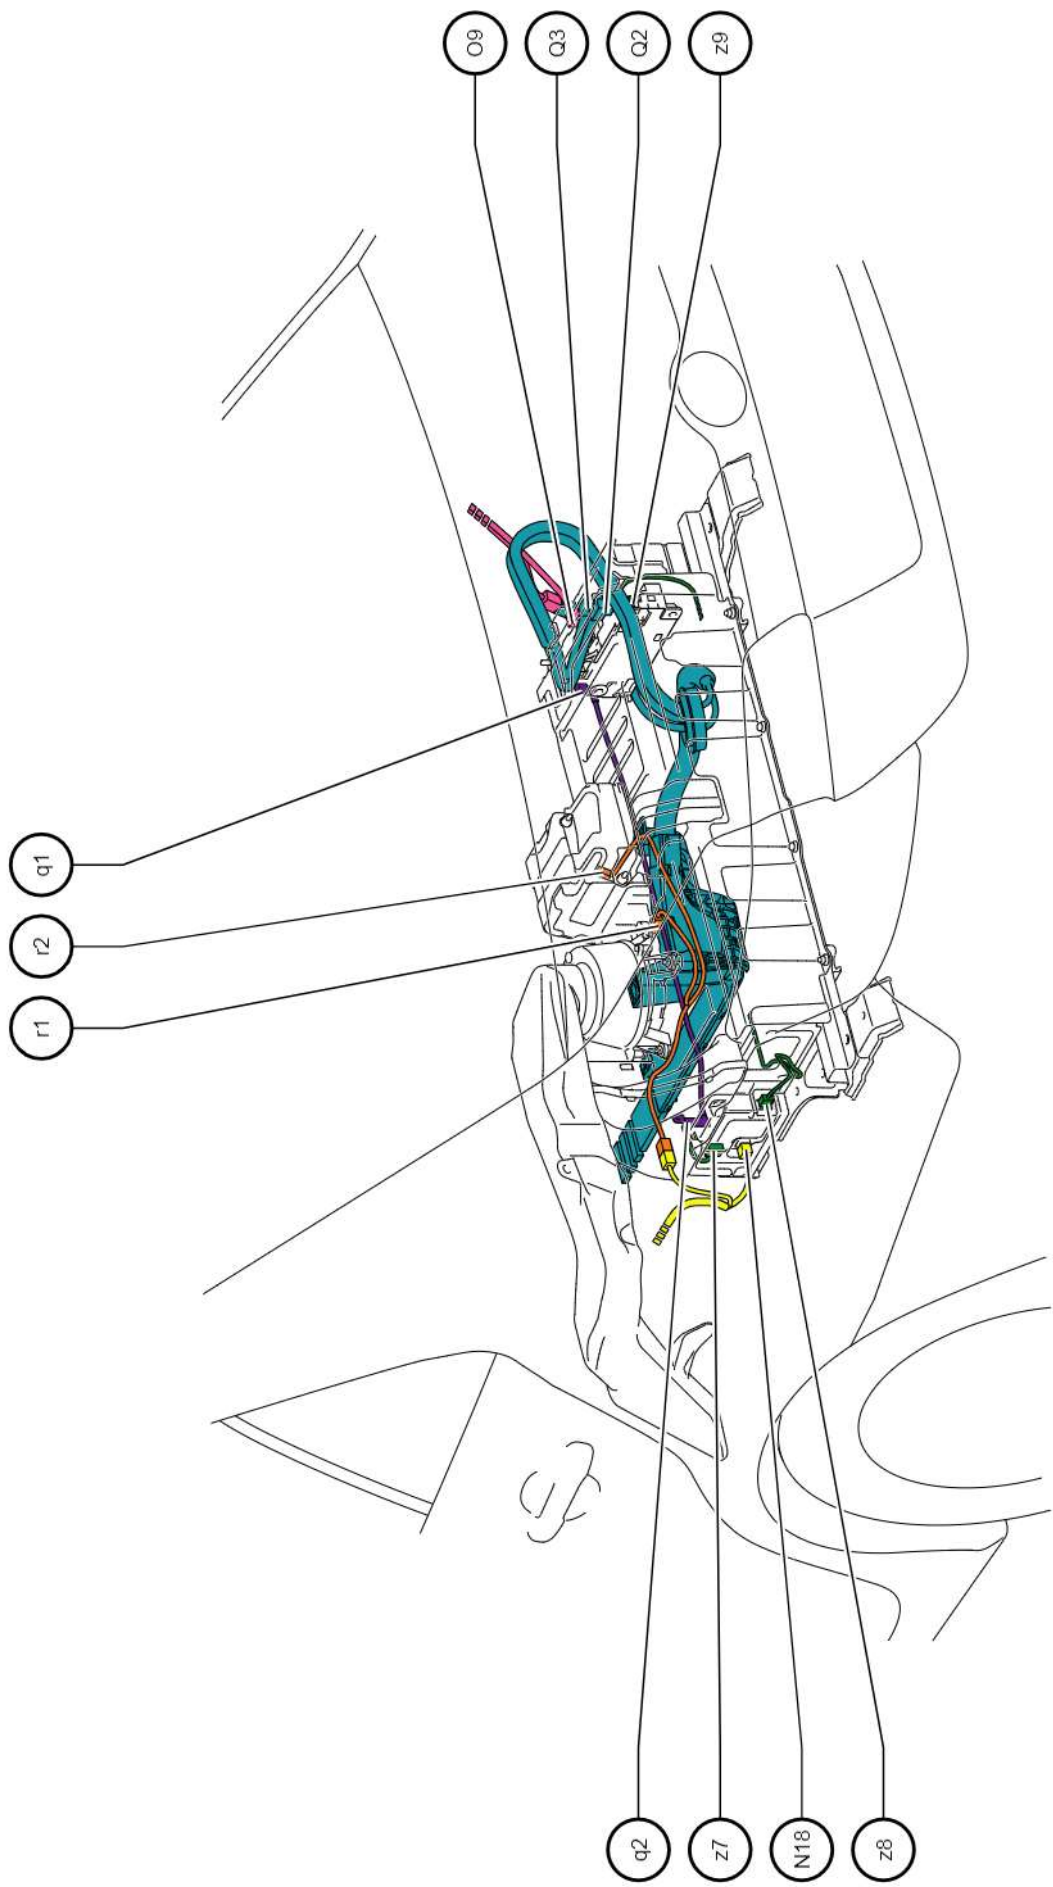 

N	18	Battery Voltage Sensor
O	9	Hybrid Battery Junction Block Assembly
Q	2	Hybrid Battery Junction Block Assembly
Q	3	Hybrid Battery Junction Block Assembly
q	1	Hybrid Battery Junction Block Assembly
q	2	Battery Voltage Sensor , HV Supply Battery Assembly
r	1	Battery Cooling Blower Assembly
r	2	Interlock Switch (Service Plug Grip)
z	7	Battery Voltage Sensor , HV Supply Battery Assembly
z	8	Battery Voltage Sensor , HV Supply Battery Assembly
z	9	Hybrid Battery Junction Block Assembly

 Position of Parts in Body

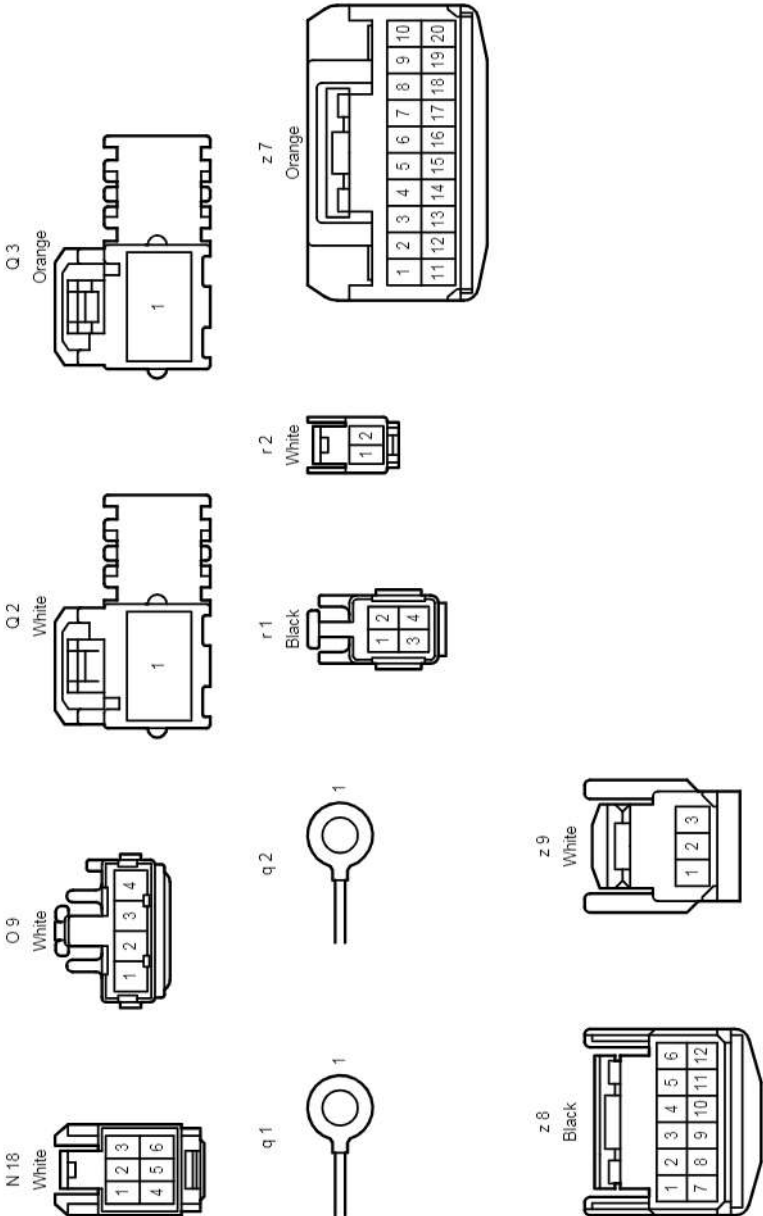


Wire and Wire in Body




Wire and Wire in Body

 
LO1
White

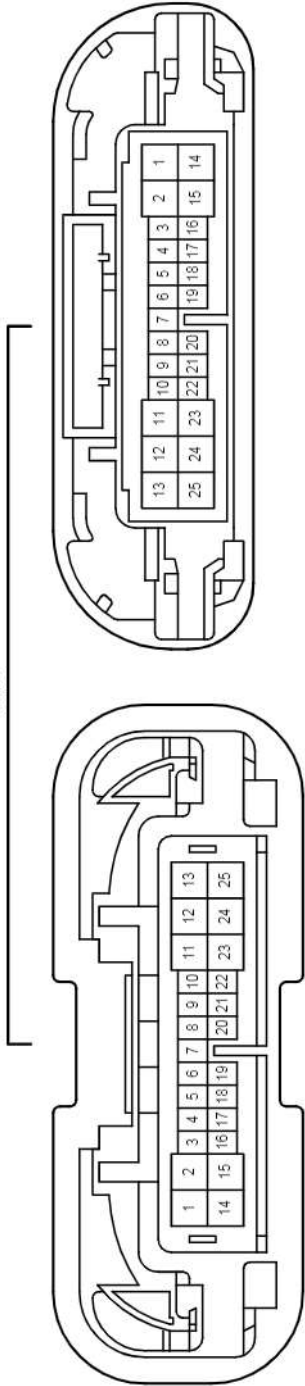


MN1
White

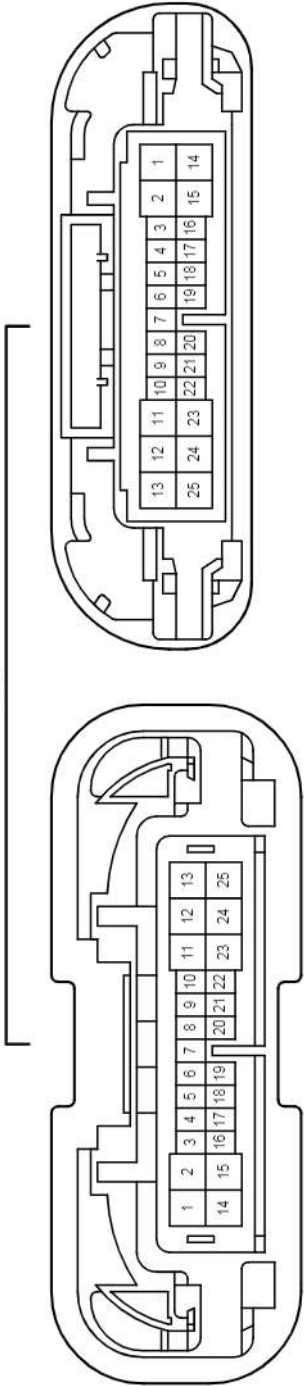 


Oz2
Yellow

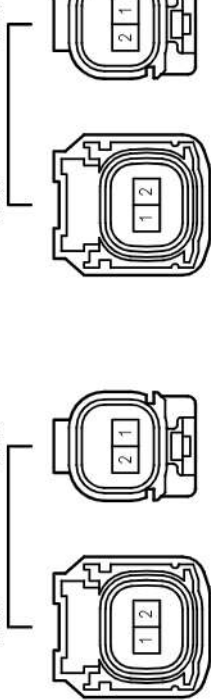 


TN1
White

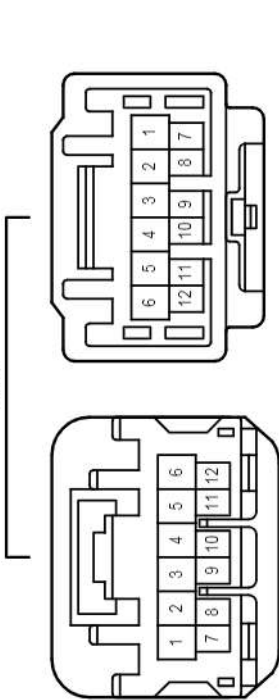 

TN2
White

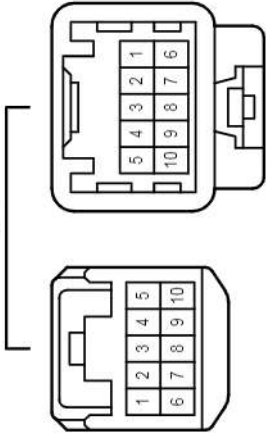 



Wire and Wire in Body

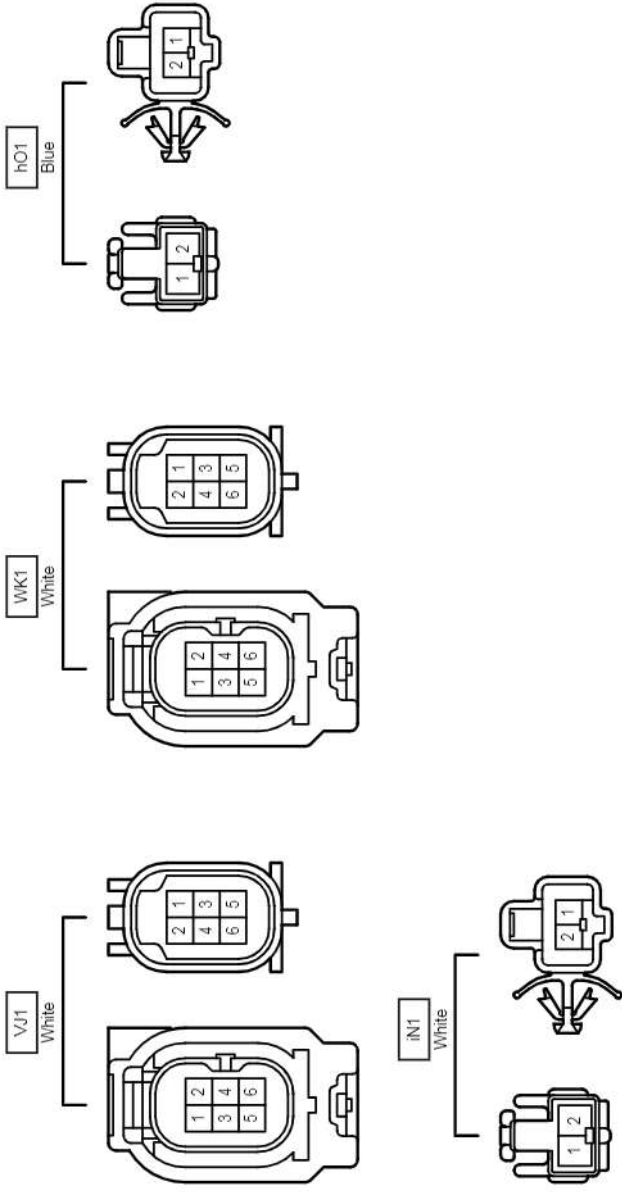 


HV Battery Pack No. 2 Wire

   
HV Battery Main No. 1 Cable

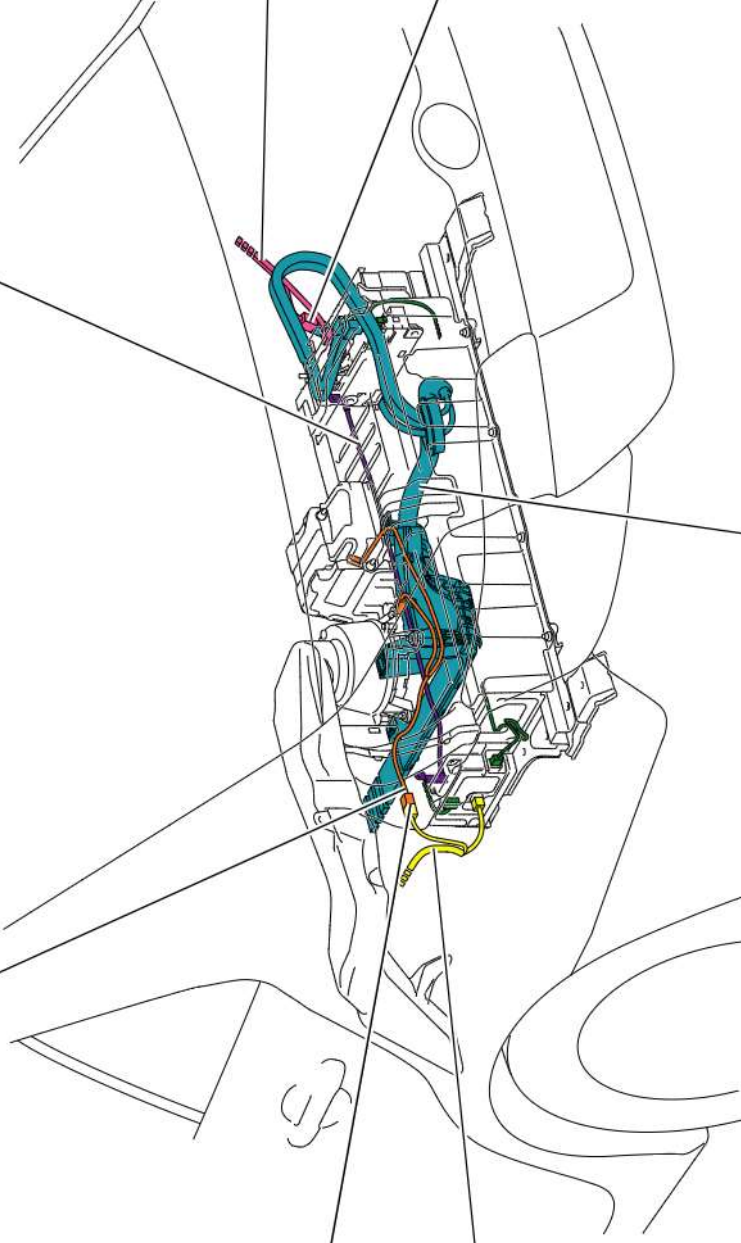

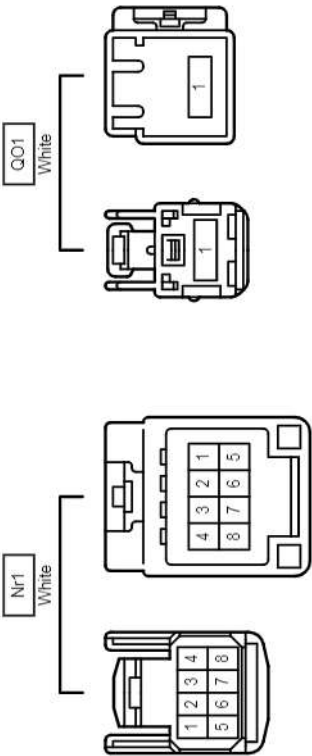

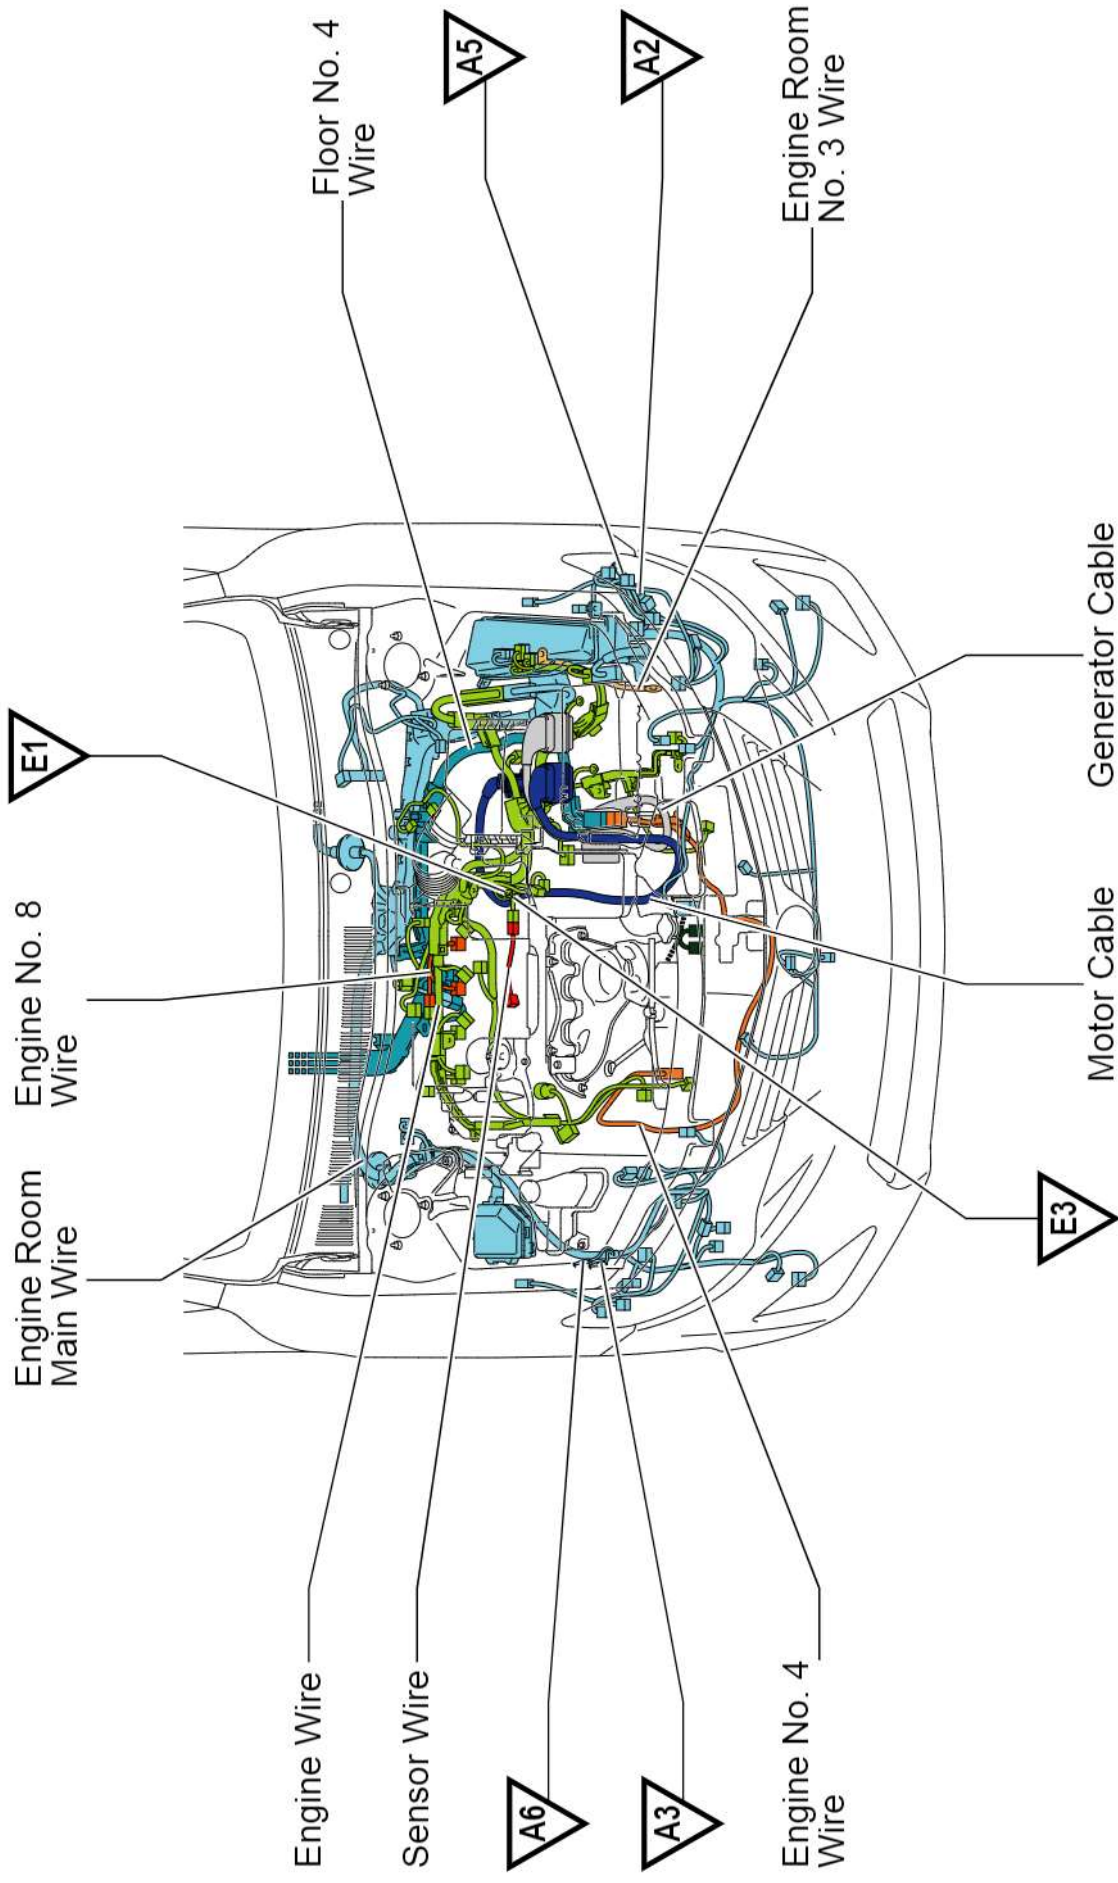














Position of Parts in Engine Compartment

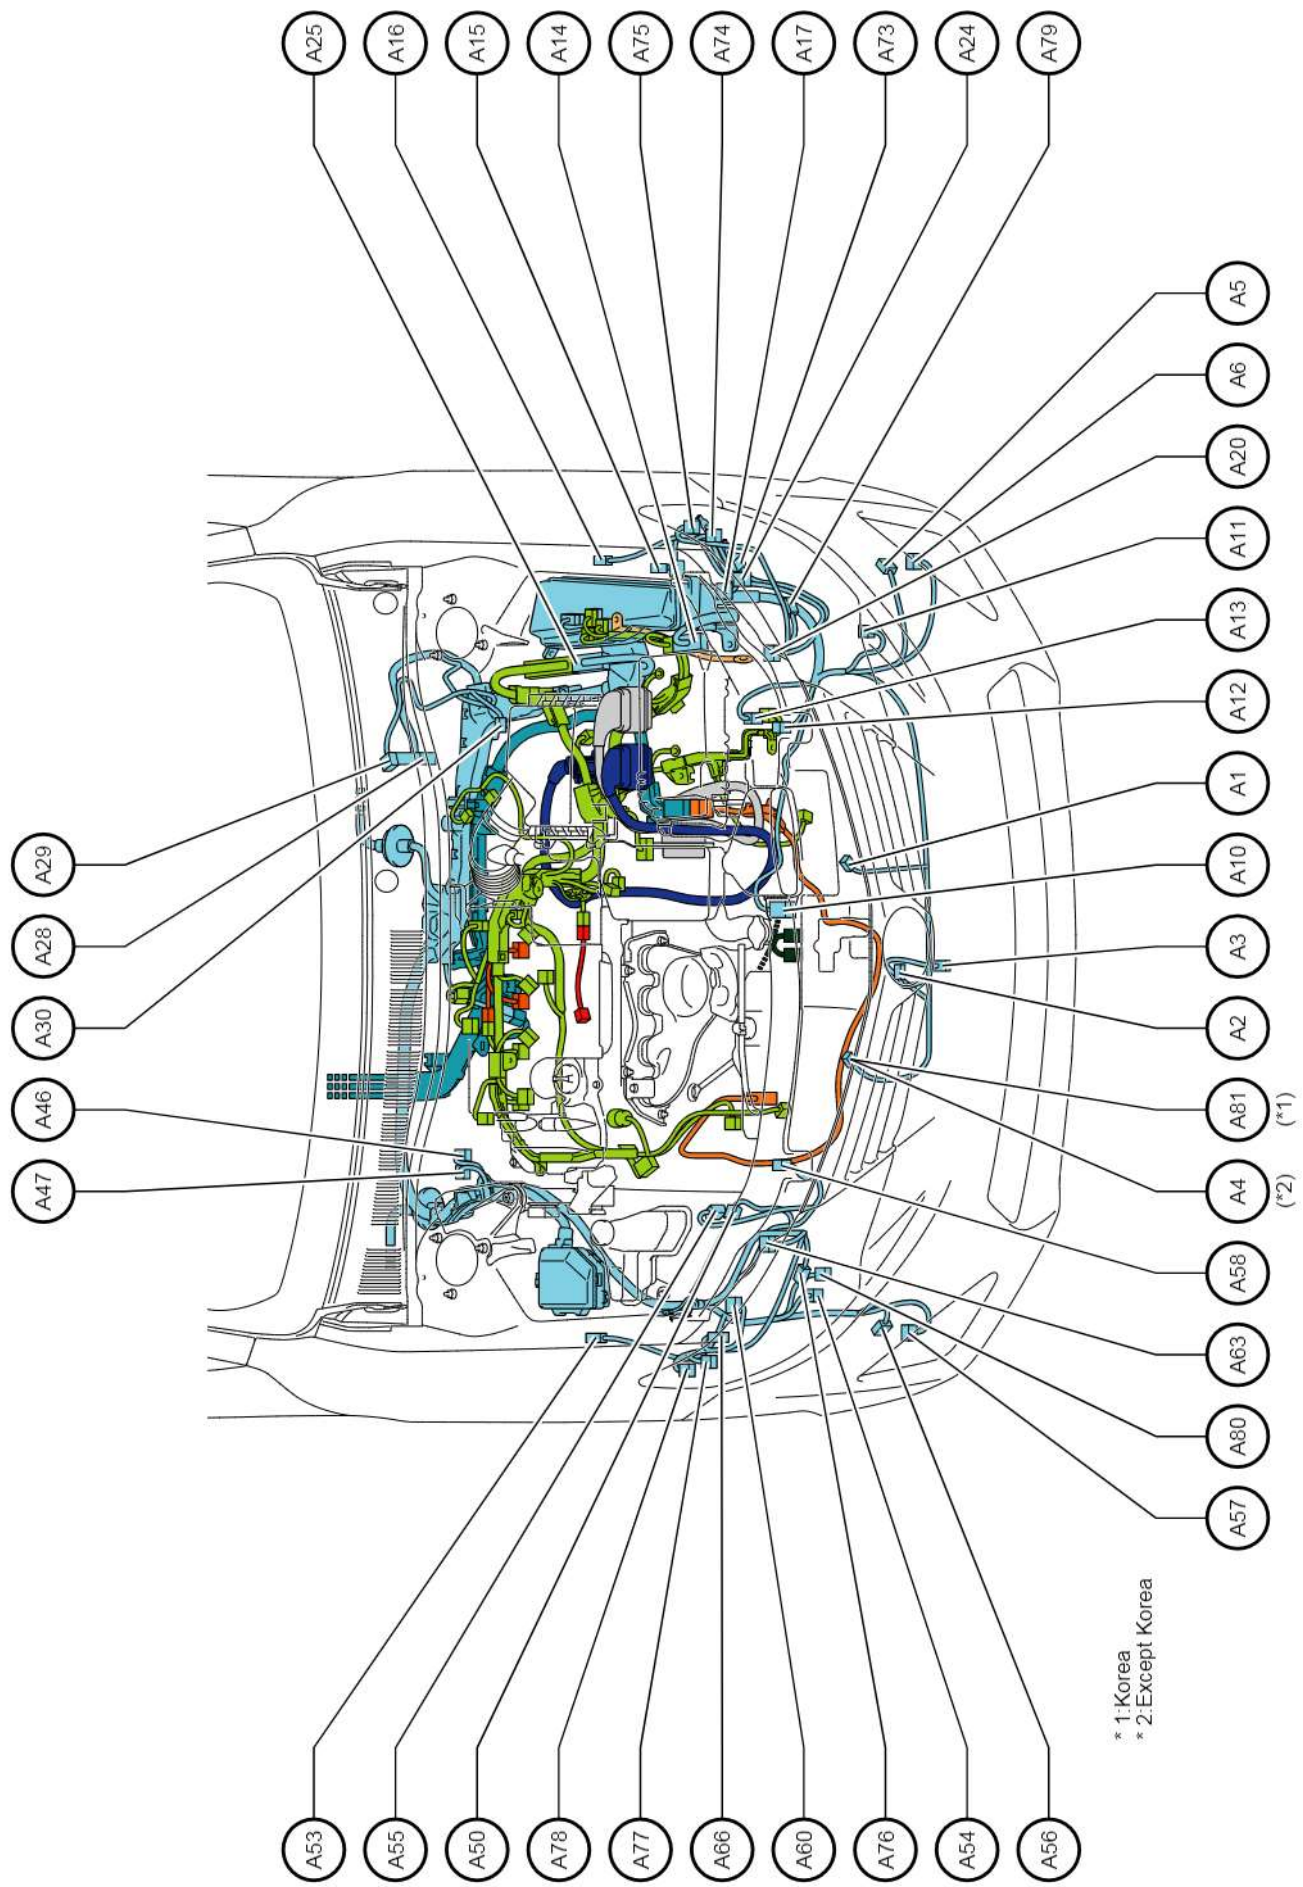 





Position of Parts in Engine Compartment

A 1	Low Pitched Horn Assembly
A 2	Engine Hood Courtesy Switch (Hood Lock Assembly)
A 3	Ambient Temperature Sensor (Thermistor Assembly)
A 4	High Pitched Horn Assembly
A 5	Front No. 1 Ultrasonic Sensor LH
A 6	Fog Light Assembly LH
A 10	Cooling Fan ECU
A 11	Vehicle Approaching Speaker Assembly
A 12	Front Airbag Sensor LH
A 13	Inverter with Converter Assembly
A 14	Inverter with Converter Assembly
A 15	Wireless Door Lock Buzzer
A 16	Front Speed Sensor LH
A 17	Headlight Assembly LH
A 20	Headlight Assembly LH
A 24	Headlight Assembly LH
A 25	ECM
A 28	Skid Control ECU with Actuator (Brake Booster with Master Cylinder Assembly)
A 29	Windshield Wiper Motor Assembly
A 30	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 46	Brake Booster Pump Assembly
A 47	Brake Booster Pump Assembly
A 50	Inverter Water Pump Assembly
A 53	Front Speed Sensor RH
A 54	Windshield Washer Motor and Pump Assembly
A 55	A/C Pressure Sensor (A/C Tube & Accessory Assembly)
A 56	Front No. 1 Ultrasonic Sensor RH
A 57	Fog Light Assembly RH
A 58	Front Airbag Sensor RH
A 60	Headlight Assembly RH
A 63	Headlight Assembly RH
A 66	Headlight Assembly RH
A 73	Junction Connector
A 74	Headlight Assembly LH
A 75	Headlight Assembly LH
A 76	Headlight Assembly RH
A 77	Headlight Assembly RH
A 78	Headlight Assembly RH
A 79	Headlight Assembly LH
A 80	Level Warning Switch Assembly
A 81	Super Low Pitched Horn Assembly

             Position of Parts in Engine Compartment

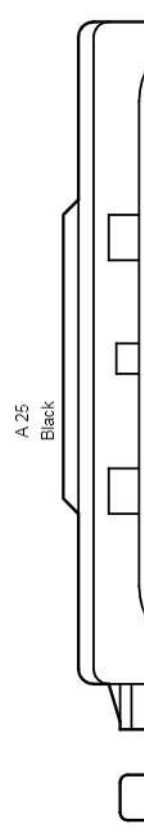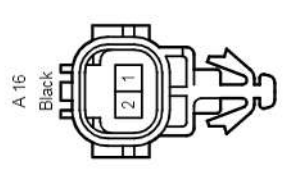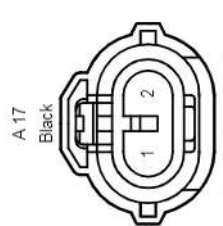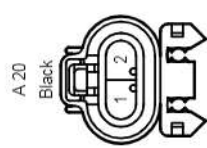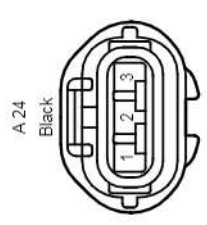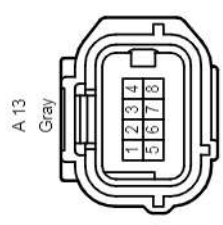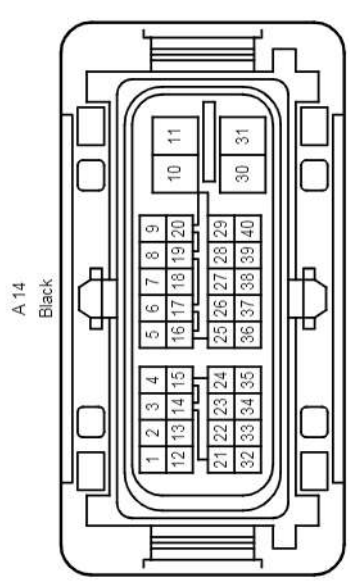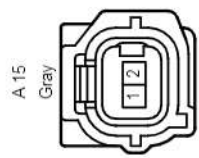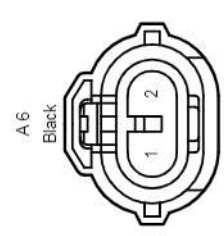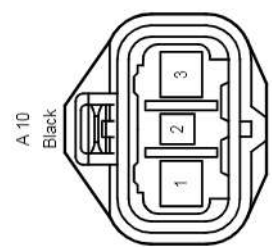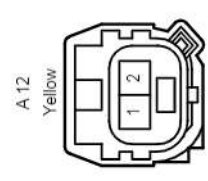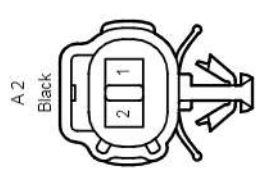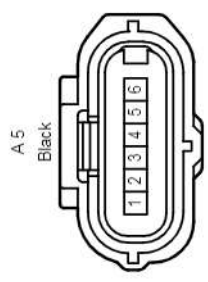

Position of Parts in Engine Compartment

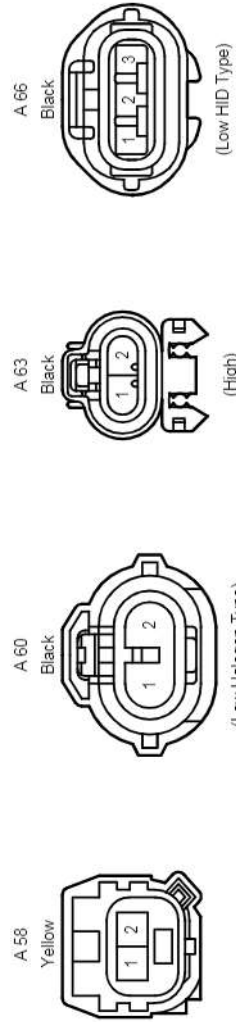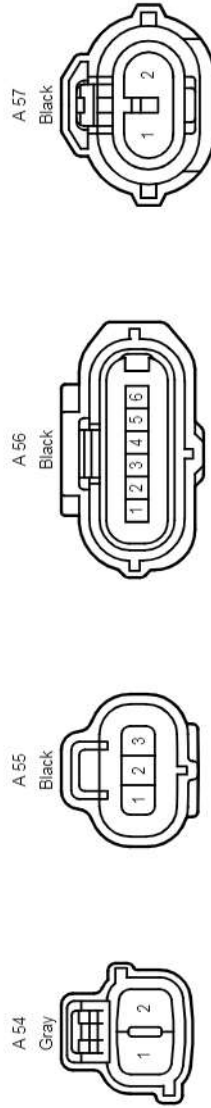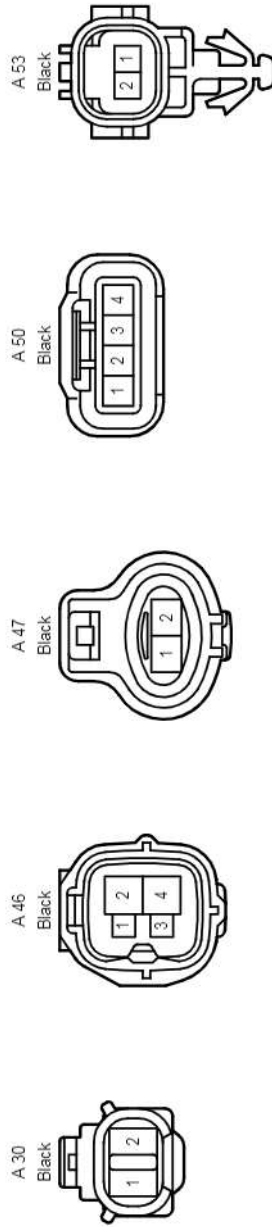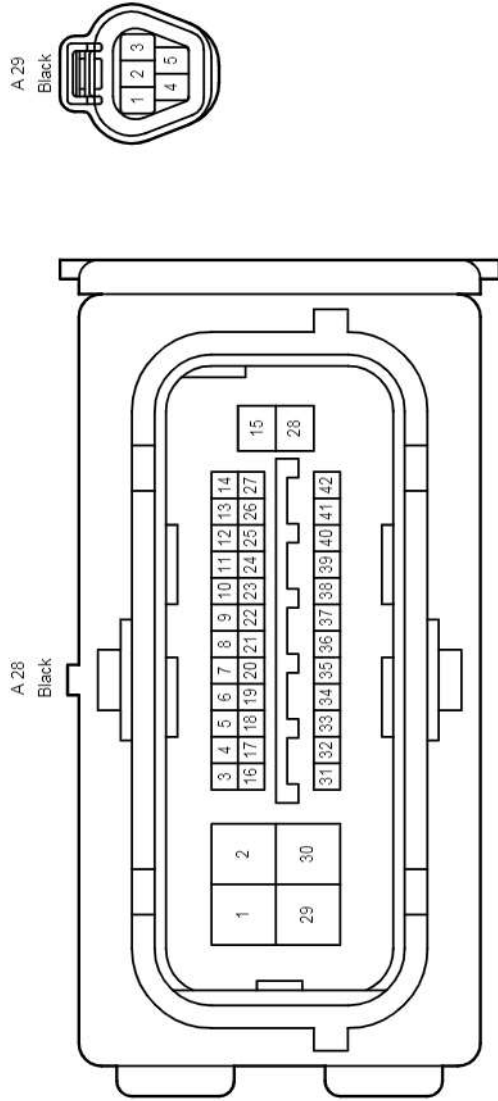    

A 29
Black

A 30
Black

A 46
Black

A 47
Black

A 50
Black

A 53
Black

A 54
Gray

A 55
Black

A 57
Black

A 58
Yellow

A 60
Black

A 63
Black

A 66
Black

A 74
Gray

A 75
Black

A 76
Black

Position of Parts in Engine Compartment

A 77
Gray



 
(Front Turn Signal and Parking Light)

A 78
Black




(Front Side Marker Light)

A 79
Black

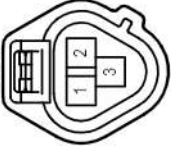

(Headlight Leveling Motor)

 
A 80
Black

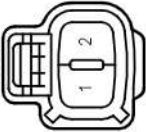

A 81
Black














 Position of Parts in Engine Compartment

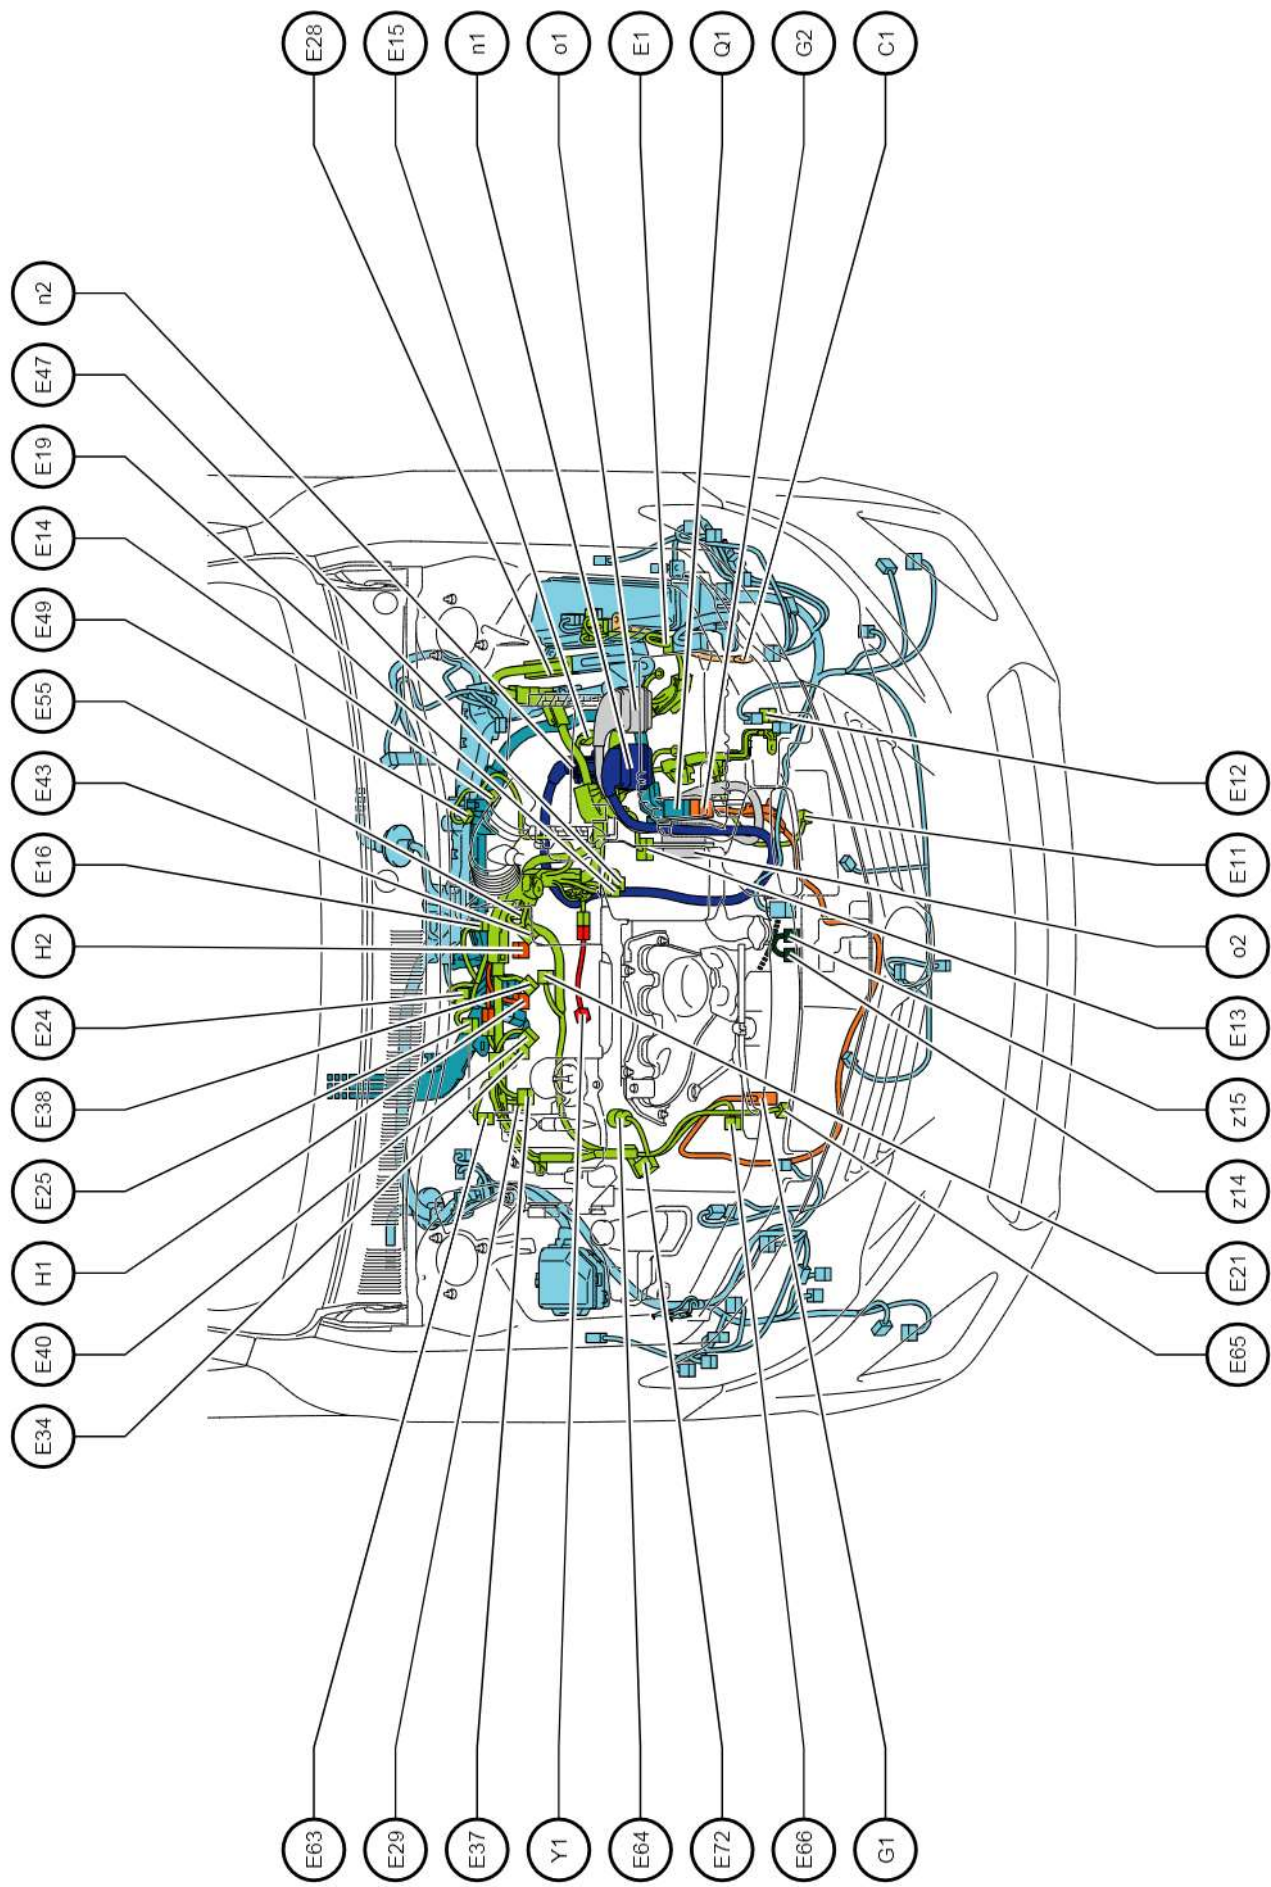


C	1	Inverter with Converter Assembly
E	1	Inverter with Converter Assembly
E	11	Shift Lever Position Sensor
E	12	Hybrid Vehicle Transaxle Assembly
E	13	Hybrid Vehicle Transaxle Assembly
E	14	Intake Mass Air Flow Meter Sub-Assembly
E	15	Hybrid Vehicle Transaxle Assembly
E	16	Throttle Body Assembly with Motor
E	19	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
E	21	Oxygen Sensor (Bank 1 Sensor 2)
E	24	EGR Valve Assembly
E	25	E.F.I. Vacuum Sensor Assembly
E	28	ECM
E	29	Fuel Injector Assembly No. 1
E	34	Fuel Injector Assembly No. 2
E	37	Ignition Coil Assembly No. 1
E	38	Ignition Coil Assembly No. 3
E	40	Ignition Coil Assembly No. 2
E	43	Ignition Coil Assembly No. 4
E	47	E.F.I. Engine Coolant Temperature Sensor
E	49	Purge VSV
E	55	WT Sensor (Camshaft Position Sensor)
E	63	Camshaft Timing Oil Control Valve Assembly (Intake Side)
E	64	Engine Oil Pressure Switch Assembly
E	65	Compressor with Motor Assembly
E	66	Engine Water Pump Assembly
E	72	Crank Position Sensor
G	1	Compressor with Motor Assembly
G	2	Inverter with Converter Assembly
H	1	Fuel Injector Assembly No. 3
H	2	Fuel Injector Assembly No. 4
Q	1	Inverter with Converter Assembly
Y	1	Knock Control Sensor (Bank 1)
n	1	Inverter with Converter Assembly
n	2	Hybrid Vehicle Transaxle Assembly
o	1	Inverter with Converter Assembly
o	2	Hybrid Vehicle Transaxle Assembly

           Position of Parts in Engine Compartment

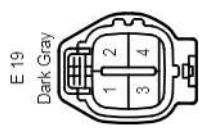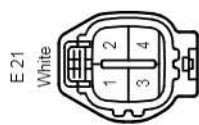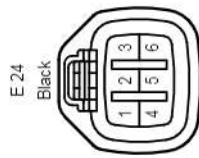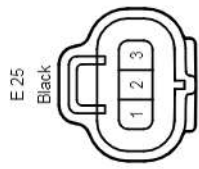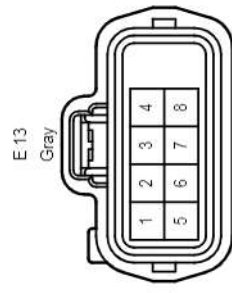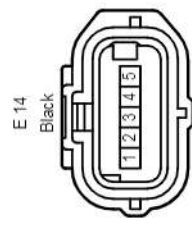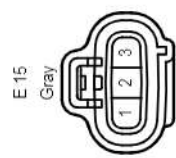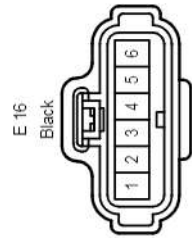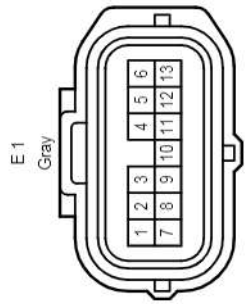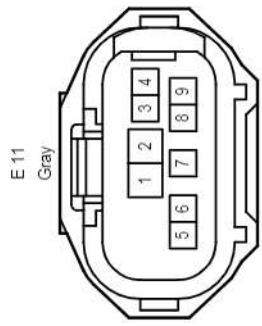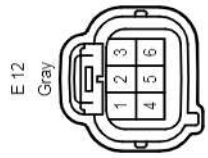

E 28
Black

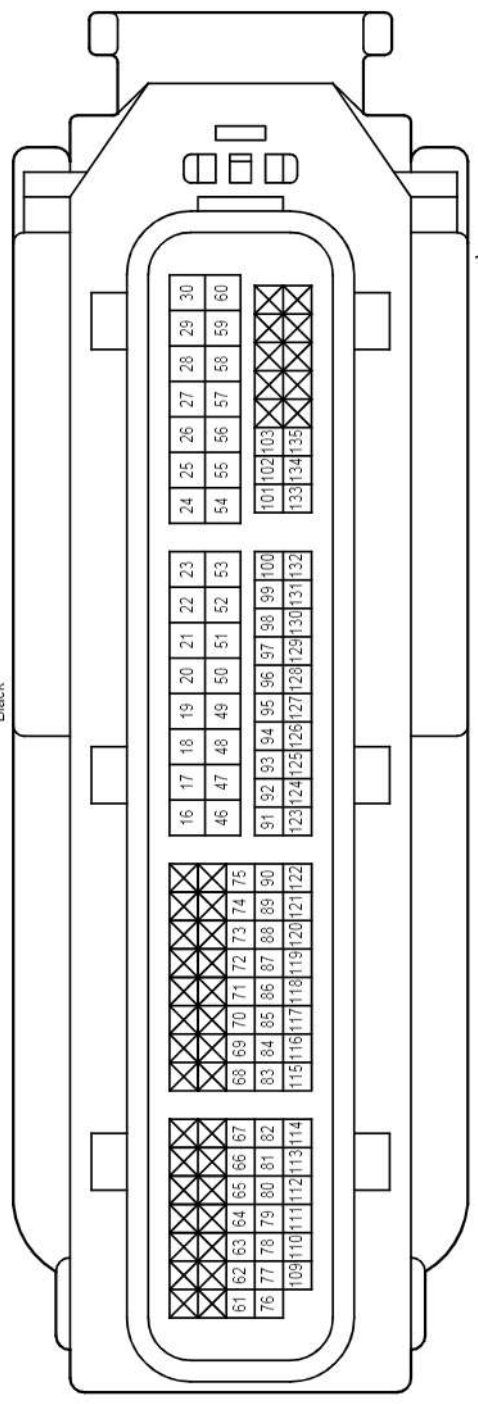 

E 29
Black

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
E 34
Gray

E 37
Black


E 38
Black

cardiagn.com


Position of Parts in Engine Compartment

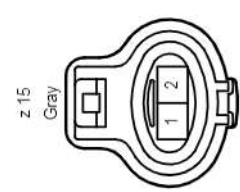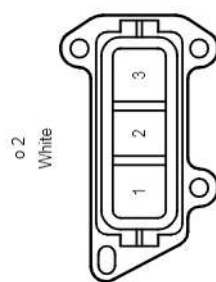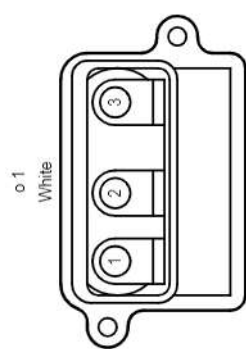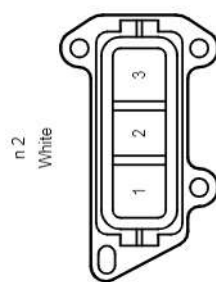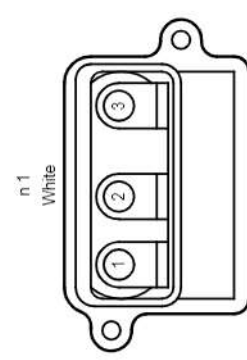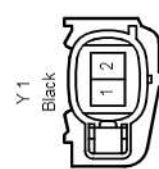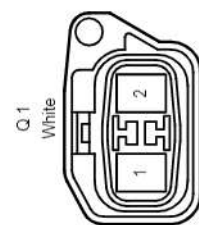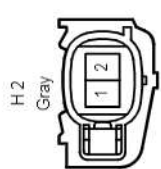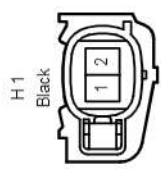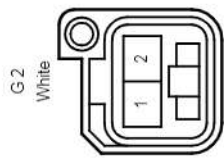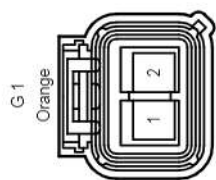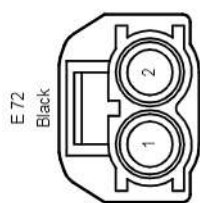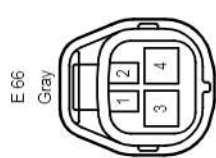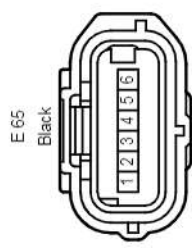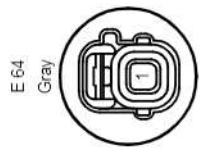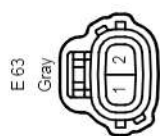


Wire and Wire in Engine Compartment

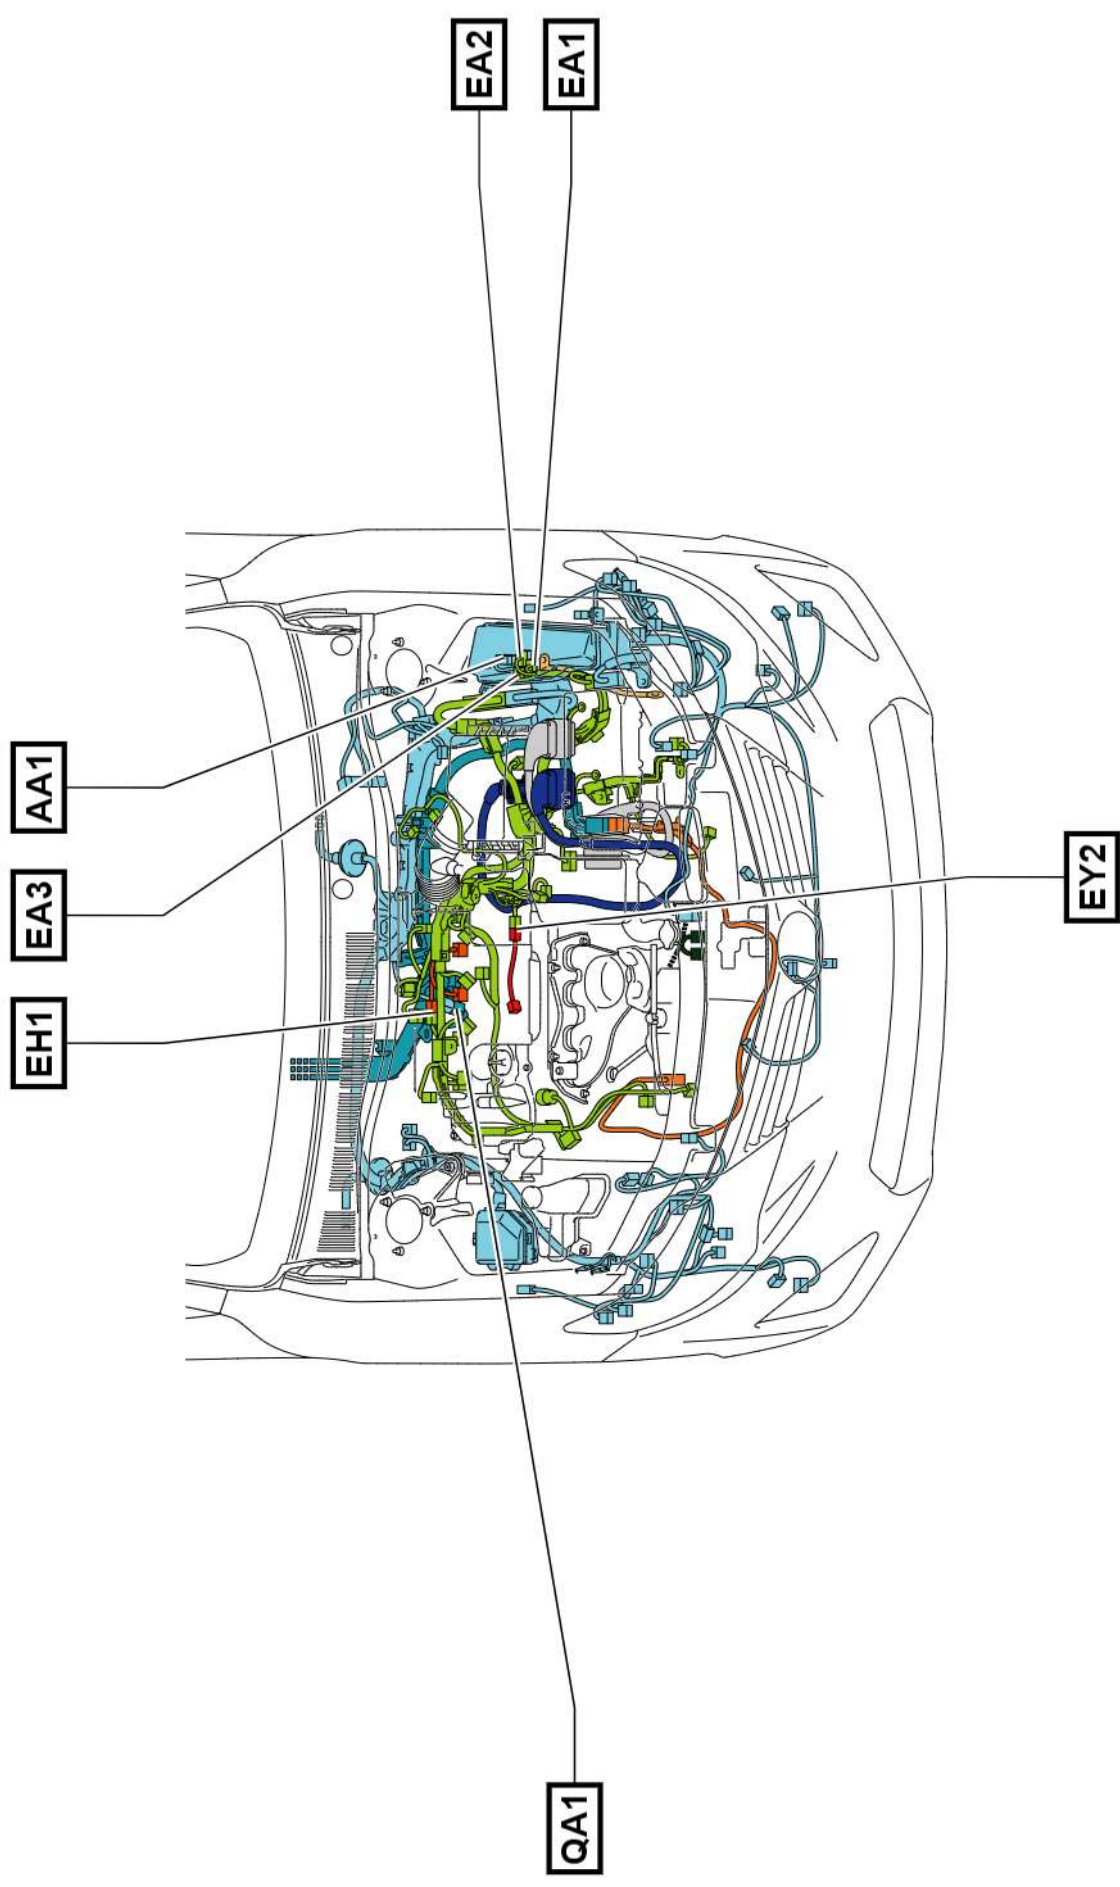 


Wire and Wire in Engine Compartment









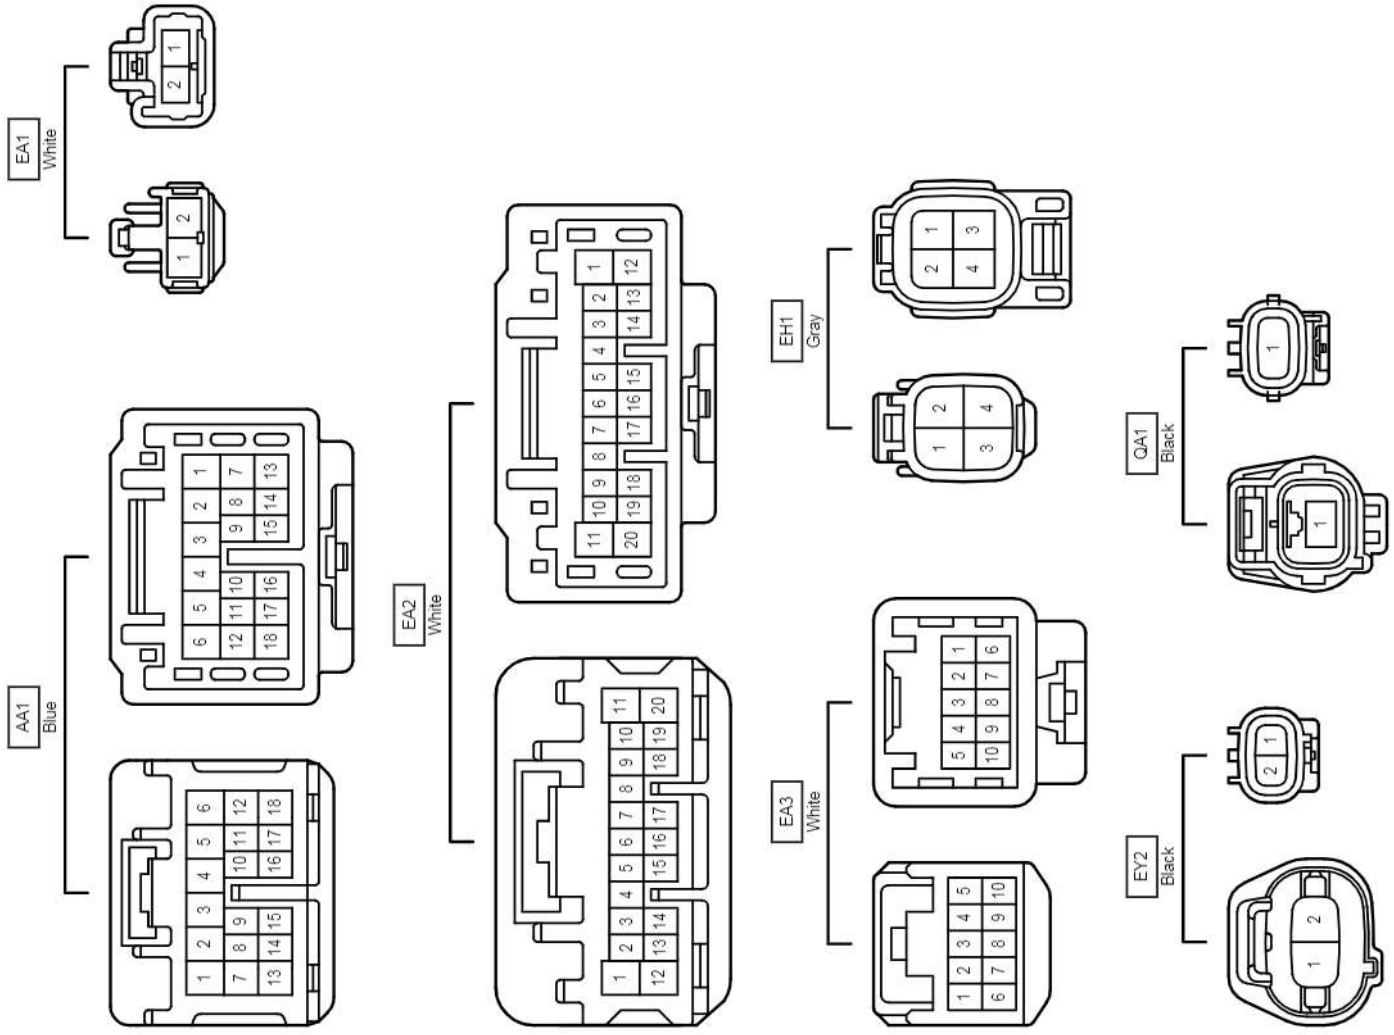 










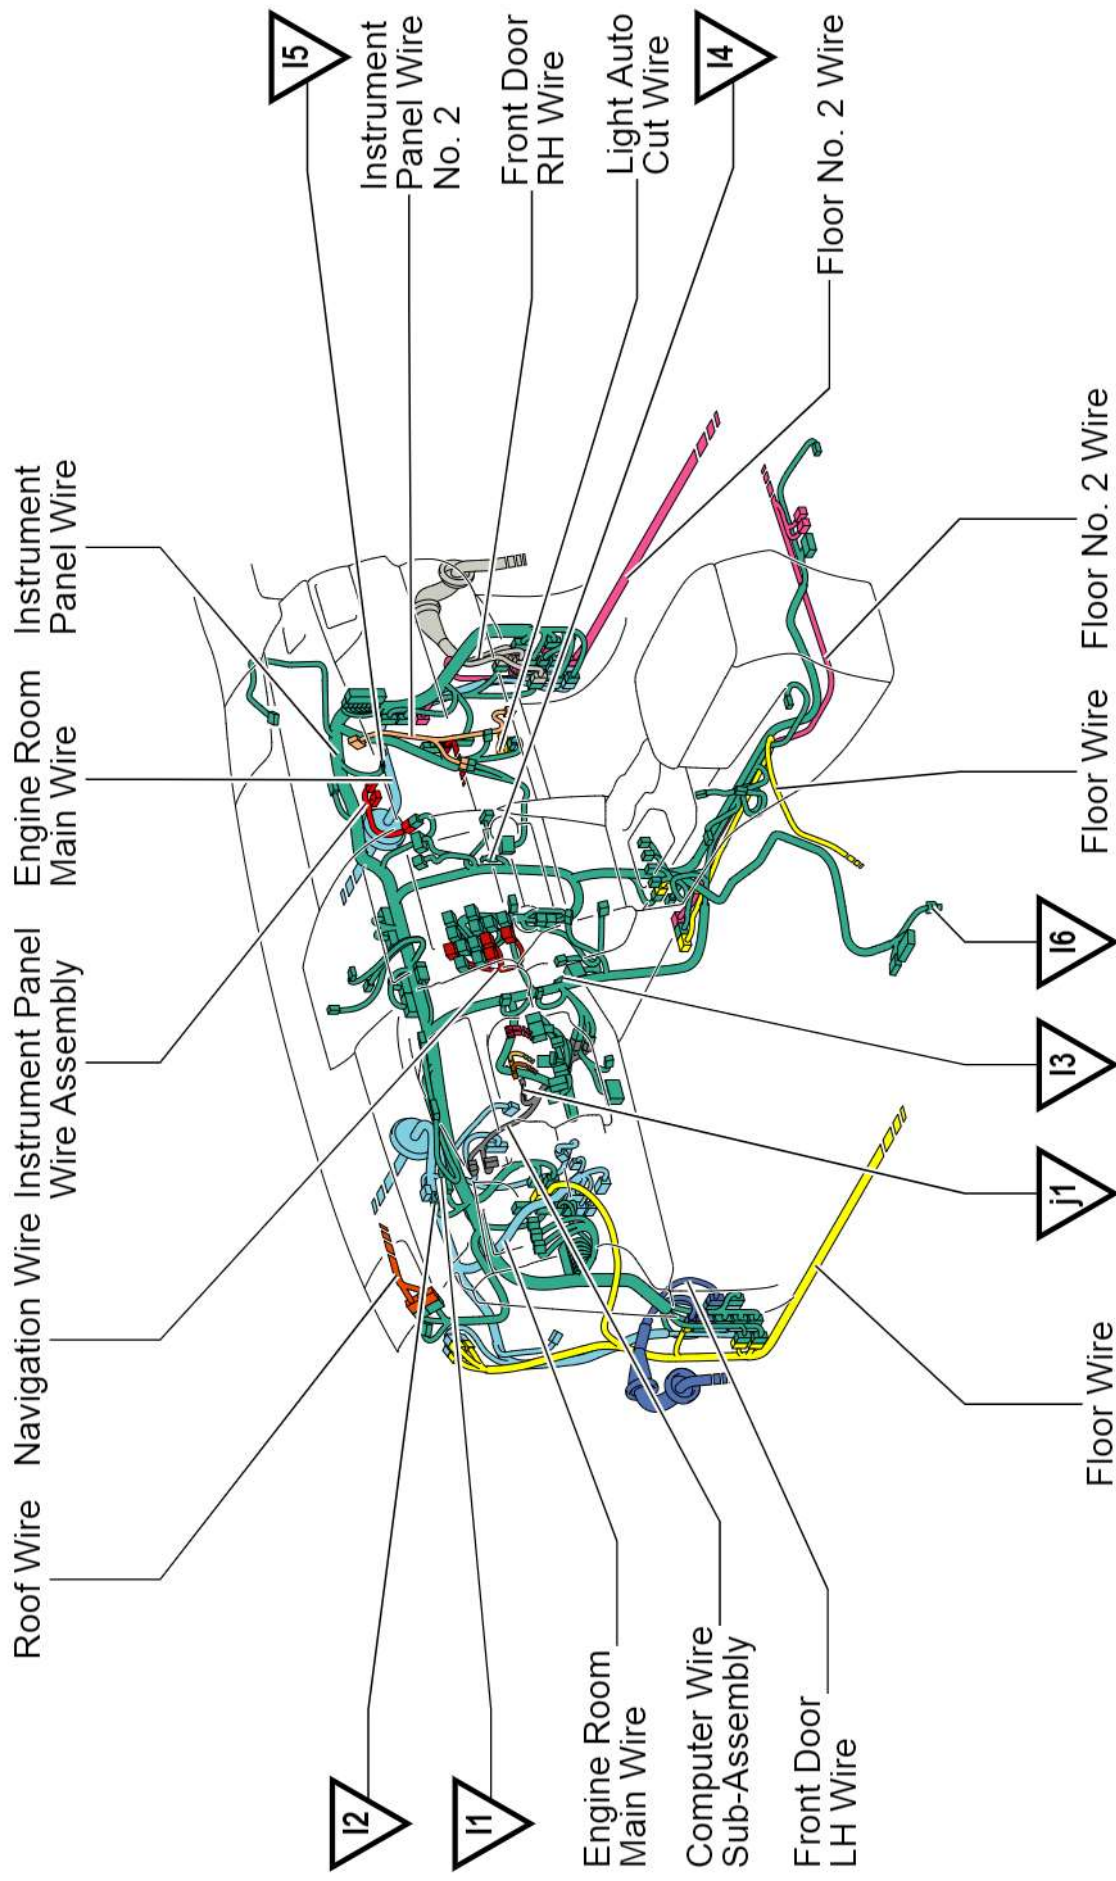 


 
Position of Parts in Instrument Panel <Before Dec. 2013 Production>

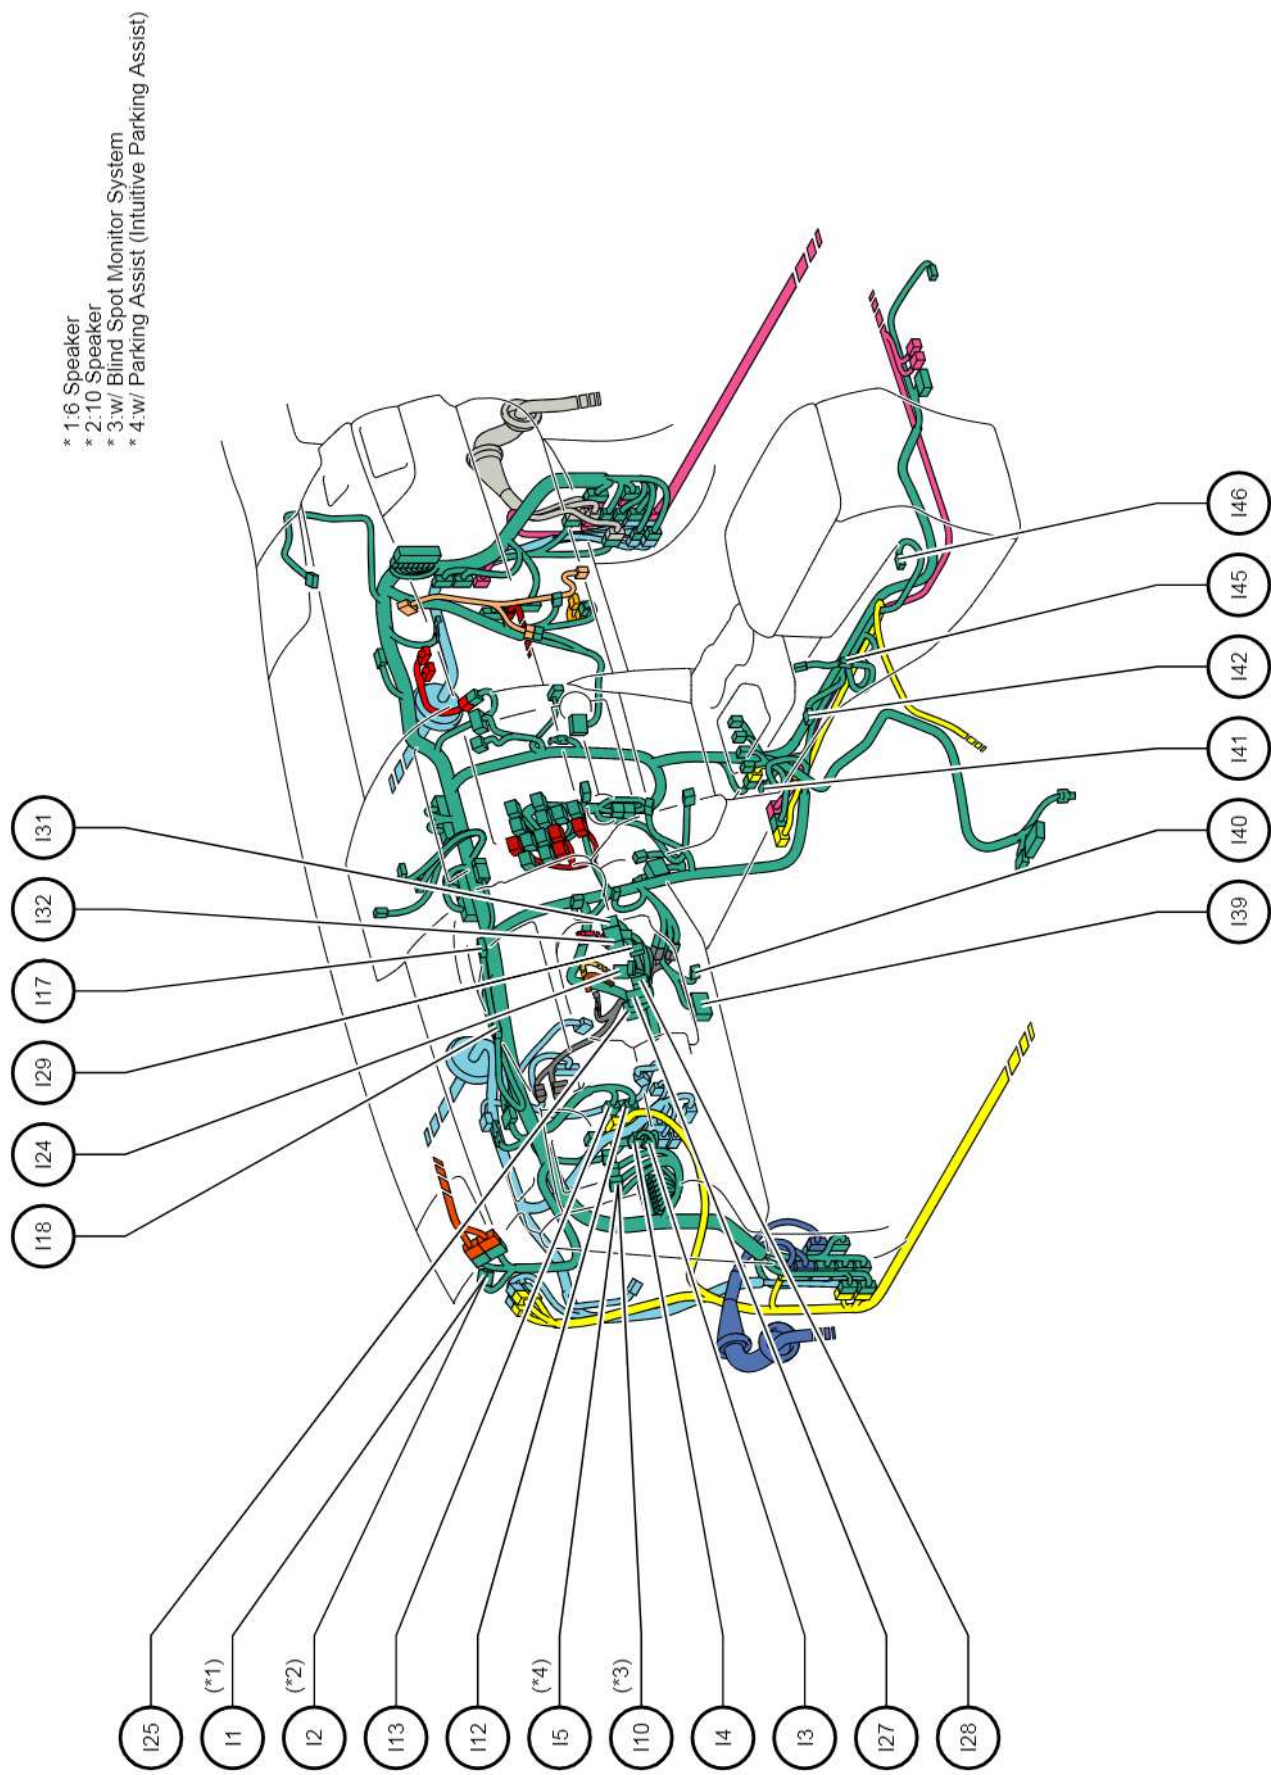

	1	Front No. 2 Speaker Assembly LH
	2	Front No. 2 Speaker Assembly LH
	3	Power Management Control ECU
	4	Power Management Control ECU
	5	Back Sonar or Clearance Sonar Switch Assembly
	10	Blind Spot Monitor Main Switch (Warning Canceling Switch Assembly)
	12	Main Body ECU
	13	Main Body ECU
	17	Combination Meter Assembly
	18	Combination Meter Assembly
	24	Steering Lock Actuator Assembly
	25	Headlight Dimmer Switch Assembly
	27	Spiral Cable Sub-Assembly
	28	Spiral Cable Sub-Assembly
	29	Steering Sensor
	31	Windshield Wiper Switch Assembly
	32	Windshield Wiper Switch Assembly
	39	Data Link Connector 3
	40	Lower No. 1 Instrument Panel Airbag Assembly
	41	Quick Heater Assembly
	42	Shift Lock Control ECU (Lower Shift Lever Assembly)
	45	Rear Power Outlet Socket Assembly
	46	No. 1 Indoor Electrical Key Antenna Assembly









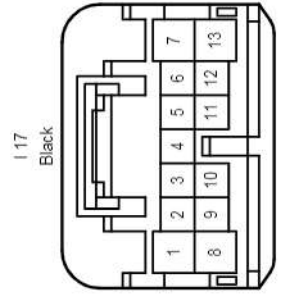 
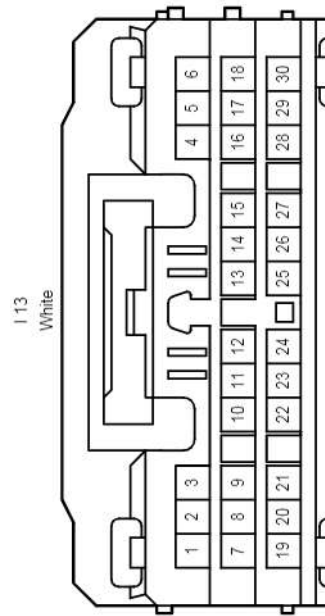 
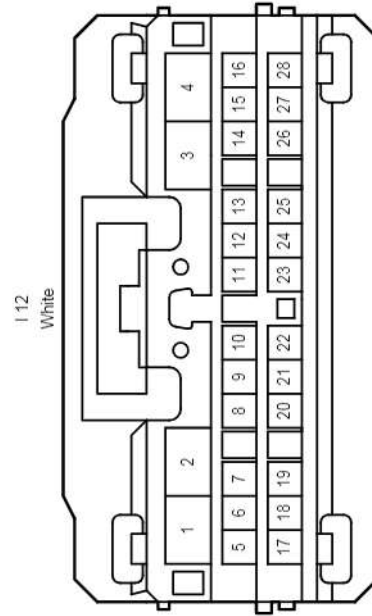 
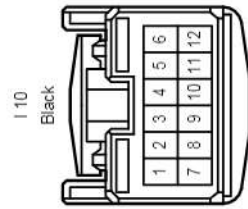 
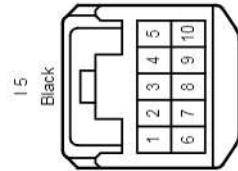 
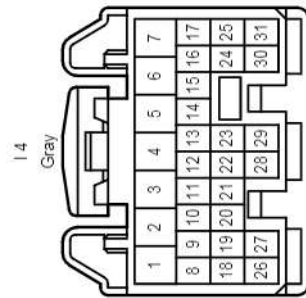 
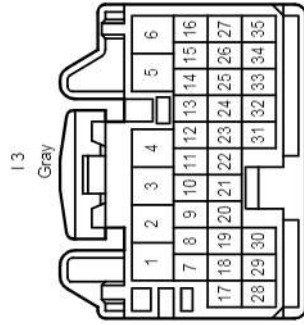 
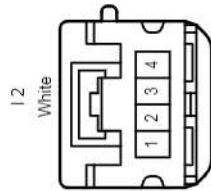 
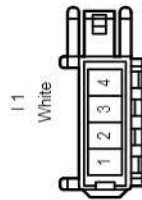 


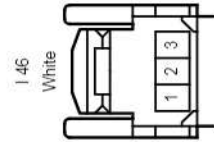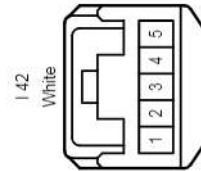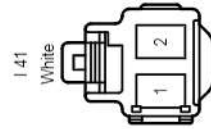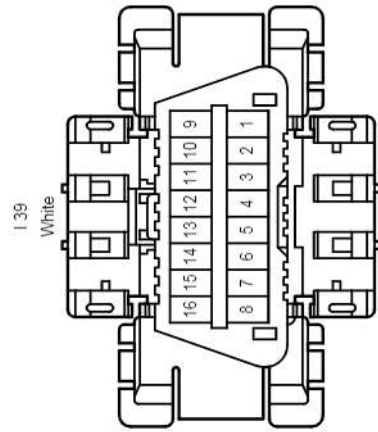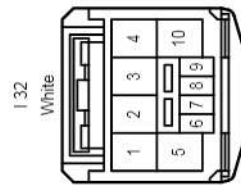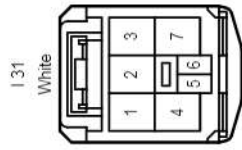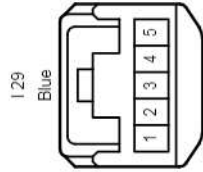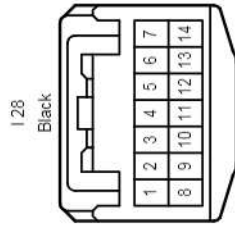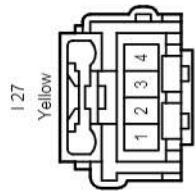         


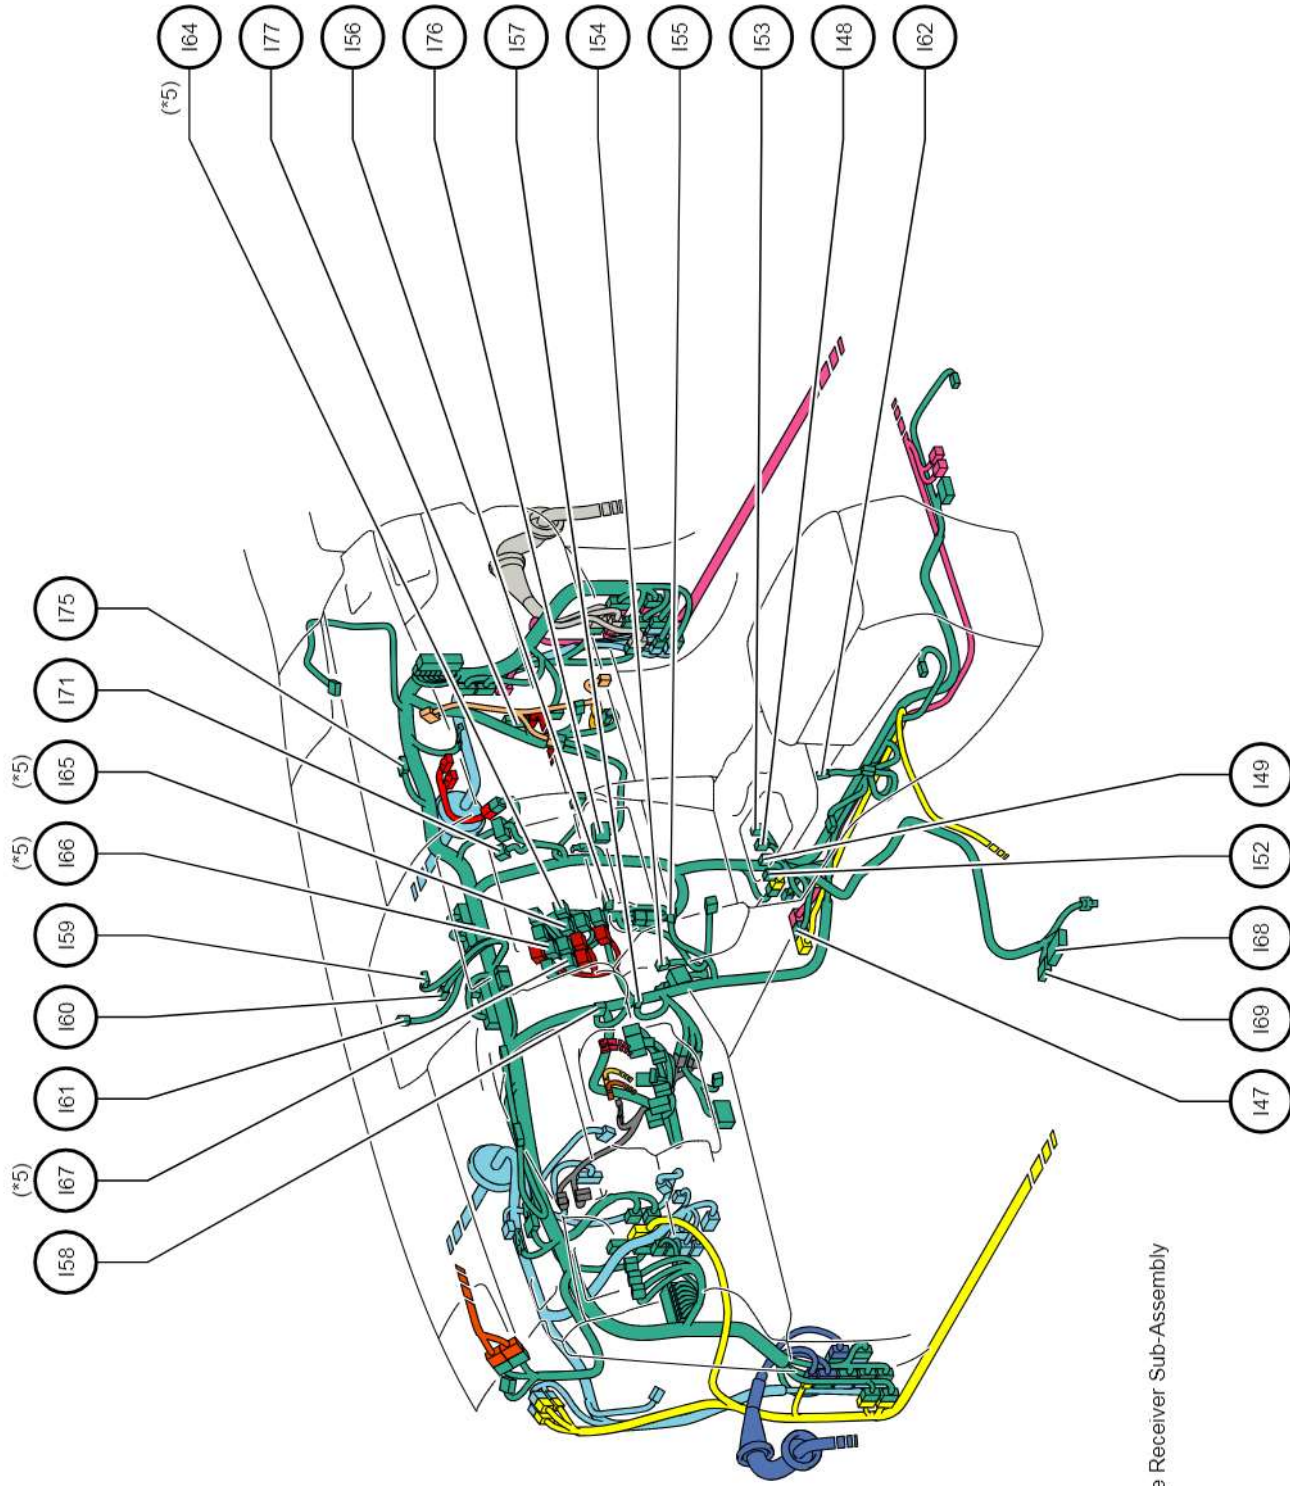 


* 5:10 Speaker w/ Multi-Media Module Receiver Sub-Assembly

47	Airbag Sensor Assembly
48	Pattern Select Switch Assembly
49	ECO Switch Assembly
52	Seat Heater Switch LH
53	Seat Heater Switch RH
54	No. 1 Clearance Warning Buzzer
55	Front Power Outlet Socket Assembly
56	A/C Control Assembly
57	Cooler (Room Temperature Sensor) Thermistor
58	Power Switch
59	Clock Assembly
60	Front No. 3 Speaker Assembly
61	Automatic Light Control Sensor
62	Shift Position Indicator (Indicator Light Wire Sub-Assembly)
64	Multi-Media Module Receiver Sub-Assembly
65	Multi-Media Module Receiver Sub-Assembly
66	Multi-Media Module Receiver Sub-Assembly
67	Multi-Media Module Receiver Sub-Assembly
68	Stereo Component Amplifier Assembly
69	Stereo Component Amplifier Assembly
71	Vehicle Approaching Speaker Controller
75	Diode (Front Courtesy Light)
76	Blower Motor Sub-Assembly with Fan
77	A/C Amplifier Assembly

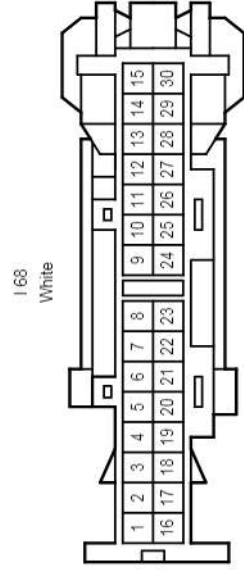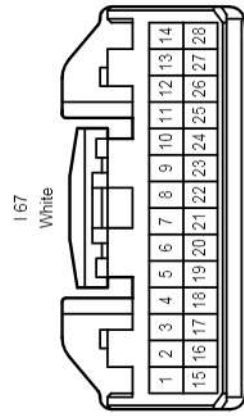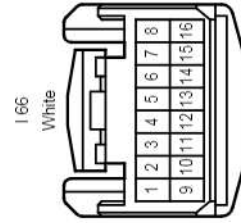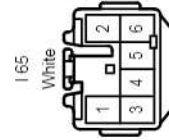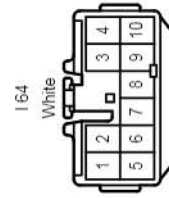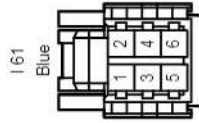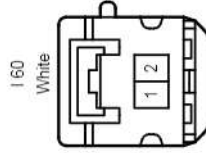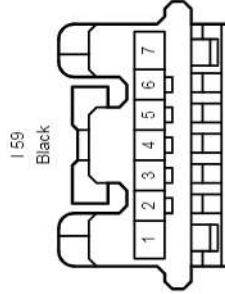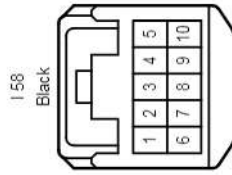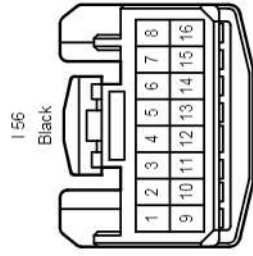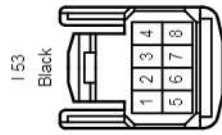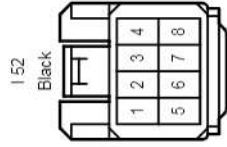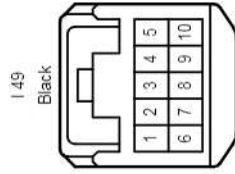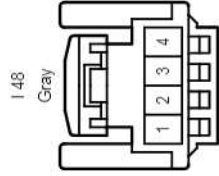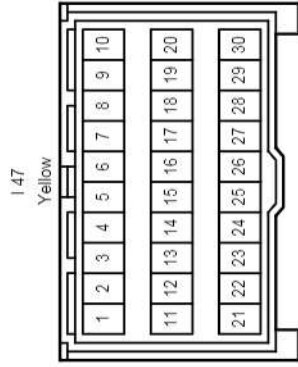                 


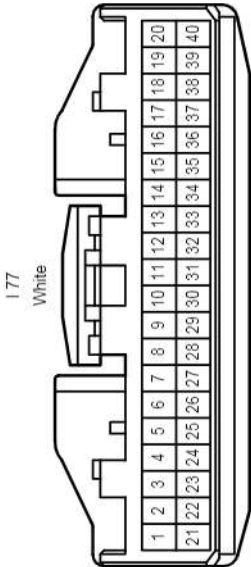 

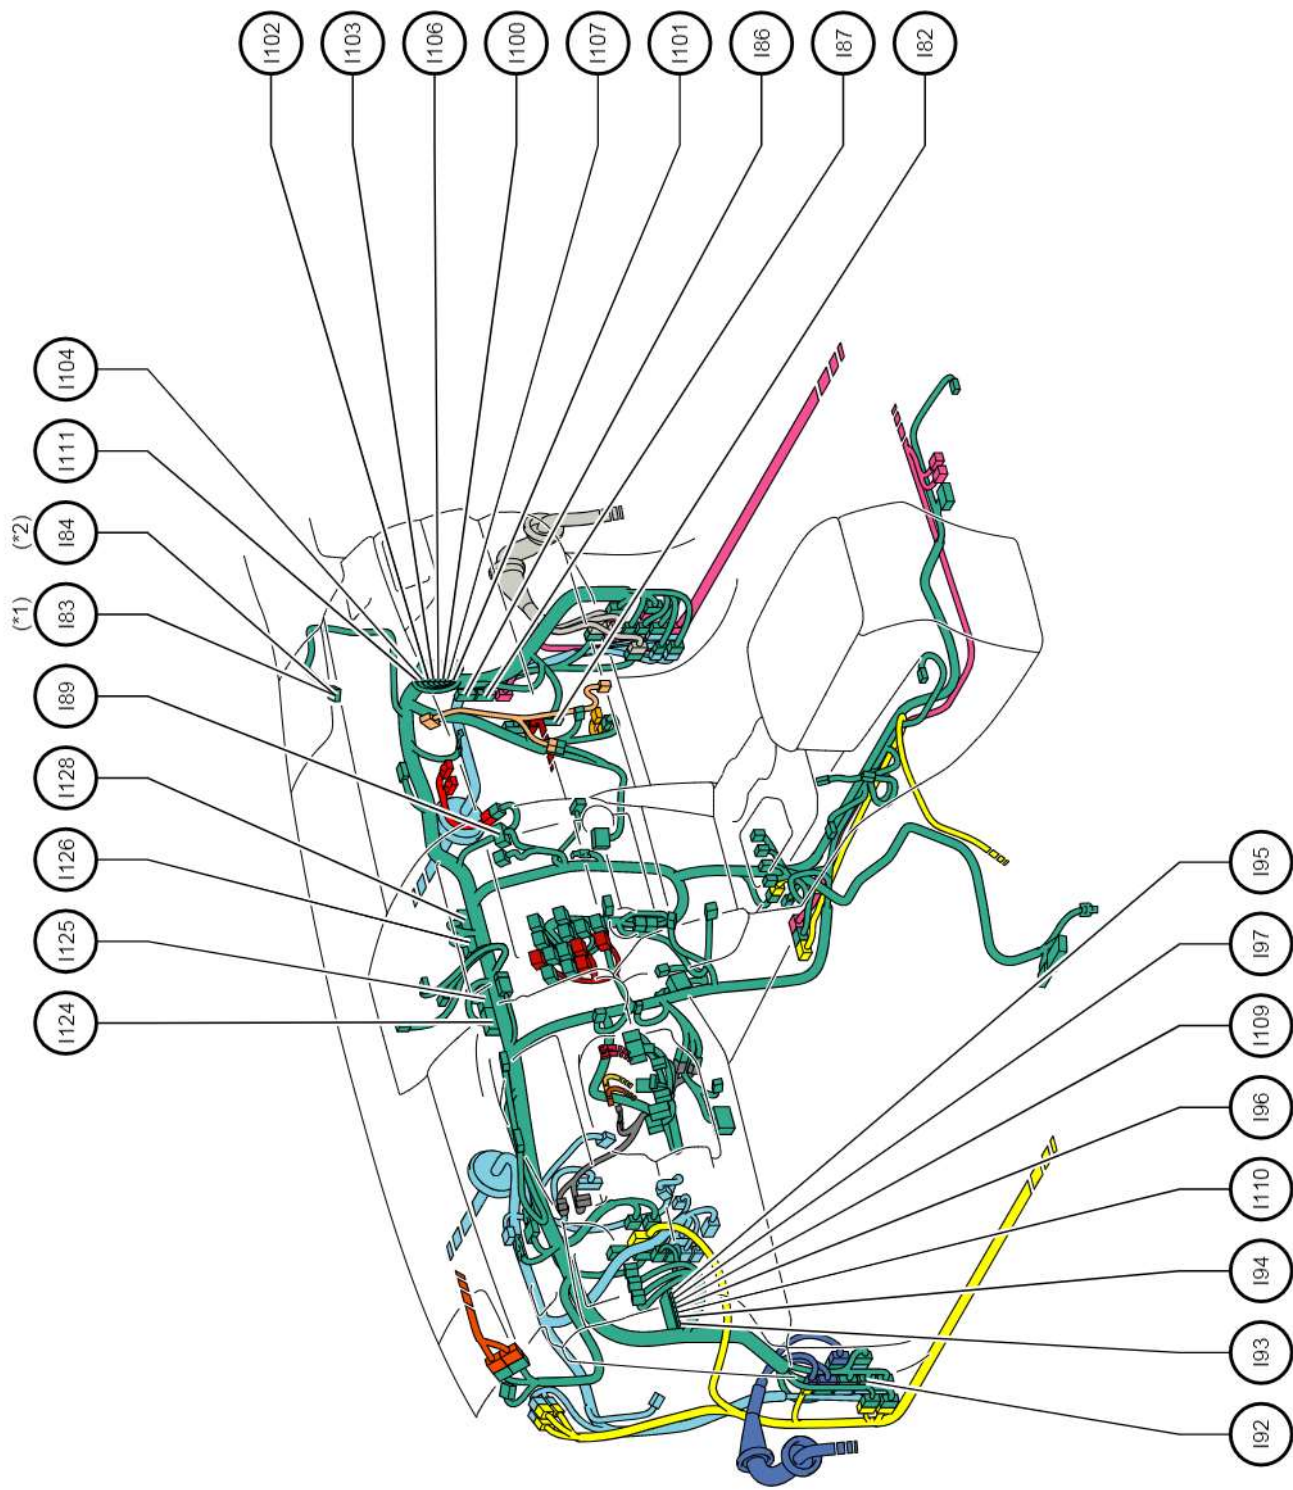 

I 82	Clearance Warning ECU Assembly
I 83	Front No. 2 Speaker Assembly RH
I 84	Front No. 2 Speaker Assembly RH
I 86	Certification ECU
I 87	Certification ECU
I 89	Option Connector (Remote Engine Starter)
I 92	Junction Connector
I 93	Junction Connector
I 94	Junction Connector
I 95	Junction Connector
I 96	Junction Connector
I 97	Junction Connector
I 100	Junction Connector
I 101	Junction Connector
I 102	Junction Connector
I 103	Junction Connector
I 104	Junction Connector
I 106	Junction Connector
I 107	Junction Connector
I 109	Junction Connector
I 110	Junction Connector
I 111	Junction Connector
I 124	Junction Connector
I 125	Junction Connector
I 126	Junction Connector
I 128	Junction Connector

 
I 82
Black

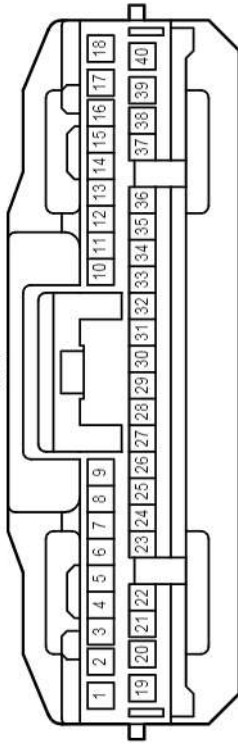


I 83
White



 
I 84
White

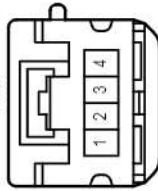


I 86
White

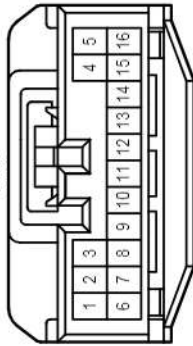 


I 87
White

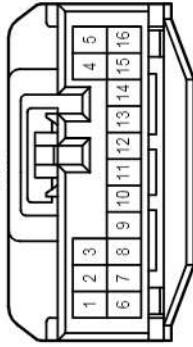 

I 89
White

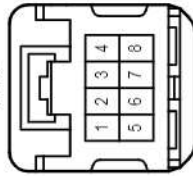 

I 92
Gray

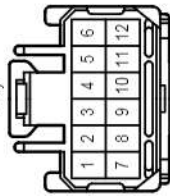 

I 93
White



 
I 94
White



I 95
White



I 96
White



I 97
White



I 100
White



I 101
White



I 102
White



I 103
White



I 104
White



 
I 106
White



I 107
White



I 109
White




I 110
White




I 111
White



  
I 124
White

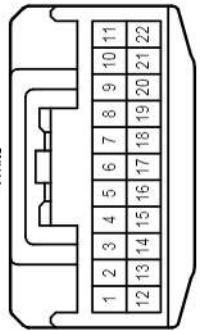

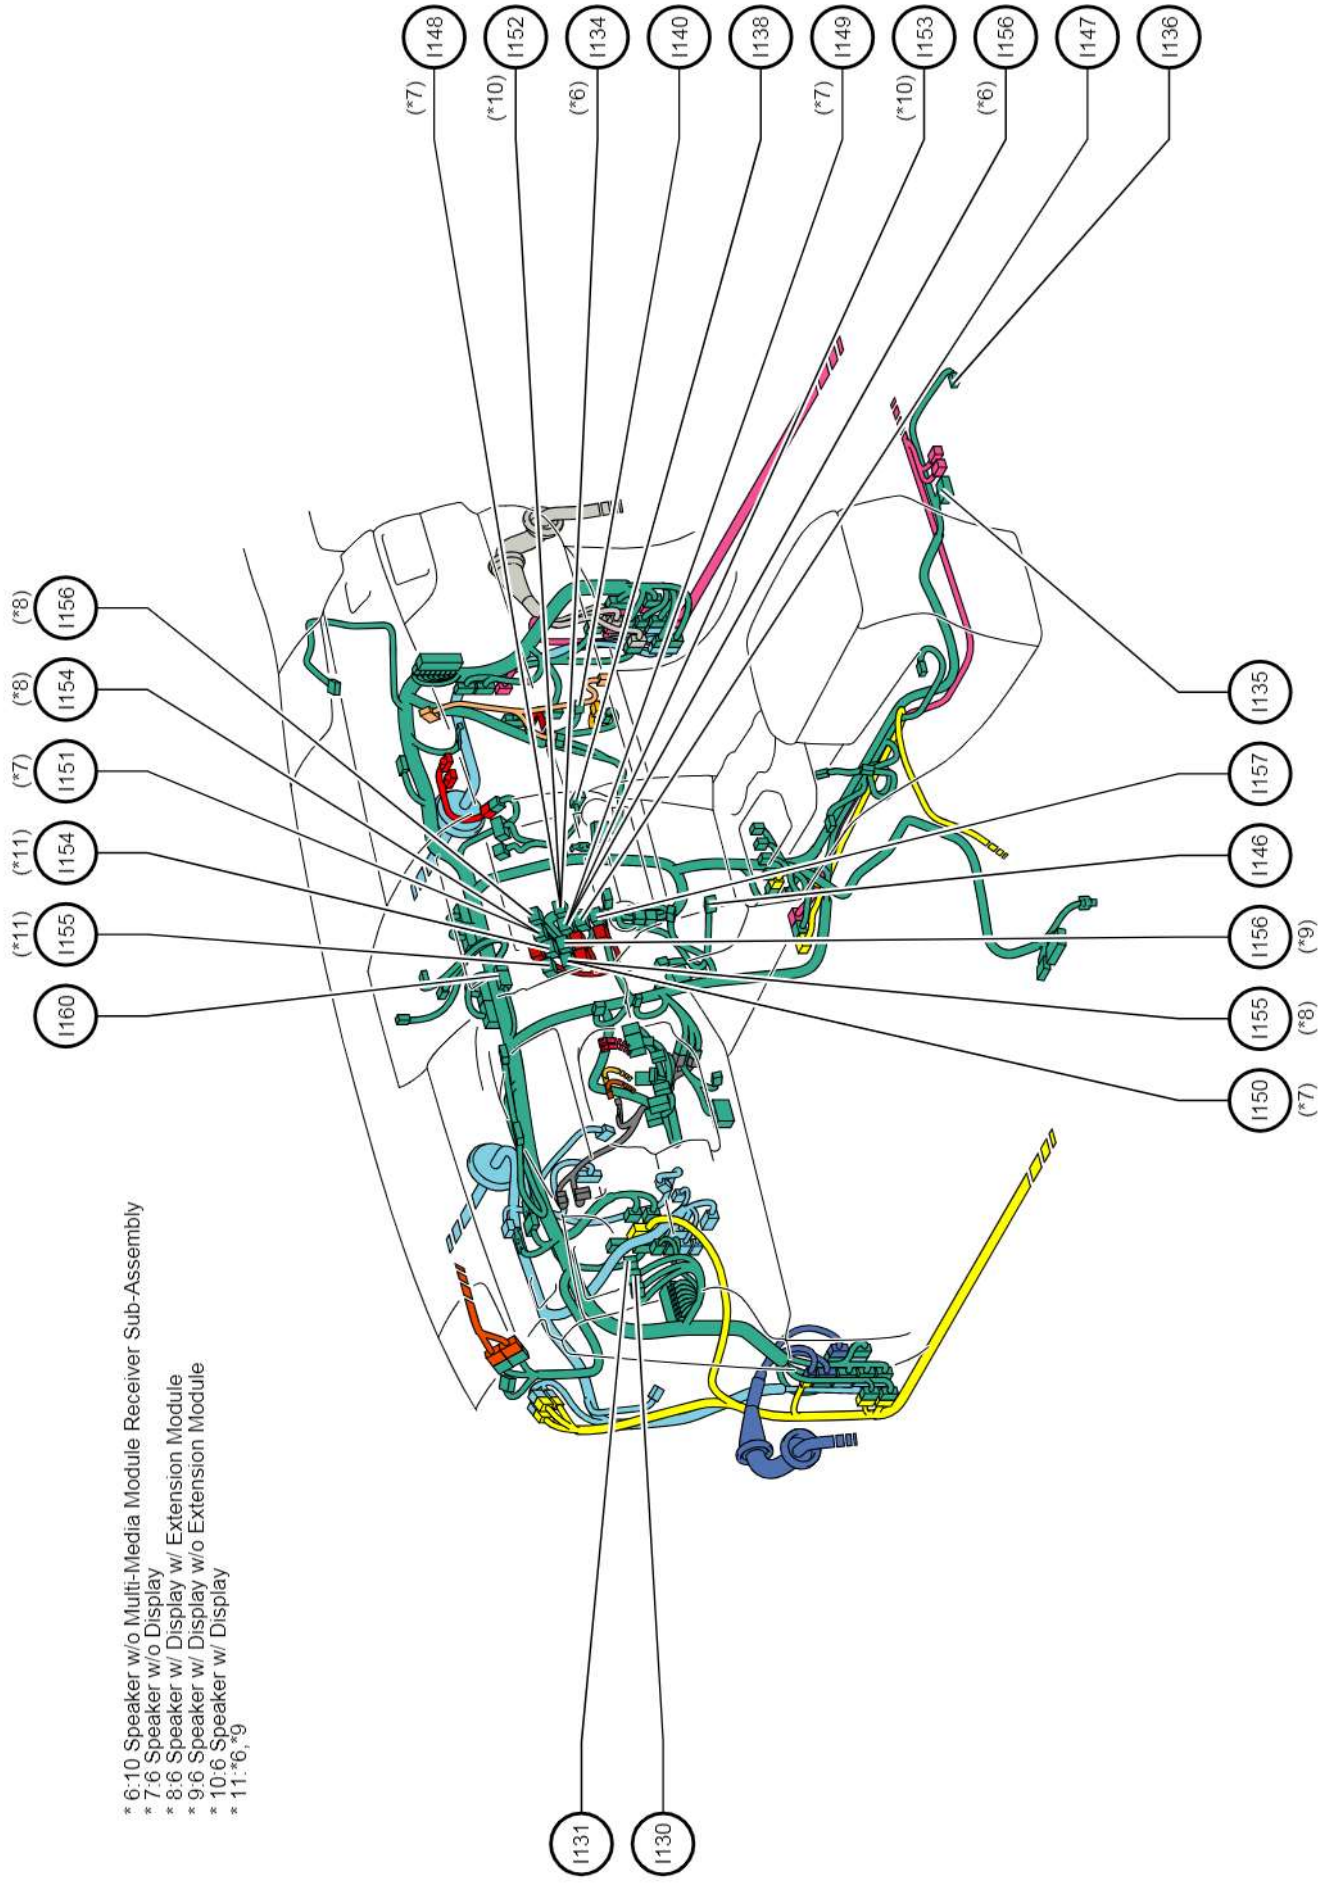


- I 130 VSC Off Switch
- I 131 Headlight Leveling Switch
- I 134 Radio & Display Receiver Assembly
- I 135 DCM (Telematics Transceiver)
- I 136 Back-Up Battery (Mayday Battery)
- I 138 Glove Box Light Assembly
- I 140 Lower No. 2 Instrument Panel Airbag Assembly
- I 146 No. 1 Stereo Jack Adapter Assembly
- I 147 Multi-Media Module Receiver Sub-Assembly
- I 148 Radio Receiver Assembly
- I 149 Radio Receiver Assembly
- I 150 Radio Receiver Assembly
- I 151 Radio Receiver Assembly
- I 152 Radio & Display Receiver Assembly
- I 153 Radio & Display Receiver Assembly
- I 154 Radio & Display Receiver Assembly
- I 155 Radio & Display Receiver Assembly
- I 156 Radio & Display Receiver Assembly
- I 157 Extension Module
- I 160 Junction Connector

 
I130
Black

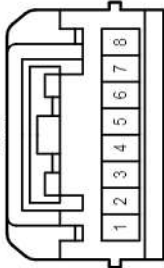


I131
Black

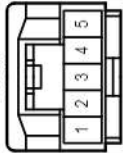 


I134
White

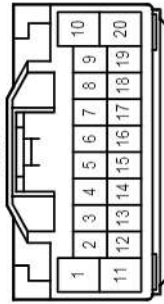 

I135
White

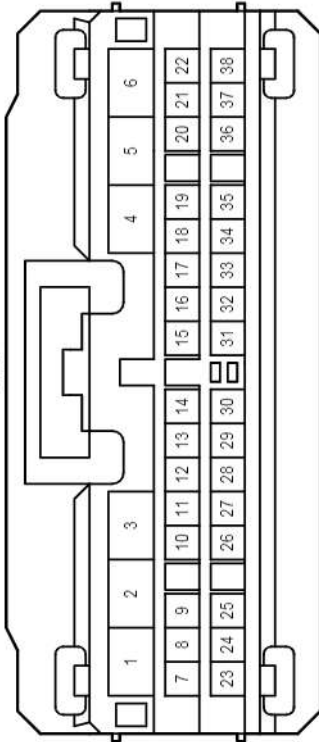 


I136
White

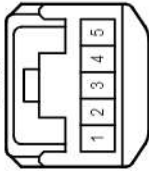 


I138
Black



 
I140
Black




I145
Black

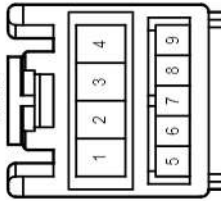 


I147
Gray

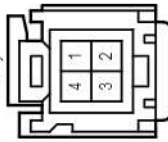 


I148
White

 


I149
White

 


I150
White

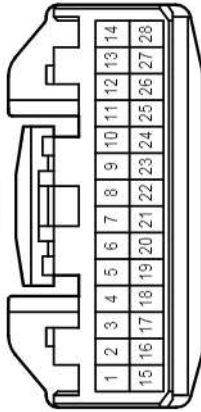 

I151
Gray

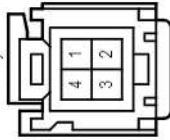 


I152
White

 


I153
White




  I154
White



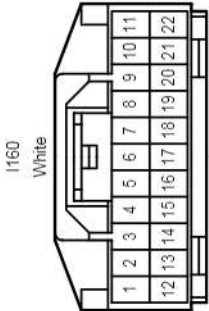


 Position of Parts in Instrument Panel <Before Dec. 2013 Production>

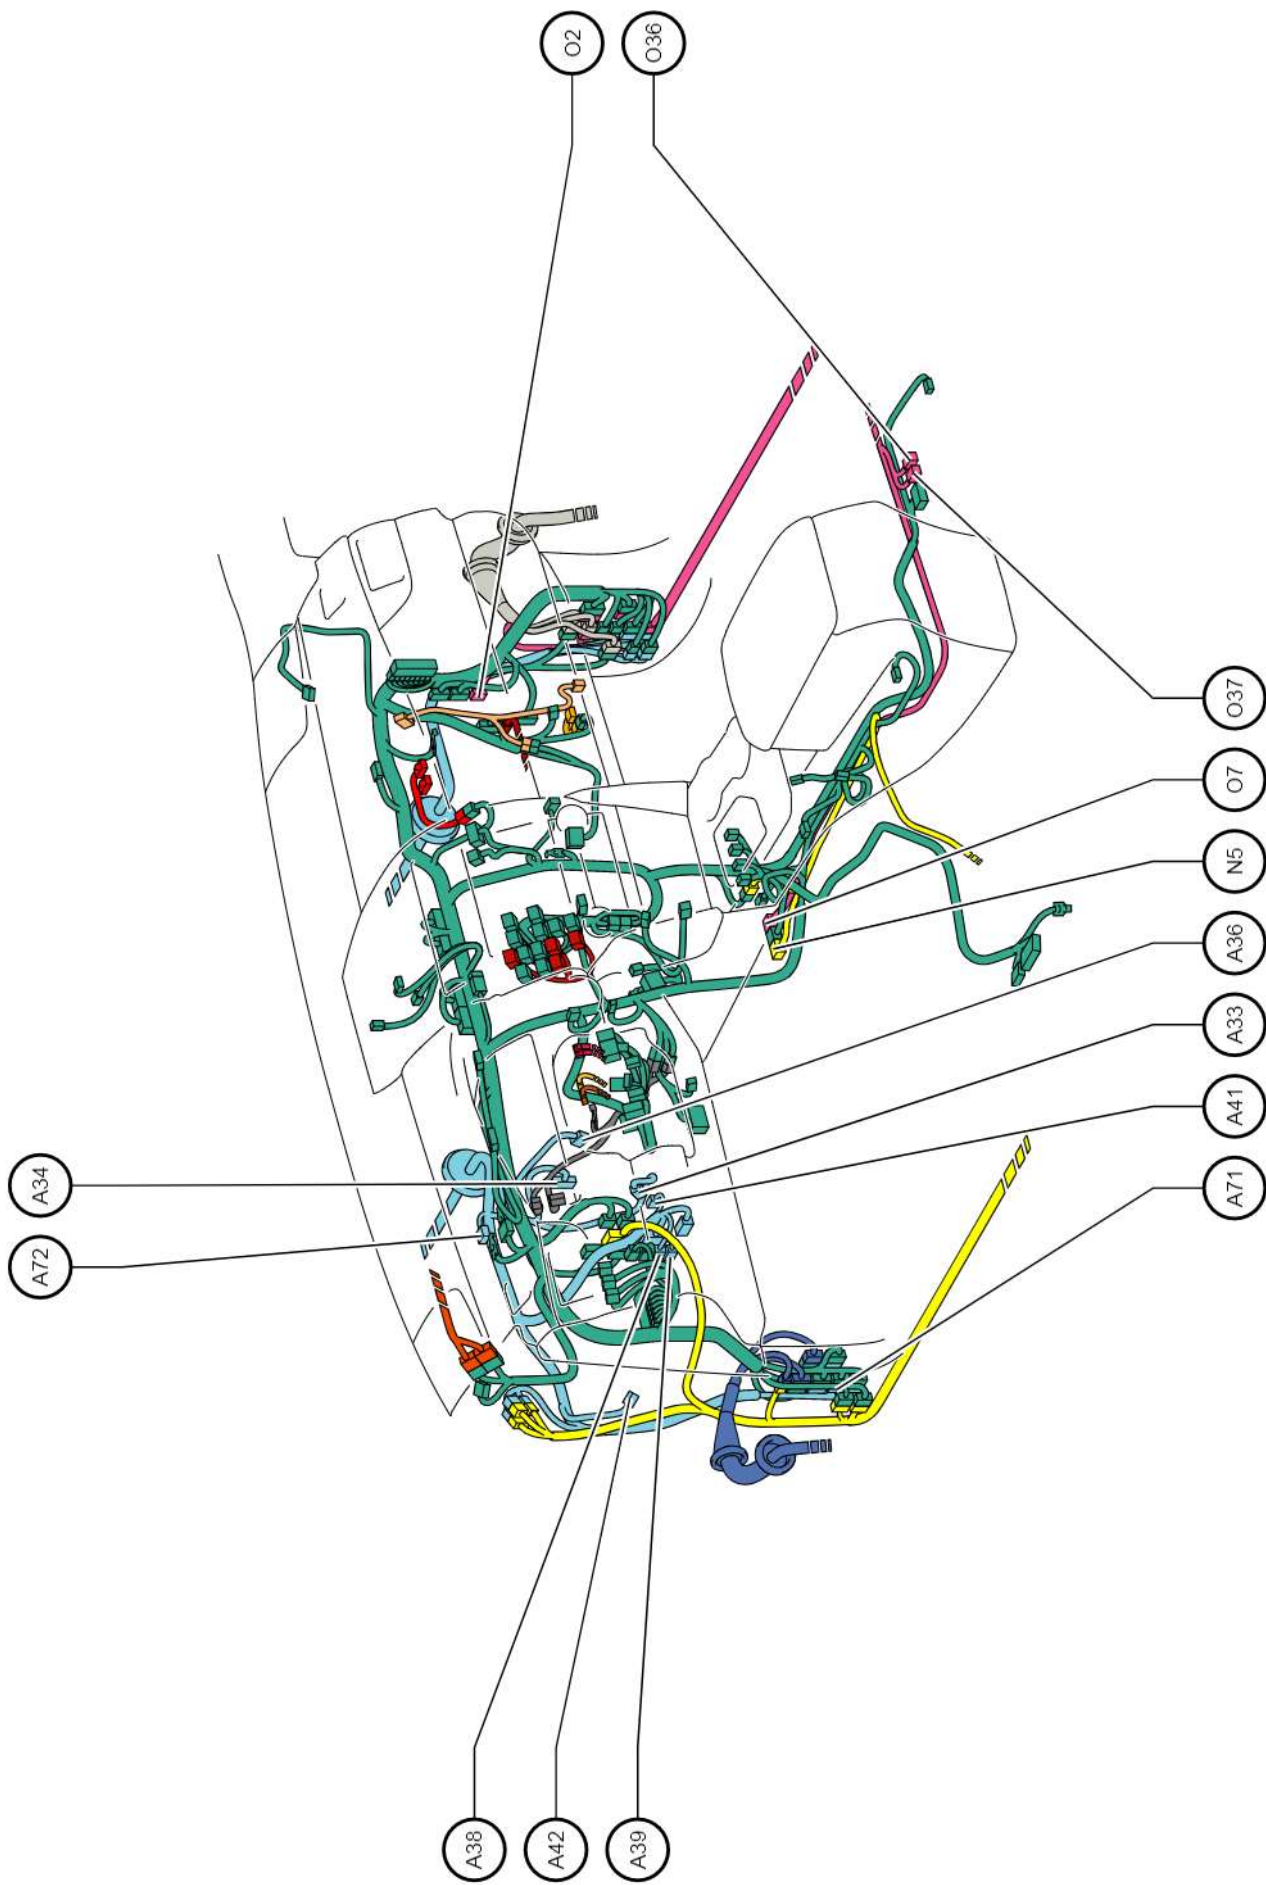


A 33	Stop Light Switch Assembly
A 34	Headlight Leveling ECU Assembly
A 36	Accelerator Pedal Sensor Assembly
A 38	Power Management Control ECU
A 39	Power Management Control ECU
A 41	Brake Pedal Stroke Sensor Assembly
A 42	Parking Brake Switch Assembly
A 71	Junction Connector
A 72	Junction Connector
N 5	Airbag Sensor Assembly
O 2	Certification ECU
O 7	Airbag Sensor Assembly
O 36	DCM (Telematics Transceiver)
O 37	DCM (Telematics Transceiver)

 
A 33
White

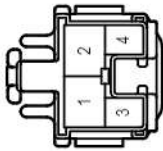


A 34
White

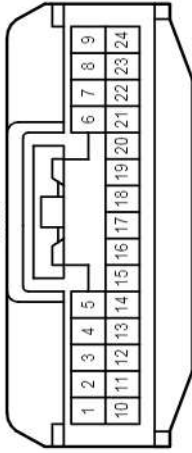 


A 36
Black

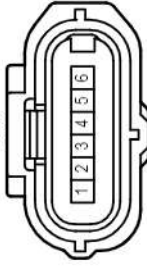 


A 38
Gray

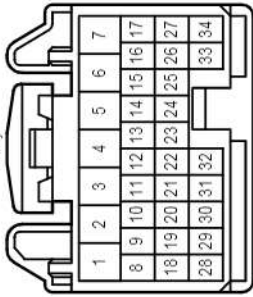 

A 39
Gray

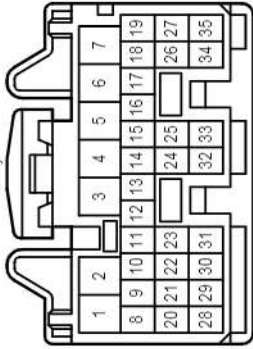 


A 41
Black

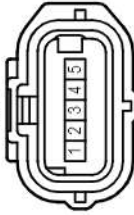 


A 42
Black



 
A 71
Gray

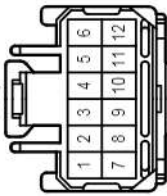


A 72
White

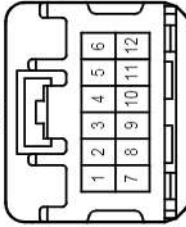 


N 5
Yellow

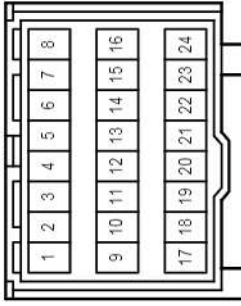 


O 2
White

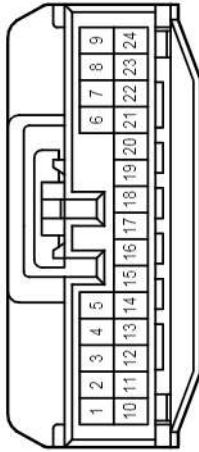 


O 7
Yellow

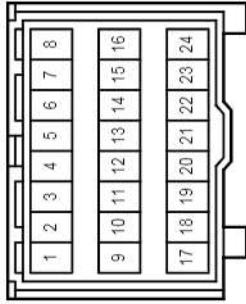 


O 36
Blue

 


O 37
Gray

 





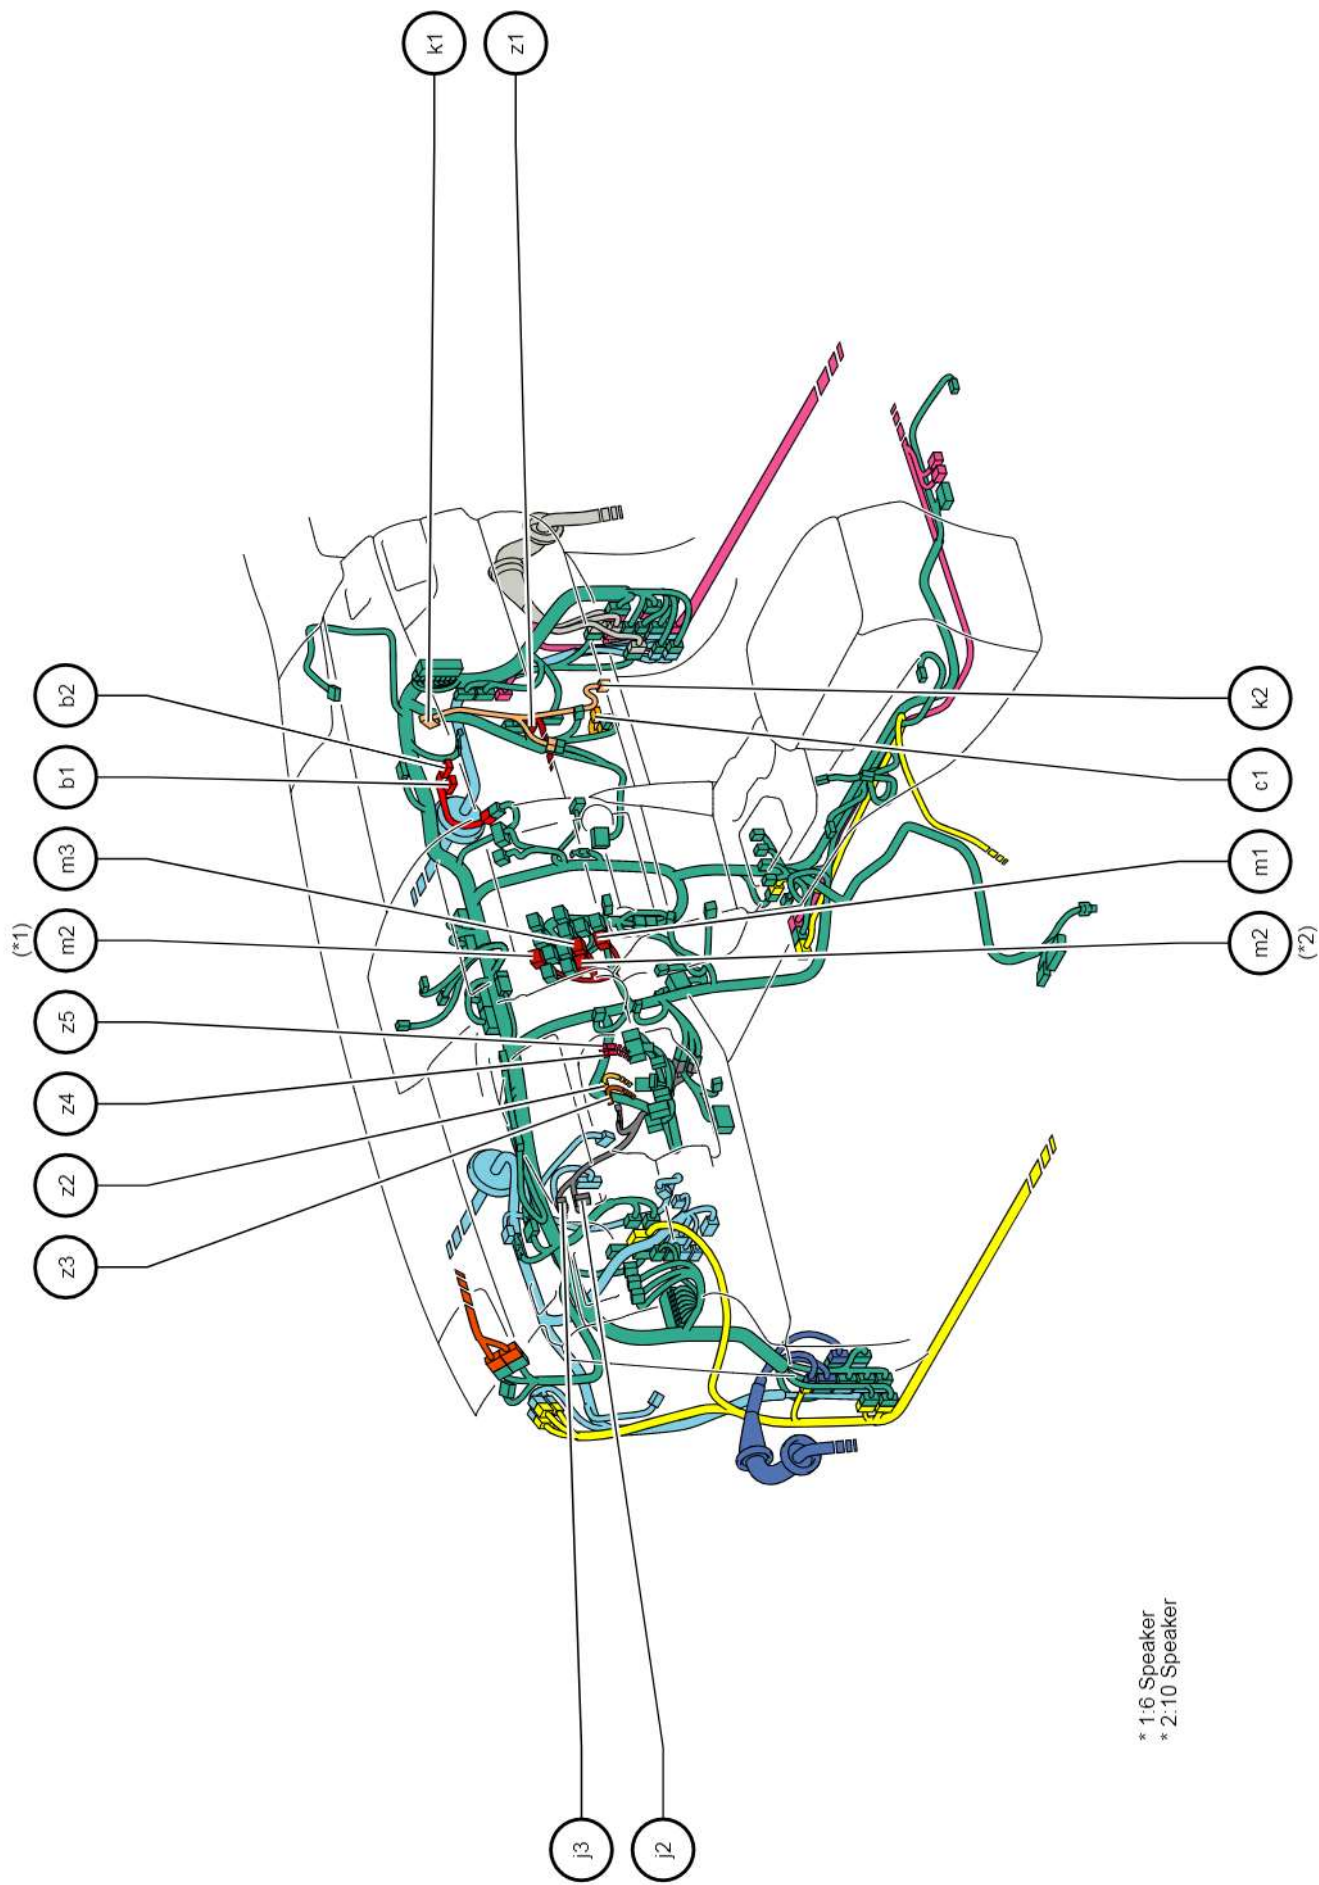 



* 1:6 Speaker
* 2:10 Speaker


b	1	Instrument Panel Passenger Airbag Assembly without Door
b	2	Instrument Panel Passenger Airbag Assembly without Door
c	1	Light Cut Relay
j	2	Power Steering ECU Assembly
j	3	Power Steering ECU Assembly
k	1	Glass Breakage Sensor ECU Assembly
k	2	Glass Breakage Sensor Microphone
m	1	Extension Module
m	2	Radio & Display Receiver Assembly
m	3	Radio & Display Receiver Assembly
z	1	A/C Amplifier Assembly , A/C Unit (A/C Harness Assembly)
z	2	Cruise Control Main Switch , Spiral Cable Sub-Assembly
z	3	Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
z	4	Spiral Cable Sub-Assembly , Driver Side Squib Circuit (Horn Button Assembly)
z	5	Spiral Cable Sub-Assembly , Driver Side Squib Circuit (Horn Button Assembly)

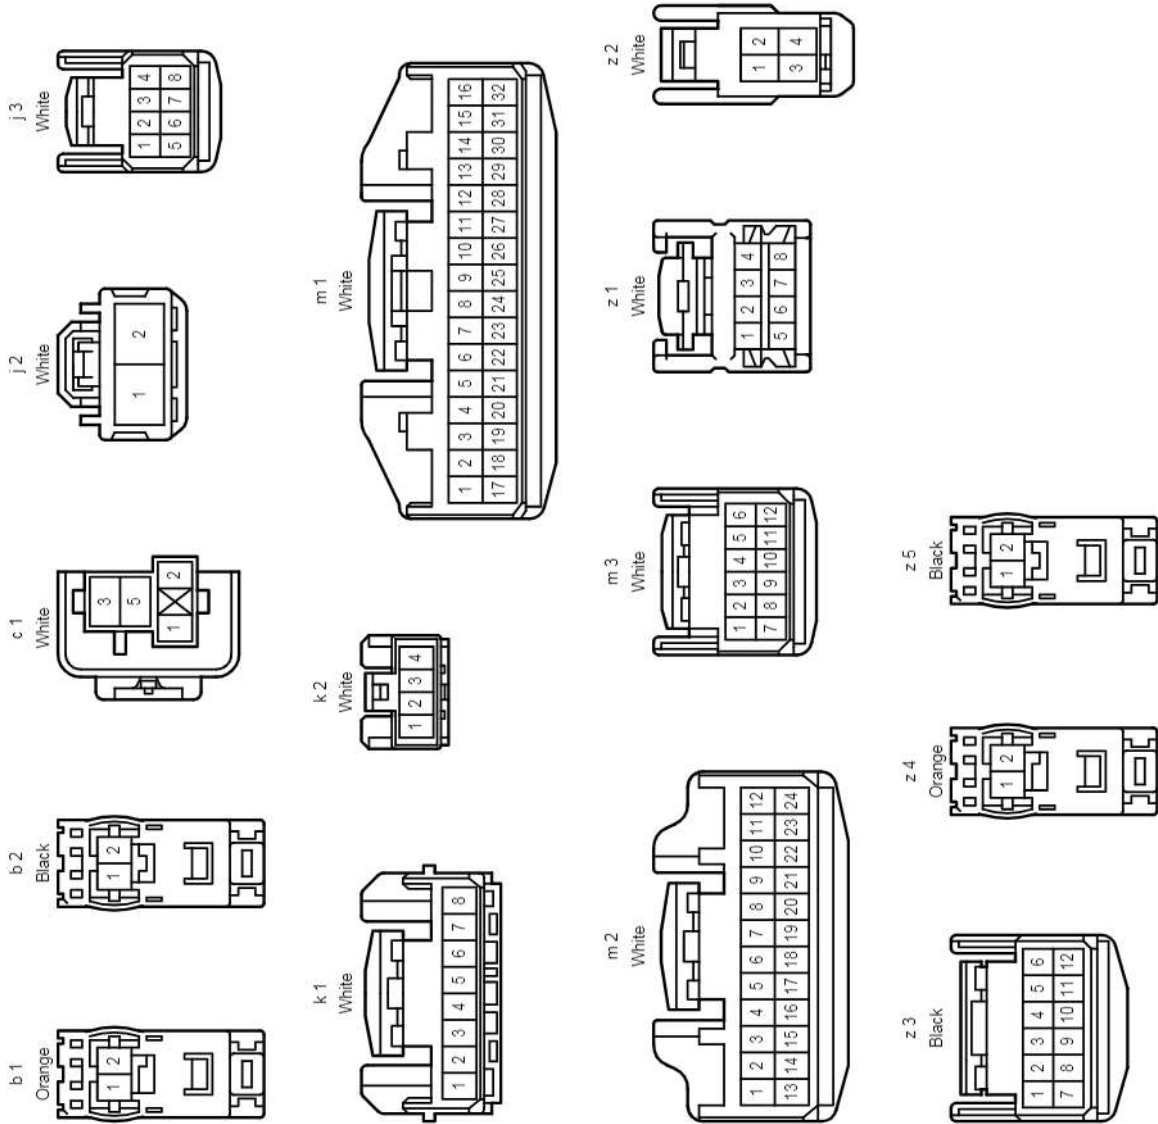 


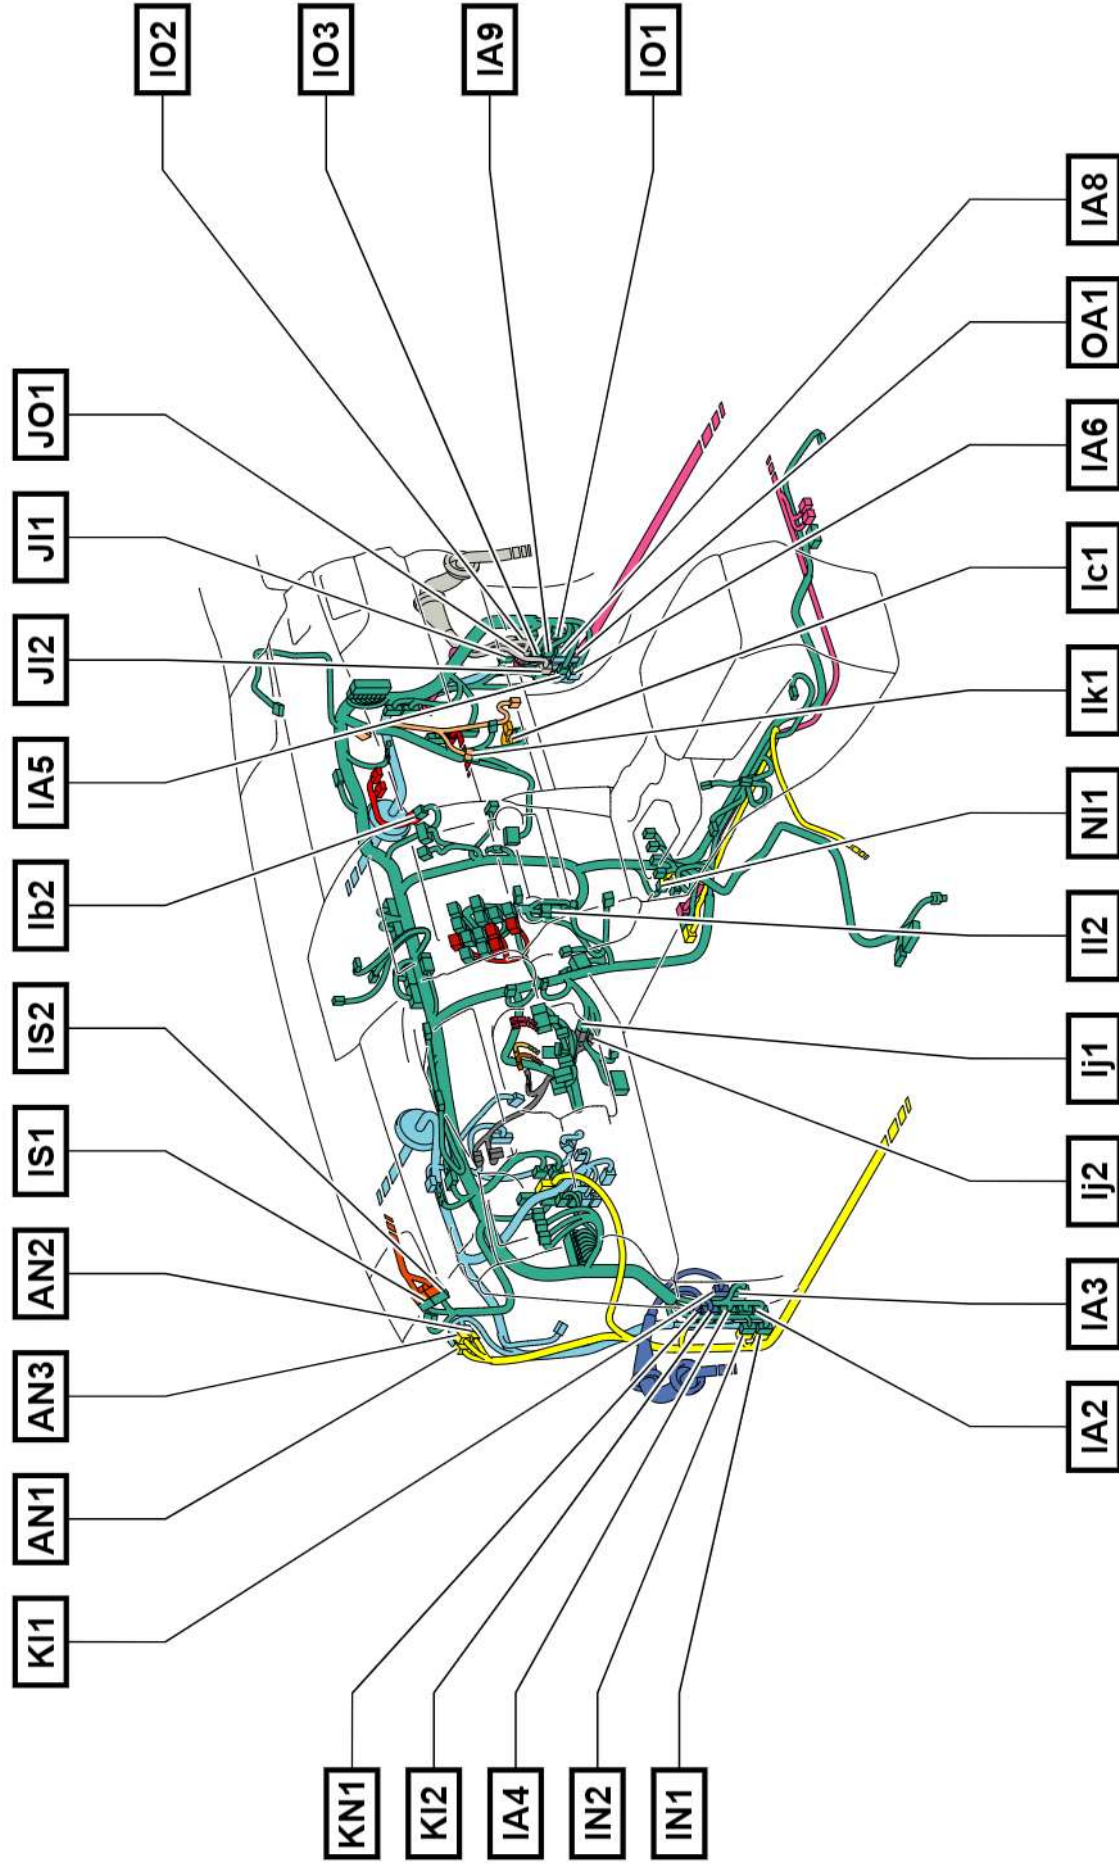 


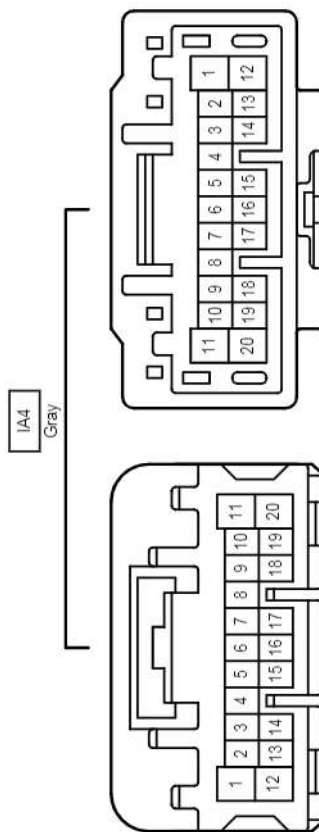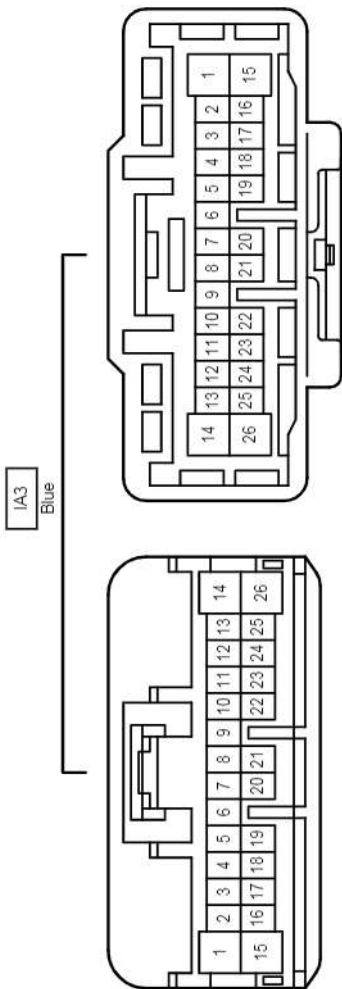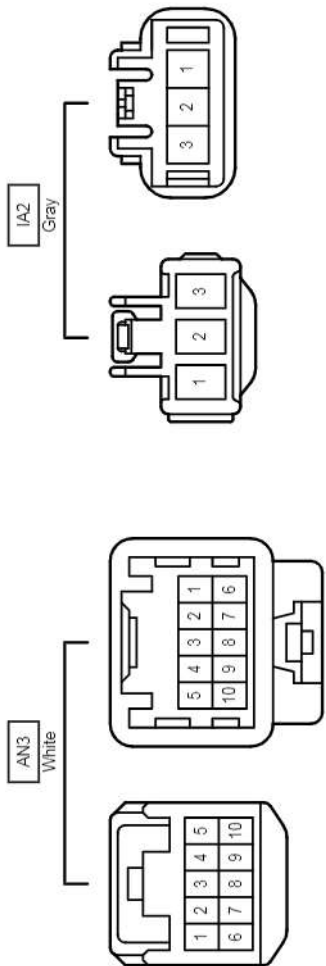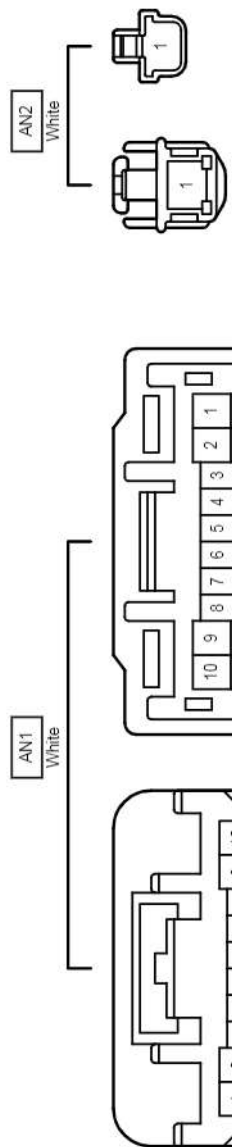    


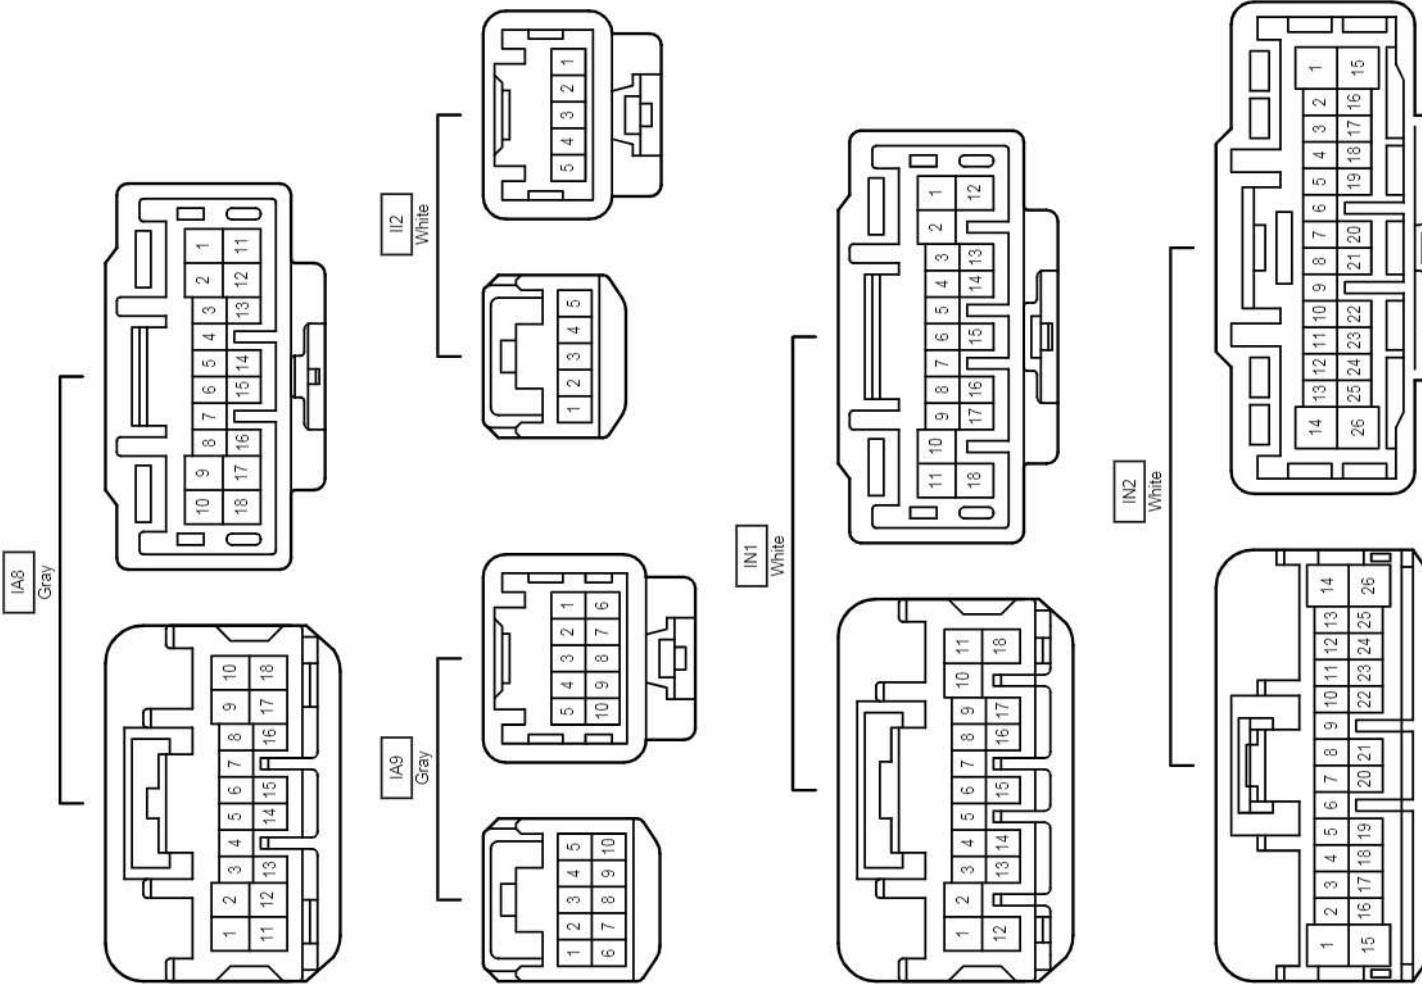 

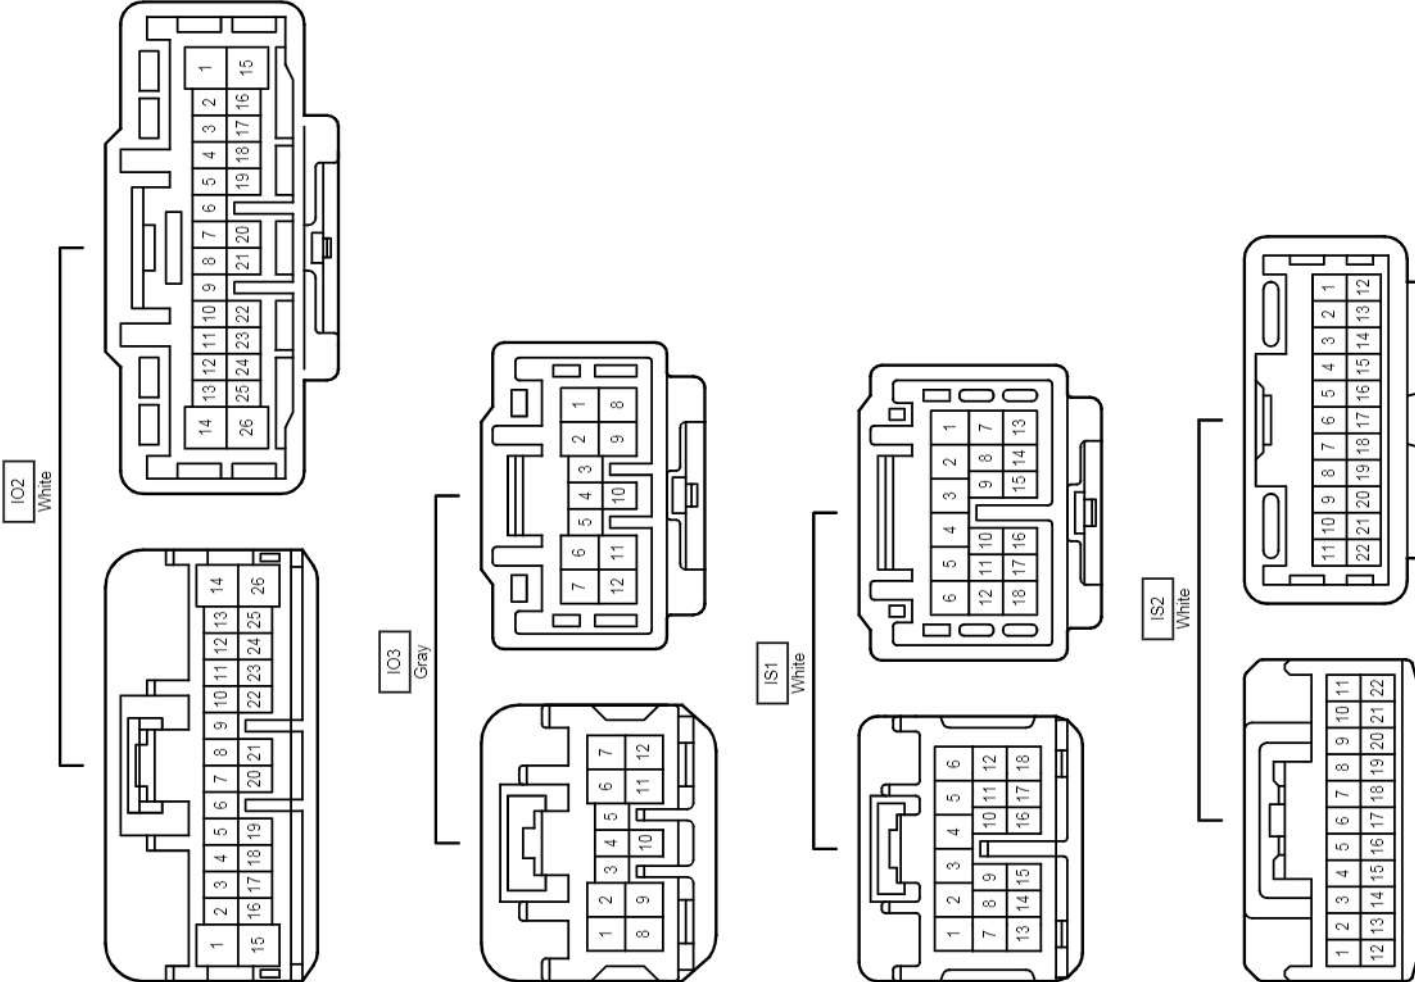    


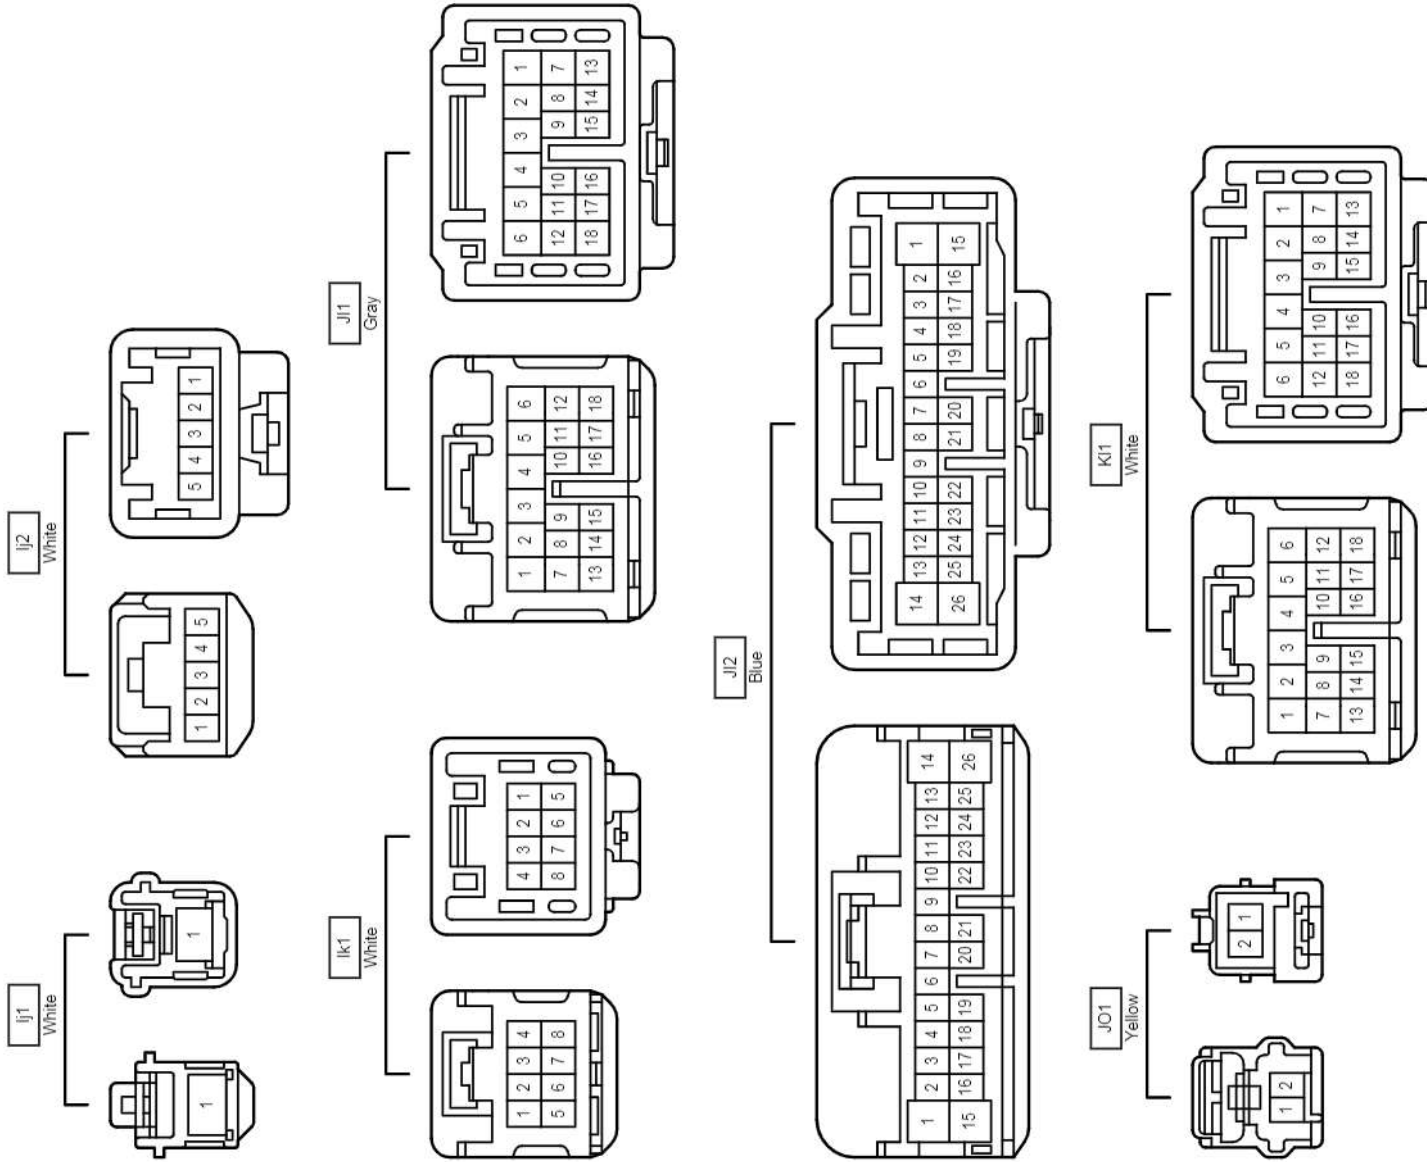









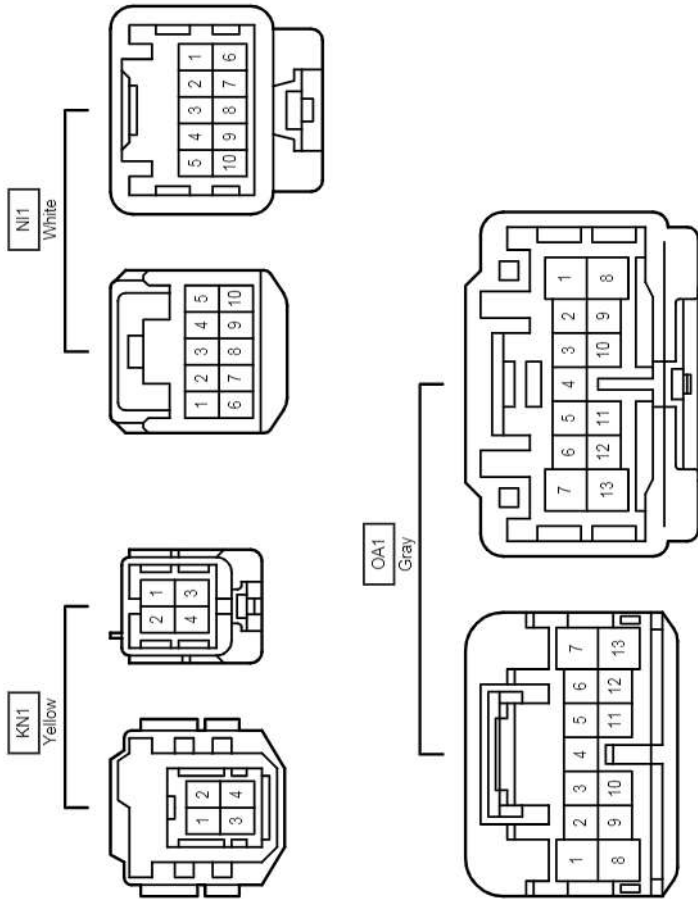










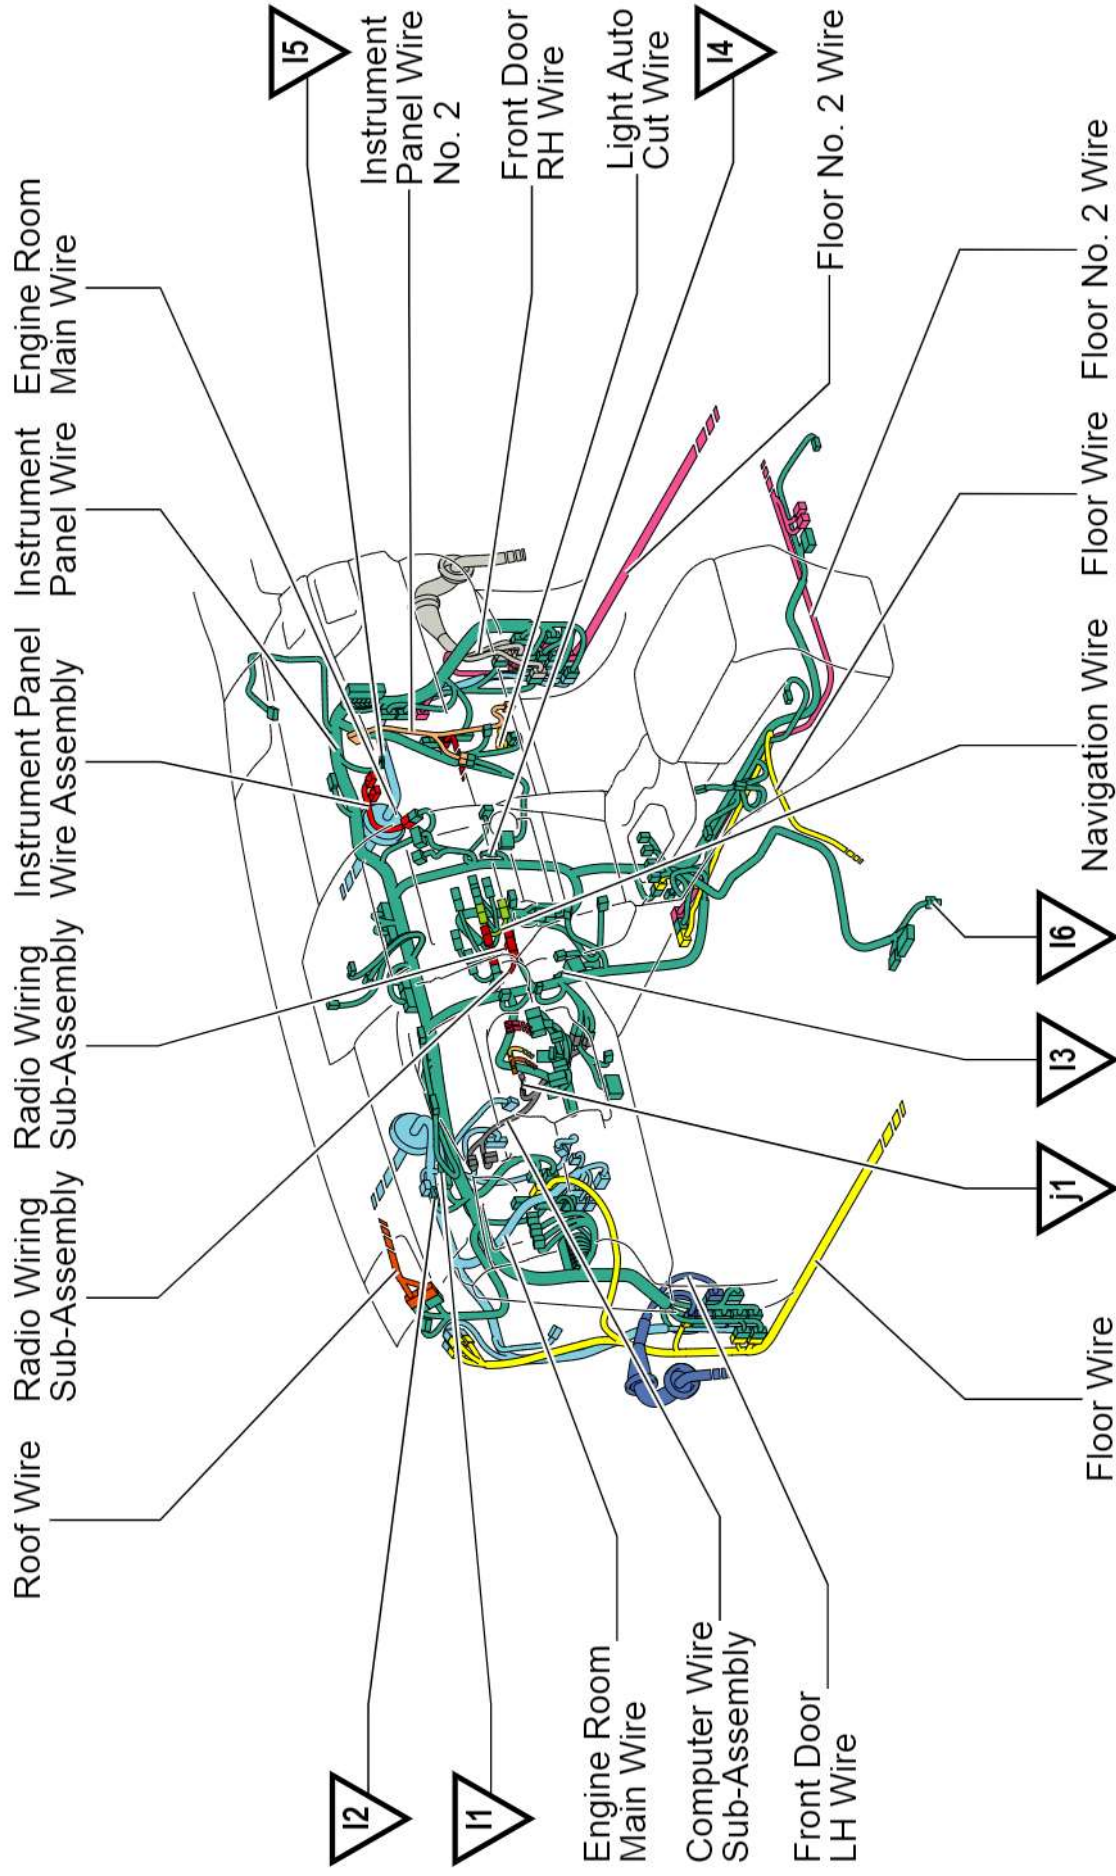


 Position of Parts in Instrument Panel <From Dec. 2013 Production>

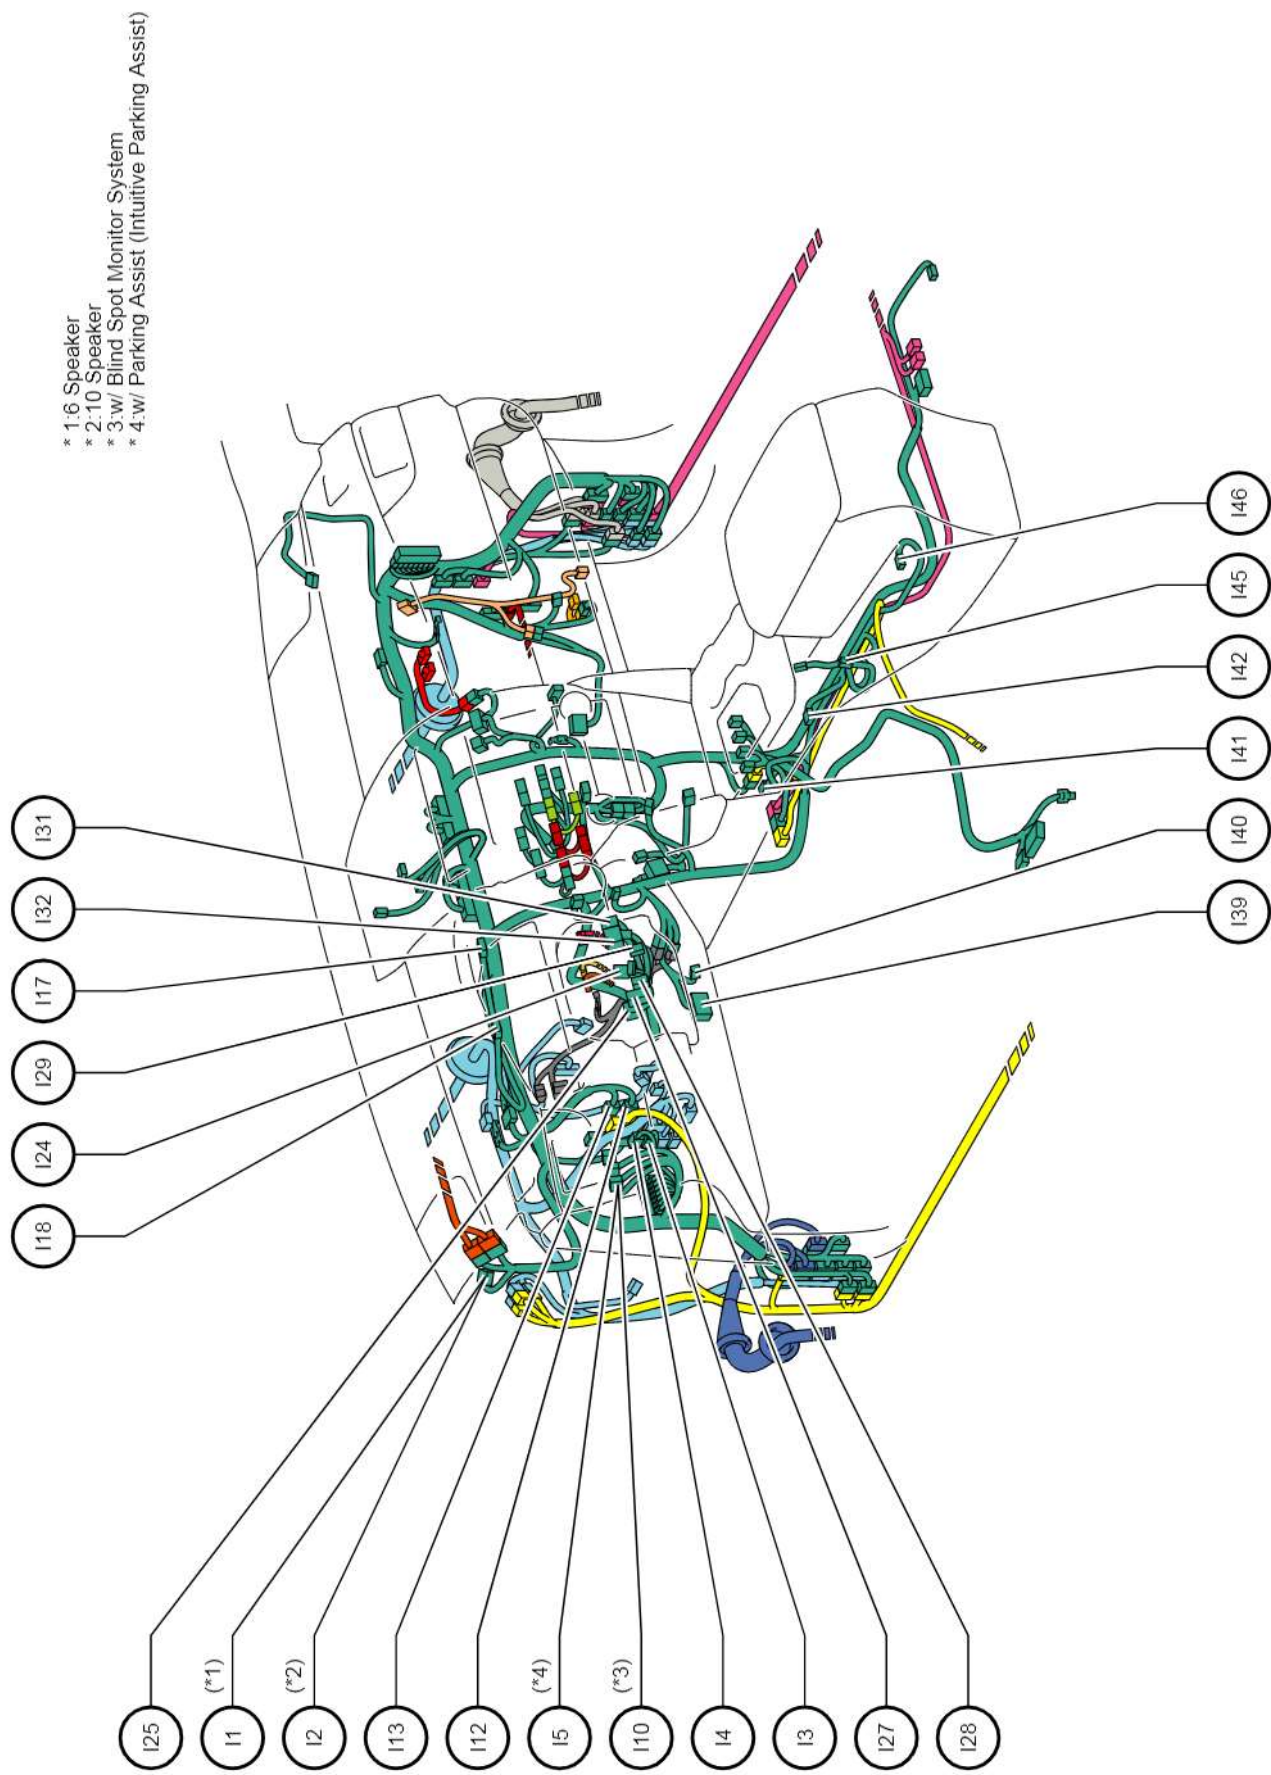


	1	Front No. 2 Speaker Assembly LH
	2	Front No. 2 Speaker Assembly LH
	3	Power Management Control ECU
	4	Power Management Control ECU
	5	Back Sonar or Clearance Sonar Switch Assembly
	10	Blind Spot Monitor Main Switch (Warning Canceling Switch Assembly)
	12	Main Body ECU
	13	Main Body ECU
	17	Combination Meter Assembly
	18	Combination Meter Assembly
	24	Steering Lock Actuator Assembly
	25	Headlight Dimmer Switch Assembly
	27	Spiral Cable Sub-Assembly
	28	Spiral Cable Sub-Assembly
	29	Steering Sensor
	31	Windshield Wiper Switch Assembly
	32	Windshield Wiper Switch Assembly
	39	Data Link Connector 3
	40	Lower No. 1 Instrument Panel Airbag Assembly
	41	Quick Heater Assembly
	42	Shift Lock Control ECU (Lower Shift Lever Assembly)
	45	Rear Power Outlet Socket Assembly
	46	No. 1 Indoor Electrical Key Antenna Assembly

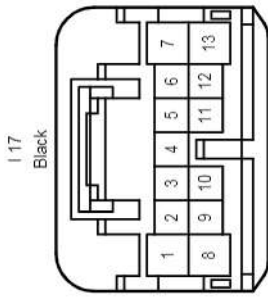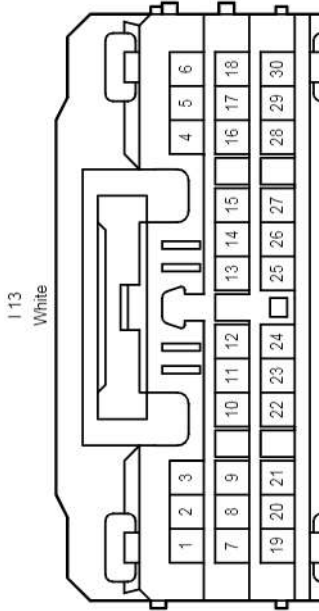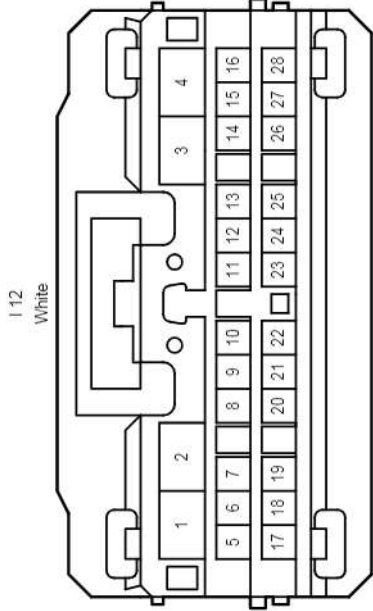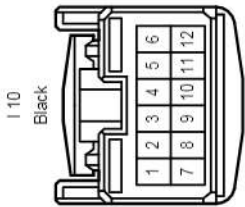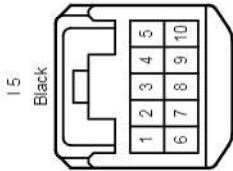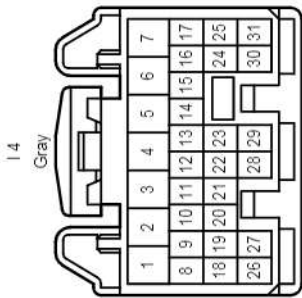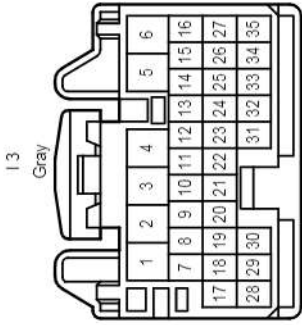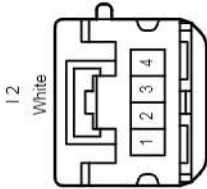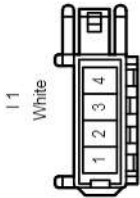         

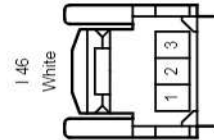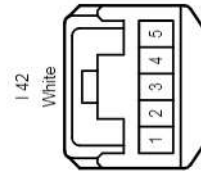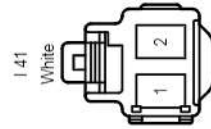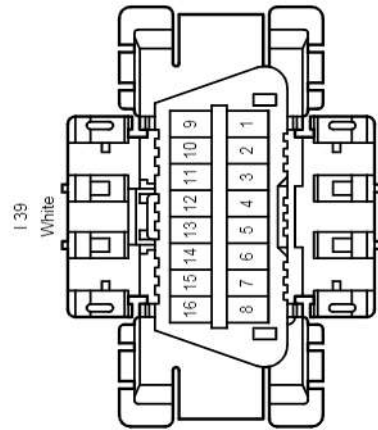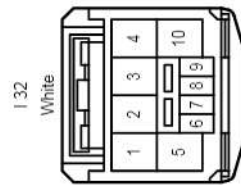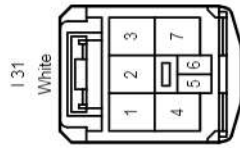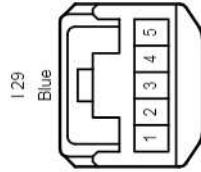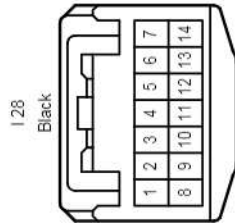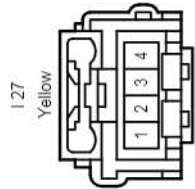         

















 
Position of Parts in Instrument Panel <From Dec. 2013 Production>

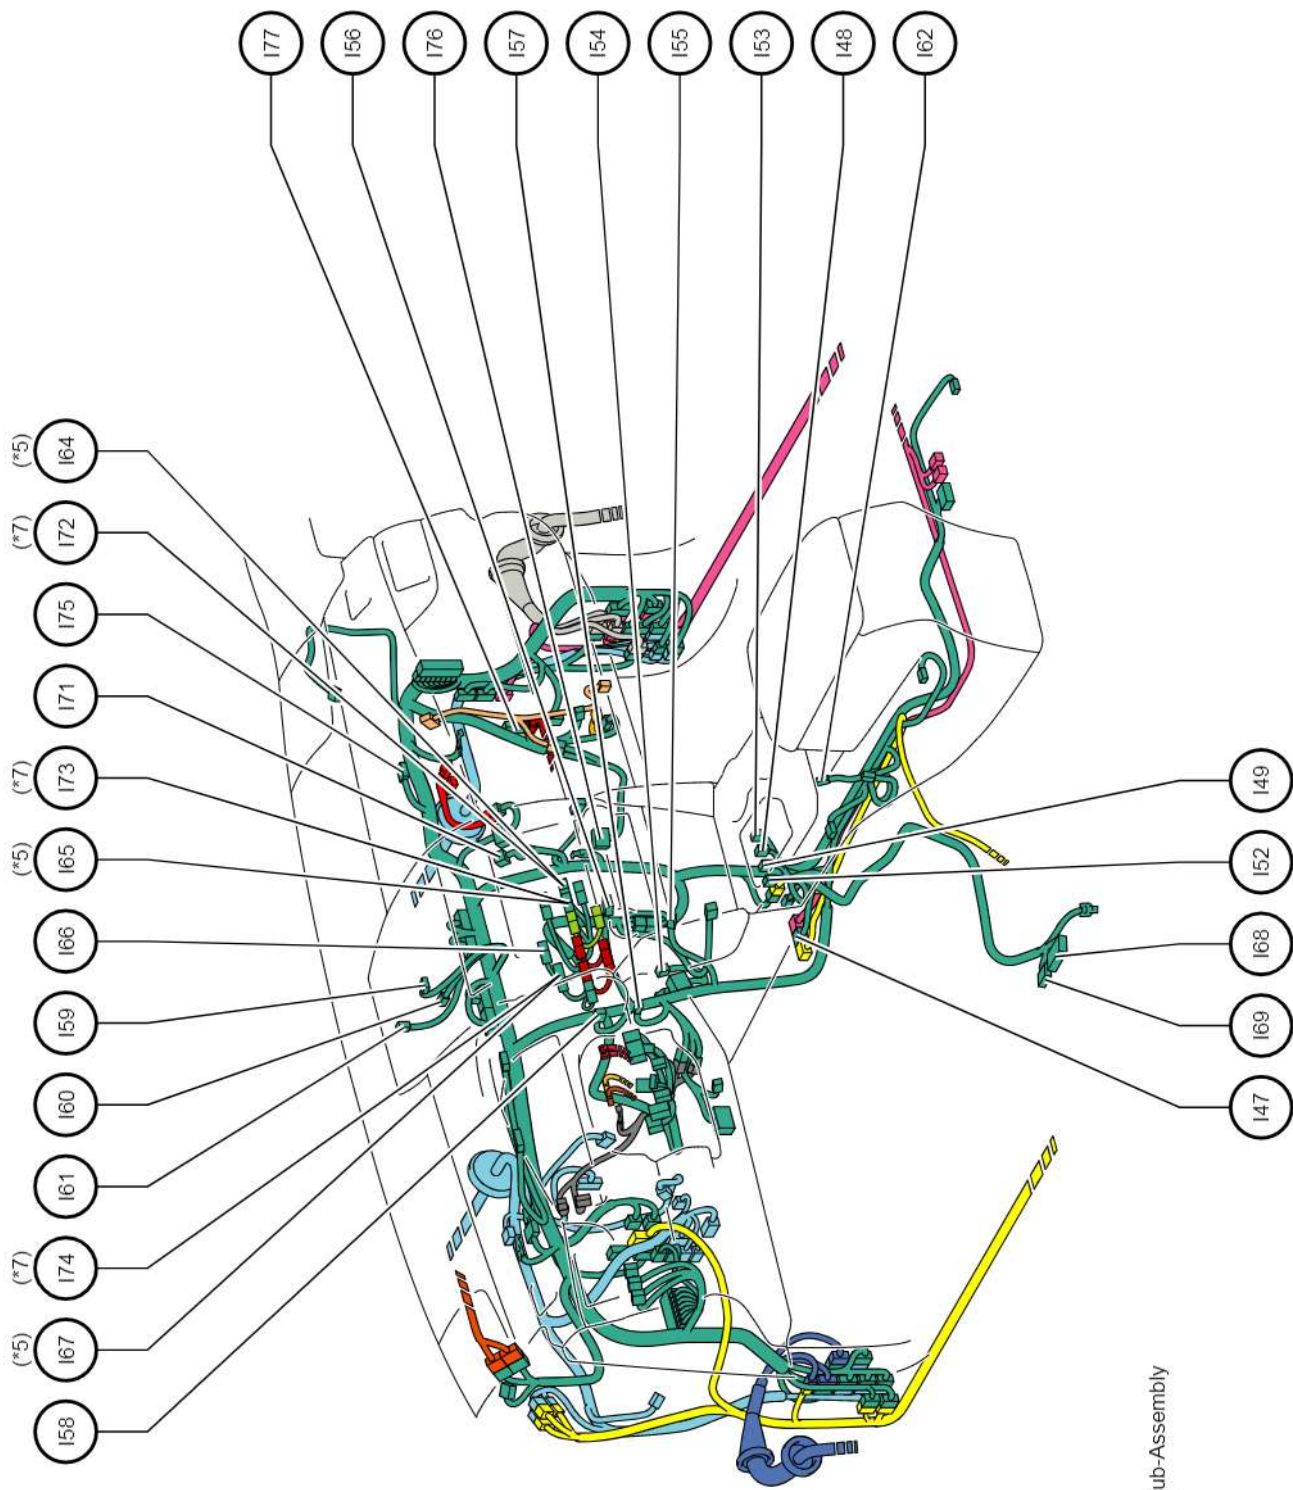



* 5.w/ Multi-Media Module Receiver Sub-Assembly

* 7.w/ Navigation Receiver Assembly
























47	Airbag Sensor Assembly
48	Pattern Select Switch Assembly
49	ECO Switch Assembly
52	Seat Heater Switch LH
53	Seat Heater Switch RH
54	No. 1 Clearance Warning Buzzer
55	Front Power Outlet Socket Assembly
56	A/C Control Assembly
57	Cooler (Room Temperature Sensor) Thermistor
58	Power Switch
59	Clock Assembly
60	Front No. 3 Speaker Assembly
61	Automatic Light Control Sensor
62	Shift Position Indicator (Indicator Light Wire Sub-Assembly)
64	Multi-Media Module Receiver Sub-Assembly
65	Multi-Media Module Receiver Sub-Assembly
66	Multi-Media Module Receiver Sub-Assembly
67	Multi-Media Module Receiver Sub-Assembly
68	Stereo Component Amplifier Assembly
69	Stereo Component Amplifier Assembly
71	Vehicle Approaching Speaker Controller
72	Navigation Receiver Assembly
73	Navigation Receiver Assembly
74	Navigation Receiver Assembly
75	Diode (Front Courtesy Light)
76	Blower Motor Sub-Assembly with Fan
77	A/C Amplifier Assembly

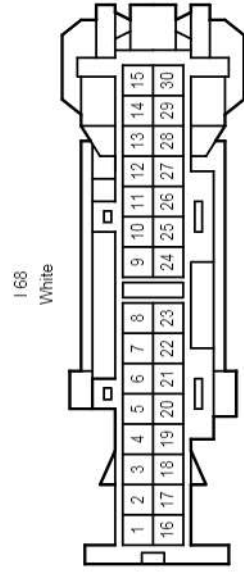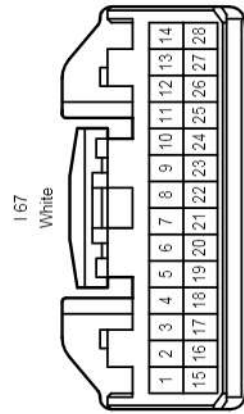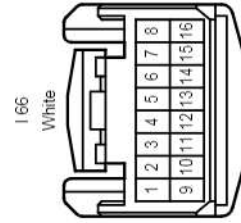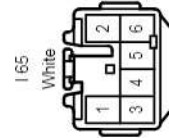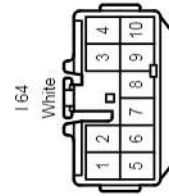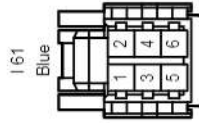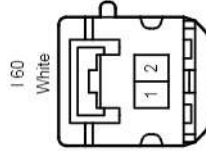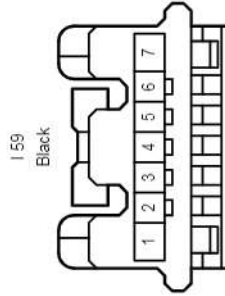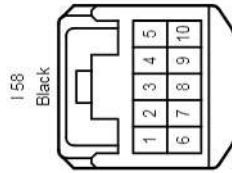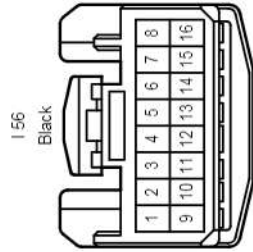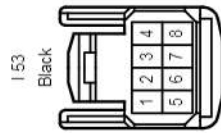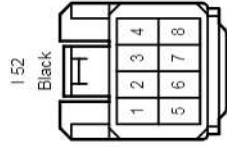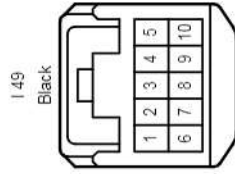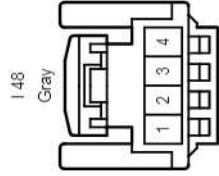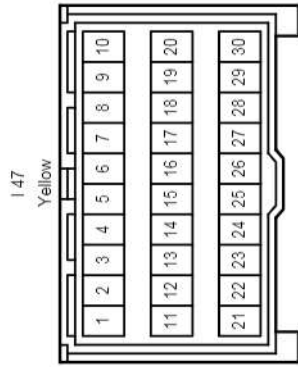                 


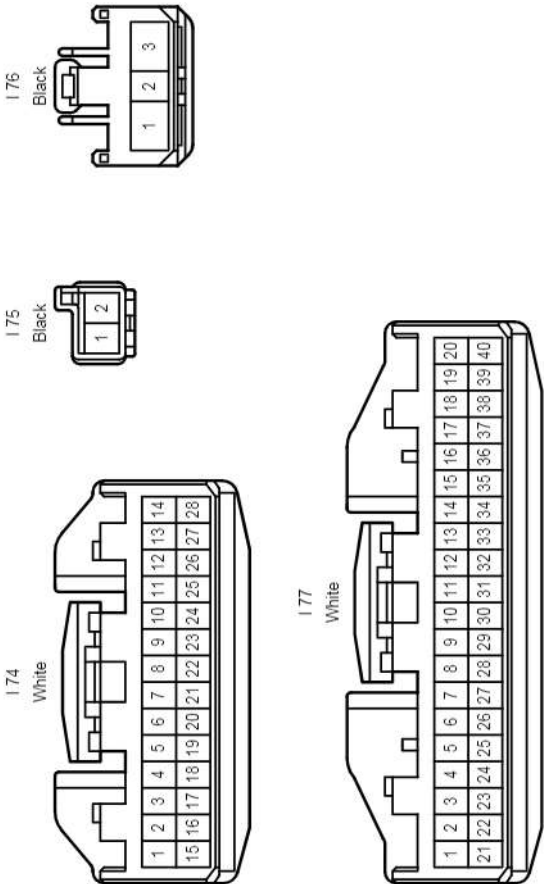 

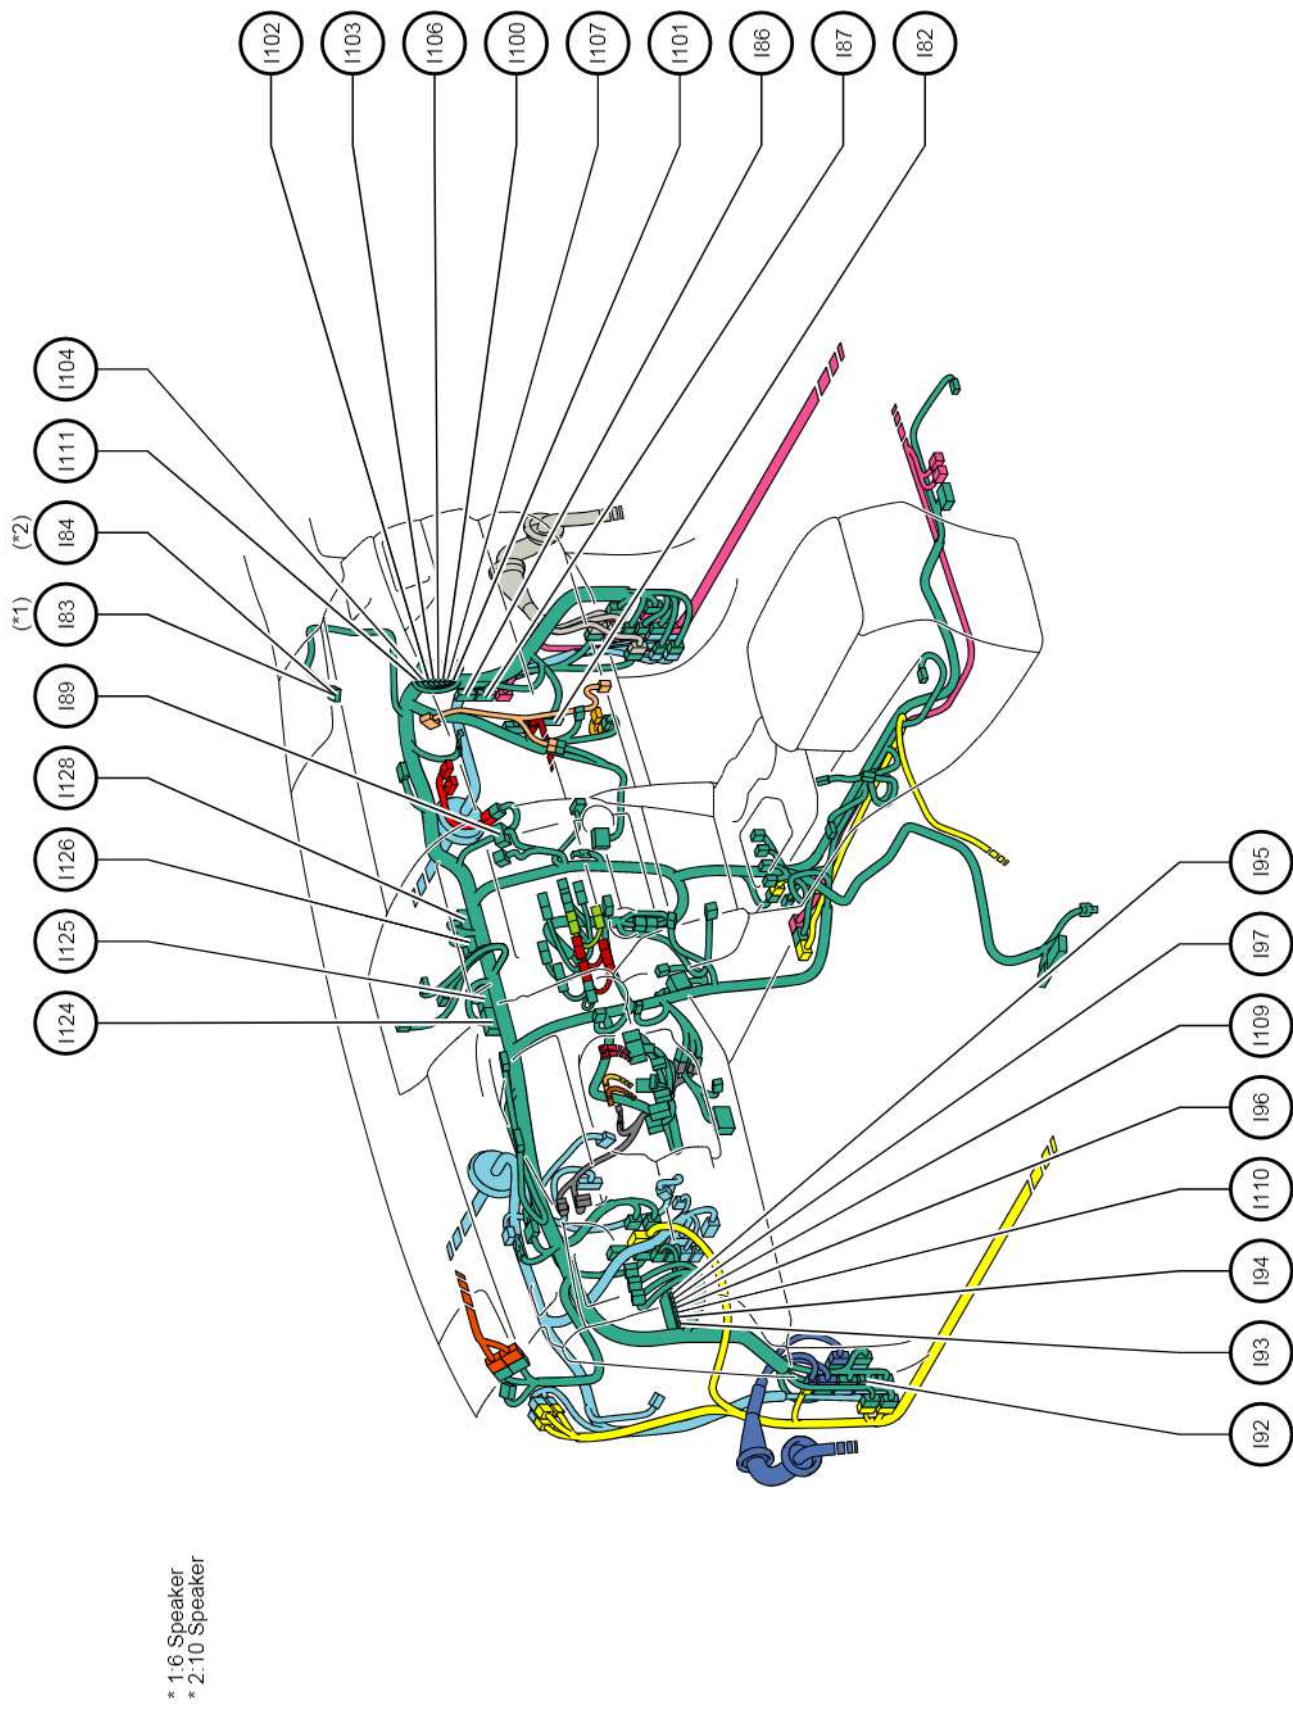 


I 82	Clearance Warning ECU Assembly
I 83	Front No. 2 Speaker Assembly RH
I 84	Front No. 2 Speaker Assembly RH
I 86	Certification ECU
I 87	Certification ECU
I 89	Option Connector (Remote Engine Starter)
I 92	Junction Connector
I 93	Junction Connector
I 94	Junction Connector
I 95	Junction Connector
I 96	Junction Connector
I 97	Junction Connector
I 100	Junction Connector
I 101	Junction Connector
I 102	Junction Connector
I 103	Junction Connector
I 104	Junction Connector
I 106	Junction Connector
I 107	Junction Connector
I 109	Junction Connector
I 110	Junction Connector
I 111	Junction Connector
I 124	Junction Connector
I 125	Junction Connector
I 126	Junction Connector
I 128	Junction Connector

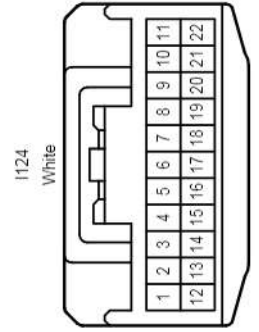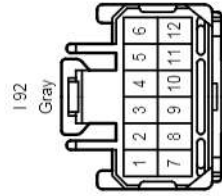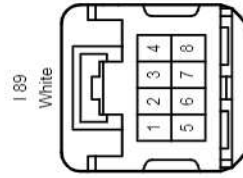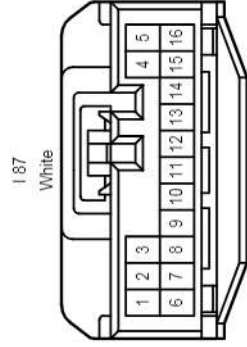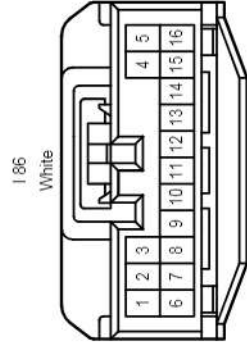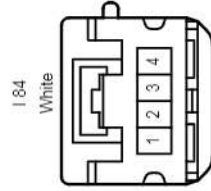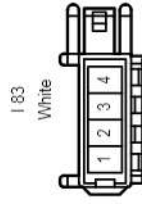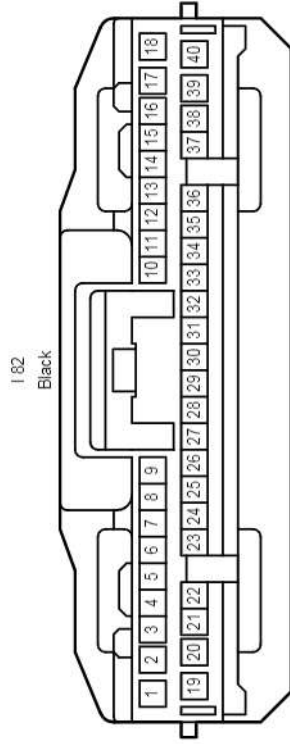                       

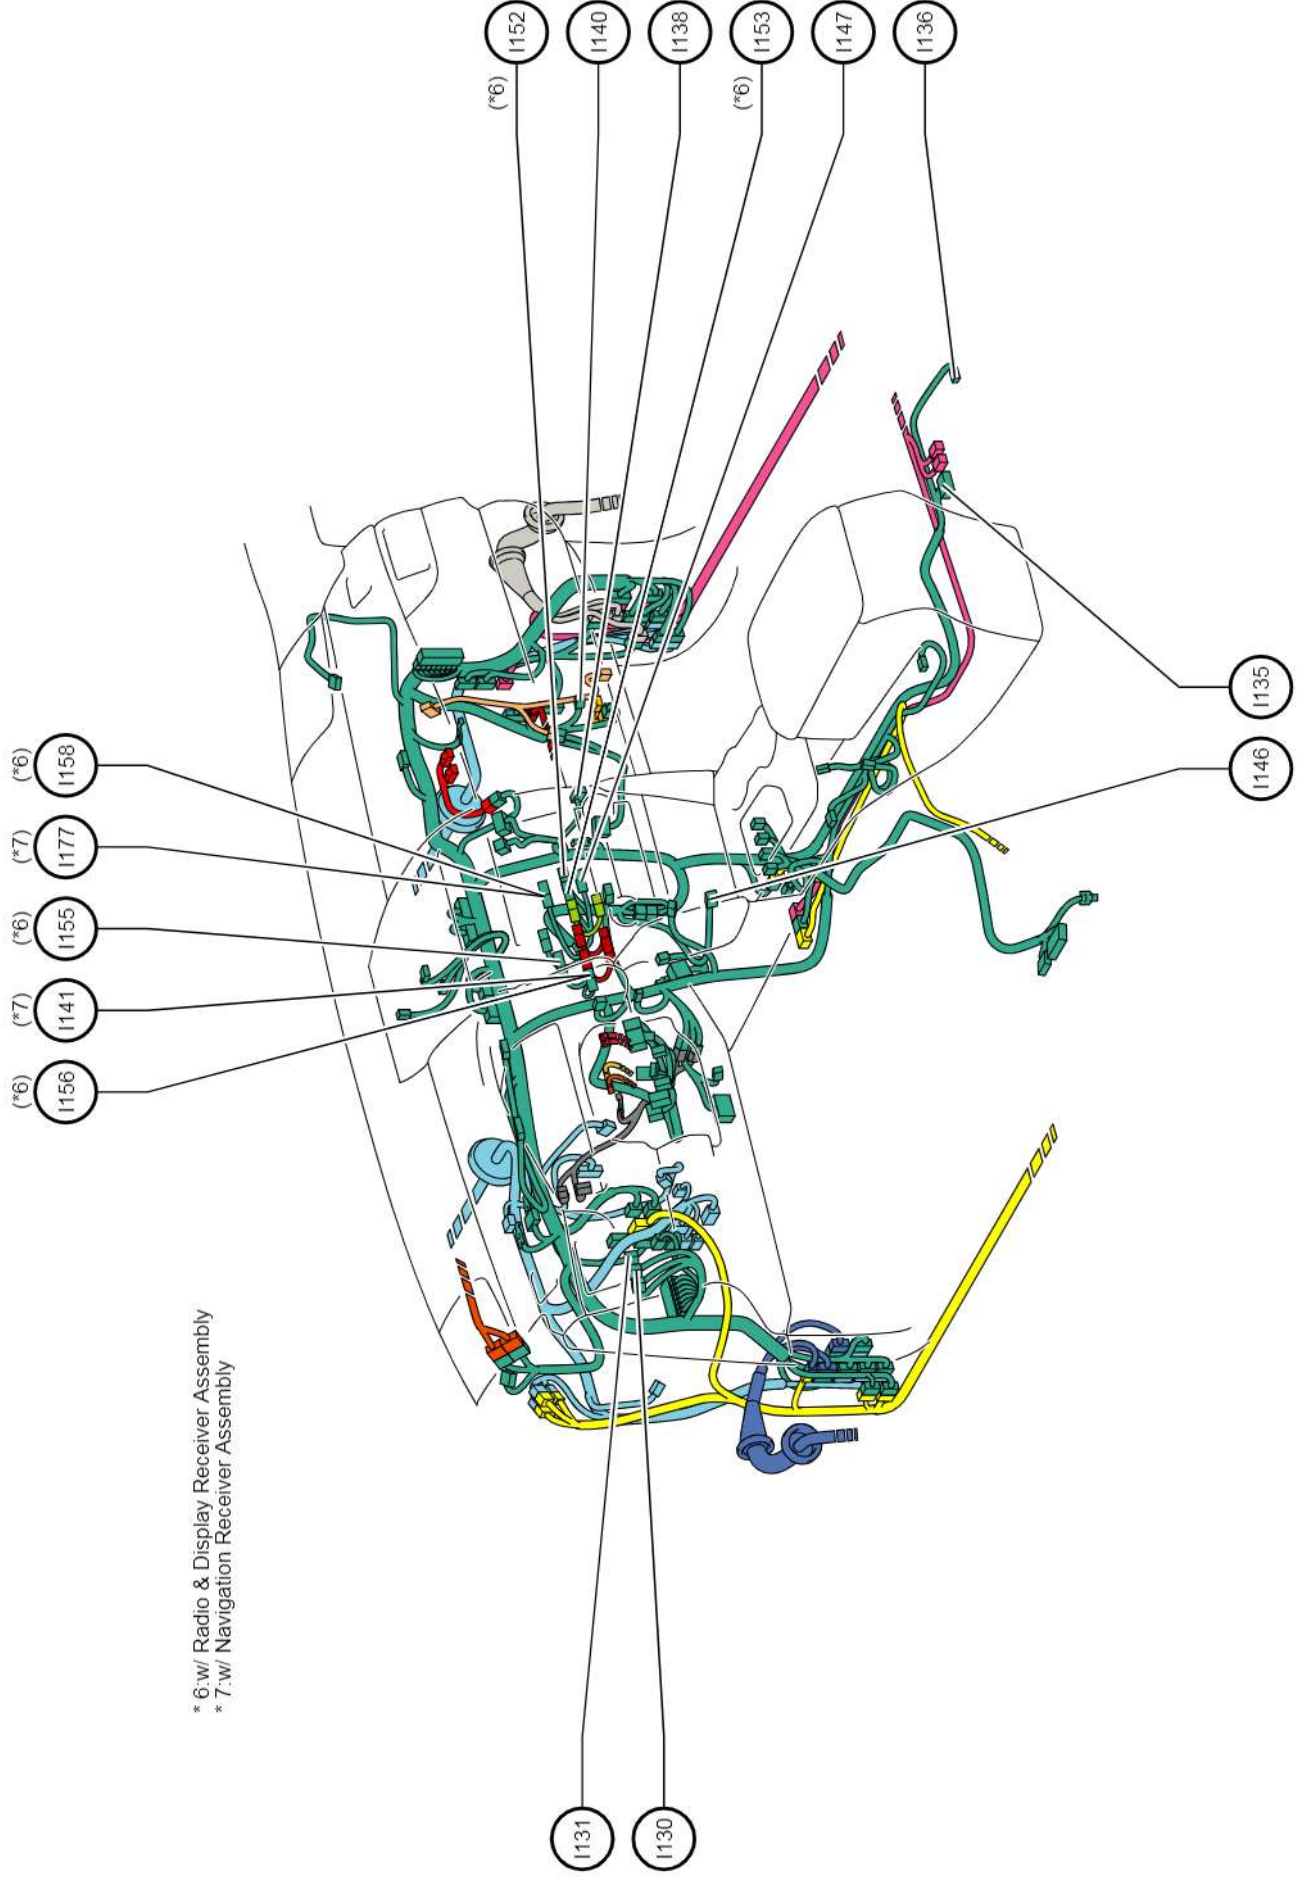 


- I 130 VSC Off Switch
- I 131 Headlight Leveling Switch
- I 135 DCM (Telematics Transceiver)
- I 136 Back-Up Battery (Mayday Battery)
- I 138 Glove Box Light Assembly
- I 140 Lower No. 2 Instrument Panel Airbag Assembly
- I 141 Navigation Receiver Assembly
- I 146 No. 1 Stereo Jack Adapter Assembly
- I 147 Multi-Media Module Receiver Sub-Assembly
- I 152 Radio & Display Receiver Assembly
- I 153 Radio & Display Receiver Assembly
- I 155 Radio & Display Receiver Assembly
- I 156 Radio & Display Receiver Assembly
- I 158 Radio & Display Receiver Assembly
- I 177 Navigation Receiver Assembly

 
I130
Black

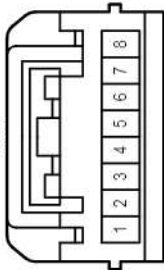


I131
Black

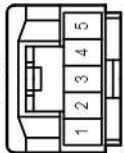 


I135
White

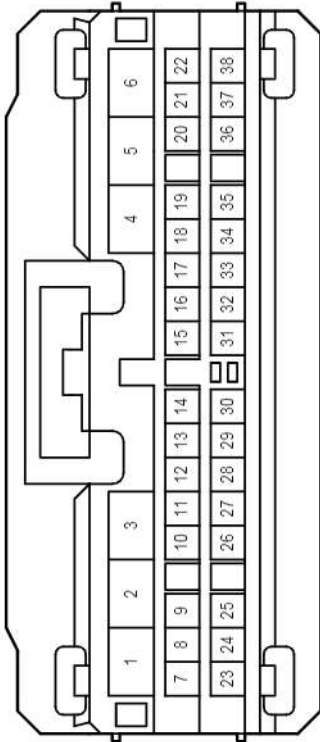 


I136
White

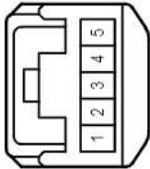 


I138
Black

 


I140
Black

 


I141
Gray

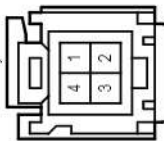 


I146
Black

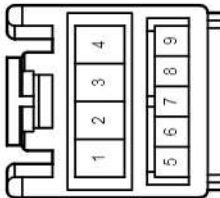 


I147
Gray

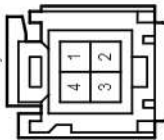 


I152
White

 


I153
White

 

I155
White

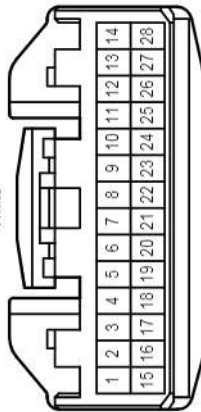 

I156
Gray

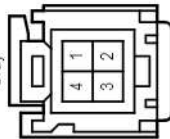 


I158
White



 
I177
White



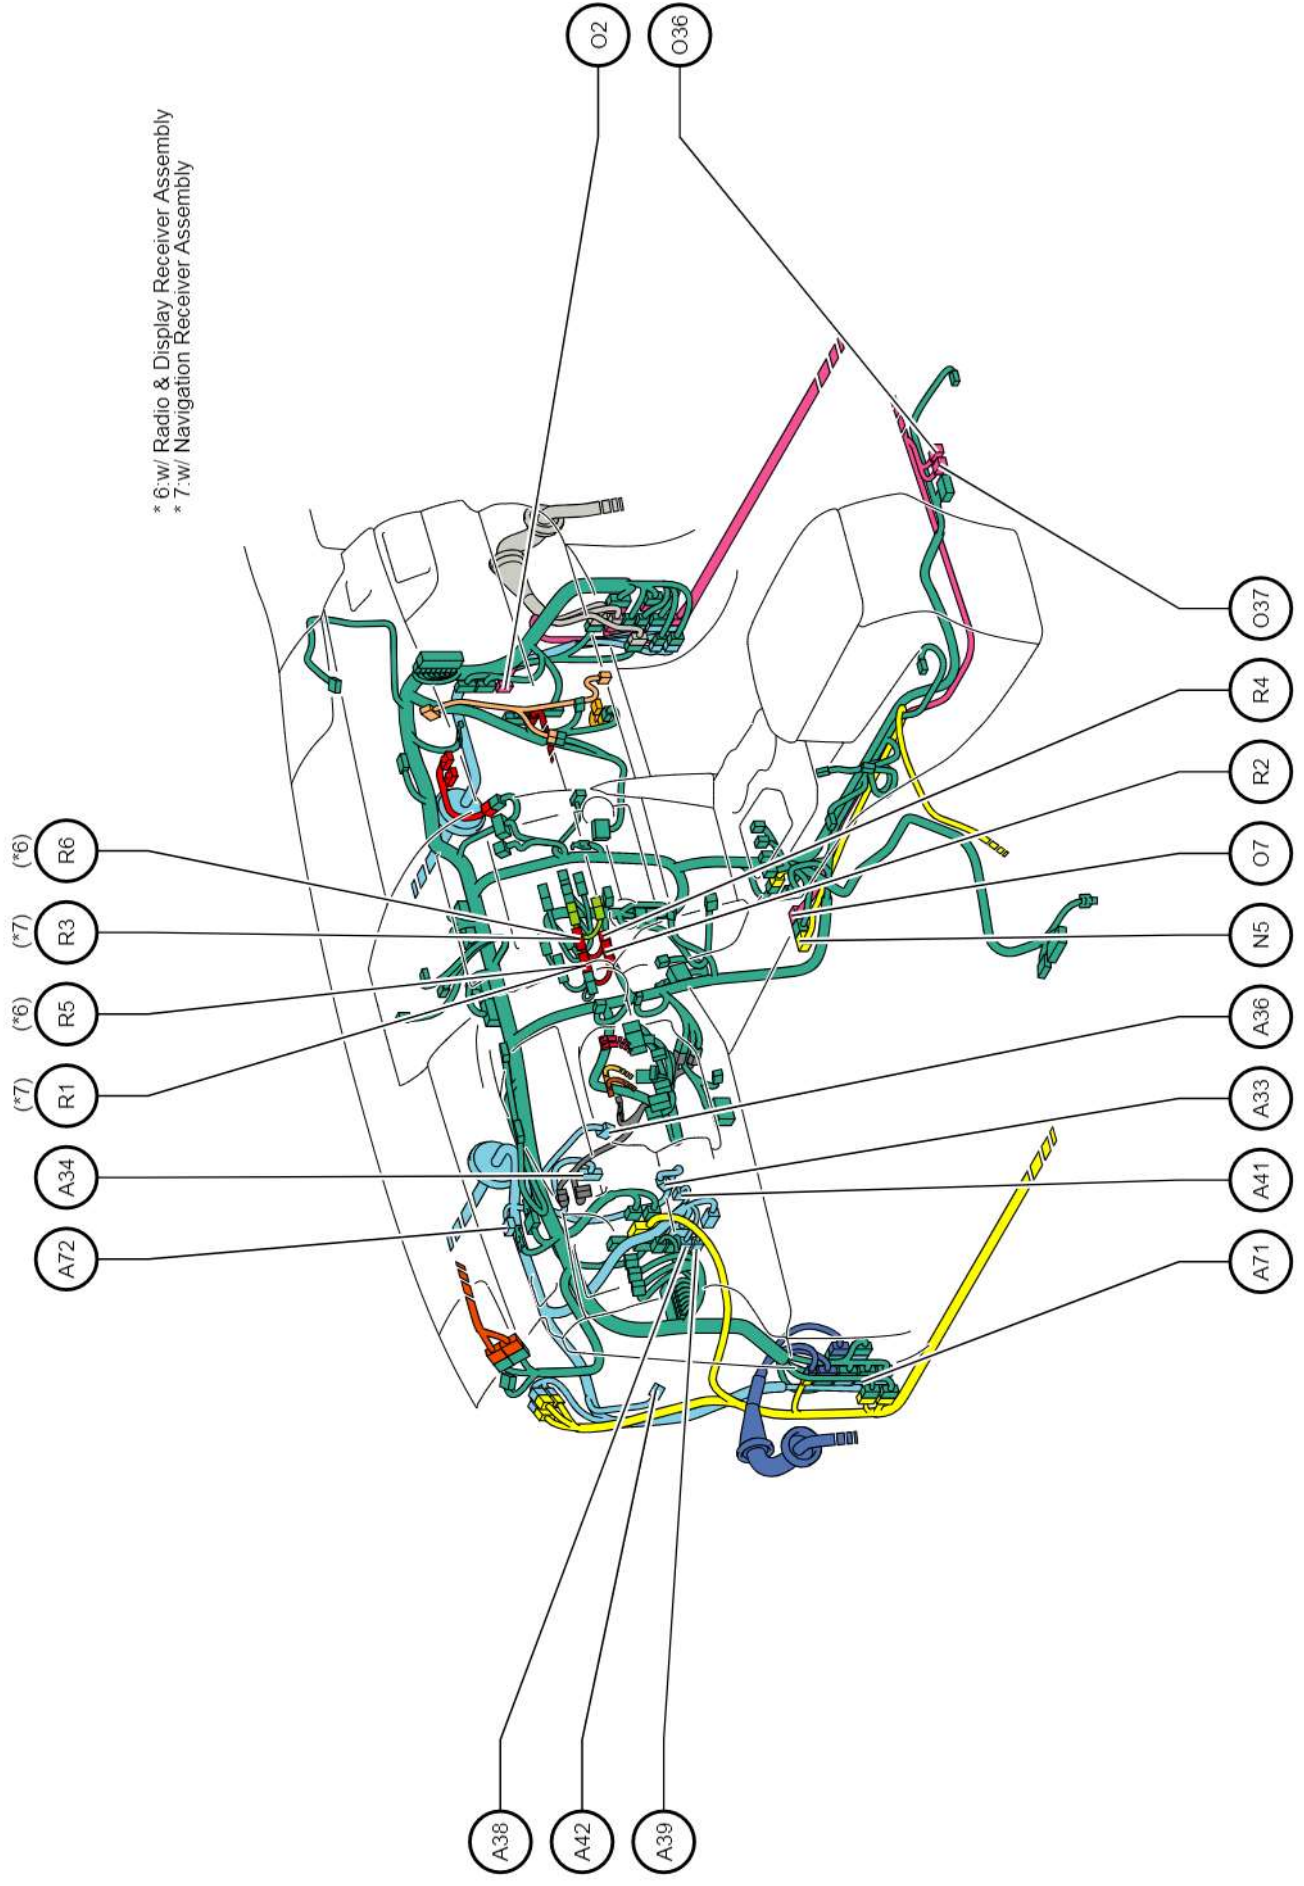


A	33	Stop Light Switch Assembly
A	34	Headlight Leveling ECU Assembly
A	36	Accelerator Pedal Sensor Assembly
A	38	Power Management Control ECU
A	39	Power Management Control ECU
A	41	Brake Pedal Stroke Sensor Assembly
A	42	Parking Brake Switch Assembly
A	71	Junction Connector
A	72	Junction Connector
N	5	Airbag Sensor Assembly
O	2	Certification ECU
O	7	Airbag Sensor Assembly
O	36	DCM (Telematics Transceiver)
O	37	DCM (Telematics Transceiver)
R	1	Navigation Receiver Assembly
R	2	Stereo Component Tuner Assembly
R	3	Navigation Receiver Assembly
R	4	Stereo Component Tuner Assembly
R	5	Radio & Display Receiver Assembly
R	6	Radio & Display Receiver Assembly

 
A 33
White

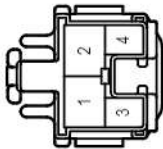


A 34
White

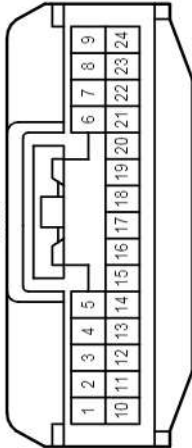 


A 36
Black

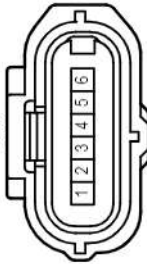 


A 38
Gray

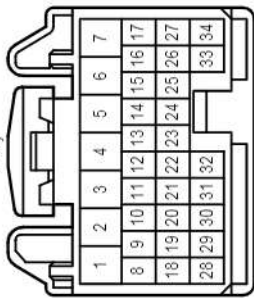 

A 39
Gray

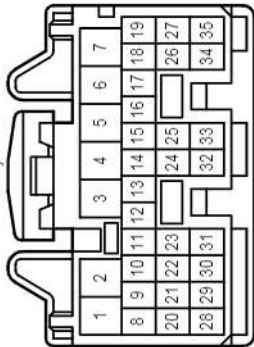 


A 41
Black

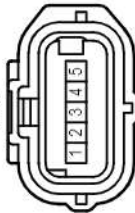 


A 42
Black



 
A 71
Gray

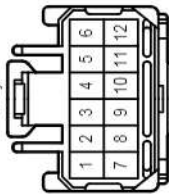


A 72
White

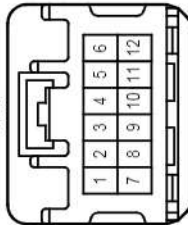 


N 5
Yellow

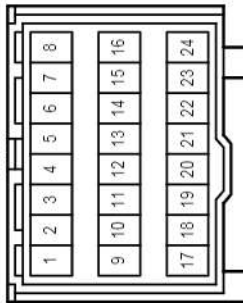 


O 2
White

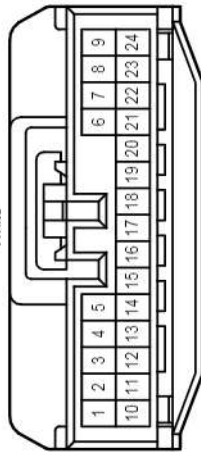 


O 7
Yellow

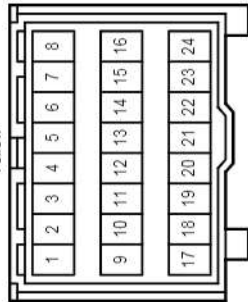 

O 36
Blue

 

O 37
Gray

 

R 1
Brown



R 2
Brown



R 3
White

 


R 4
White



















R 5
Brown







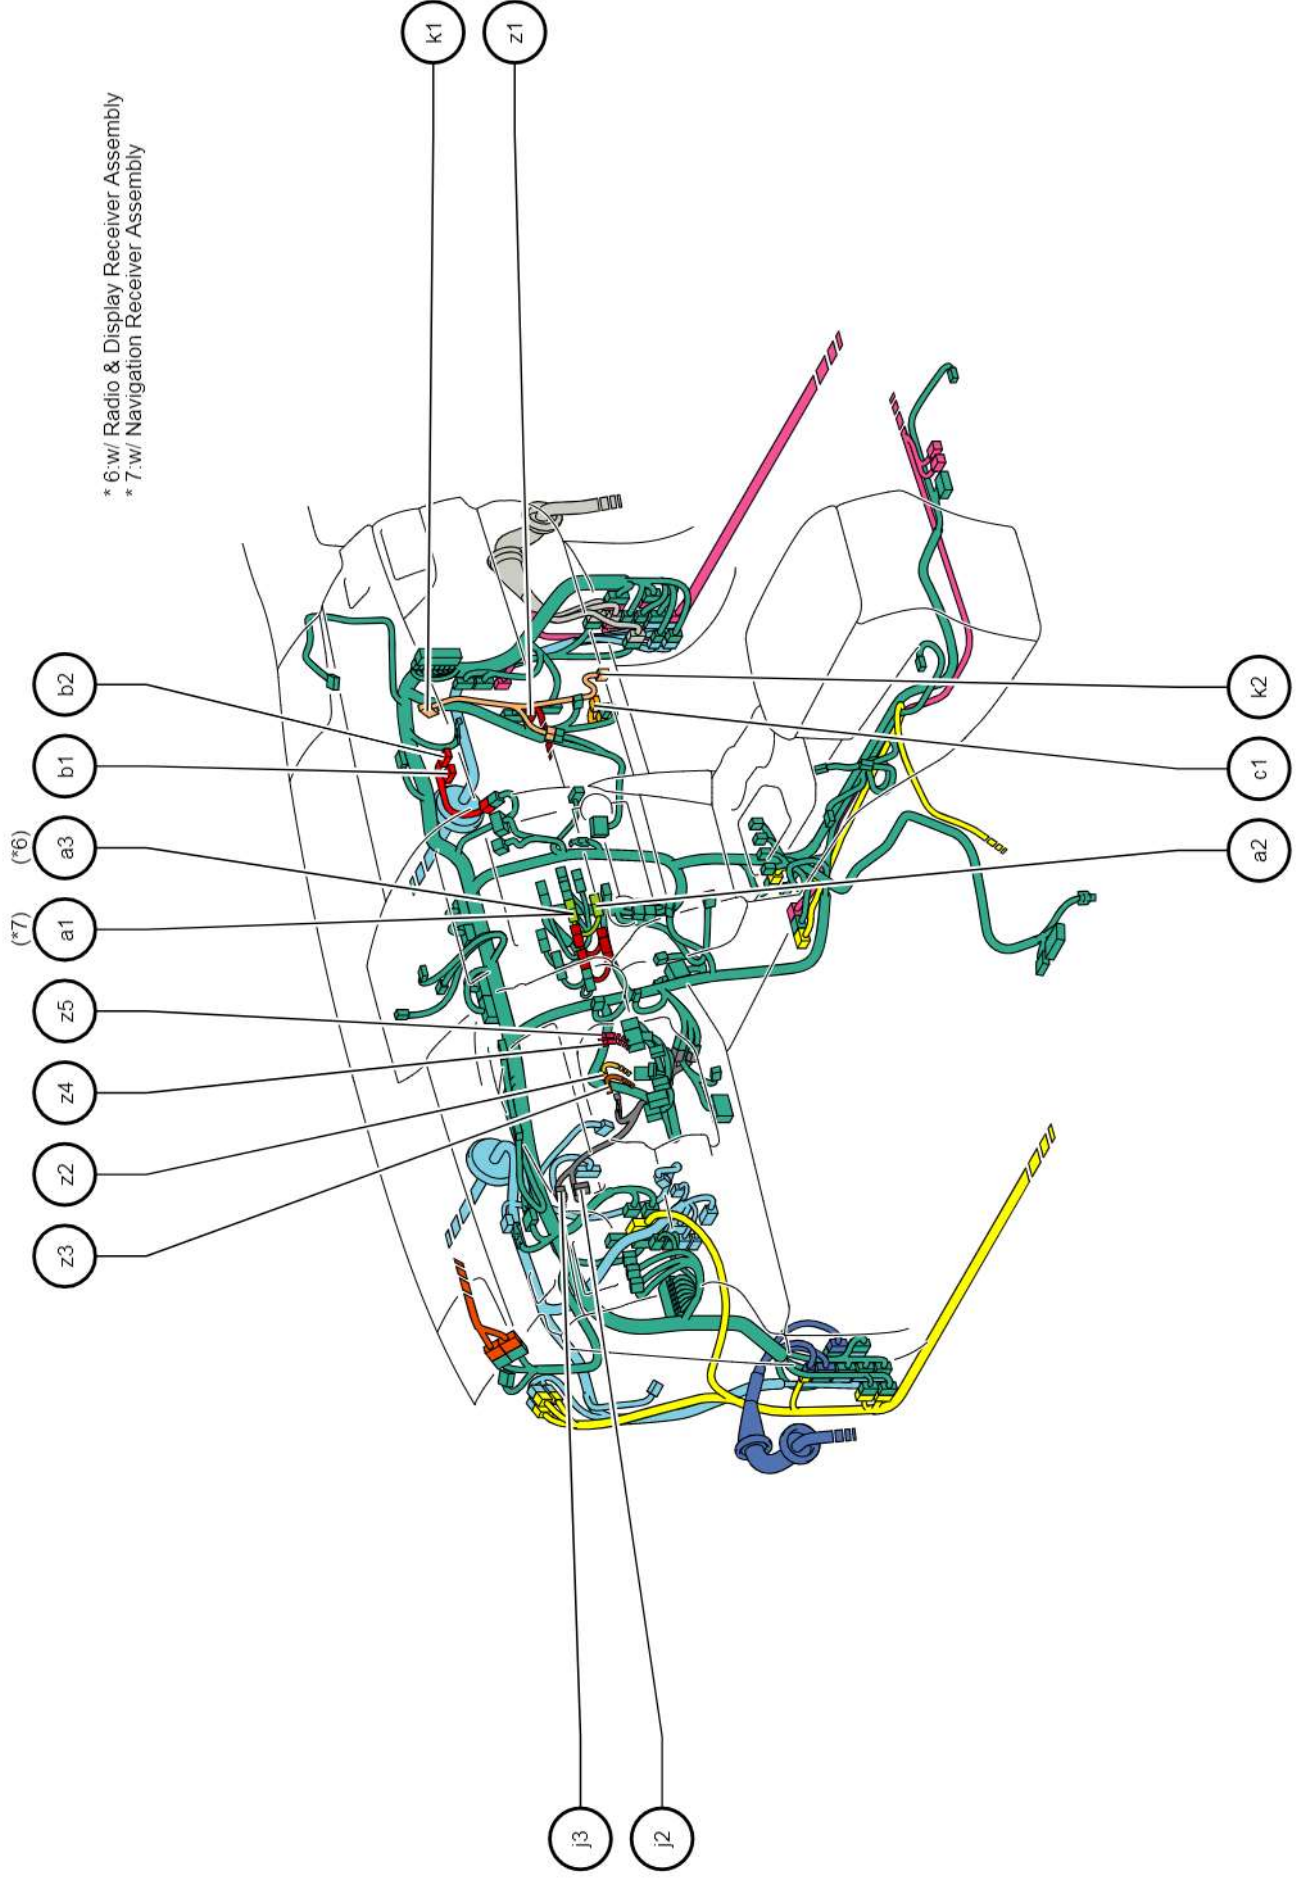


- a 1 Navigation Receiver Assembly
- a 2 Stereo Component Tuner Assembly
- a 3 Radio & Display Receiver Assembly
- b 1 Instrument Panel Passenger Airbag Assembly without Door
- b 2 Instrument Panel Passenger Airbag Assembly without Door
- c 1 Light Cut Relay
- j 2 Power Steering ECU Assembly
- j 3 Power Steering ECU Assembly
- k 1 Glass Breakage Sensor ECU Assembly
- k 2 Glass Breakage Sensor Microphone
- z 1 A/C Amplifier Assembly , A/C Unit (A/C Harness Assembly)
- z 2 Cruise Control Main Switch , Spiral Cable Sub-Assembly
- z 3 Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
- z 4 Spiral Cable Sub-Assembly , Driver Side Squib Circuit (Horn Button Assembly)
- z 5 Spiral Cable Sub-Assembly , Driver Side Squib Circuit (Horn Button Assembly)

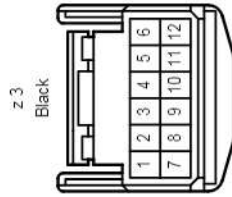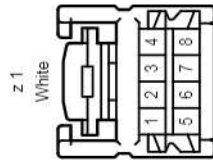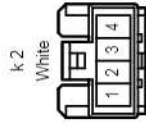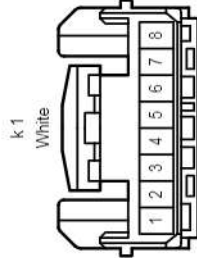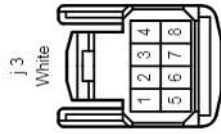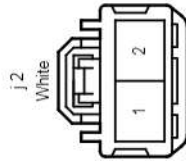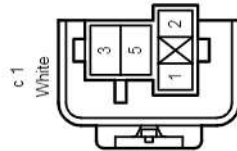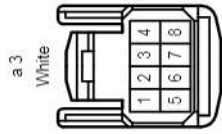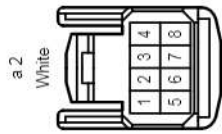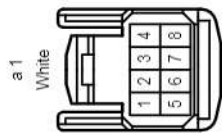               


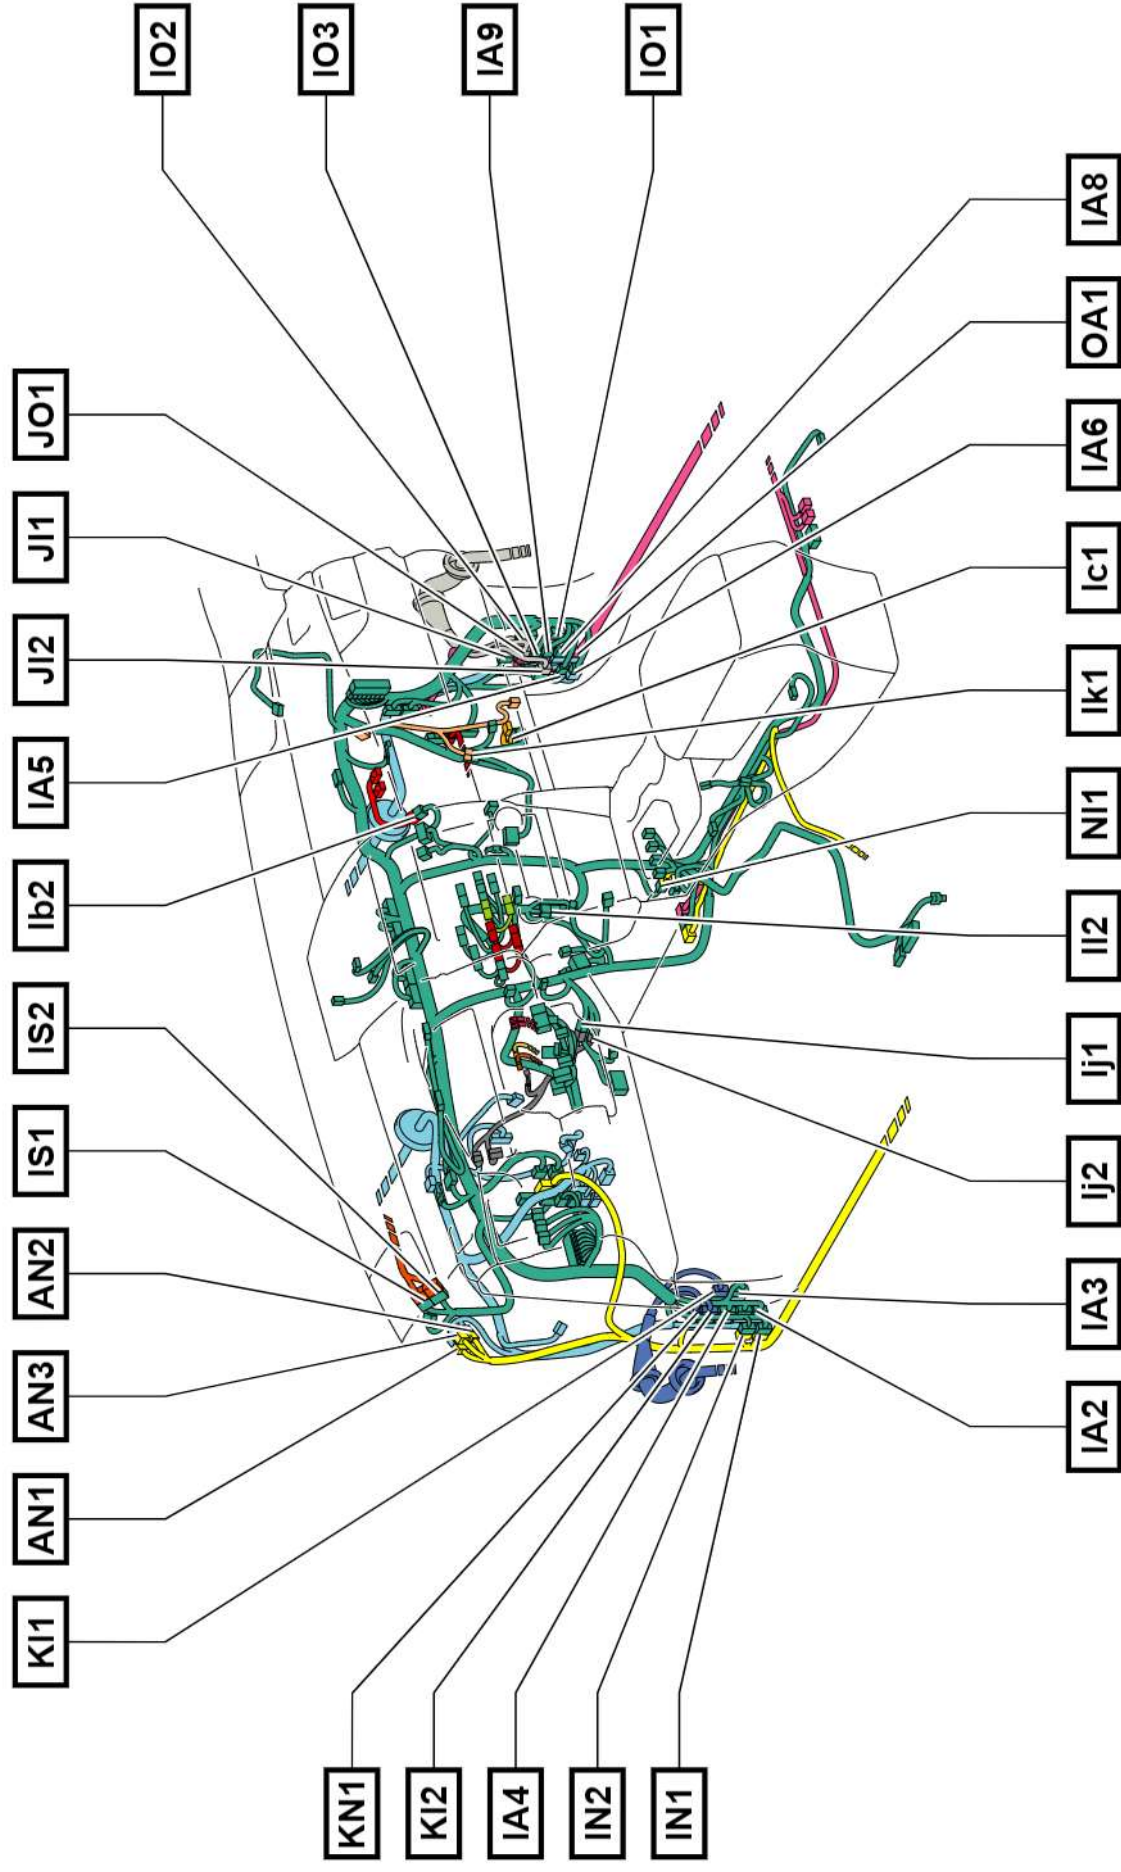 

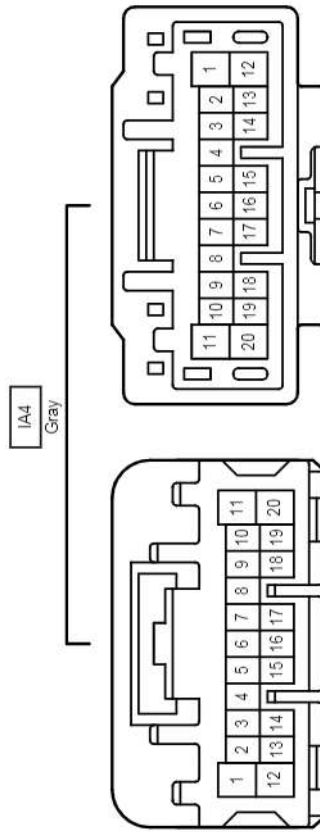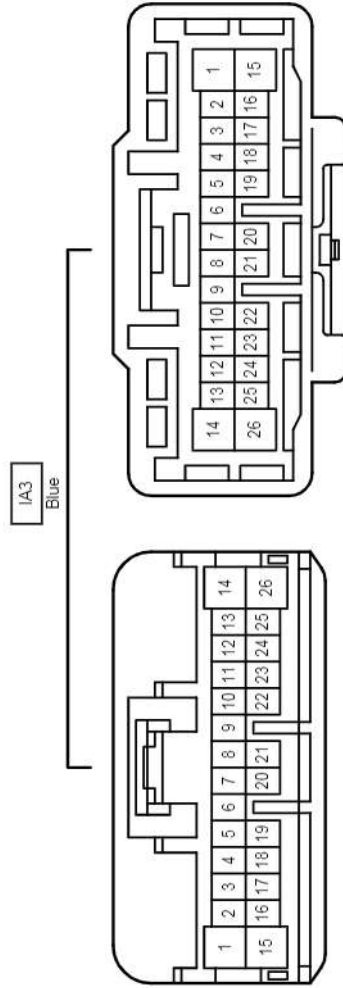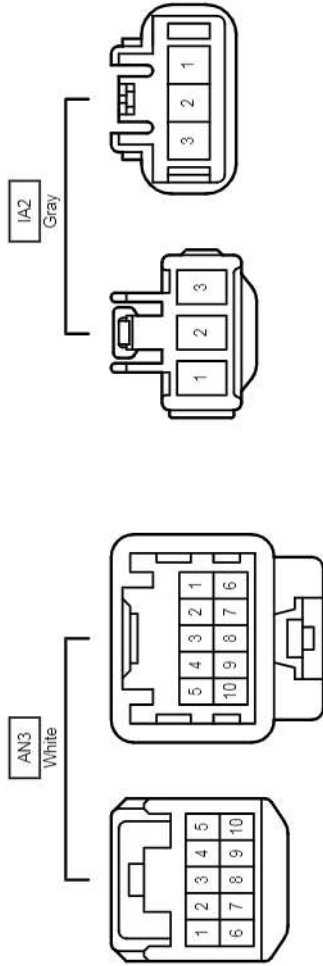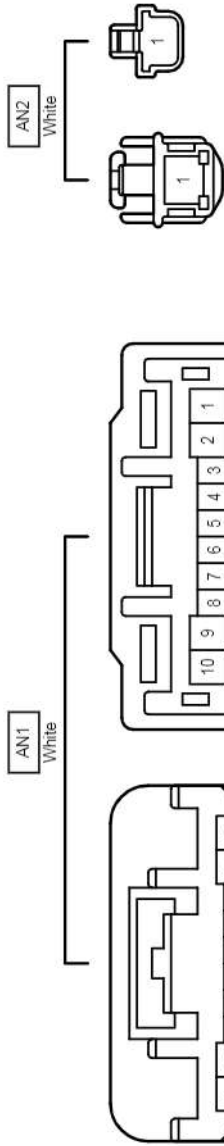    


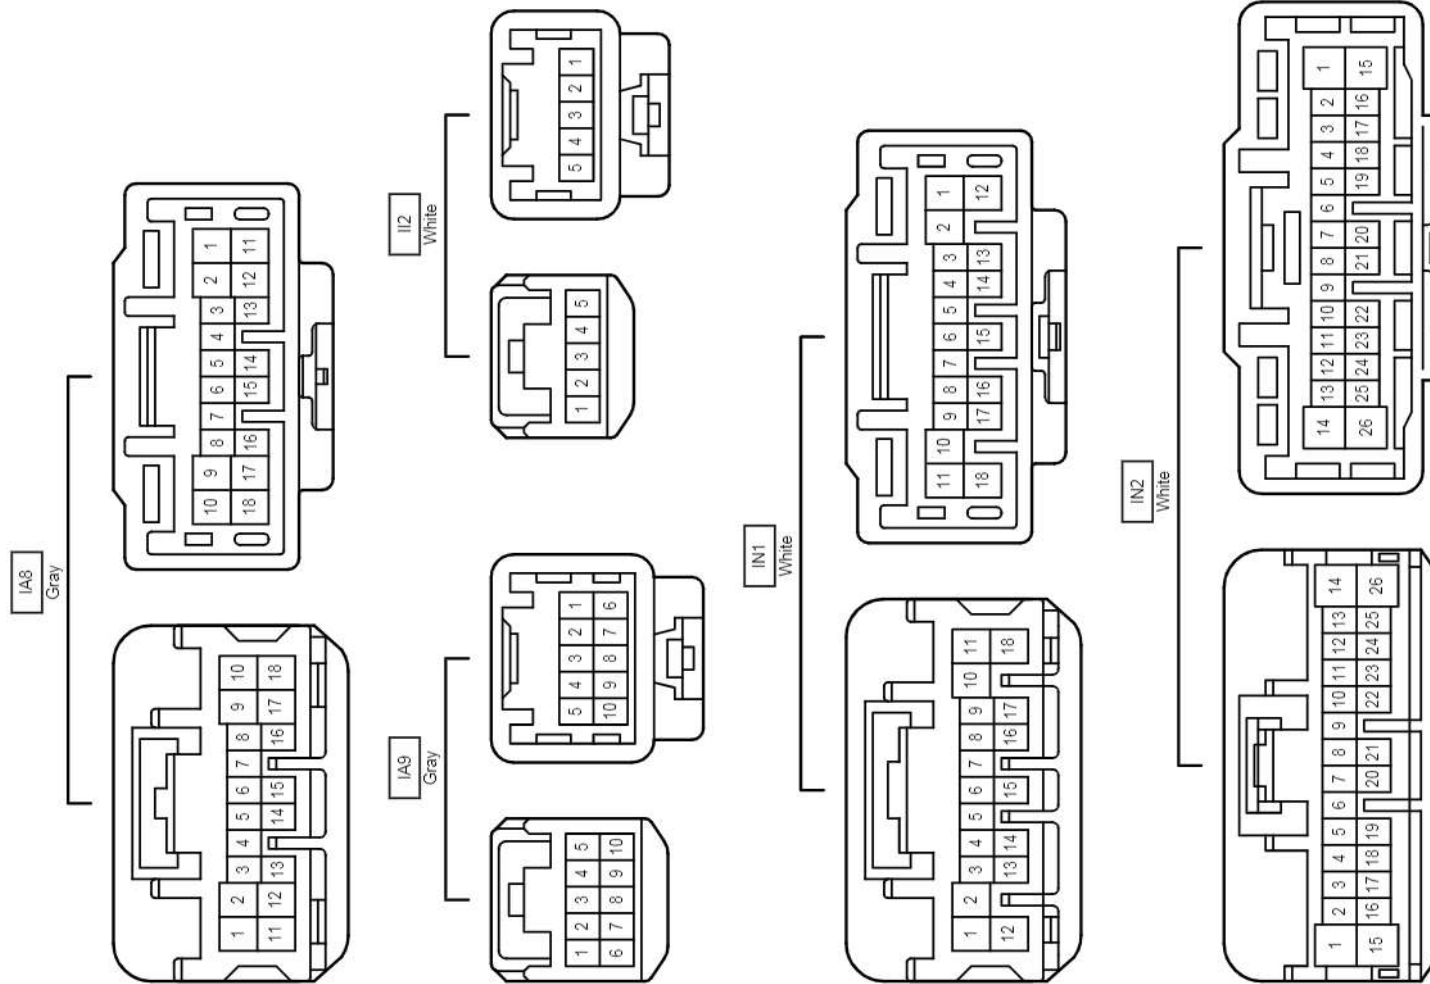 


IO2
White

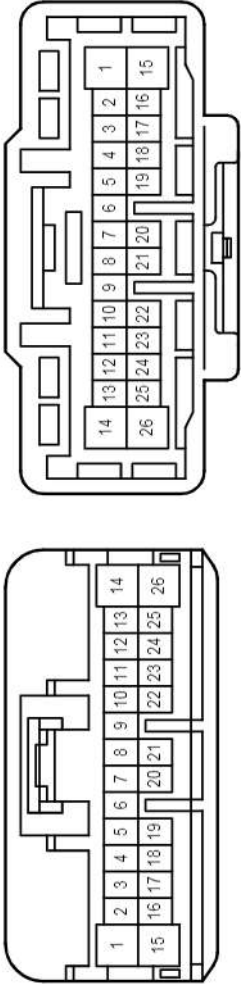 


IO3
Gray

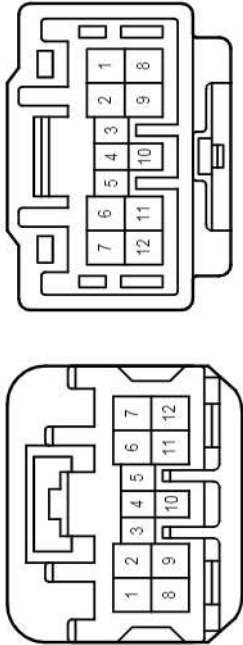 


IS1
White

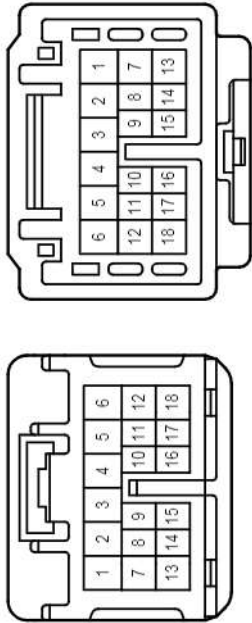 


IS2
White

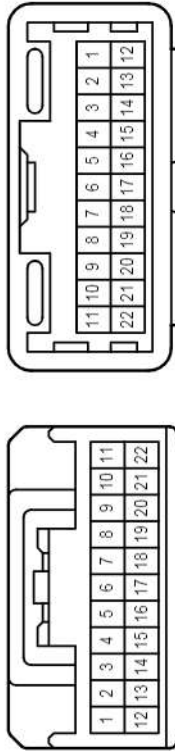 

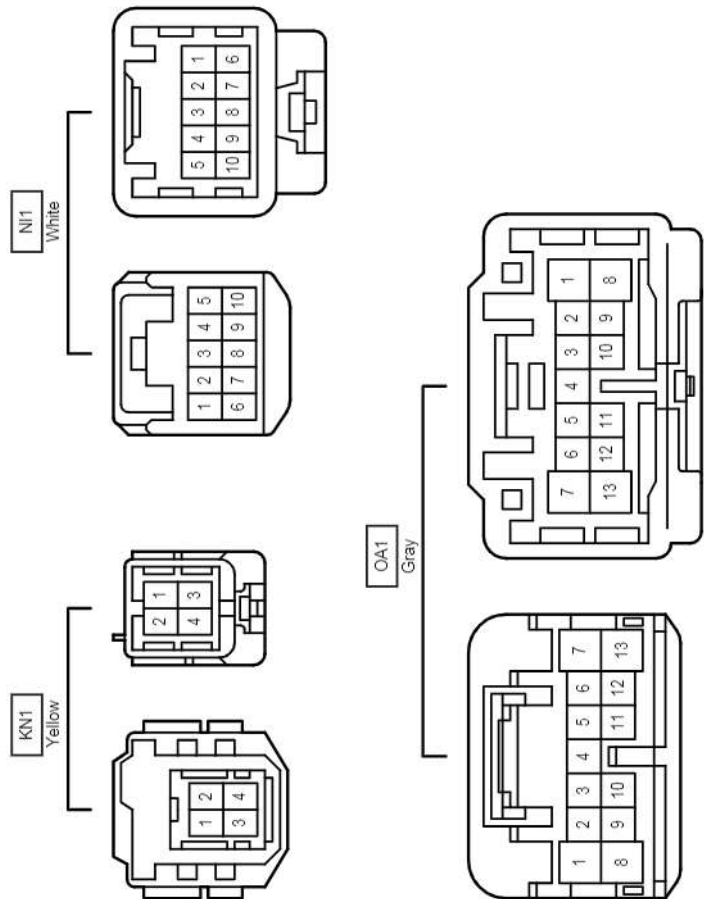 

Position of Parts in Seat

 * 1.w/ Power Seat
* 2.w/o Power Seat

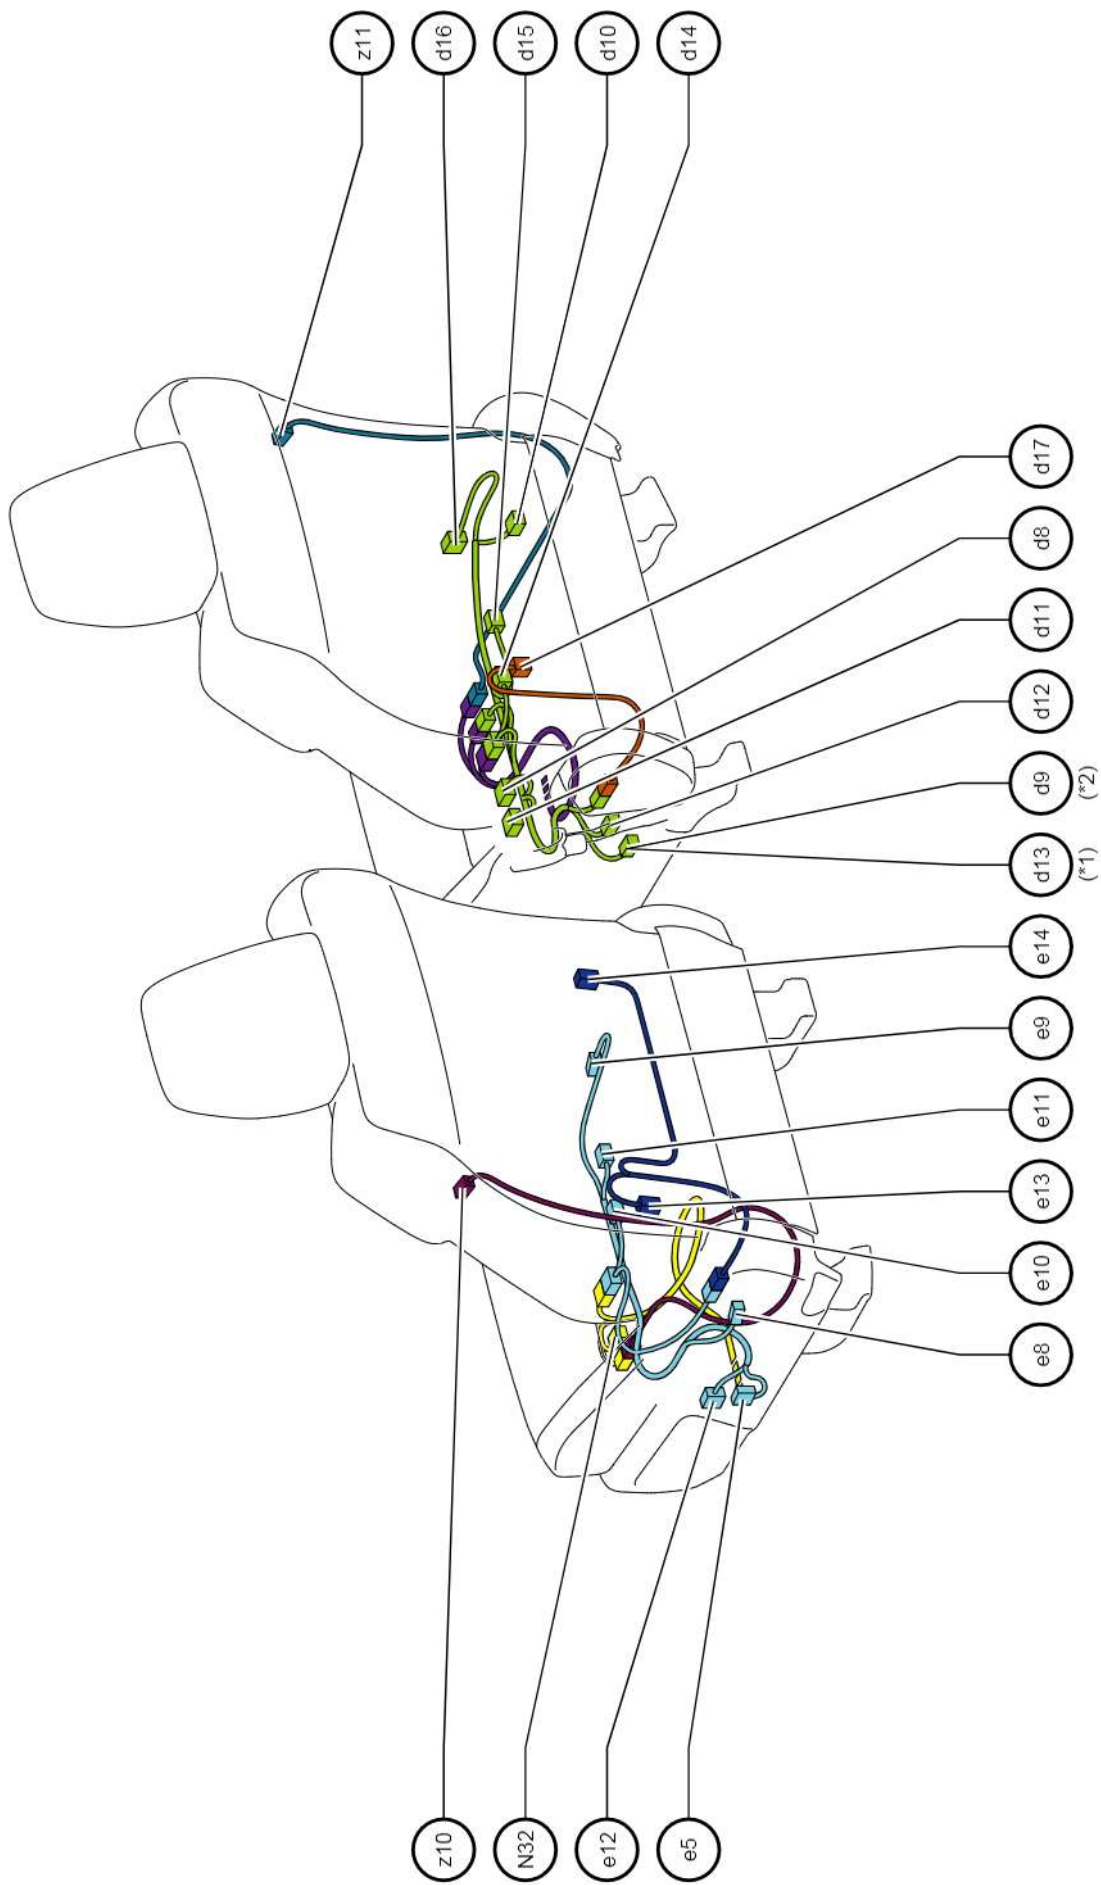

Position of Parts in Seat


N 32	Front Seat Inner Belt Assembly LH
d 8	Occupant Detection ECU
d 9	Front Seat Inner Belt Assembly RH
d 10	Front Out Weight Detector Sensor Sub-Assembly
d 11	Occupant Detection ECU
d 12	Front In Weight Detector Sensor Sub-Assembly
d 13	Front Seat Inner Belt Assembly RH
d 14	Front Seat Cushion Heater Assembly RH
d 15	Front Power Seat Slide Position Motor RH (Front Seat Frame Assembly with Adjuster RH)
d 16	Front Power Seat Switch RH
d 17	Front Power Seat Reclining Position Motor RH (Front Seat Back Frame Sub-Assembly RH)
e 5	Front Power Seat Lumbar Switch LH
e 8	Front Power Seat Lift Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
e 9	Front Power Seat Tilt Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
e 10	Front Seat Cushion Heater Assembly LH
e 11	Front Power Seat Slide Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
e 12	Front Power Seat Switch LH
e 13	Front Power Seat Reclining Position Motor LH (Front Seat Back Frame Sub-Assembly LH)
e 14	Front Power Seat Lumbar Support Motor LH (Lumbar Support Adjuster Assembly LH)
z 10	Front Seat Airbag Assembly LH
z 11	Front Seat Airbag Assembly RH

Position of Parts in Seat


N 32
White



 
d 8
Black

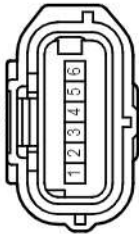


d 9
White

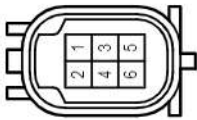 


d 10
Black

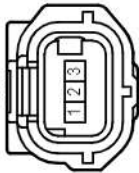 


d 11
Black

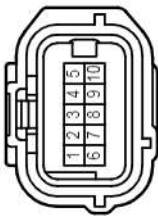 


d 12
Gray

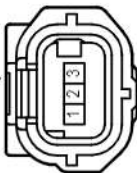 

d 13
Gray

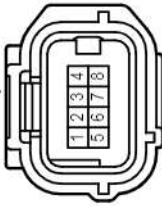 


d 14
White

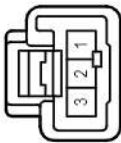 


d 15
Black



 
d 16
Black




d 17
Gray

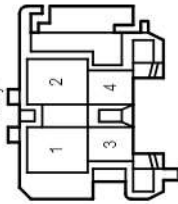 


e 5
White

 


e 8
Gray

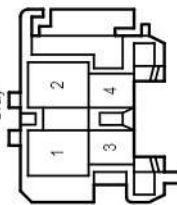 


e 9
Black

 


e 10
White

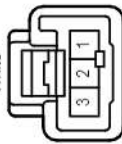 


e 11
Black

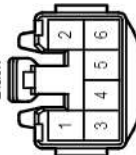 


e 12
Black

 


e 13
Gray

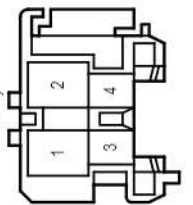 


e 14
Black

 


z 10
White

 

z 11
White

 

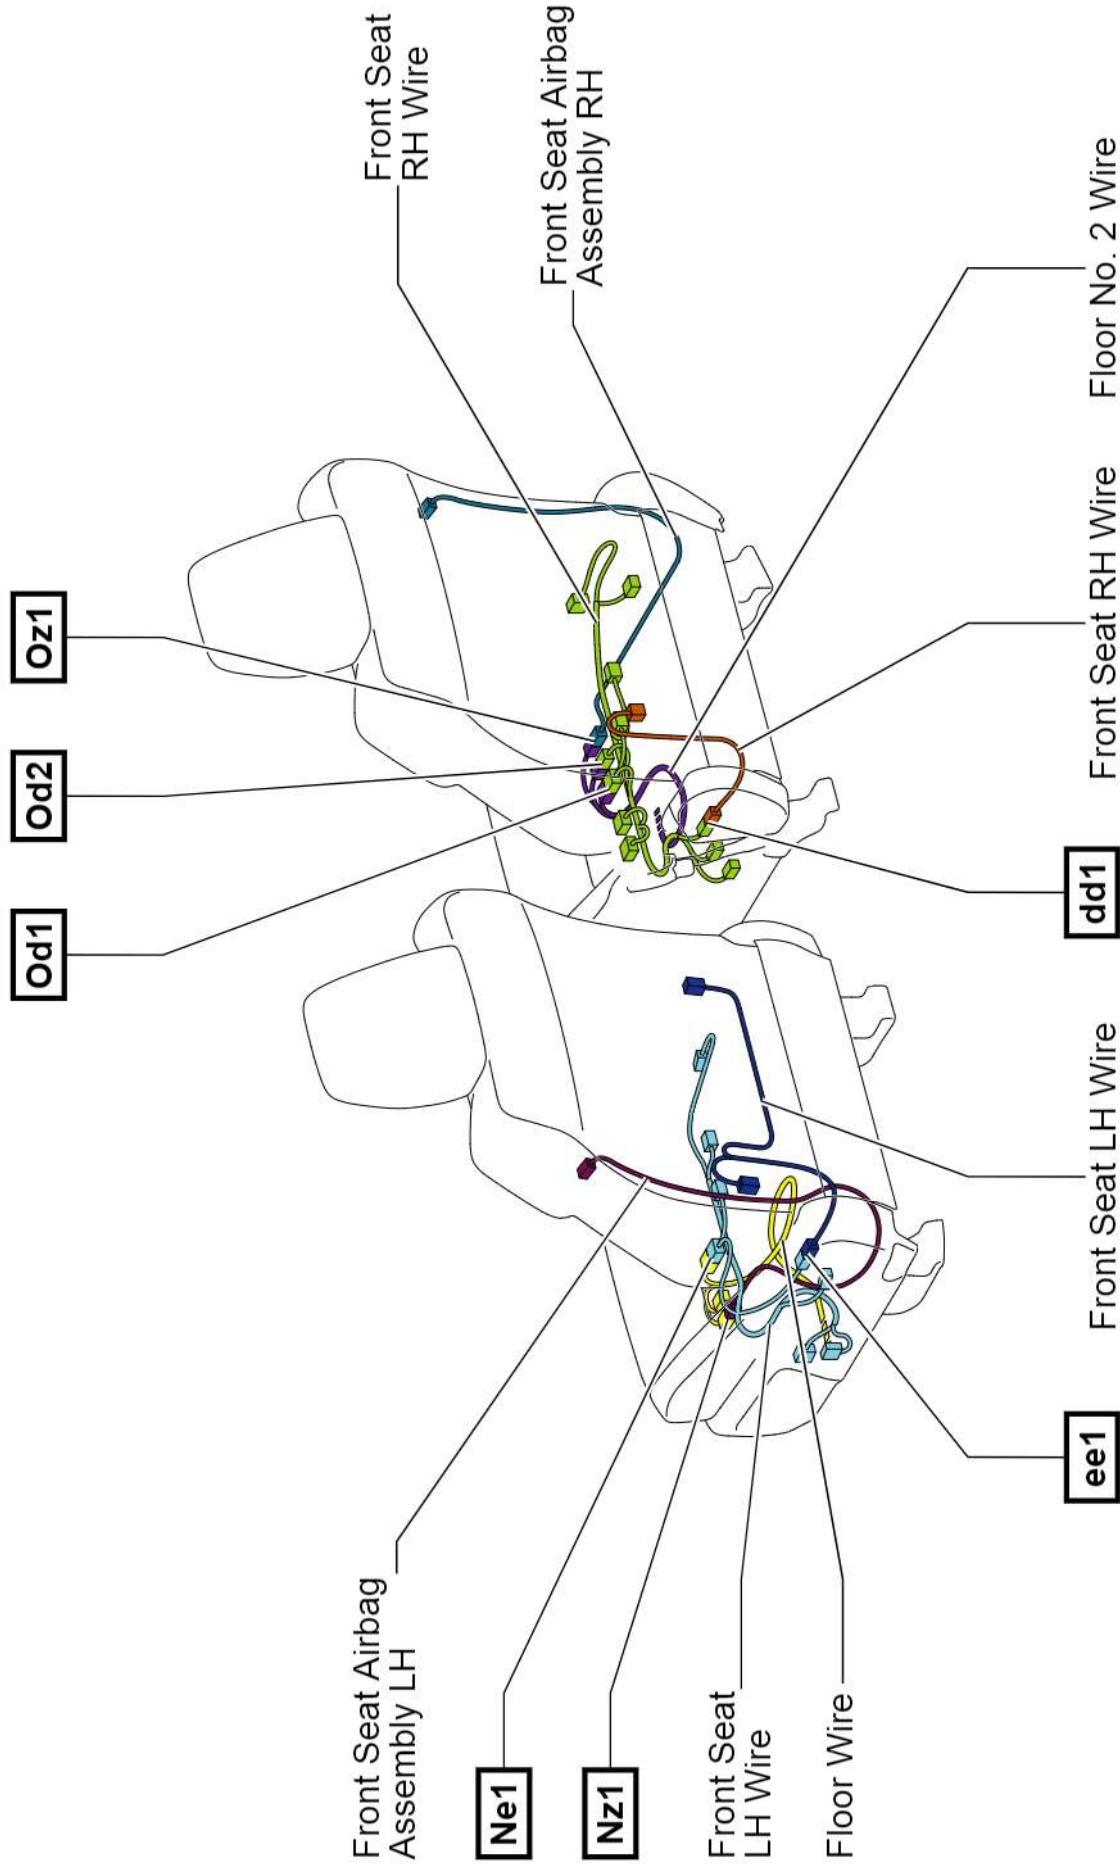 

Wire and Wire in Seat

