



Last Modified: 5-10-2010	6.4 K	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM00000460A000X
Title: INTERIOR PANELS / TRIM: FRONT CONSOLE BOX (for 1GR-FE): COMPONENTS (2010 4Runner)		

COMPONENTS

ILLUSTRATION

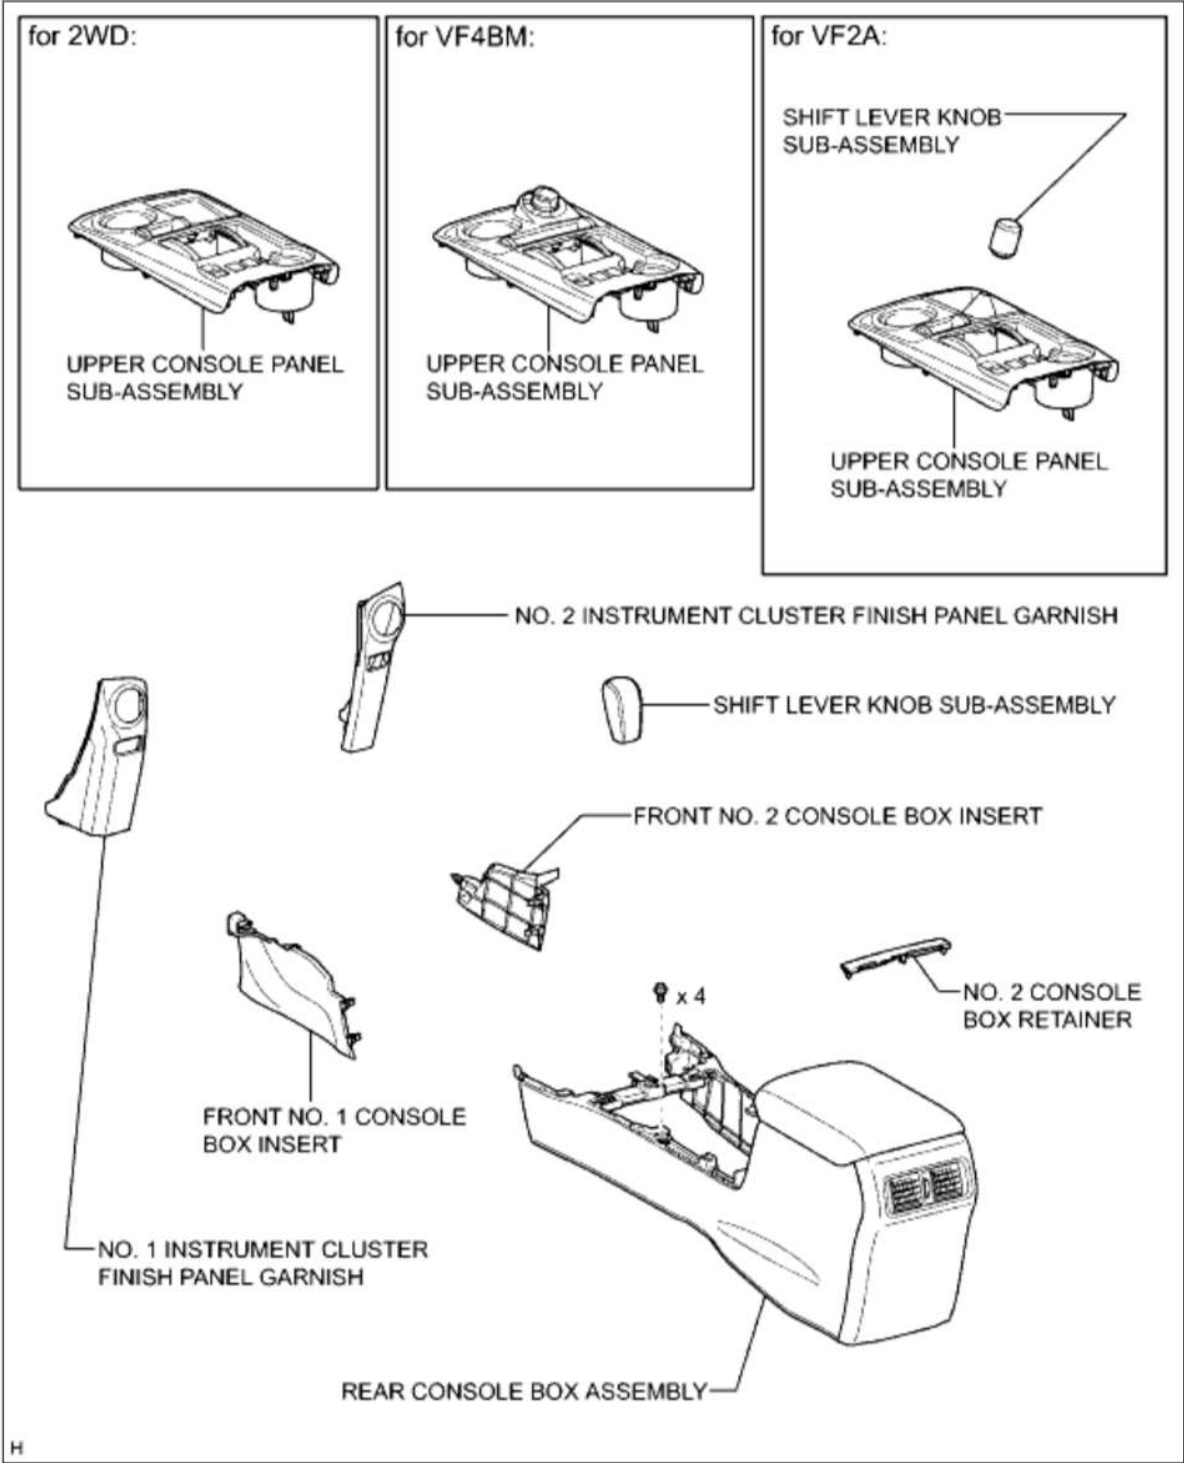


ILLUSTRATION

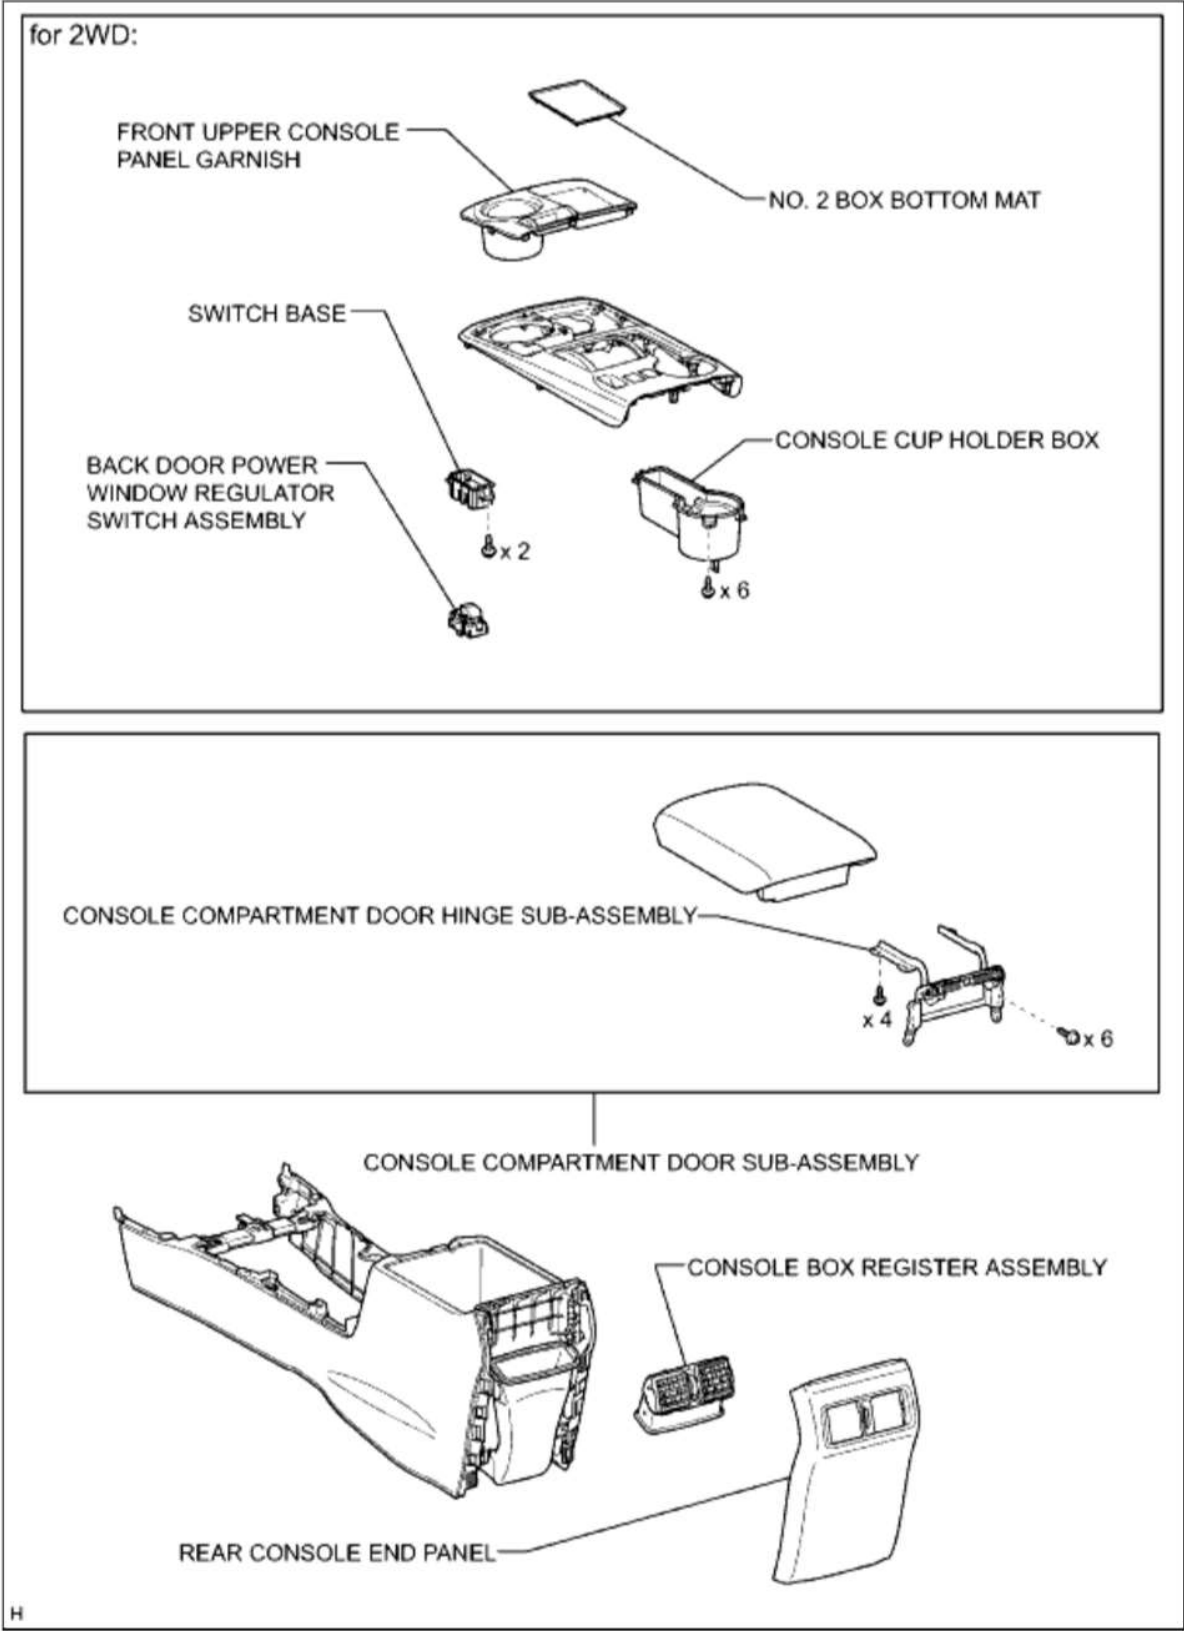


ILLUSTRATION

for VF2A:

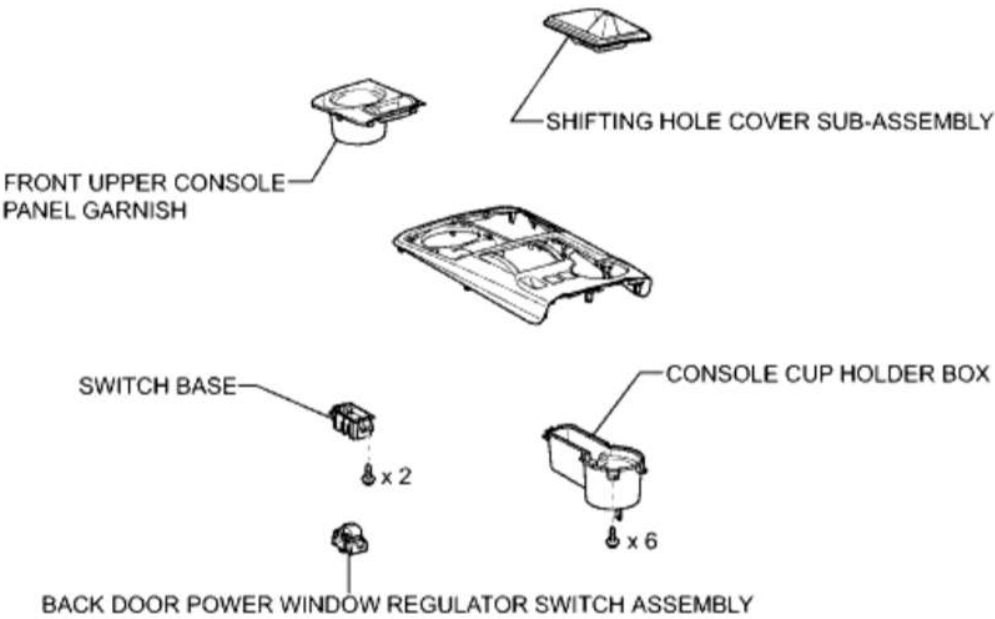

for VF4BM:

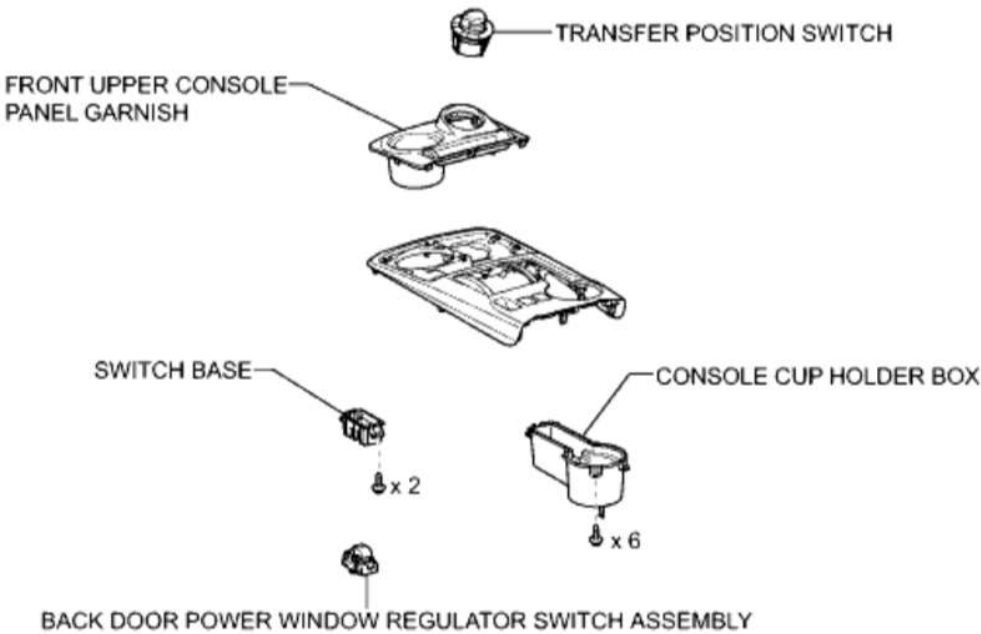


H

Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM00000460B000X
Title: INTERIOR PANELS / TRIM: FRONT CONSOLE BOX (for 1GR-FE): REMOVAL (2010 4Runner)		

REMOVAL

1. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

- (a) Open the instrument cluster finish panel lid.
- (b) Put protective tape around the No. 1 instrument cluster finish panel garnish.
- (c) Grip the No. 1 instrument cluster finish panel garnish and pull it diagonally upward toward the rear to detach the 5 clips and remove the No. 1 instrument cluster finish panel garnish.

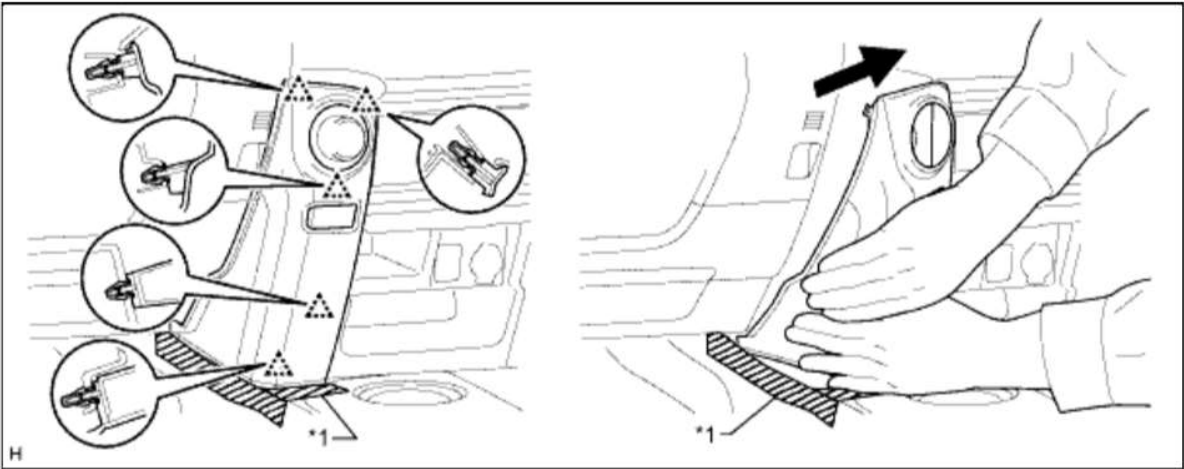


Text in Illustration

*1	Protective Tape	-	-
----	-----------------	---	---

2. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH


HINT:

Use the same procedure described for the No. 1 instrument cluster finish panel garnish.

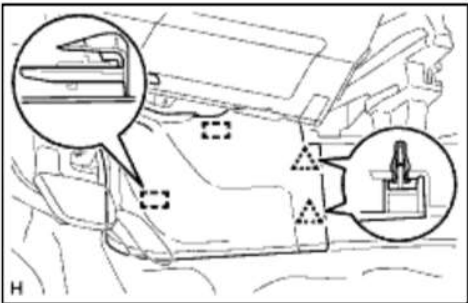


3. REMOVE FRONT NO. 1 CONSOLE BOX INSERT

- (a) Detach the 2 clips and 2 guides and remove the front No. 1 console box insert.

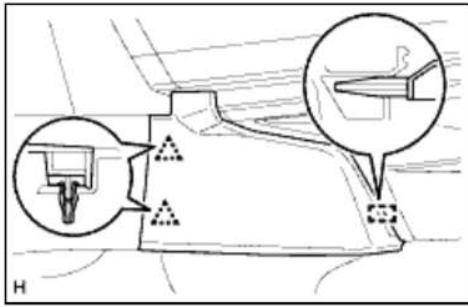


4. REMOVE FRONT NO. 2 CONSOLE BOX INSERT

- (a) Detach the 2 clips and guide and remove the front No. 2 console box insert.

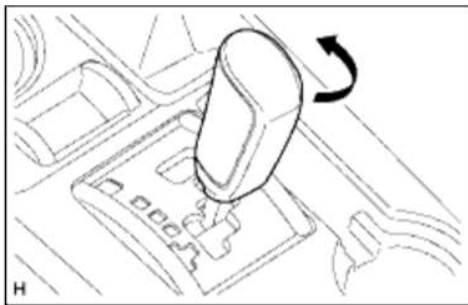

5. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY


- (a) Twist the shift lever knob in the direction indicated by the arrow and remove it.

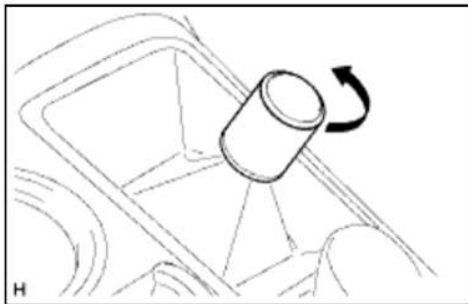

6. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (for VF2A)

- (a) Twist the shift lever knob in the direction indicated by the arrow and remove it.

7. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY

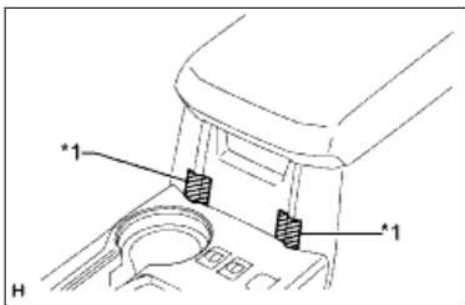


- (a) Put protective tape around the upper console panel.

Text in Illustration


*1	Protective Tape
----	-----------------

- (b) Using a moulding remover, detach the 10 clips.
- (c) Disconnect each connector and remove the upper console panel.

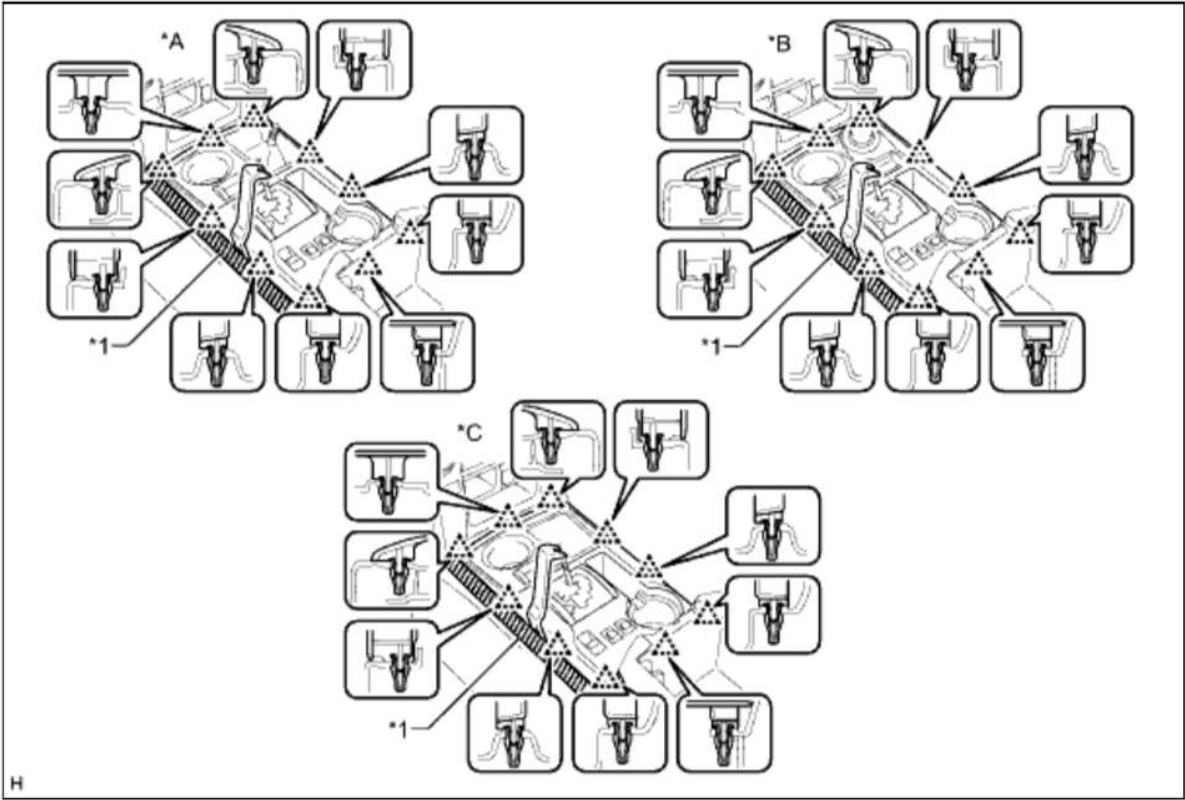

Text in Illustration

*A	for VF2A	*B	for VF4BM
*C	for 2WD	-	-
*1	Protective Tape	-	-

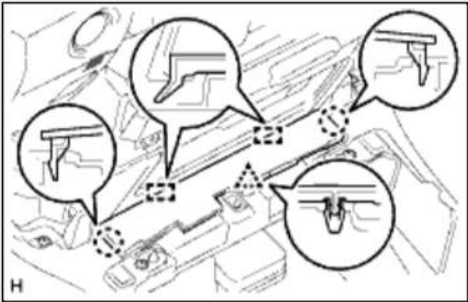

8. REMOVE NO. 2 CONSOLE BOX RETAINER

- (a) Detach the clips, 2 claws and 2 guides and remove the No. 2 console box retainer.



9. REMOVE REAR CONSOLE BOX ASSEMBLY


- (a) Remove the 4 bolts.
- (b) Detach the 2 guides.
- (c) Disconnect each connector and remove the rear console box.



TOYOTA


Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM0000046OC000X
Title: INTERIOR PANELS / TRIM: FRONT CONSOLE BOX (for 1GR-FE): DISASSEMBLY (2010 4Runner)		

DISASSEMBLY

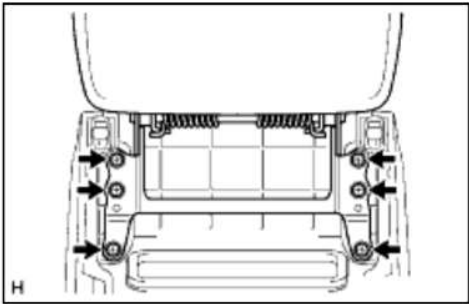


1. REMOVE CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY

(a) Remove the 6 screws and console compartment door.

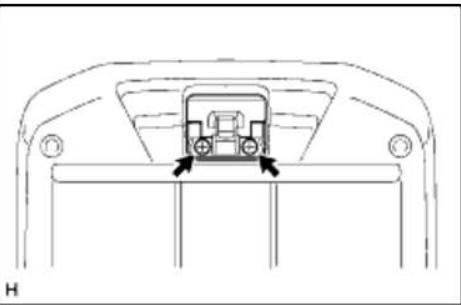

2. REMOVE CONSOLE COMPARTMENT DOOR HINGE SUB-ASSEMBLY

(a) Remove the 2 screws and console compartment door lock.

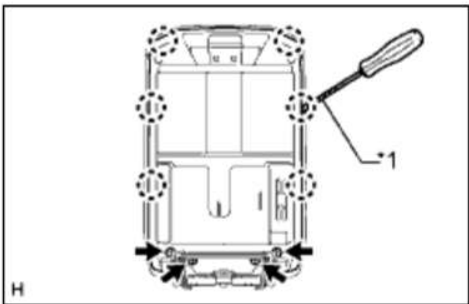

(b) Remove the 4 screws.

(c) Using a screwdriver, detach the 6 claws and remove the console compartment inner door.


HINT:

Tape the screwdriver tip before use.


Text in Illustration

* 1


Protective Tape

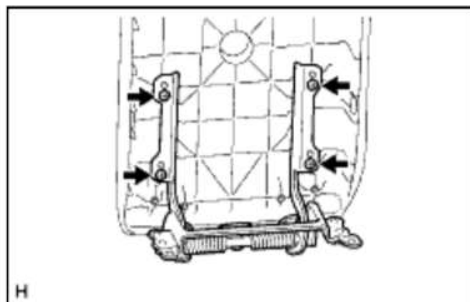

(d) Remove the 4 screws and console compartment door hinge.

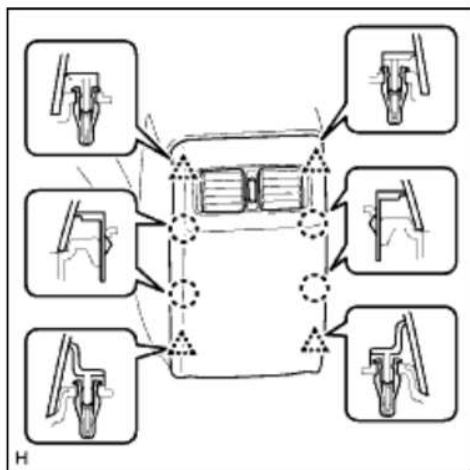**3. REMOVE REAR CONSOLE END PANEL**


(a) Detach the 4 clips and 4 claws and remove the rear console end panel.

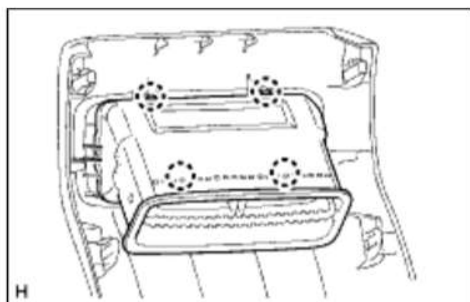**4. REMOVE CONSOLE BOX REGISTER ASSEMBLY**


(a) Detach the 4 claws and remove the console box register.

5. REMOVE CONSOLE CUP HOLDER BOX

(a) Remove the 6 screws and console cup holder.

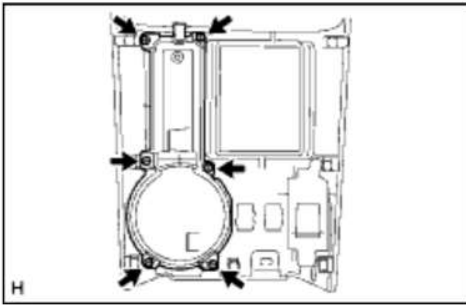


6. REMOVE BACK DOOR POWER WINDOW REGULATOR SWITCH ASSEMBLY

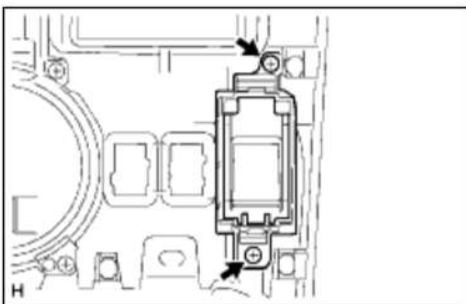[INFO](#)


7. REMOVE SWITCH BASE


(a) Remove the 2 screws and switch base.

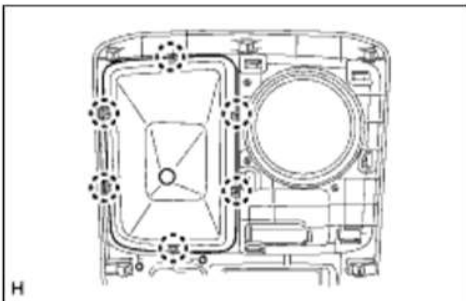

8. REMOVE SHIFTING HOLE COVER SUB-ASSEMBLY (for VF2A)

(a) Detach the 6 claws and remove the shifting hole cover.

9. REMOVE FRONT UPPER CONSOLE PANEL GARNISH

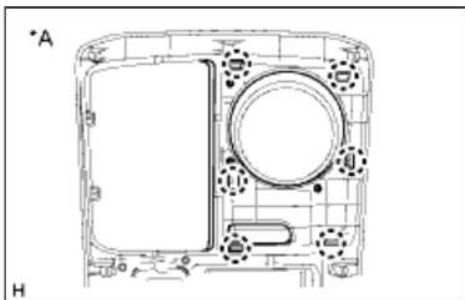


(a) for VF2A :

(1) Detach the 6 claws and remove the front upper console panel garnish.

Text in Illustration


*A	for VF2A
----	----------

- (b) for 2WD, for VF4BM:
- (1) Detach the 10 claws and remove the front upper console panel garnish.

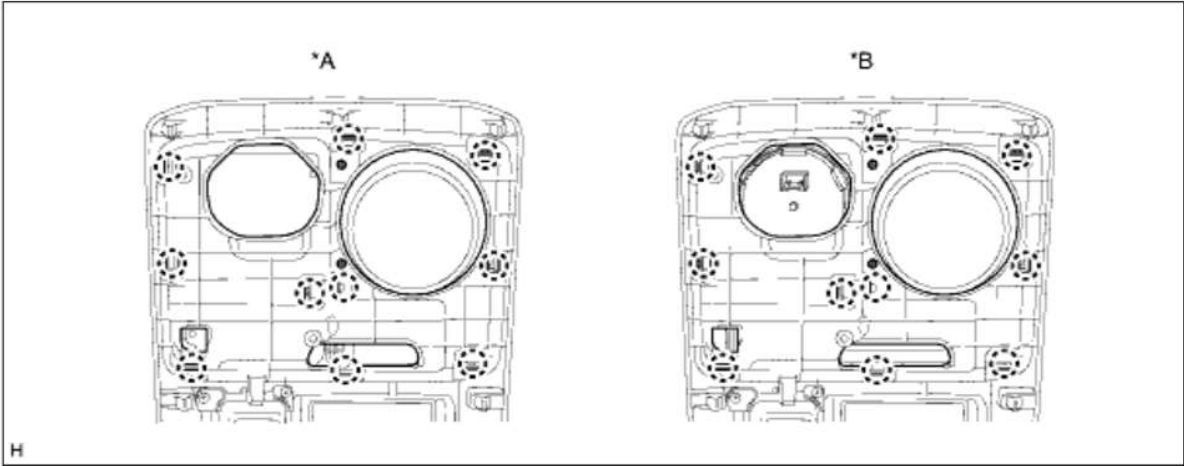

Text in Illustration

*A	for 2WD	*B	for VF4BM
----	---------	----	-----------

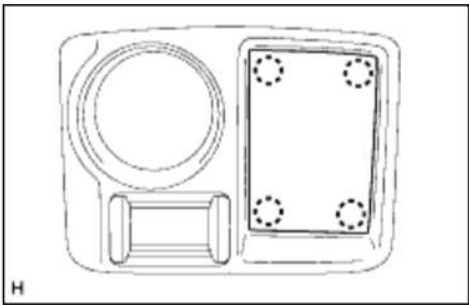

10. REMOVE NO. 2 BOX BOTTOM MAT (for 2WD)

- (a) Detach the 4 claws and remove the No. 2 box bottom mat.

11. REMOVE TRANSFER POSITION SWITCH (for VF4BM)



Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM00000460D000X
Title: INTERIOR PANELS / TRIM: FRONT CONSOLE BOX (for 1GR-FE): REASSEMBLY (2010 4Runner)		


REASSEMBLY

1. INSTALL TRANSFER POSITION SWITCH (for VF4BM) INFO

2. INSTALL NO. 2 BOX BOTTOM MAT (for 2WD)

(a) Attach the 4 claws to install the No. 2 box bottom mat.

3. INSTALL FRONT UPPER CONSOLE PANEL GARNISH

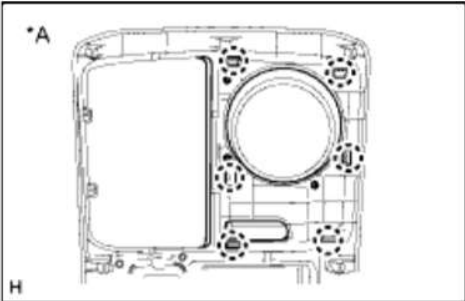


- (a) for VF2A :
- (1) Attach the 6 claws to install the front upper console panel garnish.

Text in Illustration

*A	for VF2A
----	----------

- (b) for 2WD, for VF4BM :
- (1) Attach the 10 claws to install the front upper console panel garnish.

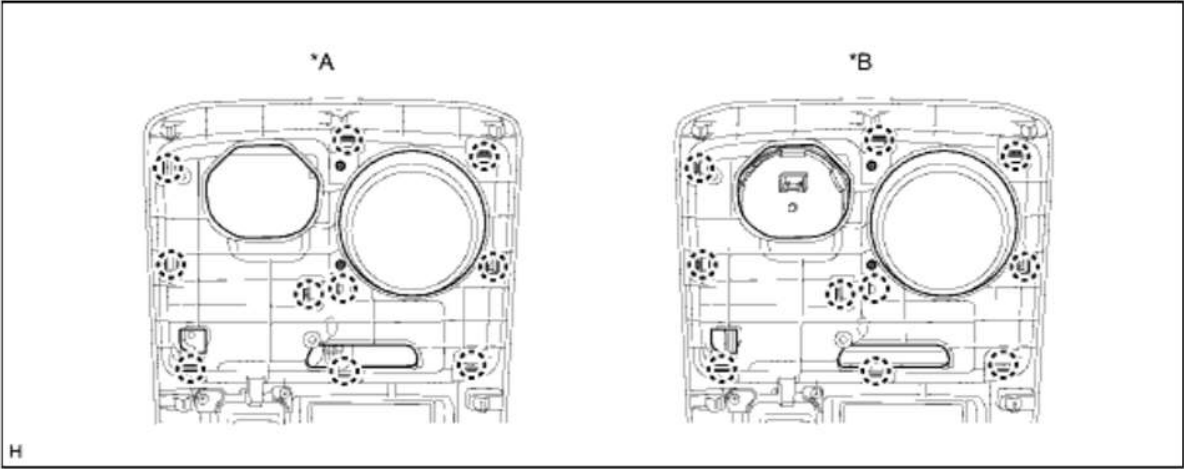

Text in Illustration

*A	for 2WD	*B	for V F4 BM
----	---------	----	-------------

4. INSTALL SHIFTING HOLE COVER SUB-ASSEMBLY (for VF2A)

- (a) Attach the 6 claws to install the shifting hole cover.

5. INSTALL SWITCH BASE

- (a) Install the switch base with the 2 screws.

6. INSTALL BACK DOOR POWER WINDOW REGULATOR SWITCH ASSEMBLY



7. INSTALL CONSOLE CUP HOLDER BOX

- (a) Install the console cup holder with the 6 screws.

8. INSTALL CONSOLE BOX REGISTER ASSEMBLY

- (a) Attach the 4 claws to install the console box register.

9. INSTALL REAR CONSOLE END PANEL

- (a) Attach the 4 clips and 4 claws to install the rear console end panel.

10. INSTALL CONSOLE COMPARTMENT DOOR HINGE SUB-ASSEMBLY

- (a) Install the console compartment door hinge with the 4 screws.
(b) Attach the 6 claws to install the console compartment inner door.
(c) Install the 4 screws.
(d) Install the console compartment door lock with the 2 screws.

11. INSTALL CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY

- (a) Install the console compartment door with the 6 screws.



Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM000004609000X
Title: INTERIOR PANELS / TRIM: FRONT CONSOLE BOX (for 1GR-FE): INSTALLATION (2010 4Runner)		

INSTALLATION

HINT:

A bolt without a torque specification is shown in the standard bolt chart  .

1. INSTALL REAR CONSOLE BOX ASSEMBLY


- (a) Connect each connector.
- (b) Attach the 2 guides to install the rear console box.
- (c) Install the 4 bolts.

2. INSTALL NO. 2 CONSOLE BOX RETAINER

- (a) Attach the clips, 2 claws and 2 guides to install the No. 2 console box retainer.


3. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY

- (a) Connect each connector.
- (b) Attach the 10 clips to install the upper console panel.

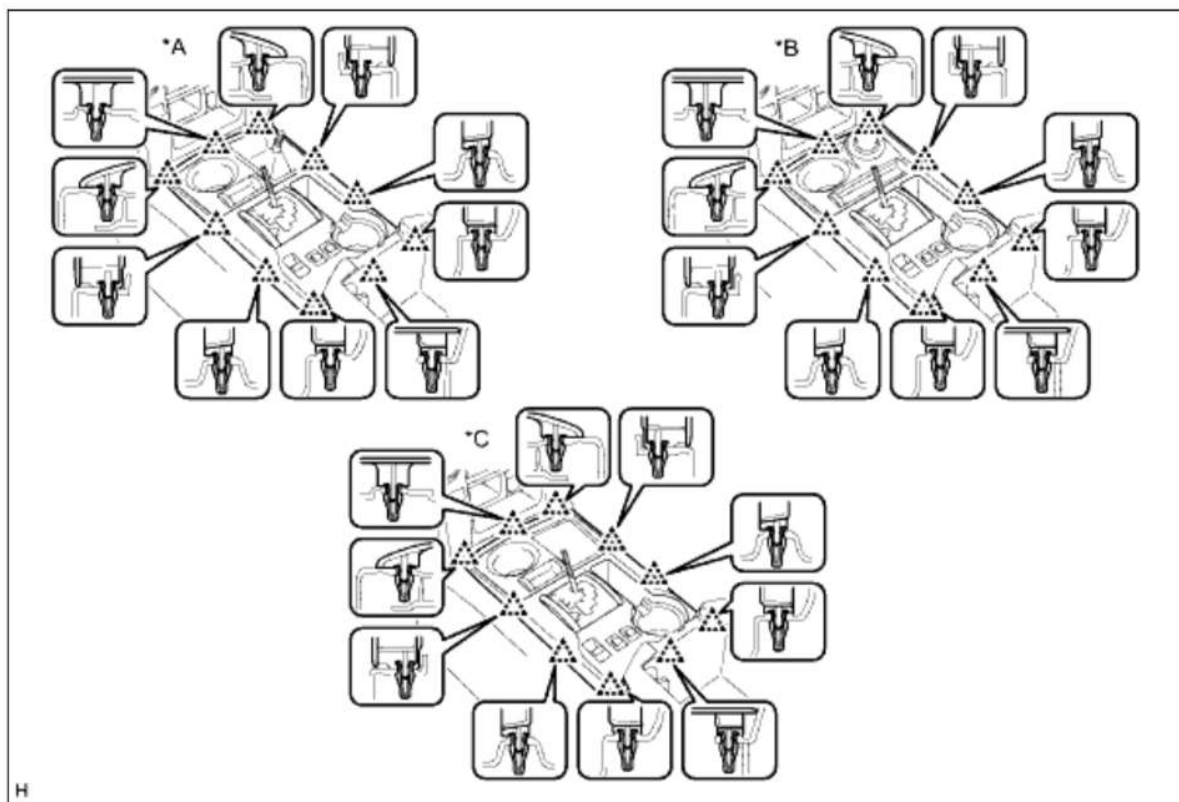


Text in Illustration

*A	for V F2 A	*B	for V F4 BM
*C	for 2 WD	-	-

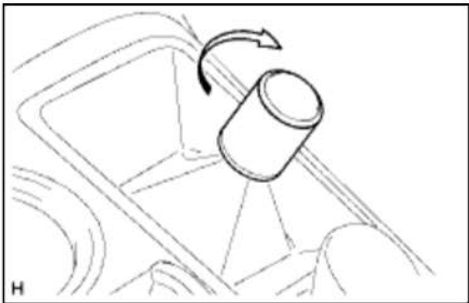

4. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (for VF2A)

- (a) Install the shift lever knob and twist it in the direction indicated by the arrow.

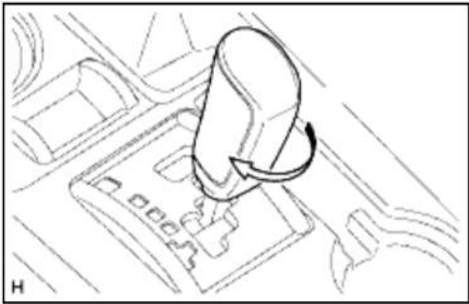

5. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY

- (a) Install the shift lever knob and twist it in the direction indicated by the arrow.

6. INSTALL FRONT NO. 1 CONSOLE BOX INSERT

- (a) Attach the 2 clips and guide to install the front No. 1 console box insert.

7. INSTALL FRONT NO. 2 CONSOLE BOX INSERT

- (a) Attach the 2 clips and guide to install the front No. 2 console box insert.

8. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

- (a) Attach the 5 clips to install the No. 1 instrument cluster finish panel garnish.

9. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

HINT:


Use the same procedure described for the No. 1 instrument cluster finish panel garnish.




Last Modified: 5-10-2010	6.4 K	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM00000460A003X
Title: INTERIOR PANELS / TRIM: FRONT CONSOLE BOX (for 2TR-FE): COMPONENTS (2010 4Runner)		

[COMPONENTS](#)

[ILLUSTRATION](#)

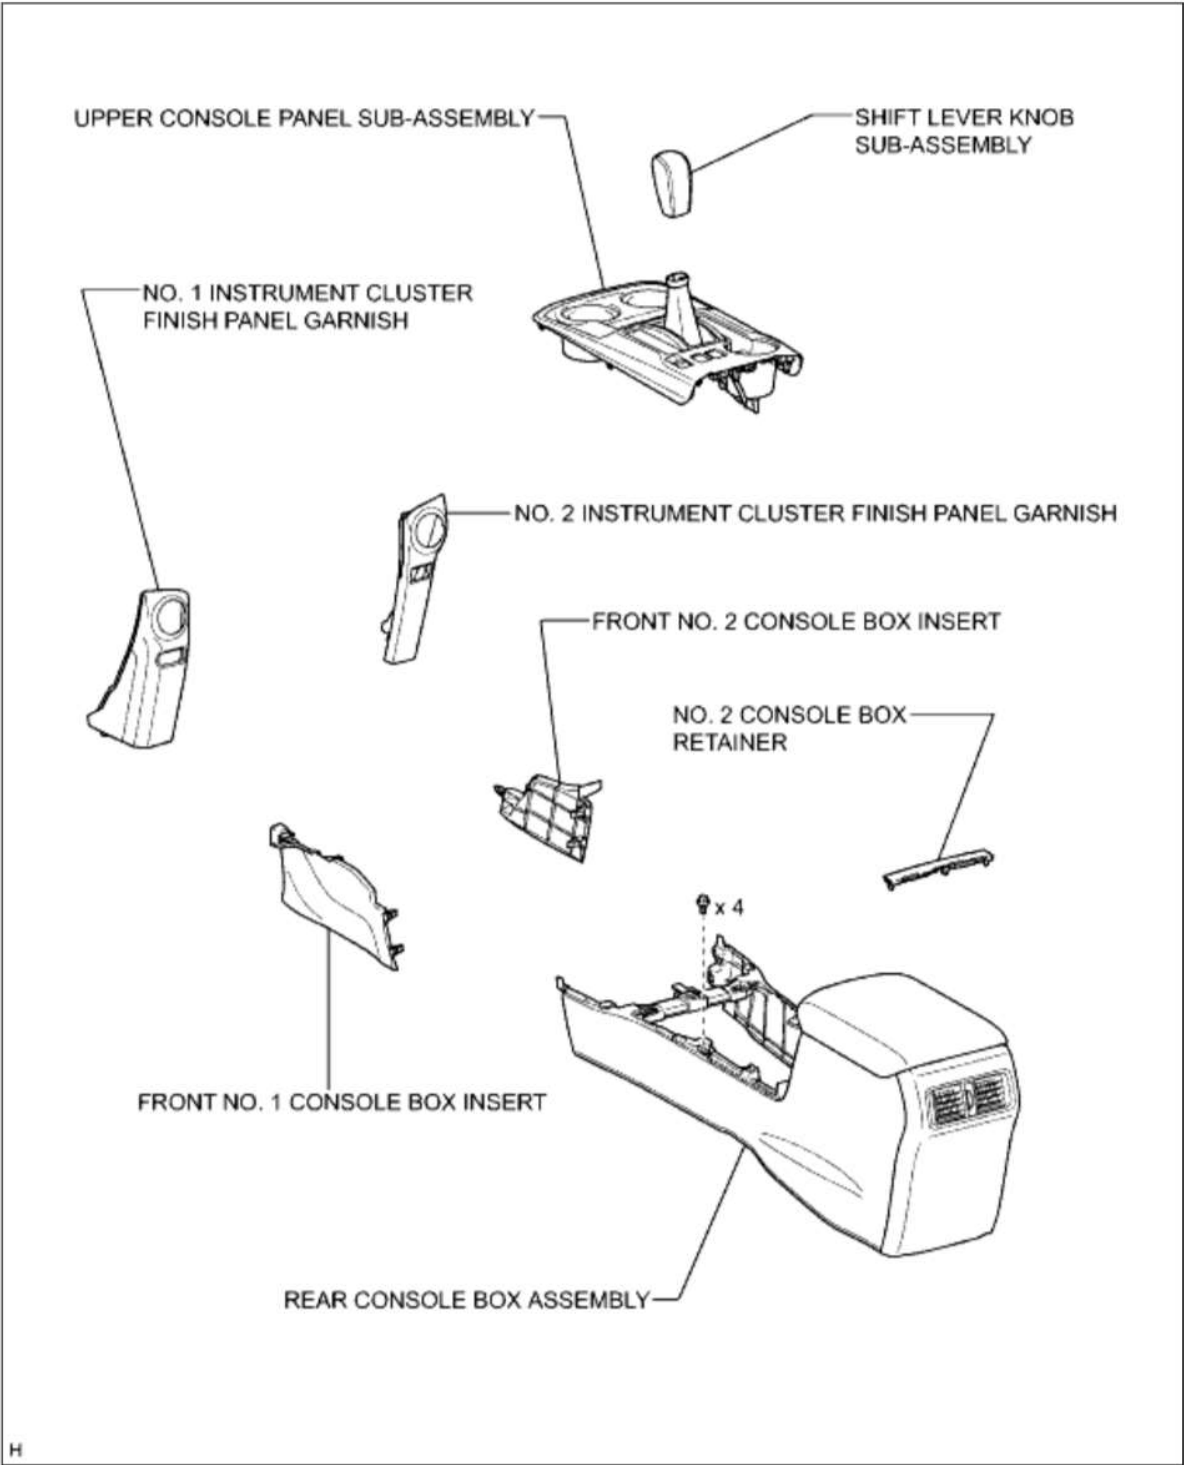

ILLUSTRATION

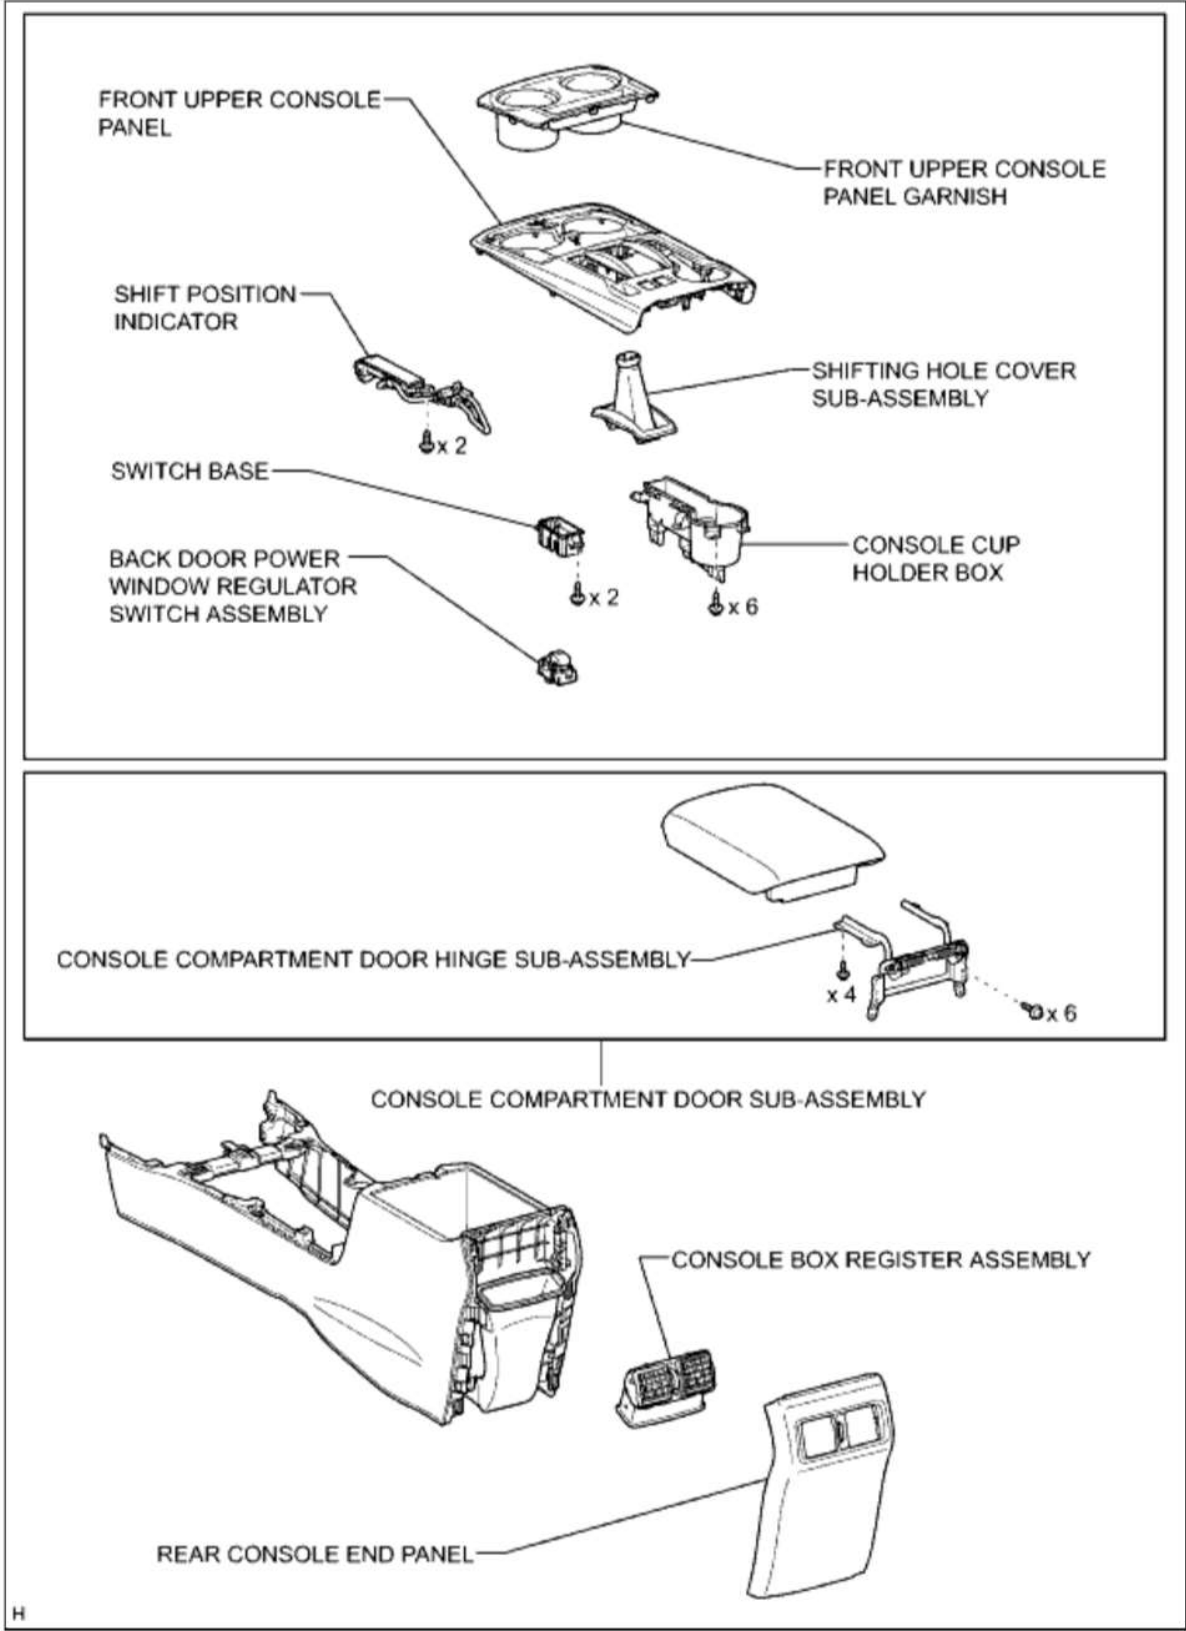


Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM00000460B003X
Title: INTERIOR PANELS / TRIM: FRONT CONSOLE BOX (for 2TR-FE): REMOVAL (2010 4Runner)		

REMOVAL

1. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH
2. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

HINT:
Use the same procedure described for the No. 1 instrument cluster finish panel garnish.

3. REMOVE FRONT NO. 1 CONSOLE BOX INSERT
4. REMOVE FRONT NO. 2 CONSOLE BOX INSERT

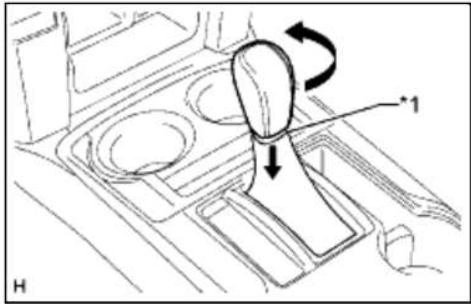

5. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY


(a) Move the shifting hole cover downward.

Text in Illustration

*1	Shifting Hole Cover
----	---------------------

(b) Twist the shift lever knob in the direction indicated by the arrow and remove it.


6. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY

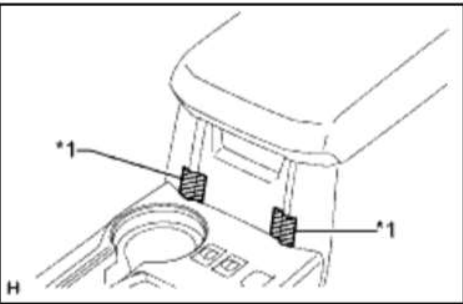

(a) Put protective tape around the upper console panel.

Text in Illustration


*1	Protective Tape
----	-----------------

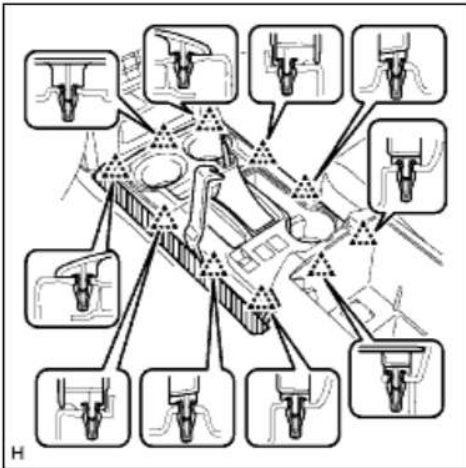

(b) Using a moulding remover, detach the 10 clips.

(c) Disconnect each connector and remove the upper console panel.

7. REMOVE NO. 2 CONSOLE BOX RETAINER INFO

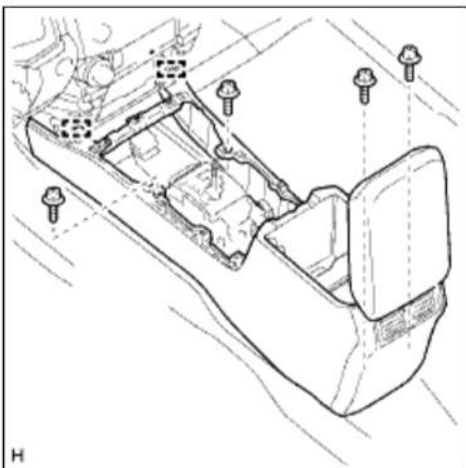

8. REMOVE REAR CONSOLE BOX ASSEMBLY

- (a) Remove the 4 bolts.
- (b) Detach the 2 guides.
- (c) Disconnect each connector and remove the rear console box.

Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM00000460C003X
Title: INTERIOR PANELS / TRIM: FRONT CONSOLE BOX (for 2TR-FE): DISASSEMBLY (2010 4Runner)		


DISASSEMBLY

1. REMOVE CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY [INFO](#)

2. REMOVE CONSOLE COMPARTMENT DOOR HINGE SUB-ASSEMBLY [INFO](#)


3. REMOVE REAR CONSOLE END PANEL [INFO](#)

4. REMOVE CONSOLE BOX REGISTER ASSEMBLY [INFO](#)

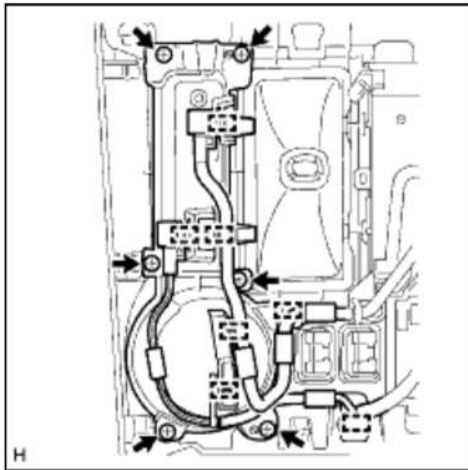

5. REMOVE CONSOLE CUP HOLDER BOX

- (a) Detach the 7 clamps.
- (b) Remove the 6 screws and console cup holder box.

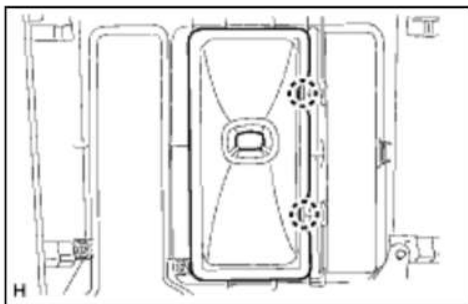


6. REMOVE SHIFTING HOLE COVER SUB-ASSEMBLY

- (a) Detach the 2 claws and remove the shifting hole cover.

7. REMOVE FRONT UPPER CONSOLE PANEL GARNISH

- (a) Detach the 9 claws and remove the front upper console panel garnish.

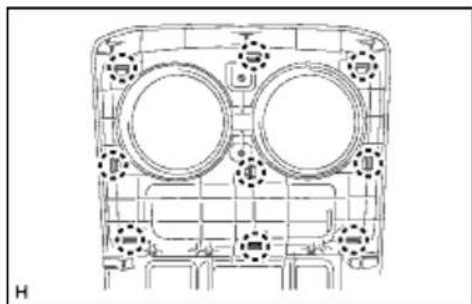

8. REMOVE SHIFT POSITION INDICATOR

INFO

9. REMOVE BACK DOOR POWER WINDOW REGULATOR SWITCH ASSEMBLY

INFO

10. REMOVE SWITCH BASE

INFO



Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM00000460D003X
Title: INTERIOR PANELS / TRIM: FRONT CONSOLE BOX (for 2TR-FE): REASSEMBLY (2010 4Runner)		

REASSEMBLY

1. INSTALL SWITCH BASE

INFO
2. INSTALL BACK DOOR POWER WINDOW REGULATOR SWITCH ASSEMBLY

INFO
3. INSTALL SHIFT POSITION INDICATOR

INFO
4. INSTALL FRONT UPPER CONSOLE PANEL GARNISH

(a) Attach the 9 claws to install the front upper console panel garnish.
5. INSTALL SHIFTING HOLE COVER SUB-ASSEMBLY

(a) Attach the 2 claws to install the shifting hole cover.
6. INSTALL CONSOLE CUP HOLDER BOX

(a) Install the console cup holder box with the 6 screws.

 
(b) Attach the 7 clamps.
7. INSTALL CONSOLE BOX REGISTER ASSEMBLY

INFO
8. INSTALL REAR CONSOLE END PANEL

INFO
9. INSTALL CONSOLE COMPARTMENT DOOR HINGE SUB-ASSEMBLY

INFO
10. INSTALL CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY

INFO



Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM000004609003X
Title: INTERIOR PANELS / TRIM: FRONT CONSOLE BOX (for 2TR-FE): INSTALLATION (2010 4Runner)		

INSTALLATION

HINT:

A bolt without a torque specification is shown in the standard bolt chart

INFO

.

1. INSTALL REAR CONSOLE BOX ASSEMBLY


- (a) Connect each connector.
- (b) Attach the 2 guides to install the rear console box.
- (c) Install the 4 bolts.

2. INSTALL NO. 2 CONSOLE BOX RETAINER

INFO

3. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY

- (a) Connect each connector.
- (b) Attach the 10 clips to install the upper console panel.

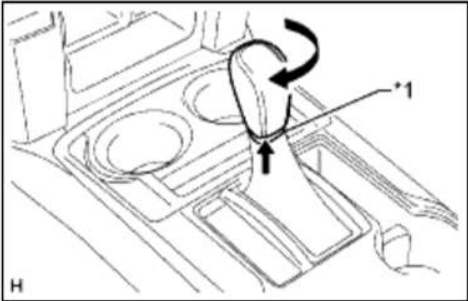

4. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY

- (a) Install the shift lever knob and twist it in the direction indicated by the arrow.
- (b) Install the shifting hole cover to the shift lever knob.

Text in Illustration

*1	Shifting Hole Cover
----	---------------------

5. INSTALL FRONT NO. 1 CONSOLE BOX INSERT

INFO

6. INSTALL FRONT NO. 2 CONSOLE BOX INSERT

INFO

7. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

INFO

8. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

HINT:

Use the same procedure described for the No. 1 instrument cluster finish panel garnish.

Last Modified: 5-10-2010	6.4 L	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM000003QLG006X
Title: INTERIOR PANELS / TRIM: INSTRUMENT PANEL SAFETY PAD: PRECAUTION (2010 4Runner)		

PRECAUTION

1. PRECAUTION FOR VEHICLE WITH AIRBAG


(a) Some operations in this section may affect the airbag. Prior to performing the corresponding operations, read the SRS Precaution  .




Last Modified: 5-10-2010	6.4 K	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM000004603000X
Title: INTERIOR PANELS / TRIM: INSTRUMENT PANEL SAFETY PAD: COMPONENTS (2010 4Runner)		

COMPONENTS


ILLUSTRATION

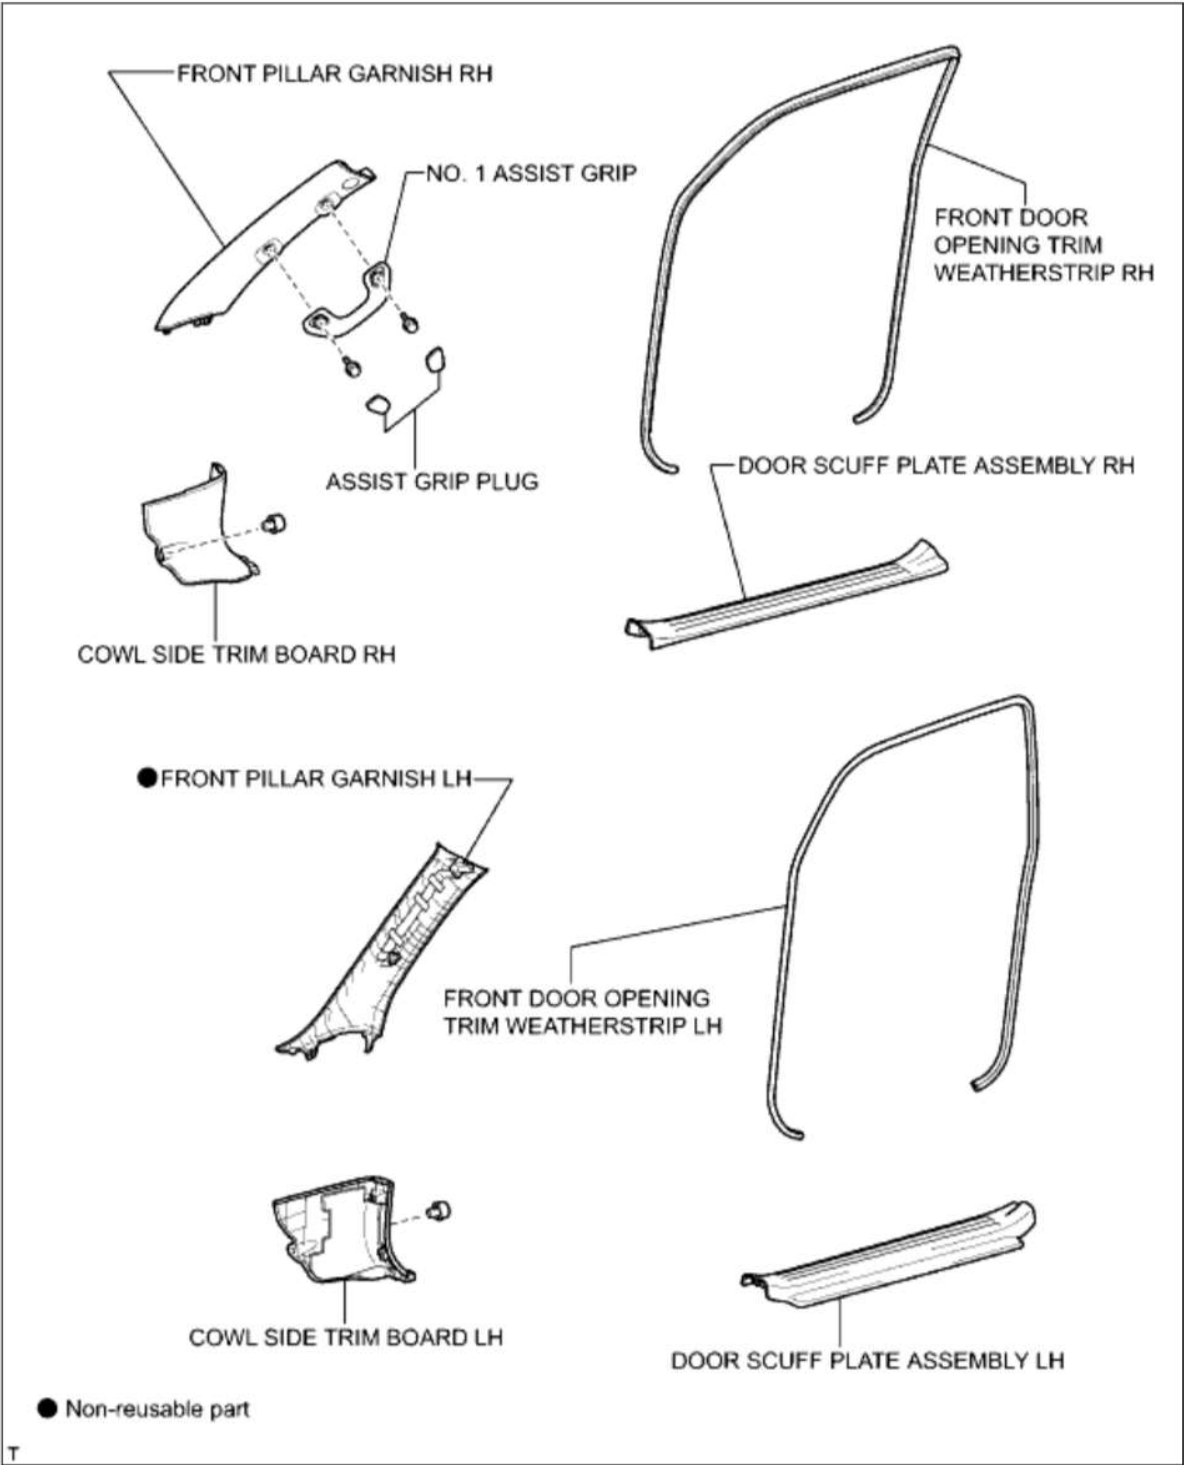


ILLUSTRATION

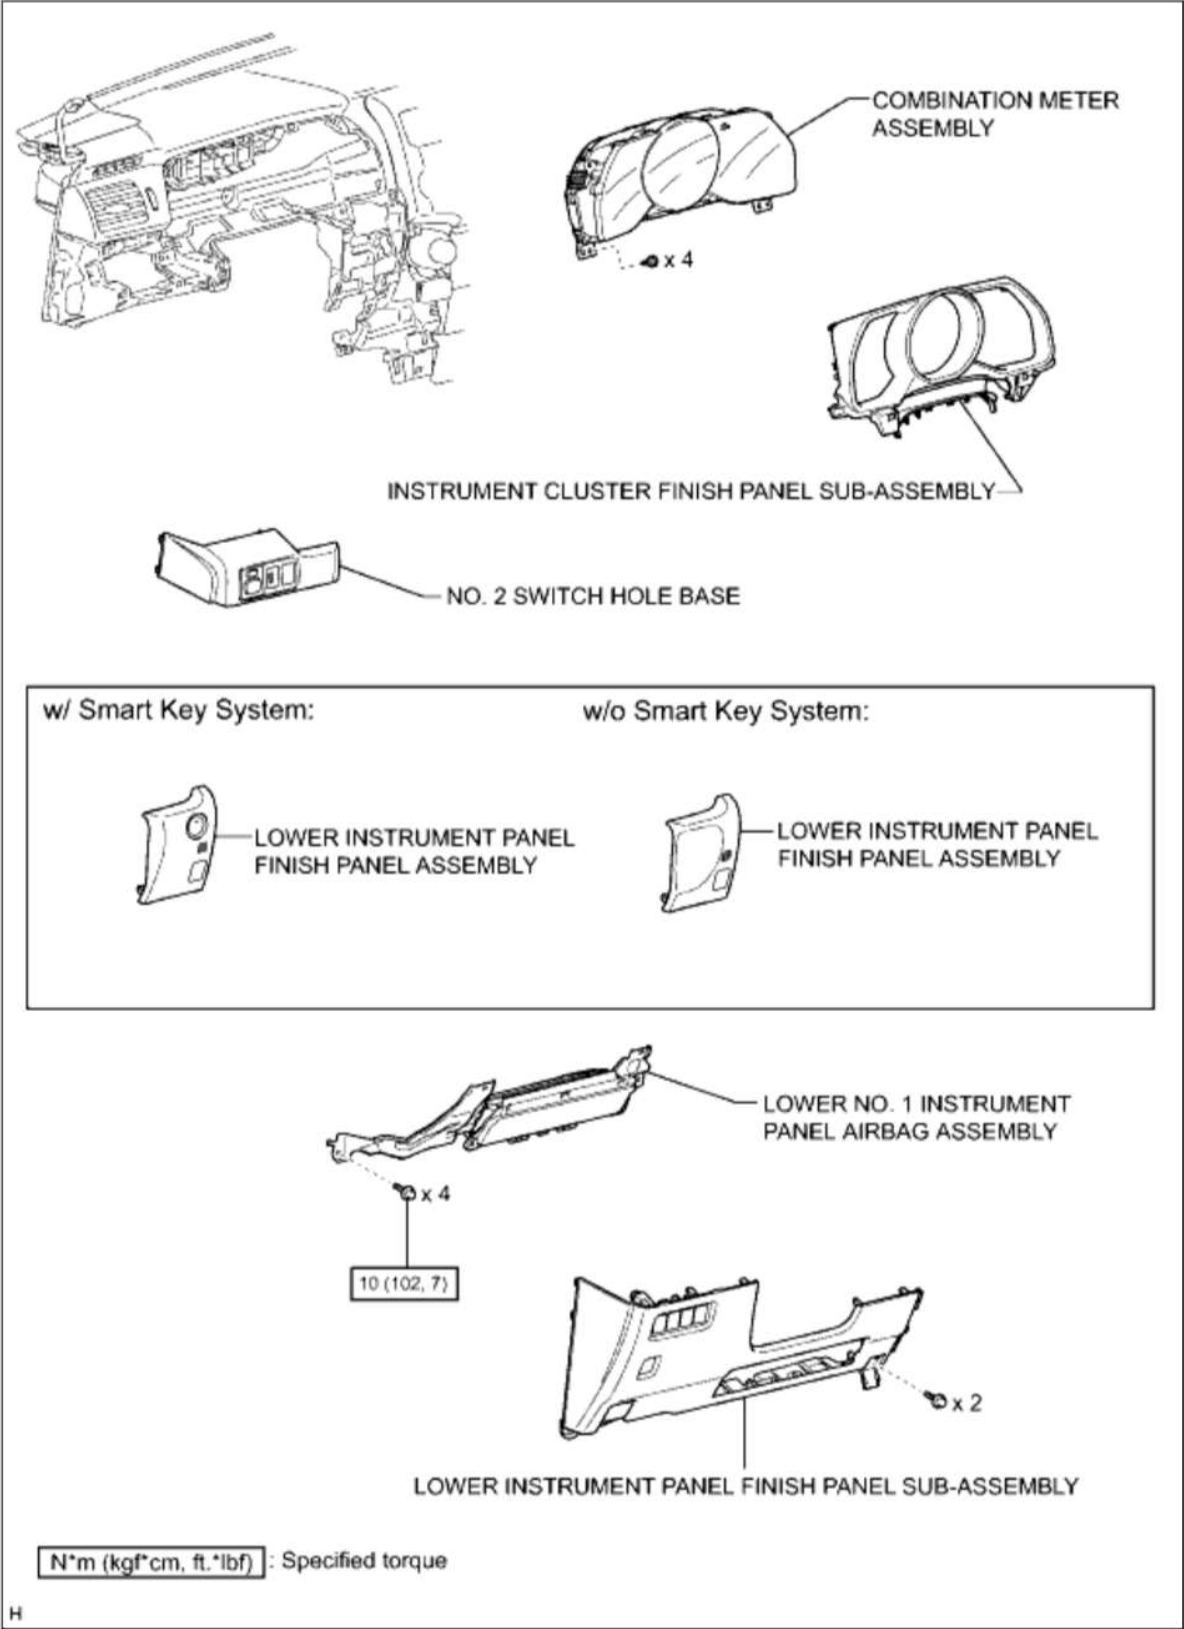


ILLUSTRATION

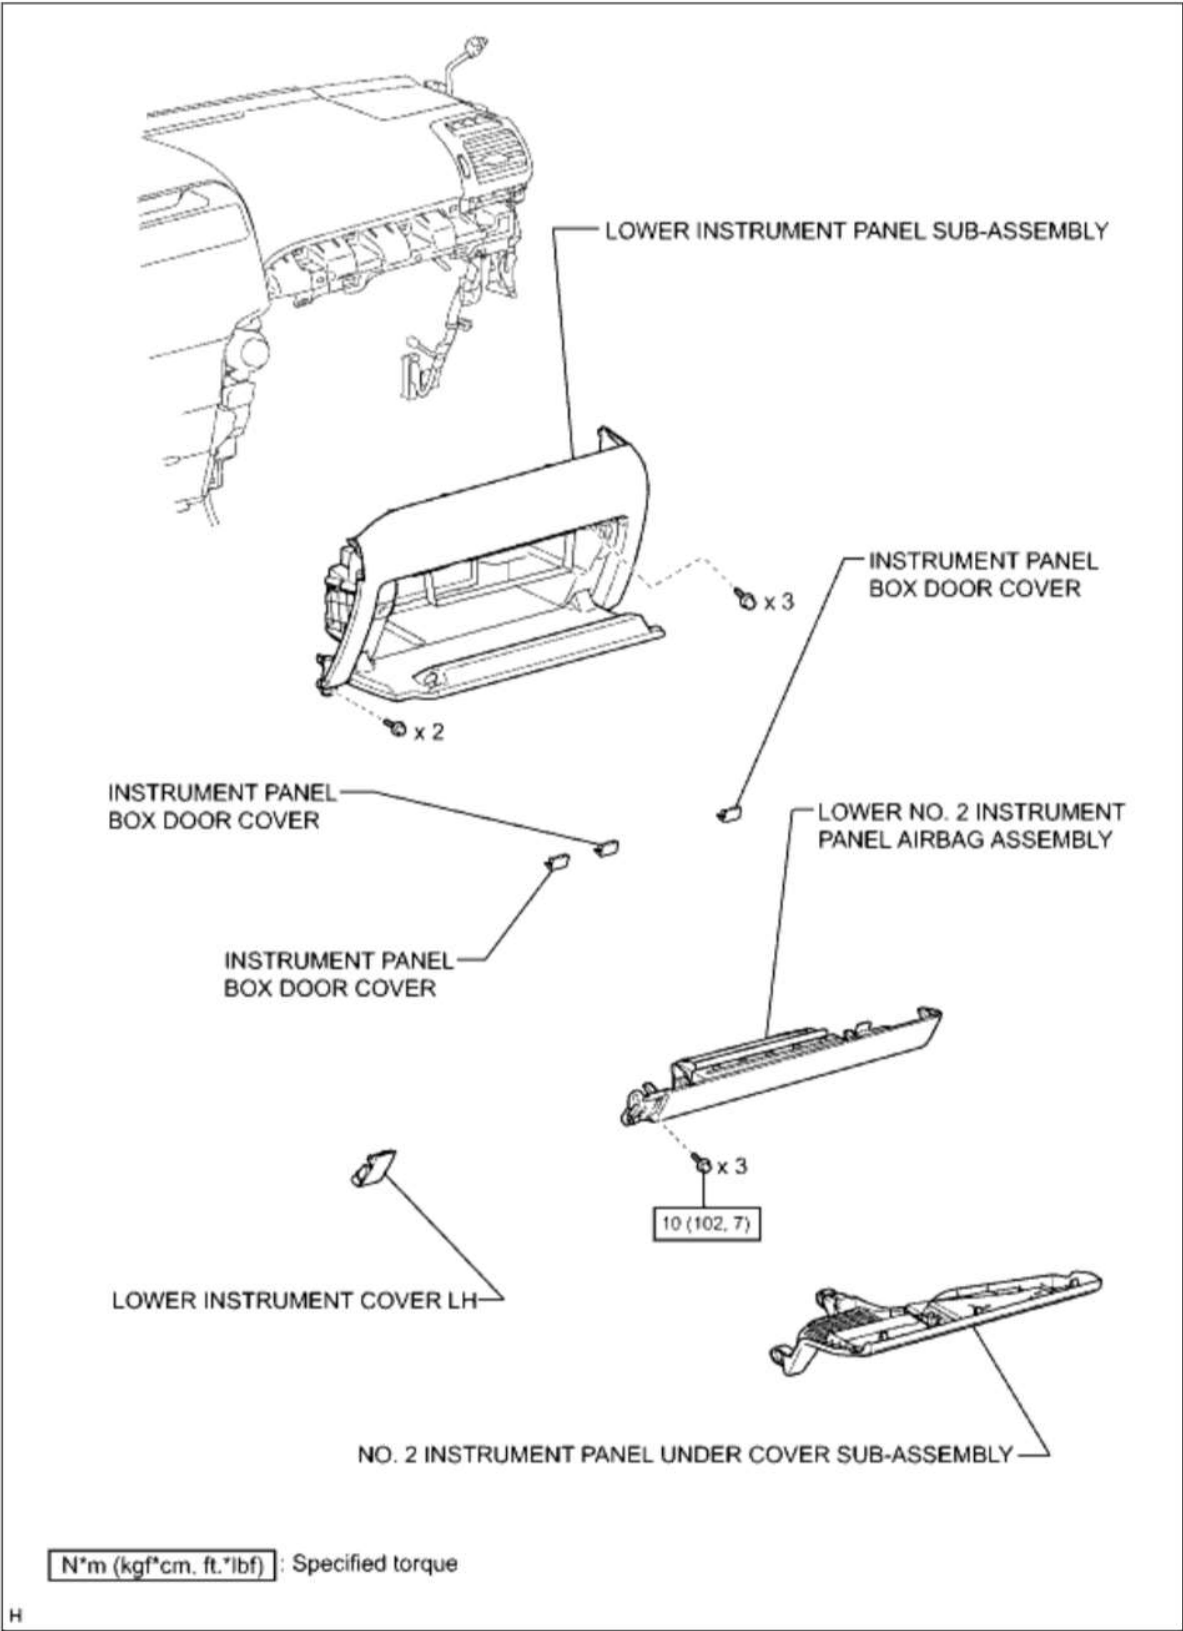


ILLUSTRATION

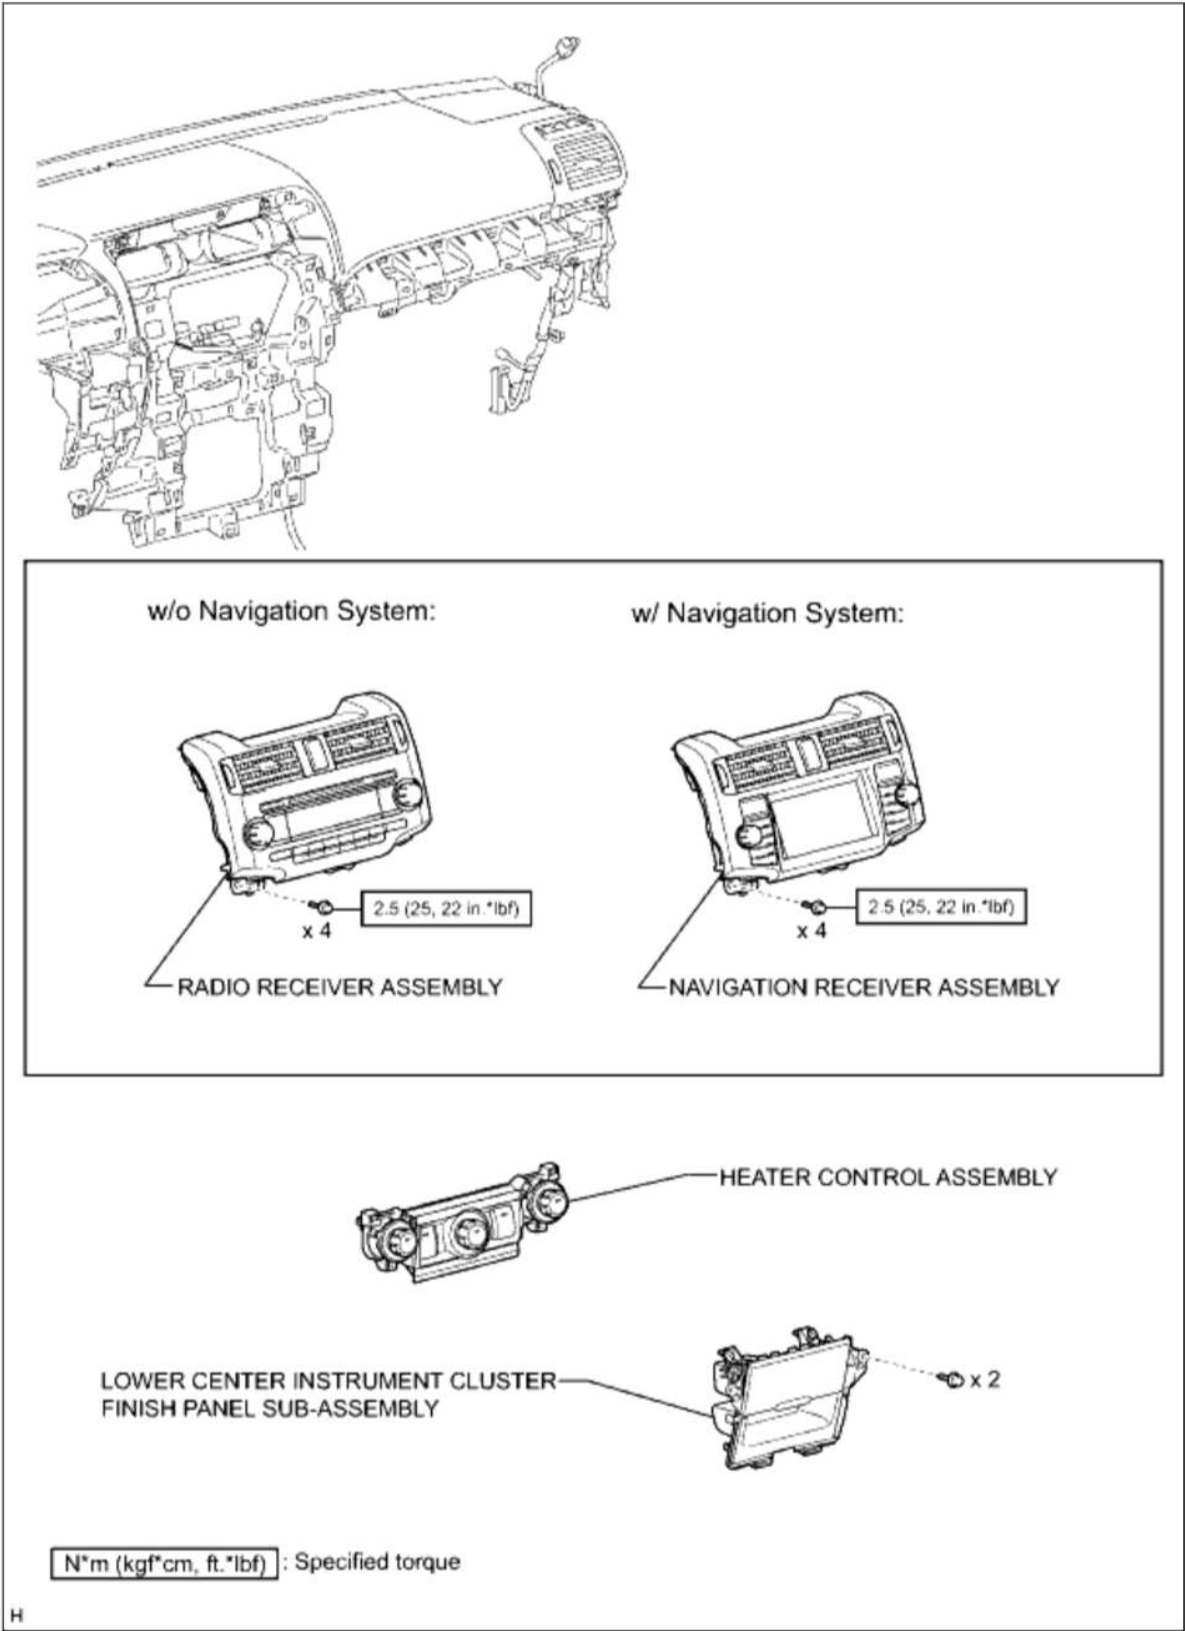


ILLUSTRATION

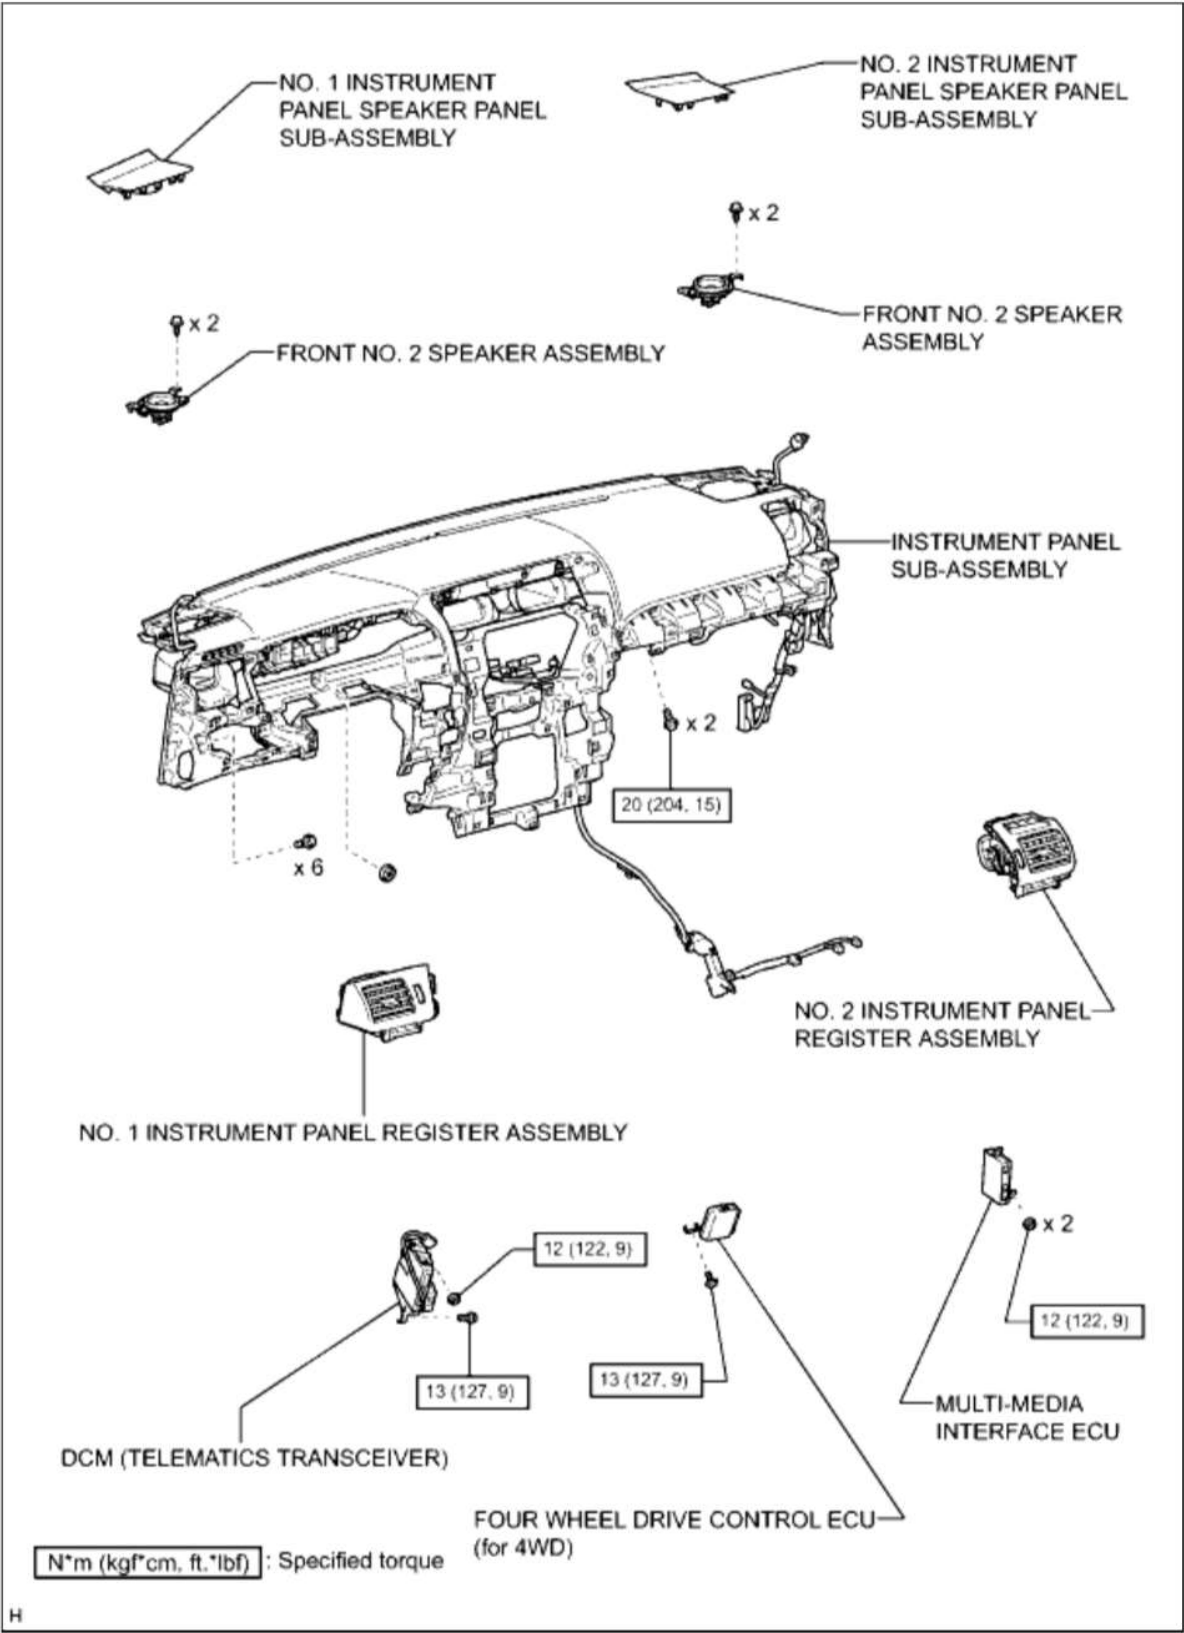

ILLUSTRATION

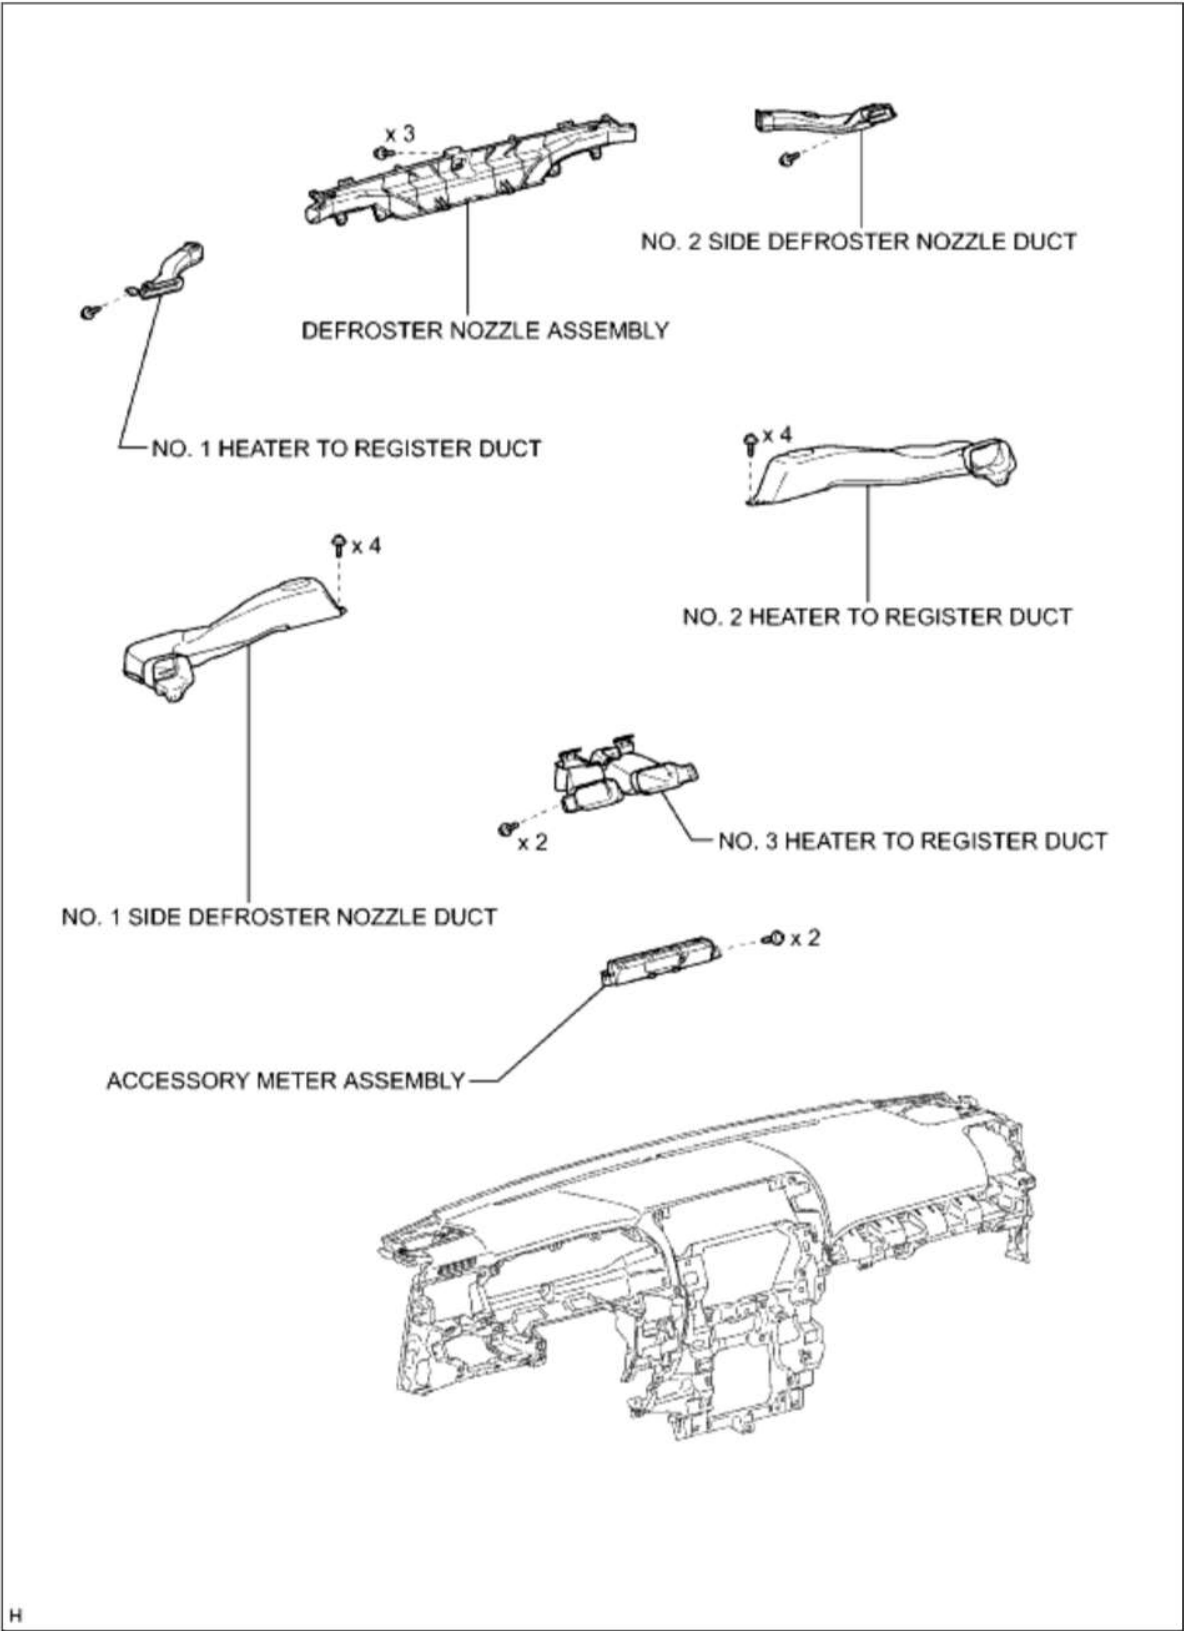

ILLUSTRATION

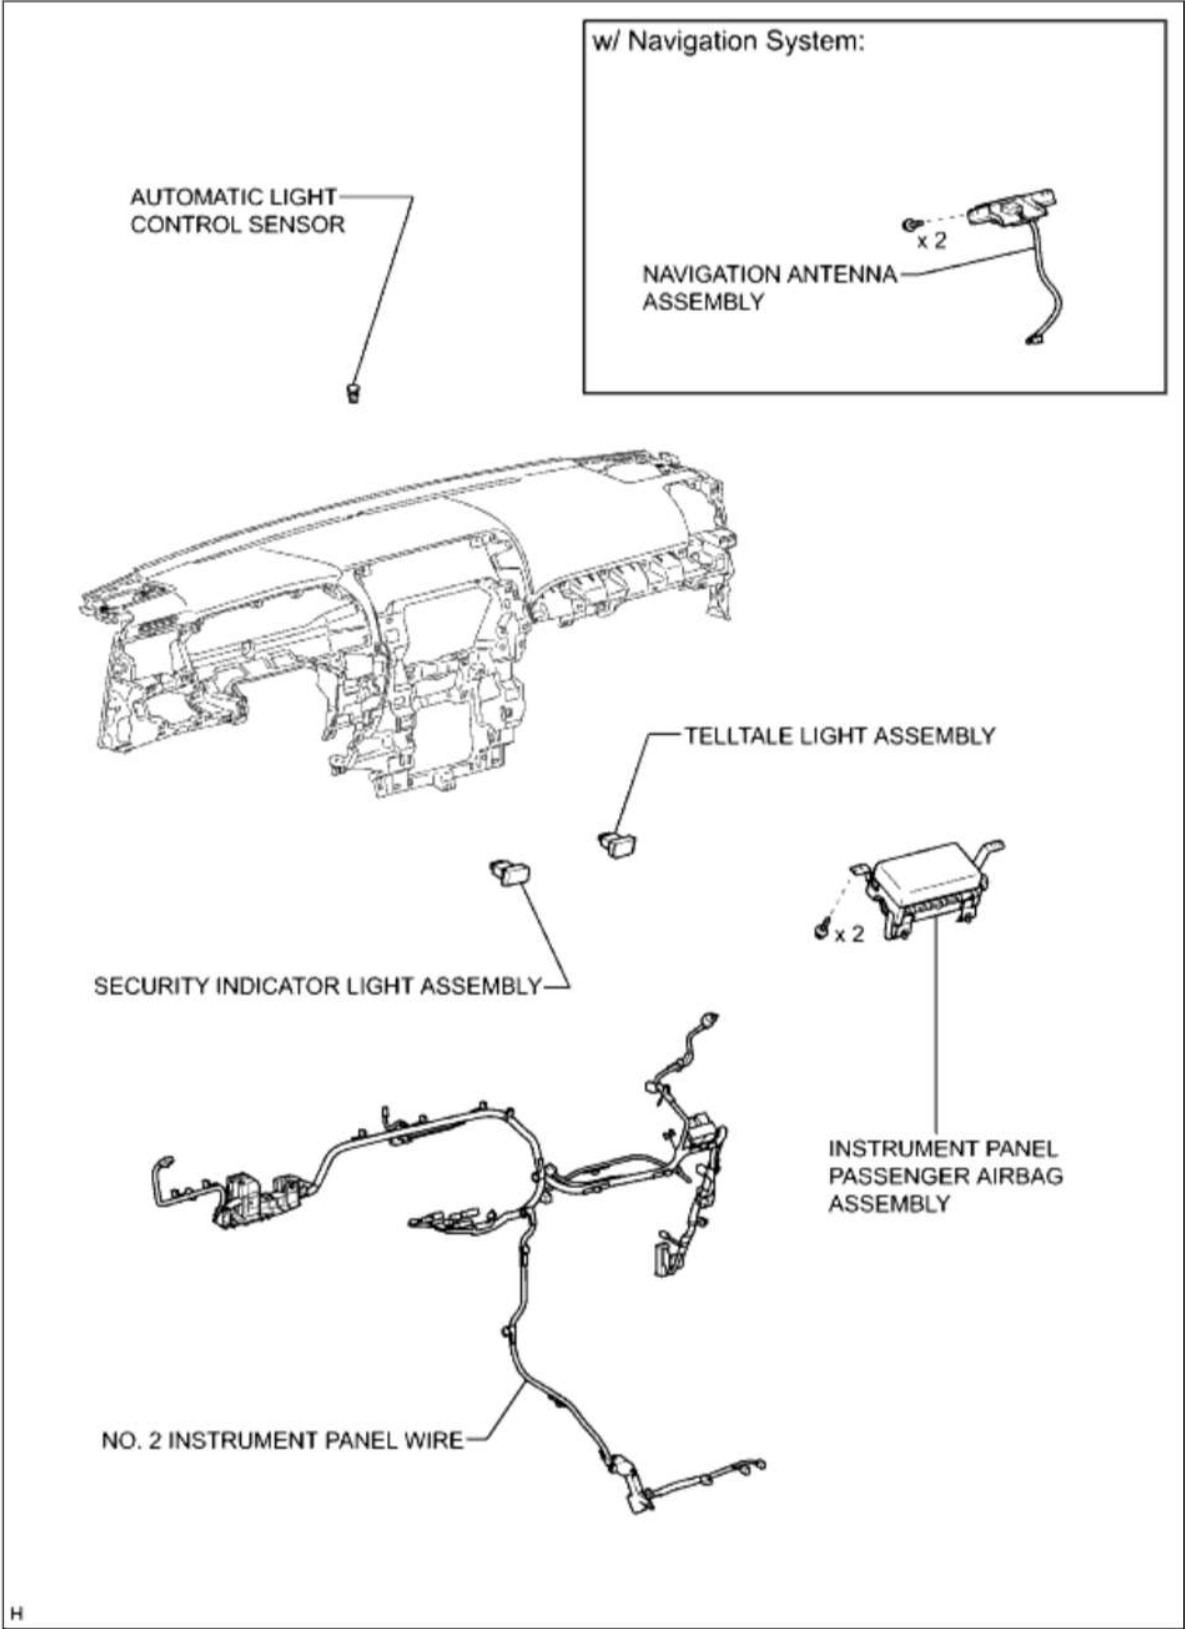

H






Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM000004604000X
Title: INTERIOR PANELS / TRIM: INSTRUMENT PANEL SAFETY PAD: REMOVAL (2010 4Runner)		

REMOVAL

1. TABLE OF BOLT, SCREW AND NUT

HINT:

     All bolts, screws and nuts relevant to installing and removing the instrument panel are shown along with their alphabet code in the table below.

mm (in.) (L = Length)					
Code	Shape	Code	Shape	Code	Shape
<A>	 φ 5 (0.197) L = 14 (0.551)		 φ 5 (0.197) L = 18 (0.709)	<C>	 φ 6 (0.236) L = 22 (0.866)
<D>	 φ 6 (0.236) L = 22 (0.866)	<E>	 φ 6 (0.236) L = 20 (0.787)	<F>	 φ 6 (0.236)

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected



3. REMOVE HEADLIGHT DIMMER SWITCH ASSEMBLY

(a) Remove the headlight dimmer switch assembly



4. REMOVE REAR CONSOLE BOX ASSEMBLY

(a) for 1GR-FE:

Remove the rear console box assembly



(b) for 2TR-FE:

Remove the rear console box assembly



5. REMOVE DOOR SCUFF PLATE ASSEMBLY LH



6. REMOVE DOOR SCUFF PLATE ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

7. REMOVE COWL SIDE TRIM BOARD LH

INFO

8. REMOVE COWL SIDE TRIM BOARD RH

HINT:

Use the same procedure described for the LH side.

9. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

INFO

10. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedure described for the LH side.

11. REMOVE ASSIST GRIP PLUG

INFO

12. REMOVE NO. 1 ASSIST GRIP

INFO


13. REMOVE FRONT PILLAR GARNISH LH

INFO

14. REMOVE FRONT PILLAR GARNISH RH


INFO

15. REMOVE LOWER INSTRUMENT PANEL FINISH PANEL ASSEMBLY

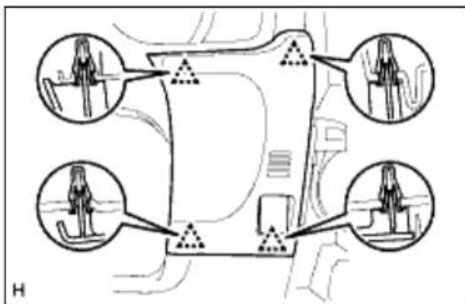


(a) w/o Smart Key System:

- (1) Detach the 4 clips.
- (2) Disconnect the cooler thermistor and remove the lower instrument panel finish panel.

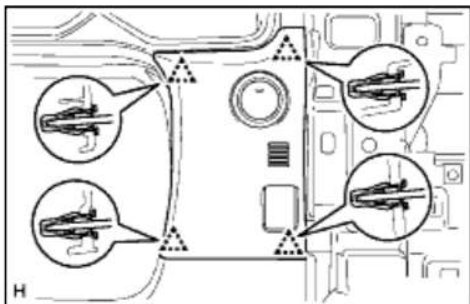


(b) w/ Smart Key System:

- (1) Detach the 4 clips.
- (2) Disconnect the connector and cooler thermistor and remove the lower instrument panel finish panel.

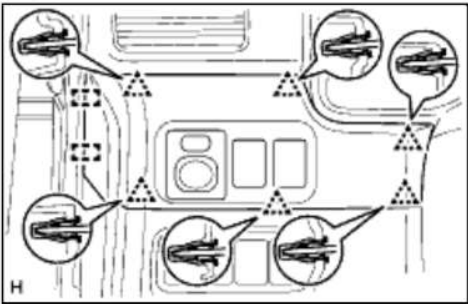

16. REMOVE NO. 2 SWITCH HOLE BASE

- (a) Detach the 6 clips and 2 guides.
- (b) Disconnect each connector and remove the No. 2 switch hole base.

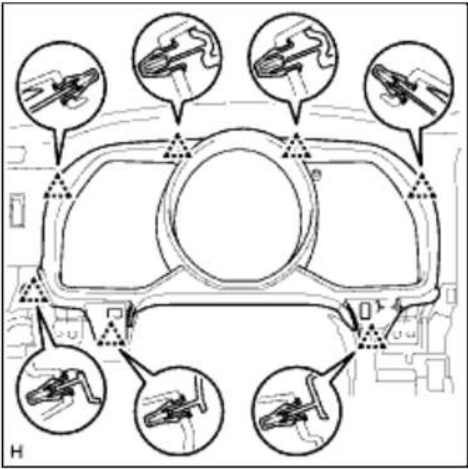


17. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

- (a) Detach the 7 clips and remove the instrument cluster finish panel.

18. REMOVE COMBINATION METER ASSEMBLY INFO

19. REMOVE LOWER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY

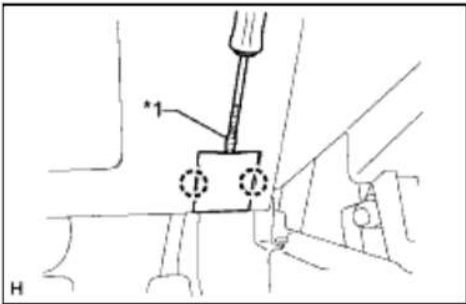


- (a) Using a screwdriver, detach the 2 claws and open the cover.

HINT:

Tape the screwdriver tip before use.

Text in Illustration

* 1	Protective Tape
-----	-----------------

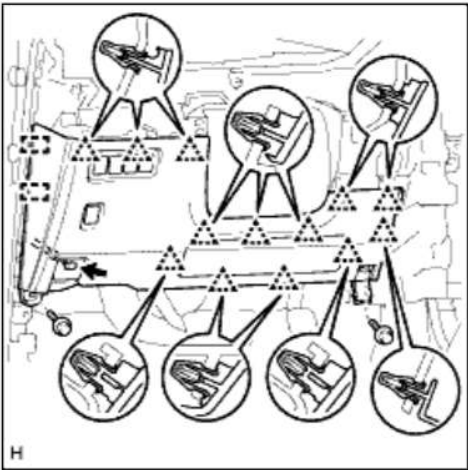


(b) Remove the 2 bolts <C>.

- (c) Detach the 13 clips and 2 guides.
- (d) Disconnect each connector and cable and remove the lower instrument panel finish panel.

20. REMOVE LOWER NO. 1 INSTRUMENT PANEL AIRBAG ASSEMBLY

INFO

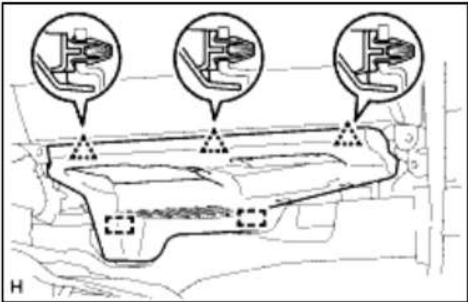

21. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY

- (a) Detach the 3 clips and 2 guides and remove the No. 2 instrument panel under cover.


22. REMOVE LOWER INSTRUMENT COVER LH

- (a) Put protective tape around the lower instrument cover.
- (b) Using a screwdriver, detach the 4 claws and remove the lower instrument cover.

HINT:

Tape the screwdriver tip before use.

Text in Illustration

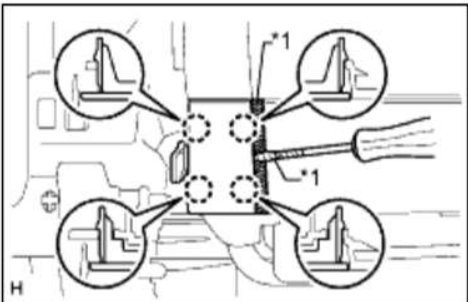

* 1	Protective Tape
-----	-----------------

23. REMOVE LOWER NO. 2 INSTRUMENT PANEL AIRBAG ASSEMBLY

INFO

24. REMOVE INSTRUMENT PANEL BOX DOOR COVER

HINT:


Use the same procedure for all instrument panel box door covers.

- (a) Using a screwdriver, detach the 2 claws and 2 guides, and remove the instrument panel box door cover.

HINT:


Tape the screwdriver tip before use.

Text in Illustration

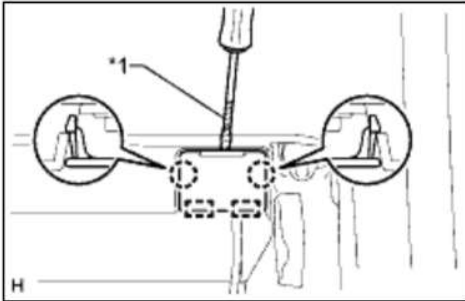

*1

Protective Tape

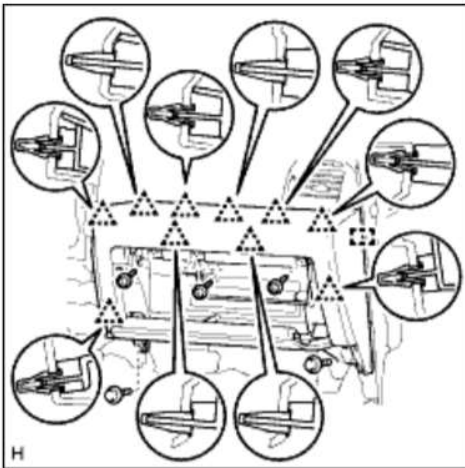

25. REMOVE LOWER INSTRUMENT PANEL SUB-ASSEMBLY

- (a) Remove the 3 screws and 2 bolts <C>.
- (b) Detach the 10 clips and guide.
- (c) Disconnect each connector and remove the lower instrument panel.


26. REMOVE HEATER CONTROL ASSEMBLY INFO

27. REMOVE RADIO RECEIVER ASSEMBLY (w/o Navigation System) INFO

28. REMOVE NAVIGATION RECEIVER ASSEMBLY (w/ Navigation System) INFO


29. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

- (a) Remove the 2 screws .
- (b) Detach the 4 clips.
- (c) Disconnect each connector and remove the lower center instrument cluster finish panel.

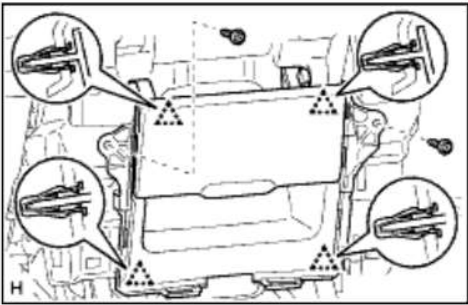

30. REMOVE NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY

- (a) Detach the 4 clips and 2 guides and remove the No. 1 instrument panel register.

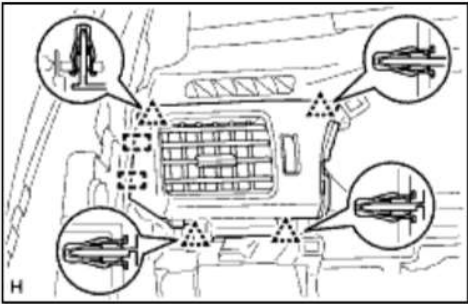


31. REMOVE NO. 2 INSTRUMENT PANEL REGISTER ASSEMBLY

HINT:

Use the same procedure described for the No. 1 instrument panel register.

32. REMOVE NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

- (a) Put protective tape around the No. 1 instrument panel speaker panel.
- (b) Using a screwdriver, detach the 2 clips, 4 claws and 3 guides and remove the No. 1 instrument panel speaker panel.

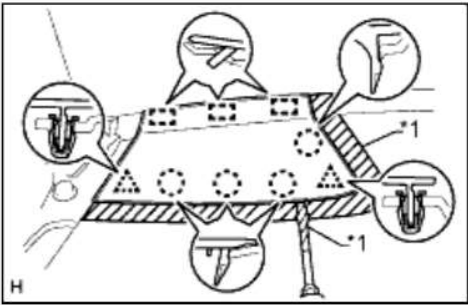


HINT:

Tape the screwdriver tip before use.

Text in Illustration

*1	Protective Tape
----	-----------------

33. REMOVE NO. 2 INSTRUMENT PANEL SPEAKER PANEL

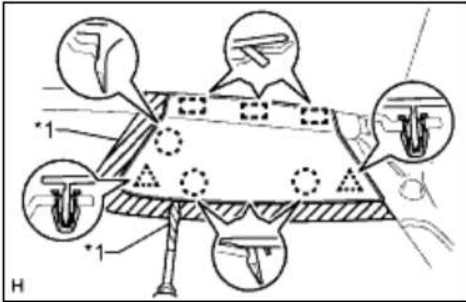SUB-ASSEMBLY

(a) Put protective tape around the No. 2 instrument panel speaker panel.

(b) Using a screwdriver, detach the 2 clips, 3 claws and 3 guides and remove the No. 2 instrument panel speaker panel.

HINT:

Tape the screwdriver tip before use.

Text in Illustration

* 1	Protective Tape
-----	-----------------

34. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY INFO**35. REMOVE DCM (TELEMATICS TRANSCEIVER)** INFO**36. REMOVE FOUR WHEEL DRIVE CONTROL ECU (for 4WD)**

(a) for VF2A :

Remove the four wheel drive control ECU INFO .

(b) for VF4BM :

Remove the four wheel drive control ECU INFO .

37. REMOVE MULTI-MEDIA INTERFACE ECU INFO**38. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY**

(a) Partially remove the floor carpet.

HINT:

It is not necessary to fully remove the floor carpet. Partially remove it so that the No. 2 instrument panel wire can be removed in a later step.


(b) Remove the 6 bolts <E> and nuts <F>.

(c) Remove the 2 passenger airbag bolts, nut labeled A and bolt labeled B.

(d) Remove the 2 bolts, nut and 2 brackets.

(e) Disconnect the connectors and detach the clamps and claws.

(f) Detach the 2 guides and remove the instrument panel safety pad.

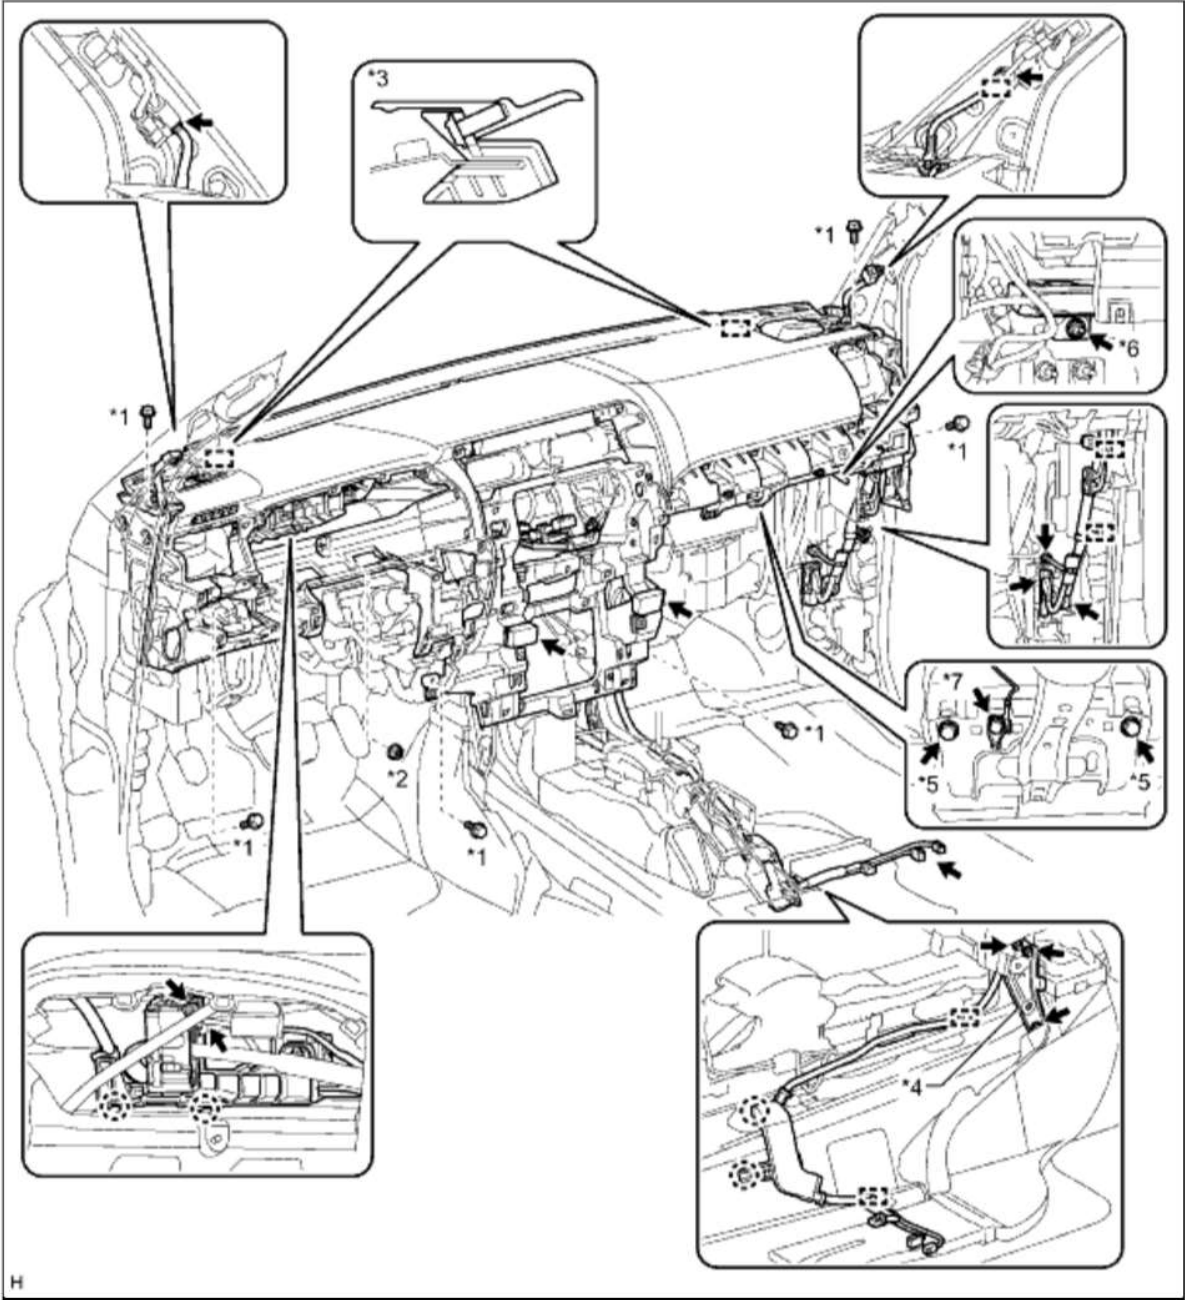


Text in Illustration

* 1	Bolt <E>	* 2	Nut <F>
* 3	Guide	* 4	Bracket
* 5	Passenger Airbag Bolt	* 6	Nut A
* 7	Bolt B	-	-


Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM000004605000X
Title: INTERIOR PANELS / TRIM: INSTRUMENT PANEL SAFETY PAD: DISASSEMBLY (2010 4Runner)		

DISASSEMBLY

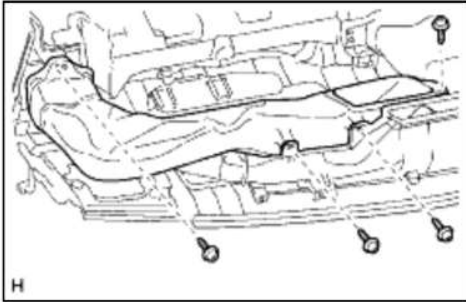


1. REMOVE NO. 1 HEATER TO REGISTER DUCT

- (a) Remove the 4 screws and No. 1 heater to register duct.

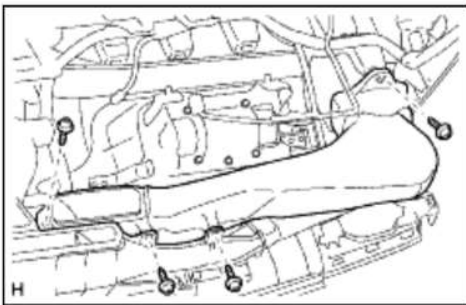

2. REMOVE NO. 2 HEATER TO REGISTER DUCT

- (a) Remove the 4 screws and No. 2 heater to register duct.

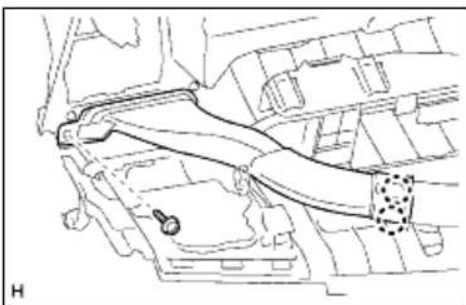


3. REMOVE NO. 1 SIDE DEFROSTER NOZZLE DUCT

- (a) Remove the screw.
(b) Detach the 2 claws and remove the No. 1 side defroster nozzle duct.


4. REMOVE NO. 2 SIDE DEFROSTER NOZZLE DUCT

- (a) Remove the screw.
(b) Detach the 2 claws and remove the No. 2 side defroster nozzle duct.

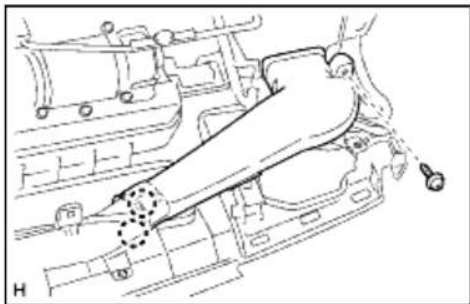


5. REMOVE NO. 3 HEATER TO REGISTER DUCT

- (a) Remove the 2 screws.
- (b) Detach the claw and remove the No. 3 heater to register duct.

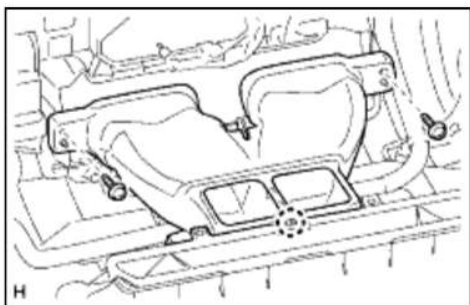

6. REMOVE DEFROSTER NOZZLE ASSEMBLY

- (a) Remove the 3 screws and defroster nozzle.

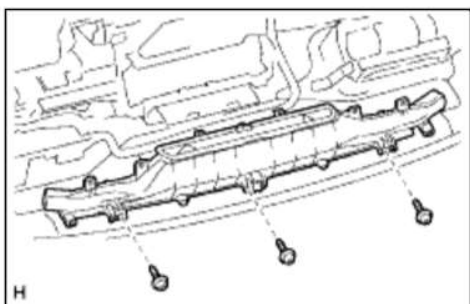


7. REMOVE ACCESSORY METER ASSEMBLY



8. REMOVE NO. 2 INSTRUMENT PANEL WIRE

- (a) Disconnect the connector.
- (b) Detach the 15 clamps and remove the No. 2 instrument panel wire.

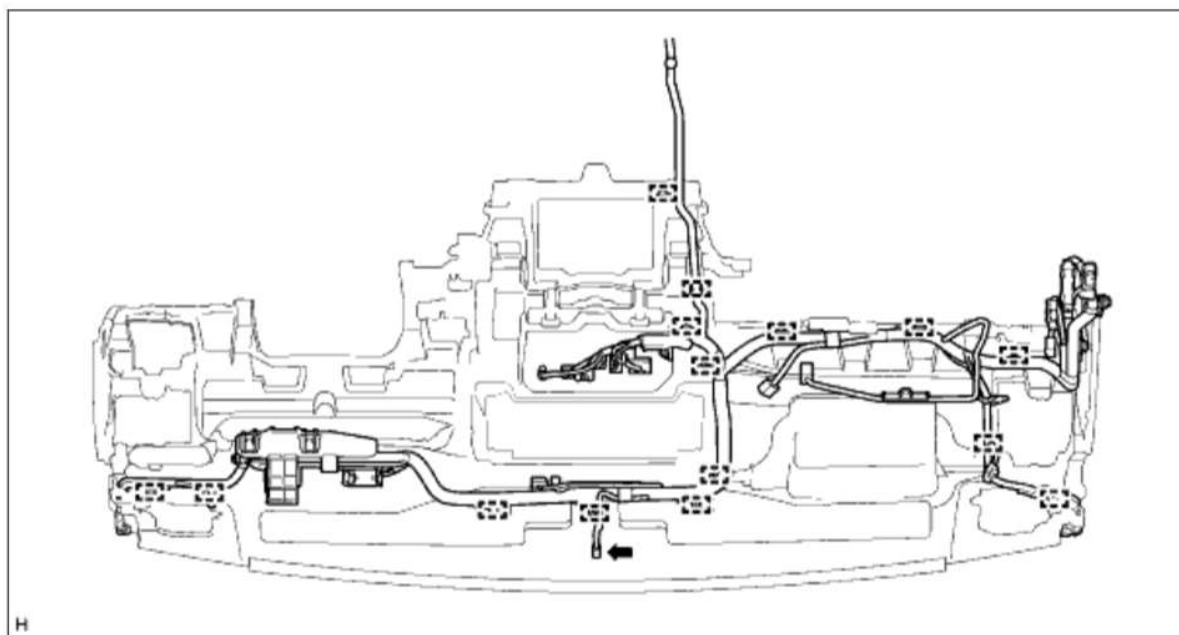

9. REMOVE INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY

INFO

10. REMOVE AUTOMATIC LIGHT CONTROL SENSOR

INFO

11. REMOVE NAVIGATION ANTENNA ASSEMBLY (w/ Navigation System)

INFO

12. REMOVE TELLTALE LIGHT ASSEMBLY

INFO

13. REMOVE SECURITY INDICATOR LIGHT ASSEMBLY

INFO



Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM000004602000X
Title: INTERIOR PANELS / TRIM: INSTRUMENT PANEL SAFETY PAD: INSTALLATION (2010 4Runner)		

INSTALLATION

HINT:


A bolt without a torque specification is shown in the standard bolt chart  .

1. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY

- (a) Attach the 2 guides to install the instrument panel safety pad.
- (b) Install the bracket with the 2 bolts and nut.
- (c) Connect the connectors and attach the clamps and claws.
- (d) Install the 2 passenger airbag bolts.

Torque: 20 N·m (204 kgf·cm, 15ft·lbf)

- (e) Install the nut labeled A and bolt labeled B.
- (f) Install the 6 bolts <E> and nut <F>.
- (g) Install the front floor carpet.

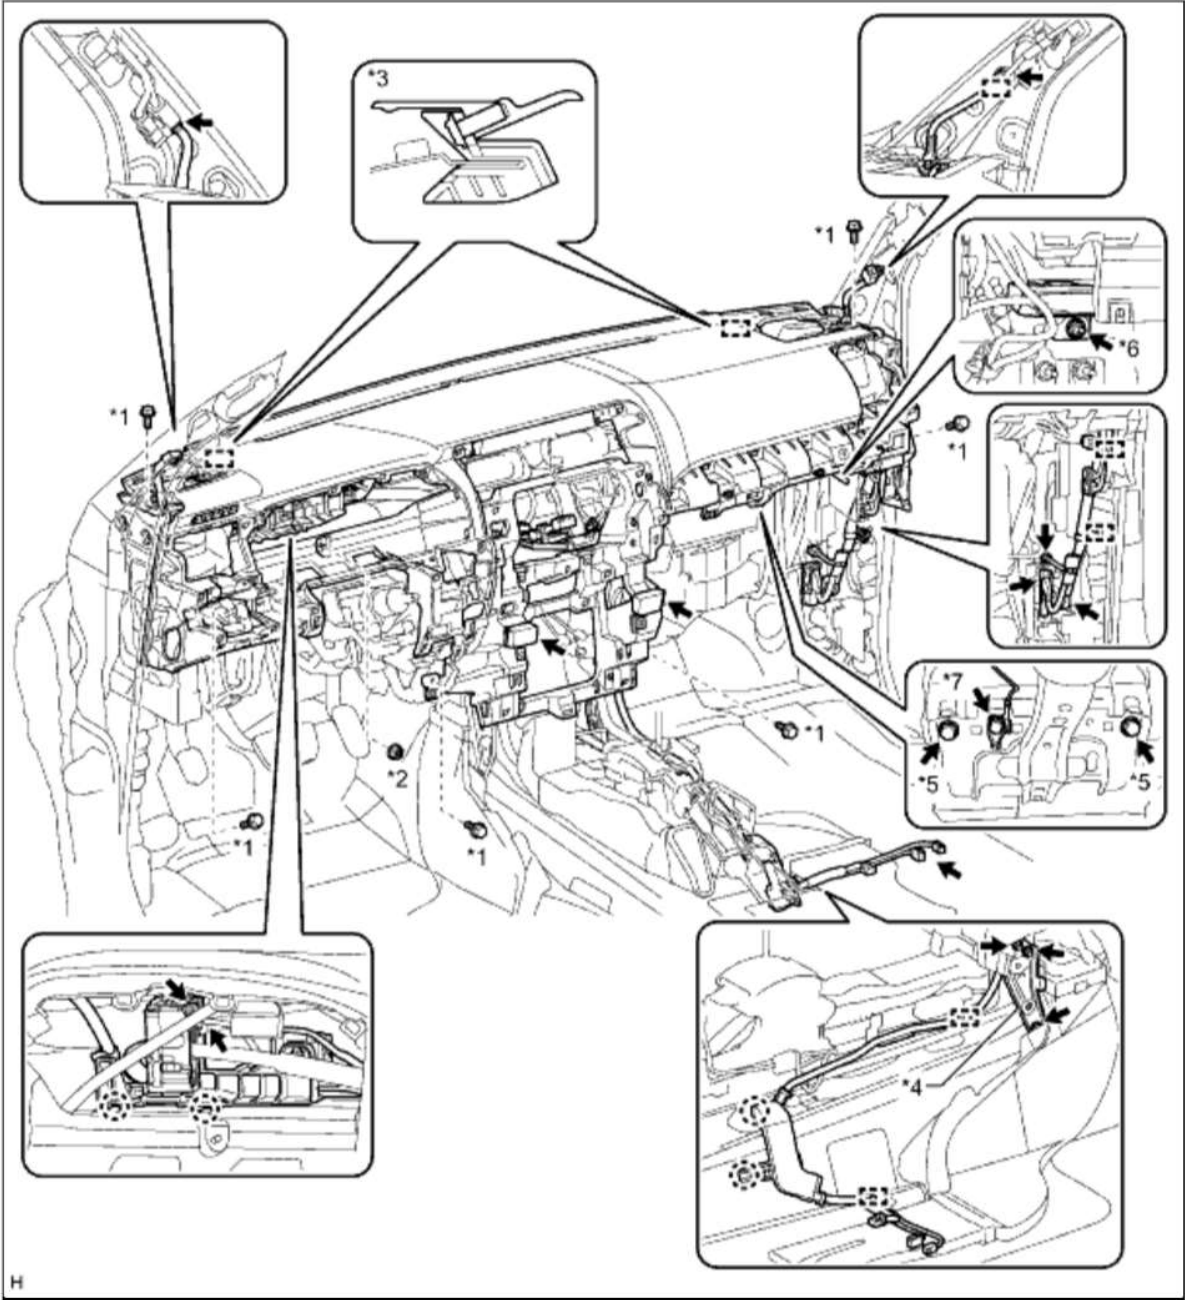

Text in Illustration

* 1	Bolt <E>	* 2	Nut <F>
* 3	Guide	* 4	Bracket
* 5	Passenger Airbag Bolt	* 6	Nut A
* 7	Bolt B	-	-

2. INSTALL MULTI-MEDIA INTERFACE ECU [INFO](#)

3. INSTALL FOUR WHEEL DRIVE CONTROL ECU (for 4WD)

(a) for VF2A :

Install the four wheel drive control ECU .

(b) for VF4BM:

Install the four wheel drive control ECU .

4. INSTALL DCM (TELEMATICS TRANSCEIVER)

5. INSTALL FRONT NO. 2 SPEAKER ASSEMBLY

6. INSTALL NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

(a) Attach the 2 clips, 4 claws and 3 guides to install the No. 1 instrument panel speaker panel.

7. INSTALL NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

(a) Attach the 2 clips, 3 claws and 3 guides to install the No. 2 instrument panel speaker panel.

8. INSTALL NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY

(a) Attach the 4 clips and 2 guides to install the No. 1 instrument panel register.

9. INSTALL NO. 2 INSTRUMENT PANEL REGISTER ASSEMBLY

HINT:

Use the same procedure described for the No. 1 instrument panel register.

10. INSTALL LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

(a) Connect each connector.

(b) Attach the 4 clips to install the lower center instrument cluster finish panel.

(c) Install the 2 screws .

11. INSTALL NAVIGATION RECEIVER ASSEMBLY (w/ Navigation System)

12. INSTALL RADIO RECEIVER ASSEMBLY (w/o Navigation System)

13. INSTALL HEATER CONTROL ASSEMBLY

14. INSTALL LOWER INSTRUMENT PANEL SUB-ASSEMBLY

(a) Connect each connector.

(b) Attach the 10 clips to install the lower instrument panel.

(c) Install the 3 screws and 2 bolts <C>.

15. INSTALL INSTRUMENT PANEL BOX DOOR COVER

(a) Attach the 2 claws and 2 guides to install the instrument panel box door cover.

16. INSTALL LOWER NO. 2 INSTRUMENT PANEL AIRBAG ASSEMBLY

17. INSTALL LOWER INSTRUMENT COVER LH

(a) Attach the 4 claws to install the lower instrument cover.

18. INSTALL NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY

(a) Attach the 3 clips and 2 guides to install the No. 2 instrument panel under cover.

19. INSTALL LOWER NO. 1 INSTRUMENT PANEL AIRBAG ASSEMBLY

20. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY

- (a) Connect each connector and cable.
- (b) Attach the 13 clips and 2 guides to install the lower instrument panel finish panel.
- (c) Install the 2 bolts <C>.

21. INSTALL COMBINATION METER ASSEMBLY **22. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY**

- (a) Attach the 7 clips to install the instrument cluster finish panel.

23. INSTALL NO. 2 SWITCH HOLE BASE

- (a) Connect each connector.
- (b) Attach the 6 clips and 2 guides to install the No. 2 switch hole base.

24. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL ASSEMBLY

- (a) w/o Smart Key System:
 - (1) Connect the cooler thermistor.
 - (2) Attach the 4 clips to install the lower instrument panel finish panel.
- (b) w/ Smart Key System:
 - (1) Connect the connector and cooler thermistor.
 - (2) Attach the 4 clips to install the lower instrument panel finish panel.

25. INSTALL FRONT PILLAR GARNISH LH **26. INSTALL FRONT PILLAR GARNISH RH** **27. INSTALL NO. 1 ASSIST GRIP** **28. INSTALL ASSIST GRIP PLUG** **29. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH** **30. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH****HINT:**

Use the same procedure described for the LH side.

31. INSTALL COWL SIDE TRIM BOARD LH **32. INSTALL COWL SIDE TRIM BOARD RH****HINT:**

Use the same procedure described for the LH side.

33. INSTALL DOOR SCUFF PLATE ASSEMBLY LH **34. INSTALL DOOR SCUFF PLATE ASSEMBLY RH****HINT:**

Use the same procedure described for the LH side.

35. INSTALL REAR CONSOLE BOX ASSEMBLY

(a) for 1GR-FE:

Install the rear console box assembly .

(b) for 2TR-FE:

Install the rear console box assembly .

36. INSTALL HEADLIGHT DIMMER SWITCH ASSEMBLY

(a) Install the headlight dimmer switch assembly .

37. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected .

38. CHECK SRS WARNING LIGHT

(a) Check the SRS warning light .



Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM000004606000X
Title: INTERIOR PANELS / TRIM: INSTRUMENT PANEL SAFETY PAD: REASSEMBLY (2010 4Runner)		

REASSEMBLY

1. INSTALL SECURITY INDICATOR LIGHT ASSEMBLY



2. INSTALL TELLTALE LIGHT ASSEMBLY



3. INSTALL NAVIGATION ANTENNA ASSEMBLY (w/ Navigation System)



4. INSTALL AUTOMATIC LIGHT CONTROL SENSOR



5. INSTALL INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY



6. INSTALL NO. 2 INSTRUMENT PANEL WIRE

- (a) Attach the 15 clamps to install the No. 2 instrument panel wire.
- (b) Connect the connector.

7. INSTALL ACCESSORY METER ASSEMBLY



8. INSTALL DEFROSTER NOZZLE ASSEMBLY

- (a) Install the defroster nozzle with the 3 screws.

9. INSTALL NO. 3 HEATER TO REGISTER DUCT

- (a) Attach the claw to install the No. 3 heater to register duct.
- (b) Install the 2 screws.

10. INSTALL NO. 2 SIDE DEFROSTER NOZZLE DUCT

- (a) Attach the 2 claws to install the No. 2 side defroster nozzle duct.
- (b) Install the screw.

11. INSTALL NO. 1 SIDE DEFROSTER NOZZLE DUCT

- (a) Attach the 2 claws to install the No. 1 side defroster nozzle duct.
- (b) Install the screw.

12. INSTALL NO. 2 HEATER TO REGISTER DUCT

- (a) Install the No. 2 heater to register duct with the 4 screws.

13. INSTALL NO. 1 HEATER TO REGISTER DUCT


- (a) Install the No. 1 heater to register duct with the 4 screws.




Last Modified: 5-10-2010	6.4 K	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM00000460F000X
Title: INTERIOR PANELS / TRIM: ROOF HEADLINING: COMPONENTS (2010 4Runner)		

COMPONENTS


ILLUSTRATION

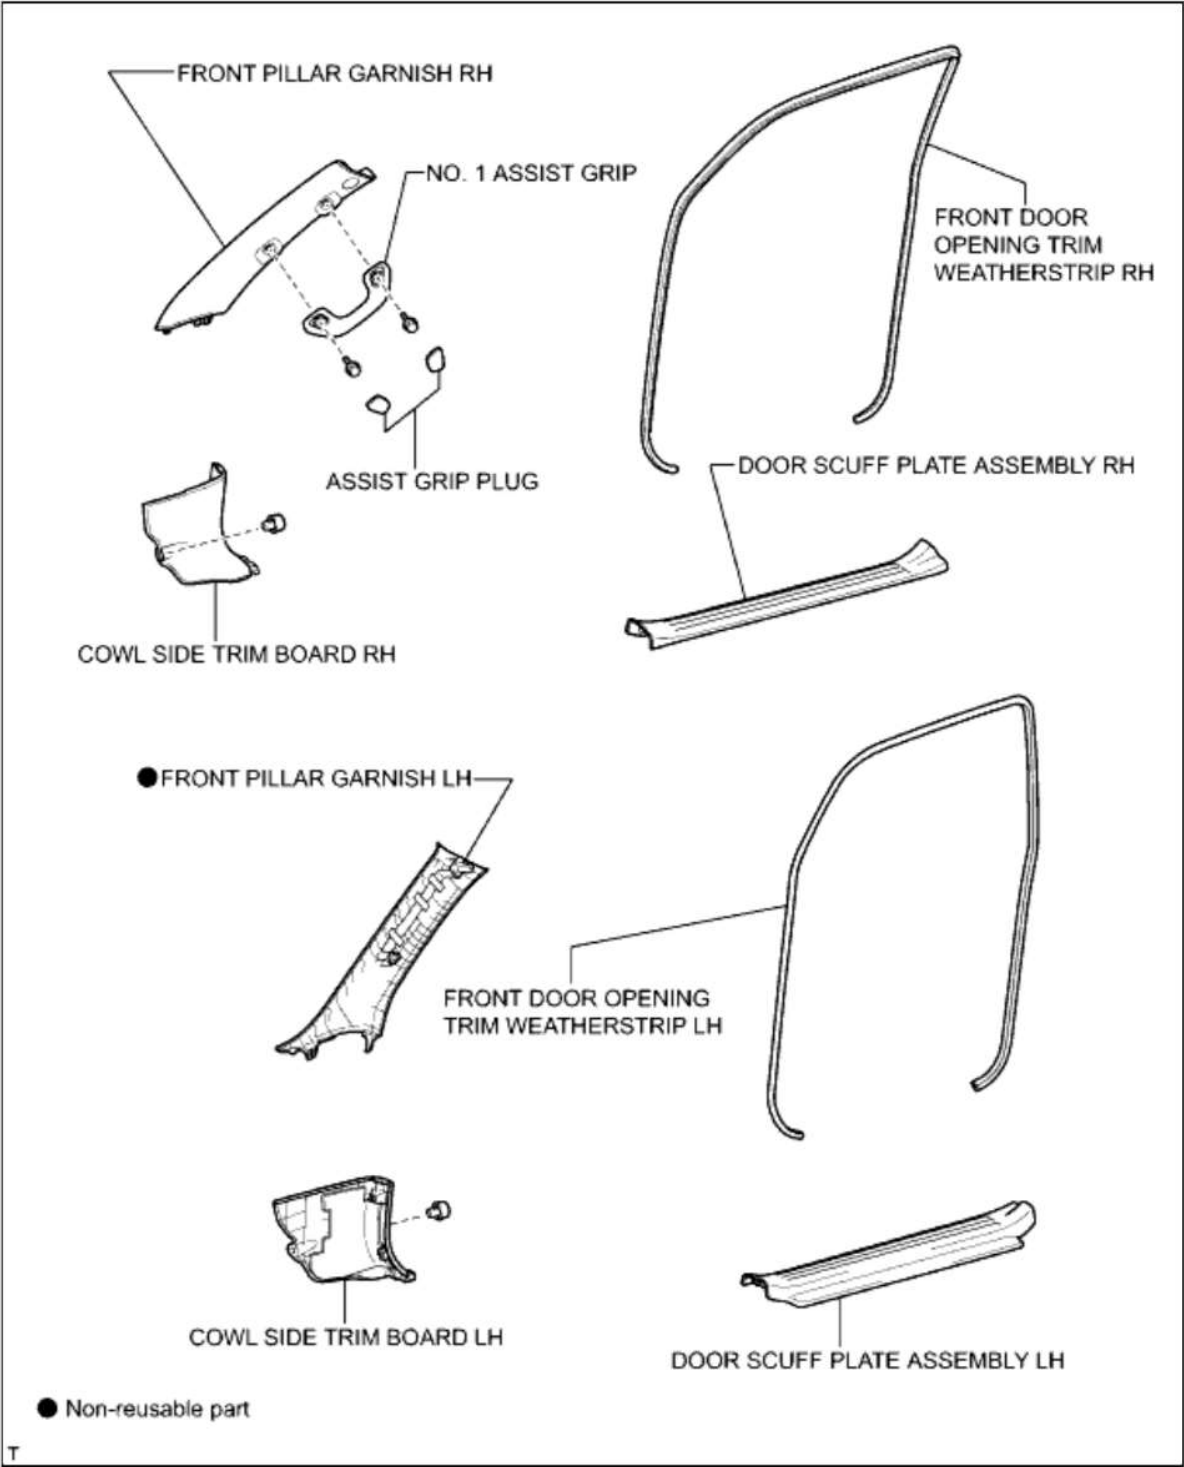


ILLUSTRATION

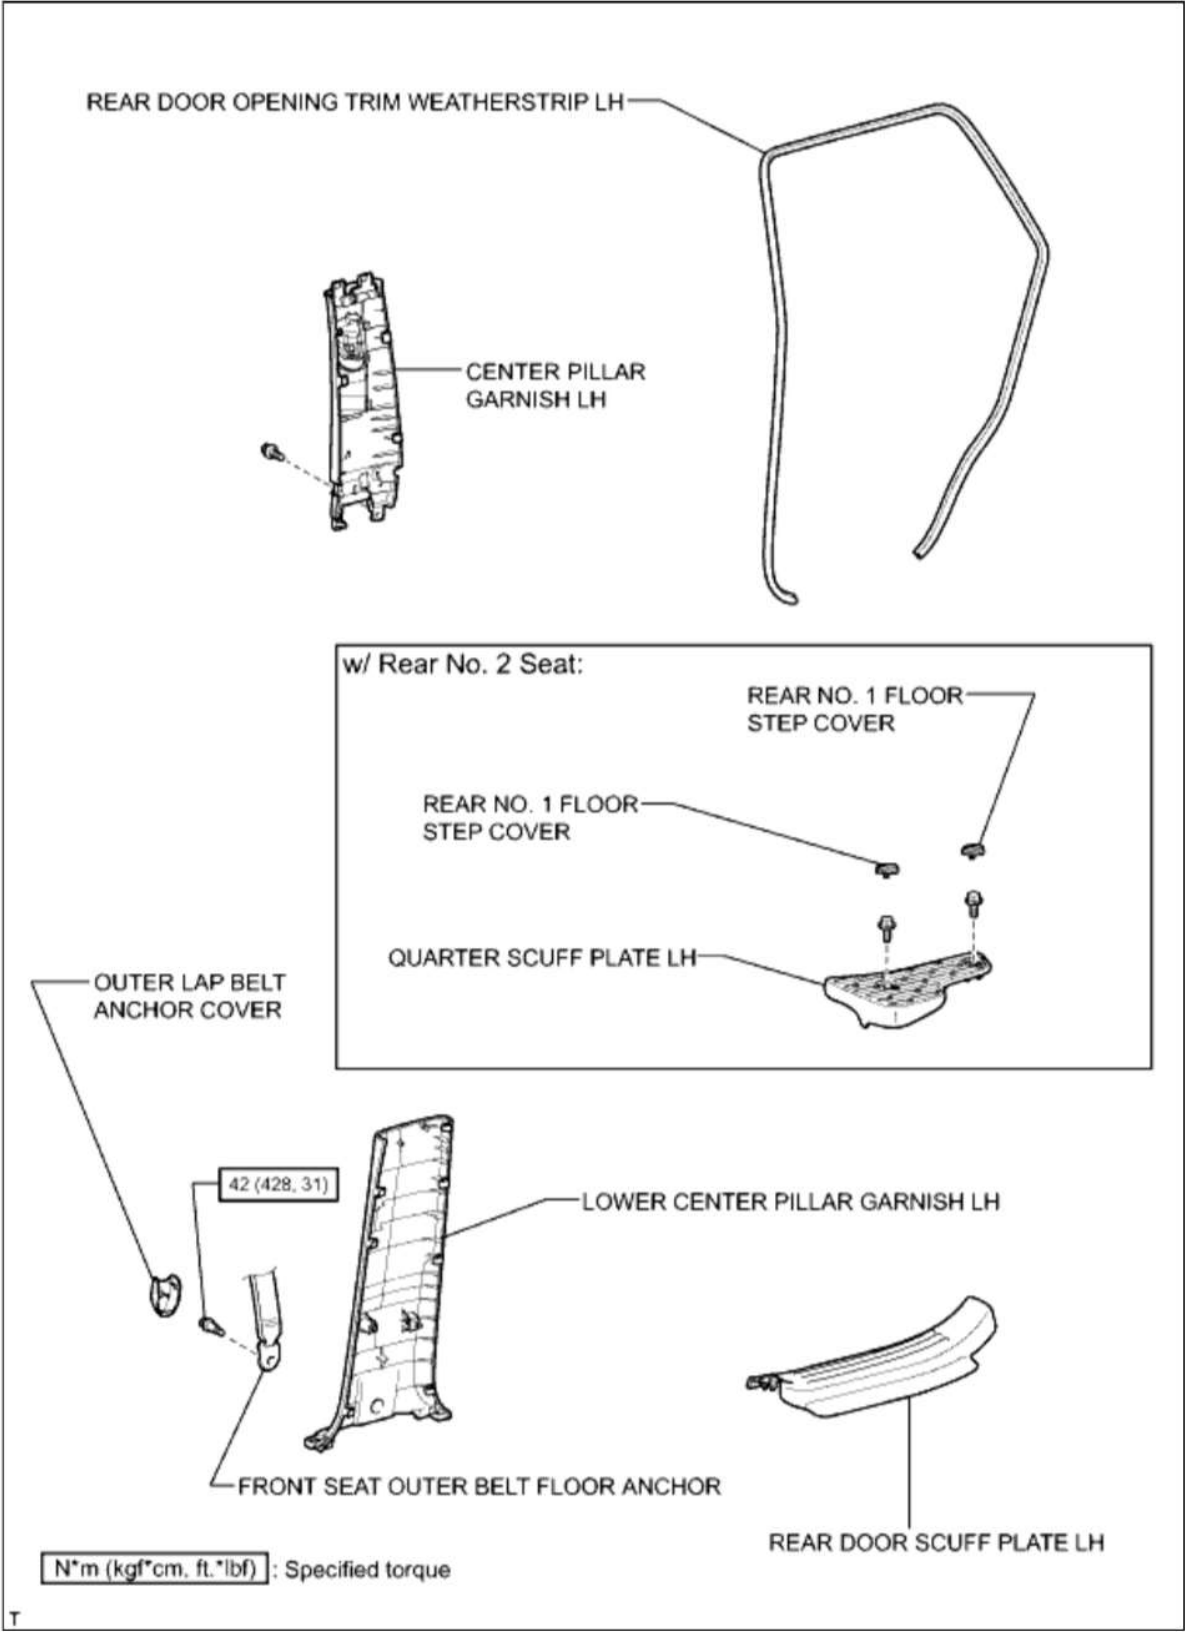


ILLUSTRATION

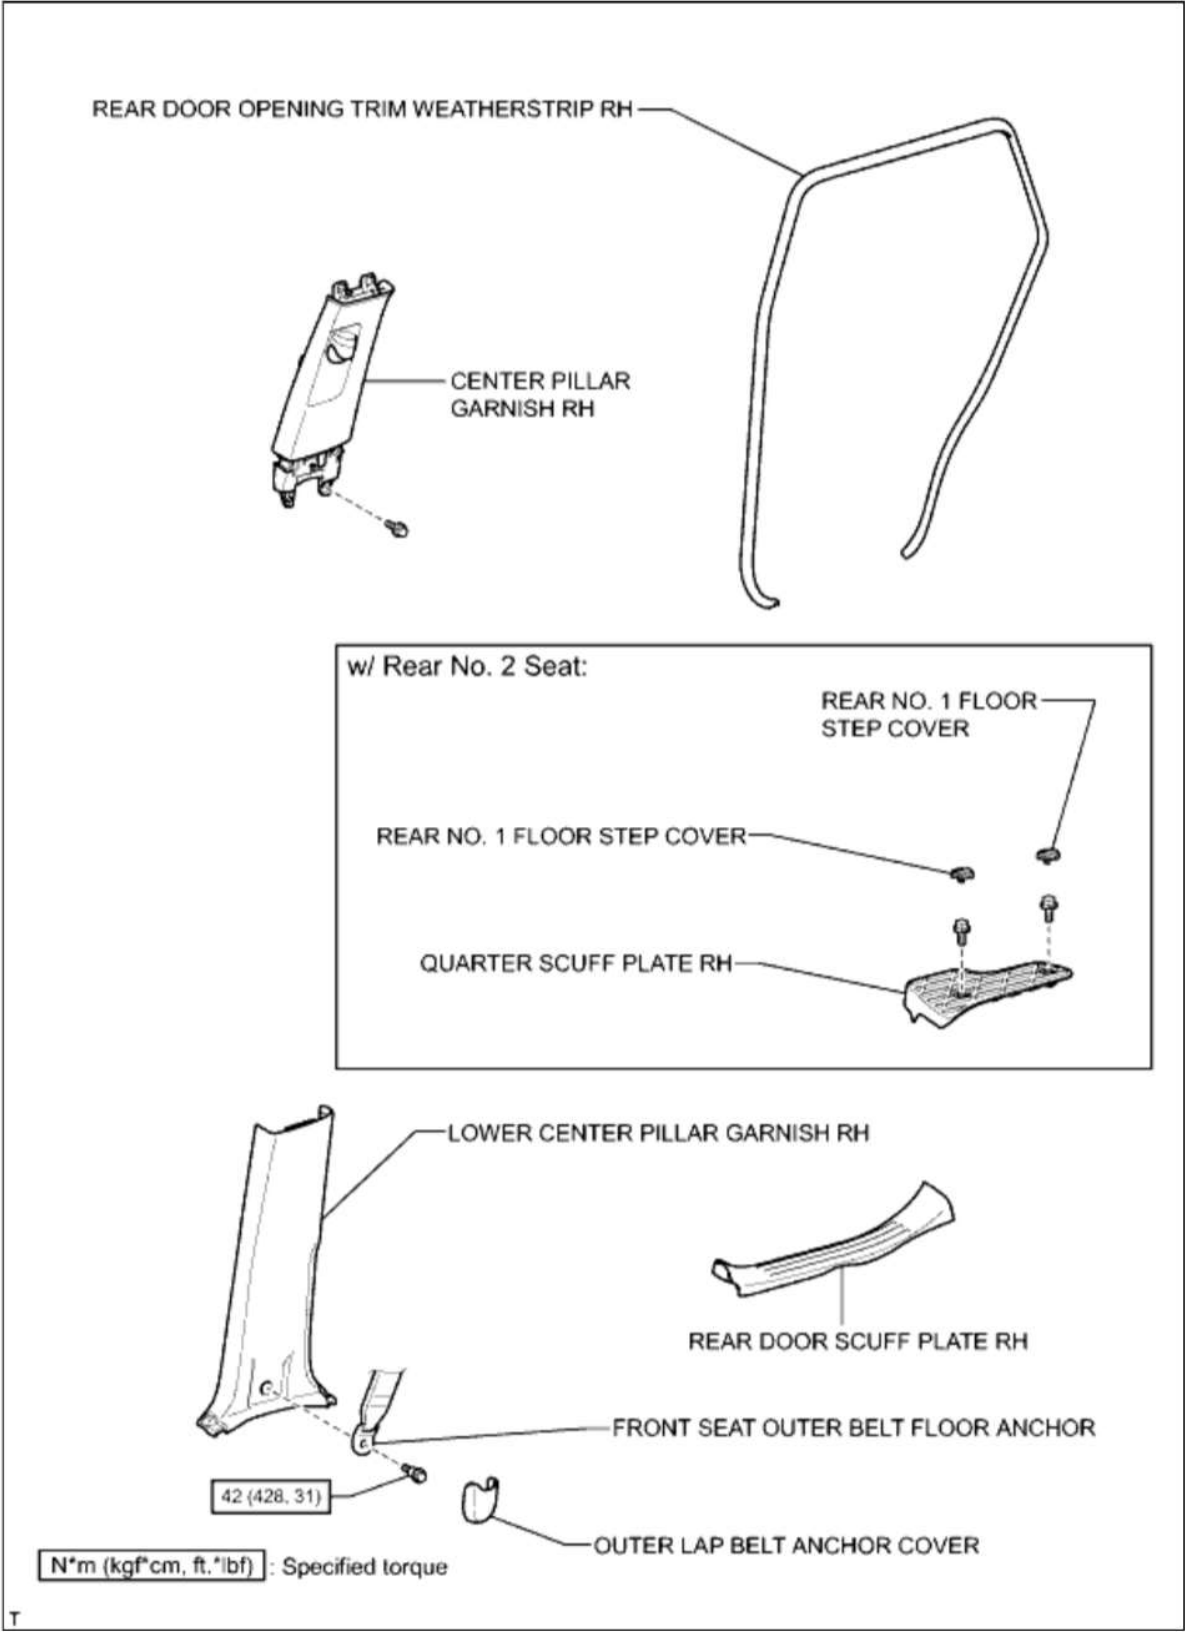


ILLUSTRATION

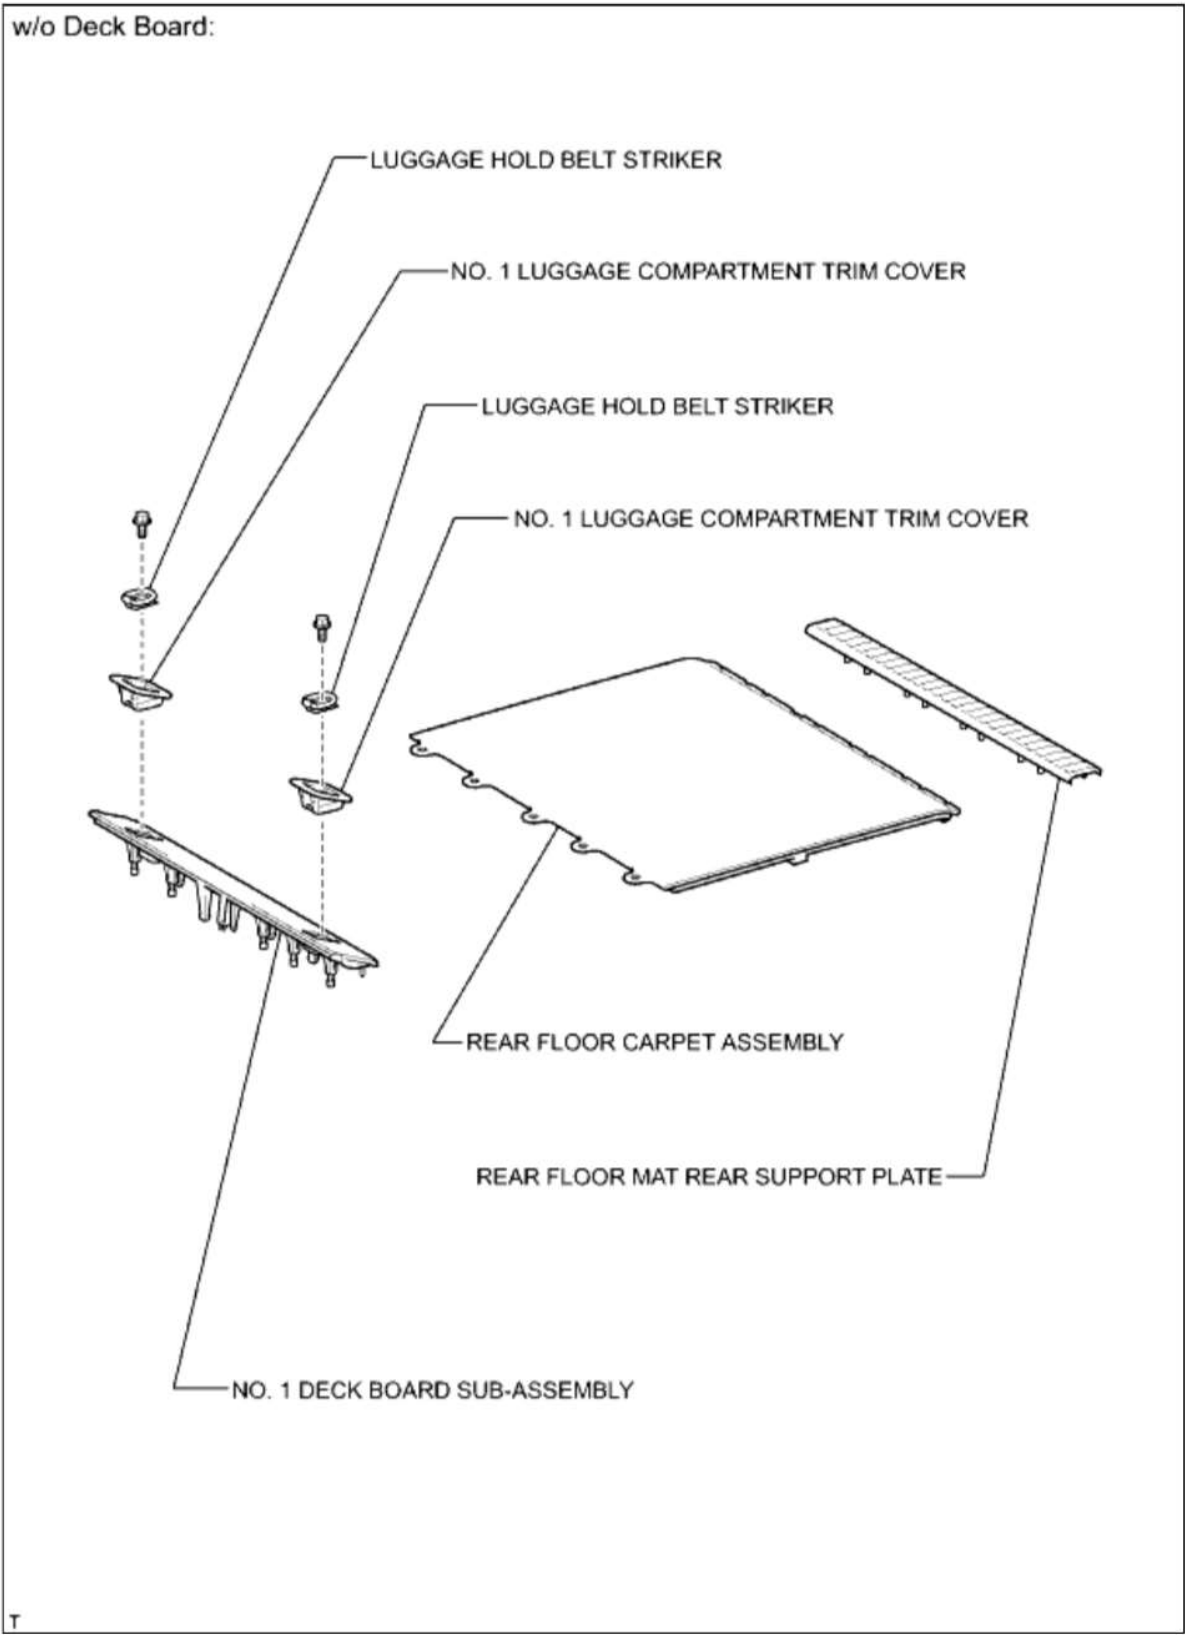


ILLUSTRATION

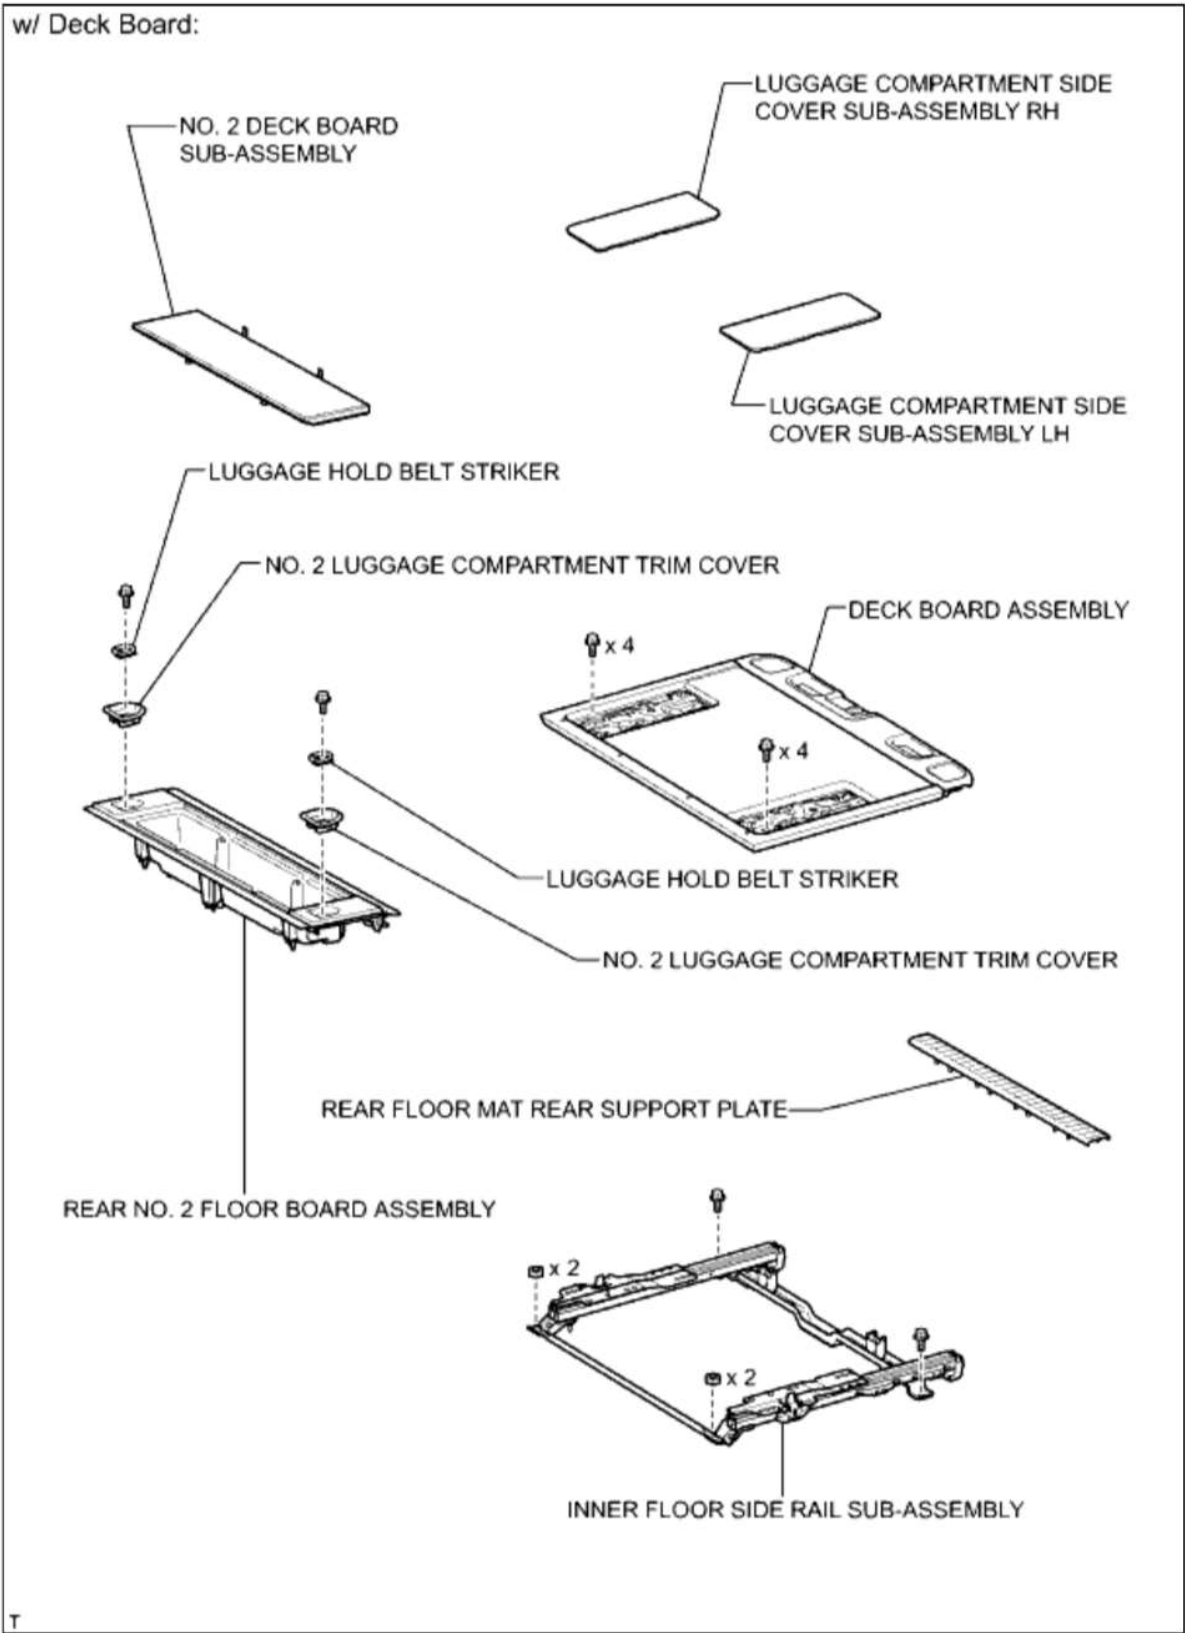


ILLUSTRATION

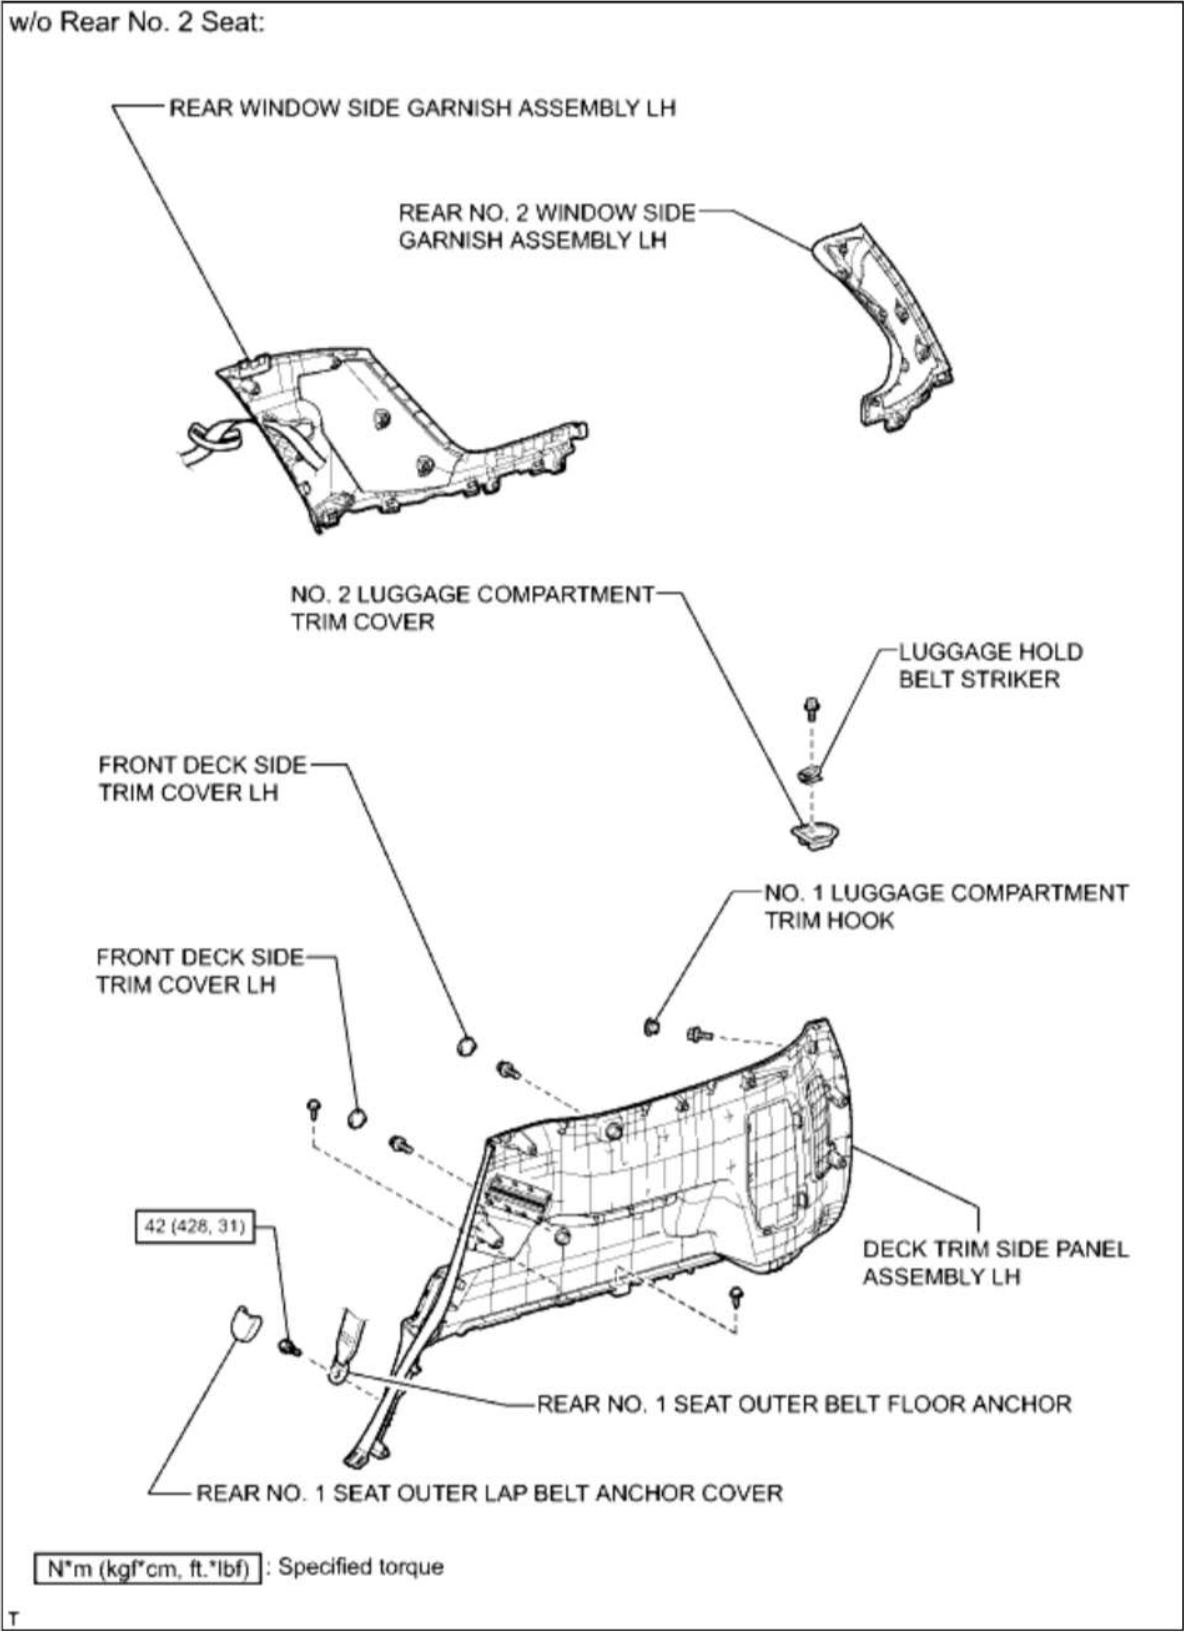


ILLUSTRATION

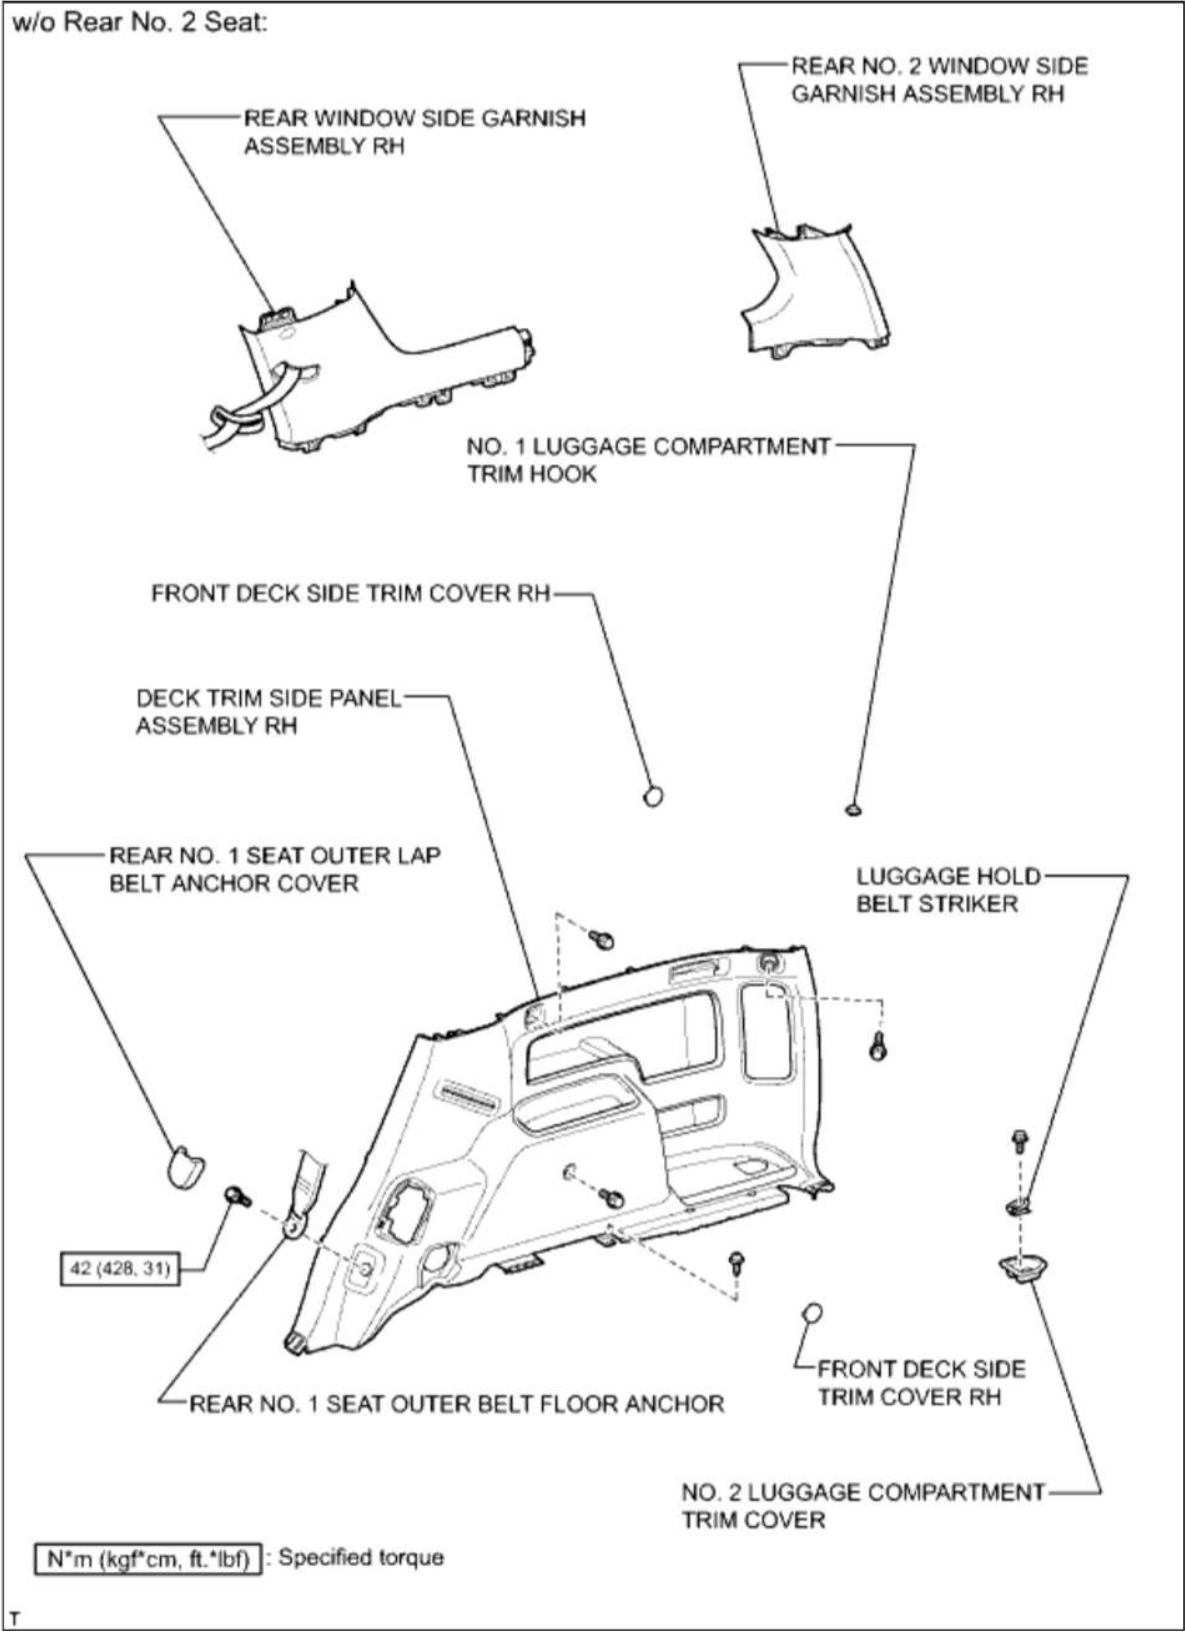


ILLUSTRATION

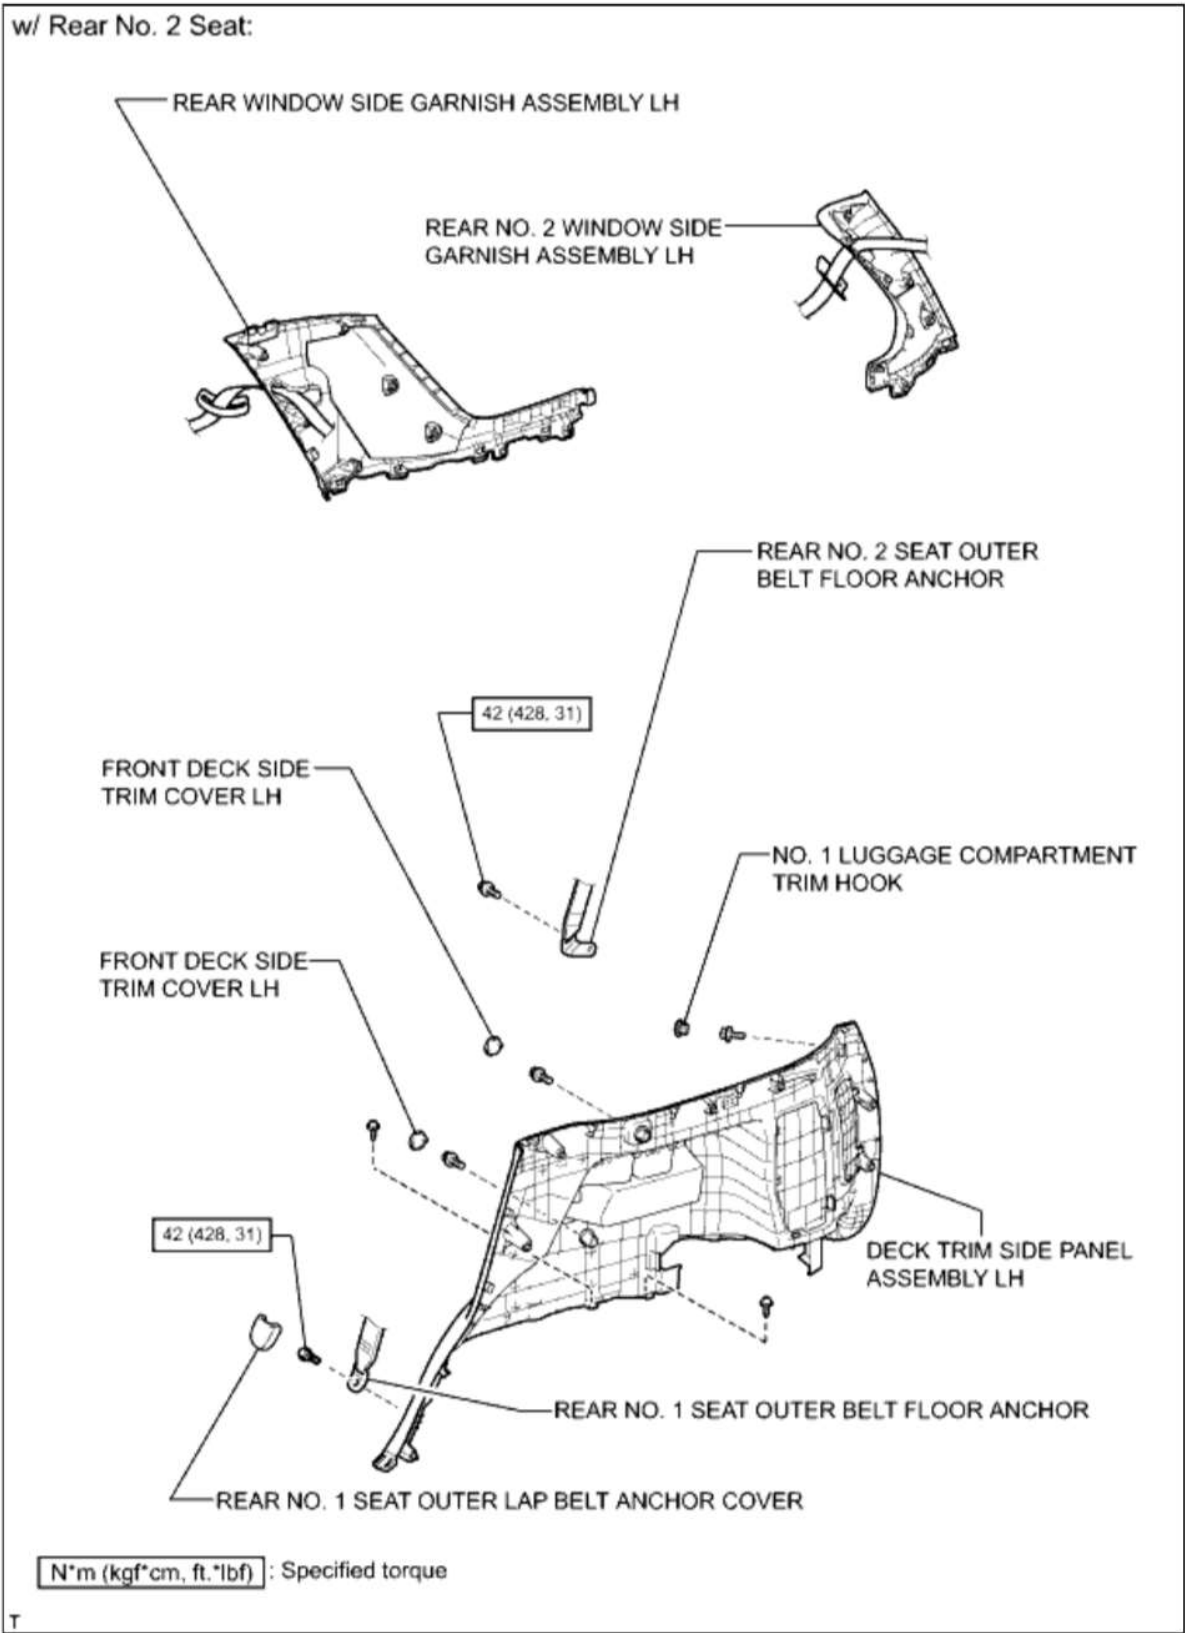


ILLUSTRATION

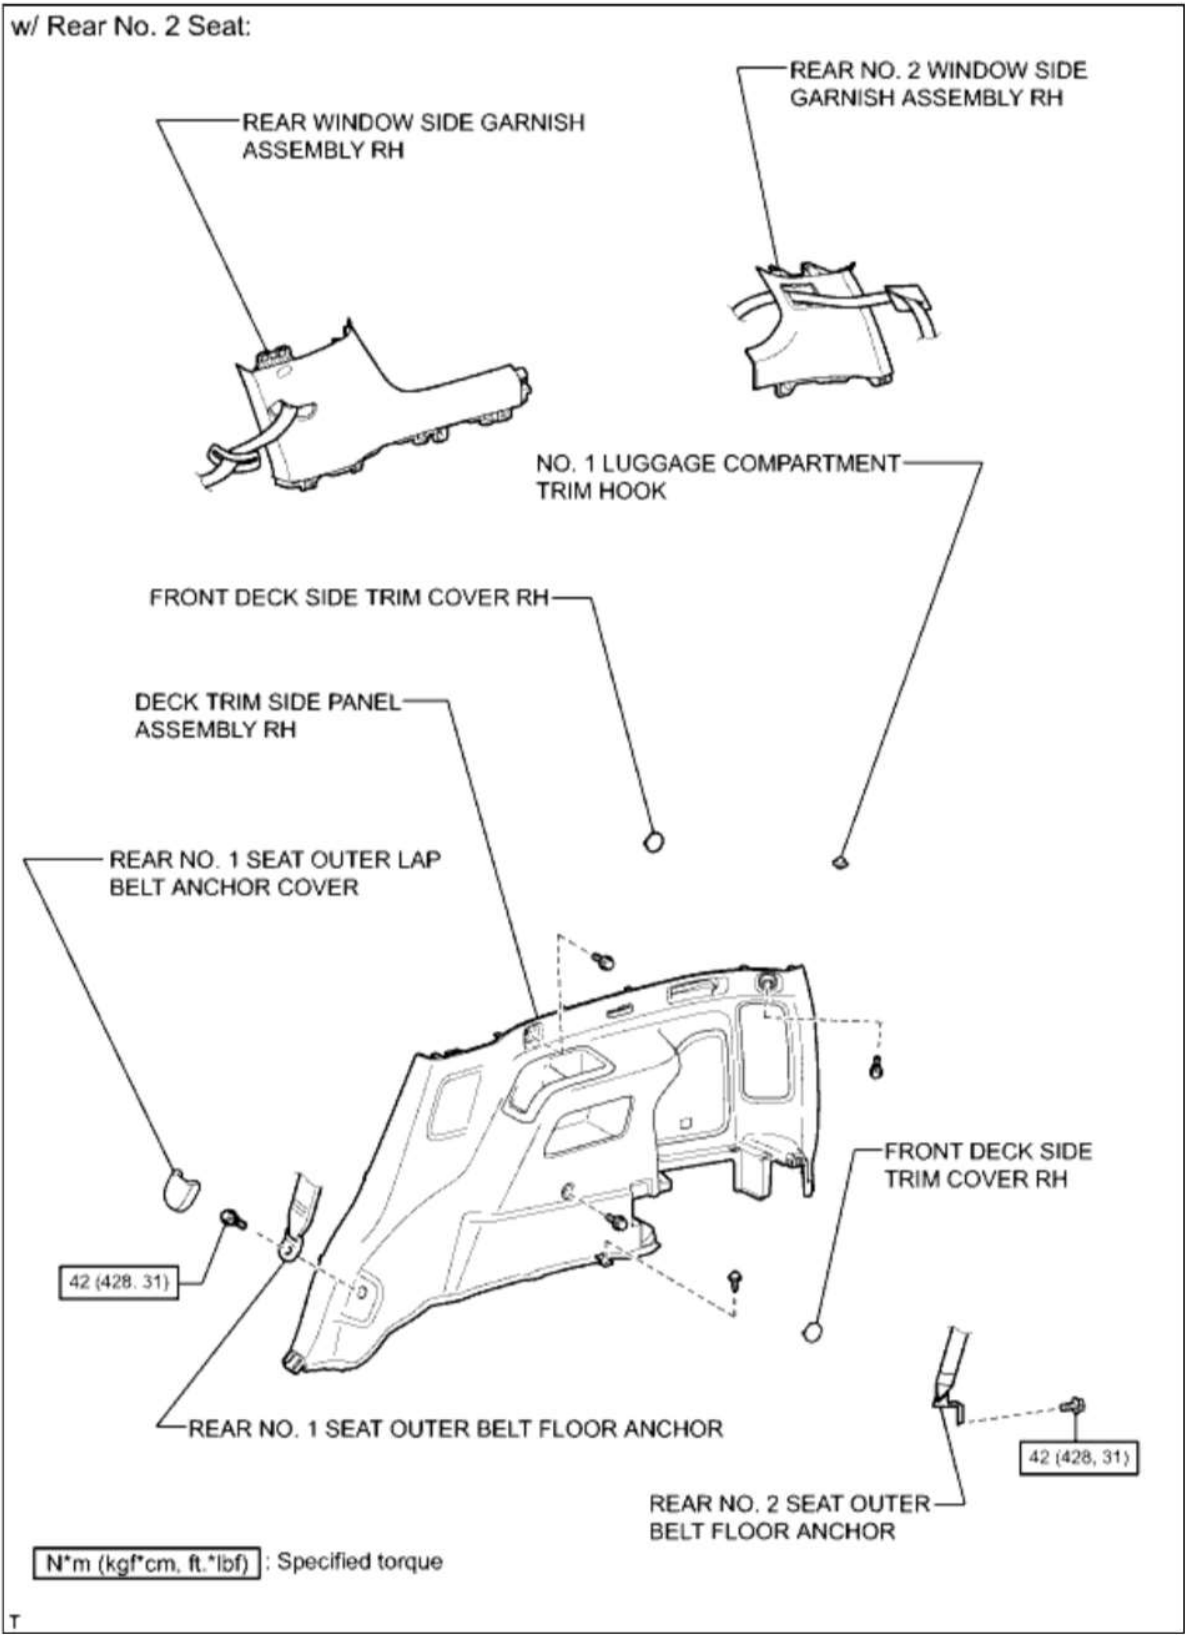


ILLUSTRATION

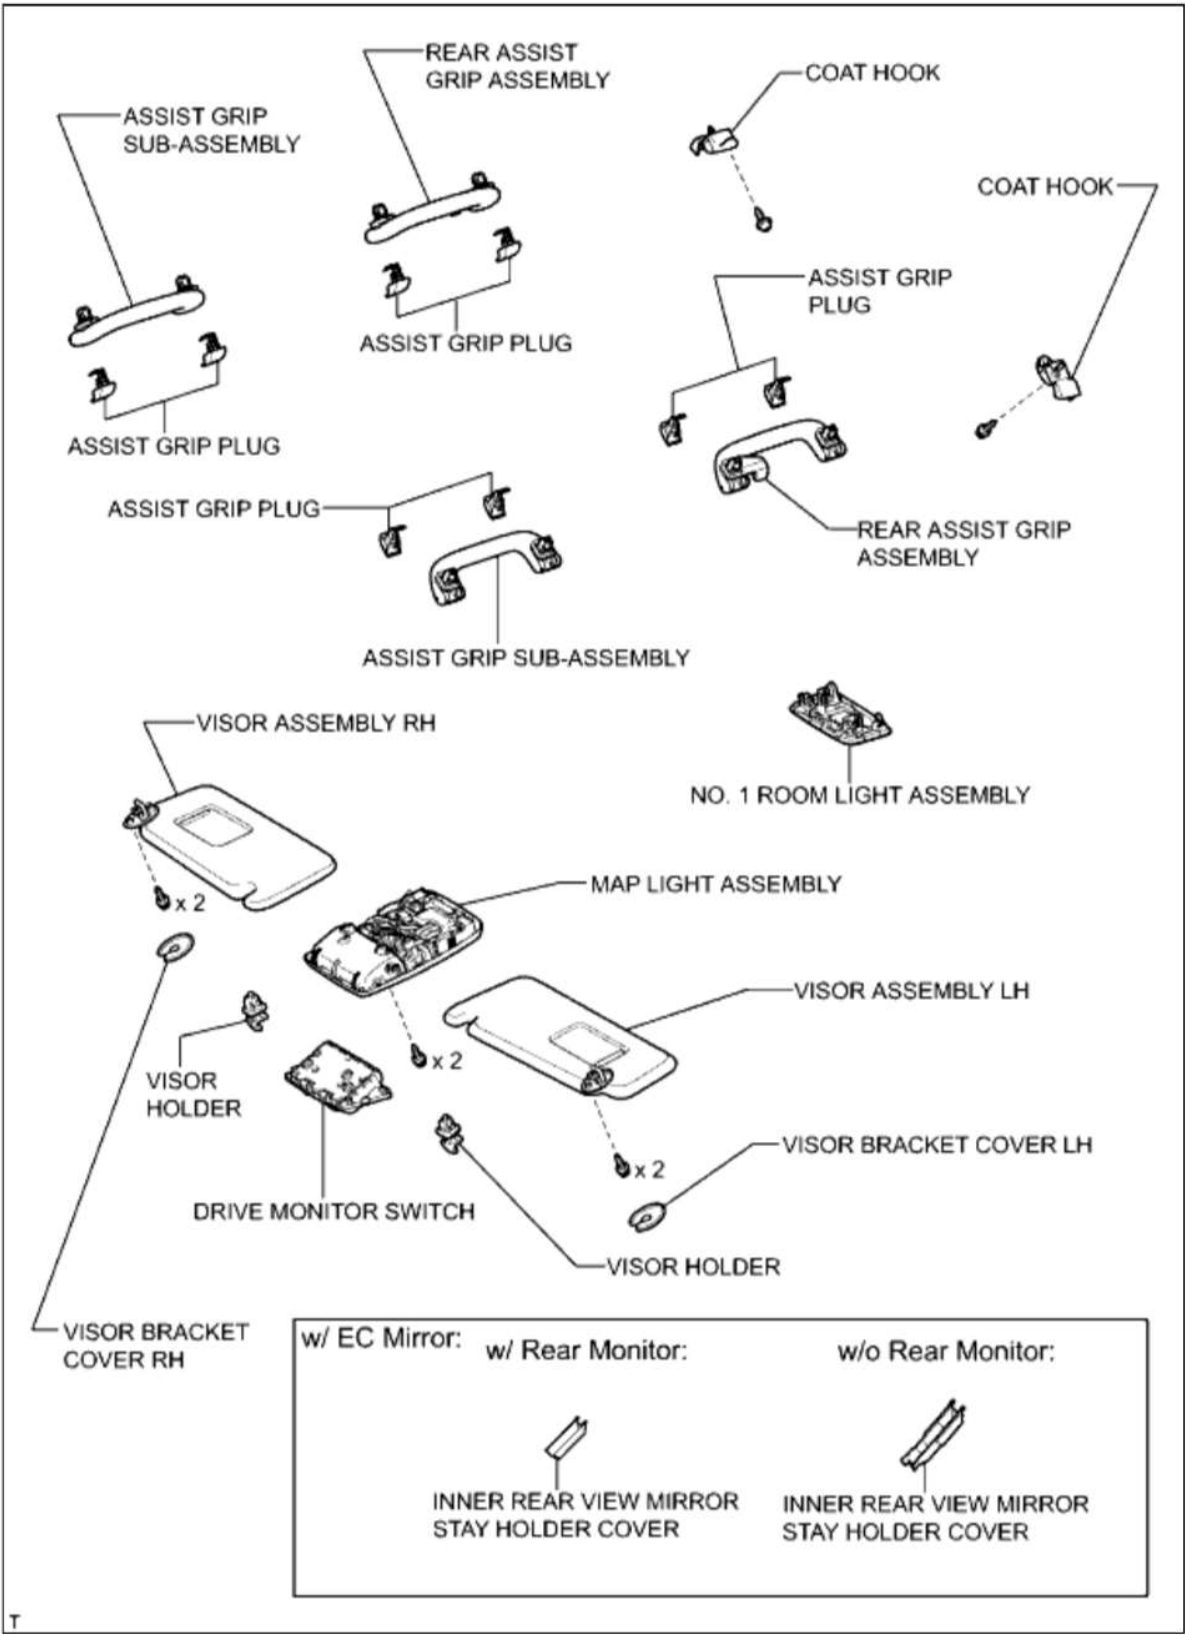


ILLUSTRATION

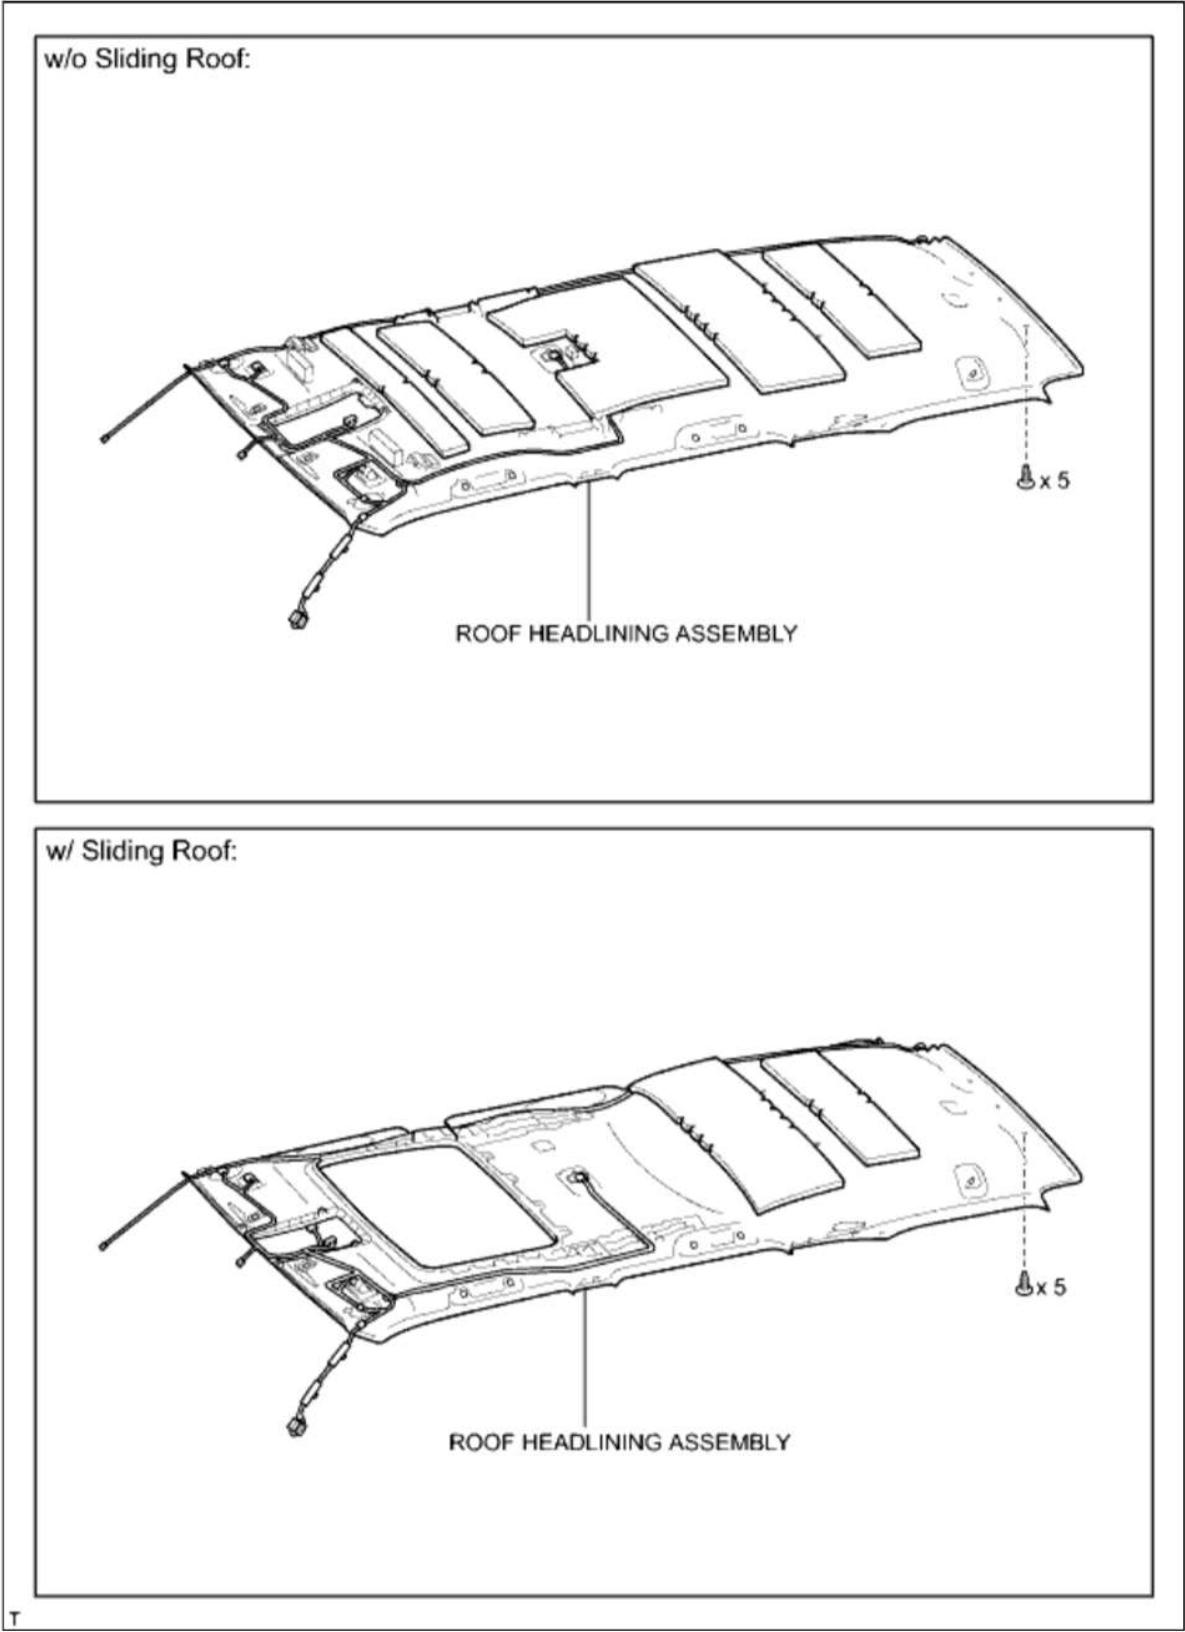


ILLUSTRATION

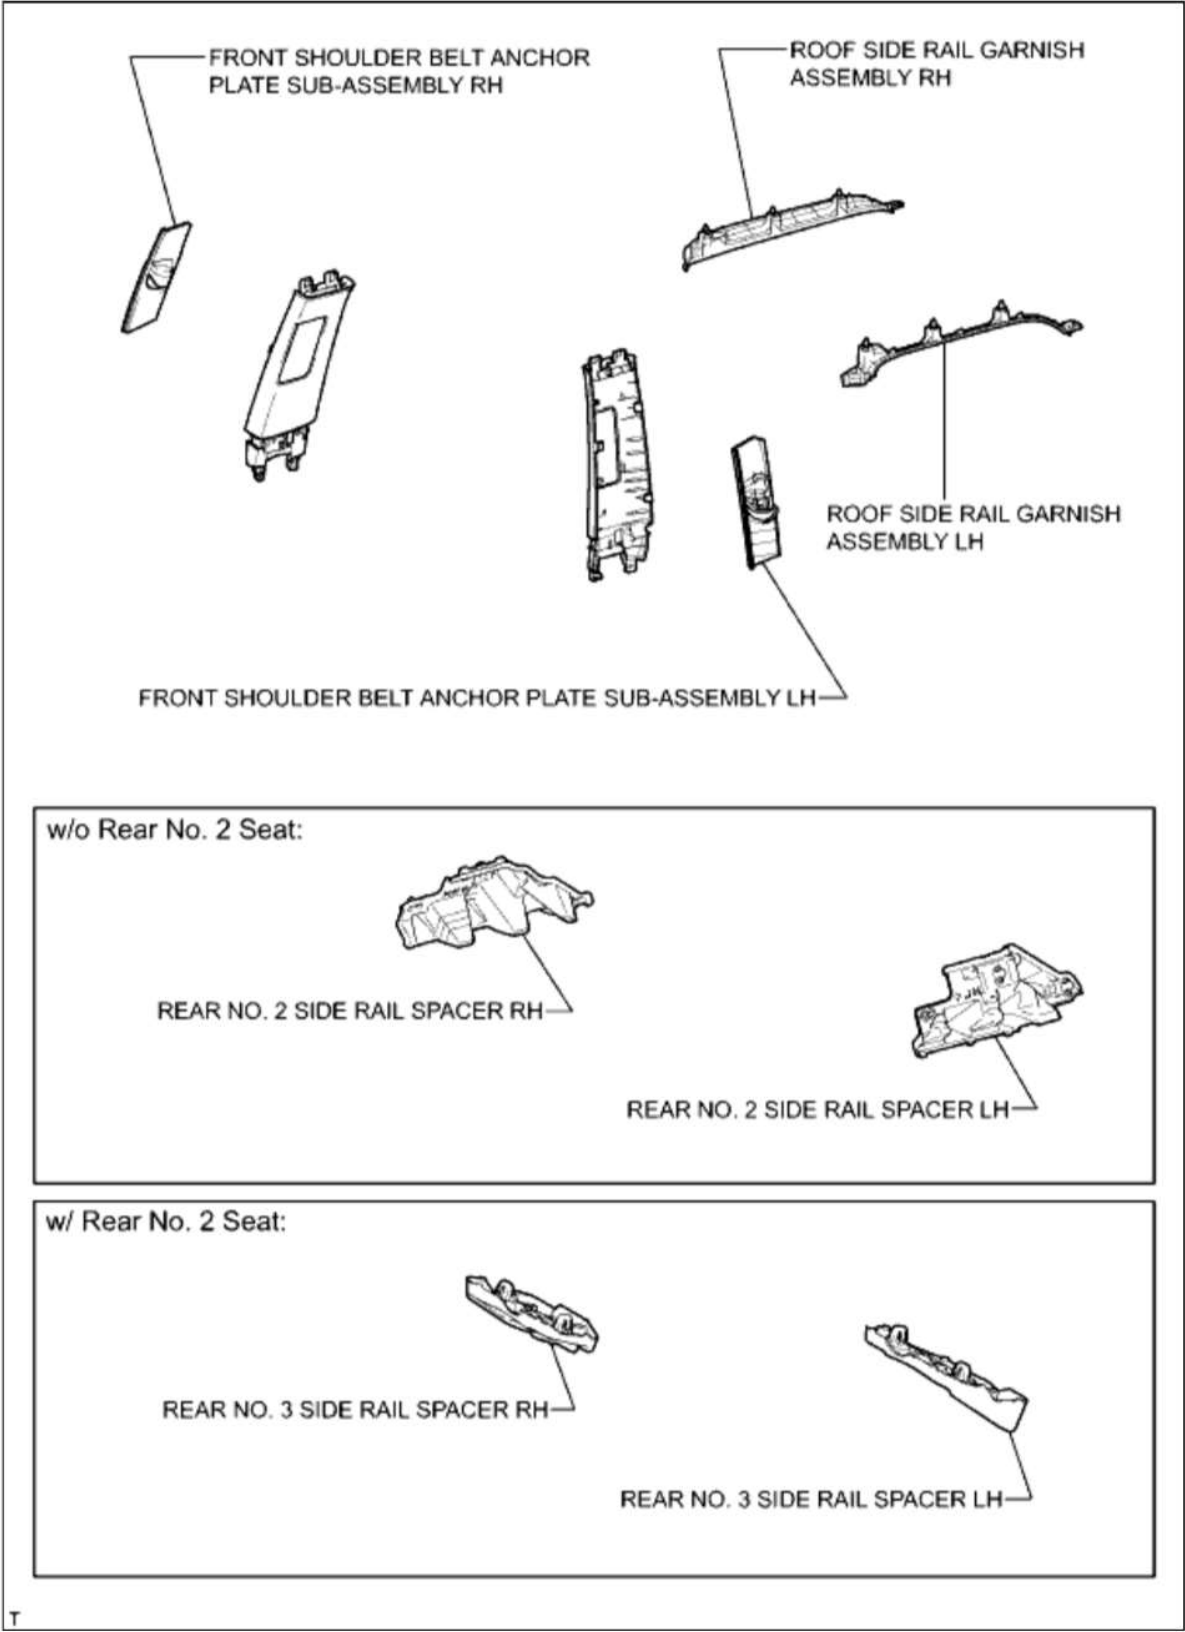


ILLUSTRATION

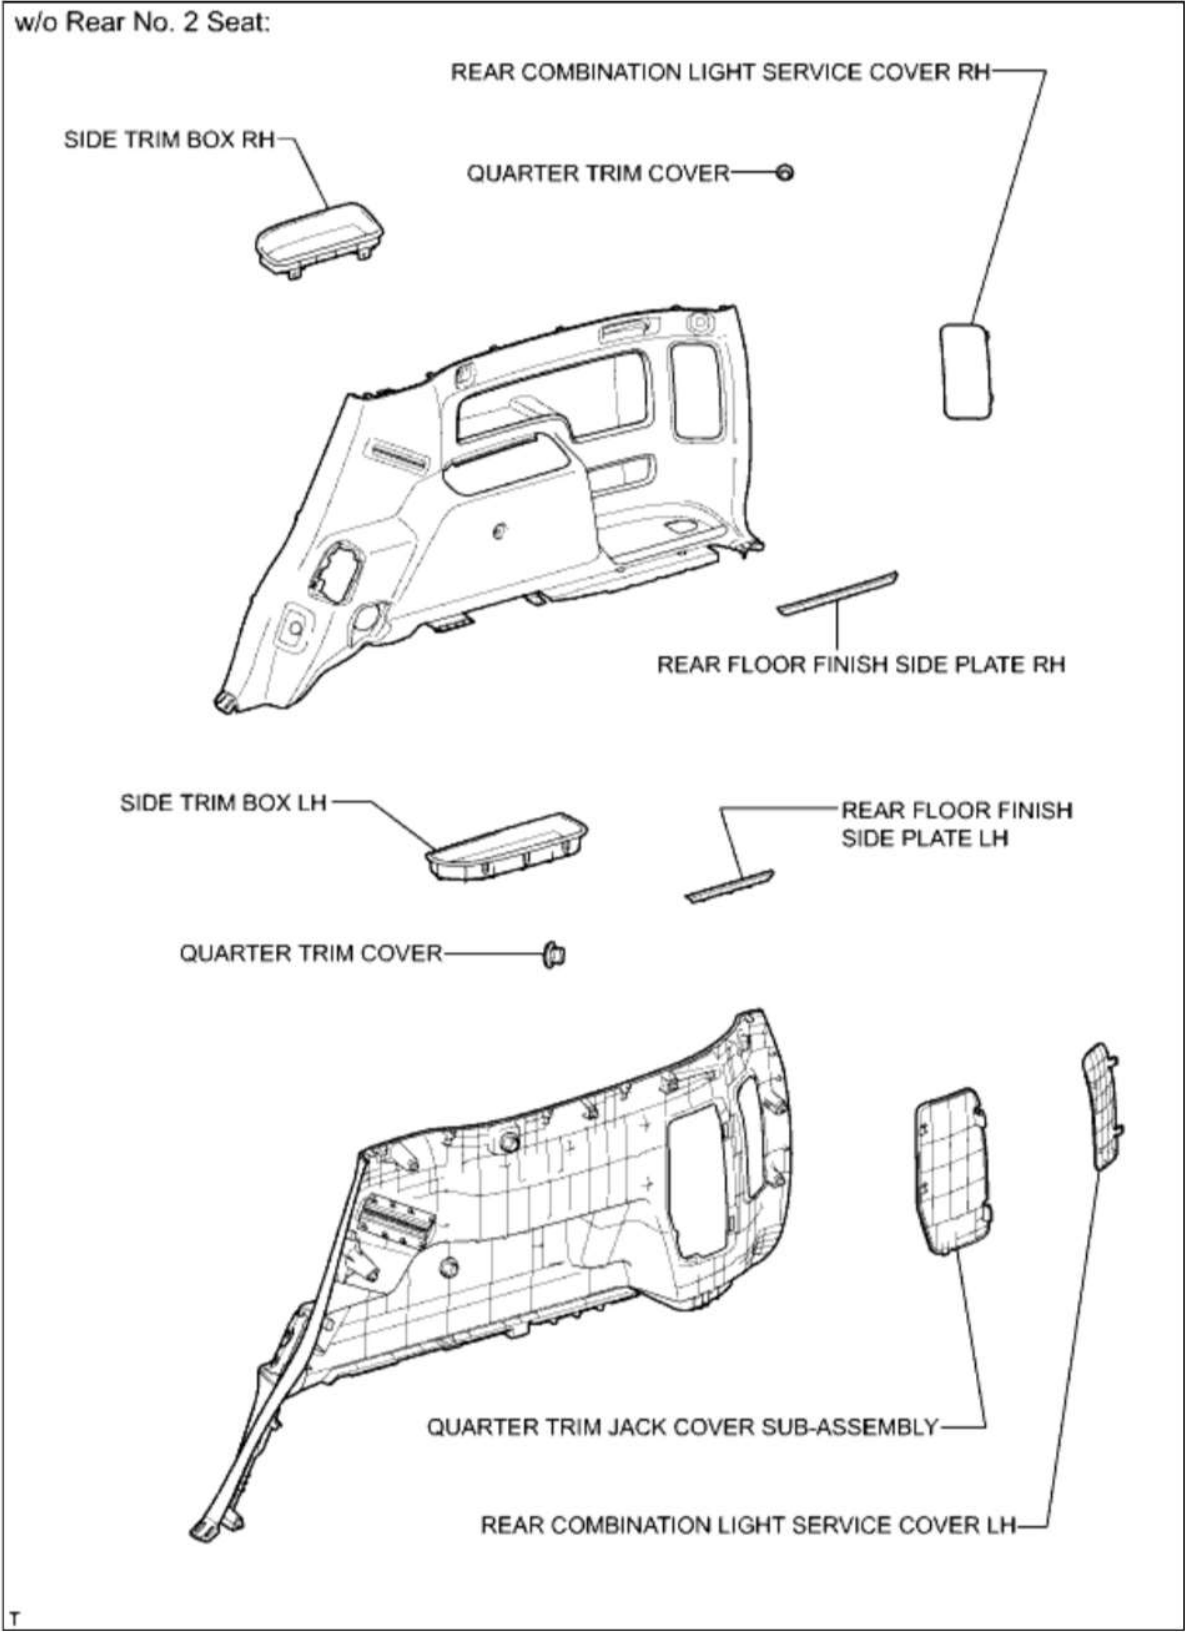

ILLUSTRATION

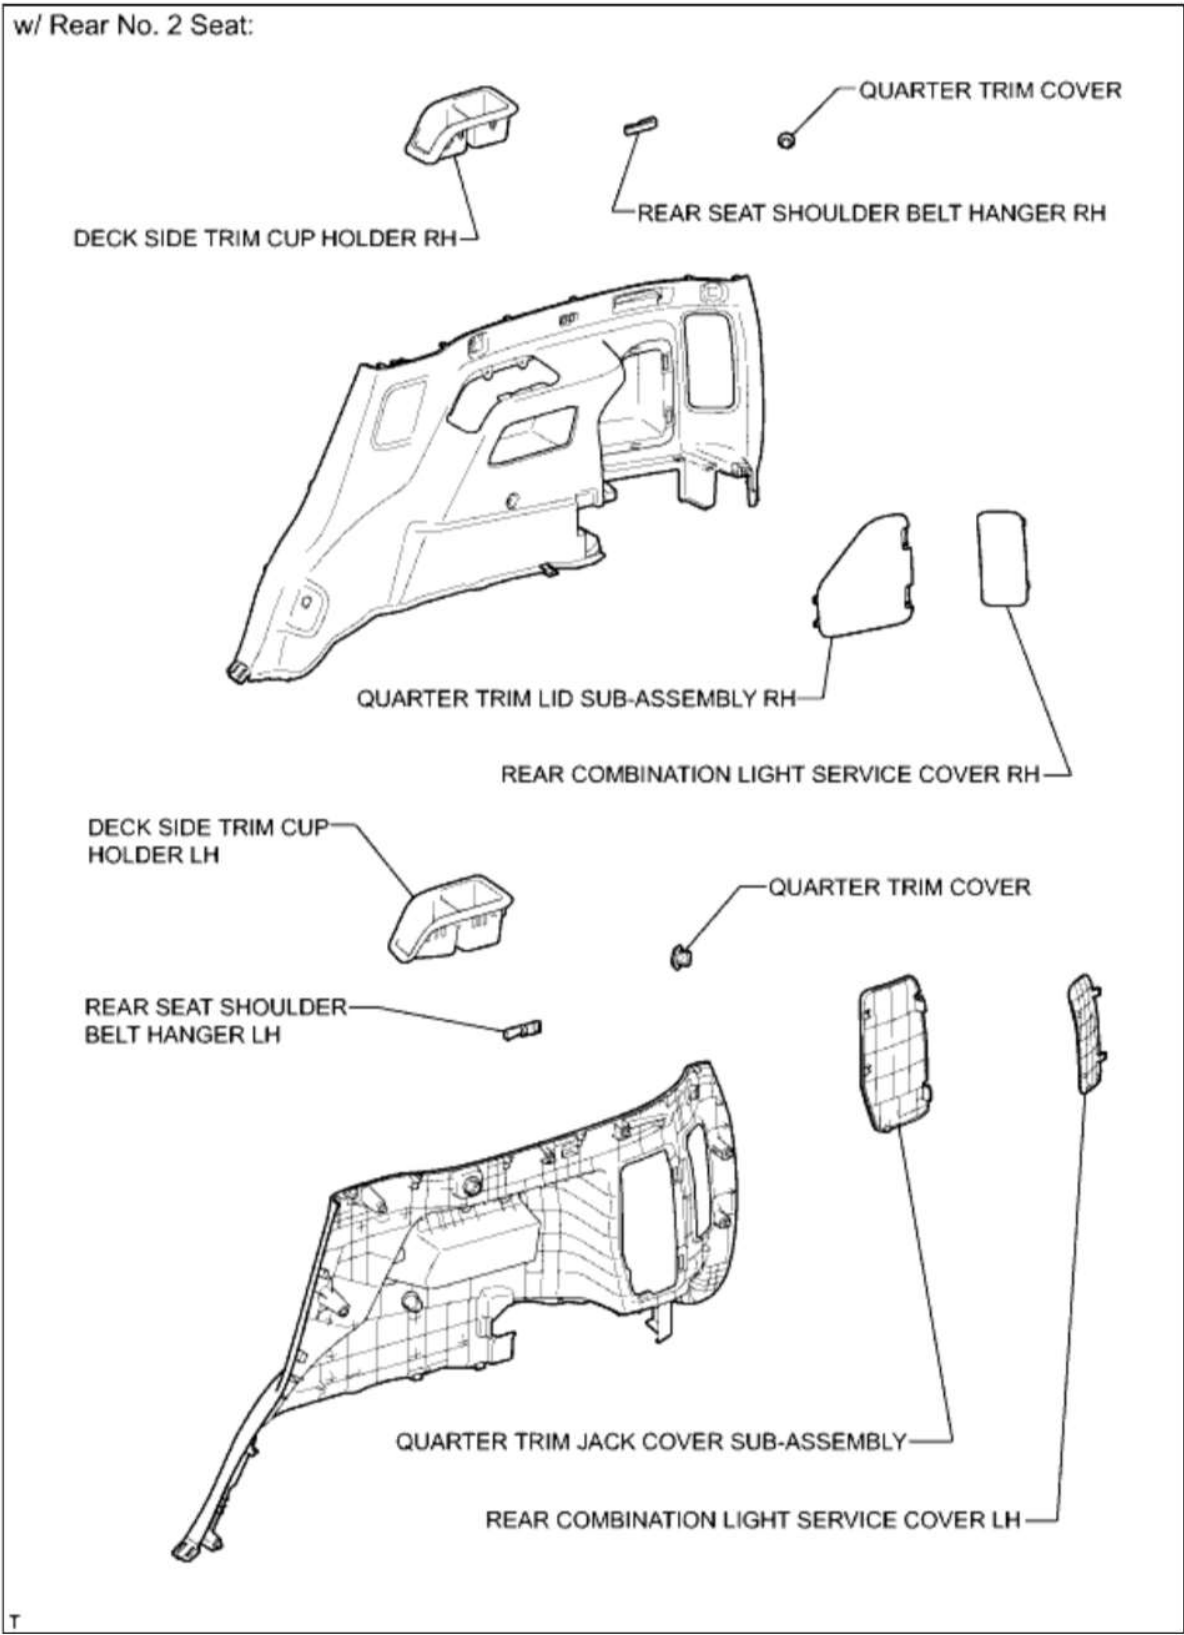


ILLUSTRATION

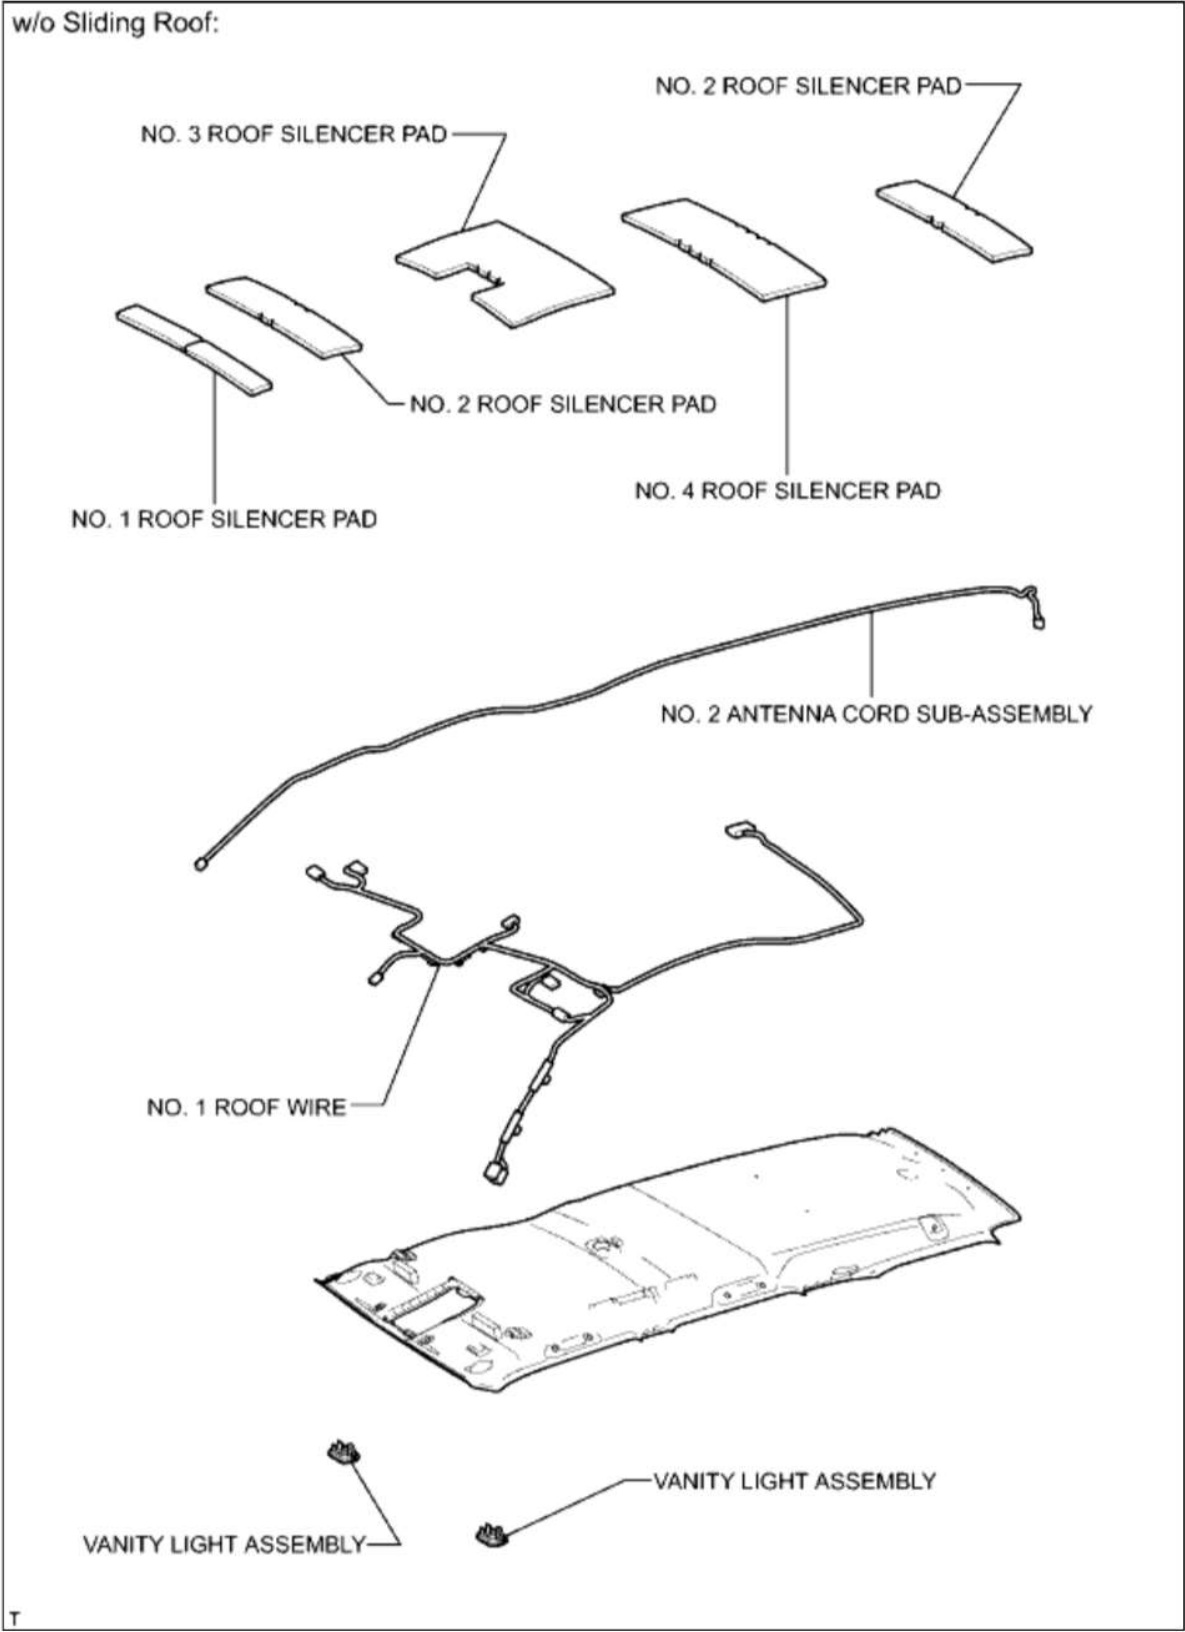

cardiagn.com

ILLUSTRATION

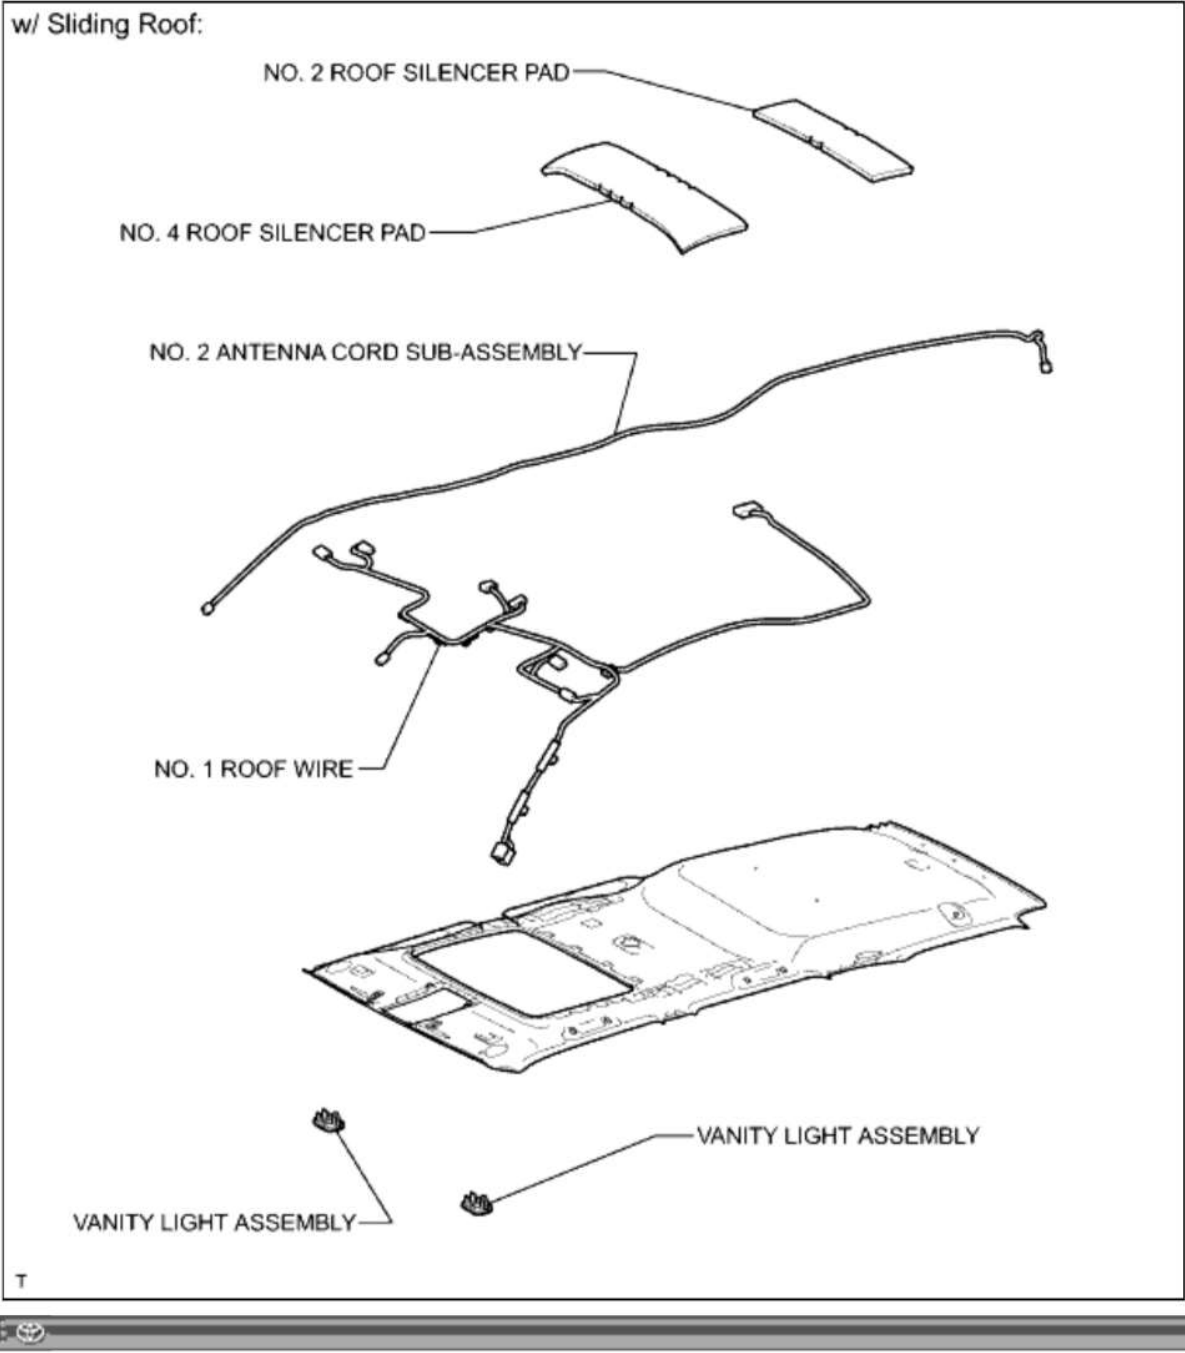

Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM00000460G000X
Title: INTERIOR PANELS / TRIM: ROOF HEADLINING: REMOVAL (2010 4Runner)		

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected



2. REMOVE REAR NO. 2 SEAT ASSEMBLY (w/ Rear No. 2 Seat)

- (a) Remove the rear No. 2 seat assembly

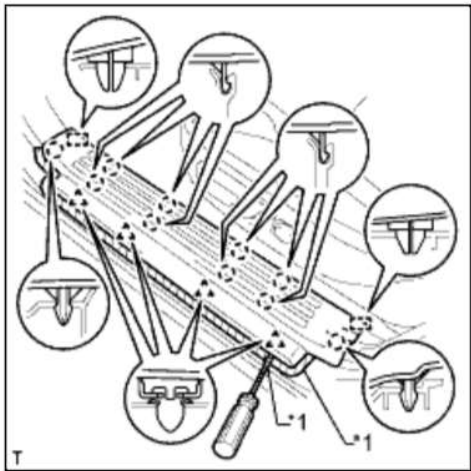

3. REMOVE DOOR SCUFF PLATE ASSEMBLY LH

- (a) Put protective tape around the door scuff plate.

Text in Illustration

*1	Protective Tape
----	-----------------

- (b) Using a screwdriver, detach the 4 clips, 10 claws and 2 guides and remove the door scuff plate.


HINT:

Tape the screwdriver tip before use.

4. REMOVE DOOR SCUFF PLATE ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

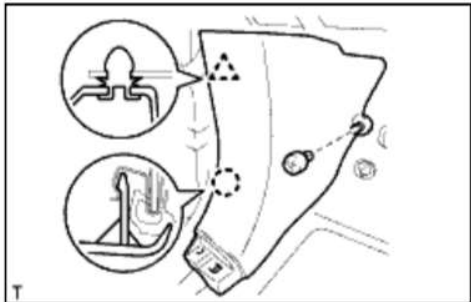


5. REMOVE COWL SIDE TRIM BOARD LH

- (a) Remove the clip.
(b) Detach the clip and claw and remove the cowl side trim board.

6. REMOVE COWL SIDE TRIM BOARD RH

HINT:

Use the same procedure described for the LH side.

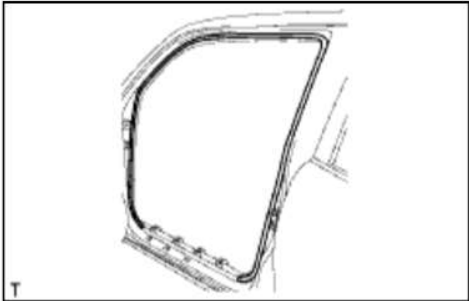

7. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

- (a) Remove the front door opening trim weatherstrip.

8. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedure described for the LH side.

9. REMOVE ASSIST GRIP PLUG


HINT:

Use the same procedure for the other assist grip plug.

- (a) Using a screwdriver, detach the 2 claws and remove the assist grip plug.


HINT:

Tape the screwdriver tip before use.

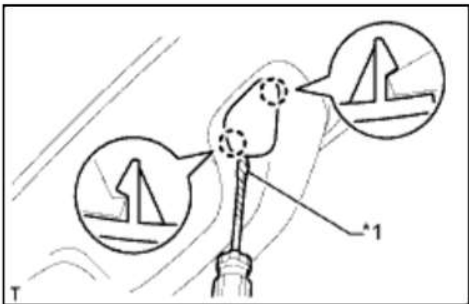

Text in Illustration


*1	Protective Tape
----	-----------------

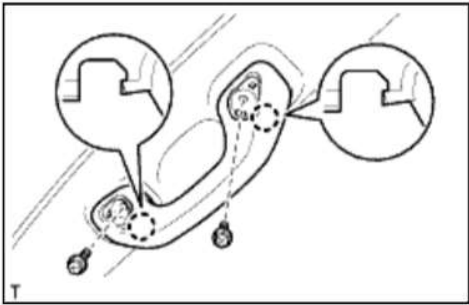

10. REMOVE NO. 1 ASSIST GRIP

- (a) Remove the 2 bolts.
- (b) Detach the 2 claws and remove the No. 1 assist grip.


11. REMOVE FRONT PILLAR GARNISH LH

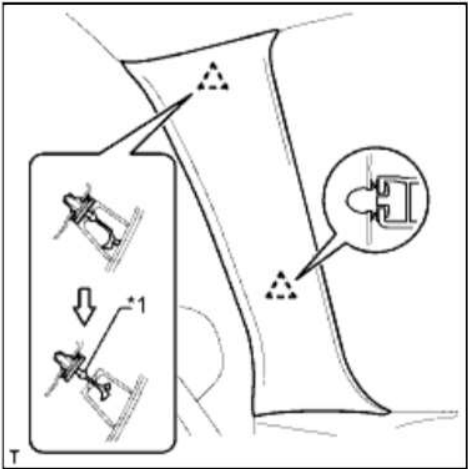

- (a) Detach the 2 clips.
- (b) Cut off clip A.

Text in Illustration

* 1	Clip A
-----	--------

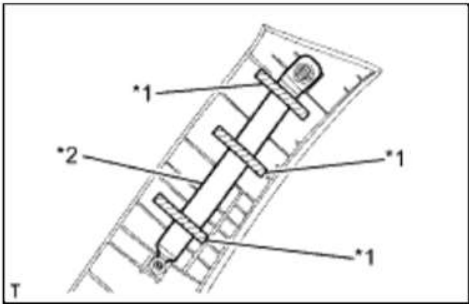


- (c) Remove the pieces of tape and cut off the strap.


Text in Illustration

* 1	Tape
* 2	Strap

- (d) Detach the 2 guides and remove the front pillar garnish.

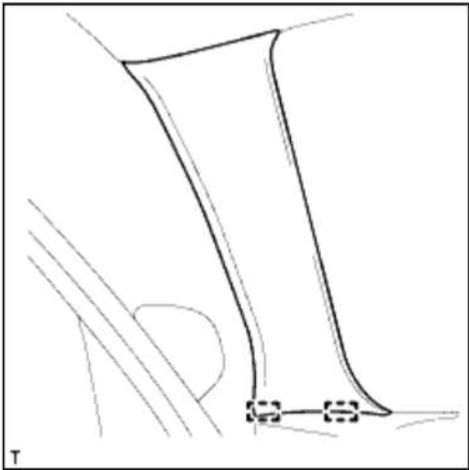

(e) Remove clip A and the strap from the vehicle body.

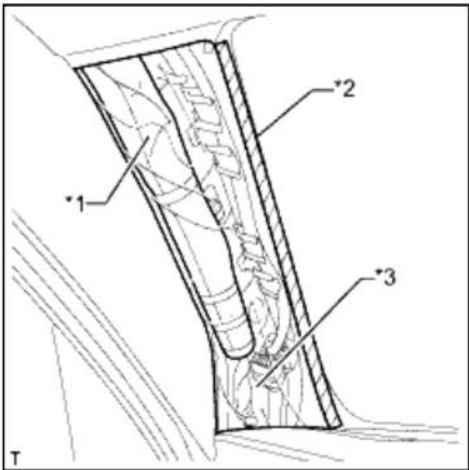


- (f) Protect the curtain shield airbag assembly.
- (1) Completely cover the airbag with a cloth or nylon sheet and secure the ends of the cover with adhesive tape as shown in the illustration.

NOTICE:
Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

Text in Illustration

* 1	Curtain Shield Airbag Assembly
* 2	Adhesive Tape
* 3	Protective Cover


12. REMOVE FRONT PILLAR GARNISH RH

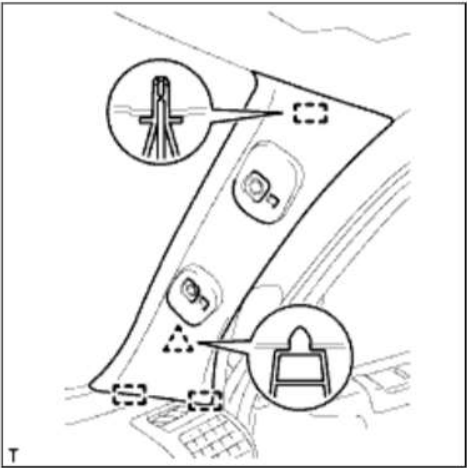

(a) Detach the clip and 3 guides and remove the front pillar garnish.

(b) Protect the curtain shield airbag assembly.

(1) Completely cover the airbag with a cloth or nylon sheet and secure the ends of the cover with adhesive tape as shown in the illustration.

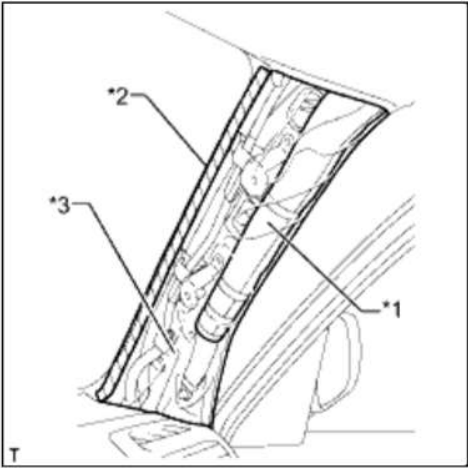

NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

Text in Illustration


* 1	Curtain Shield Airbag Assembly
* 2	Adhesive Tape
* 3	Protective Cover

13. REMOVE REAR NO. 1 FLOOR STEP COVER (w/ Rear No. 2 Seat)

HINT:

Use the same procedure for all rear No. 1 floor step covers.

(a) Using a screwdriver, detach the 2 claws and remove the rear No. 1 floor step cover.

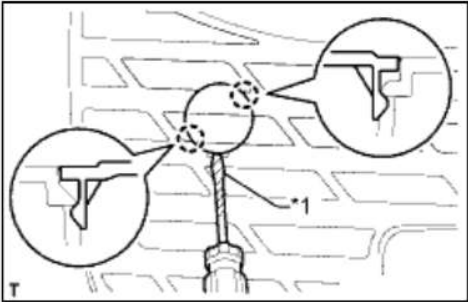


HINT:

Tape the screwdriver tip before use.

Text in Illustration


* 1	Protective Tape
-----	-----------------

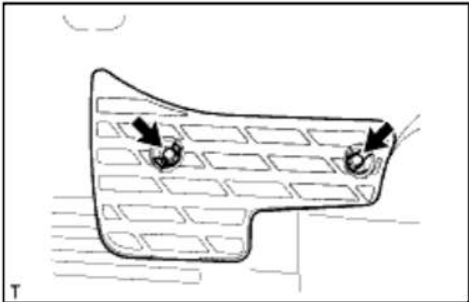

- 14. REMOVE QUARTER SCUFF PLATE LH (w/ Rear No. 2 Seat)**
- (a) Remove the 2 bolts and quarter scuff plate.

15. REMOVE QUARTER SCUFF PLATE RH (w/ Rear No. 2 Seat)

HINT:
Use the same procedure described for the LH side.

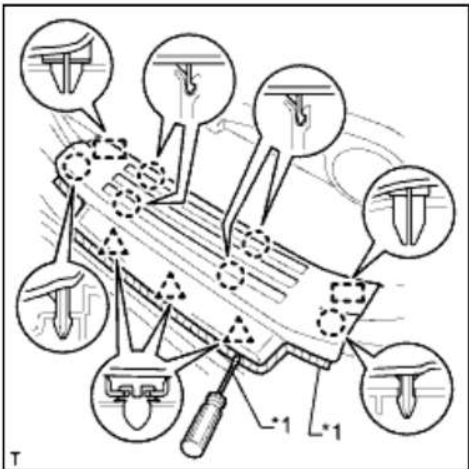

- 16. REMOVE REAR DOOR SCUFF PLATE LH**
- (a) Put protective tape around the rear door scuff plate.

HINT:
Tape the screwdriver tip before use.

Text in Illustration


* 1	Protective Tape
-----	-----------------

- (b) Using a screwdriver, detach the 3 clips, 6 claws and 2 guides and remove the rear door scuff plate.

17. REMOVE REAR DOOR SCUFF PLATE RH

HINT:
Use the same procedure described for the LH side.


- 18. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH**
- (a) Remove the rear door opening trim weatherstrip.

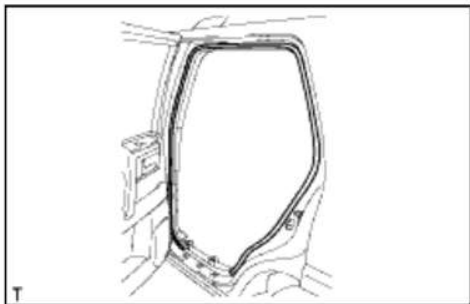

19. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedure described for the LH side.

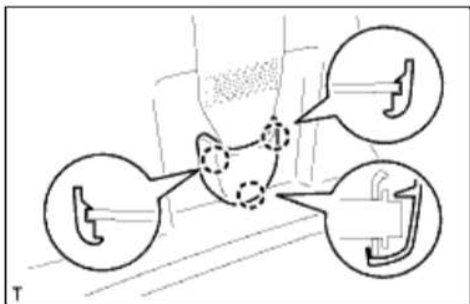


20. REMOVE OUTER LAP BELT ANCHOR COVER

HINT:

Use the same procedure for the other outer lap belt anchor cover.


- (a) Detach the 3 claws and remove the outer lap belt anchor cover.

21. REMOVE LOWER CENTER PILLAR GARNISH LH

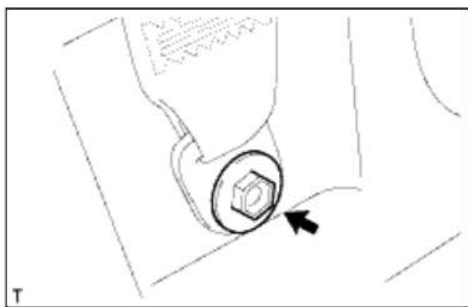

- (a) Remove the bolt and disconnect the front seat outer belt floor anchor.


- (b) Detach the 4 claws and 2 clips and remove the lower center pillar garnish.

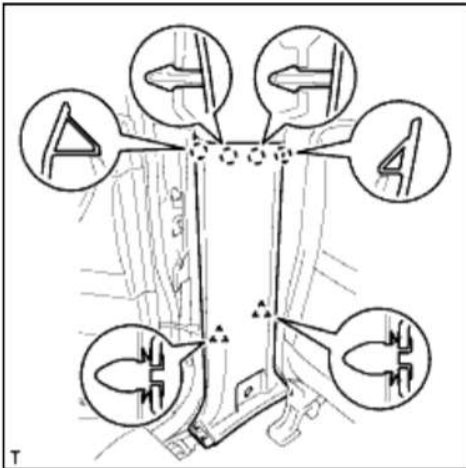

22. REMOVE LOWER CENTER PILLAR GARNISH RH

HINT:

Use the same procedure described for the LH side.

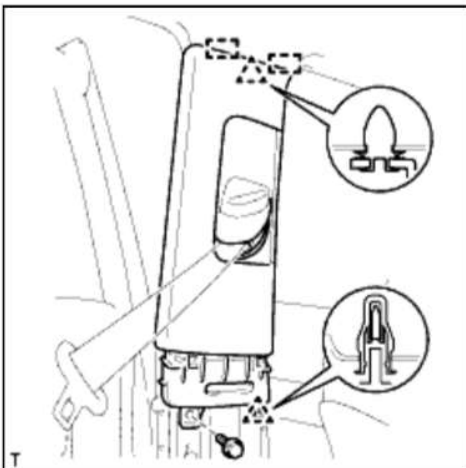

23. REMOVE CENTER PILLAR GARNISH LH


- Move the front shoulder belt anchor adjuster to the lowest position.
- Remove the bolt.
- Detach the 2 clips and 2 guides.
- Pass the front seat outer belt floor anchor through the center pillar garnish and remove the center pillar garnish.

24. REMOVE CENTER PILLAR GARNISH RH

HINT:

Use the same procedure described for the LH side.


25. REMOVE NO. 1 LUGGAGE COMPARTMENT TRIM COVER (w/o Deck Board)

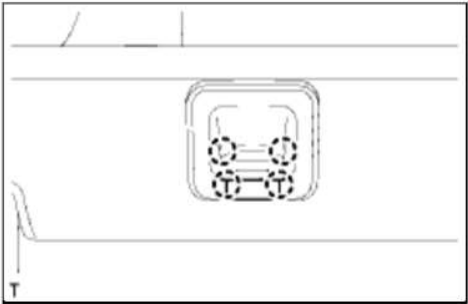

HINT:

Use the same procedure for the other No. 1 luggage compartment trim cover.


(a) Detach the 4 claws and open the cover.

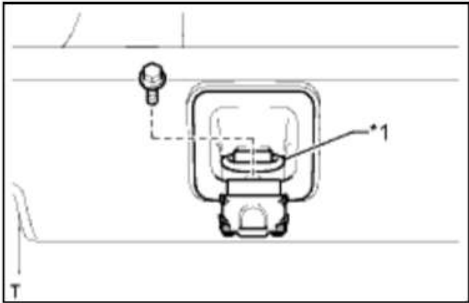

(b) Remove the bolt, luggage hold belt striker and No. 1 luggage compartment trim cover.

Text in Illustration


*1	Luggage Hold Belt Striker
----	---------------------------

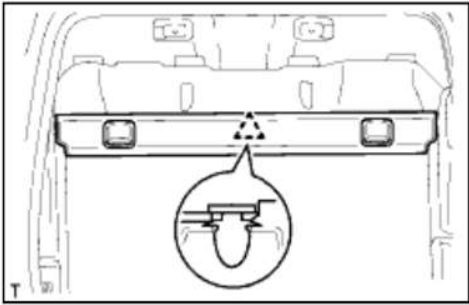

26. REMOVE NO. 1 DECK BOARD SUB-ASSEMBLY (w/o Deck Board)

(a) Detach the clip and remove the No. 1 deck board.


27. REMOVE NO. 2 LUGGAGE COMPARTMENT TRIM COVER (w/ Deck Board, w/o Rear No. 2 Seat)

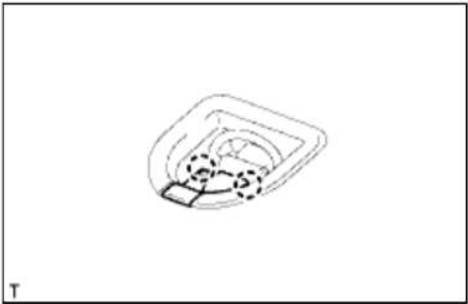

HINT:

Use the same procedure for all No. 2 luggage compartment trim covers.


(a) Detach the 2 claws and open the cover.

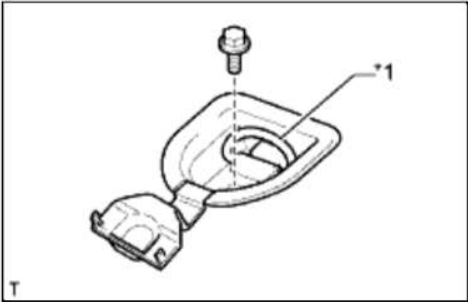

(b) Remove the bolt, luggage hold belt striker and No. 2 luggage compartment trim cover.


Text in Illustration

*1	Luggage Hold Belt Striker
----	---------------------------

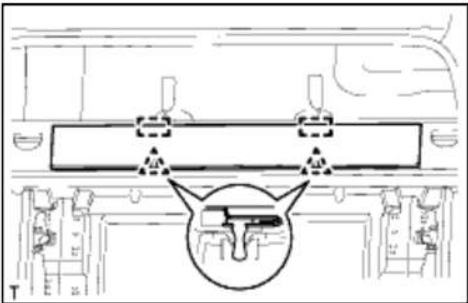

28. REMOVE NO. 2 DECK BOARD SUB-ASSEMBLY (w/ Deck Board)

(a) Detach the 2 clips and 2 guides and remove the No. 2 deck board.

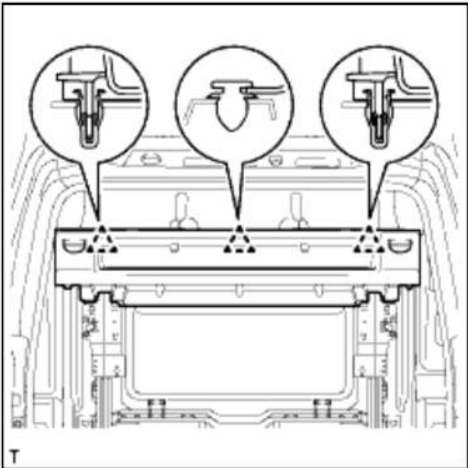


29. REMOVE REAR NO. 2 FLOOR BOARD ASSEMBLY (w/ Deck Board)

(a) Detach the 3 clips and remove the rear No. 2 floor board.

30. REMOVE LUGGAGE COMPARTMENT SIDE COVER SUB-ASSEMBLY LH (w/ Deck Board)

(a) Using a screwdriver, detach the 4 clips and 2 guides and

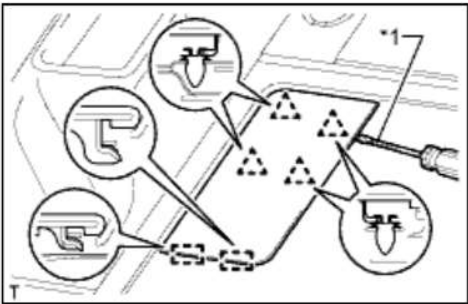

remove the luggage compartment side cover.


HINT:
Tape the screwdriver tip before use.

Text in Illustration


*1	Protective Tape
----	-----------------

31. REMOVE LUGGAGE COMPARTMENT SIDE COVER SUB-ASSEMBLY RH (w/ Deck Board)


HINT:
Use the same procedure described for the LH side.

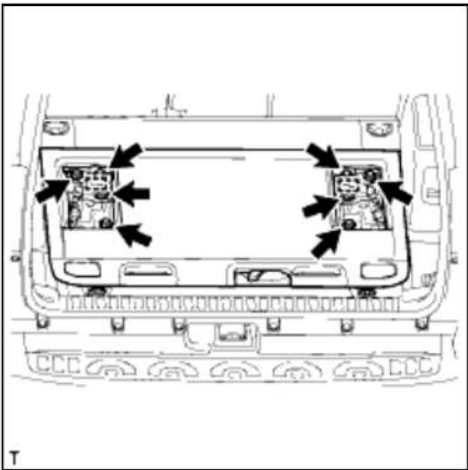

- 32. REMOVE DECK BOARD ASSEMBLY (w/ Deck Board)**
- (a) Remove the 8 bolts.
 - (b) Detach the 2 guides and remove the deck board.

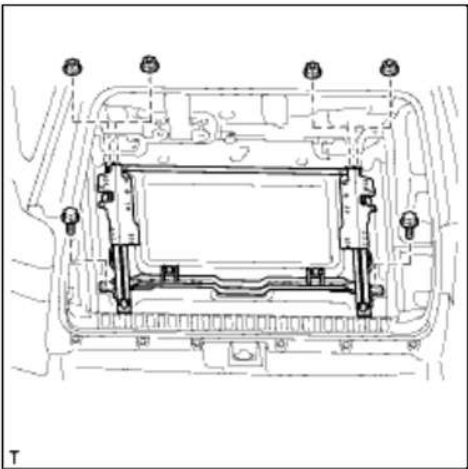


- 33. REMOVE INNER FLOOR SIDE RAIL SUB-ASSEMBLY (w/ Deck Board)**
- (a) Remove the 2 bolts, 4 nuts and inner floor side rail.

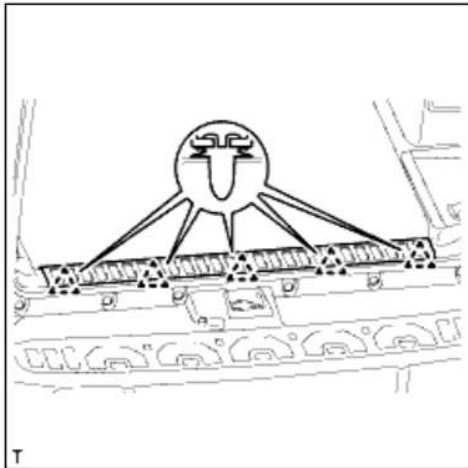


34. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

- (a) Detach the 5 clips and remove the rear floor mat rear support plate.

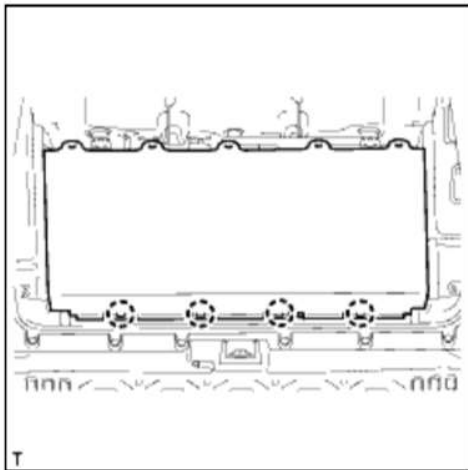

35. REMOVE REAR FLOOR CARPET ASSEMBLY (w/o Deck Board)

- (a) Detach the 4 claws and remove the rear floor carpet.

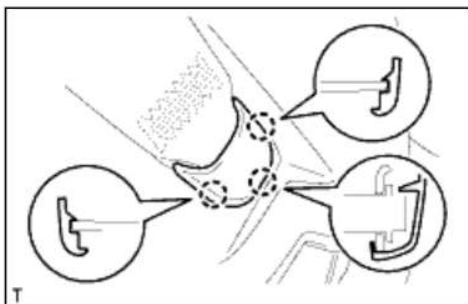

36. REMOVE REAR NO. 1 SEAT OUTER LAP BELT ANCHOR COVER

HINT:


Use the same procedure for the other rear No. 1 seat outer lap belt anchor cover.

- (a) Detach the 3 claws and remove the rear No. 1 seat outer lap belt anchor cover.

37. REMOVE NO. 1 LUGGAGE COMPARTMENT TRIM HOOK

HINT:

Use the same procedure for the other No. 1 luggage compartment

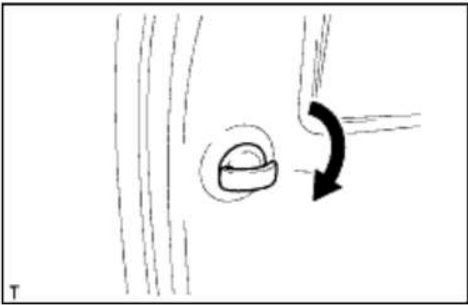


trim hook.

- (a) Remove the luggage compartment trim hook by turning it clockwise.

38. REMOVE FRONT DECK SIDE TRIM COVER LH

HINT:

Use the same procedure for the other front deck side trim cover.

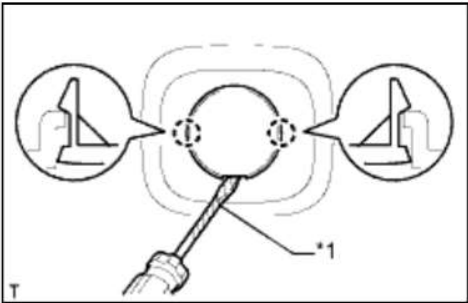

- (a) Using a screwdriver, detach the 2 claws and remove the front deck side trim cover.

HINT:

Tape the screwdriver tip before use.

Text in Illustration

*1	Protective Tape
----	-----------------

39. REMOVE FRONT DECK SIDE TRIM COVER RH

HINT:

Use the same procedure described for the LH side.

40. REMOVE NO. 1 LUGGAGE COMPARTMENT TRIM COVER


HINT:

Use the same procedure described for the No. 2 luggage compartment trim cover.

41. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH



- (a) w/o Rear No. 2 Seat:

- (1) Remove the bolt and disconnect the rear No. 1 seat outer belt floor anchor.

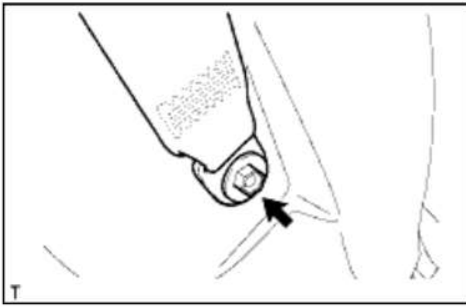

(2) Remove the 3 bolts and 2 screws.



(3) Detach the 7 clips, 5 claws and 2 guides.

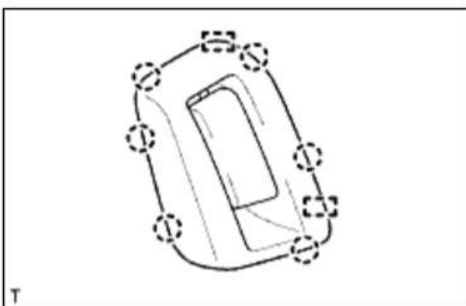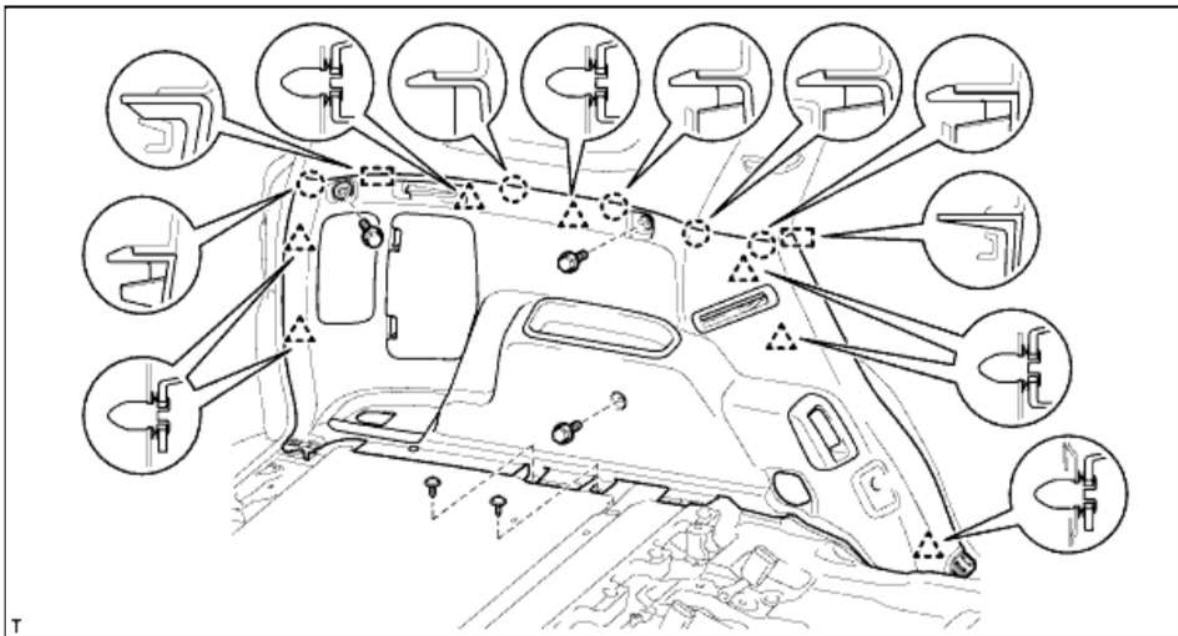

(4) Detach the 6 claws and 2 guides, pass the rear seatback lock control lever base through the deck trim side panel and remove the deck trim side panel.

(b) w/ Rear No. 2 Seat:


(1) Remove the bolt and disconnect the rear No. 1 seat outer belt floor anchor.

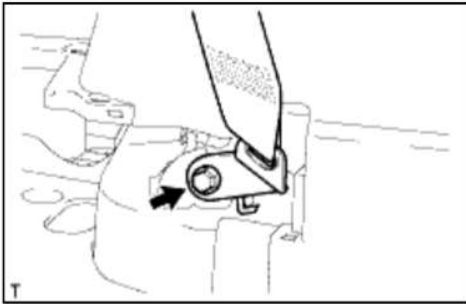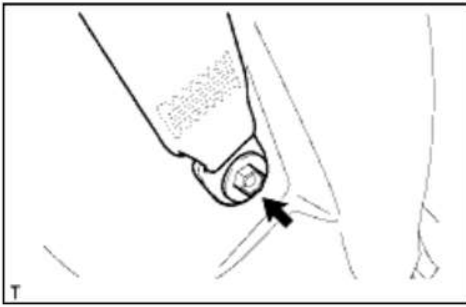

(2) Remove the bolt and disconnect the rear No. 2 seat outer belt floor anchor.

(3) Remove the 3 bolts and 2 screws.


(4) Detach the 7 clips, 5 claws and 2 guides and remove the deck trim side panel.

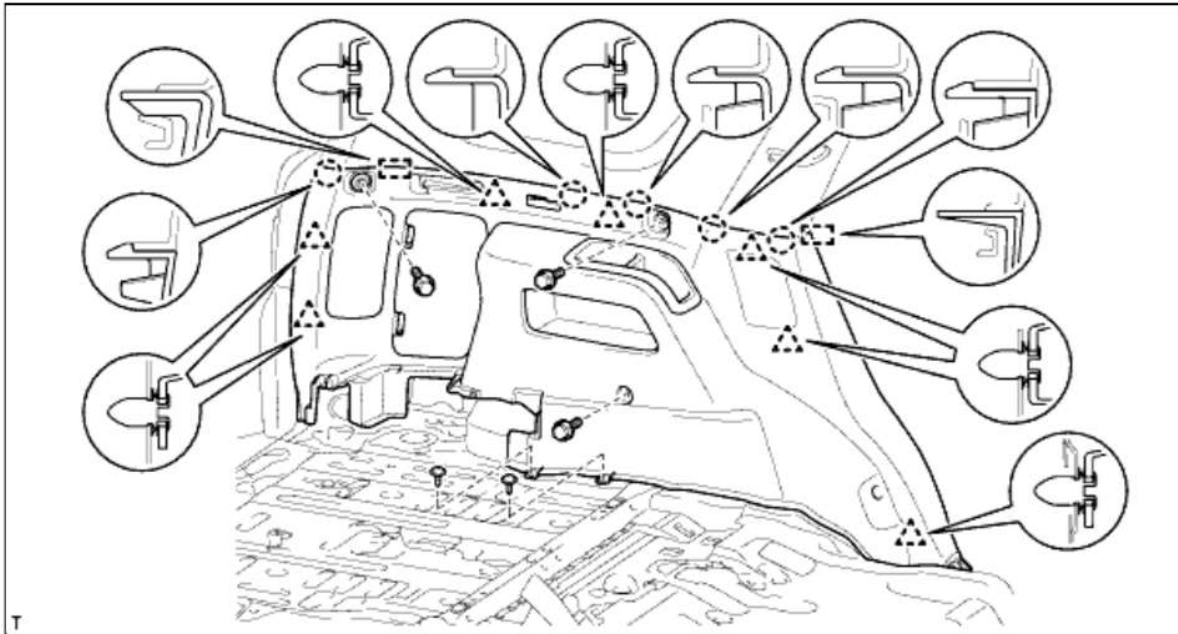

42. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH

(a) w/o Rear No. 2 Seat:


(1) Remove the bolt and disconnect the rear No. 1 seat

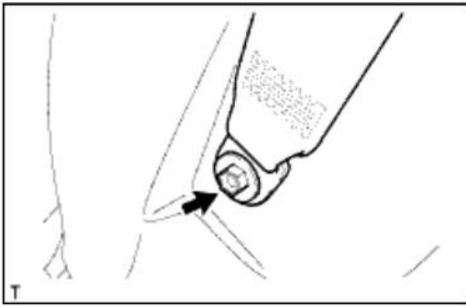


outer belt floor anchor.

(2) Remove the 3 bolts and screws.

(3) Detach the 7 clips, 5 claws and 2 guides.

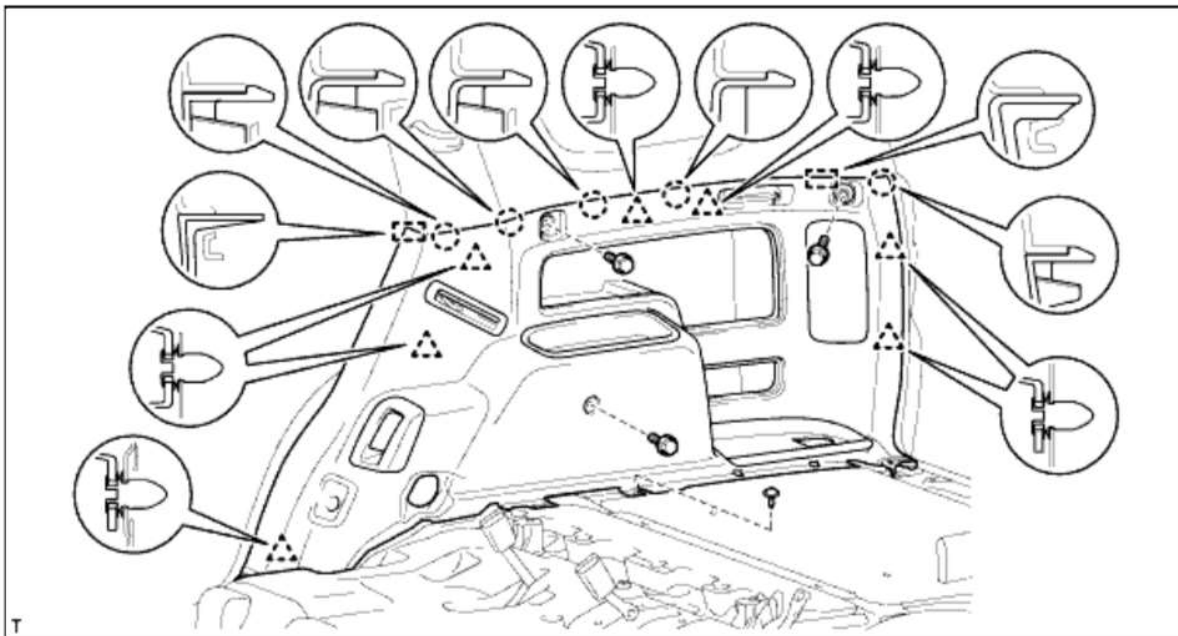


(4) Disconnect each connector.

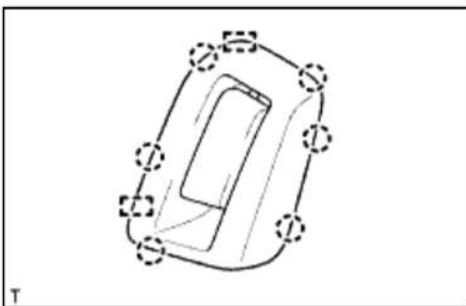


(5) Detach the 6 claws and 2 guides, pass the rear seatback lock control lever base through the deck trim side panel and remove the deck trim side panel.

(b) w/ Rear No. 2 Seat:

(1) Remove the bolt and disconnect the rear No. 1 seat

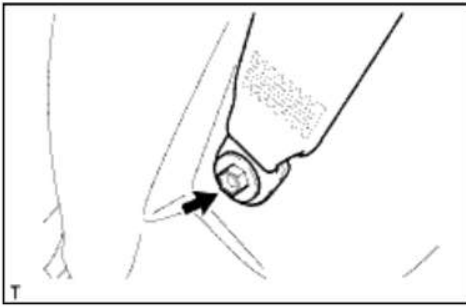

outer belt floor anchor.

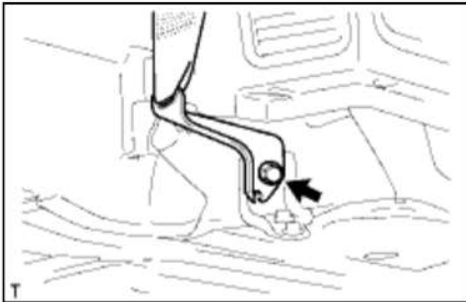


(2) Remove the bolt and disconnect the rear No. 2 seat outer belt floor anchor.


(3) Remove the 3 bolts and screws.

(4) Detach the 7 clips, 5 claws and 2 guides.

(5) Disconnect the connector and remove the deck trim side panel.

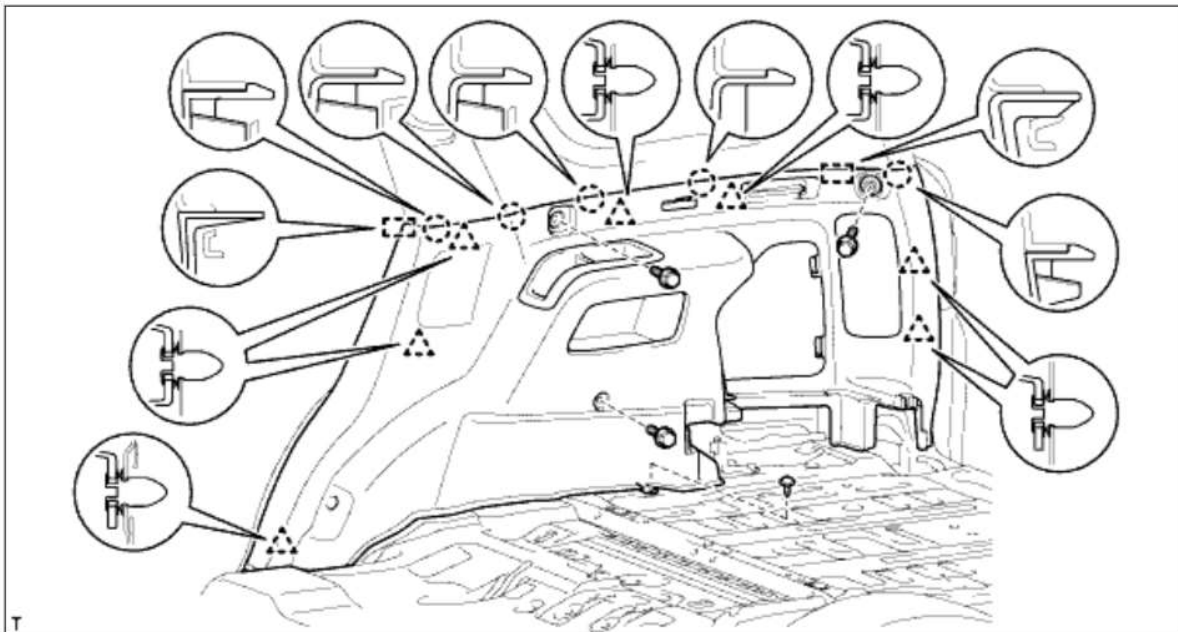


43. REMOVE REAR NO. 2 WINDOW SIDE GARNISH ASSEMBLY LH

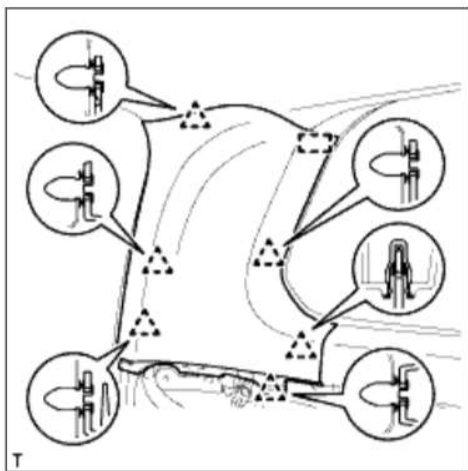


(a) w/o Rear No. 2 Seat:

- (1) Detach the 6 clips and guide and remove the rear No. 2 window side garnish.

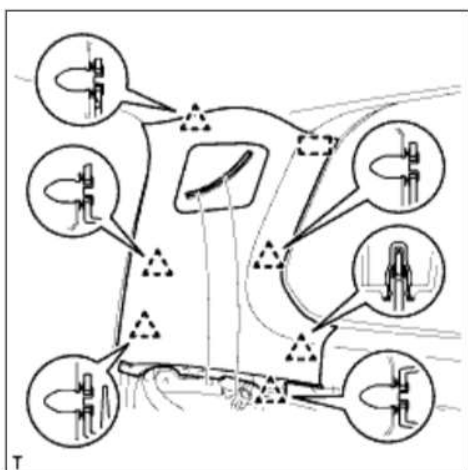

(b) w/ Rear No. 2 Seat:

- (1) Detach the 6 clips and guide.

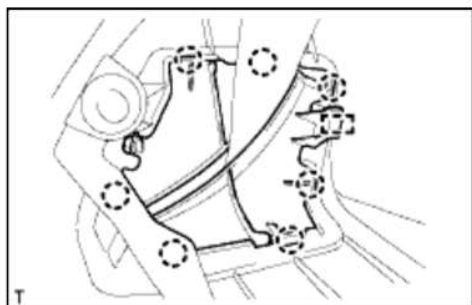


- (2) Detach the 7 claws and guide, pass the rear No. 2 seat outer belt floor anchor through the rear No. 2 window side garnish and remove the rear No. 2 window side garnish.


44. REMOVE REAR NO. 2 WINDOW SIDE GARNISH ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

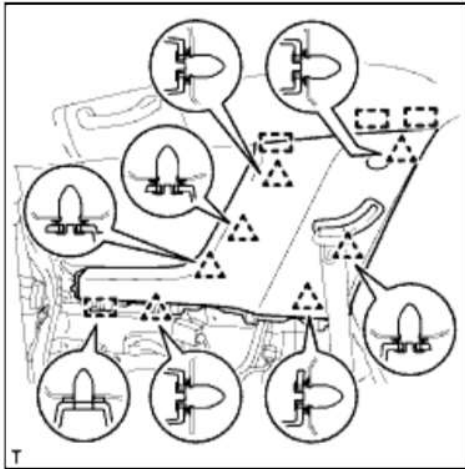45. REMOVE REAR WINDOW SIDE GARNISH ASSEMBLY LH

(a) Detach the 7 clips and 4 guides.

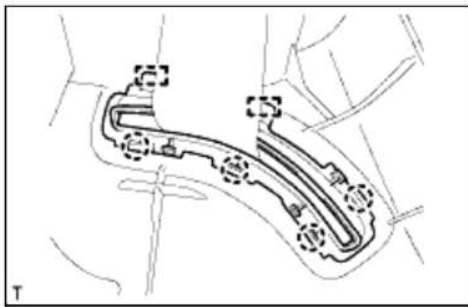


(b) Detach the 4 claws and 2 guides, pass the rear No. 1 seat outer belt floor anchor through the rear window side garnish and remove the rear window side garnish.

46. REMOVE REAR WINDOW SIDE GARNISH ASSEMBLY RH**HINT:**

Use the same procedure described for the LH side.

47. REMOVE ASSIST GRIP SUB-ASSEMBLY

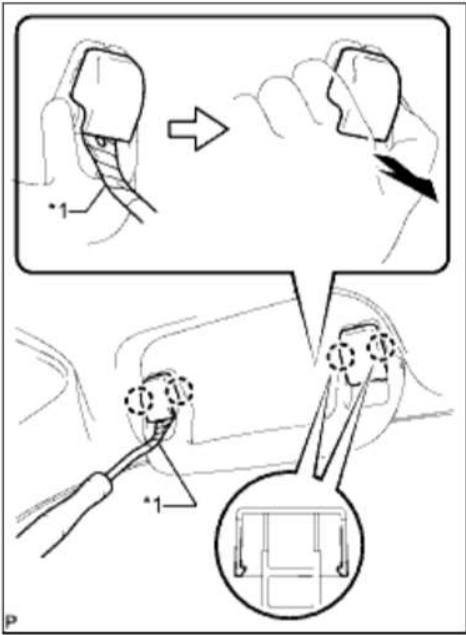

HINT:

Use the same procedure for the other assist grip.

(a) Using a clip remover, detach the 4 claws.

NOTICE:

Do not forcibly pry the assist grip plugs to prevent them from being deformed.

HINT:


- Gently pry the assist grip plugs as shown in the illustration to detach the claws.
- Tape the clip remover tip before use.

Text in Illustration

* 1	Protective Tape
-----	-----------------

(b) Pull off the 2 assist grip plugs by hand.

(c) Detach the 2 clips and remove the assist grip.

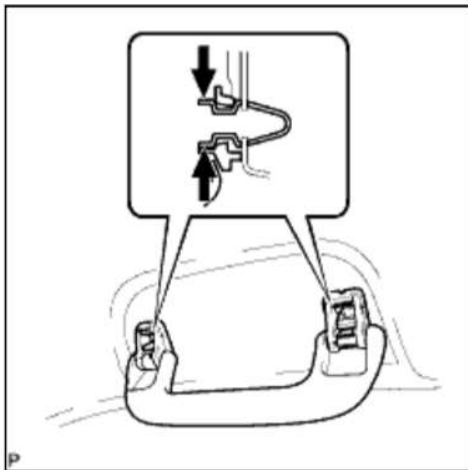

(d) Remove the 2 clips from the vehicle body.

48. REMOVE REAR ASSIST GRIP ASSEMBLY



HINT:

Use the same procedure for the other rear assist grip.

(a) Using a clip remover, detach the 4 claws.

NOTICE:

Do not forcibly pry the assist grip plugs to prevent them from being deformed.


HINT:

- Gently pry the rear assist grip plugs as shown in the illustration to detach the claws.
- Tape the clip remover tip before use.

Text in Illustration

* 1	Protective Tape
-----	-----------------


(b) Pull off the 2 assist grip plugs by hand.

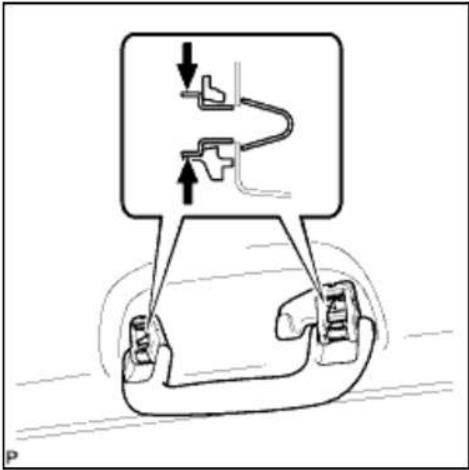

(c) Detach the 2 clips and remove the rear assist grip.

(d) Remove the 2 clips from the vehicle body.

49. REMOVE COAT HOOK

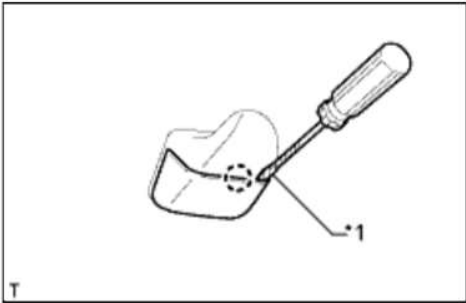

HINT:



Use the same procedure for the other coat hook.

(a) Using a screwdriver, detach the claw and open the cover.

Text in Illustration

* 1	Protective Tape
-----	-----------------

(b) Remove the screw and coat hook.

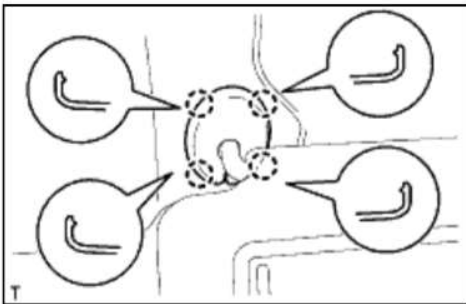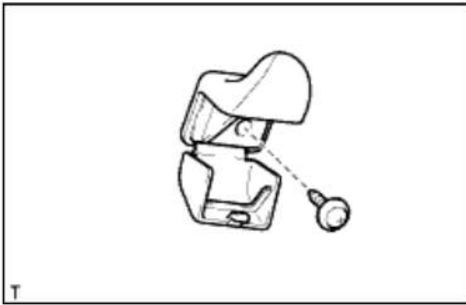

50. REMOVE VISOR BRACKET COVER LH

HINT:


Use the same procedure for the other visor bracket cover.

- (a) Detach the 4 claws and remove the visor bracket cover.

51. REMOVE VISOR BRACKET COVER RH

HINT:

Use the same procedure described for the LH side.

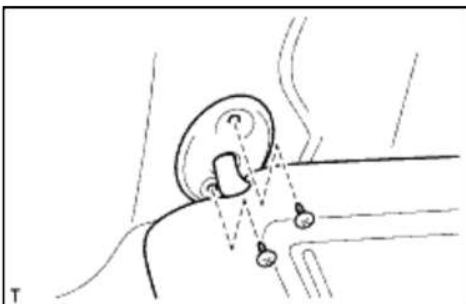

52. REMOVE VISOR ASSEMBLY LH

- (a) Remove the 2 screws and visor.


53. REMOVE VISOR ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

54. REMOVE VISOR HOLDER

HINT:

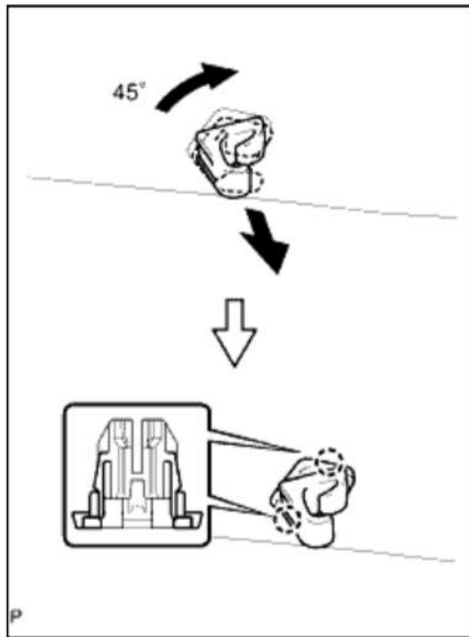

Use the same procedure for the other visor holder.

- (a) Turn the visor holder approximately 45° and pull it out as shown in the illustration.
- (b) Detach the 2 claws and remove the visor holder.

55. REMOVE DRIVE MONITOR SWITCH

INFO

56. REMOVE MAP LIGHT ASSEMBLY

INFO

57. REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER (w/ EC Mirror)

INFO

58. REMOVE NO. 1 ROOM LIGHT ASSEMBLY

INFO

59. REMOVE ROOF HEADLINING ASSEMBLY





HINT:

Before removing the roof headlining, move the front seats and rear No. 1 seat to the positions shown in the illustration.


- (a) w/ EC Mirror:

Disconnect the inner mirror connector.

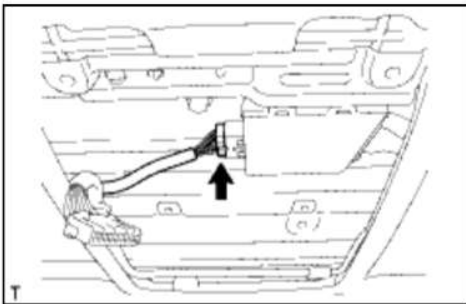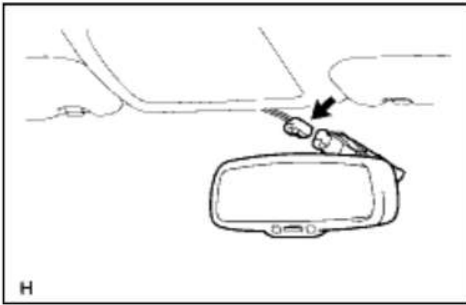


(b) w/ Sliding Roof:

Disconnect the drive gear connector.


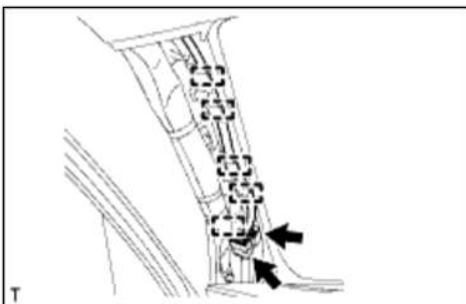


(c) Disconnect each connector and detach the 5 clamps from the front pillar LH.

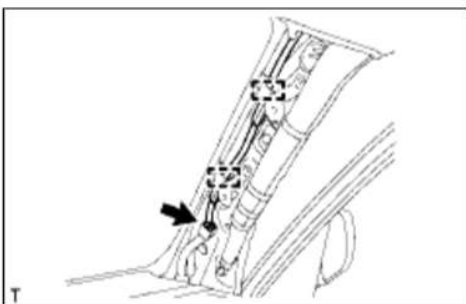


(d) Disconnect the connector and detach the 2 clamps from the front pillar RH.

(e) Disconnect the connector and detach the clamp from the rear pillar RH.

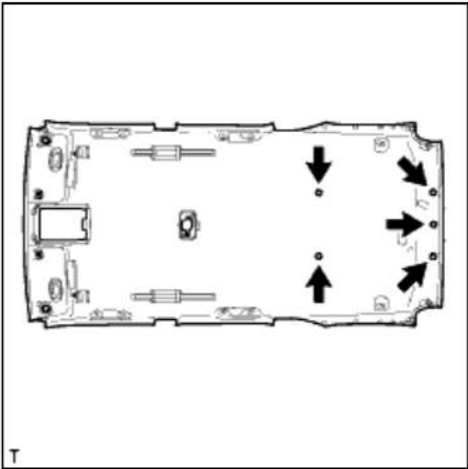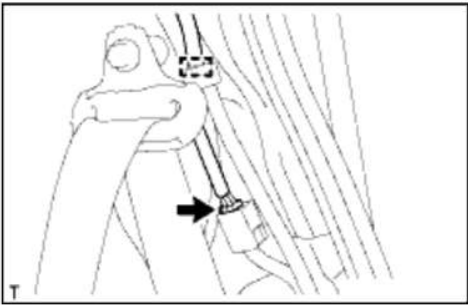

- (f) w/o Sliding Roof:
(1) Remove the 5 clips.

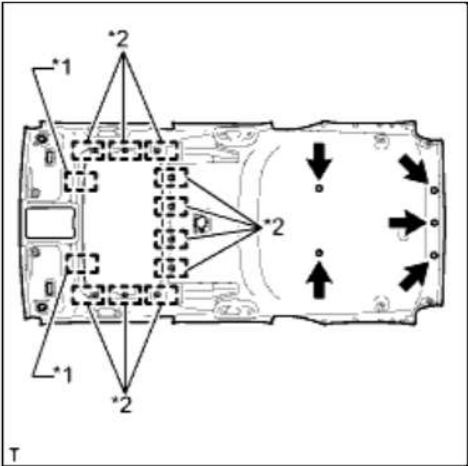



- (g) w/ Sliding Roof:
(1) Remove the 5 clips.
(2) Detach the 2 clips, 2 guides and 10 fasteners.

Text in Illustration

*1	Guide
*2	Fastener

- (h) Remove the roof headlining from the back door as shown in the illustration.

NOTICE:
Be careful not to damage the roof headlining when remove it.

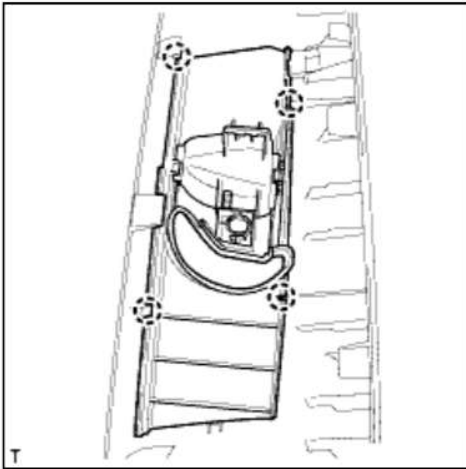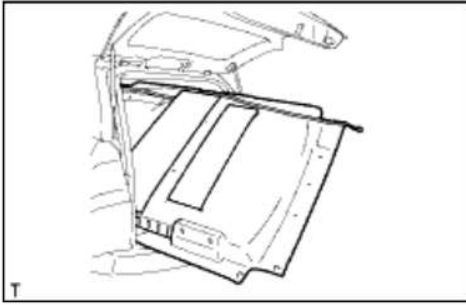


60. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

- (a) Detach the 4 claws of the front shoulder belt anchor plate and slide the front shoulder belt anchor plate in the direction of the arrow to remove it.

61. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

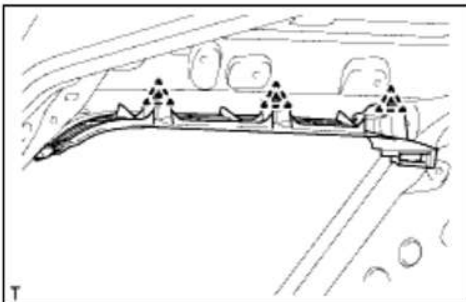


62. REMOVE ROOF SIDE RAIL GARNISH ASSEMBLY LH

- (a) Detach the 3 clips and remove the roof side rail garnish.

63. REMOVE ROOF SIDE RAIL GARNISH ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

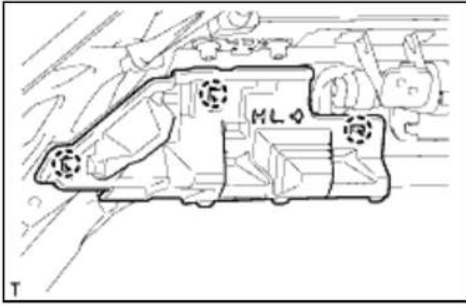


64. REMOVE REAR NO. 2 SIDE RAIL SPACER LH (w/o Rear No. 2 Seat)

- (a) Detach the 3 claws and remove the rear No. 2 side rail spacer.

65. REMOVE REAR NO. 2 SIDE RAIL SPACER RH (w/o Rear No. 2 Seat)

HINT:

Use the same procedure described for the LH side.

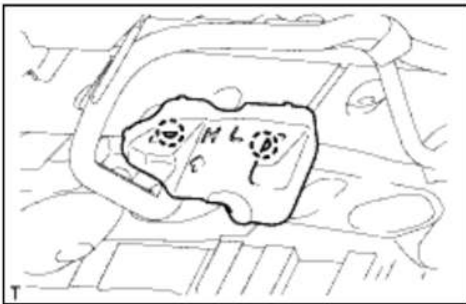


66. REMOVE REAR NO. 3 SIDE RAIL SPACER LH (w/ Rear No. 2 Seat)

- (a) Detach the 2 claws and remove the rear No. 3 side rail spacer.

67. REMOVE REAR NO. 3 SIDE RAIL SPACER RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedure described for the LH side.

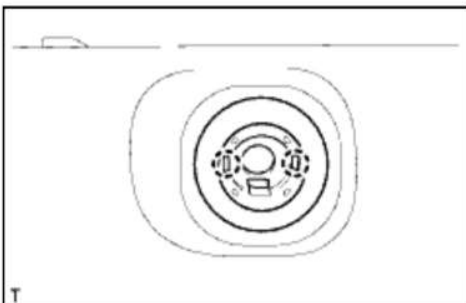


68. REMOVE QUARTER TRIM COVER

HINT:


Use the same procedure for the other quarter trim cover.

- (a) Detach the 2 claws and remove the quarter trim cover.

69. REMOVE QUARTER TRIM JACK COVER SUB-ASSEMBLY

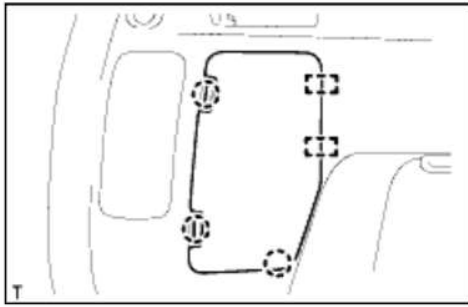

- (a) Detach the 3 claws and 2 guides and remove the quarter trim jack cover.

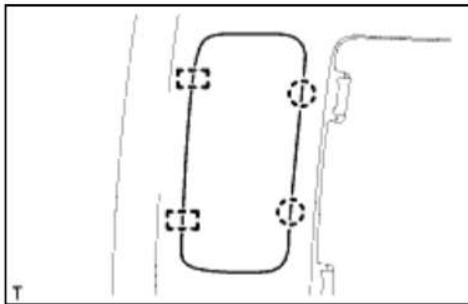


70. REMOVE REAR COMBINATION LIGHT SERVICE COVER LH

- (a) Detach the 2 claws and 2 guides and remove the rear combination light service cover.

71. REMOVE REAR COMBINATION LIGHT SERVICE COVER RH

HINT:

Use the same procedure described for the LH side.

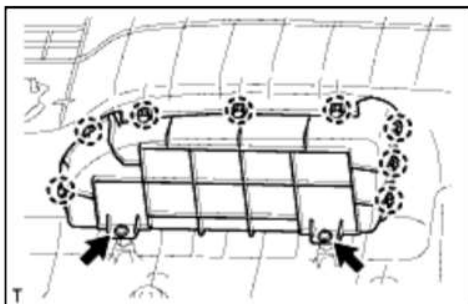

72. REMOVE SIDE TRIM BOX LH (w/o Rear No. 2 Seat)

- (a) Remove the 2 screws.
(b) Detach the 8 claws and remove the side trim box.


73. REMOVE SIDE TRIM BOX RH (w/o Rear No. 2 Seat)

HINT:

Use the same procedure described for the LH side.

74. REMOVE REAR FLOOR FINISH SIDE PLATE LH (w/o Rear No. 2 Seat)

- (a) Remove the 2 screws.

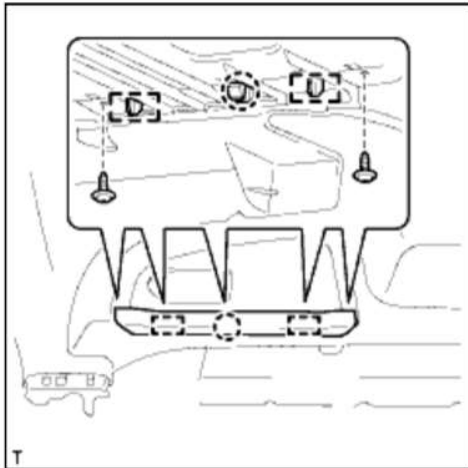


- (b) Detach the claw and 2 guides and remove the rear floor finish side plate.

75. REMOVE REAR FLOOR FINISH SIDE PLATE RH (w/o Rear No. 2 Seat)

HINT:

Use the same procedure described for the LH side.

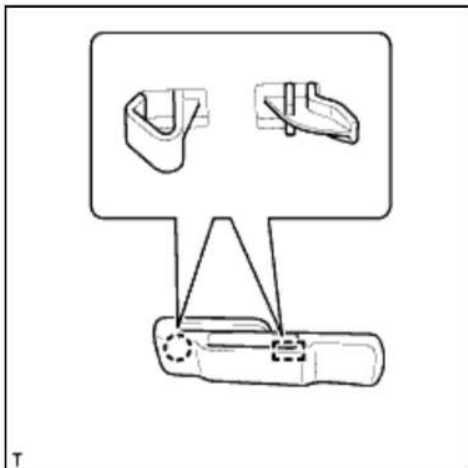

76. REMOVE REAR SEAT SHOULDER BELT HANGER LH (w/ Rear No. 2 Seat)

- (a) Detach the claw and guide and remove the rear seat shoulder belt hanger.


77. REMOVE REAR SEAT SHOULDER BELT HANGER RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedure described for the LH side.

78. REMOVE QUARTER TRIM LID SUB-ASSEMBLY RH (w/ Rear No. 2 Seat)

- (a) Detach the 4 claws and 2 guides and remove the quarter trim lid.

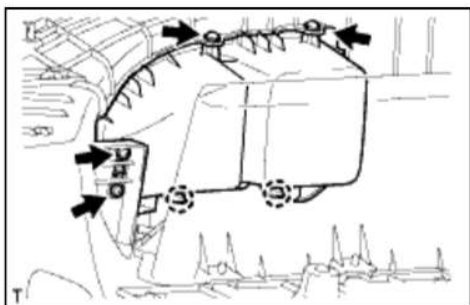

79. REMOVE DECK SIDE TRIM CUP HOLDER LH (w/ Rear No. 2 Seat)

- (a) Remove the 4 screws.
- (b) Detach the 2 claws and remove the deck side trim cup holder.

80. REMOVE DECK SIDE TRIM CUP HOLDER RH (w/ Rear No. 2 Seat)


HINT:

Use the same procedure described for the LH side.



Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM00000460H000X
Title: INTERIOR PANELS / TRIM: ROOF HEADLINING: DISASSEMBLY (2010 4Runner)		


DISASSEMBLY

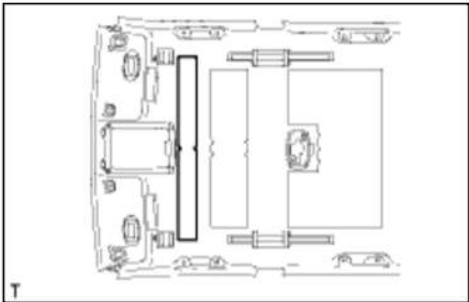

1. REMOVE NO. 1 ROOF SILENCER PAD (w/o Sliding Roof)


(a) Remove the No. 1 roof silencer pad.

2. REMOVE NO. 2 ROOF SILENCER PAD

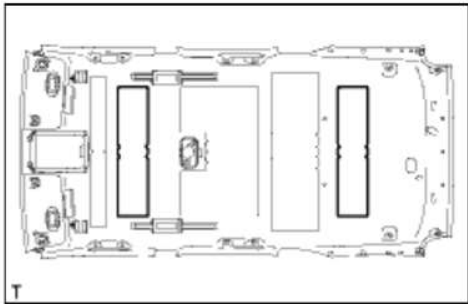

(a) w/o Sliding Roof:


Remove the 2 No. 2 roof silencer pads.

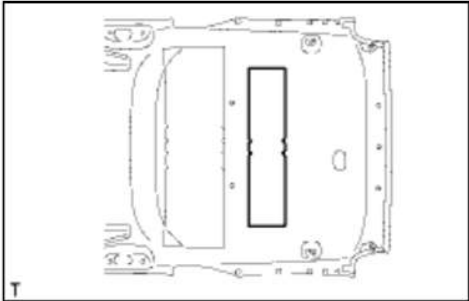

(b) w/ Sliding Roof:


Remove the No. 2 roof silencer pad.

3. REMOVE NO. 3 ROOF SILENCER PAD (w/o Sliding Roof)

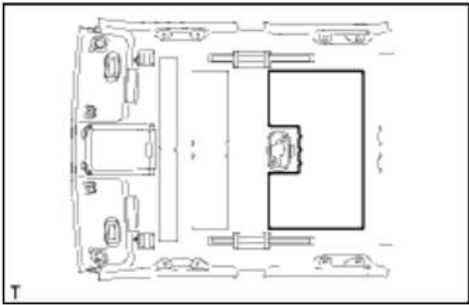


(a) Remove the No. 3 roof silencer pad.

4. REMOVE NO. 4 ROOF SILENCER PAD

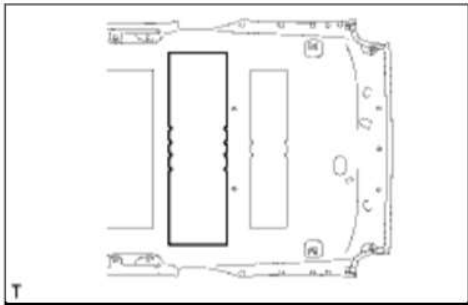


(a) w/o Sliding Roof:
Remove the No. 4 roof silencer pad.

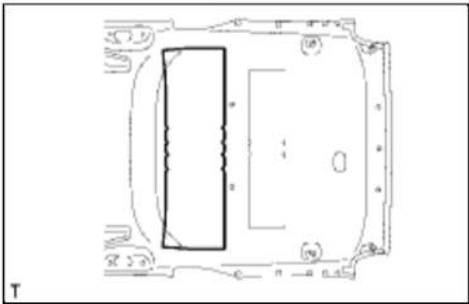

(b) w/ Sliding Roof:
Remove the No. 4 roof silencer pad.

5. REMOVE VANITY LIGHT ASSEMBLY

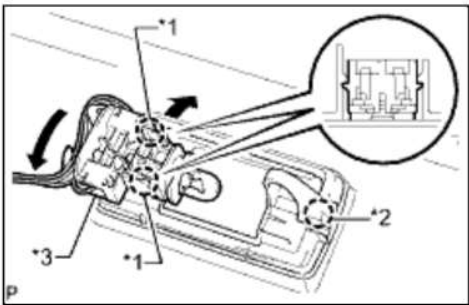

HINT:
Use the same procedure for the other vanity light.


- (a) Detach the 2 claws labeled A and separate the bulb holder from the vanity light as shown in the illustration.
- (b) Detach the claw labeled B and remove the vanity light.

Text in Illustration

*1	Claw A
*2	Claw B
*3	Bulb Holder

6. REMOVE NO. 1 ROOF WIRE

- (a) Turn the visor connectors approximately 90° clockwise and remove them from the roof headlining.
- (b) Detach each clamp and remove the tape and No. 1 roof wire.

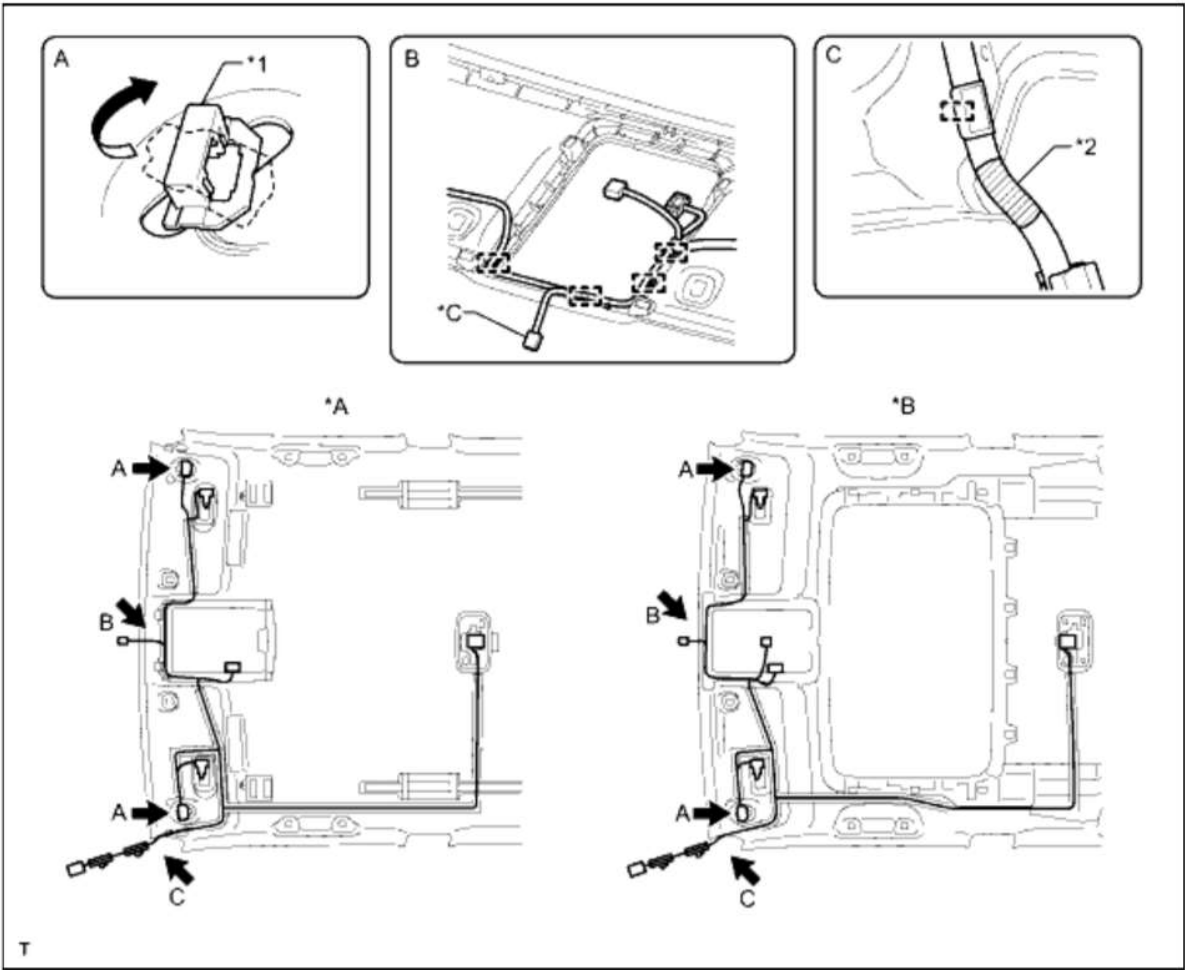

Text in Illustration

*A	w/o Sliding Roof	*B	w/ Sliding Roof
*C	w/ EC Mirror	-	-
*1	Visor Connector	*2	Marking Tape

 
7. REMOVE NO. 2 ANTENNA CORD SUB-ASSEMBLY

(a) w/o Sliding Roof:

Remove the No. 2 antenna cord sub-assembly .

(b) w/ Sliding Roof:

Remove the No. 2 antenna cord sub-assembly .



Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM00000460I000X
Title: INTERIOR PANELS / TRIM: ROOF HEADLINING: REASSEMBLY (2010 4Runner)		

REASSEMBLY


1. INSTALL NO. 2 ANTENNA CORD SUB-ASSEMBLY

- (a) w/o Sliding Roof:
Install the No. 2 antenna cord sub-assembly [INFO](#) .
- (b) w/ Sliding Roof:
Install the No. 2 antenna cord sub-assembly [INFO](#) .

2. INSTALL NO. 1 ROOF WIRE

- (a) Apply butyl tape to the roof headlining so that the tape is aligned with the wire harness marking as shown in the illustration.

HINT:
Use butyl tape that has a width of 10 mm (0.394 in.).

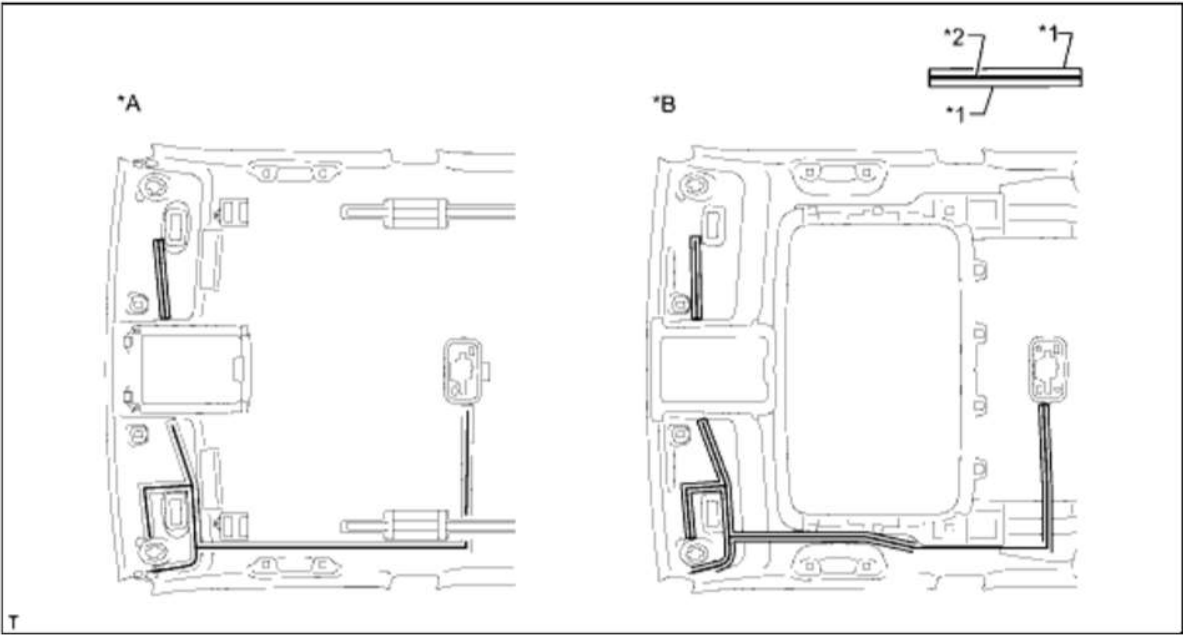

Text in Illustration


*A	w/o Sliding Roof	*B	w/ Sliding Roof
*1	Wire Harness Marking	*2	Butyl Tape

- (b) Align the marking tape on the No. 1 roof wire with the roof tongue of the roof headlining as shown in the part of the illustration labeled A and attach the wire to the hook.
- (c) Align the marking tape on the No. 1 roof wire with the V mark on the roof headlining as shown in the part of the illustration labeled B and attach the wire to the roof headlining to install it.

HINT:

- For the area in the illustration labeled E, attach the No. 1 roof wire so that its marked surface contacts the roof headlining.
- Be sure to securely attach the roof wire so that it is not twisted.

- (d) Attach each clamp.
- (e) Turn the visor connectors approximately 90° clockwise to install them to the roof headlining.

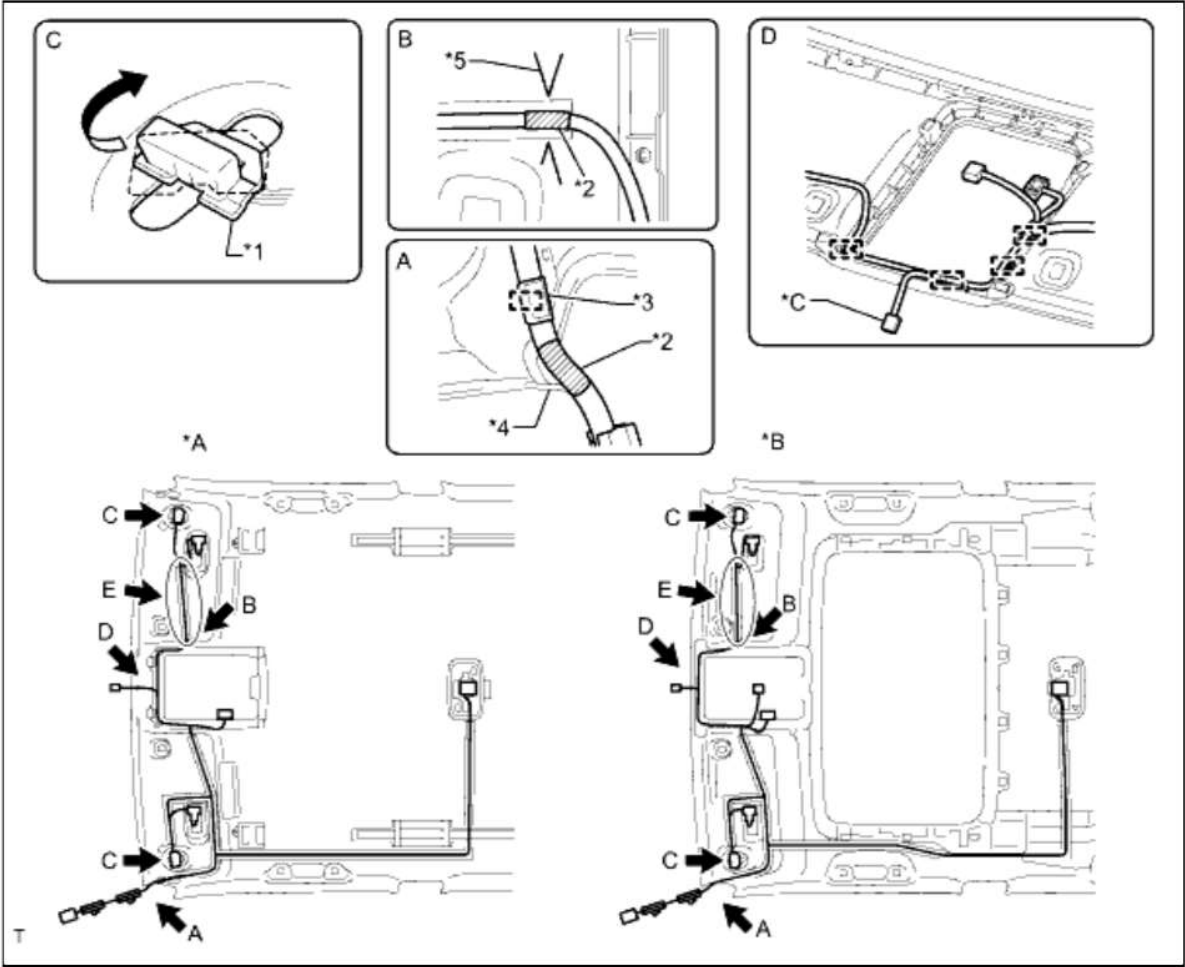

Text in Illustration

* A	w/o Sliding Roof	* B	w/ Sliding Roof
* C	w/ EC Mirror	-	-
* 1	Visor Connector	* 2	Marking Tape
* 3	Hook	* 4	Roof Tongue
* 5	V Mark	-	-


3. INSTALL VANITY LIGHT ASSEMBLY

HINT:

Use the same procedure for the other vanity light.


- (a) Attach the 3 claws to install the vanity light.

4. INSTALL NO. 4 ROOF SILENCER PAD

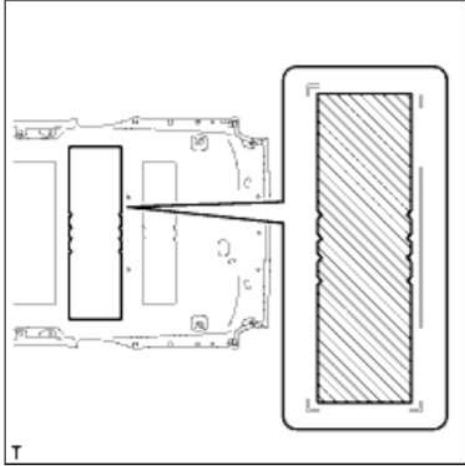

- (a) w/o Sliding Roof:

Align the No. 4 roof silencer pad with the markings on the roof headlining and install the No. 4 roof silencer pad to the position shown in the illustration using hot-melt glue or double-sided tape.

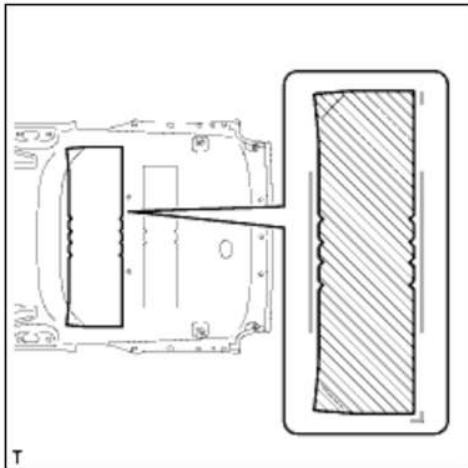


- (b) w/ Sliding Roof:


Align the No. 4 roof silencer pad with the markings on the roof headlining and install the No. 4 roof silencer pad to the position shown in the illustration using hot-melt glue or double-sided tape.

5. INSTALL NO. 3 ROOF SILENCER PAD (w/o Sliding Roof)

- (a) Align the No. 3 roof silencer pad with the markings on the roof headlining and install the No. 3 roof silencer pad to the position shown in the illustration using hot-melt glue or double-sided tape.

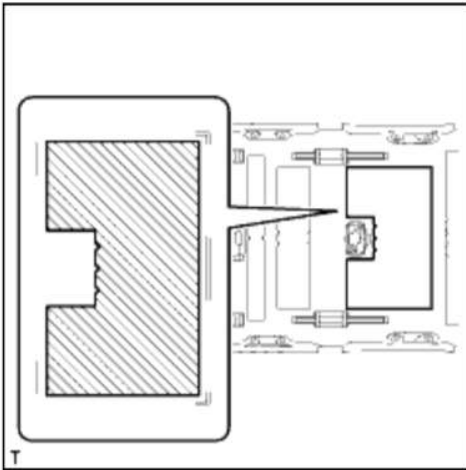

6. INSTALL NO. 2 ROOF SILENCER PAD


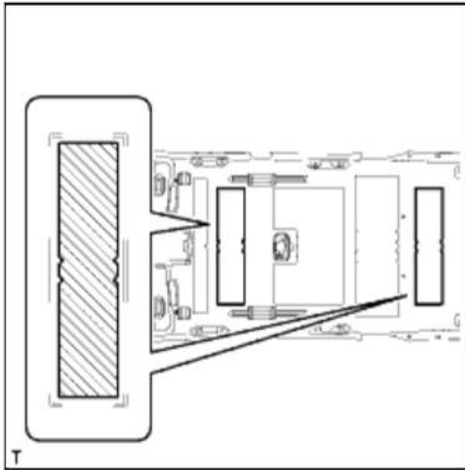


(a) w/o Sliding Roof:

Align the 2 No. 2 roof silencer pads with the markings on the roof headlining and install the 2 No. 2 roof silencer pads to the position shown in the illustration using hot-melt glue or double-sided tape.

(b) w/ Sliding Roof:

Align the No. 2 roof silencer pad with the markings on the roof headlining and install the No. 2 roof silencer pad to the position shown in the illustration using hot-melt glue or double-sided tape.

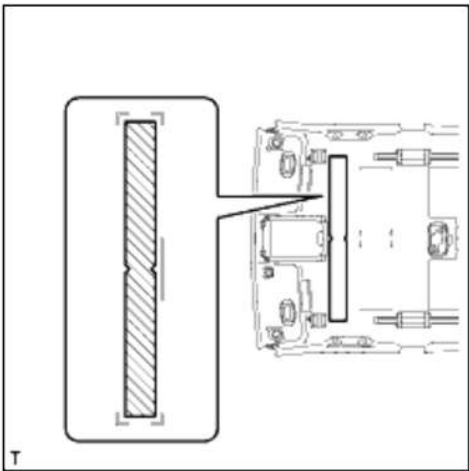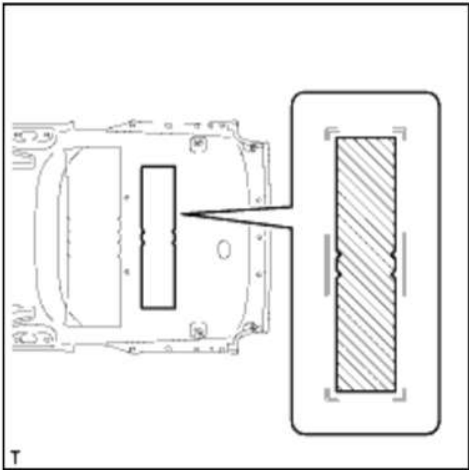

7. INSTALL NO. 1 ROOF SILENCER PAD (w/o Sliding Roof)

- (a) Align the No. 1 roof silencer pad with the markings on the roof headlining and install the No. 1 roof silencer pad to the position shown in the illustration using hot-melt glue or double-sided tape.

Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM00000460E000X
Title: INTERIOR PANELS / TRIM: ROOF HEADLINING: INSTALLATION (2010 4Runner)		

INSTALLATION

HINT:

A bolt without a torque specification is shown in the standard bolt chart  .

1. INSTALL DECK SIDE TRIM CUP HOLDER LH (w/ Rear No. 2 Seat)

- (a) Attach the 2 claws to install the deck side trim cup holder.
- (b) Install the 4 screws.

2. INSTALL DECK SIDE TRIM CUP HOLDER RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedure described for the LH side.

3. INSTALL QUARTER TRIM LID SUB-ASSEMBLY RH (w/ Rear No. 2 Seat)

- (a) Attach the 4 claws and 2 guides to install the quarter trim lid.

4. INSTALL REAR SEAT SHOULDER BELT HANGER LH (w/ Rear No. 2 Seat)

- (a) Attach the claw and guide to install the rear seat shoulder belt hanger.

5. INSTALL REAR SEAT SHOULDER BELT HANGER RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedure described for the LH side.

6. INSTALL REAR FLOOR FINISH SIDE PLATE LH (w/o Rear No. 2 Seat)

- (a) Attach the claw and 2 guides to install the rear floor finish side plate.
- (b) Install the 2 screws.

7. INSTALL REAR FLOOR FINISH SIDE PLATE RH (w/o Rear No. 2 Seat)

HINT:

Use the same procedure described for the LH side.

8. INSTALL SIDE TRIM BOX LH (w/o Rear No. 2 Seat)

- (a) Attach the 8 claws to install the side trim box.
- (b) Install the 2 screws.

9. INSTALL SIDE TRIM BOX RH (w/o Rear No. 2 Seat)

HINT:

Use the same procedure described for the LH side.

10. INSTALL REAR COMBINATION LIGHT SERVICE COVER LH

- (a) Attach the 2 claws and 2 guides to install the rear combination light service cover.

11. INSTALL REAR COMBINATION LIGHT SERVICE COVER RH

HINT:

Use the same procedure described for the LH side.

12. INSTALL QUARTER TRIM JACK COVER SUB-ASSEMBLY

- (a) Attach the 3 claws and 2 guides to install the quarter trim jack cover.

13. INSTALL QUARTER TRIM COVER

HINT:

Use the same procedure for the other quarter trim cover.

- (a) Attach the 2 claws to install the quarter trim cover.

14. INSTALL REAR NO. 3 SIDE RAIL SPACER LH (w/ Rear No. 2 Seat)

- (a) Attach the 2 claws to install the rear No. 3 side rail spacer.

15. INSTALL REAR NO. 3 SIDE RAIL SPACER RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedure described for the LH side.

16. INSTALL REAR NO. 2 SIDE RAIL SPACER LH (w/o Rear No. 2 Seat)

- (a) Attach the 3 claws to install the rear No. 2 side rail spacer.

17. INSTALL REAR NO. 2 SIDE RAIL SPACER RH (w/o Rear No. 2 Seat)

HINT:

Use the same procedure described for the LH side.

18. INSTALL FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

- (a) Attach the 4 claws to install the front shoulder belt anchor plate.

19. INSTALL FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

20. INSTALL ROOF HEADLINING ASSEMBLY




HINT:

Before installing the roof headlining, move the front seats and rear No. 1 seat to the positions shown in the illustration.


- (a) Place the roof headlining into the vehicle through the back door.

NOTICE:

Be careful not to damage the roof headlining when placing it in the cabin.

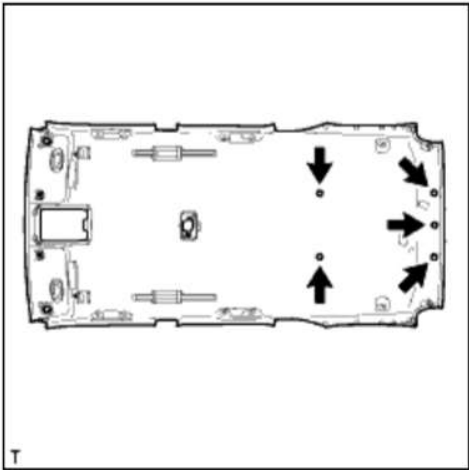

- (b) w/o Sliding Roof:
 - (1) Install the roof headlining with the 5 clips.

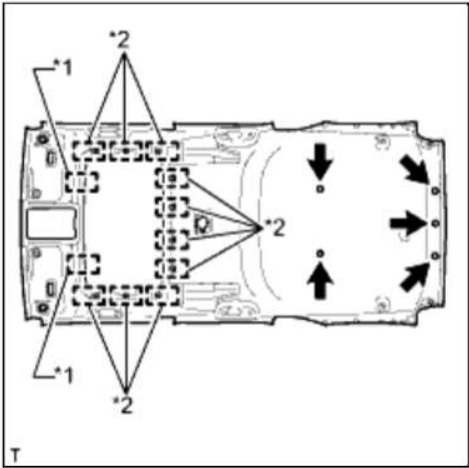

- (c) w/ Sliding Roof:
 - (1) Attach the 2 guides and 10 fasteners to install the roof headlining.

Text in Illustration

*1	Guide
*2	Fastener

- (d) Connect the connector and attach the clamp to the rear pillar RH.
- (e) Connect the connector and attach the 2 clamps to the front pillar RH.
- (f) Connect the connector and attach the 5 clamps to the front pillar LH.
- (g) w/ Sliding Roof:
 - Connect the drive gear connector.
- (h) w/ EC Mirror:
 - Connect the inner mirror connector.

21. INSTALL ROOF SIDE RAIL GARNISH ASSEMBLY LH

- (a) Attach the 3 clips to install the roof side rail garnish.

22. INSTALL ROOF SIDE RAIL GARNISH ASSEMBLY RH**HINT:**

Use the same procedure described for the LH side.

23. INSTALL NO. 1 ROOM LIGHT ASSEMBLY **24. INSTALL INNER REAR VIEW MIRROR STAY HOLDER COVER (w/ EC Mirror)** **25. INSTALL MAP LIGHT ASSEMBLY** **26. INSTALL DRIVE MONITOR SWITCH** **27. INSTALL VISOR HOLDER****HINT:**

Use the same procedure for the other visor holder.

- (a) Attach the 2 claws.
(b) Push in the visor holder to install it.

28. INSTALL VISOR ASSEMBLY LH

- (a) Install the visor with the 2 screws.

29. INSTALL VISOR ASSEMBLY RH**HINT:**

Use the same procedure described for the LH side.

30. INSTALL VISOR BRACKET COVER LH

- (a) Attach the 4 claws to install the visor bracket cover.

31. INSTALL VISOR BRACKET COVER RH**HINT:**


Use the same procedure described for the LH side.

32. INSTALL COAT HOOK**HINT:**

Use the same procedure for the other coat hook.


- (a) Install the coat hook with the screw.
(b) Attach the claw to close the cover.

33. INSTALL REAR ASSIST GRIP ASSEMBLY

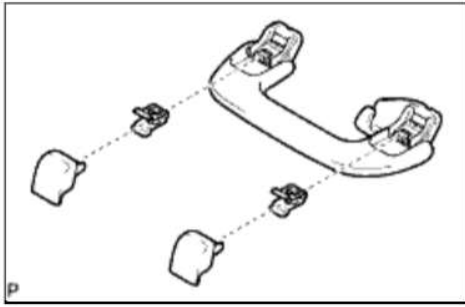
**HINT:**

Use the same procedure for the other rear assist grip.

- (a) Assemble the rear assist grip as shown in the illustration.

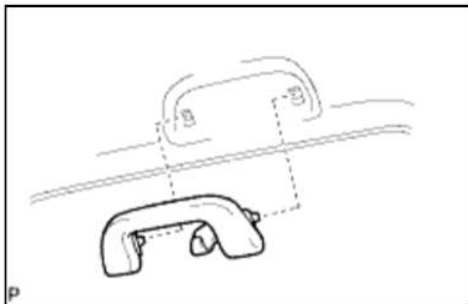


- (b) Install the rear assist grip.

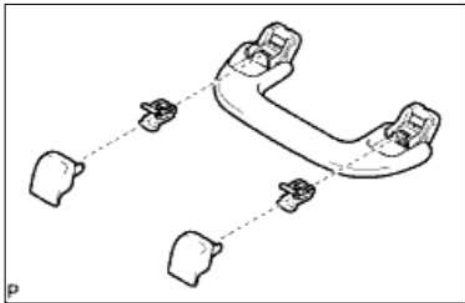34. INSTALL ASSIST GRIP SUB-ASSEMBLY**HINT:**

Use the same procedure for the other assist grip.

- (a) Assemble the assist grip as shown in the illustration.

- (b) Install the assist grip.

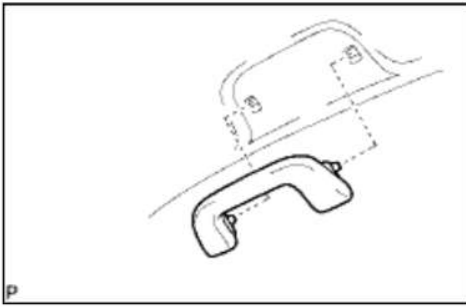

35. INSTALL REAR WINDOW SIDE GARNISH ASSEMBLY LH

- (a) Attach the 4 claws and 2 guides and pass the rear No. 1 seat outer belt floor anchor through the rear window side garnish.
- (b) Attach the 7 clips and 4 guides to install the rear window side garnish.

36. INSTALL REAR WINDOW SIDE GARNISH ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

37. INSTALL REAR NO. 2 WINDOW SIDE GARNISH ASSEMBLY LH

- (a) w/ Rear No. 2 Seat:
 - (1) Attach the 7 claws and guide and pass the rear No. 2 seat outer belt floor anchor through the rear No. 2 window side garnish.
- (b) Attach the 6 clips and guide to install the rear No. 2 window side garnish.

38. INSTALL REAR NO. 2 WINDOW SIDE GARNISH ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

39. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH

- (a) w/o Rear No. 2 Seat:
 - (1) Pass the rear seatback lock control lever base through the deck trim side panel.
 - (2) Attach the 6 claws and 2 guides to install the rear seatback lock control lever base to the deck trim side panel.
 - (3) Attach the 7 clips, 5 claws and 2 guides to install the deck trim side panel.
 - (4) Install the 3 bolts and 2 screws.
 - (5) Install the rear No. 1 seat outer belt floor anchor with the bolt.

Torque: 42 N·m (428 kgf·cm, 31ft·lbf)

- (b) w/ Rear No. 2 Seat:
 - (1) Attach the 7 clips, 5 claws and 2 guides to install the deck trim side panel.
 - (2) Install the 3 bolts and 2 screws.
 - (3) Install the rear No. 1 seat outer belt floor anchor with the bolt.

Torque: 42 N·m (428 kgf·cm, 31ft·lbf)

(4) Install the rear No. 2 seat outer belt floor anchor with the bolt.

Torque: 42 N·m (428 kgf·cm, 31ft·lbf)

40. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH

(a) w/o Rear No. 2 Seat:

- (1) Connect the connector.
- (2) Pass the rear seatback lock control lever base through the deck trim side panel.
- (3) Attach the 6 claws and 2 guides to install the rear seatback lock control lever base to the deck trim side panel.
- (4) Attach the 7 clips, 5 claws and 2 guides to install the deck trim side panel.
- (5) Install the 3 bolts and 2 screws.
- (6) Install the rear No. 1 seat outer belt floor anchor with the bolt.

Torque: 42 N·m (428 kgf·cm, 31ft·lbf)

(b) w/ Rear No. 2 Seat:

- (1) Connect the connector.
- (2) Attach the 7 clips, 5 claws and 2 guides to install the deck trim side panel.
- (3) Install the 3 bolts and 2 screws.
- (4) Install the rear No. 1 seat outer belt floor anchor with the bolt.

Torque: 42 N·m (428 kgf·cm, 31ft·lbf)

(5) Install the rear No. 2 seat outer belt floor anchor with the bolt.

Torque: 42 N·m (428 kgf·cm, 31ft·lbf)

41. INSTALL NO. 1 LUGGAGE COMPARTMENT TRIM COVER

HINT:

Use the same procedure described for the No. 1 luggage compartment trim cover.

42. INSTALL FRONT DECK SIDE TRIM COVER LH

(a) Attach the 2 claws to install the front deck side trim cover.

43. INSTALL FRONT DECK SIDE TRIM COVER RH

HINT:

Use the same procedure described for the LH side.

44. INSTALL NO. 1 LUGGAGE COMPARTMENT TRIM HOOK

HINT:

Use the same procedure for the other No. 1 luggage compartment trim hook.

(a) Install the No. 1 luggage compartment trim hook by turning it clockwise.

45. INSTALL REAR NO. 1 SEAT OUTER LAP BELT ANCHOR COVER

HINT:

Use the same procedure for the other rear No. 1 seat outer lap belt anchor cover.

- (a) Attach the 3 claws to install the rear No. 1 seat outer lap belt anchor cover.

46. INSTALL REAR FLOOR CARPET ASSEMBLY (w/o Deck Board)

- (a) Attach the 4 claws to install the rear floor carpet.

47. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

- (a) Attach the 5 clips to install the rear floor mat rear support plate.

48. INSTALL INNER FLOOR SIDE RAIL SUB-ASSEMBLY (w/ Deck Board)

- (a) Install the inner floor side rail with the 2 bolts and 4 nuts.

49. INSTALL DECK BOARD ASSEMBLY (w/ Deck Board)

- (a) Attach the 2 guides to install the deck board.
- (b) Install the 8 bolts.

50. INSTALL LUGGAGE COMPARTMENT SIDE COVER SUB-ASSEMBLY LH (w/ Deck Board)

- (a) Attach the 4 clips and 2 guides to install the luggage compartment side cover.

51. INSTALL LUGGAGE COMPARTMENT SIDE COVER SUB-ASSEMBLY RH (w/ Deck Board)

HINT:

Use the same procedure described for the LH side.

52. INSTALL REAR NO. 2 FLOOR BOARD ASSEMBLY (w/ Deck Board)

- (a) Attach the 3 clips to install the rear No. 2 floor board.

53. INSTALL NO. 2 DECK BOARD SUB-ASSEMBLY (w/ Deck Board)

- (a) Attach the 2 clips and 2 guides to install the No. 2 deck board.

54. INSTALL NO. 2 LUGGAGE COMPARTMENT TRIM COVER (w/ Deck Board, w/o Rear No. 2 Seat)

HINT:

Use the same procedure for all No. 2 luggage compartment trim covers.

- (a) Install the luggage hold belt striker and No. 2 luggage compartment trim cover with the bolt.
- (b) Attach the 2 claws to close the cover.

55. INSTALL NO. 1 DECK BOARD SUB-ASSEMBLY (w/o Deck Board)

- (a) Attach the clip to install the No. 1 deck board.

56. INSTALL NO. 1 LUGGAGE COMPARTMENT TRIM COVER (w/o Deck Board)

HINT:

Use the same procedure for the other No. 1 luggage compartment trim cover.

- (a) Install the luggage hold belt striker and No. 1 luggage compartment trim cover with the bolt.
- (b) Attach the 4 claws to close the cover.

57. INSTALL CENTER PILLAR GARNISH LH

- (a) Pass the rear front seat outer belt floor anchor through the center pillar garnish.

- (b) Attach the 2 clips and 2 guides to install the center pillar garnish.
- (c) Install the bolt.

58. INSTALL CENTER PILLAR GARNISH RH

HINT:

Use the same procedure described for the LH side.

59. INSTALL LOWER CENTER PILLAR GARNISH LH

- (a) Attach the 4 claws and 2 clips to install the lower center pillar garnish.
- (b) Install the front seat outer belt floor anchor with the bolt.

Torque: 42 N·m (428 kgf·cm, 31ft·lbf)

60. INSTALL LOWER CENTER PILLAR GARNISH RH

HINT:

Use the same procedure described for the LH side.


61. INSTALL OUTER LAP BELT ANCHOR COVER

HINT:

Use the same procedure for the other outer lap belt anchor cover.

- (a) Attach the 3 claws to install the outer lap belt anchor cover.

62. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH

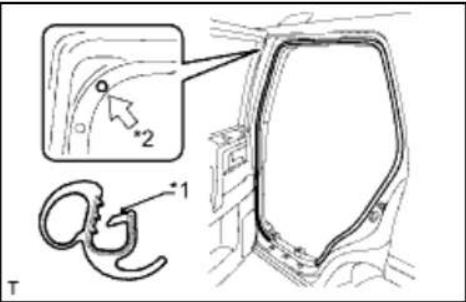

- (a) Align the paint mark on the rear door opening trim weatherstrip with the mark position on the vehicle and install the rear door opening trim weatherstrip as shown in the illustration.

Text in Illustration

* 1	Paint Mark
* 2	Mark Position

63. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedure described for the LH side.

64. INSTALL REAR DOOR SCUFF PLATE LH

- (a) Attach the 3 clips, 6 claws and 2 guides to install the rear door scuff plate.

65. INSTALL REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedure described for the LH side.

66. INSTALL QUARTER SCUFF PLATE LH (w/ Rear No. 2 Seat)

- (a) Install the quarter scuff plate with the 2 bolts.

67. INSTALL QUARTER SCUFF PLATE RH (w/ Rear No. 2 Seat)**HINT:**

Use the same procedure described for the LH side.

68. INSTALL REAR NO. 1 FLOOR STEP COVER (w/ Rear No. 2 Seat)**HINT:**

Use the same procedure for all rear No. 1 floor step covers.

- (a) Attach the 2 claws to install the rear No. 1 floor step cover.

69. INSTALL FRONT PILLAR GARNISH LH

- (a) Attach the 2 guides and 2 clips to install a new front pillar garnish.

NOTICE:

Do not reinstall a front pillar garnish that has been removed.

70. INSTALL FRONT PILLAR GARNISH RH

- (a) Attach the 3 guides to install the front pillar garnish.


71. INSTALL NO. 1 ASSIST GRIP

- (a) Attach the 2 claws to install the No. 1 assist grip.
(b) Install the 2 bolts.

72. INSTALL ASSIST GRIP PLUG**HINT:**

Use the same procedure for the other assist grip plug.

- (a) Attach the 2 claws to install the assist grip plug.

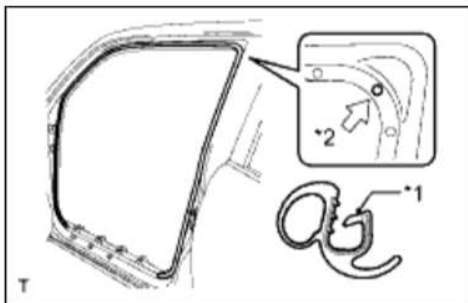**73. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH**

- (a) Align the paint mark on the front door opening trim weatherstrip with the mark position on the vehicle and install the front door opening trim weatherstrip as shown in the illustration.

Text in Illustration

* 1	Paint Mark
* 2	Mark Position

74. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedure described for the LH side.

75. INSTALL COWL SIDE TRIM BOARD LH

(a) Attach the clip and claw to install the cowl side trim board.

76. INSTALL COWL SIDE TRIM BOARD RH

HINT:

Use the same procedure described for the LH side.

77. INSTALL DOOR SCUFF PLATE ASSEMBLY LH

(a) Attach the 4 clips, 10 claws and 2 guides to install the door scuff plate.

78. INSTALL DOOR SCUFF PLATE ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

79. INSTALL REAR NO. 2 SEAT ASSEMBLY (w/ Rear No. 2 Seat)

(a) Install the rear No. 2 seat assembly .

80. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected .

