



D RELAY LOCATIONS


[Engine Compartment] (LHD)

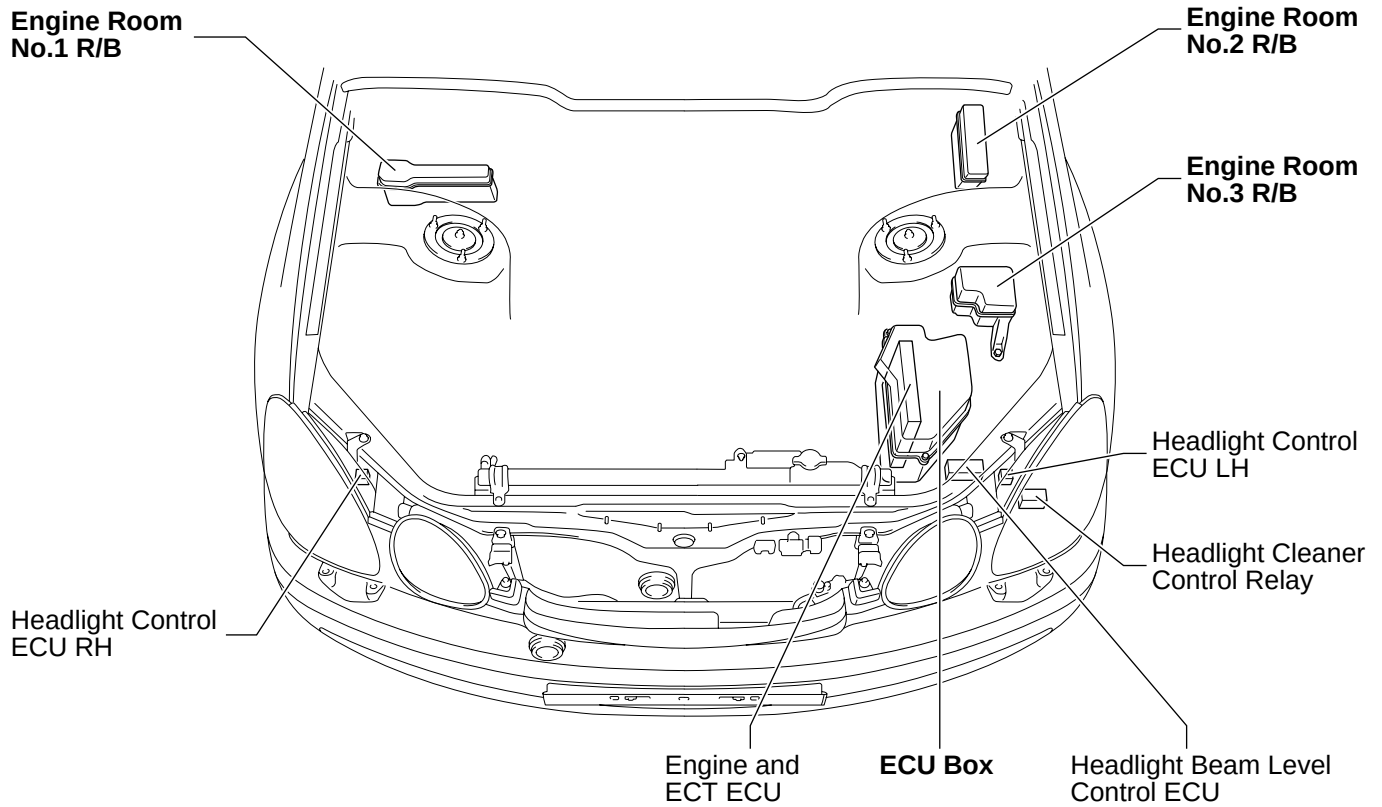


(RHD)

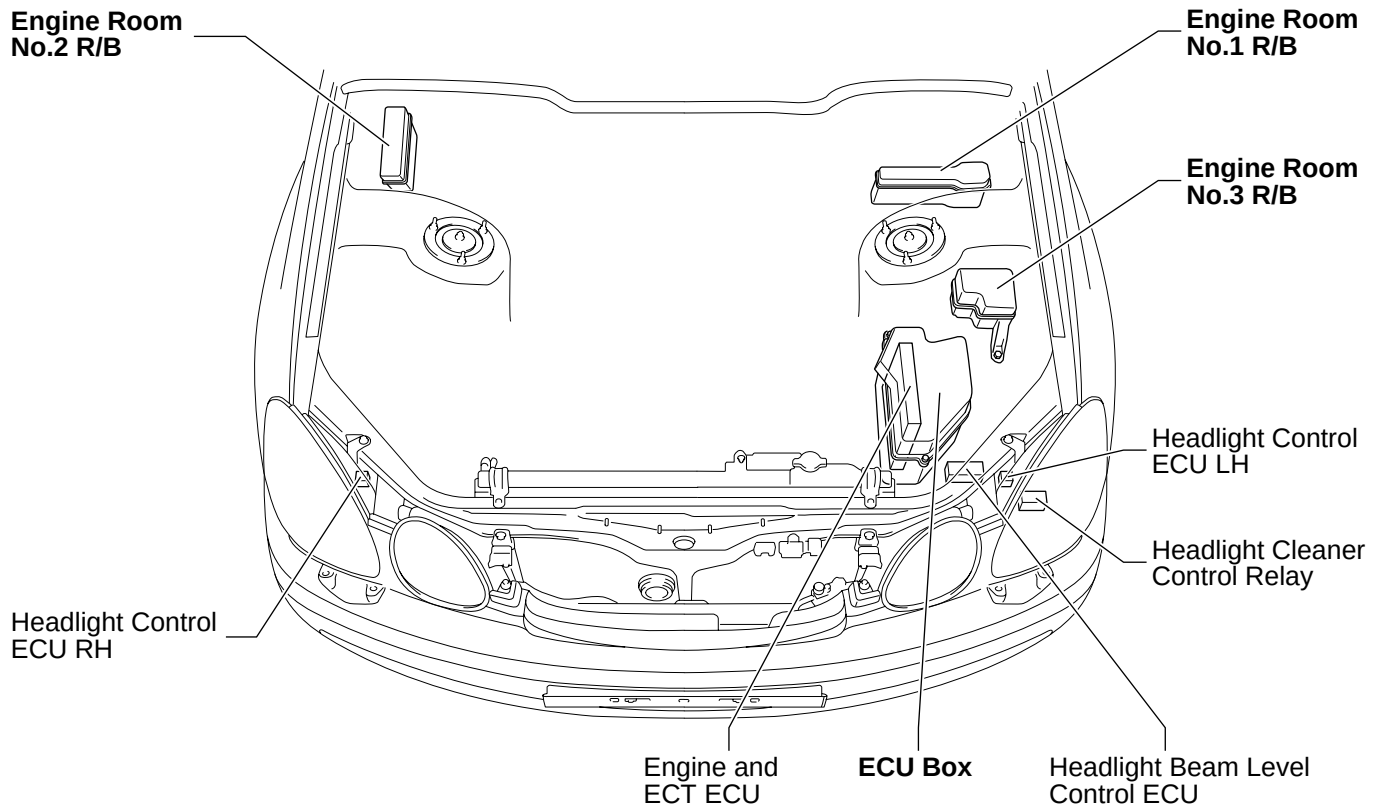

[Instrument Panel] (LHD)

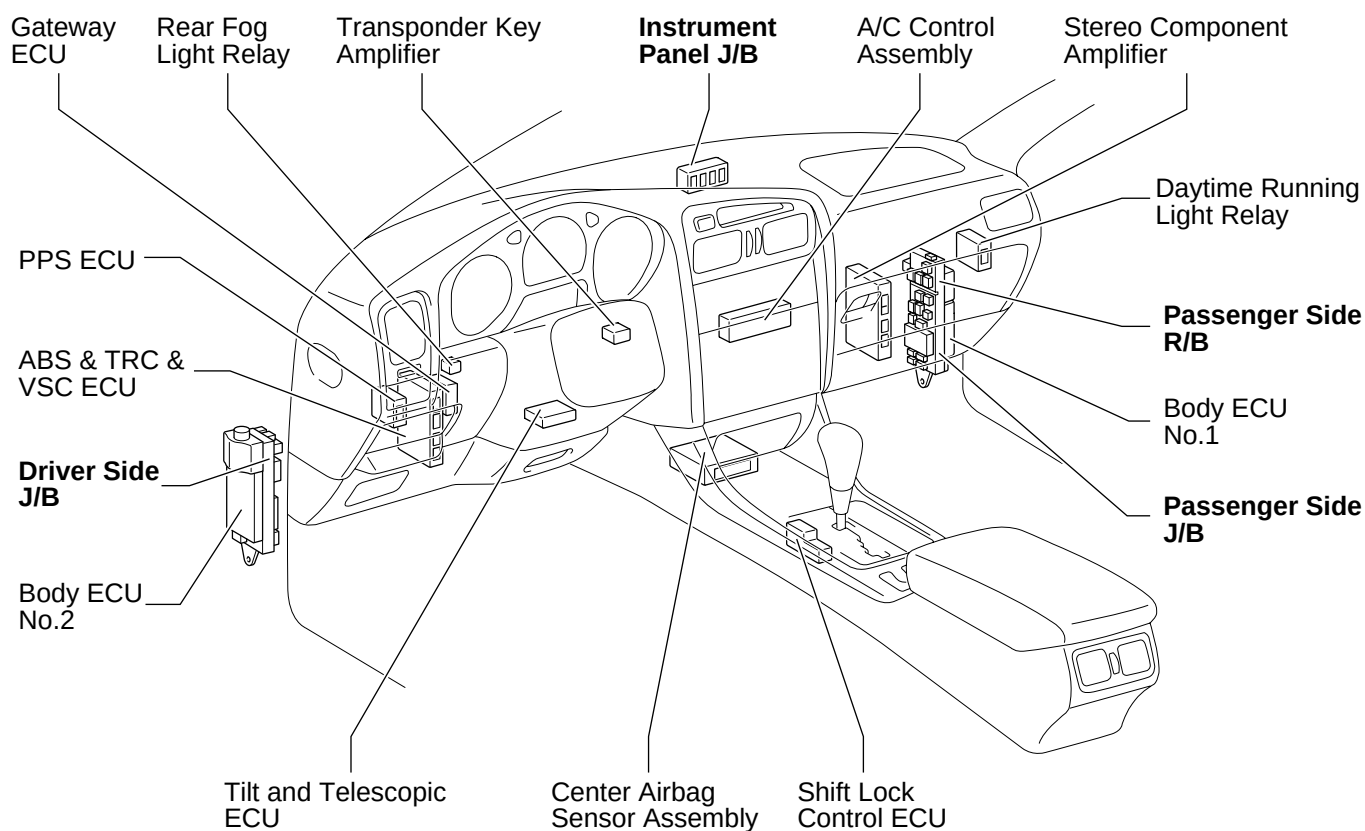


(RHD)

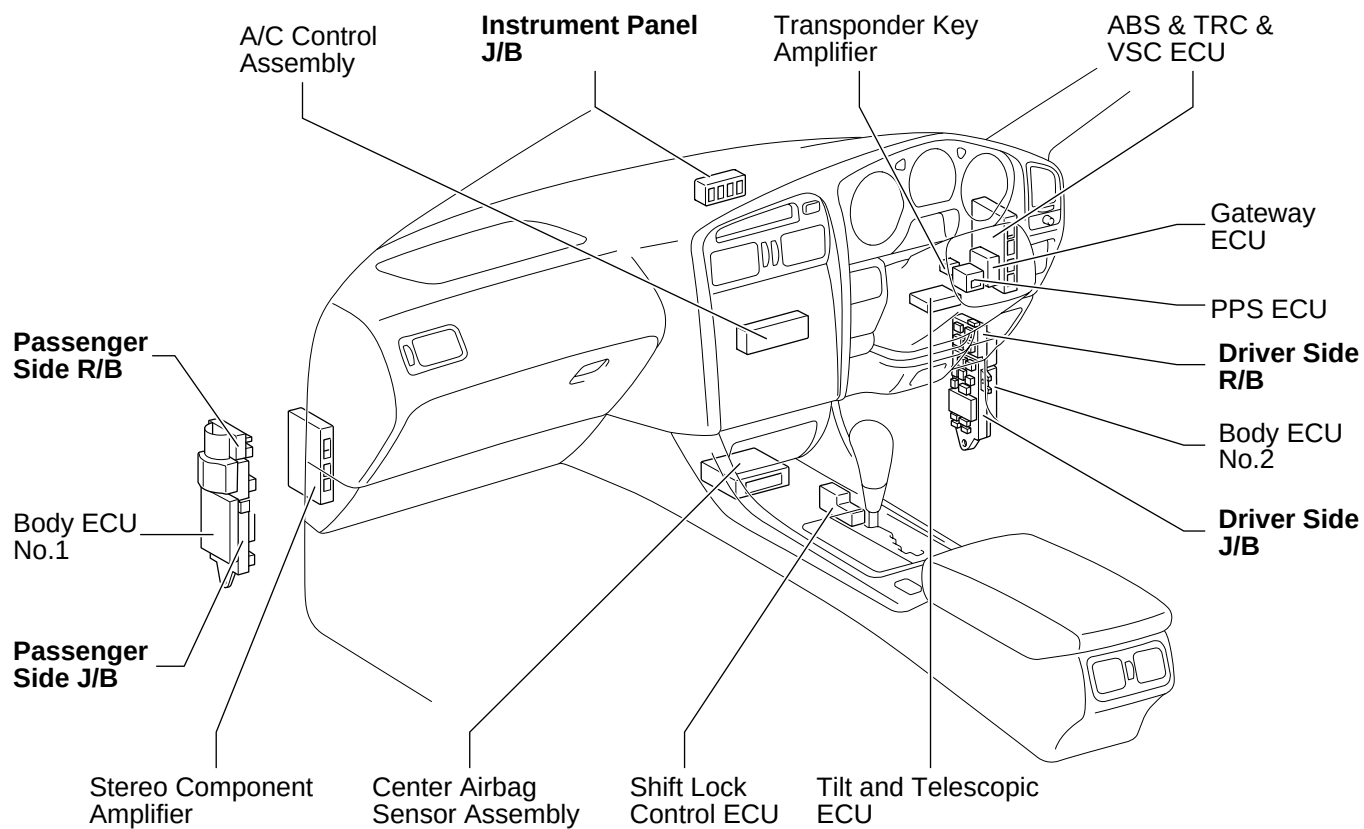


D RELAY LOCATIONS

[Body]

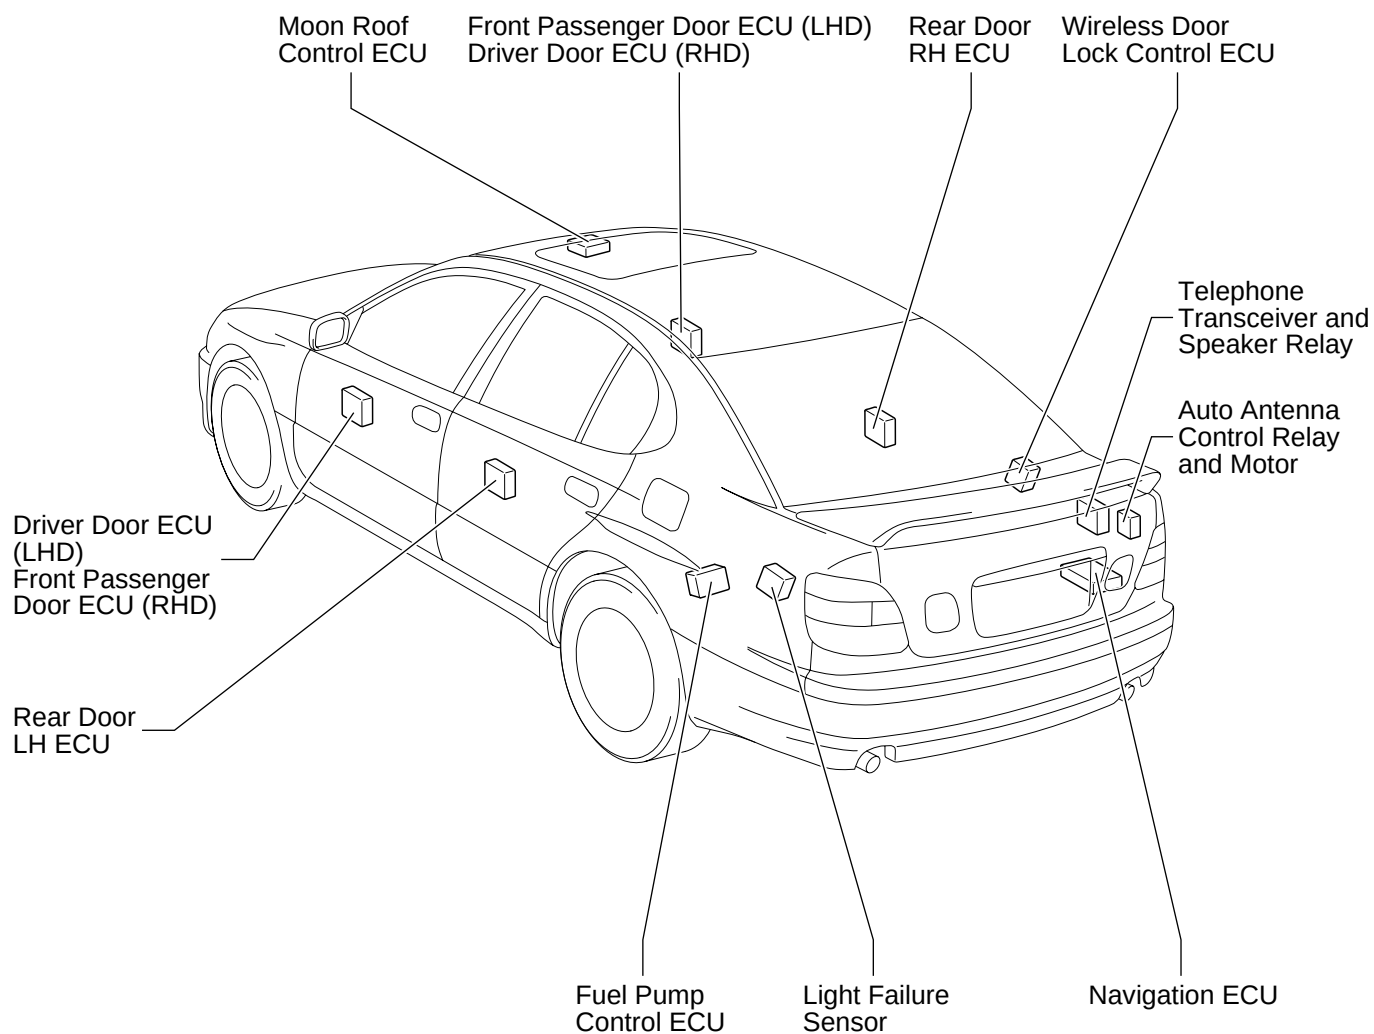

[Seat]

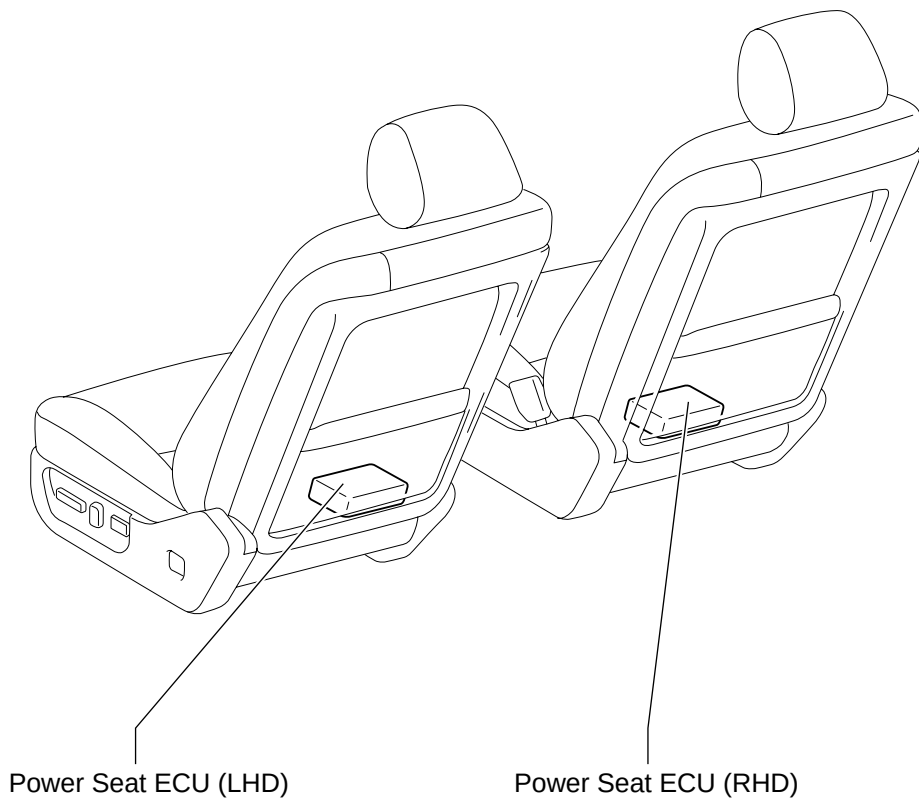


D RELAY LOCATIONS


① : Engine Room No.1 R/B

LHD : Engine Compartment Right (See Page 22)

RHD : Engine Compartment Left (See Page 22)

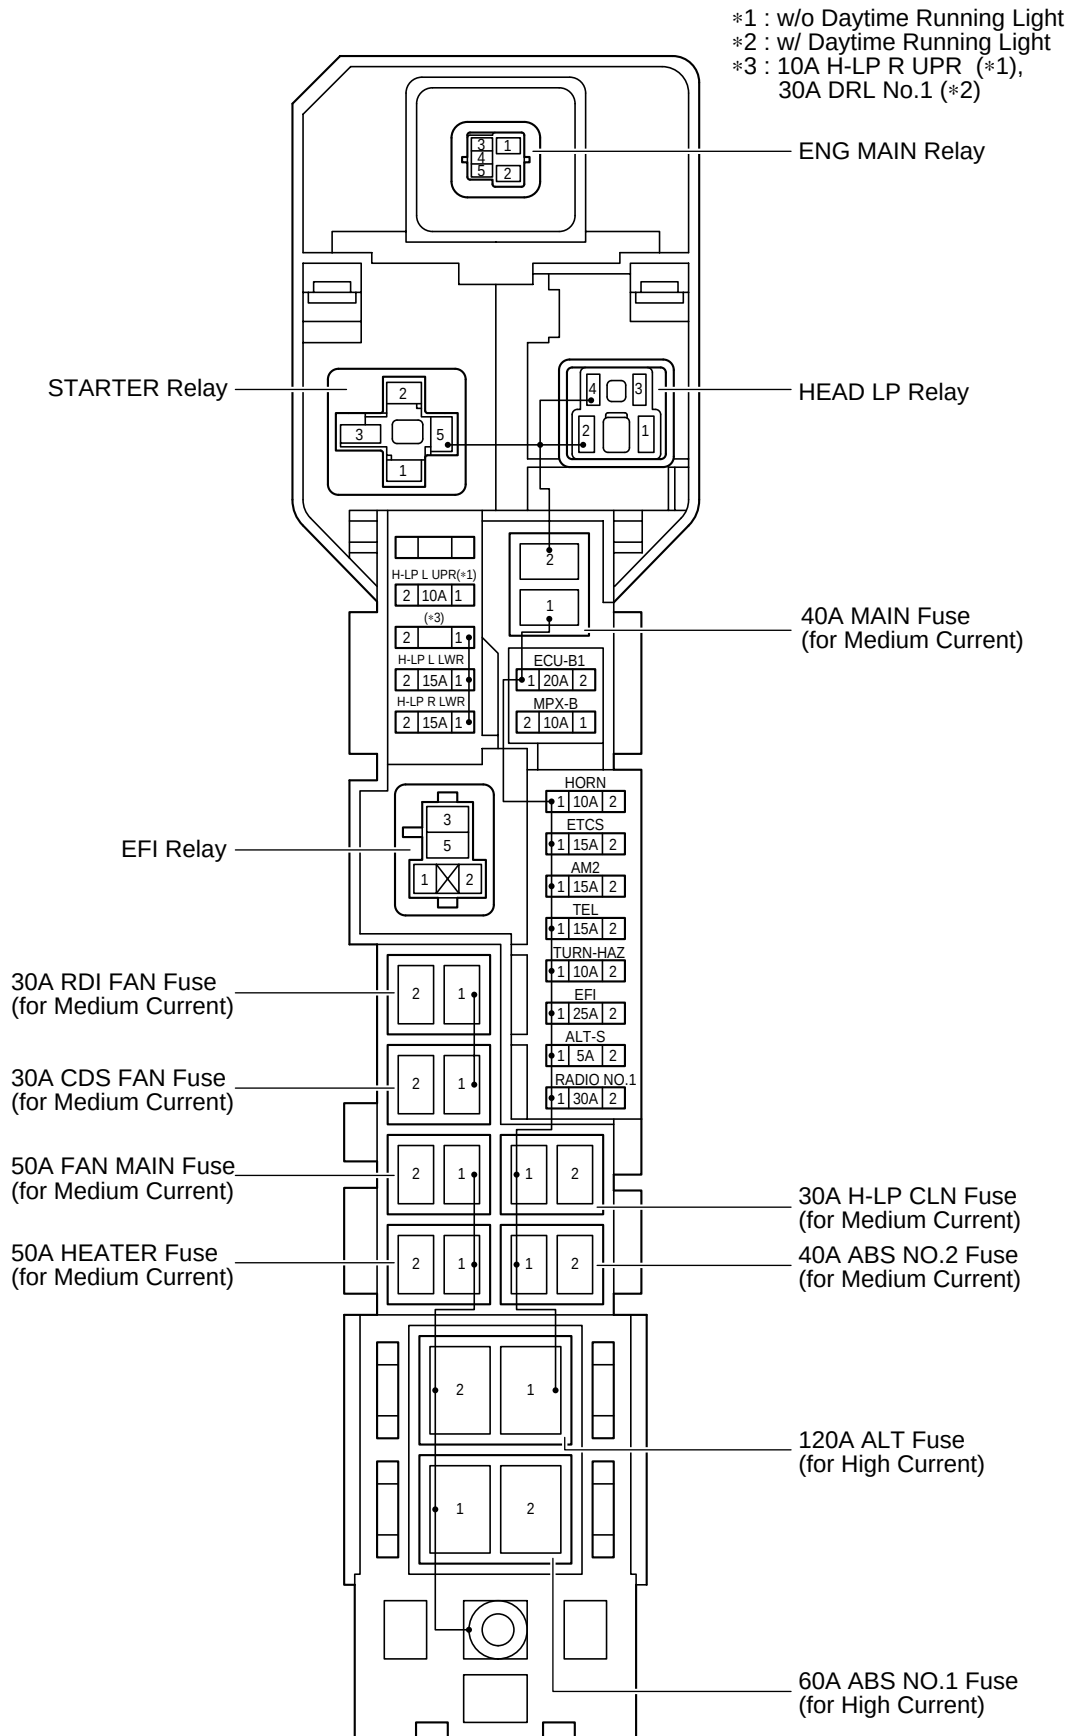


② : Engine Room No.2 R/B	LHD : Engine Compartment Left (See Page 22)
	RHD : Engine Compartment Right (See Page 22)

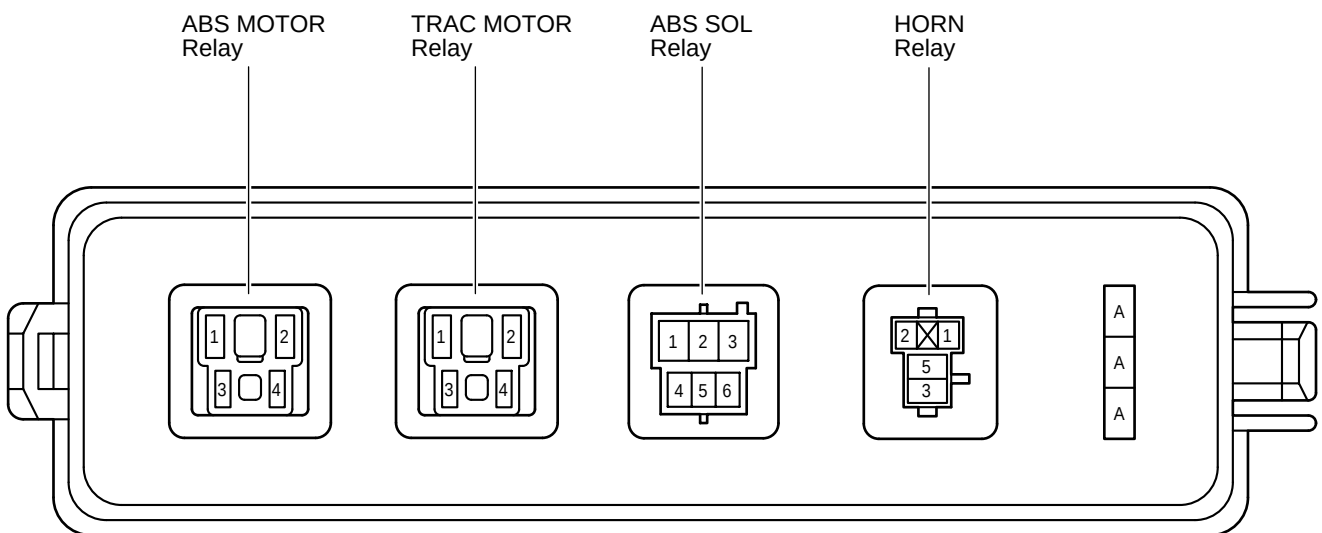


D RELAY LOCATIONS


③ : Engine Room No.3 R/B Engine Compartment Left (See Page 22)

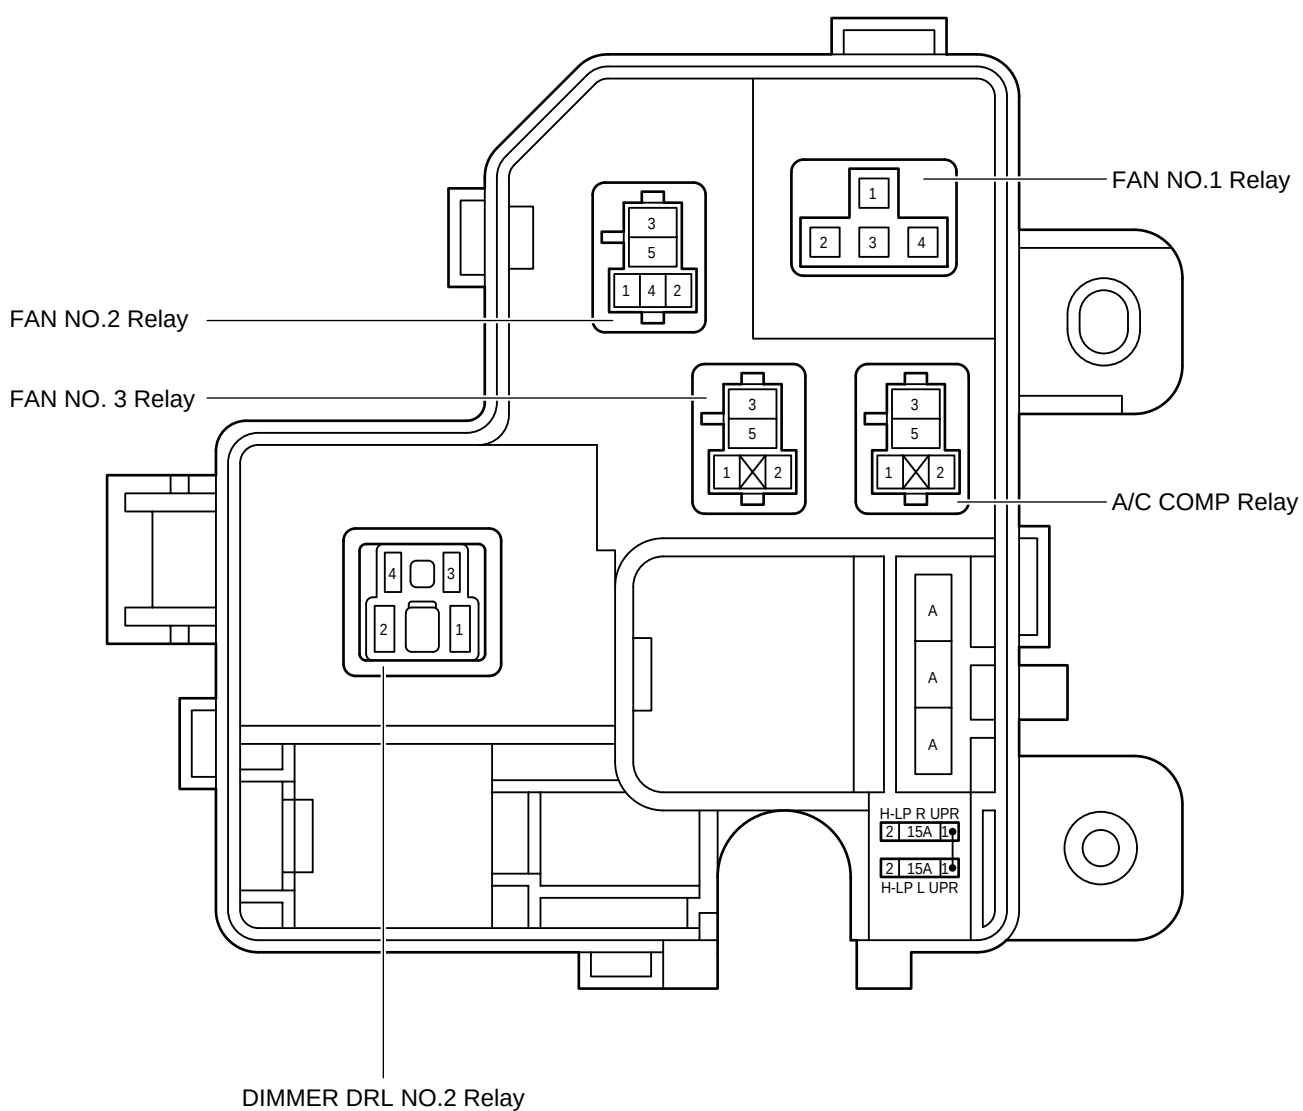

④ : Passenger Side R/B	LHD : Right Kick Panel (See Page 23)
	RHD : Left Kick Panel (See Page 23)

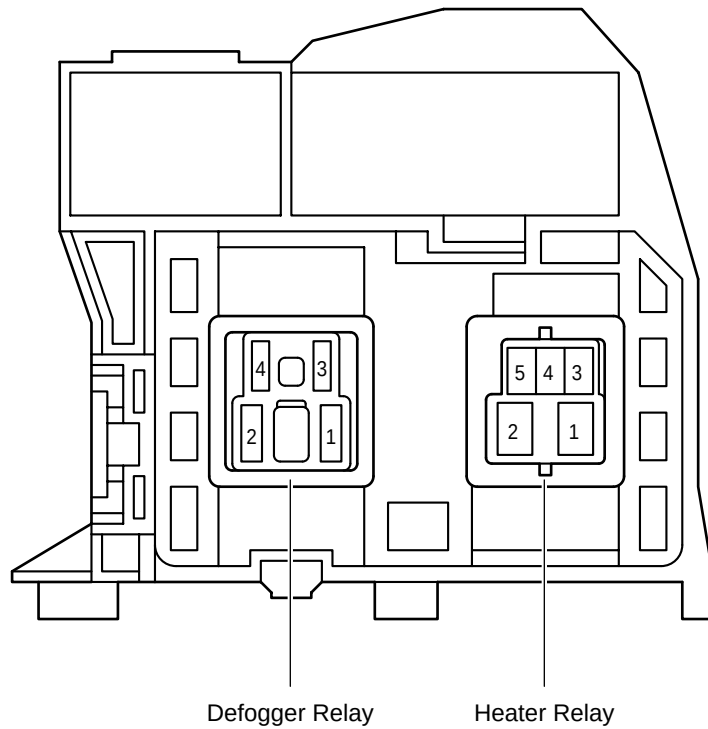


⑤ : Driver Side R/B (RHD)	Right Kick Panel (See Page 23)
------------------------------	--------------------------------

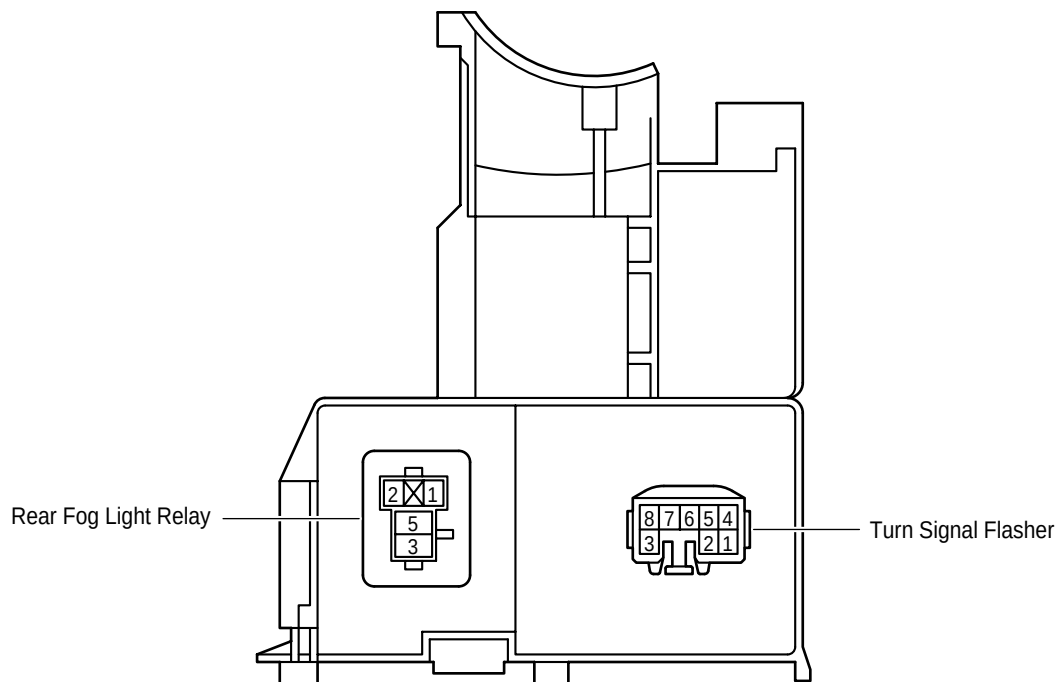


D RELAY LOCATIONS

 : Driver Side J/B	LHD : Left Kick Panel (See Page 23) RHD : Right Kick Panel (See Page 23)
---	---

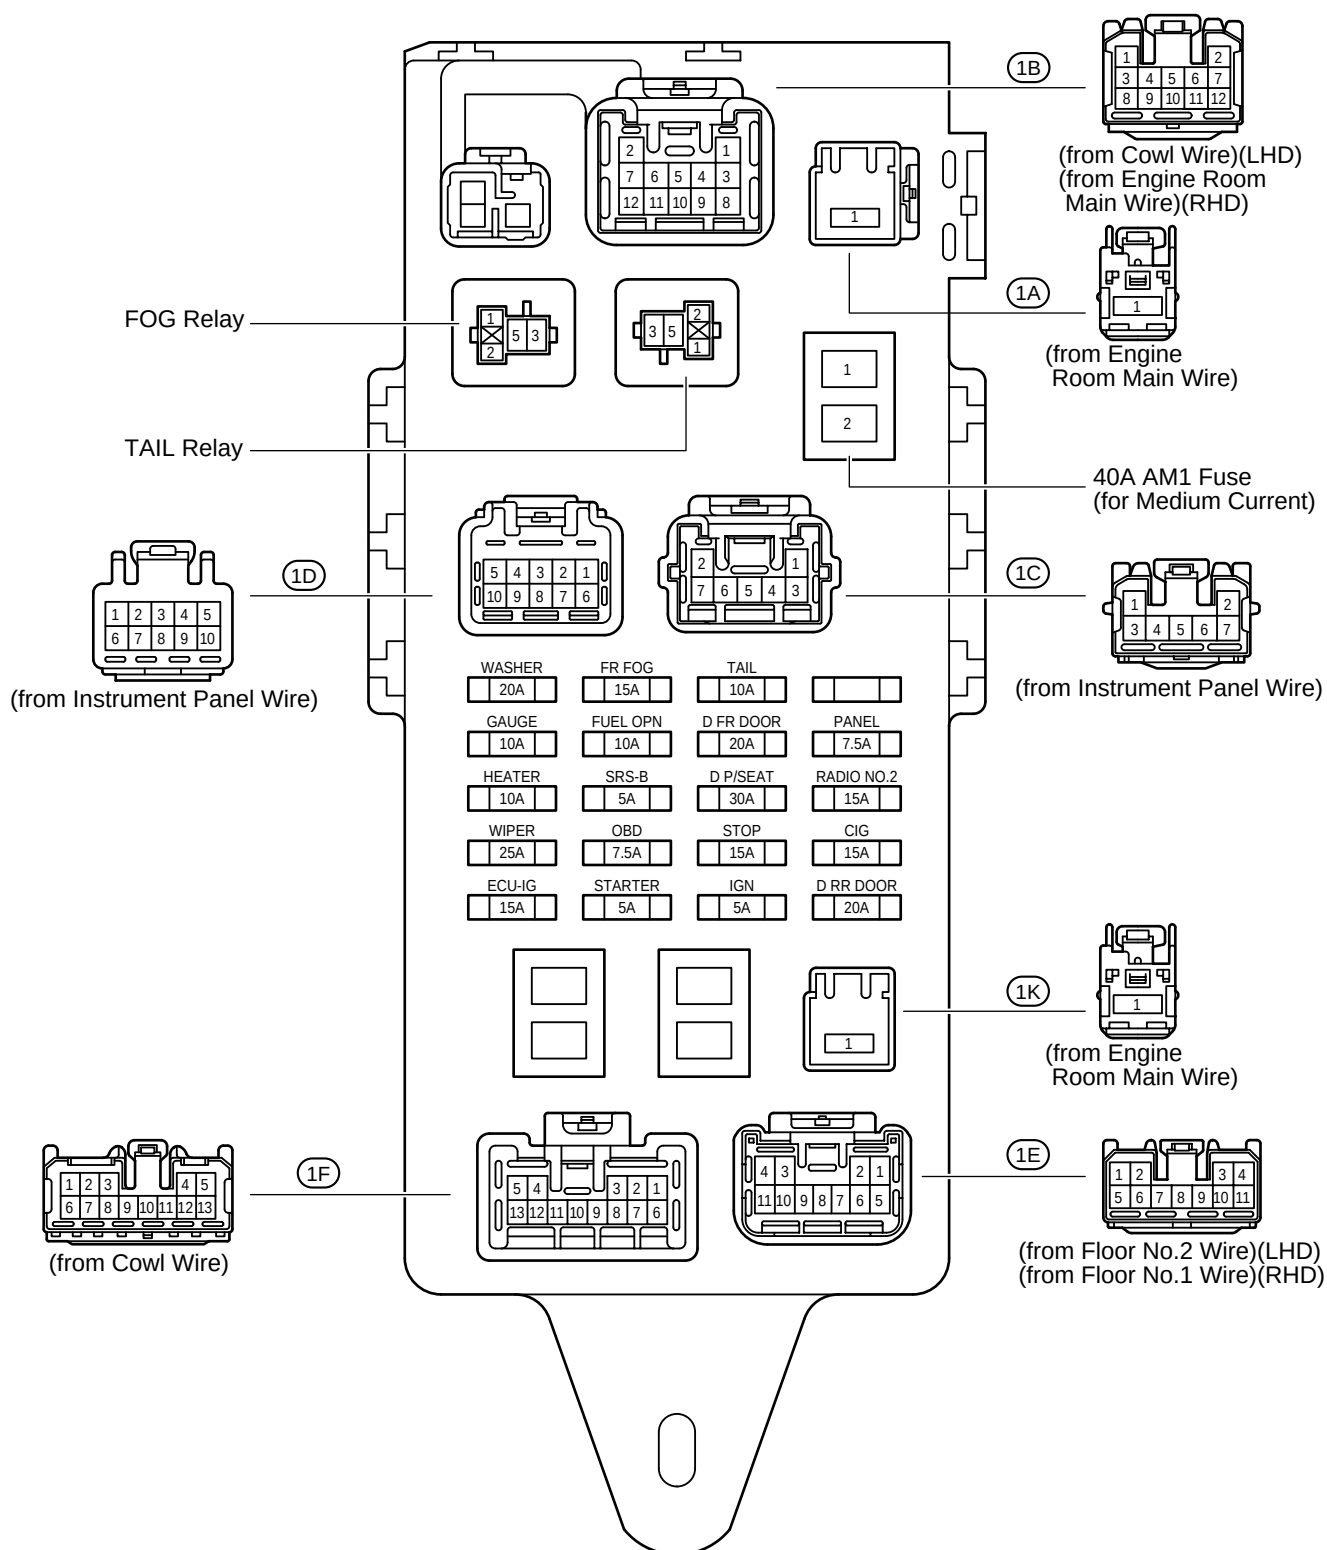


(Inner Circuit : See Page 36)

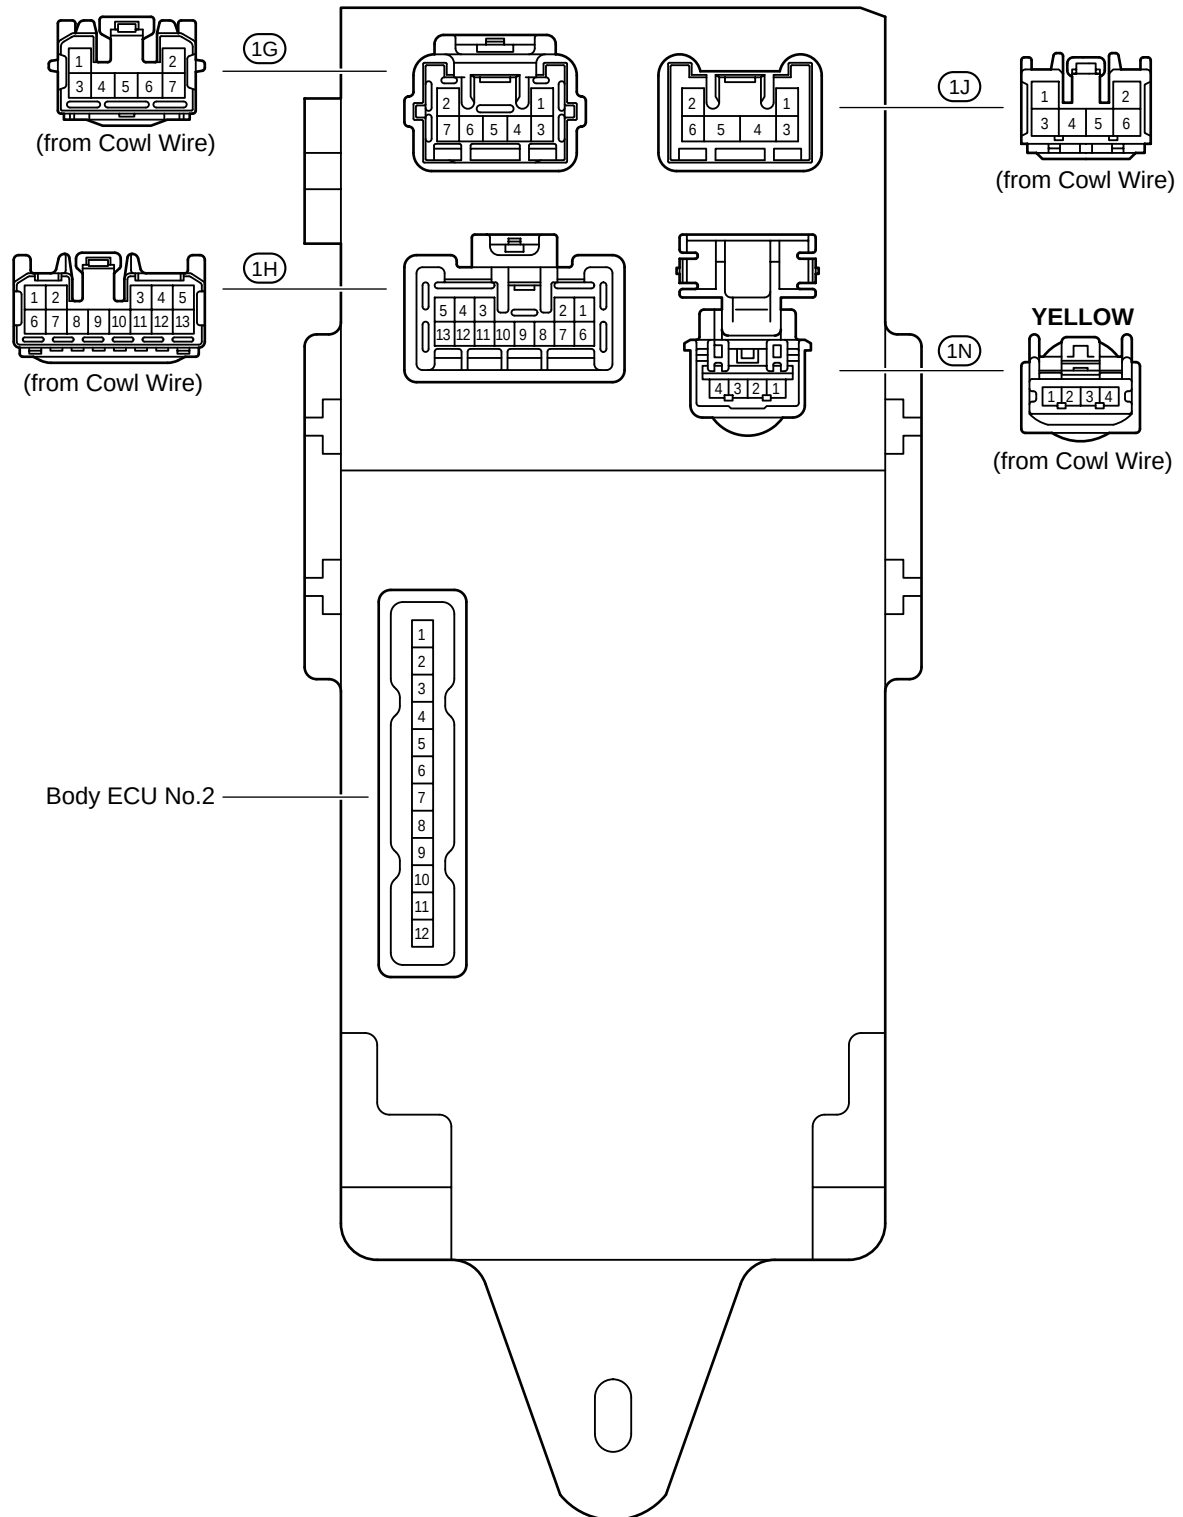


D RELAY LOCATIONS

○ : Passenger Side J/B	LHD : Right Kick Panel (See Page 23)
	RHD : Left Kick Panel (See Page 23)

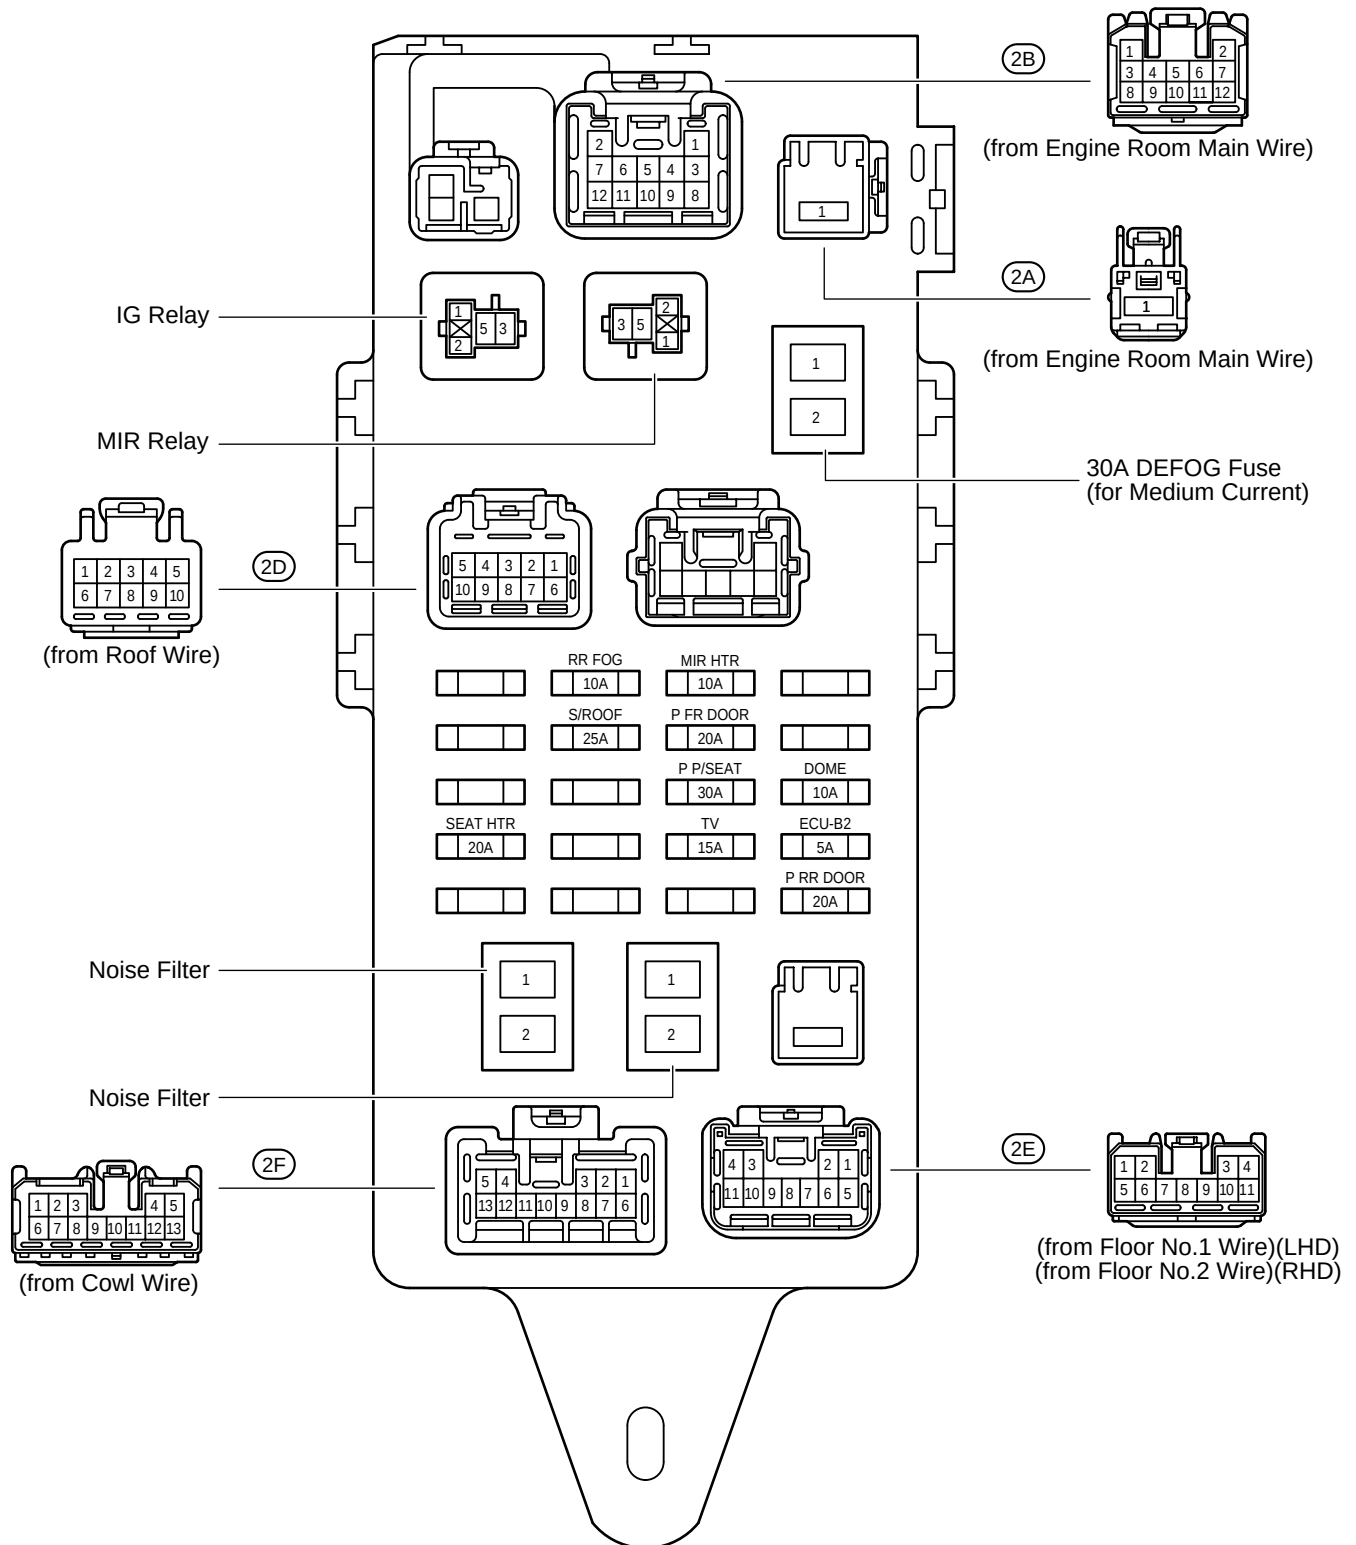


(Inner Circuit : See Page 37)

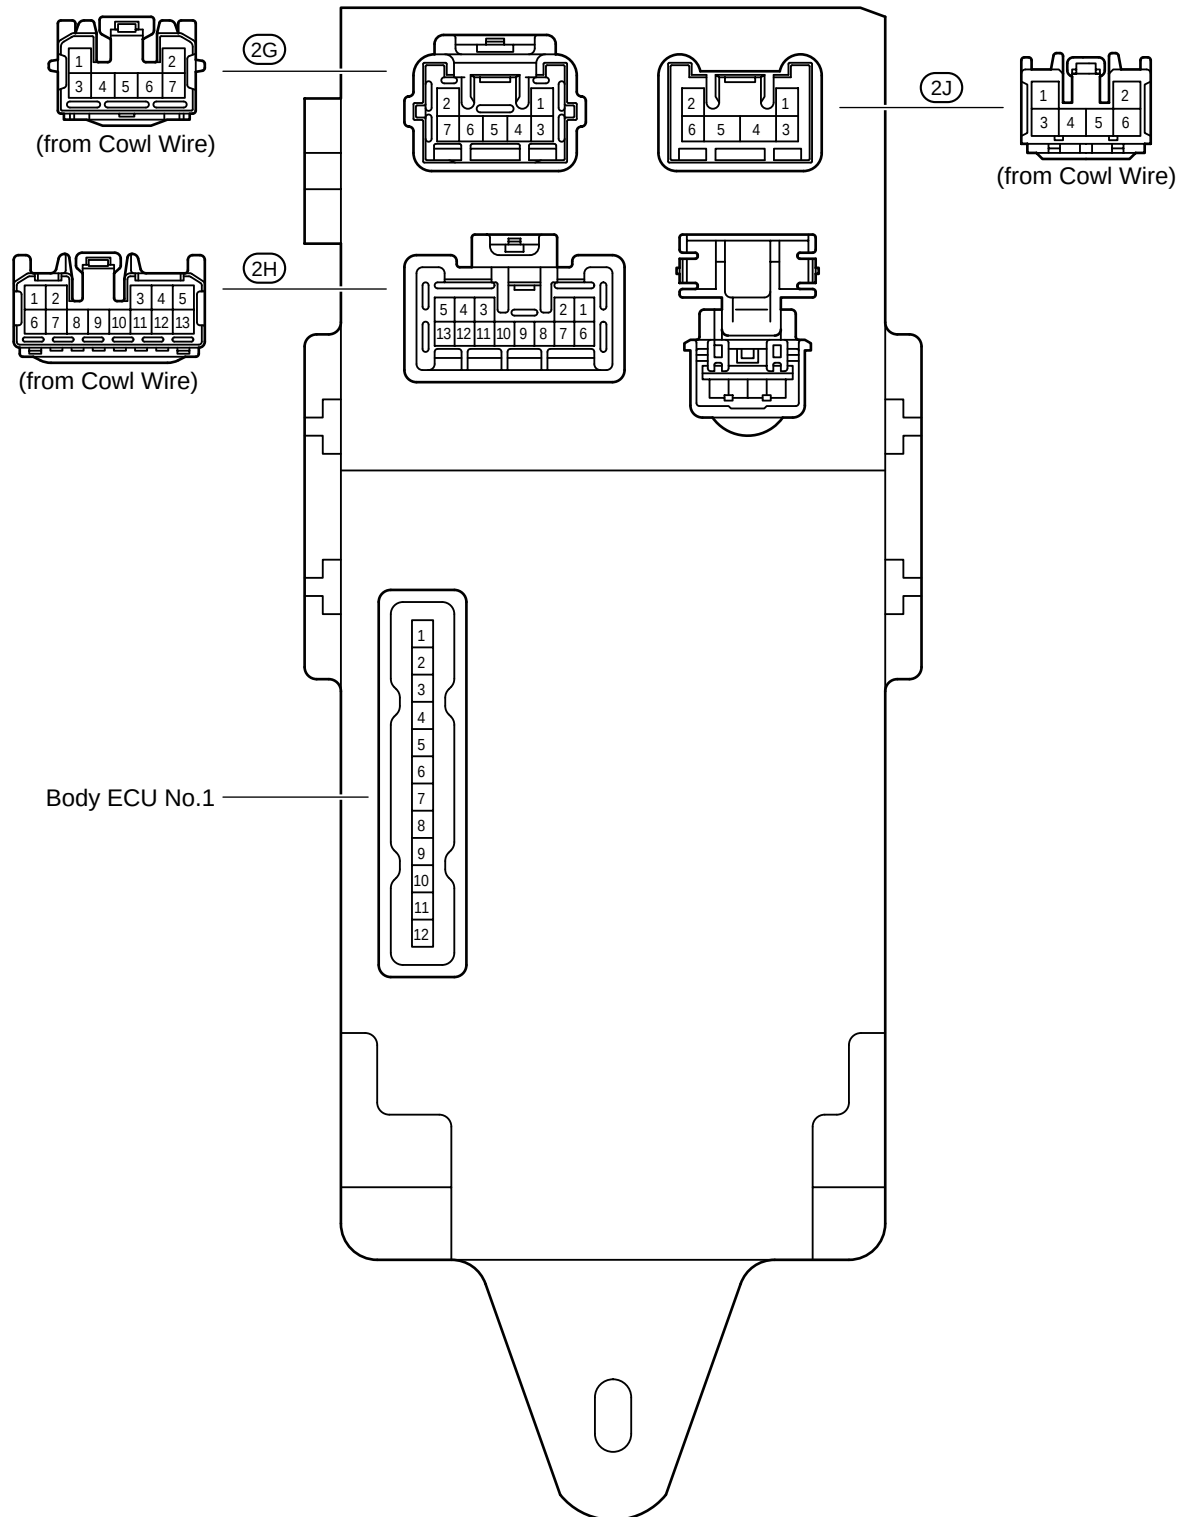


D RELAY LOCATIONS

 : Instrument Panel J/B	Instrument Panel Reinforcement Center (See Page 23)
--	--

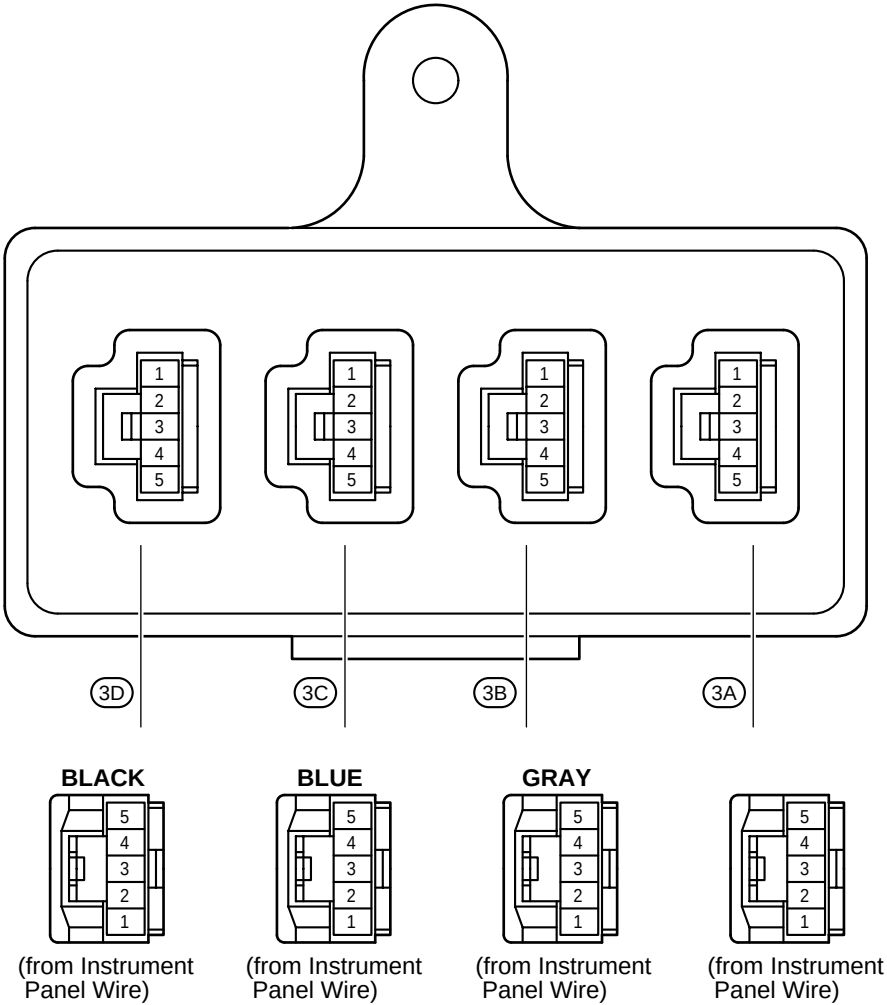


(Inner Circuit : See Page 38)

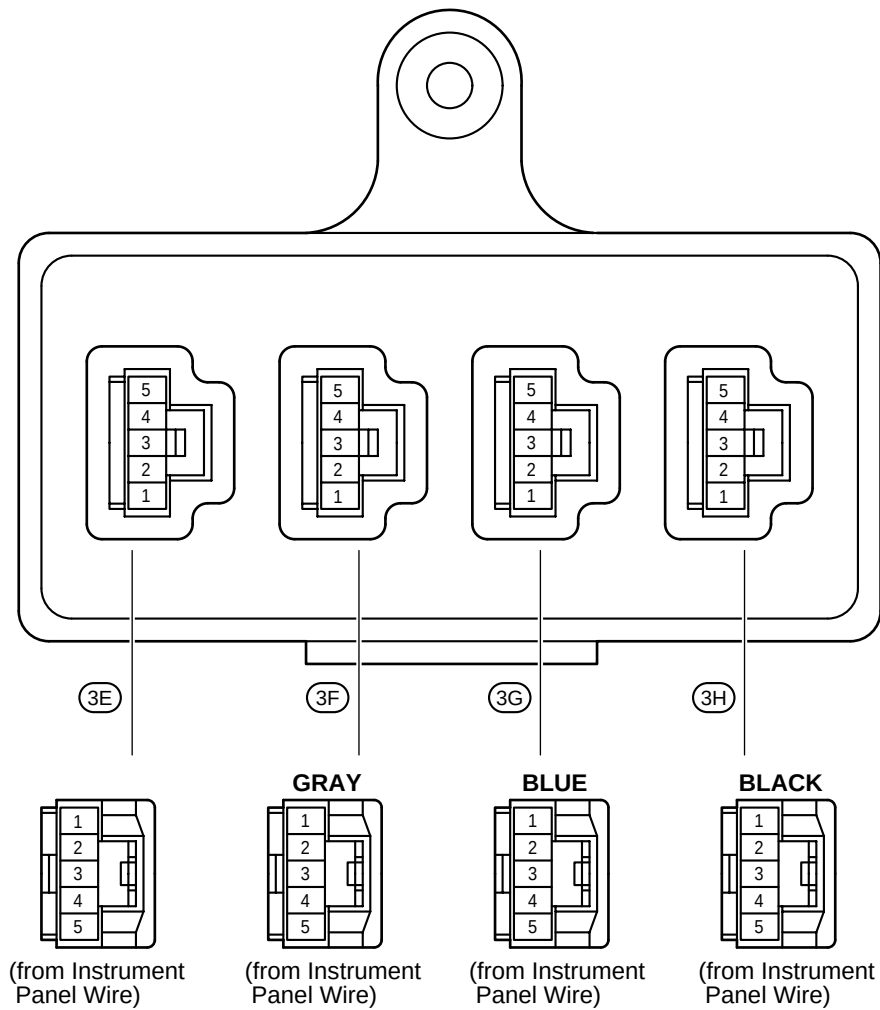


D RELAY LOCATIONS

[Driver Side J/B Inner Circuit]

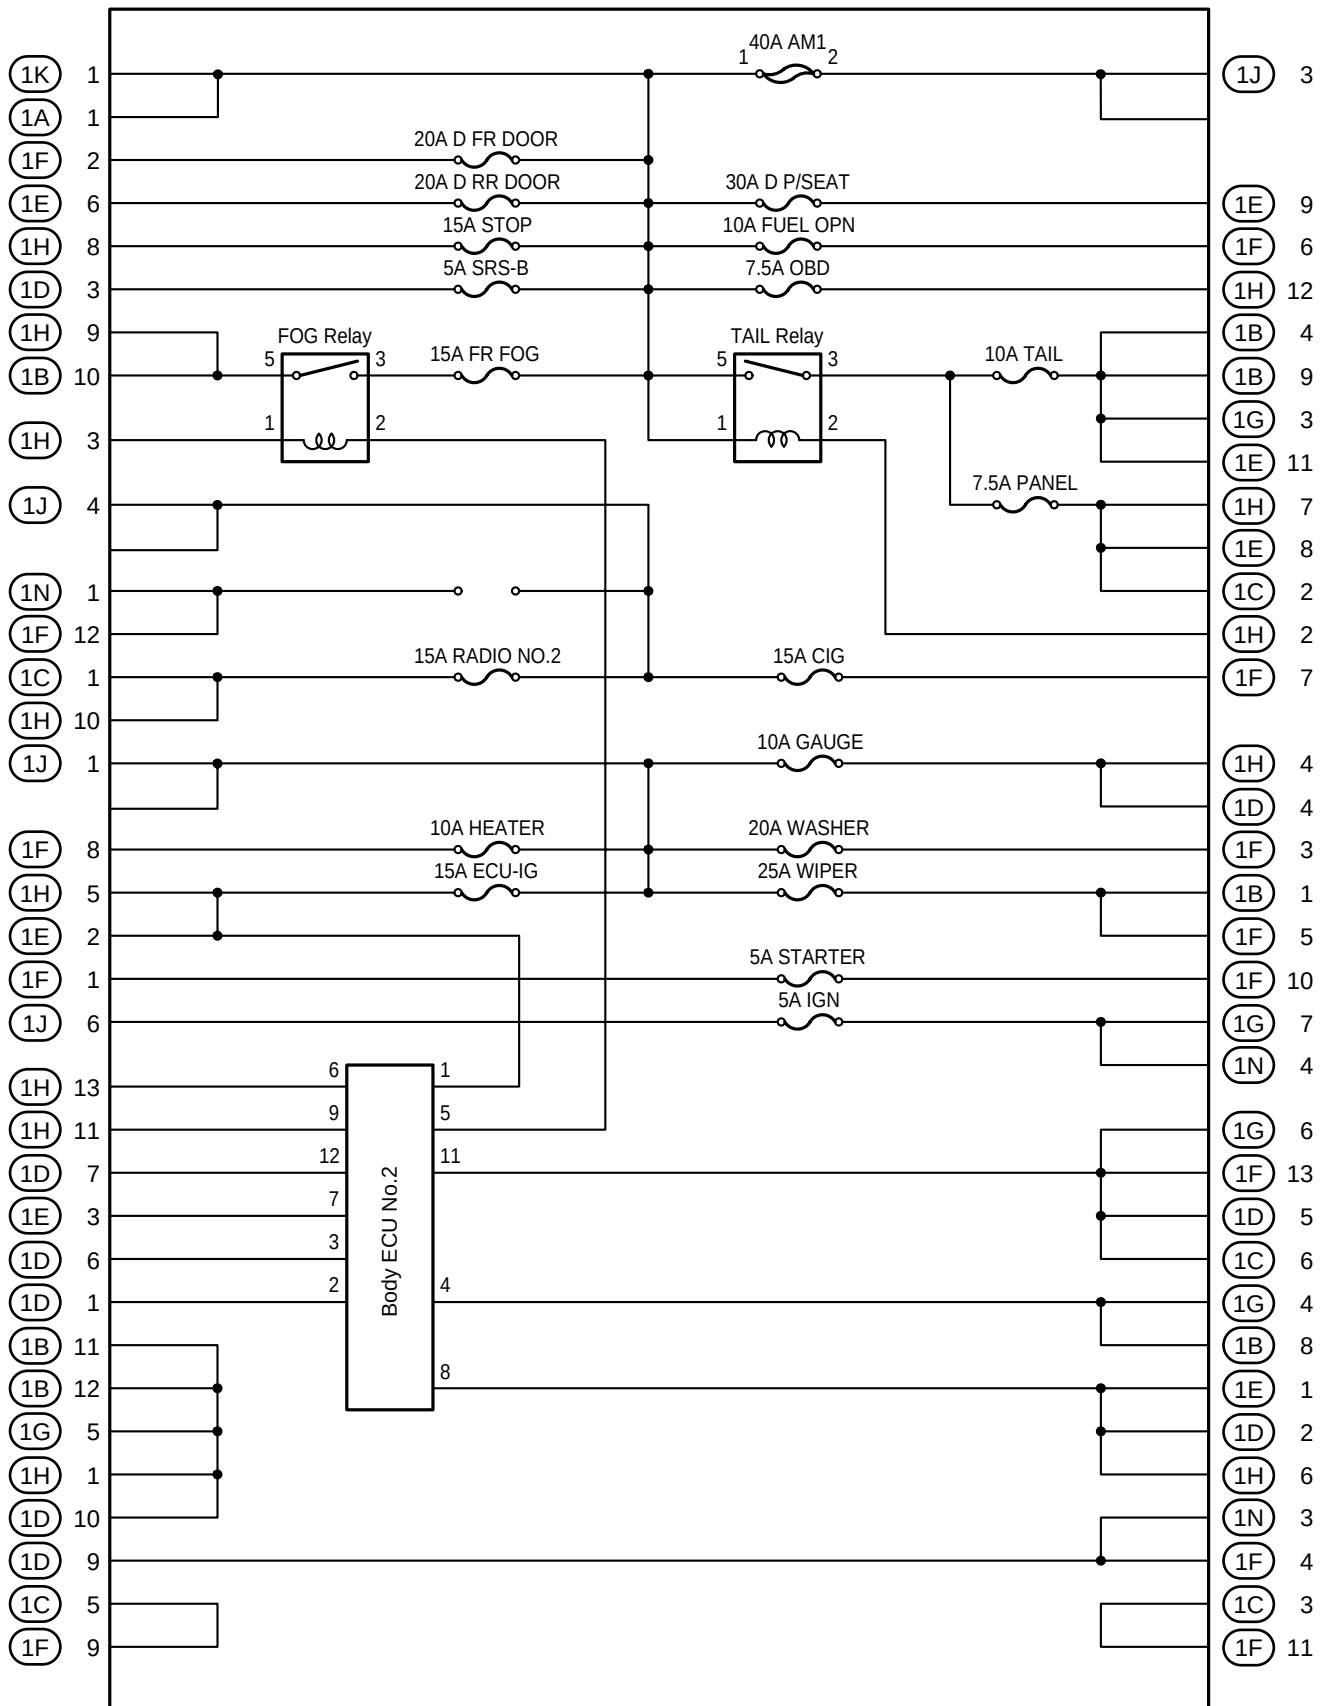

[Passenger Side J/B Inner Circuit]

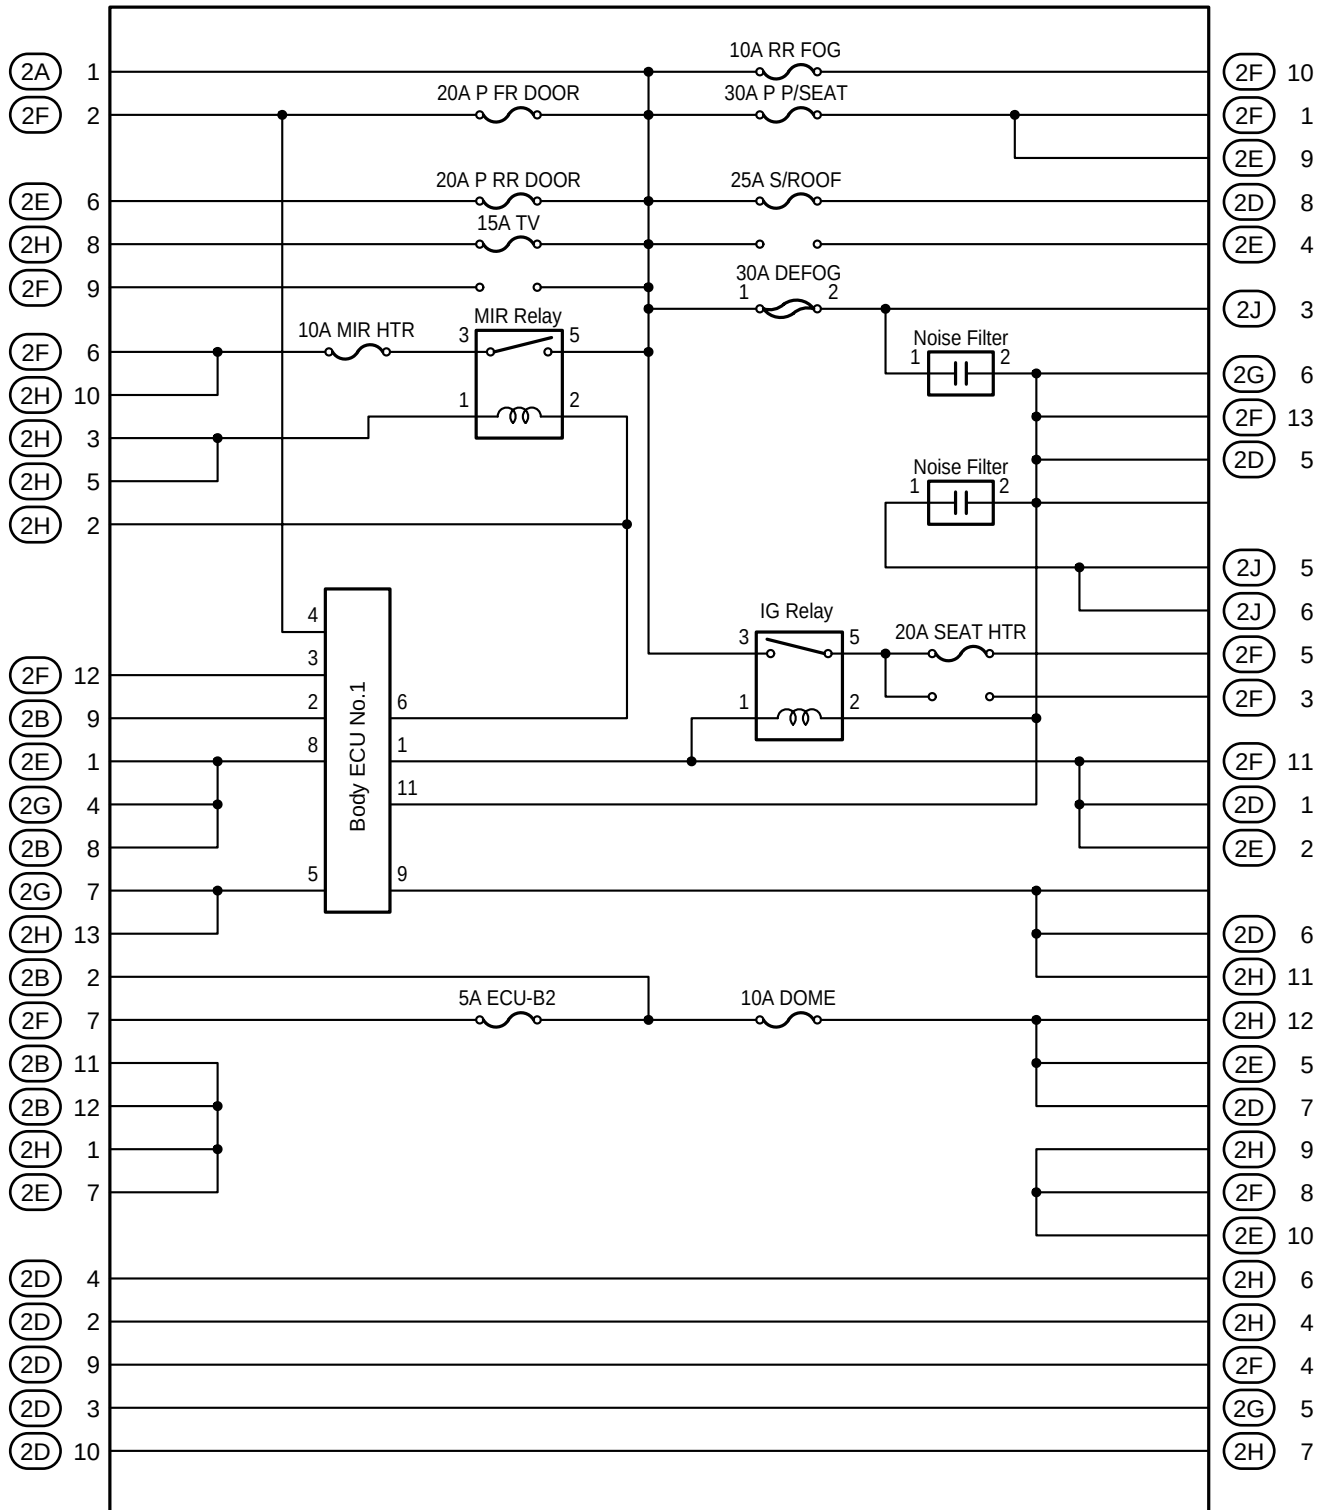

D RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

