

10.Display Transmitter (Id)

A: OPERATION

- 1) On the «Main Menu», select {Each System Check}.
- 2) On the «System Selection Menu», select {Tire pressure monitor}.
- 3) After the {Tire pressure monitor} is displayed, select [OK].
- 4) On the «Tire pressure monitor diagnosis», select {Transmitter ID regist confirm}.
- 5) Select the {Transmitter ID data monitor} and then select [OK] to display the transmitter ID.