

6. Read Diagnostic Trouble Code (DTC)

A: OPERATION

- 1) On the «Main Menu» display screen, select {Each System Check}.
- 2) On the «System Selection Menu», select {Tire pressure monitor}.
- 3) After {System Name} is displayed, select [OK].
- 4) On the «Tire pressure monitor diagnosis», select {Diagnostic Code(s) Display}.

NOTE:

- For details concerning the operation procedure, refer to the “PC application help for Subaru Select Monitor”.
 - For details concerning DTCs, refer to List of Diagnostic Trouble Codes (DTC). <Ref. to TPM(diag)-25, List of Diagnostic Trouble Code (DTC).>
 - All DTCs detected will be displayed.
 - If a particular DTC is not properly stored in memory (due to a voltage drop of the tire air pressure monitor control module power supply, etc.) when a problem occurs, a DTC suffixed with a question mark will appear on the Subaru Select Monitor display. This shows it may be an unreliable reading.
- 5) If communication is not possible between the tire pressure monitoring control module and the Subaru Select Monitor, check the communication circuit. <Ref. to TPM(diag)-22, Diagnostic Procedure for Subaru Select Monitor Communication.>
 - 6) When DTC is not displayed, check the indicator circuit and communication circuit. <Ref. to TPM(diag)-15, Tire Pressure Warning Light / Trouble Indicator Light Illumination Pattern.>