

Dodge Challenger 2017 fuse box diagram

Front Power Distribution Center

Cavity	Cartridge fuse	Mini Fuse	Description
1	—	—	Fuse – Spare
2	40	—	Radiator Fan #1 – (Non 6.2L Supercharged)
3	50	—	Electric Power Steering #1 – If Equipped / Radiator Fan (6.2L Supercharged) – If Equipped
4	30	—	Starter
5	40	—	Anti Lock Brake
6	30	—	Anti Lock Brake
7	20	—	Police Ignition Run / ACC #1
8	20	—	Police Ignition Run / ACC # 2
9	—	20	All-Wheel Drive Module – If Equipped
10	—	10	Intrusion MOD (300) – If Equipped / Under Hood Lamp – Police
11	—	20	Horns
12	—	10	Air Conditioning Clutch

13	—	—	Fuse – Spare
14	—	—	Fuse – Spare
15	—	20	Left HID – If Equipped
16	—	20	Right HID – If Equipped
18	50	—	Radiator Fan – (Non 6.2L Supercharged)
19	50	—	Electric Power Steering #2 – If Equipped / Radiator Fan #2 (6.2L Supercharged)
20	30	—	Wiper Motor
21	30	—	Headlamp Washers – If Equipped
	20	—	Police Bat Feed #2
22	40	—	Engine Cooling Pump (6.2L Supercharged)
	20	—	Police Bat Feed # 3
23	20	—	Police Bat Feed # 1
24	20	—	Police Ignition Run/ACC Feed # 3
28	—	—	Fuse – Spare

29	—	15	Transmission Control Module (Challenger/Charger Police) /Electronic Shift Module (Challenger)
30	—	—	Fuse – Spare
31	—	25	Engine Module
32	—	—	Fuse – Spare
33	—	—	Fuse – Spare
34	—	25	Powertrain #1
35	—	20	Powertrain #2
36	—	10	Anti-Lock Brake Module
37	—	10	Engine Controller / Rad Fan Relays (Charger/300) / Electric Power Steering Module (Charger/300) / 5-Speed TCM
38	—	10	Airbag Module
39	—	10	EPS (Challenger) / EHPS (Police) / AC Clutch Relay / Vacuum Pump Relay / Rad Fan Relays (Challenger)
48	—	10	AWD Module/Front Axle Disconnect – If Equipped
49	—	—	Fuse – Spare
50	—	—	Fuse – Spare

51	—	20	Vacuum Pump
52	—	5	Adaptive Cruise (Charger/300) – If Equipped
53	—	—	Fuse – Spare

Rear power distribution center

Cavity	Cartridge fuse	Mini fuse	Description
2	60	—	Front PDC Feed #1
3	—	—	Fuse – Spare
4	60	—	Front PDC Feed #2
5	30	—	Sunroof
	20	—	Dome Lamp – Police
6	40	—	Exterior Lighting #1
7	40	—	Exterior Lighting #2
8	30	—	Interior Lighting
9	40	—	Power Locks
10	30	—	Driver Door Control Module

11	30	—	Passenger Door Control Module
12	—	20	Dual USB Center Console Rear/Cigar Lighter IP – If Equipped
15	40	—	HVAC Blower
16	20	—	Left Spot Lamp – Police
17	—	—	Fuse – Spare
18	20	—	Mod Network Interface – Police
19	—	—	Fuse – Spare
20	—	—	Fuse – Spare
21	30	—	Fuel Pump
22	—	20	Right Spot Lamp – Police
23	—	10	Fuel Door/Diagnostic Port
24	—	10	Integrated Center Stack
25	—	10	Tire Pressure Monitor
26	—	15	Cygnus Transmission Module (Charger/300)/Electronic Shift Module (Charger/300)
27	—	25	Amplifier – If Equipped

31	—	25	Power Seats – If Equipped
32	—	15	HVAC Module/Cluster
33	—	15	Ignition Switch/RF Hub Module/Steering Column Lock (300) – If Equipped
34	—	10	Steering Column Module/Clock (300)
35	—	5	Battery Sensor
36	—	15	Electronic Exhaust Valve – If Equipped
37	—	15	Radio
38	—	20	Power Outlet Inside Arm Rest/Console Media Hub
40	—	—	Fuse – Spare
41	—	—	Fuse – Spare
42	30	—	Rear Defrost
43	—	20	Comfort Seat And Steering Wheel Module (Heated Steering Wheel/RR Heated Seats)
44	—	10	Park Assist / Blind Spot / Rear View Camera
45	—	15	Cluster / Rearview Mirror /Compass (Charger/300) / Humidity Sensor / Forward Facing Camera (Lane Departure)

46	—	—	Fuse – Spare
47	—	10	Adaptive Front Lighting / Auto High BEAM /Day Time Running Lamps – If Equipped
48	—	20	Active Suspension – (6.4L / 6.2L)
49	—	—	Fuse – Spare
50	—	—	Fuse – Spare
51	—	20	Front Heated / Vented Seats – If Equipped
52	—	10	Heated Cupholders/Rear Heated Seat Switches – If Equipped
53	—	10	HVAC Module/In Vehicle Temperature Sensor
54	—	—	Fuse – Spare
55	—	—	Fuse – Spare
56	—	—	Fuse – Spare
57	—	—	Fuse – Spare
58	—	10	Airbag Module
59	—	20	Adjustable Pedals – Police
60	—	—	Fuse – Spare

61	—	—	Fuse – Spare
62	—	—	Fuse – Spare
63	—	—	Fuse – Spare
64	—	25	Rear Windows (Charger/300)
65	—	10	Airbag Module
66	—	—	Fuse – Spare
67	—	10	Rain and Light Sensor / Sunroof / Inside RR View Mirror / Police Run Acc Relay
68	—	10	Dual USB Power Outlet – R/A Sense (Charger/300) Rear Sunshade (Charger/300) RR USB Timer
69	—	—	Fuse – Spare
70	—	—	Fuse – Spare