




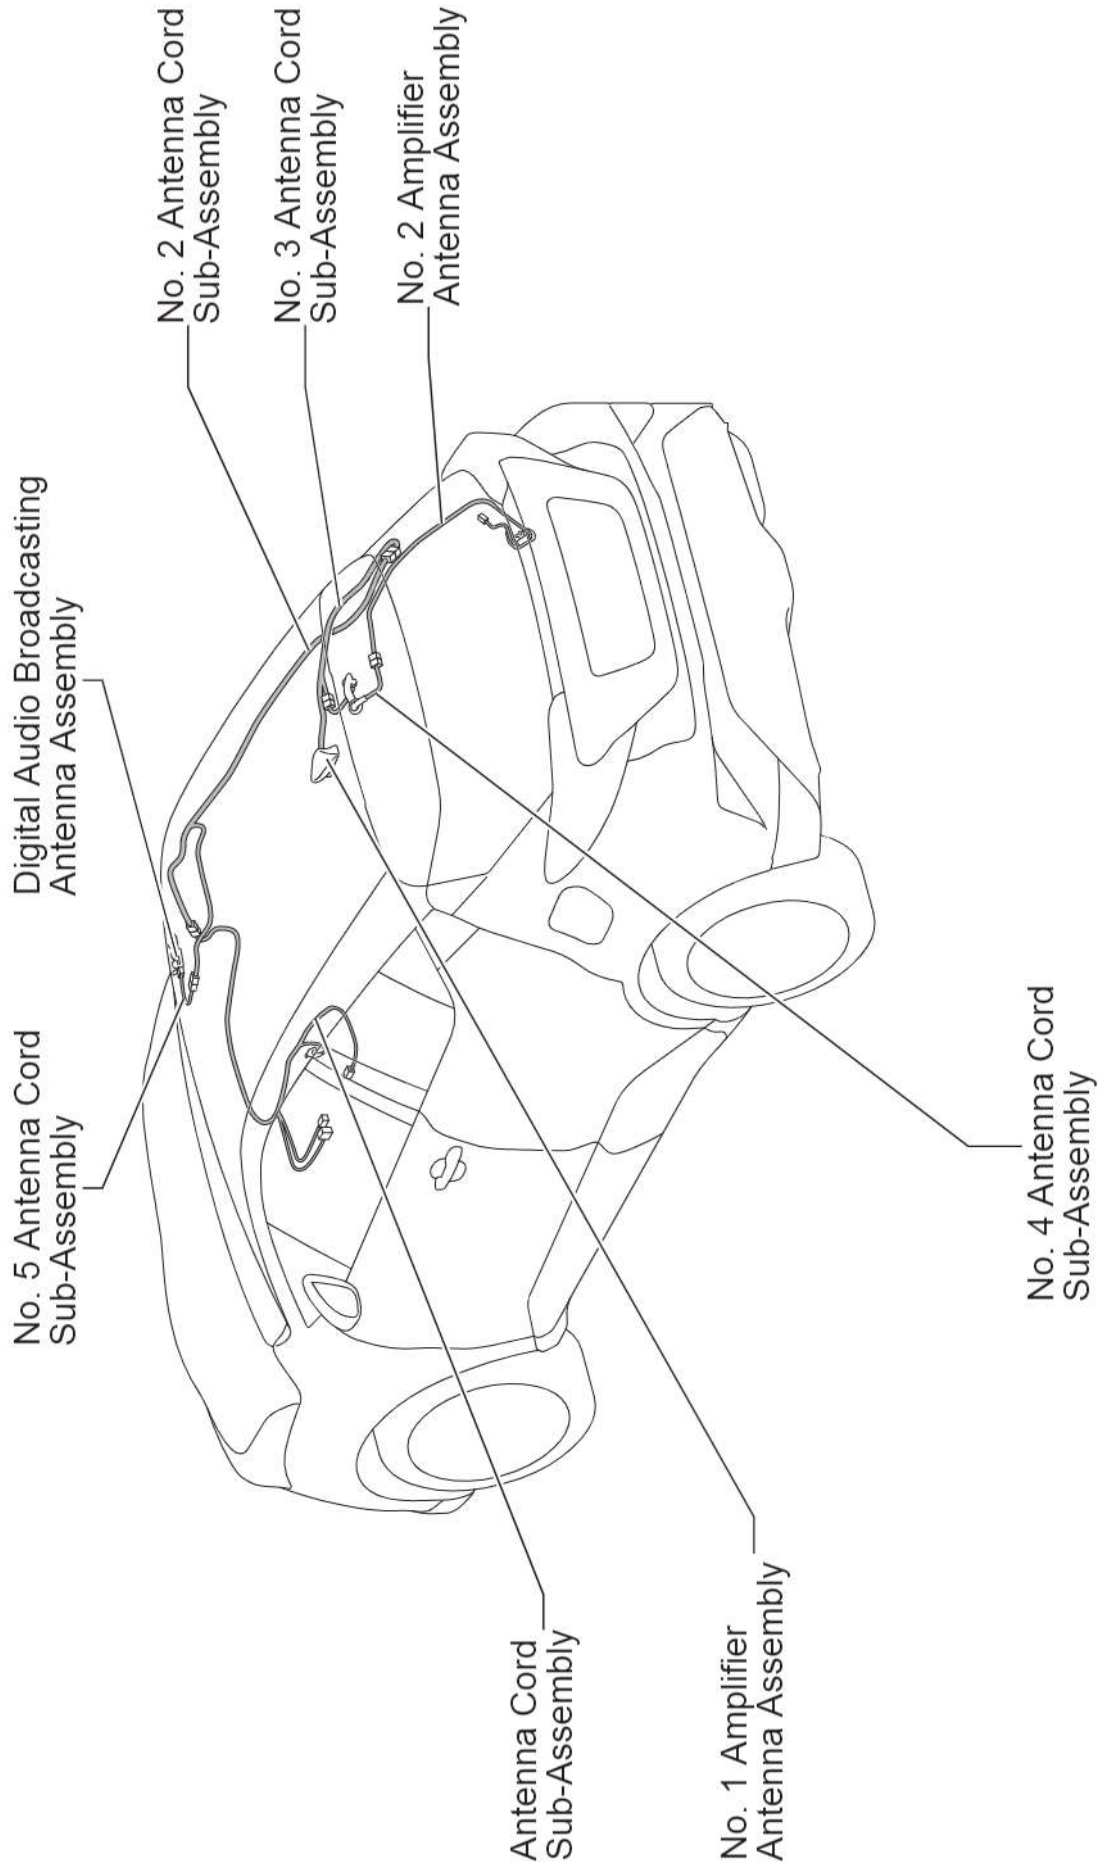

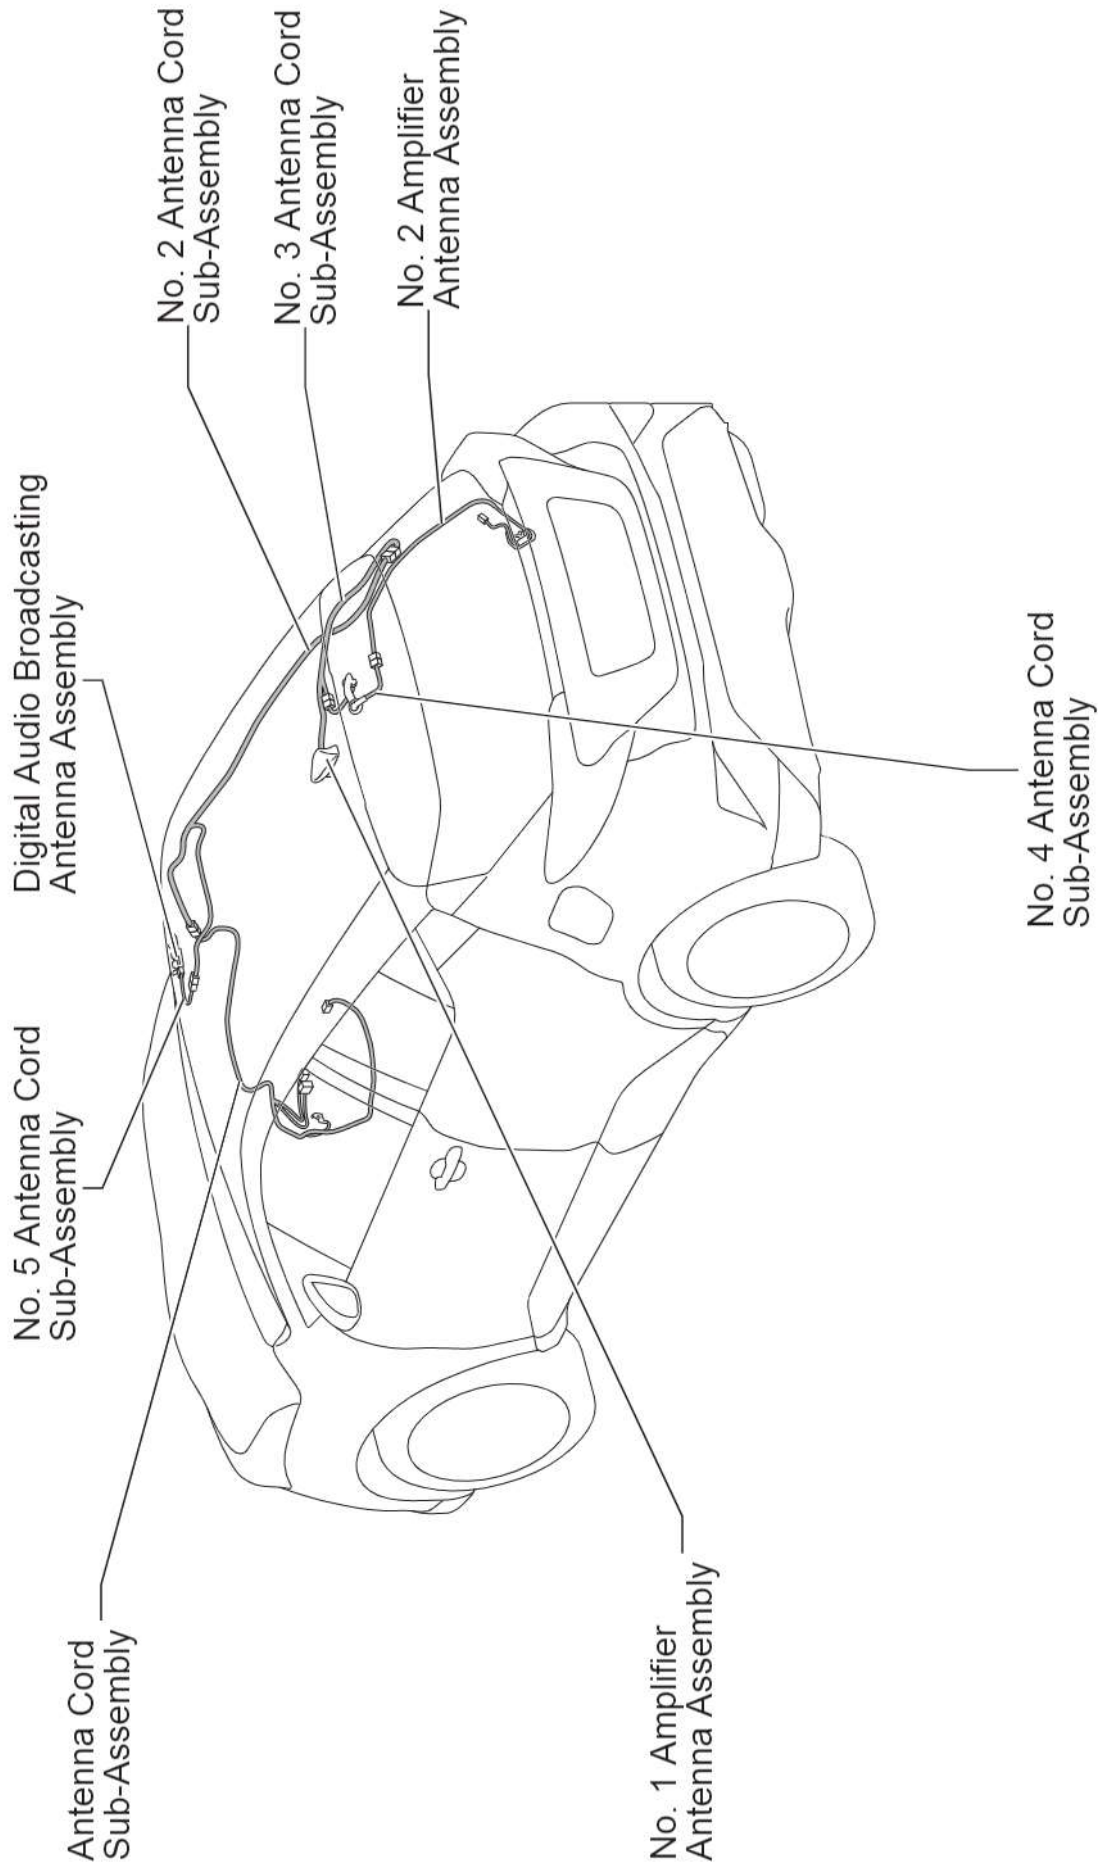

Position of Parts in Seat (LHD)

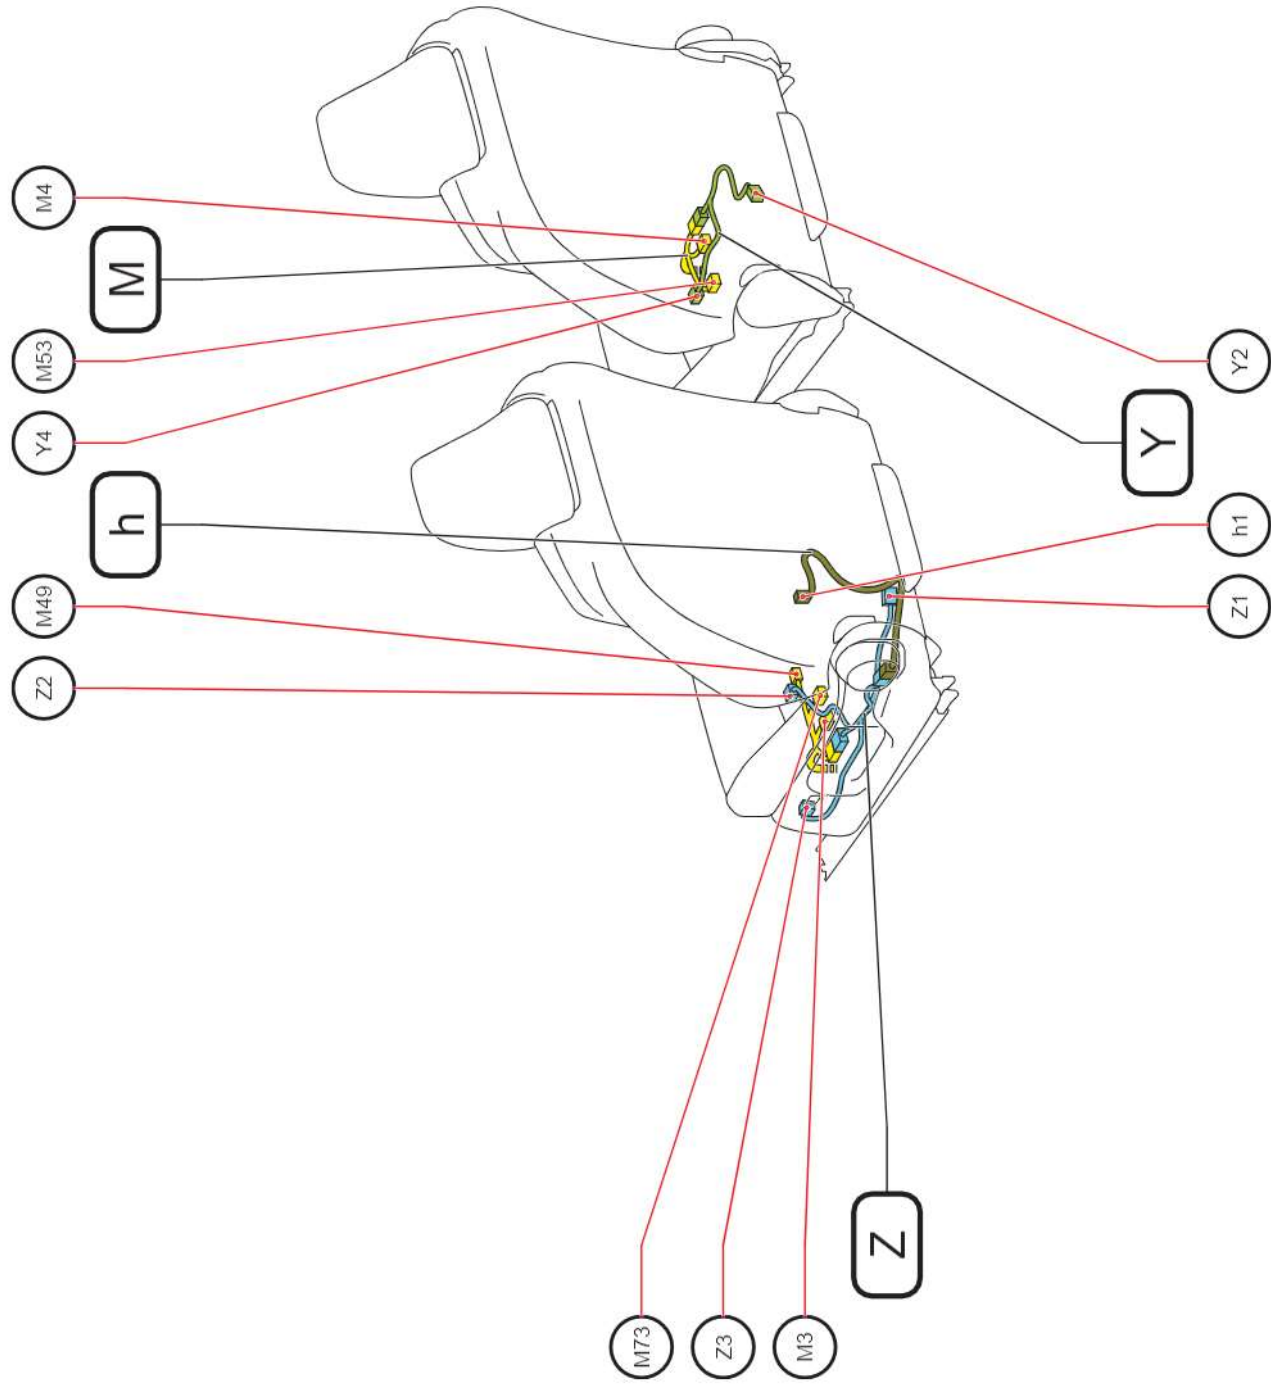



Position of Parts in Seat (LHD)

---



|     |                                       |
|-----|---------------------------------------|
| M3  | Front Seat Airbag Assembly LH         |
| M4  | Front Seat Airbag Assembly RH         |
| M49 | Seat Position Airbag Sensor           |
| M53 | Front Seat Inner Belt Assembly RH     |
| M73 | Front Seat Inner Belt Assembly LH     |
| Y2  | Front Seat Cushion Heater Assembly RH |
| Y4  | Seat Heater Control Sub-Assembly RH   |
| Z1  | Front Seat Cushion Heater Assembly LH |
| Z2  | Seat Heater Control Sub-Assembly LH   |
| Z3  | Front Lumbar Power Switch             |
| h1  | Lumbar Support Adjuster Assembly LH   |


Position of Parts in Seat (LHD)

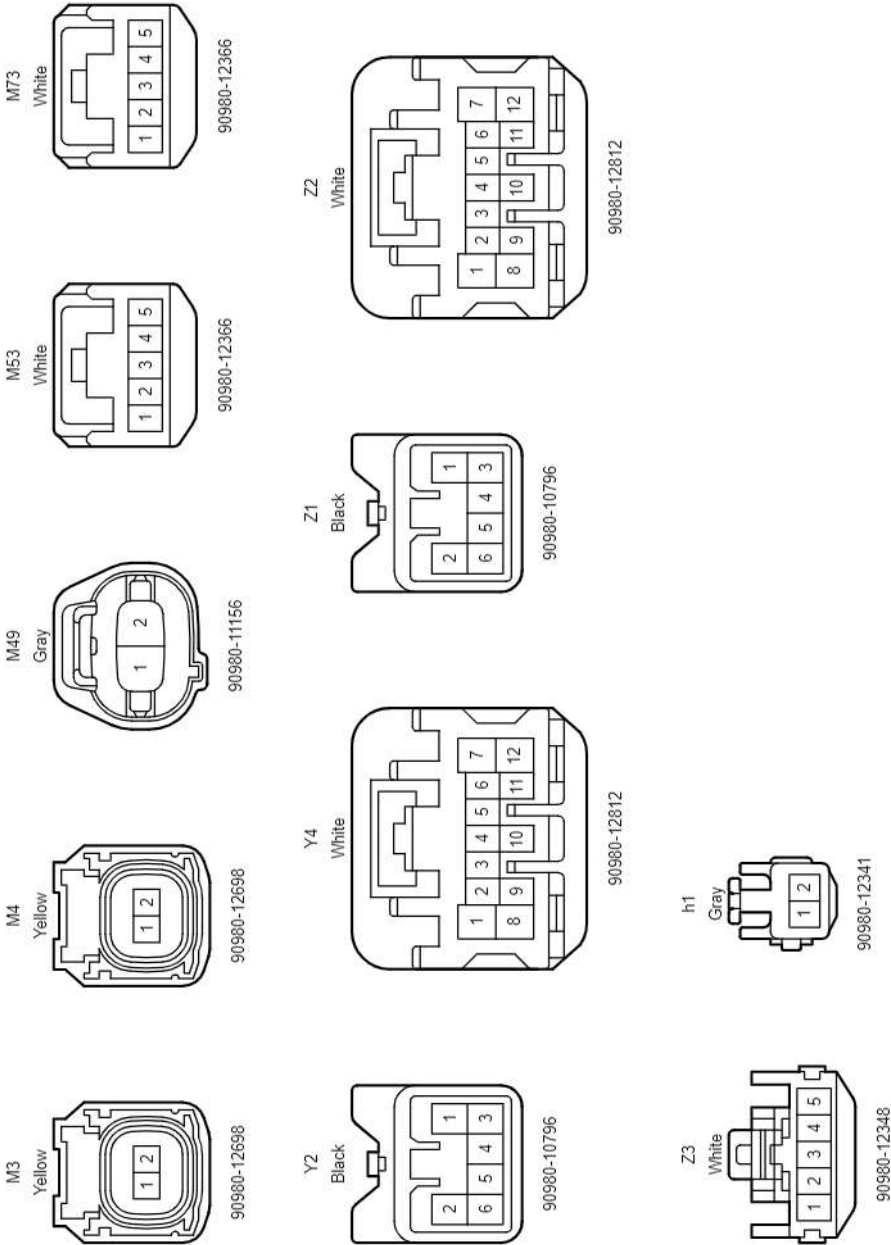

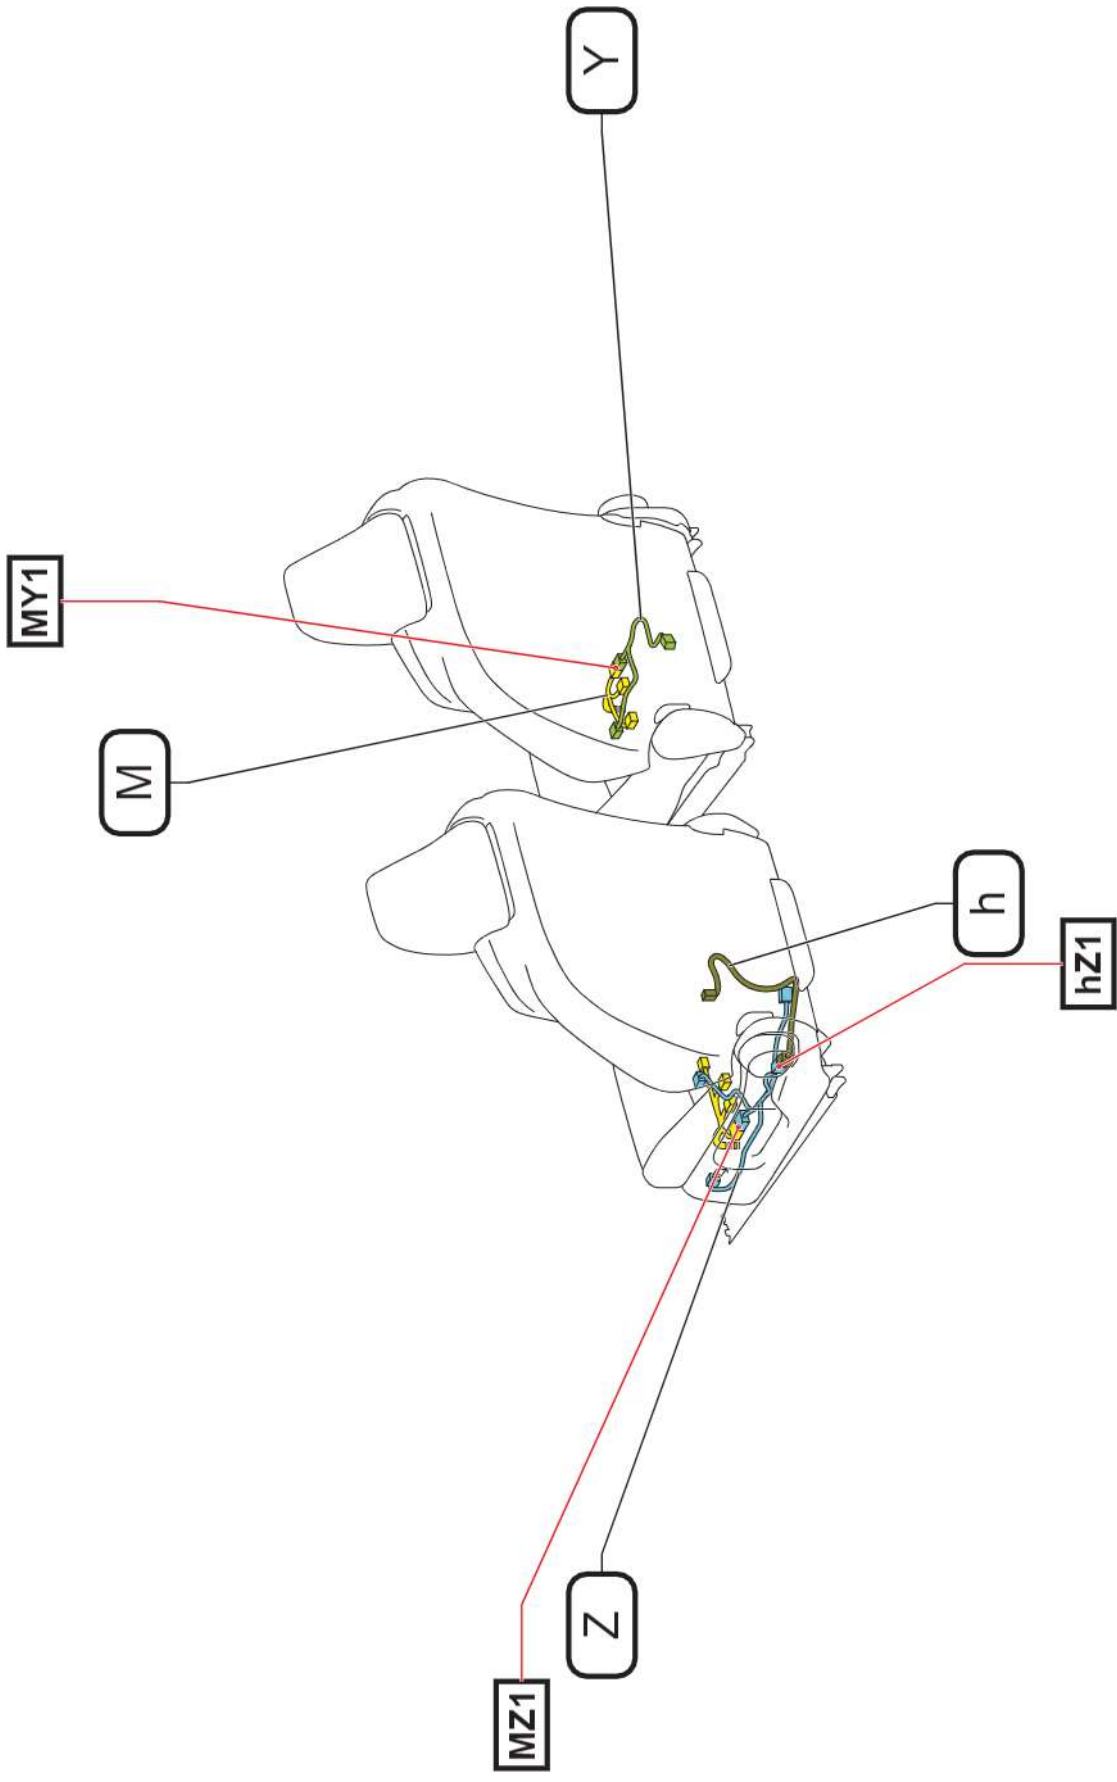

Wire and Wire in Seat (LHD)










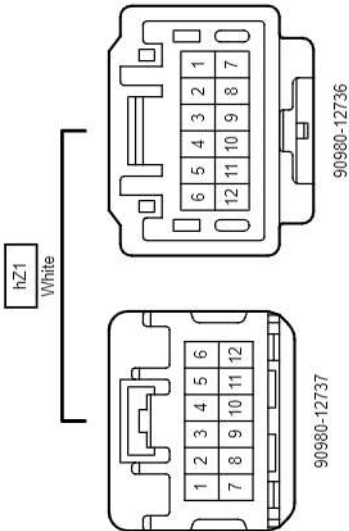
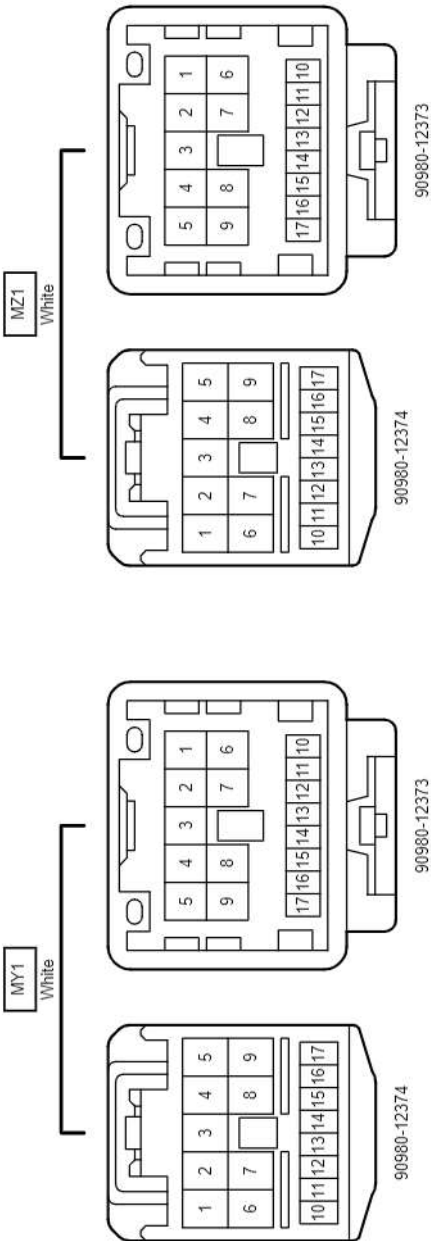


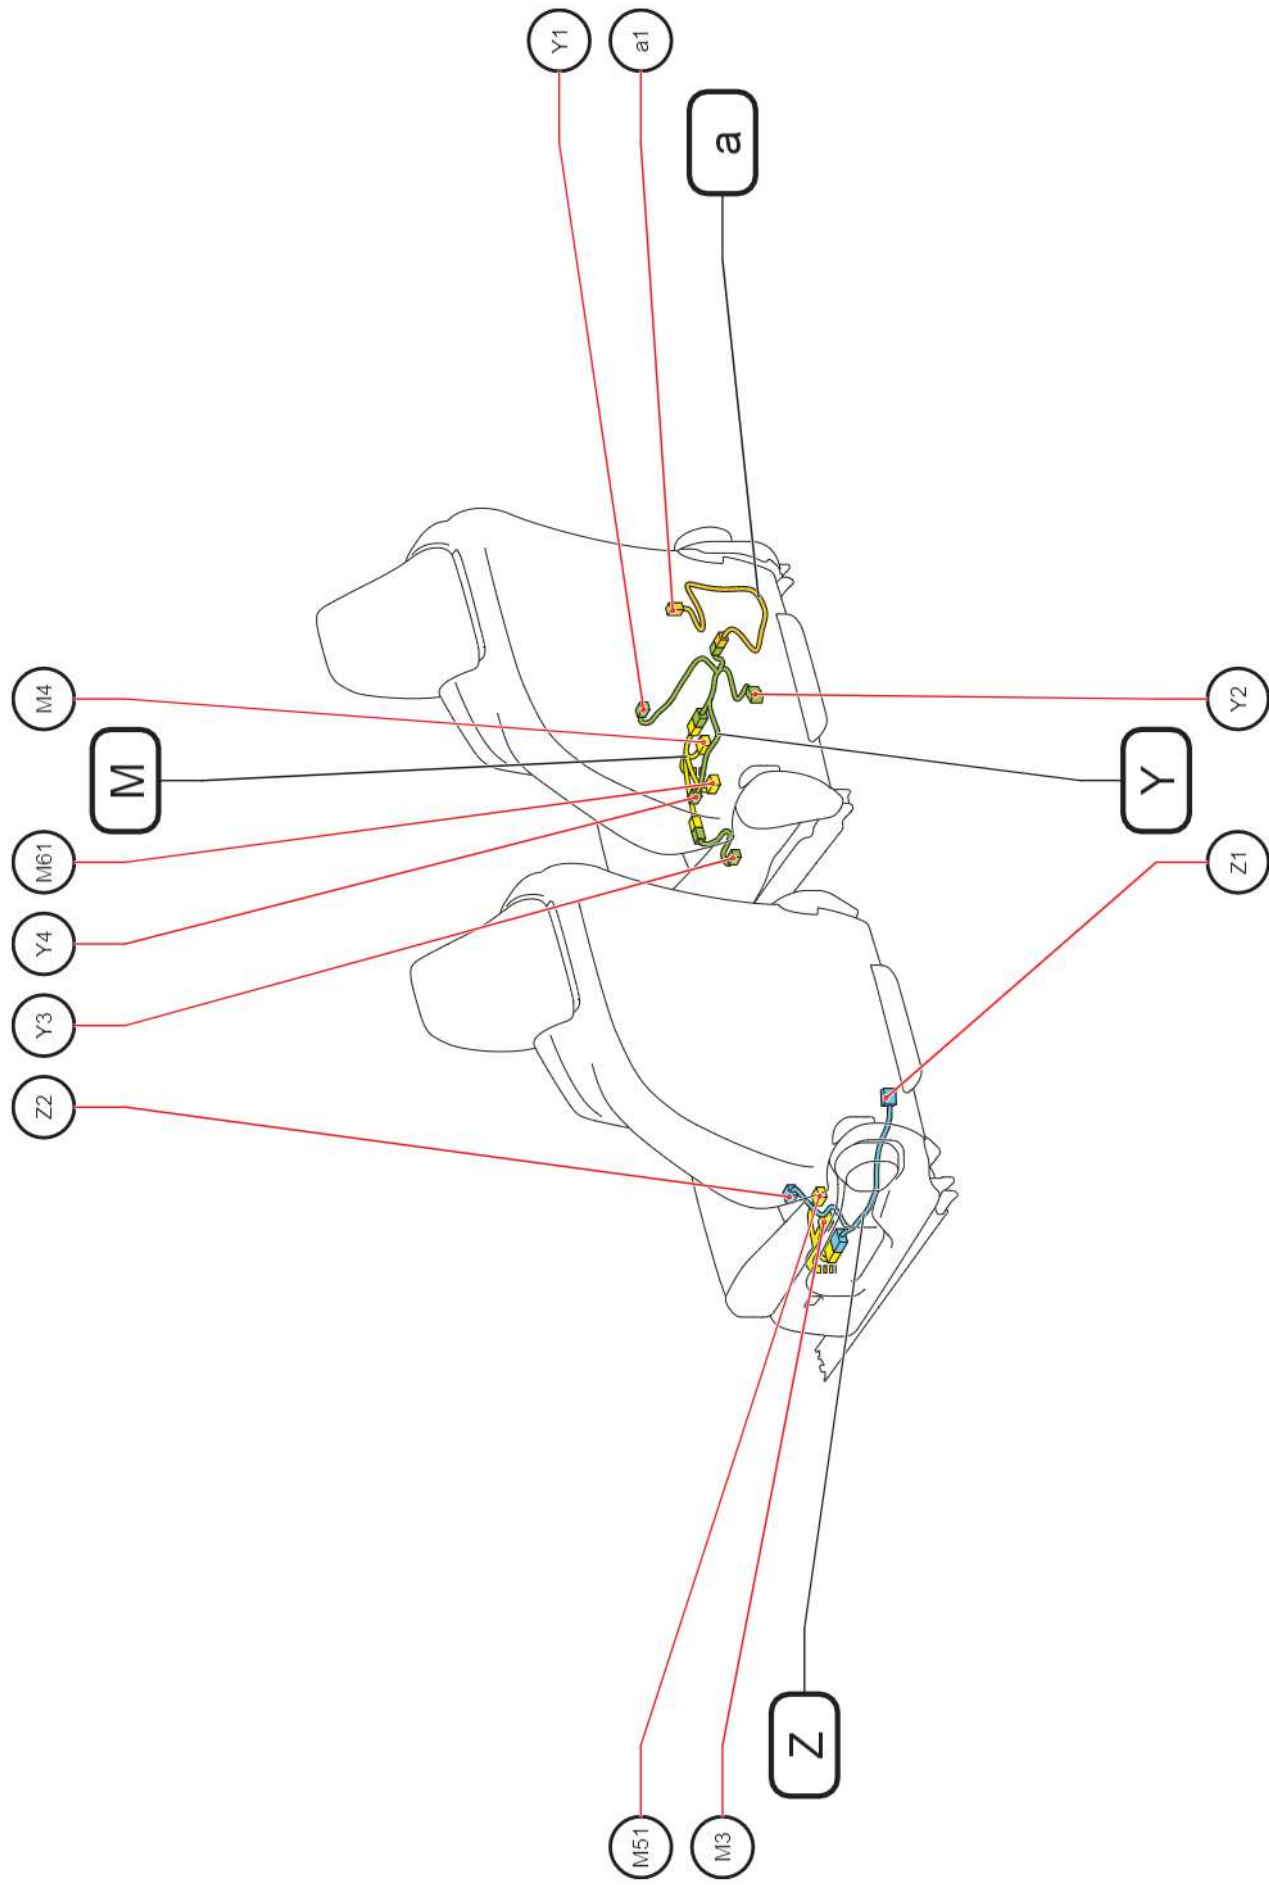


Position of Parts in Seat (RHD)


|     |                                       |
|-----|---------------------------------------|
| M3  | Front Seat Airbag Assembly LH         |
| M4  | Front Seat Airbag Assembly RH         |
| M51 | Front Seat Inner Belt Assembly LH     |
| M61 | Front Seat Inner Belt Assembly RH     |
| Y1  | Front Lumbar Power Switch             |
| Y2  | Front Seat Cushion Heater Assembly RH |
| Y3  | Seat Position Airbag Sensor           |
| Y4  | Seat Heater Control Sub-Assembly RH   |
| Z1  | Front Seat Cushion Heater Assembly LH |
| Z2  | Seat Heater Control Sub-Assembly LH   |
| a1  | Lumbar Support Adjuster Assembly RH   |

 
Position of Parts in Seat (RHD)

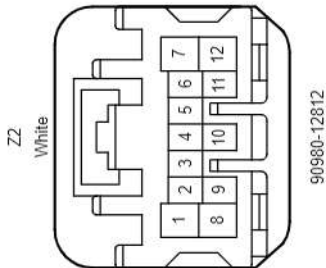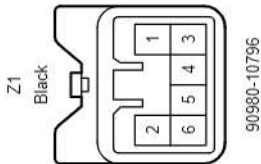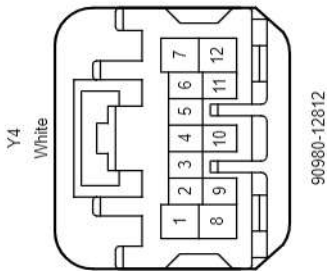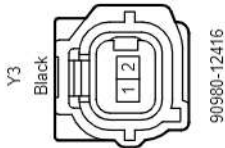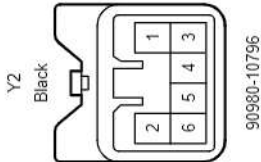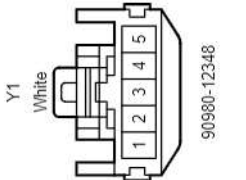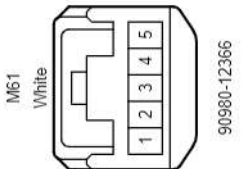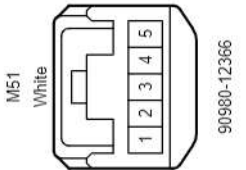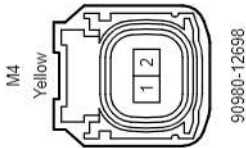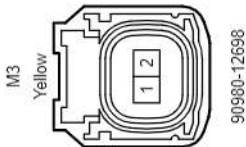


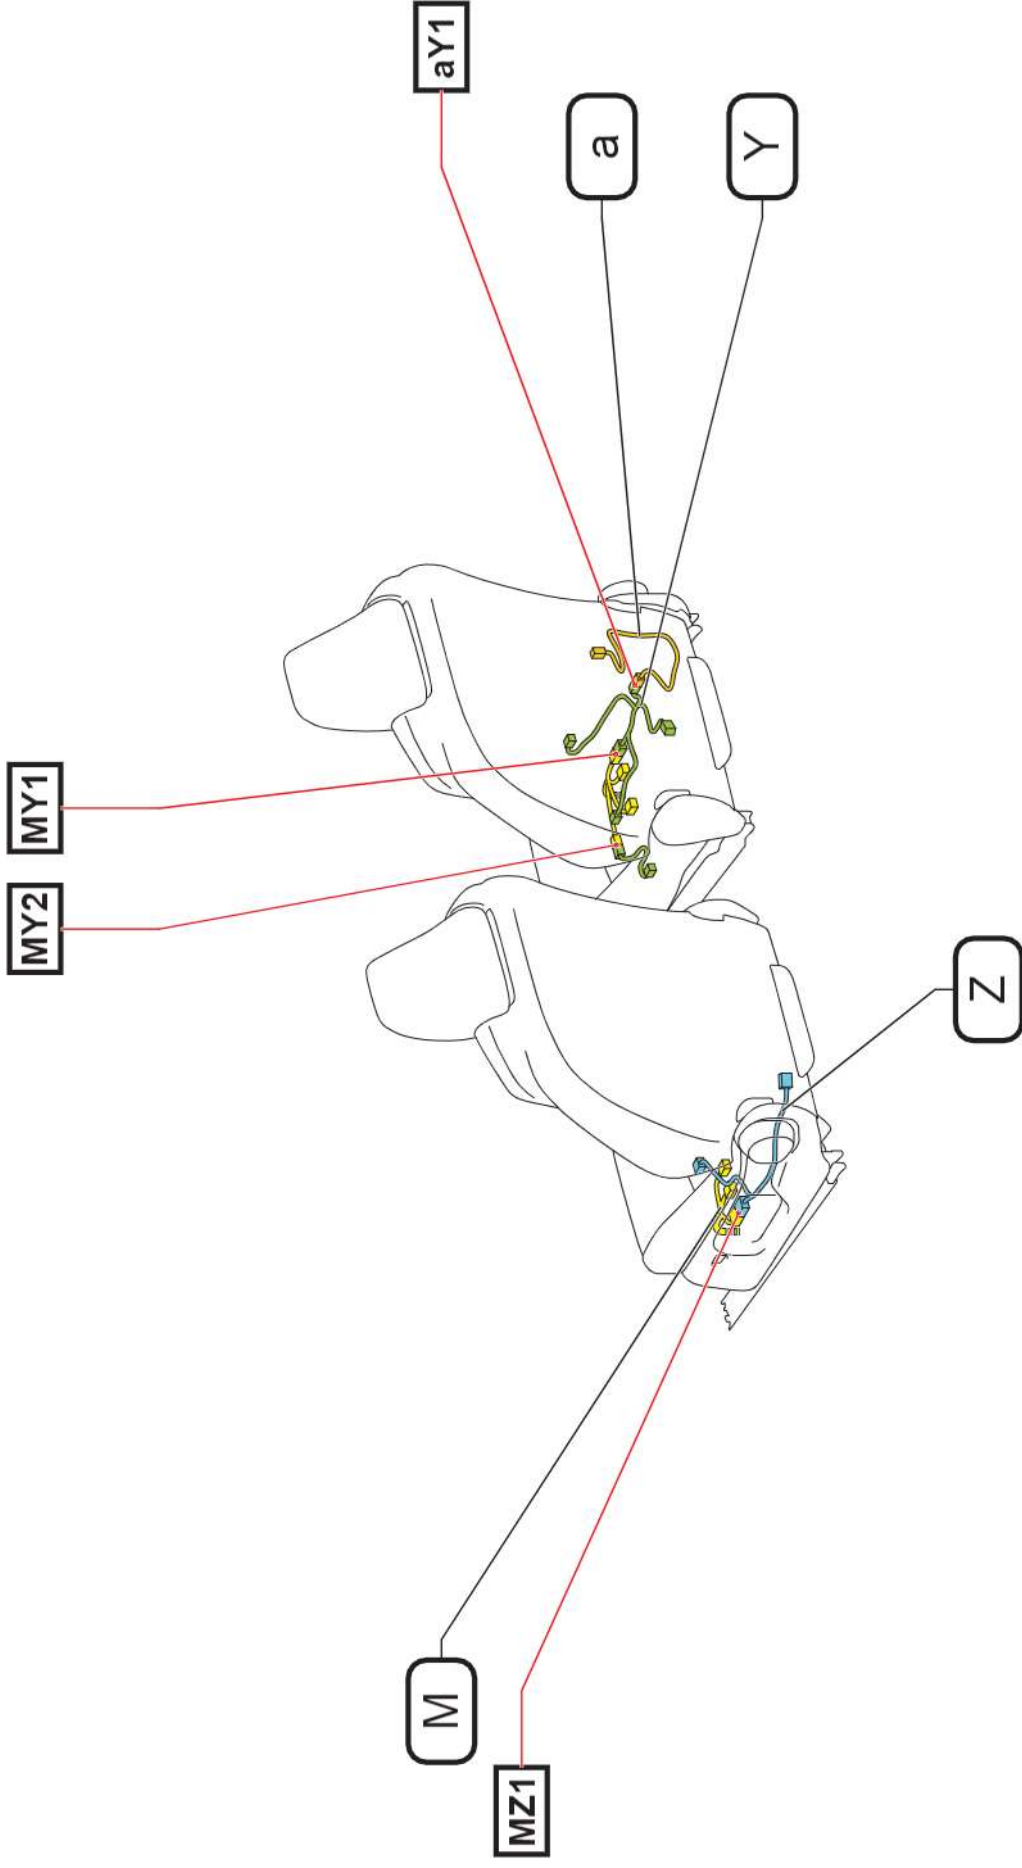

Wire and Wire in Seat (RHD)

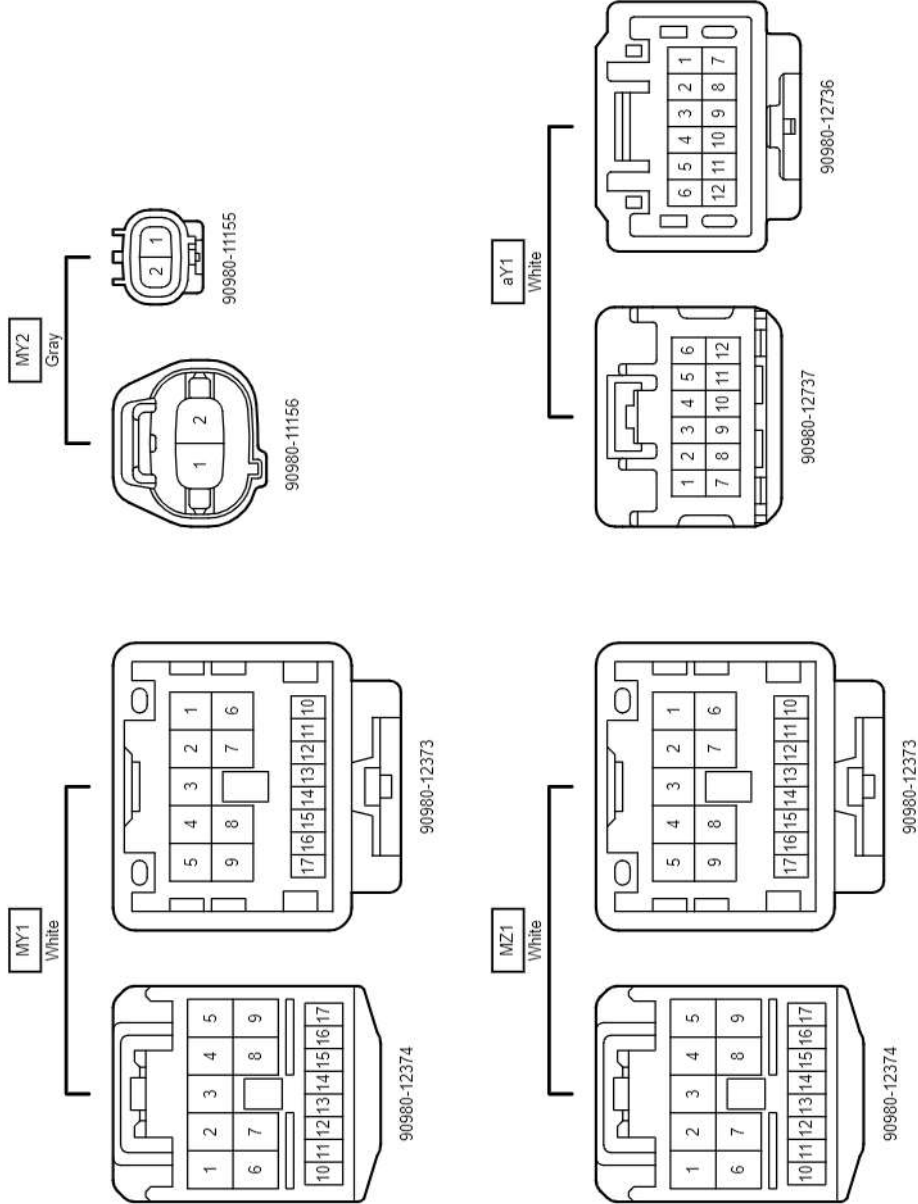
















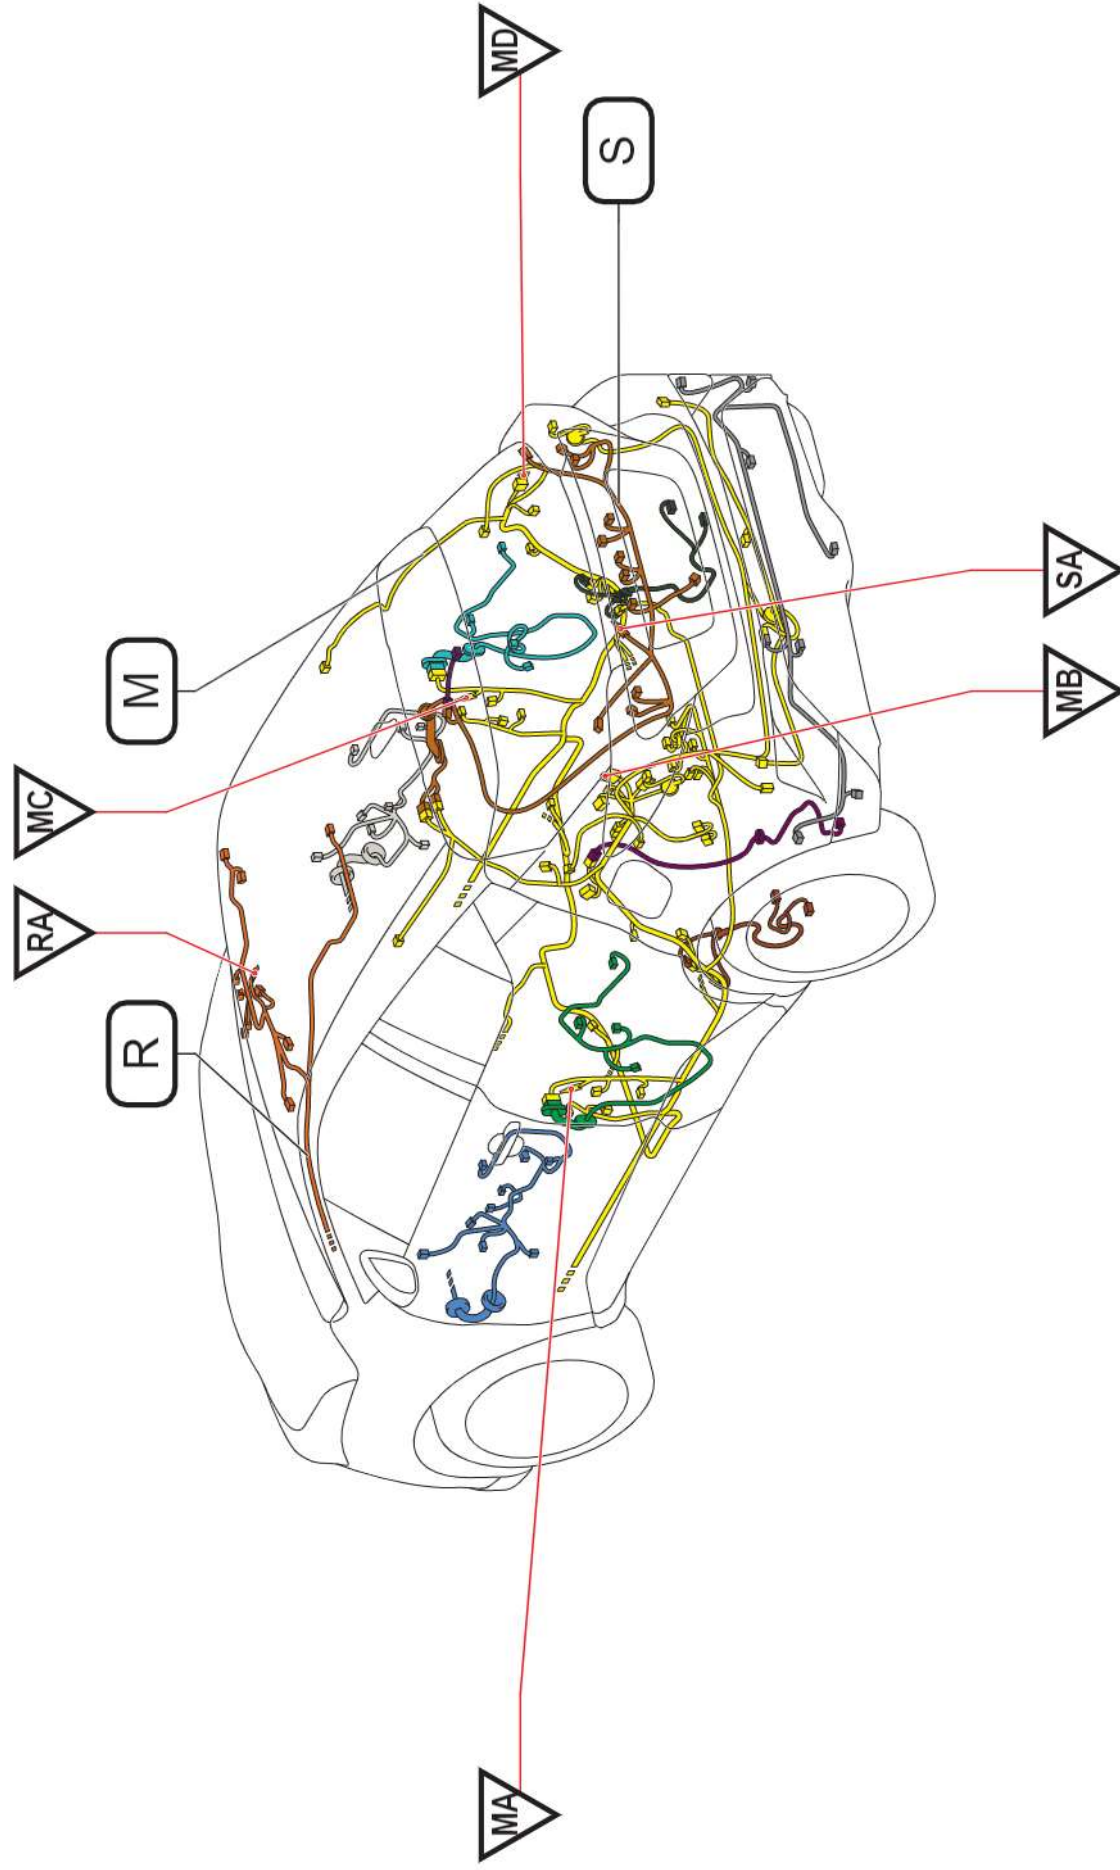


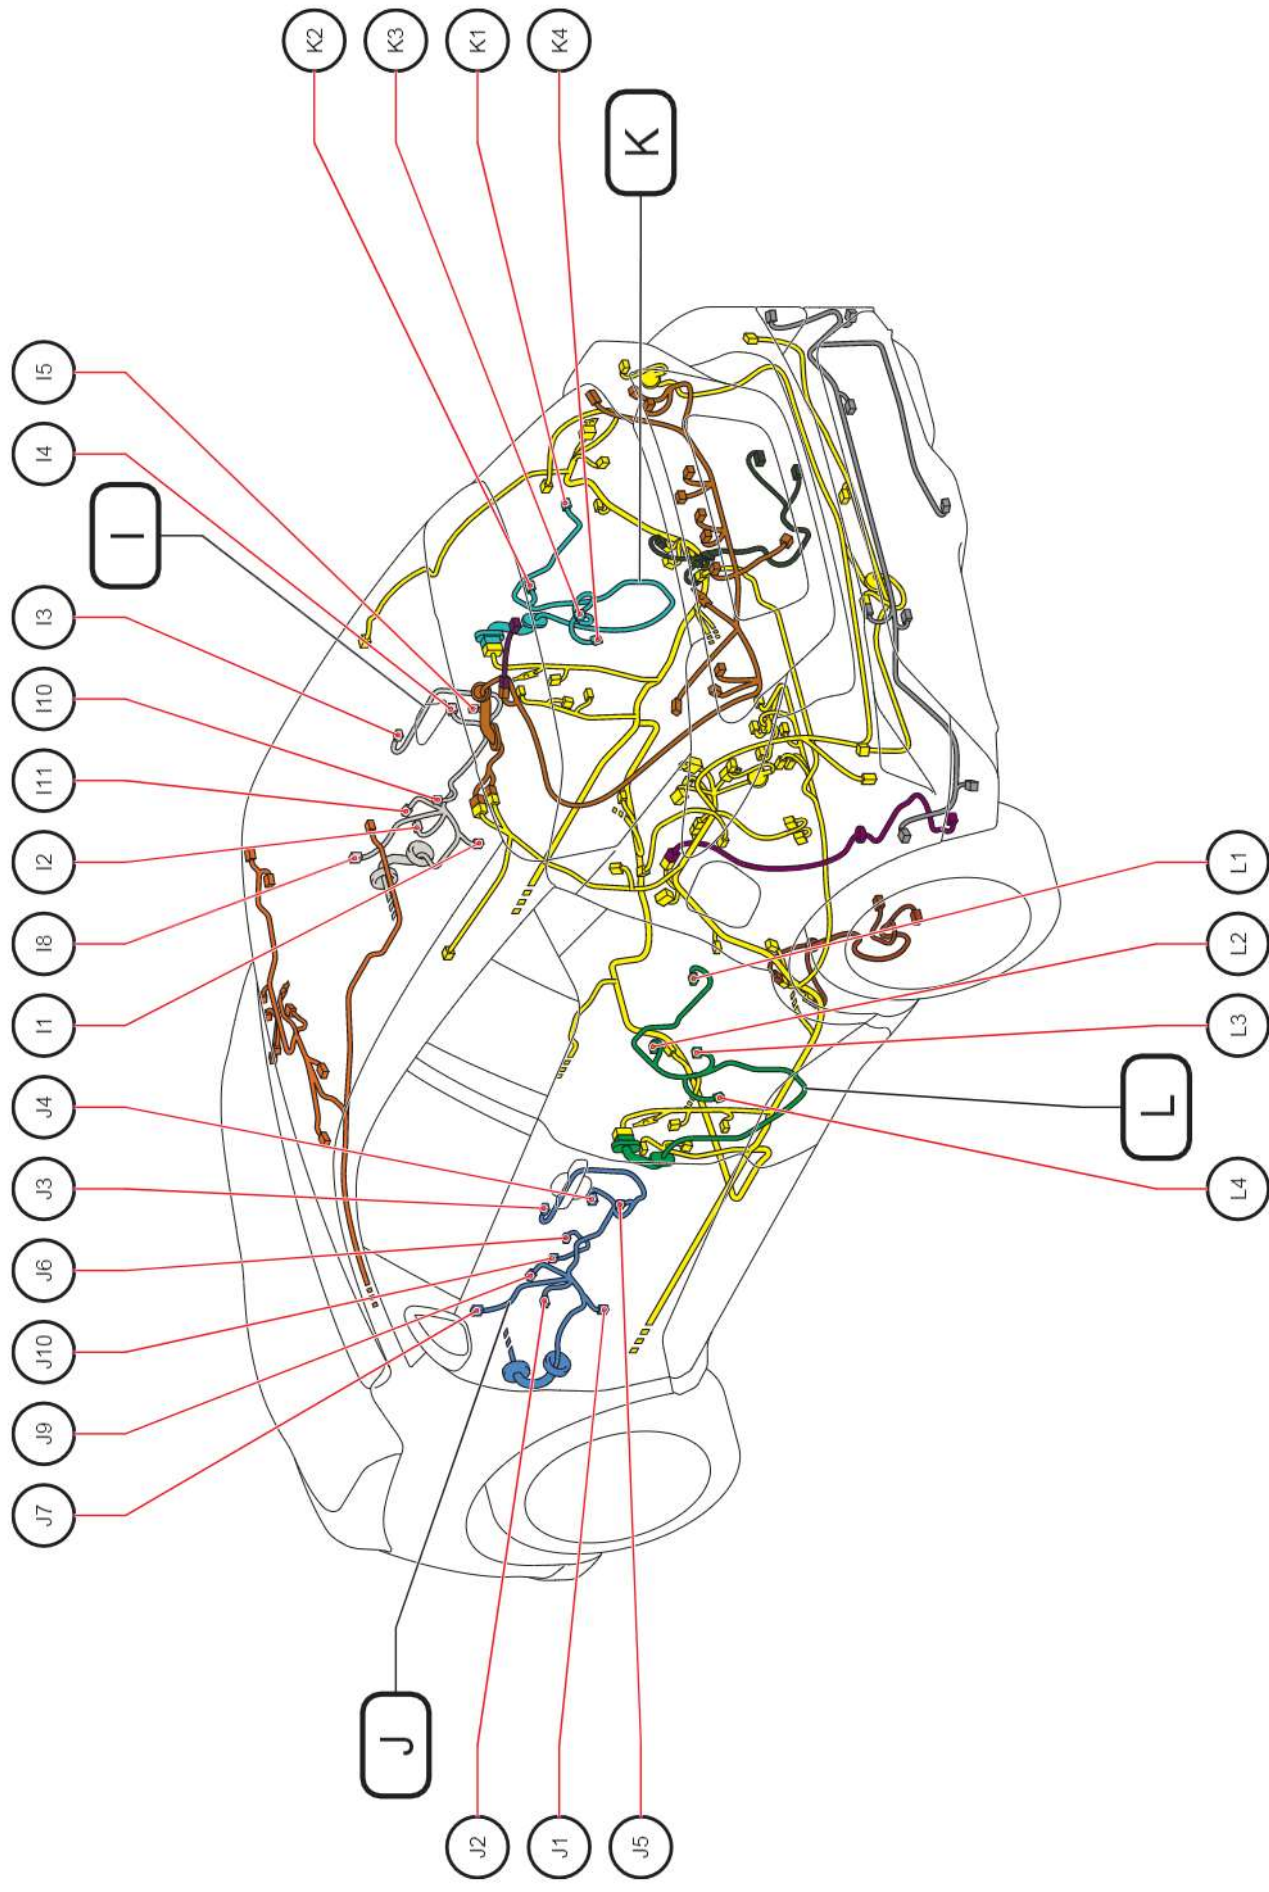



# Position of Parts in Body (LHD)

|     |                                                 |
|-----|-------------------------------------------------|
| I1  | Front No. 1 Speaker Assembly RH                 |
| I2  | Front Power Window Regulator Motor Assembly RH  |
| I3  | Front Door Outside Handle Assembly RH           |
| I4  | Front Door Lock with Motor Assembly RH          |
| I5  | Door Side Airbag Sensor RH                      |
| I8  | Outer Rear View Mirror Assembly RH              |
| I10 | Front Power Window Regulator Switch Assembly RH |
| I11 | No. 1 Interior Illumination Light Assembly RH   |
| J1  | Front No. 1 Speaker Assembly LH                 |
| J2  | Front Power Window Regulator Motor Assembly LH  |
| J3  | Front Door Outside Handle Assembly LH           |
| J4  | Front Door Lock with Motor Assembly LH          |
| J5  | Door Side Airbag Sensor LH                      |
| J6  | Multiplex Network Master Switch Assembly        |
| J7  | Outer Rear View Mirror Assembly LH              |
| J9  | No. 1 Interior Illumination Light Assembly LH   |
| J10 | Outer Mirror Switch Assembly                    |
| K1  | Rear Door Lock with Motor Assembly RH           |
| K2  | Rear Power Window Regulator Motor Assembly RH   |
| K3  | Rear Power Window Regulator Switch Assembly RH  |
| K4  | Rear Speaker Assembly RH                        |
| L1  | Rear Door Lock with Motor Assembly LH           |
| L2  | Rear Power Window Regulator Motor Assembly LH   |
| L3  | Rear Power Window Regulator Switch Assembly LH  |
| L4  | Rear Speaker Assembly LH                        |

   
# Position of Parts in Body (LHD)

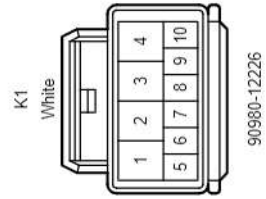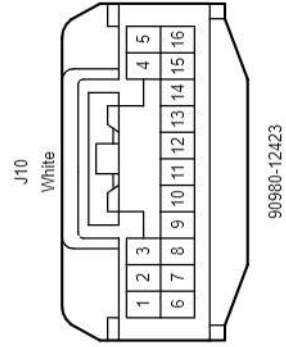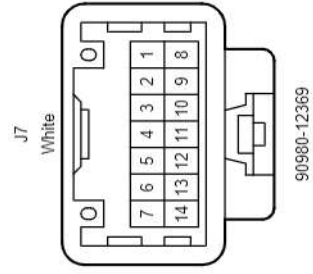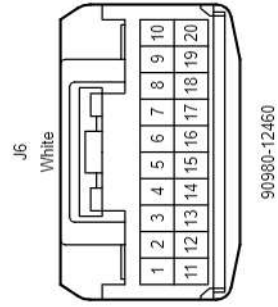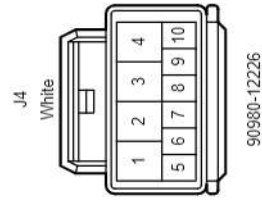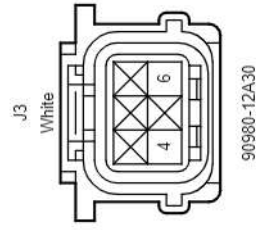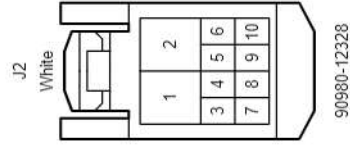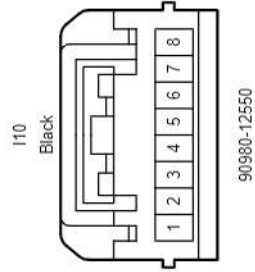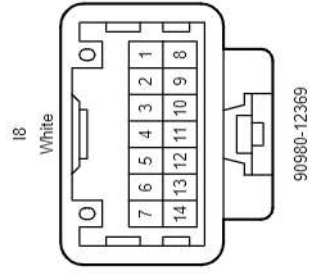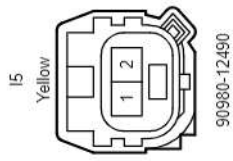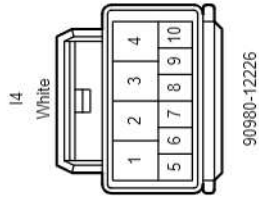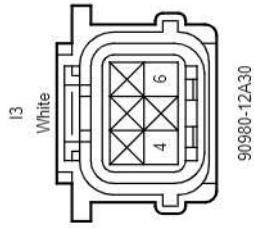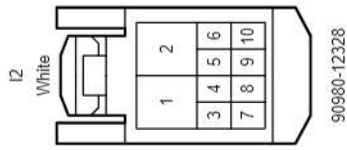

Position of Parts in Body (LHD)

 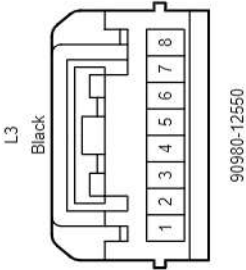

Position of Parts in Body (LHD)

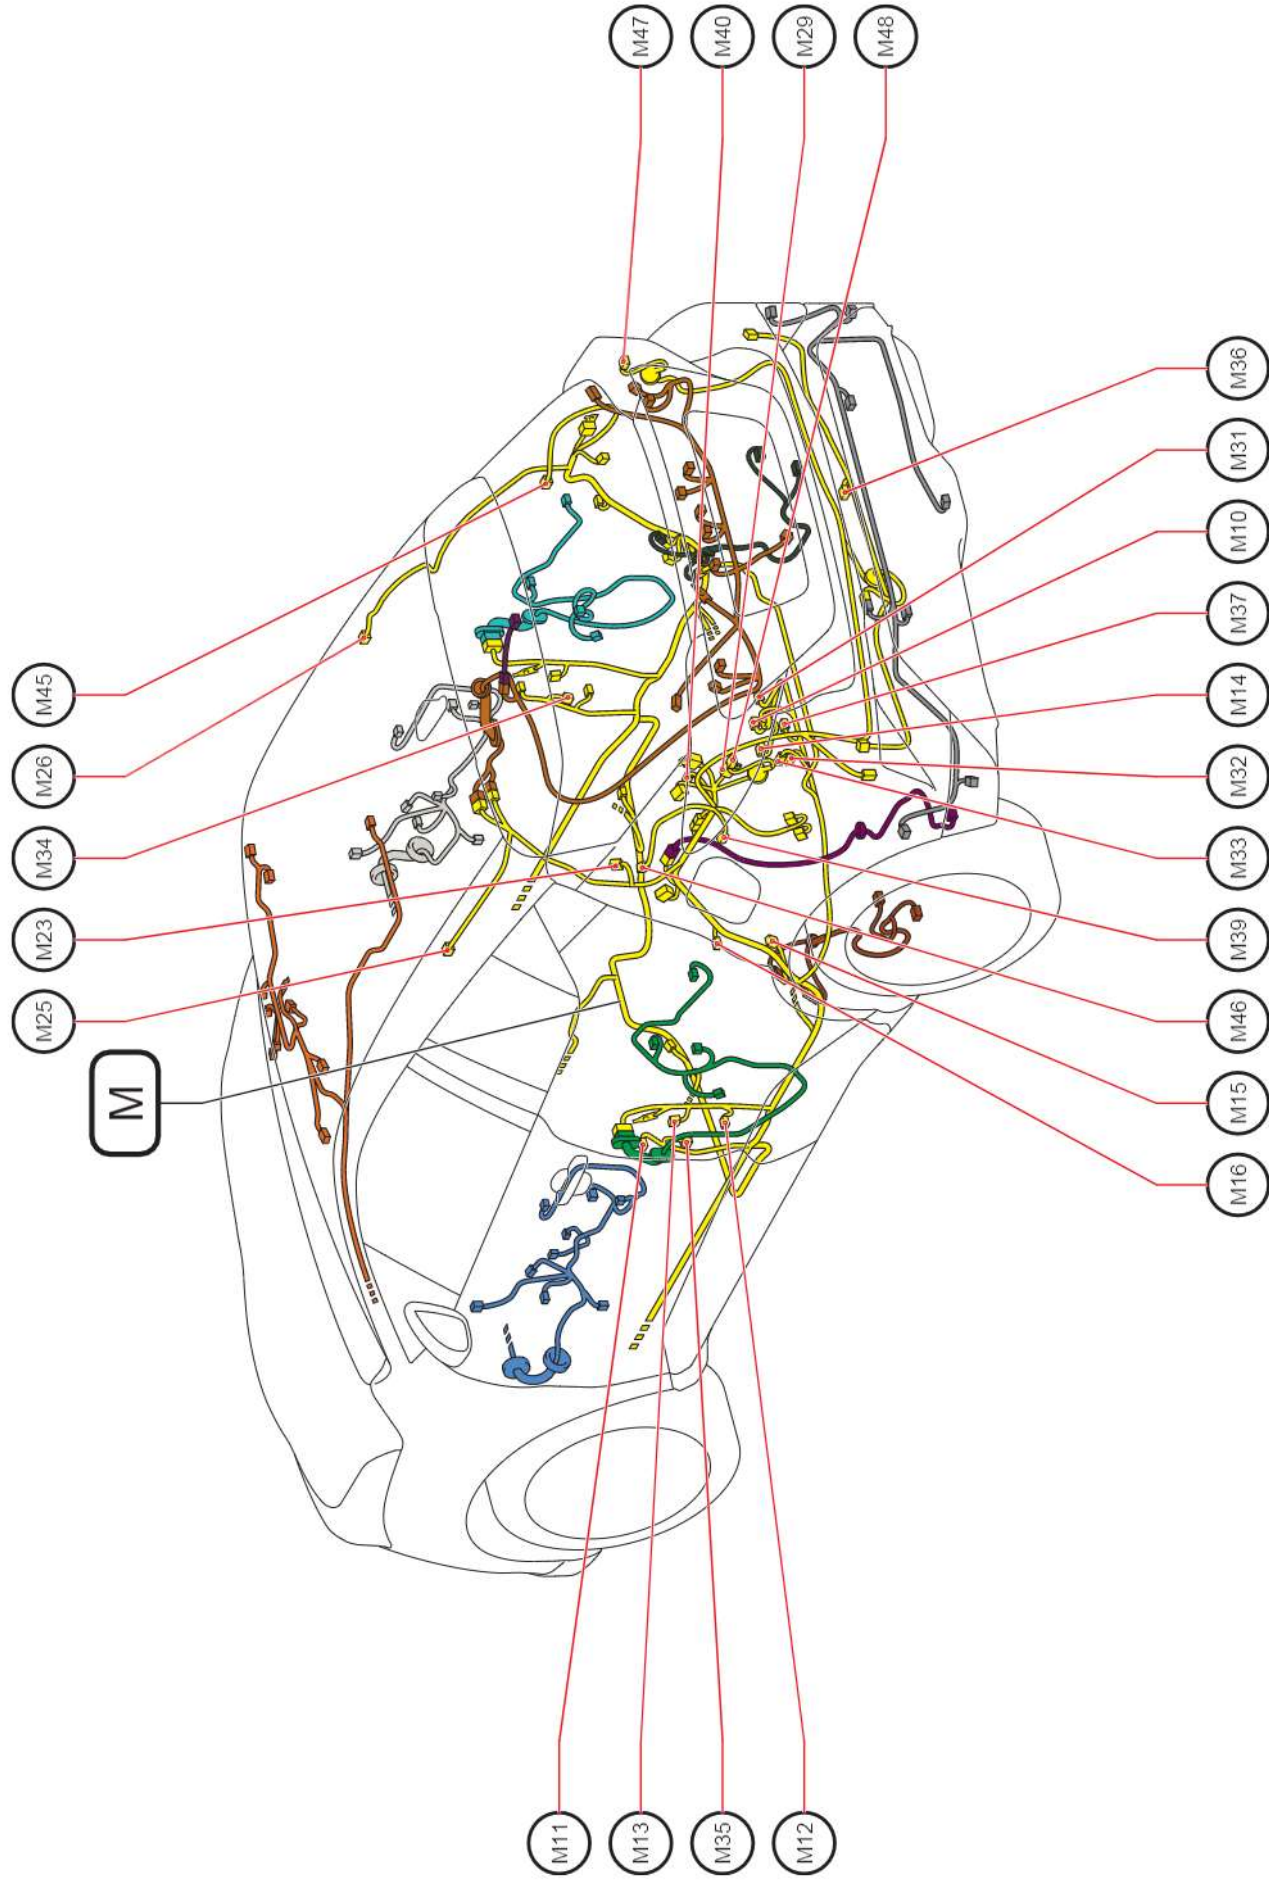





















---


**Position of Parts in Body (LHD)**

   ---

|     |                                                                                                             |
|-----|-------------------------------------------------------------------------------------------------------------|
| M10 | No. 2 Indoor Electrical Key Antenna Assembly                                                                |
| M11 | Front Door Courtesy Light Switch Assembly LH                                                                |
| M12 | Front Seat Outer Belt Assembly LH                                                                           |
| M13 | No. 1 Side Airbag Sensor LH                                                                                 |
| M14 | Fuel Pump (Fuel Suction Tube with Pump & Gage Assembly)                                                     |
| M15 | No. 2 Side Airbag Sensor LH                                                                                 |
| M16 | Rear Door Courtesy Light Switch Assembly LH                                                                 |
| M23 | Tire Pressure Warning ECU and Receiver (Electrical Key & Tire Pressure Monitoring System Receiver Assembly) |
| M25 | Curtain Shield Airbag Assembly LH                                                                           |
| M26 | Curtain Shield Airbag Assembly RH                                                                           |
| M29 | Condenser (Center Stop Light Assembly)                                                                      |
| M31 | Rear Seat Inner Belt Assembly RH                                                                            |
| M32 | Rear Seat Inner Belt with Center Assembly LH                                                                |
| M33 | Rear Seat Inner Belt with Center Assembly LH                                                                |
| M34 | Floor Side Airbag Sensor RH                                                                                 |
| M35 | Floor Side Airbag Sensor LH                                                                                 |
| M36 | Electrical Key Antenna                                                                                      |
| M37 | No. 3 Indoor Electrical Key Antenna Assembly                                                                |
| M39 | Fuel Lid Lock with Motor Assembly                                                                           |
| M40 | No. 1 Luggage Compartment Light Assembly                                                                    |
| M45 | Rear Seat 3 Point Type Outer Belt Assembly RH                                                               |
| M46 | Rear Seat 3 Point Type Belt Assembly Outer LH                                                               |
| M47 | Rear Combination Light Assembly RH                                                                          |
| M48 | Rear Combination Light Assembly LH                                                                          |

# Position of Parts in Body (LHD)

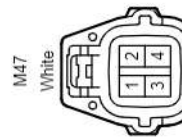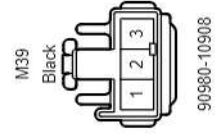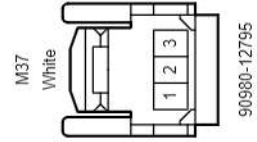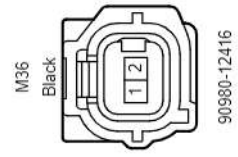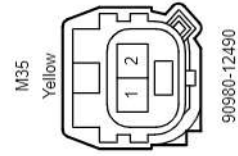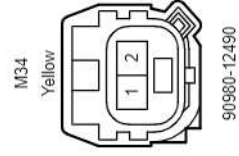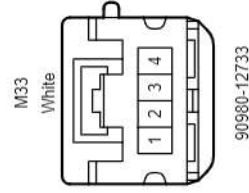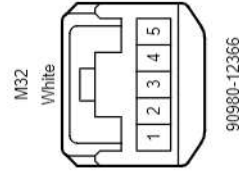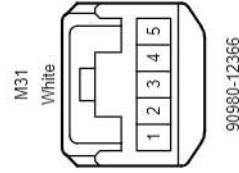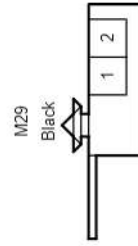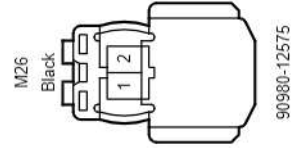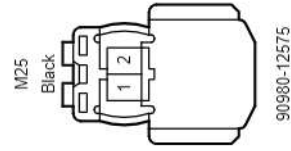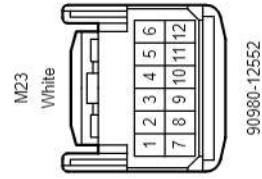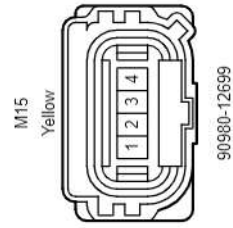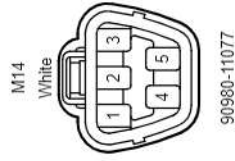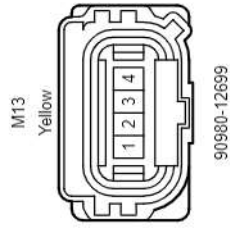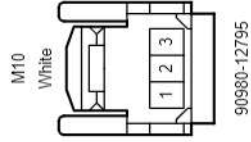

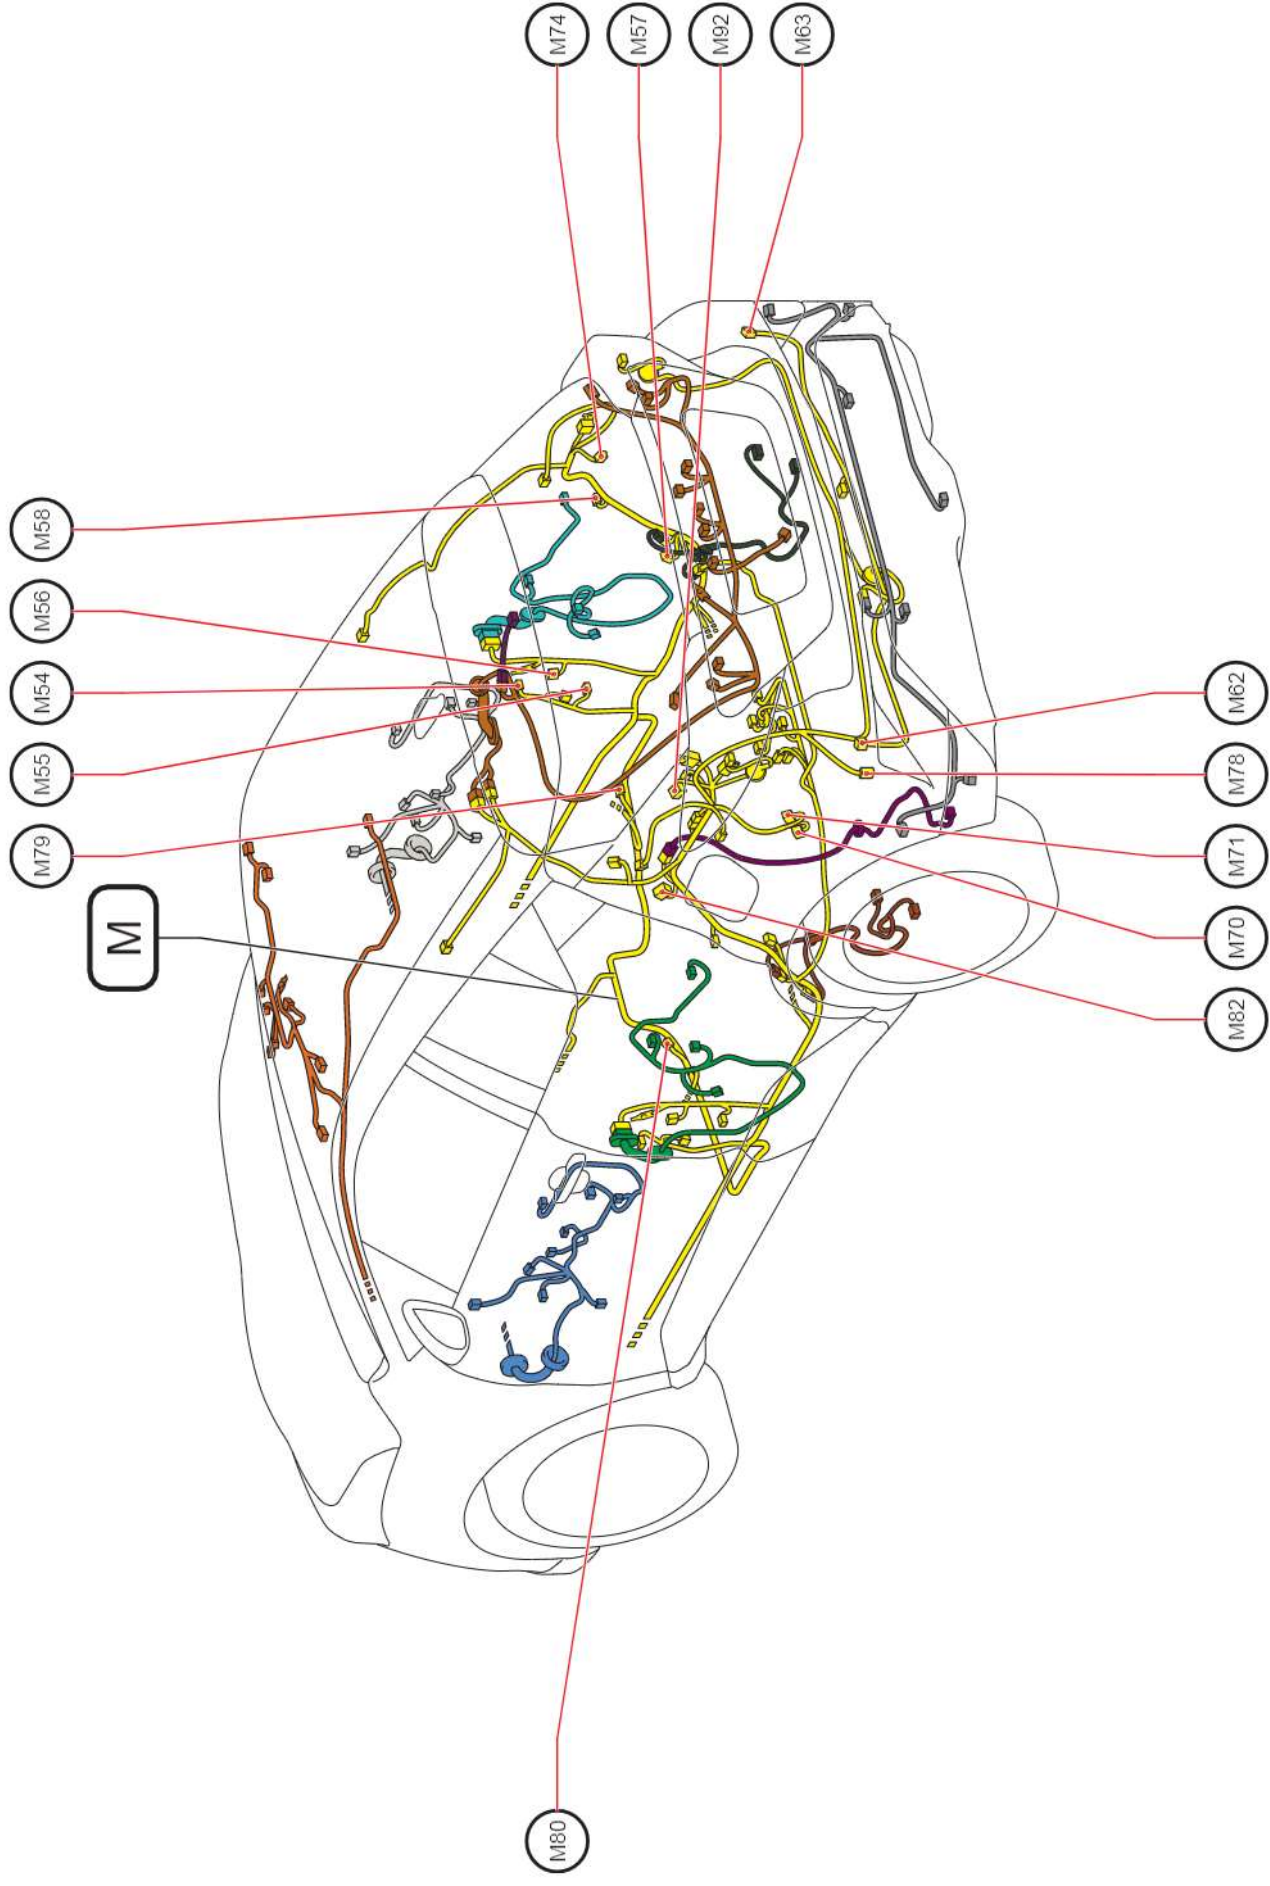

Position of Parts in Body (LHD)

---

|     |                                              |
|-----|----------------------------------------------|
| M54 | Front Door Courtesy Light Switch Assembly RH |
| M55 | Front Seat Outer Belt Assembly RH            |
| M56 | No. 1 Side Airbag Sensor RH                  |
| M57 | No. 2 Side Airbag Sensor RH                  |
| M58 | Rear Door Courtesy Light Switch Assembly RH  |
| M62 | Blind Spot Monitor Sensor LH                 |
| M63 | Blind Spot Monitor Sensor RH                 |
| M70 | Parking Brake ECU Assembly                   |
| M71 | Parking Brake ECU Assembly                   |
| M74 | No. 1 Speaker with Box Assembly              |
| M78 | Option Connector (Trailer Towing)            |
| M79 | Option Connector                             |
| M80 | Option Connector                             |
| M82 | No. 26 Junction Connector                    |
| M92 | No. 6 CAN Junction Connector                 |

 
Position of Parts in Body (LHD)

M54  
Black




90980-10871

M55  
Yellow




90980-12452

M56  
Yellow

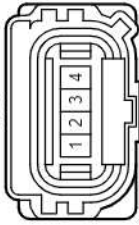

90980-12699

M57  
Yellow

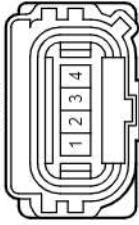


90980-12699

M58  
Black



90980-10871

M62  
Black

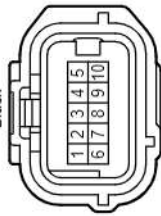


90980-12380

M63  
Black




90980-12380

M70  
Gray

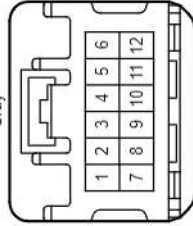


90980-12737

M71  
White

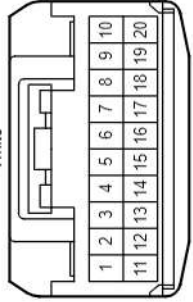

90980-12460

M74  
White

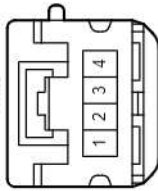

90980-12733

M78  
White



90980-11060

M79  
Gray




90980-11349

M80  
Gray




90980-11349

M82  
Black

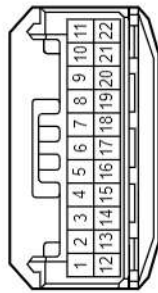



90980-12B54

M92  
Black

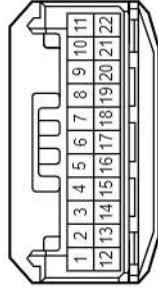

90980-12B54

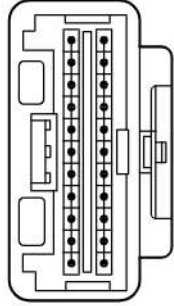

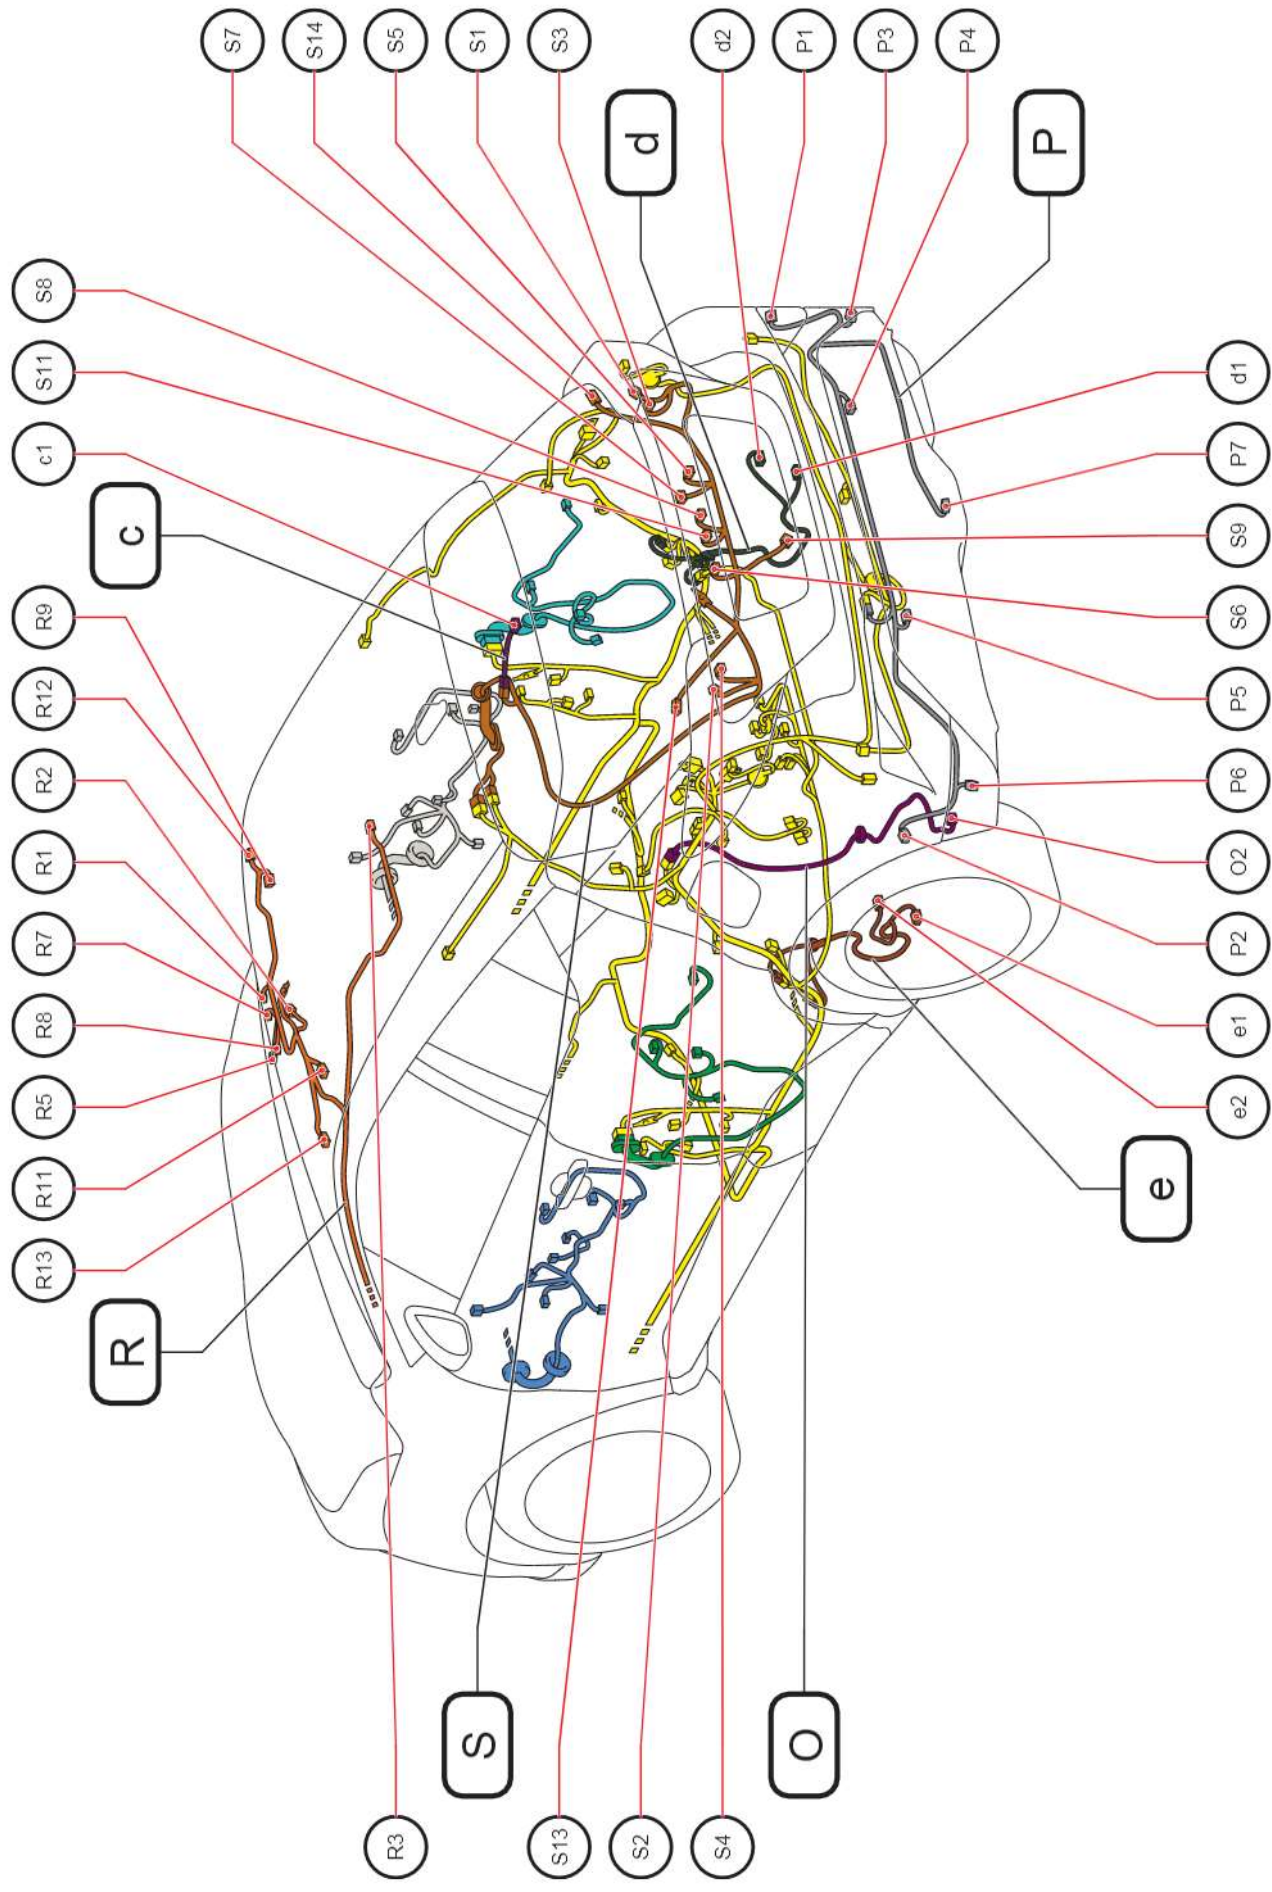

O2 Rear Height Control Sensor Sub-Assembly LH

P1 Rear Ultrasonic Sensor Side RH  
P2 Rear Ultrasonic Sensor Side LH  
P3 Rear Ultrasonic Sensor Corner RH  
P4 Rear Ultrasonic Sensor Center RH  
P5 Rear Ultrasonic Sensor Center LH  
P6 Rear Ultrasonic Sensor Corner LH  
P7 Rear Fog Light Assembly

R1 Rain Sensor  
R2 Map Light Assembly  
R3 No. 1 Room Light Assembly  
R5 Forward Recognition Camera  
R7 Inner Rear View Mirror Assembly  
R8 Forward Recognition Hood  
R9 Vanity Light Assembly RH  
R11 Vanity Light Assembly LH  
R12 Visor Assembly RH  
R13 Visor Assembly LH







 









S1 Rear Light Assembly RH  
S2 Rear Light Assembly LH  
S3 Rear Light Assembly RH  
S4 Rear Light Assembly LH  
S5 License Plate Light Assembly RH  
S6 License Plate Light Assembly LH  
S7 Rear Wiper Motor Assembly  
S8 Back Door Opener Switch Assembly  
S9 Back Door Lock Assembly  
S11 Rear Television Camera Assembly  
S13 Rear Window Defogger (Back Door Glass)  
S14 Rear Window Defogger (Back Door Glass)

c1 Center Stop Light Assembly












d1 Rear Speed Sensor RH  
d2 Parking Brake Actuator Assembly RH

e1 Rear Speed Sensor LH  
e2 Parking Brake Actuator Assembly LH


Position of Parts in Body (LHD)

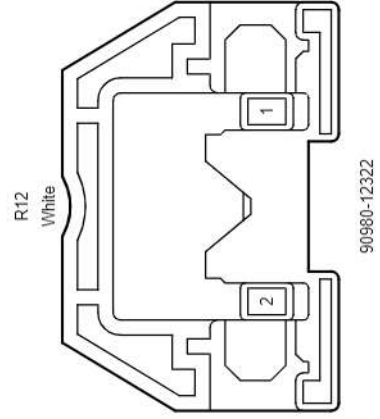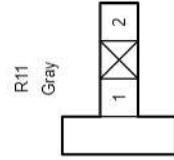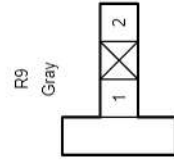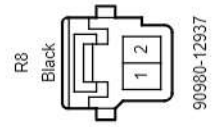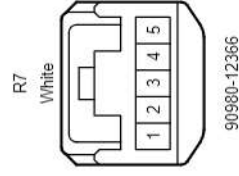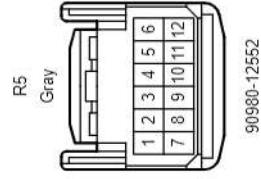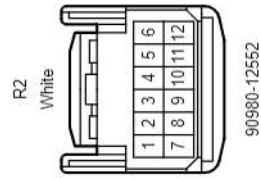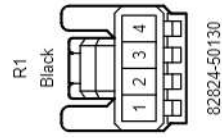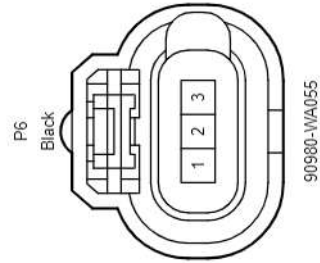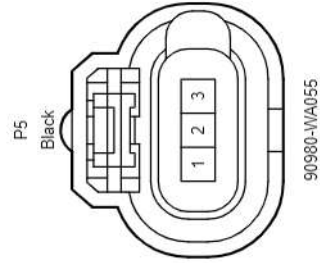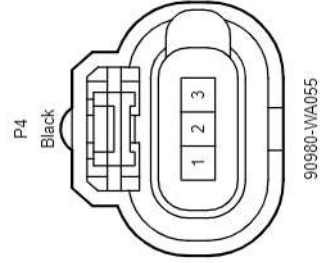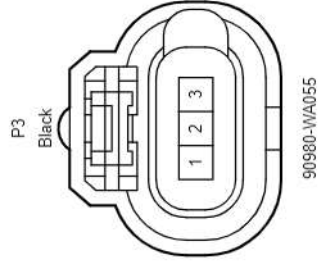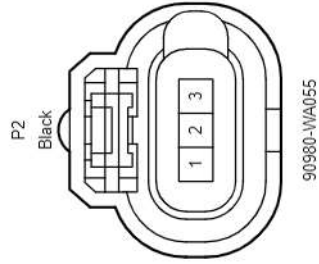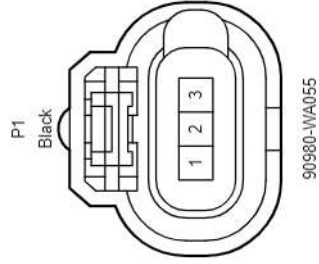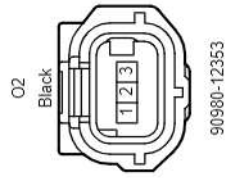

Position of Parts in Body (LHD)

  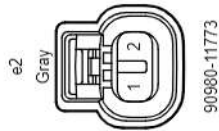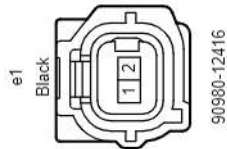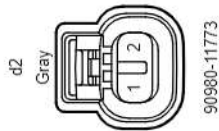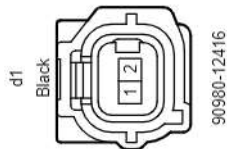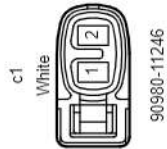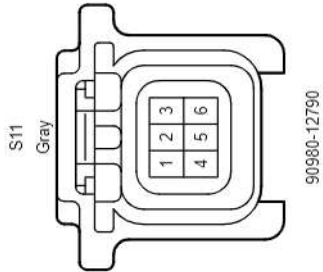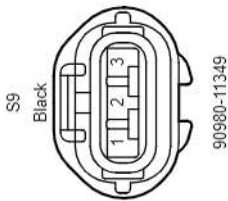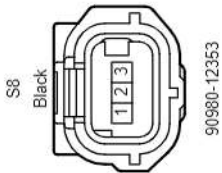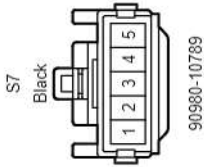












Position of Parts in Body (LHD)

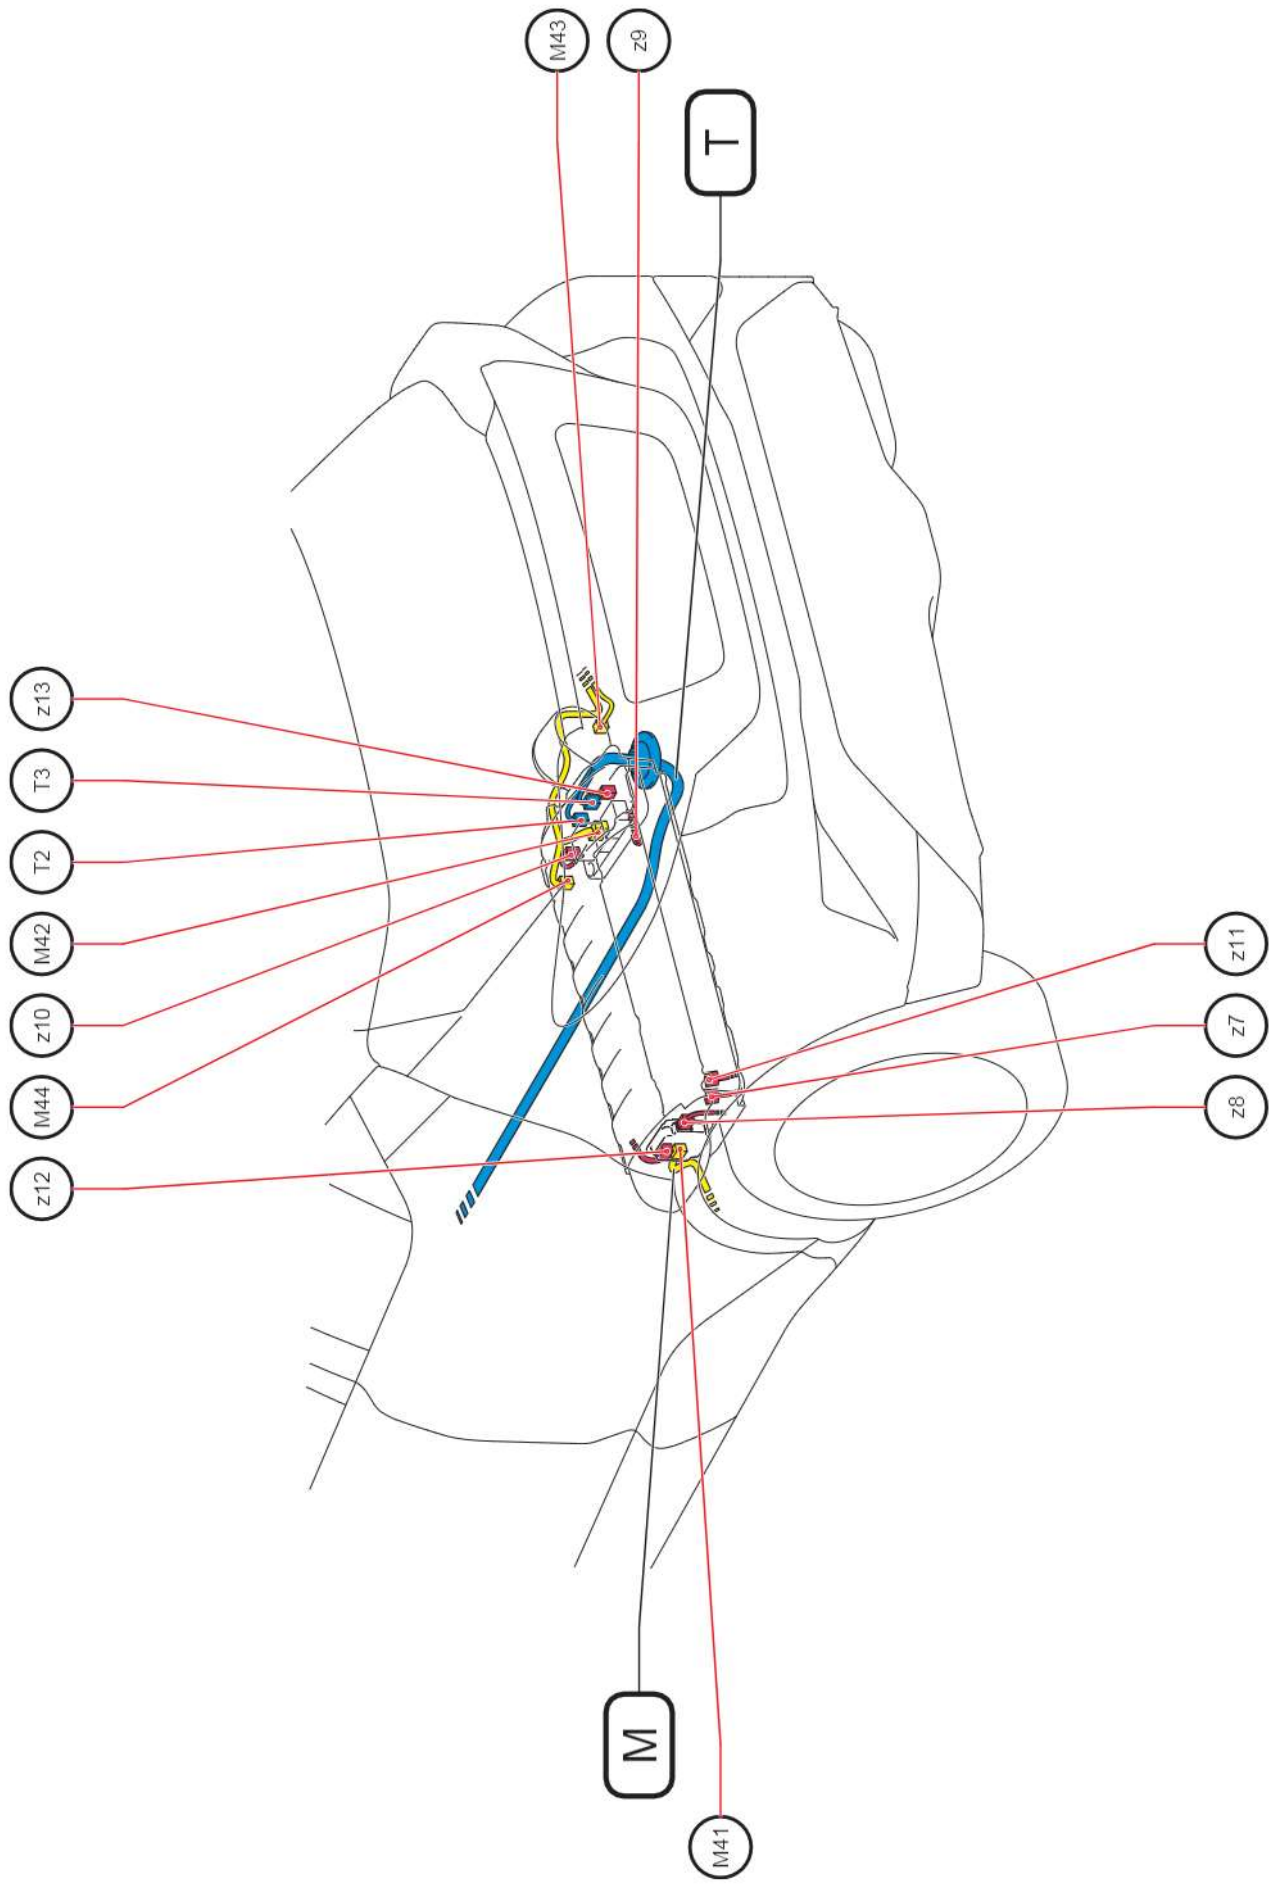


Position of Parts in Body (LHD)

|     |                                                                 |
|-----|-----------------------------------------------------------------|
| M41 | Battery Voltage Sensor                                          |
| M42 | HV Battery Junction Block Assembly                              |
| M43 | Battery Cooling Blower Assembly                                 |
| M44 | Inter Lock Switch                                               |
| T2  | HV Battery Junction Block Assembly                              |
| T3  | HV Battery Junction Block Assembly                              |
| z7  | Hybrid Battery Terminal Block , HV Supply Battery Assembly      |
| z8  | HV Supply Battery Assembly , Battery Voltage Sensor             |
| z9  | HV Supply Battery Assembly                                      |
| z10 | HV Battery Junction Block Assembly                              |
| z11 | Hybrid Battery Terminal Block , HV Supply Battery Assembly      |
| z12 | HV Supply Battery Assembly , Battery Voltage Sensor             |
| z13 | HV Battery Junction Block Assembly , HV Supply Battery Assembly |

  
Position of Parts in Body (LHD)

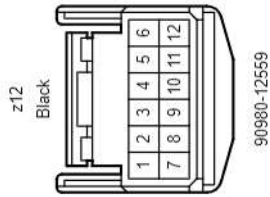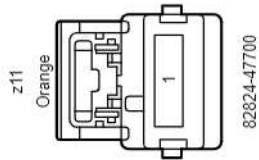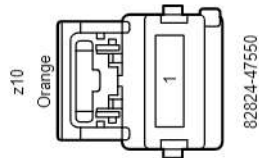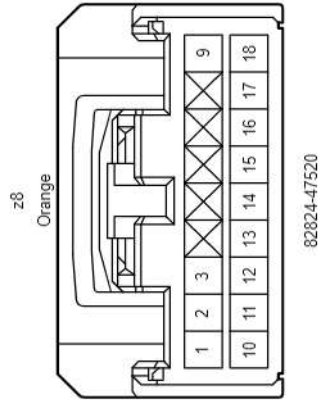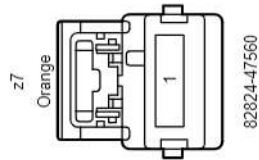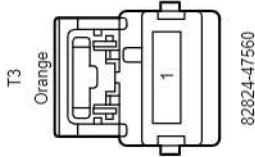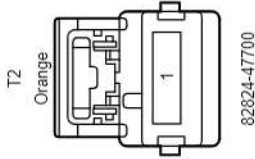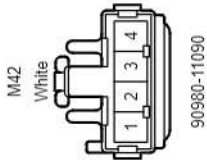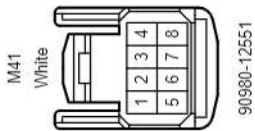

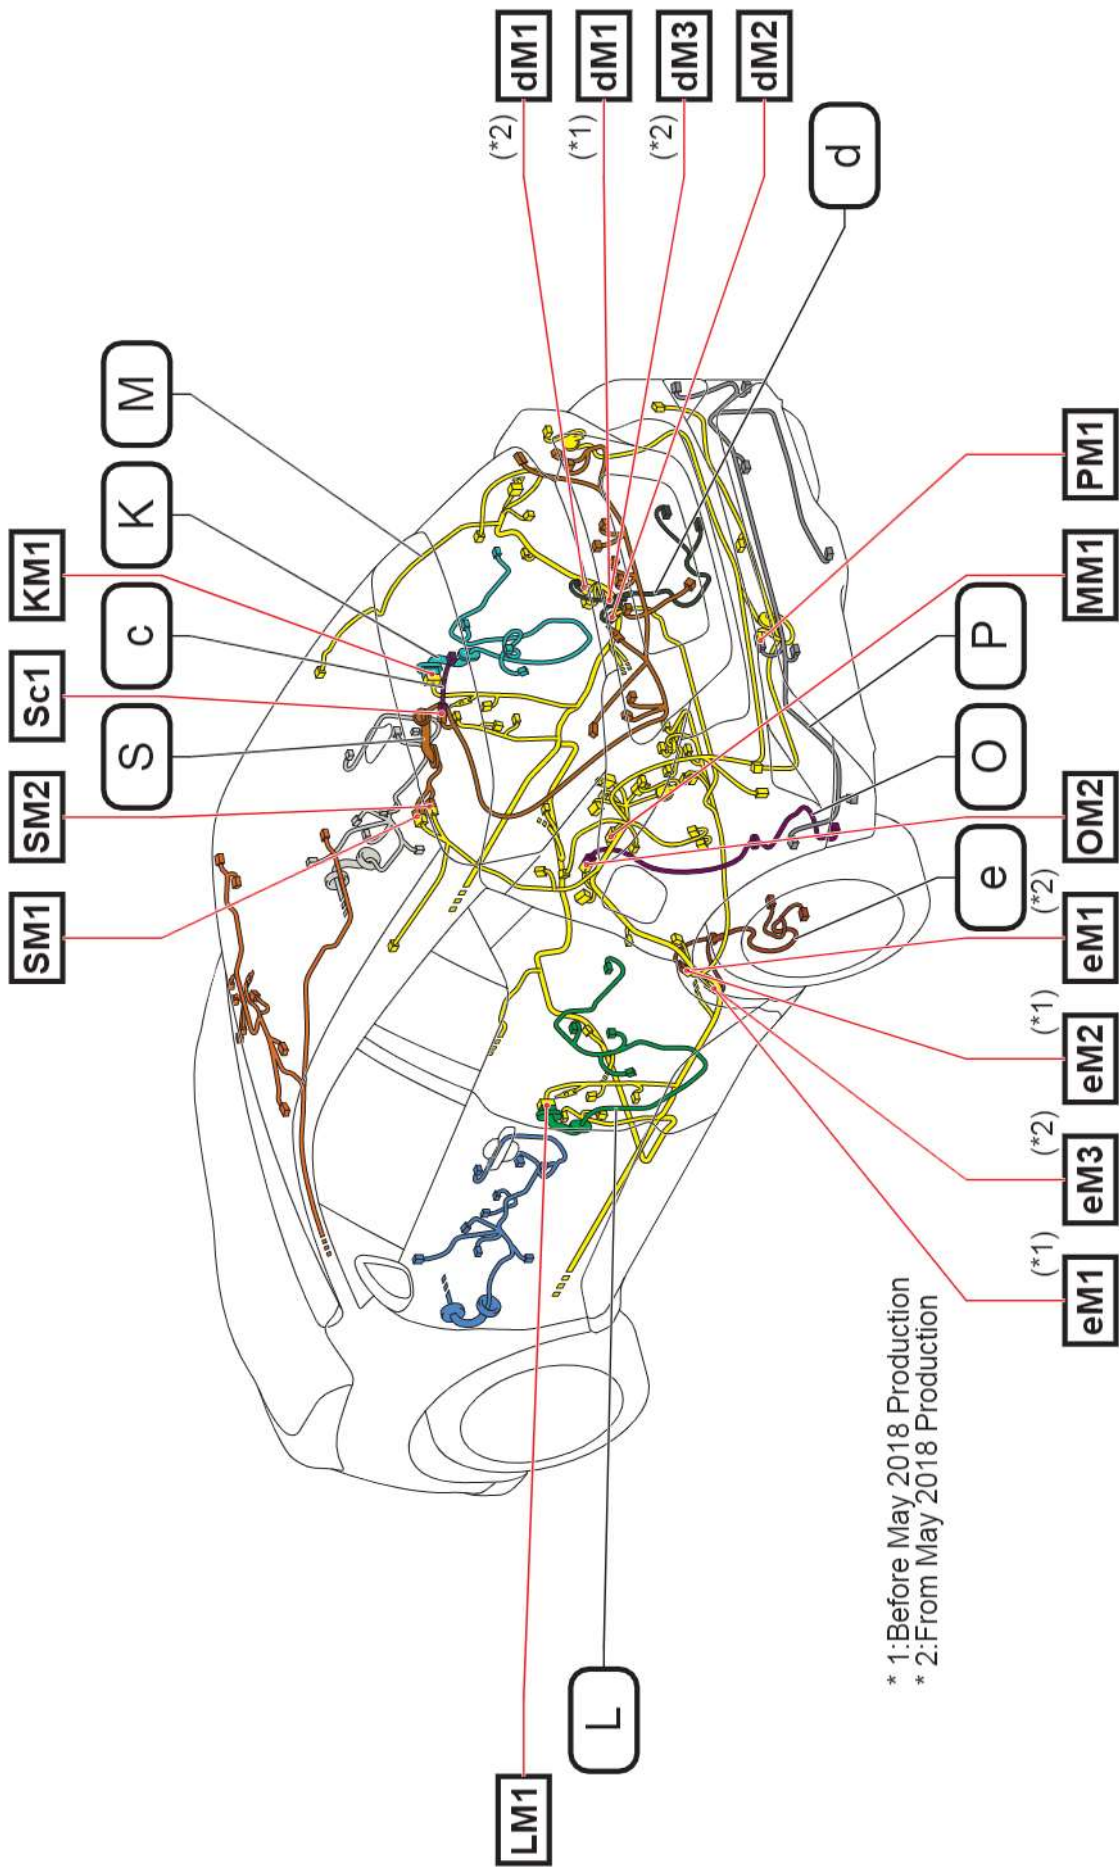


Wire and Wire in Body (LHD)

KM1  
White

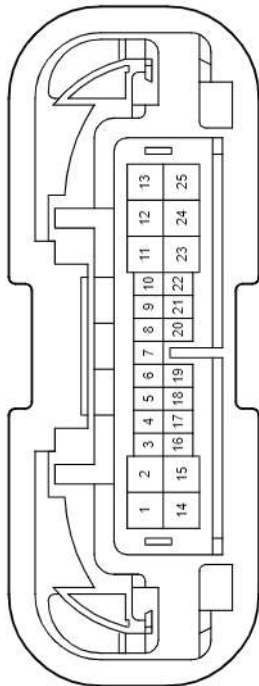


90980-12802

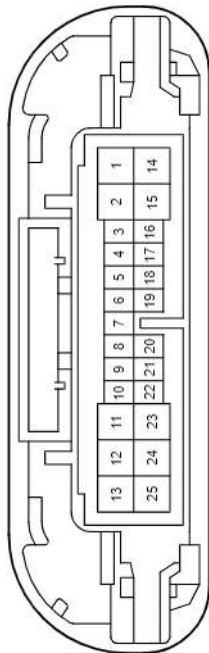


90980-12801

LM1  
White

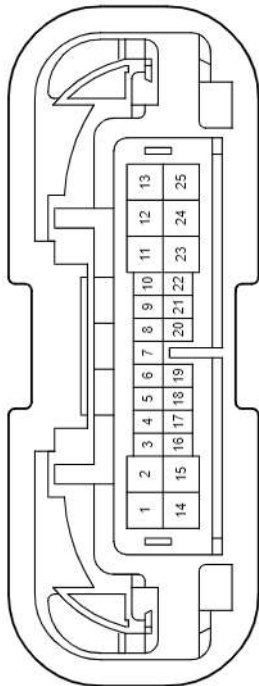


90980-12802

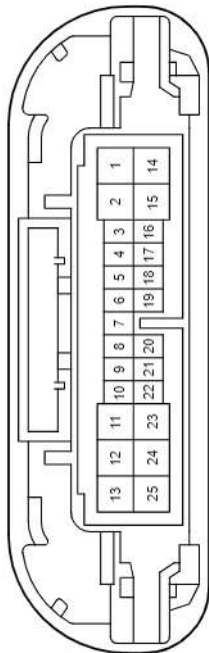


90980-12801

MM1  
White

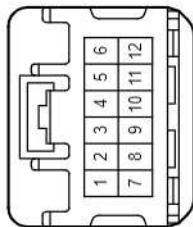


90980-12737

OM2  
White

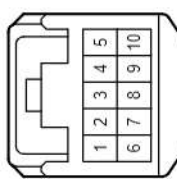

90980-12368

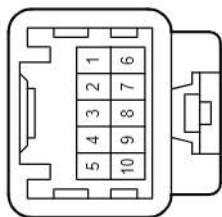

90980-12367


PM1  
White





SM1  
White



Wire and Wire in Body (LHD)















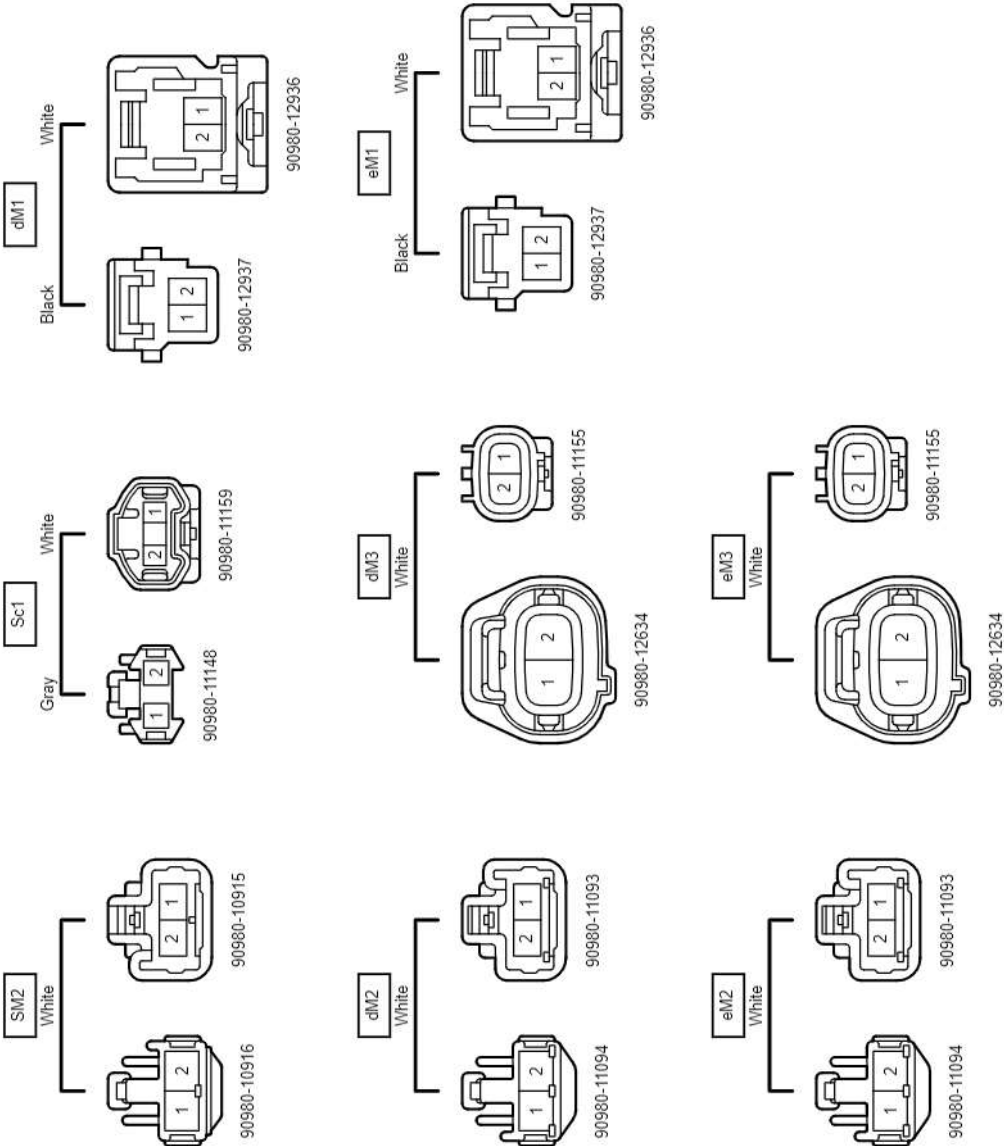


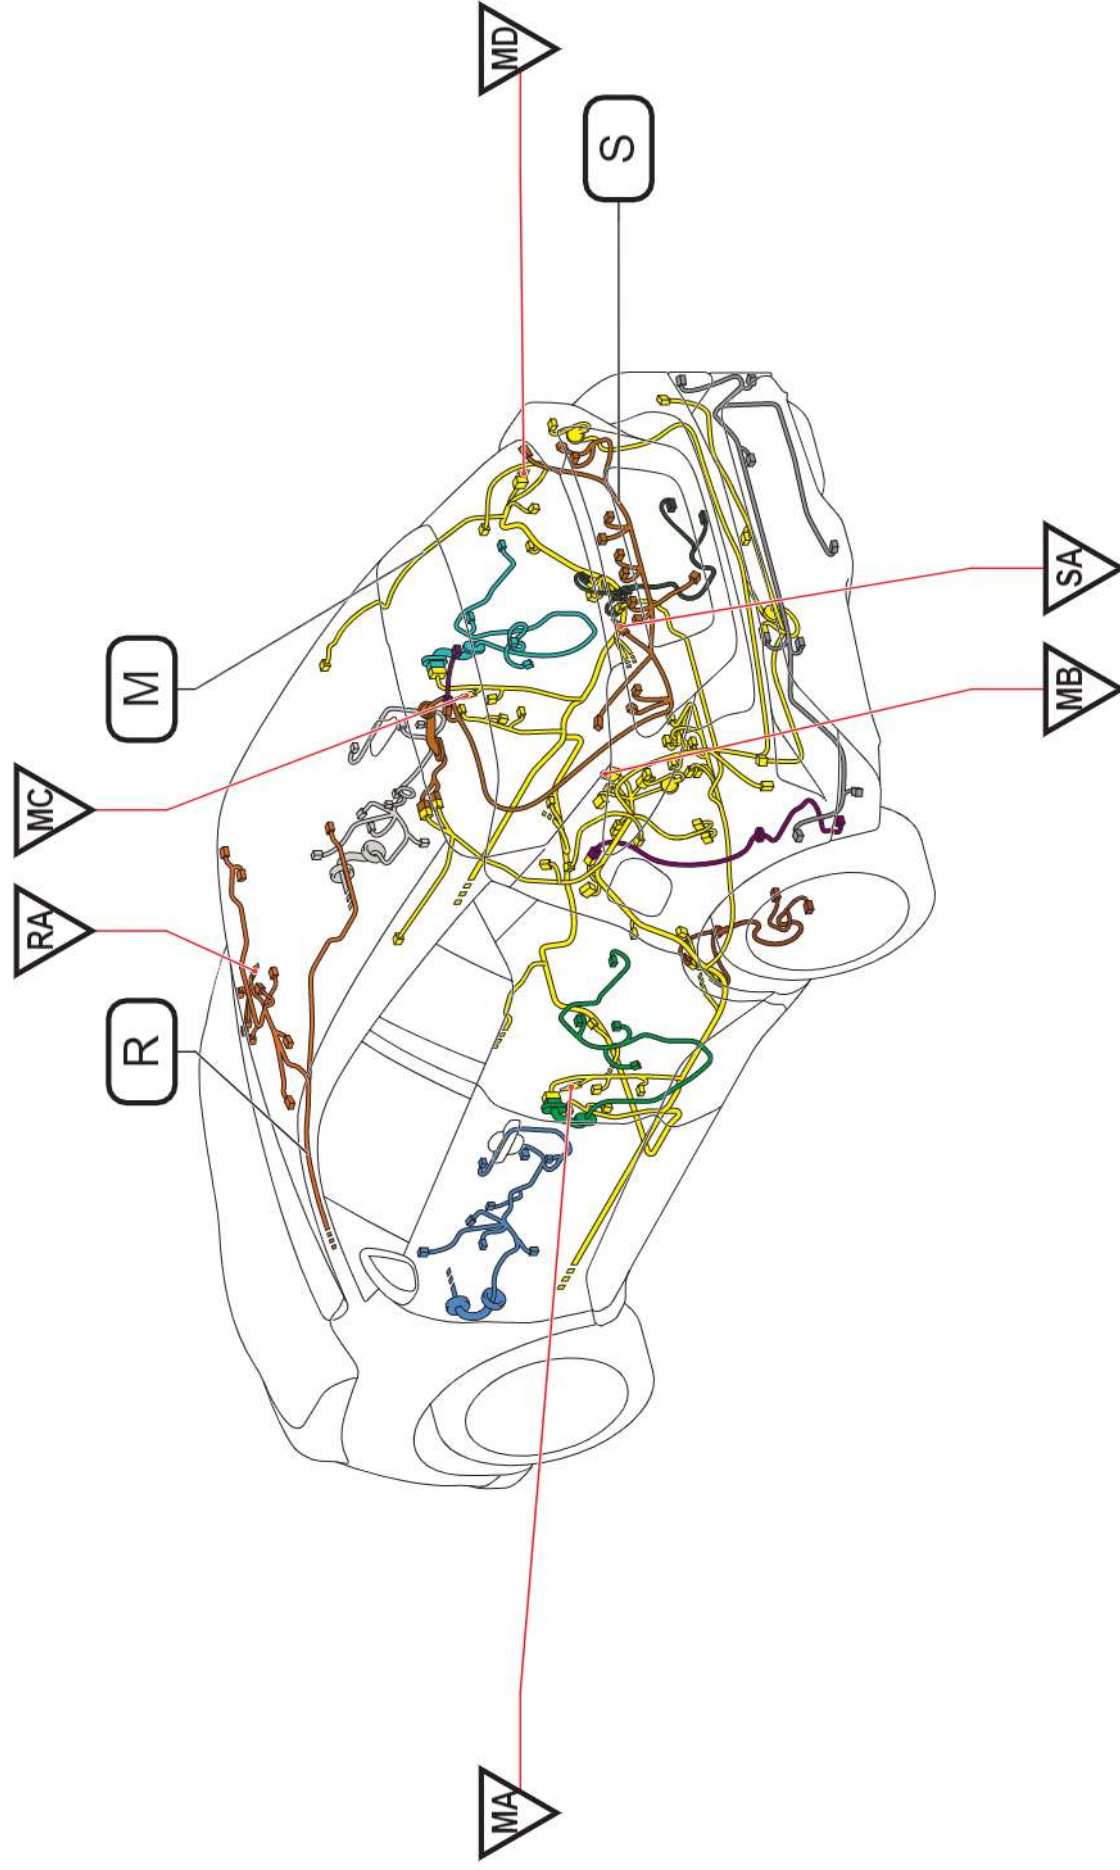


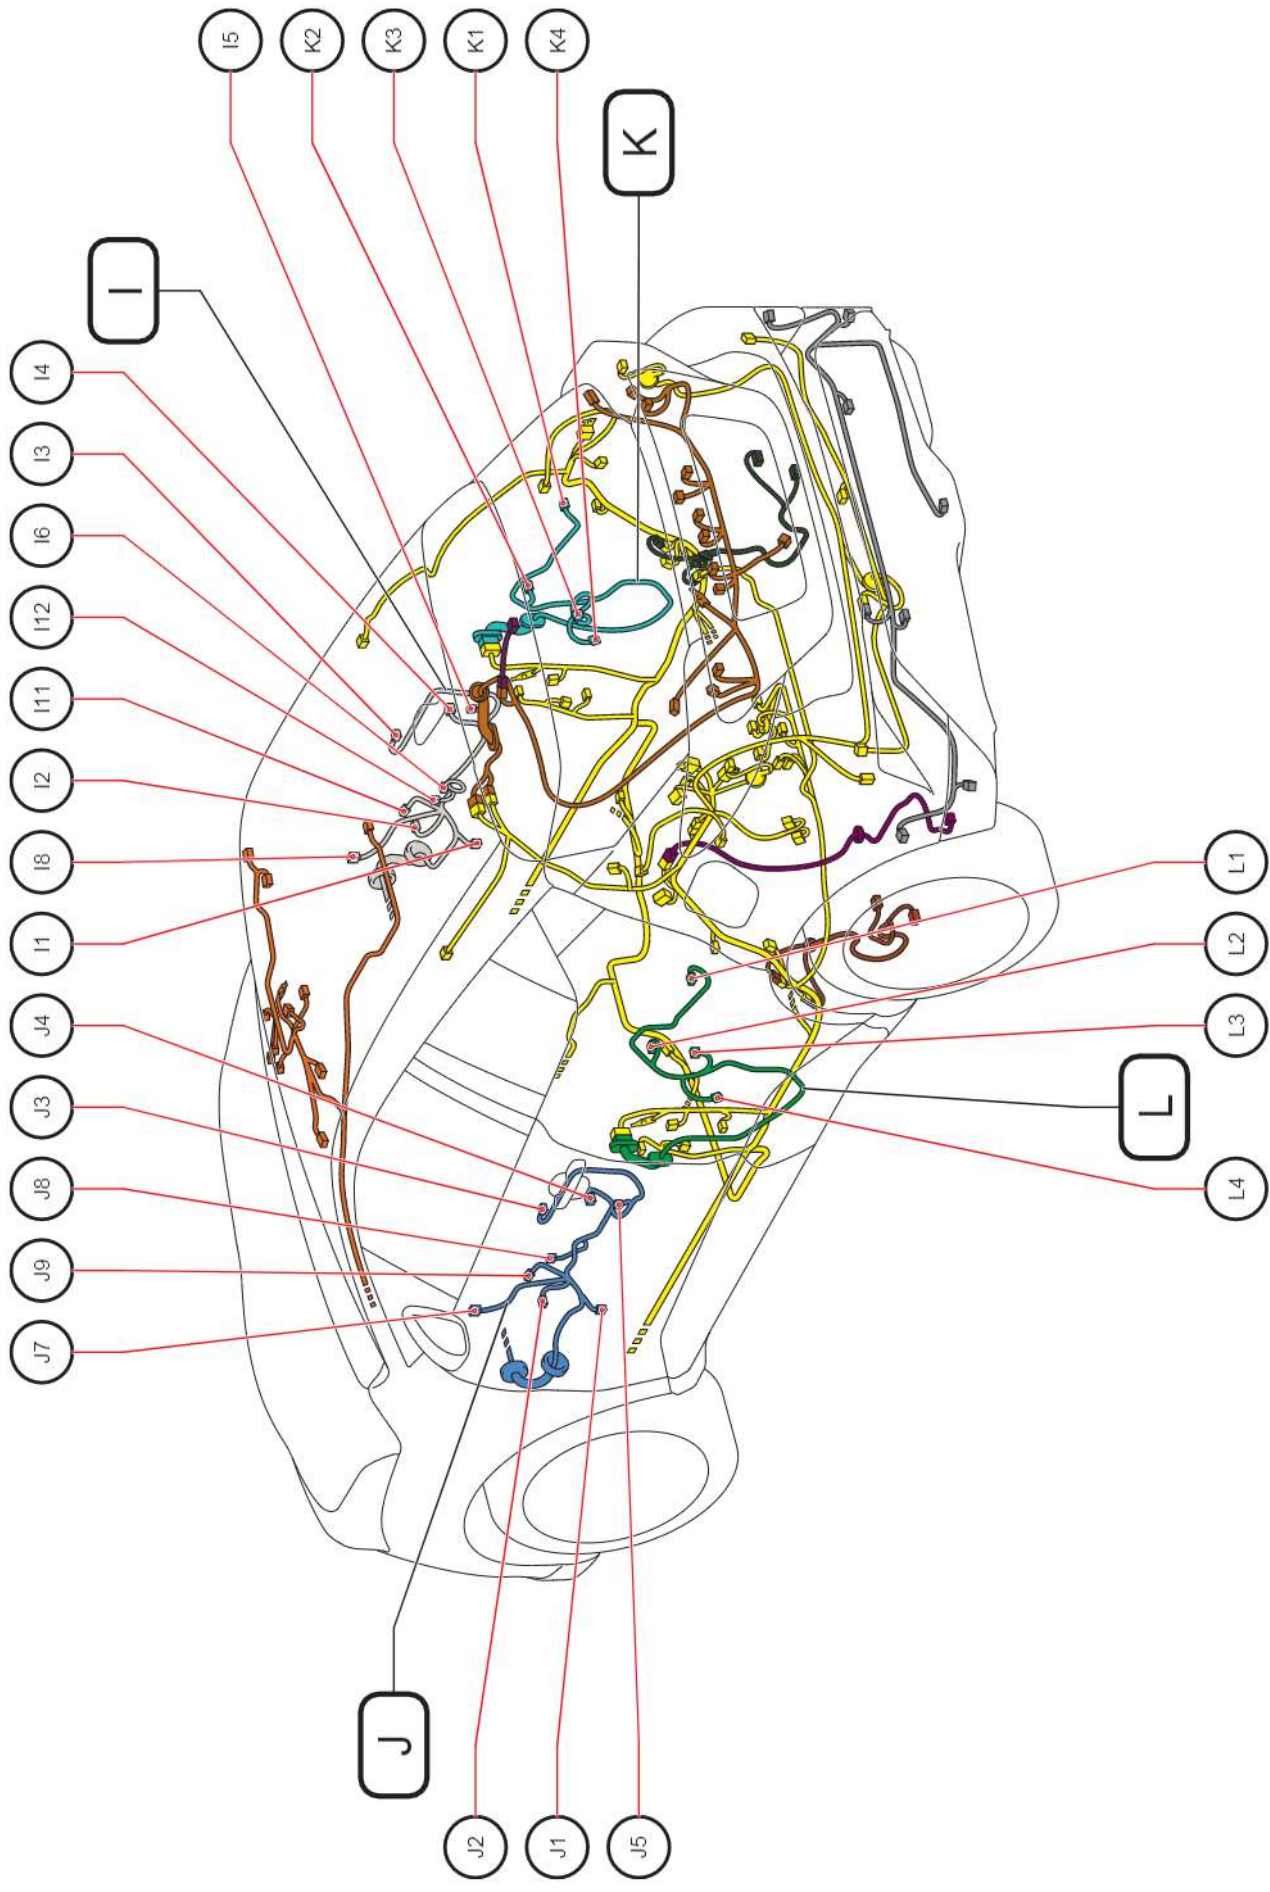



|     |                                                 |
|-----|-------------------------------------------------|
| I1  | Front No. 1 Speaker Assembly RH                 |
| I2  | Front Power Window Regulator Motor Assembly RH  |
| I3  | Front Door Outside Handle Assembly RH           |
| I4  | Front Door Lock with Motor Assembly RH          |
| I5  | Door Side Airbag Sensor RH                      |
| I6  | Multiplex Network Master Switch Assembly        |
| I8  | Outer Rear View Mirror Assembly RH              |
| I11 | No. 1 Interior Illumination Light Assembly RH   |
| I12 | Outer Mirror Switch Assembly                    |
| J1  | Front No. 1 Speaker Assembly LH                 |
| J2  | Front Power Window Regulator Motor Assembly LH  |
| J3  | Front Door Outside Handle Assembly LH           |
| J4  | Front Door Lock with Motor Assembly LH          |
| J5  | Door Side Airbag Sensor LH                      |
| J7  | Outer Rear View Mirror Assembly LH              |
| J8  | Front Power Window Regulator Switch Assembly LH |
| J9  | No. 1 Interior Illumination Light Assembly LH   |
| K1  | Rear Door Lock with Motor Assembly RH           |
| K2  | Rear Power Window Regulator Motor Assembly RH   |
| K3  | Rear Power Window Regulator Switch Assembly RH  |
| K4  | Rear Speaker Assembly RH                        |
| L1  | Rear Door Lock with Motor Assembly LH           |
| L2  | Rear Power Window Regulator Motor Assembly LH   |
| L3  | Rear Power Window Regulator Switch Assembly LH  |
| L4  | Rear Speaker Assembly LH                        |

  Position of Parts in Body (RHD)

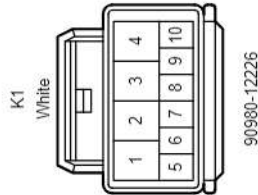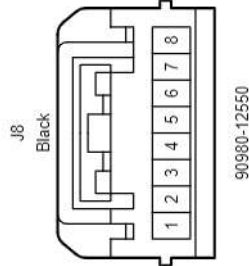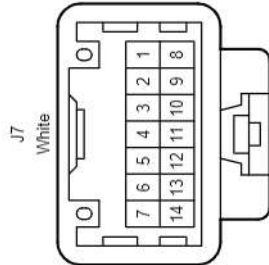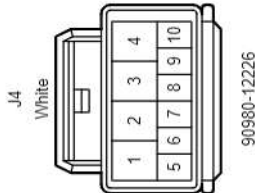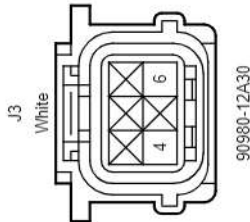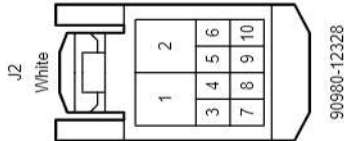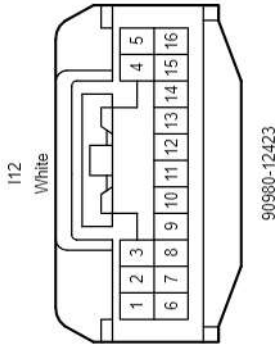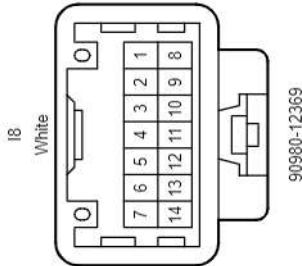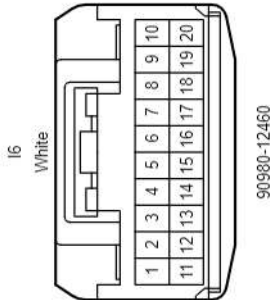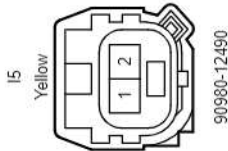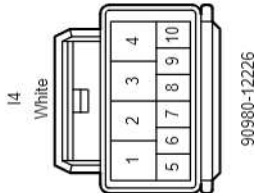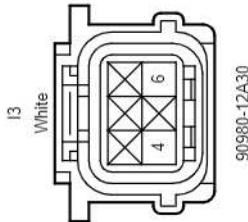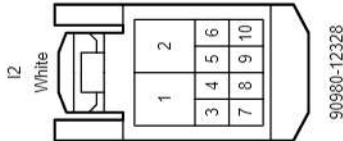

Position of Parts in Body (RHD)

 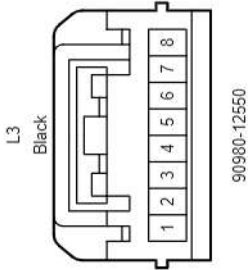

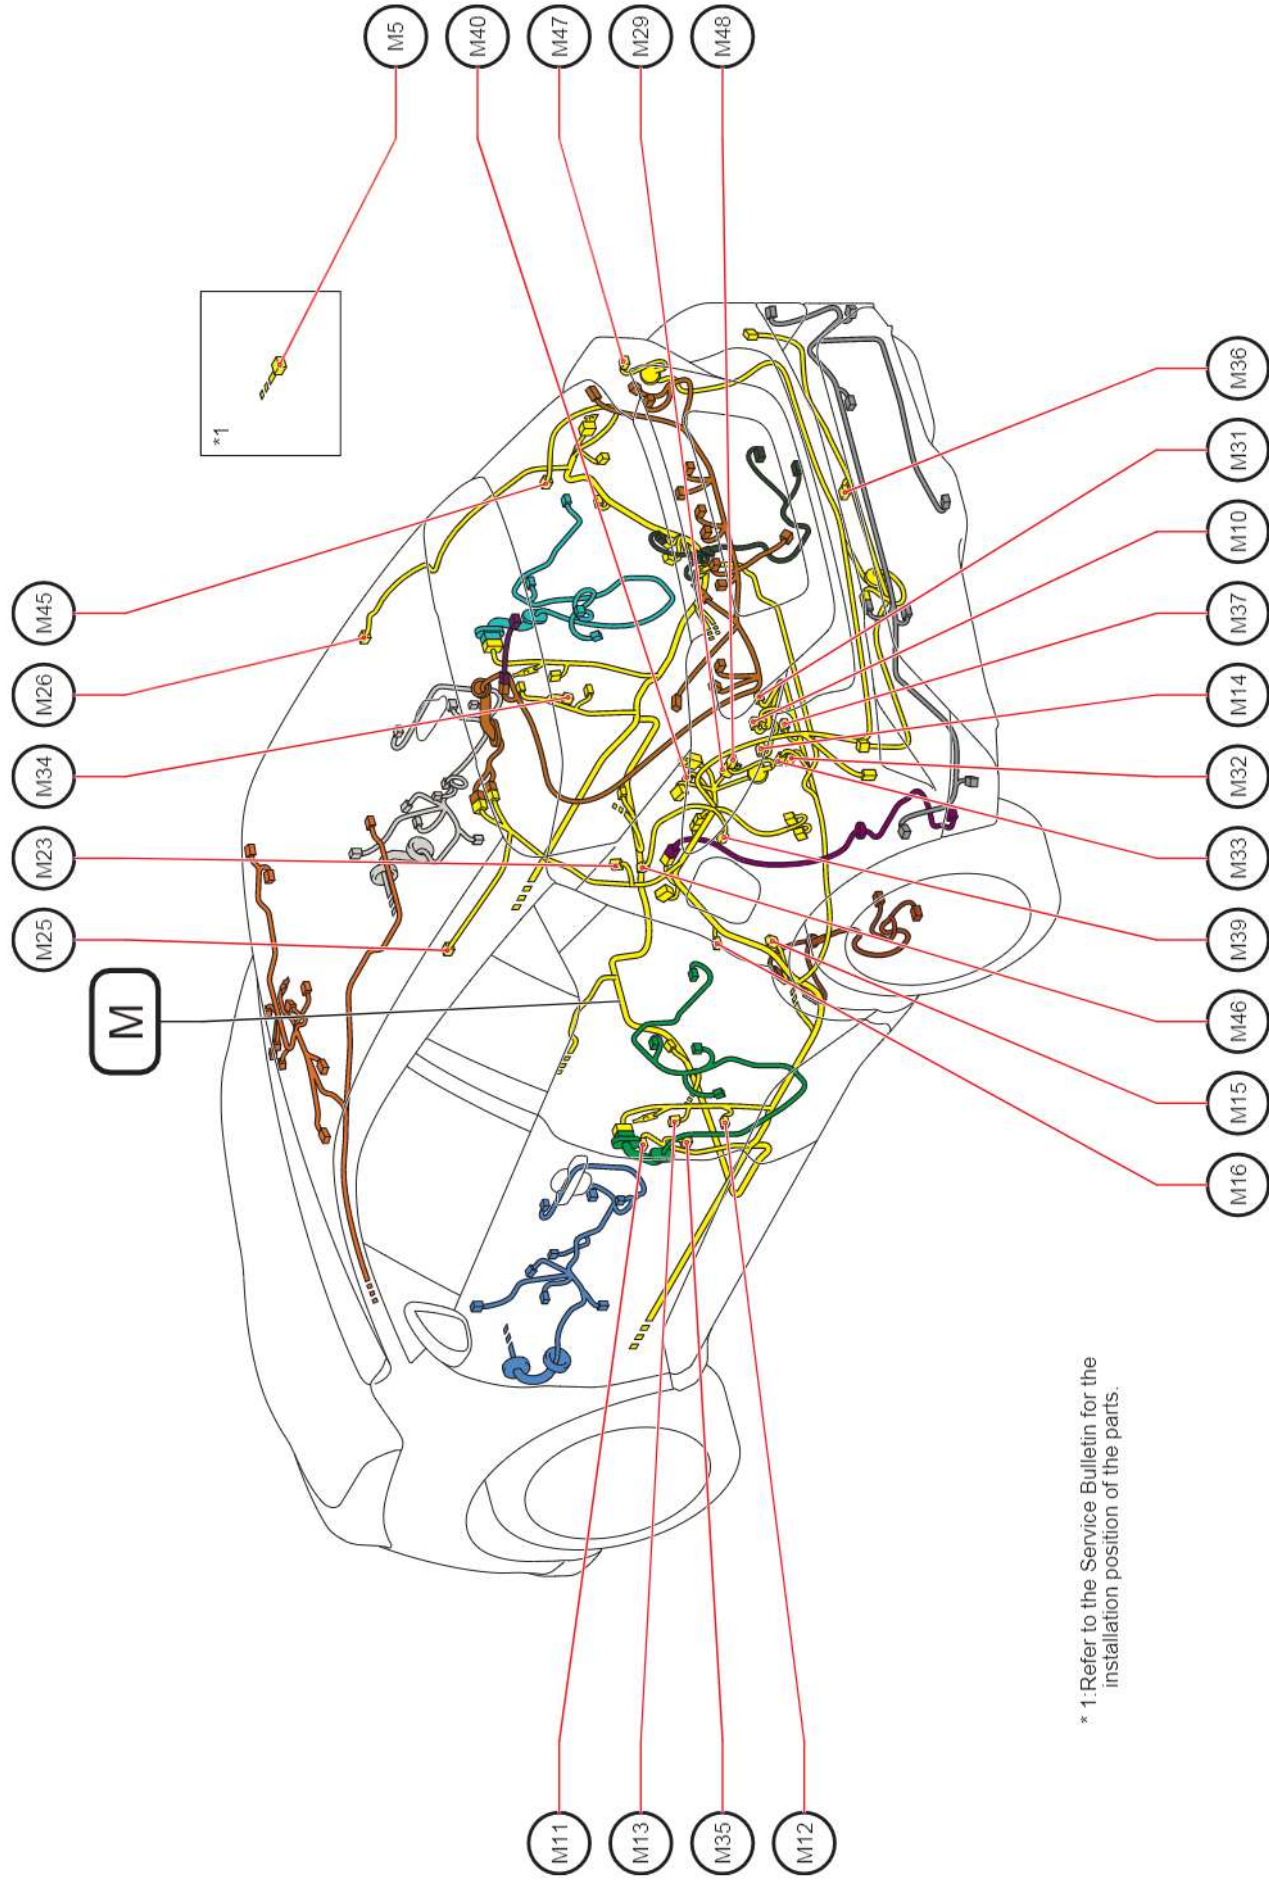

\* 1: Refer to the Service Bulletin for the installation position of the parts.


---

**Position of Parts in Body (RHD)**


---

|     |                                                                                                             |
|-----|-------------------------------------------------------------------------------------------------------------|
| M5  | Theft Warning Siren Assembly                                                                                |
| M10 | No. 2 Indoor Electrical Key Antenna Assembly                                                                |
| M11 | Front Door Courtesy Light Switch Assembly LH                                                                |
| M12 | Front Seat Outer Belt Assembly LH                                                                           |
| M13 | No. 1 Side Airbag Sensor LH                                                                                 |
| M14 | Fuel Pump (Fuel Suction Tube with Pump & Gage Assembly)                                                     |
| M15 | No. 2 Side Airbag Sensor LH                                                                                 |
| M16 | Rear Door Courtesy Light Switch Assembly LH                                                                 |
| M23 | Tire Pressure Warning ECU and Receiver (Electrical Key & Tire Pressure Monitoring System Receiver Assembly) |
| M25 | Curtain Shield Airbag Assembly LH                                                                           |
| M26 | Curtain Shield Airbag Assembly RH                                                                           |
| M29 | Condenser (Center Stop Light Assembly)                                                                      |
| M31 | Rear Seat Inner Belt Assembly RH                                                                            |
| M32 | Rear Seat Inner Belt with Center Assembly LH                                                                |
| M33 | Rear Seat Inner Belt with Center Assembly LH                                                                |
| M34 | Floor Side Airbag Sensor RH                                                                                 |
| M35 | Floor Side Airbag Sensor LH                                                                                 |
| M36 | Electrical Key Antenna                                                                                      |
| M37 | No. 3 Indoor Electrical Key Antenna Assembly                                                                |
| M39 | Fuel Lid Lock with Motor Assembly                                                                           |
| M40 | No. 1 Luggage Compartment Light Assembly                                                                    |
| M45 | Rear Seat 3 Point Type Outer Belt Assembly RH                                                               |
| M46 | Rear Seat 3 Point Type Belt Assembly Outer LH                                                               |
| M47 | Rear Combination Light Assembly RH                                                                          |
| M48 | Rear Combination Light Assembly LH                                                                          |


# Position of Parts in Body (RHD)

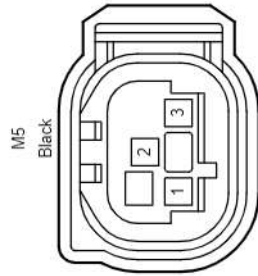


90080-98237

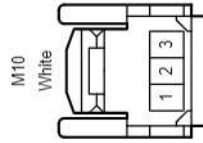


90980-12795

 


90980-10871

 


90980-12452

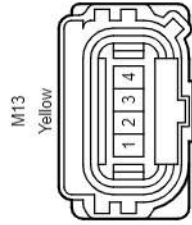


90980-12699

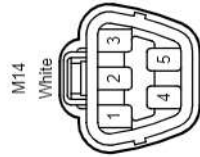


90980-11077

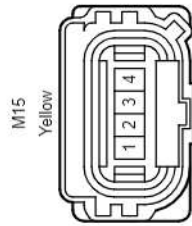


90980-12699

 


90980-10871

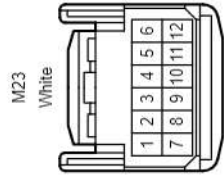



90980-12552

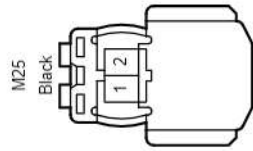


90980-12575

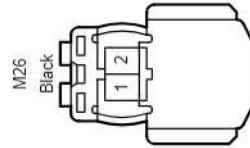


90980-12575

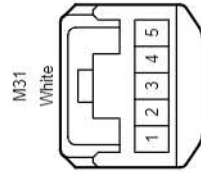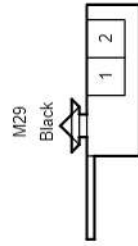


90980-12366

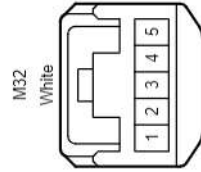


90980-12366

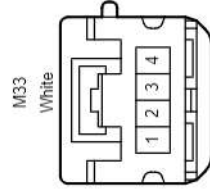


90980-12733

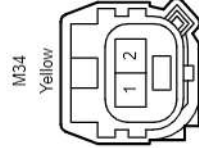


90980-12490

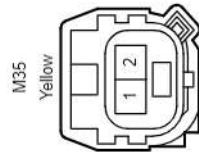


90980-12490

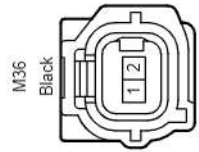


90980-12416

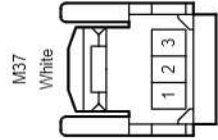





90980-12795

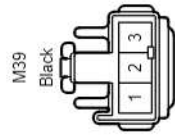


90980-10908

 

90980-11148

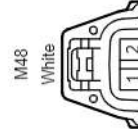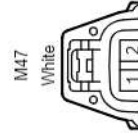  

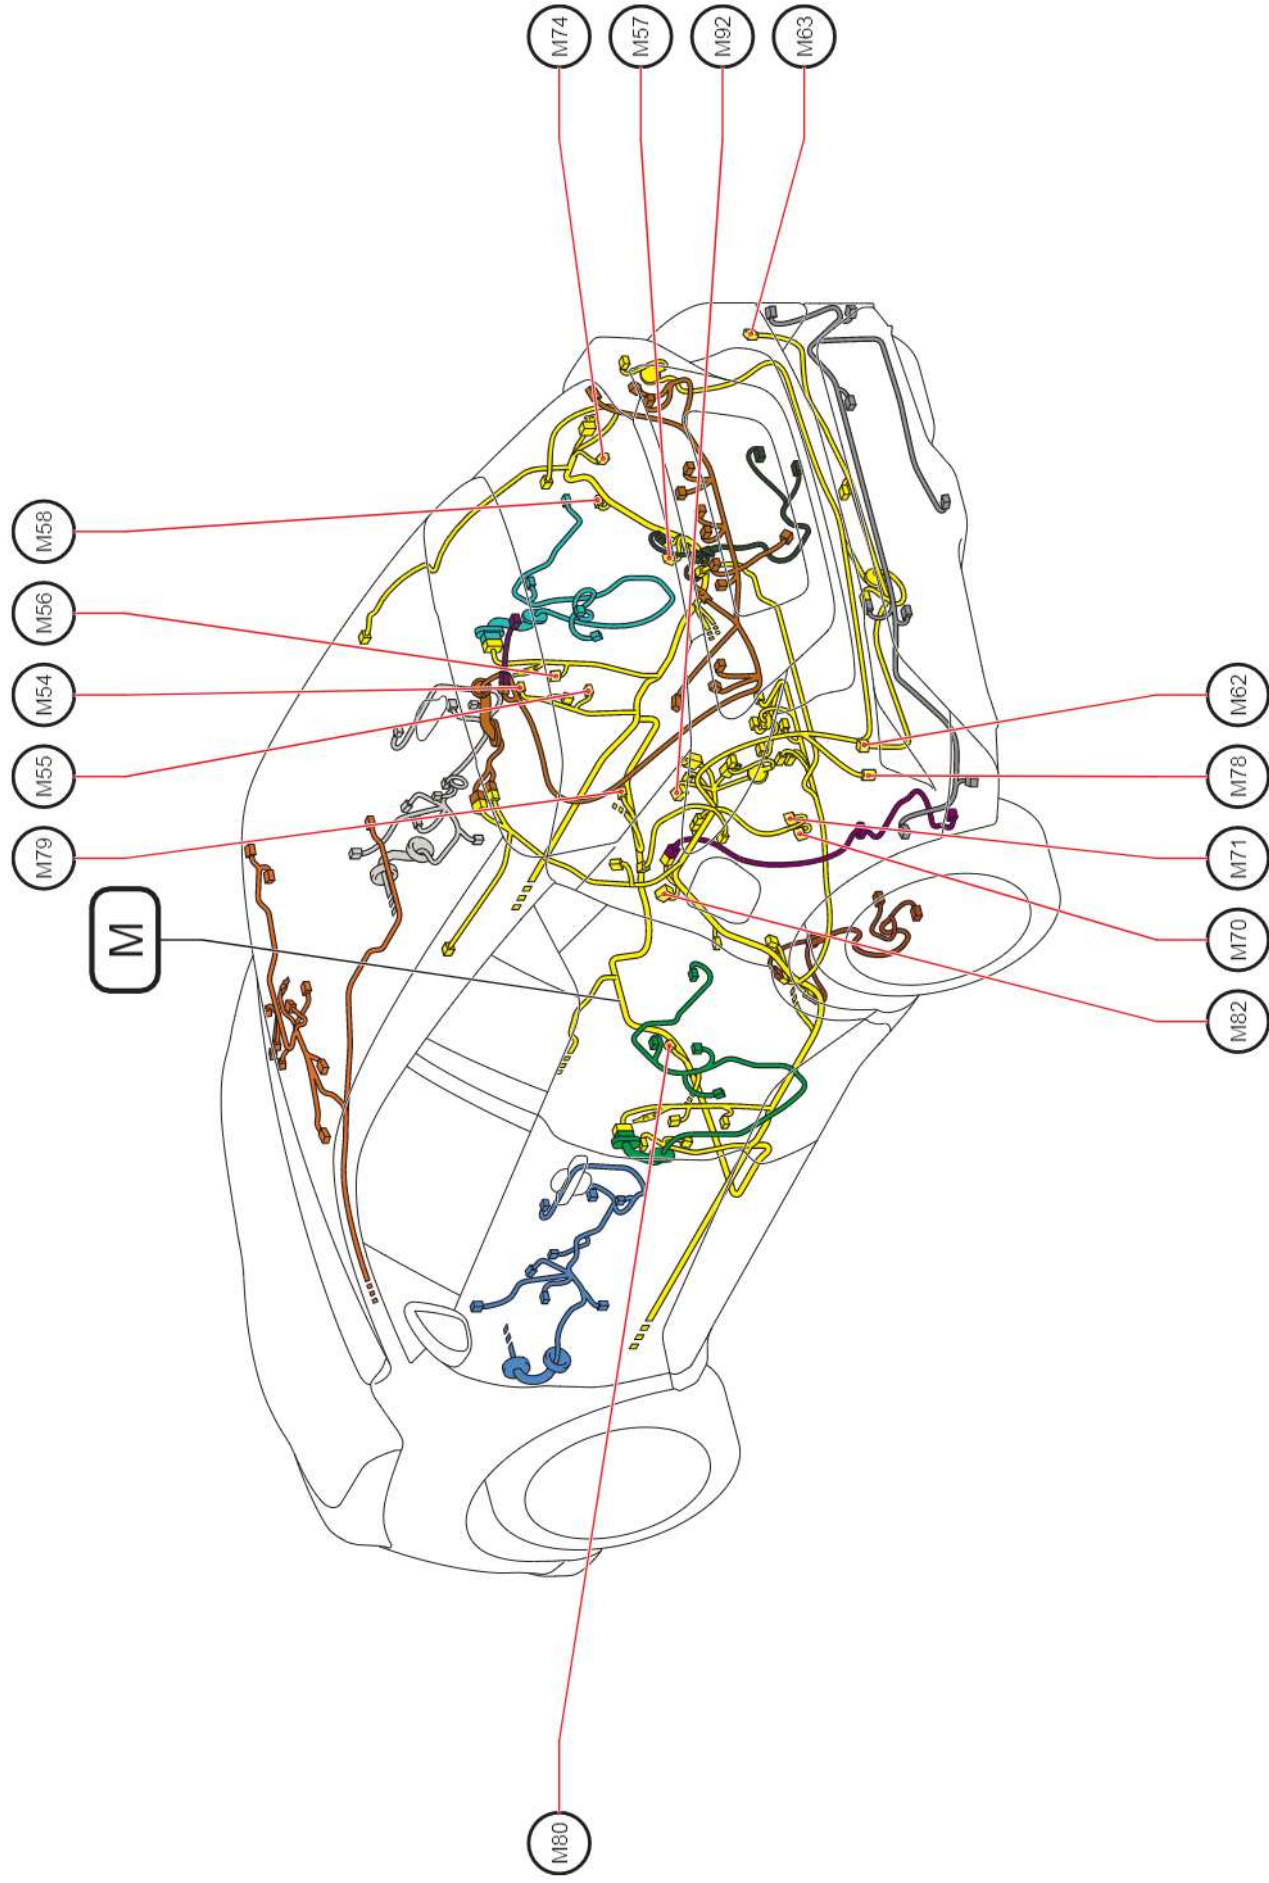

Position of Parts in Body (RHD)

---

|     |                                              |
|-----|----------------------------------------------|
| M54 | Front Door Courtesy Light Switch Assembly RH |
| M55 | Front Seat Outer Belt Assembly RH            |
| M56 | No. 1 Side Airbag Sensor RH                  |
| M57 | No. 2 Side Airbag Sensor RH                  |
| M58 | Rear Door Courtesy Light Switch Assembly RH  |
| M62 | Blind Spot Monitor Sensor LH                 |
| M63 | Blind Spot Monitor Sensor RH                 |
| M70 | Parking Brake ECU Assembly                   |
| M71 | Parking Brake ECU Assembly                   |
| M74 | No. 1 Speaker with Box Assembly              |
| M78 | Option Connector (Trailer Towing)            |
| M79 | Option Connector                             |
| M80 | Option Connector                             |
| M82 | No. 26 Junction Connector                    |
| M92 | No. 6 CAN Junction Connector                 |

 
Position of Parts in Body (RHD)

M54  
Black




90980-10871

M55  
Yellow




90980-12452

M56  
Yellow

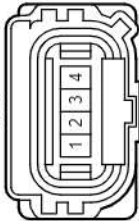

90980-12699

M57  
Yellow

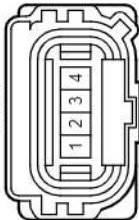

90980-12699

M58  
Black



90980-10871

M62  
Black




90980-12380

M63  
Black




90980-12380

M70  
Gray

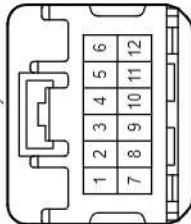


90980-12737

M71  
White

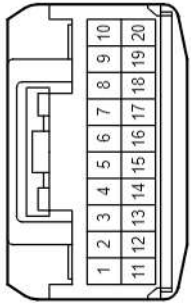

90980-12460

M74  
White

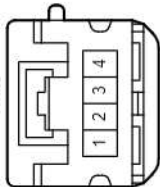

90980-12733

M78  
White



90980-11060

M79  
Gray




90980-11349

M80  
Gray




90980-11349

M82  
Black

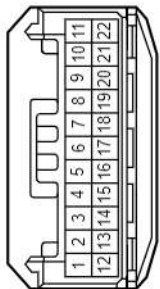



90980-12B54

M92  
Black

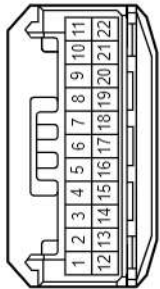

90980-12B54

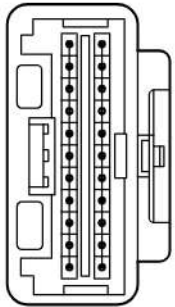

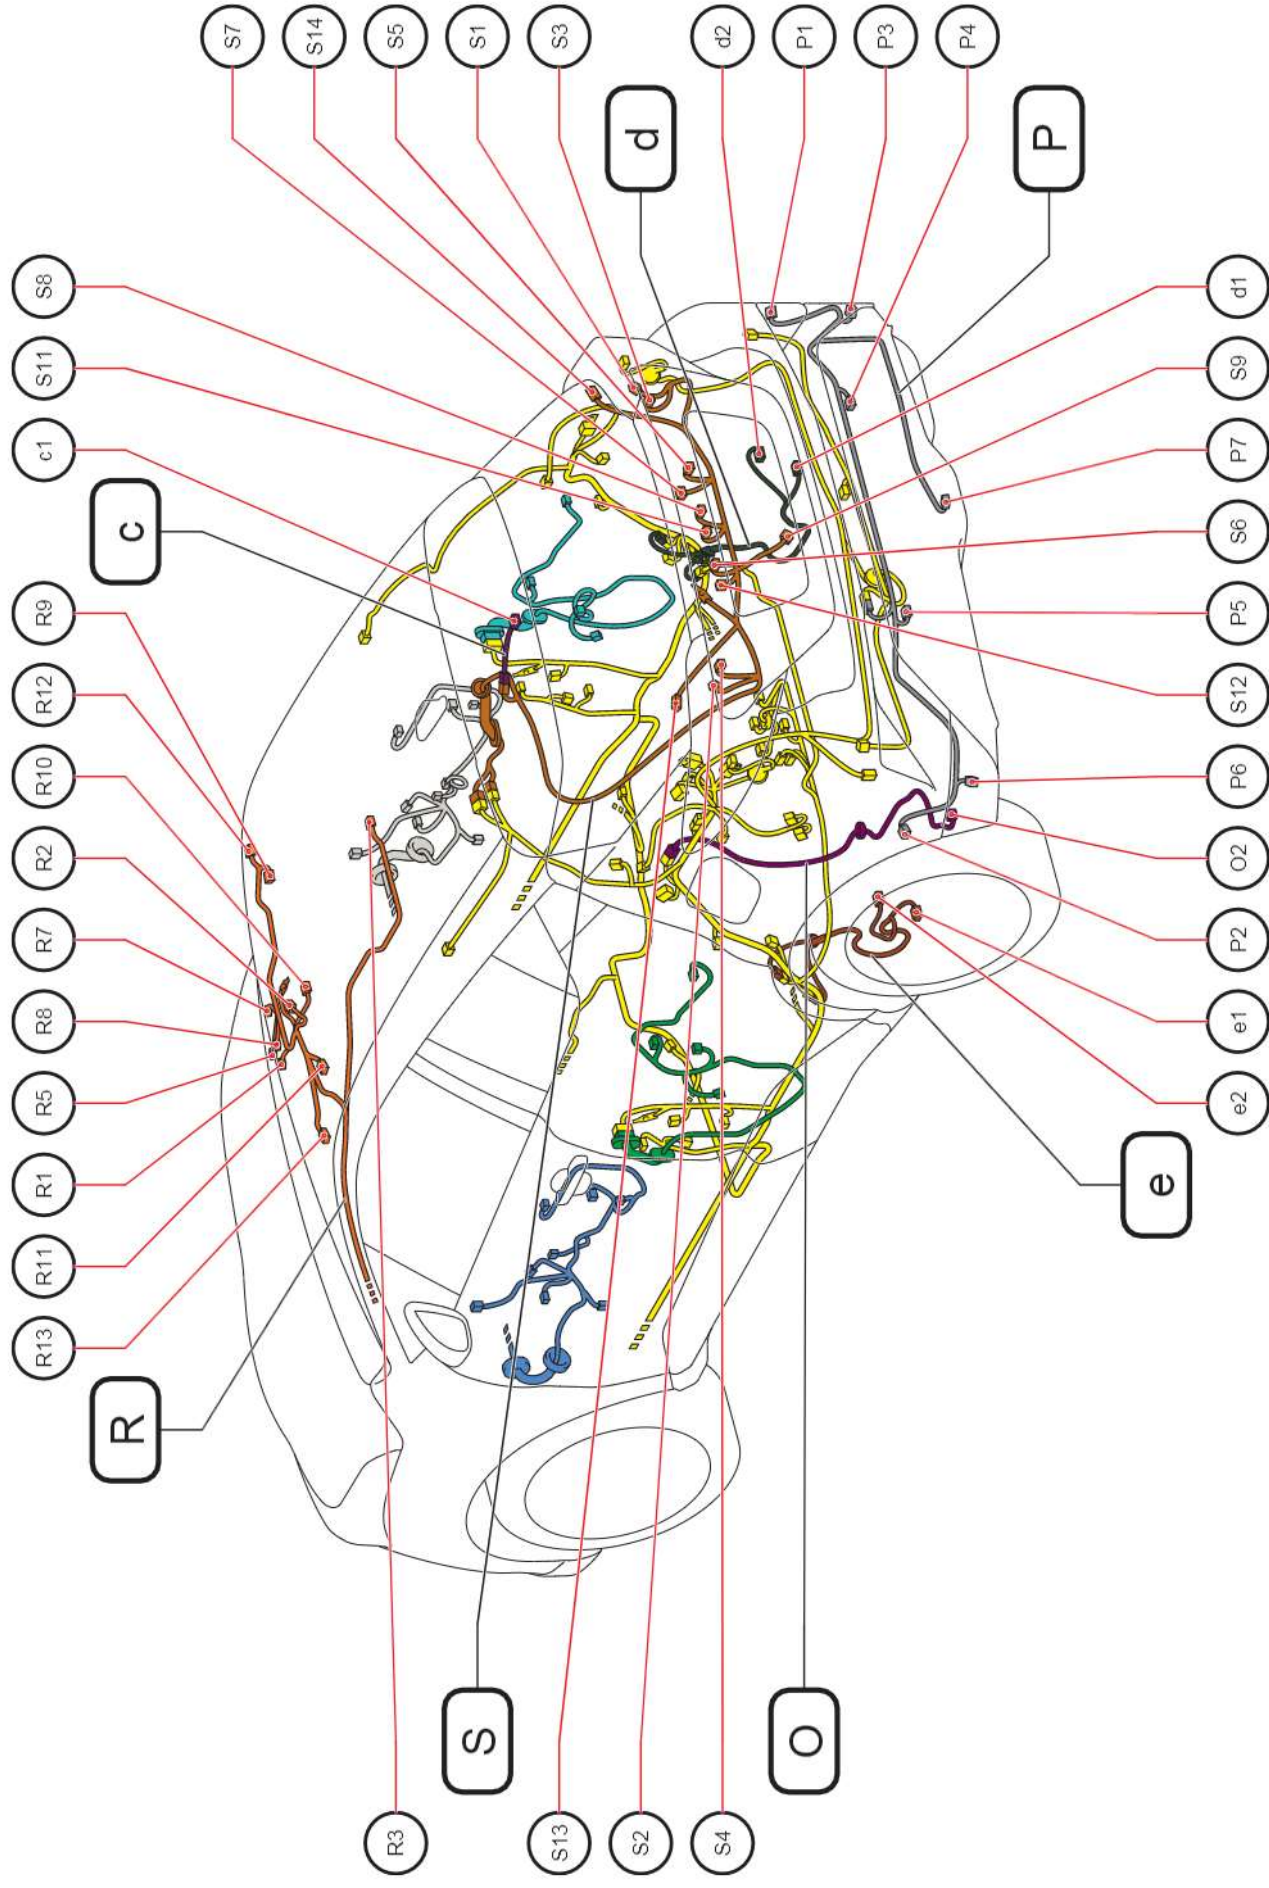

O2 Rear Height Control Sensor Sub-Assembly LH

P1 Rear Ultrasonic Sensor Side RH  
P2 Rear Ultrasonic Sensor Side LH  
P3 Rear Ultrasonic Sensor Corner RH  
P4 Rear Ultrasonic Sensor Center RH  
P5 Rear Ultrasonic Sensor Center LH  
P6 Rear Ultrasonic Sensor Corner LH  
P7 Rear Fog Light Assembly

R1 Rain Sensor  
R2 Map Light Assembly  
R3 No. 1 Room Light Assembly  
R5 Forward Recognition Camera  
R7 Inner Rear View Mirror Assembly  
R8 Forward Recognition Hood  
R9 Vanity Light Assembly RH  
R10 Theft Warning Ultrasonic Sensor  
R11 Vanity Light Assembly LH  
R12 Visor Assembly RH  
R13 Visor Assembly LH


















S1 Rear Light Assembly RH  
S2 Rear Light Assembly LH  
S3 Rear Light Assembly RH  
S4 Rear Light Assembly LH  
S5 License Plate Light Assembly RH  
S6 License Plate Light Assembly LH  
S7 Rear Wiper Motor Assembly  
S8 Back Door Opener Switch Assembly  
S9 Back Door Lock Assembly  
S11 Rear Television Camera Assembly  
S12 Glass Breakage Sensor (Back Door Glass)  
S13 Rear Window Defogger (Back Door Glass)  
S14 Rear Window Defogger (Back Door Glass)

c1 Center Stop Light Assembly

d1 Rear Speed Sensor RH  
d2 Parking Brake Actuator Assembly RH

e1 Rear Speed Sensor LH  
e2 Parking Brake Actuator Assembly LH

# Position of Parts in Body (RHD)

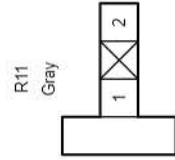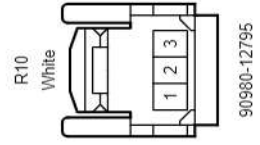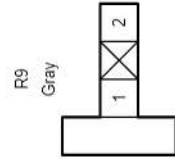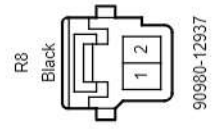
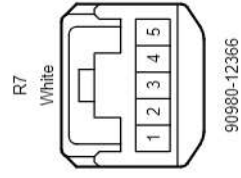
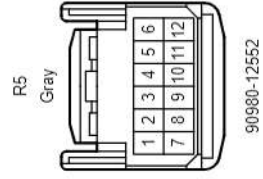
 
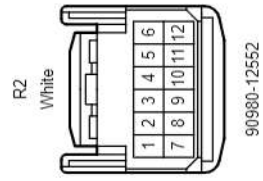
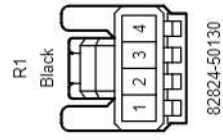
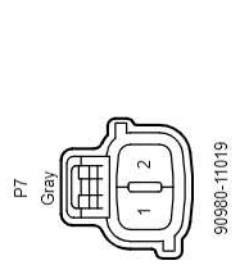
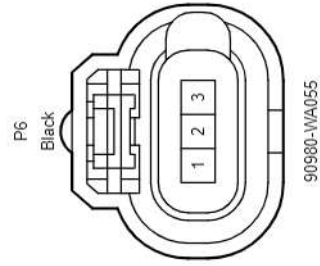
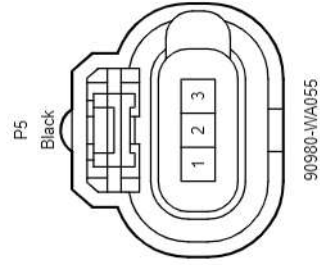
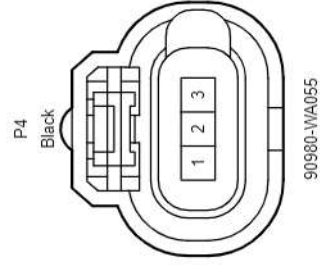
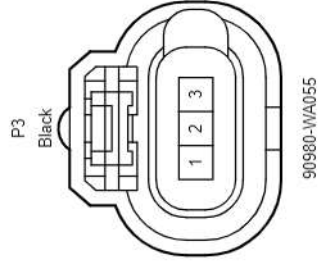
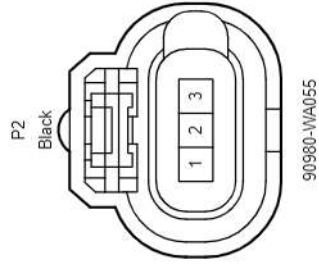
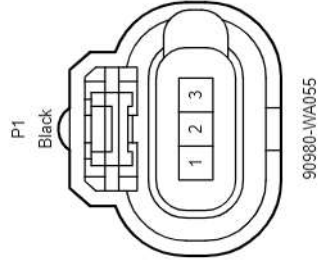
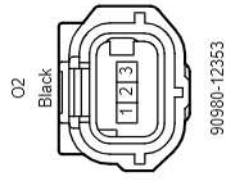



R12  
White

R13  
White

S1  
Gray












# Position of Parts in Body (RHD)

  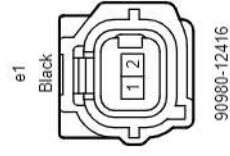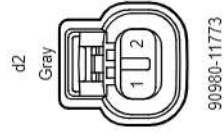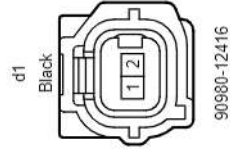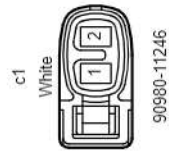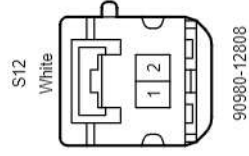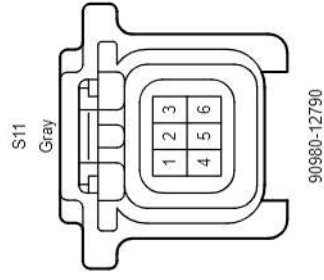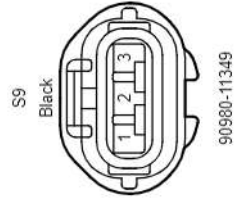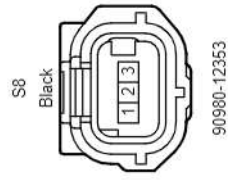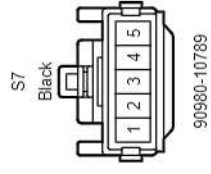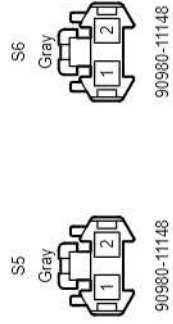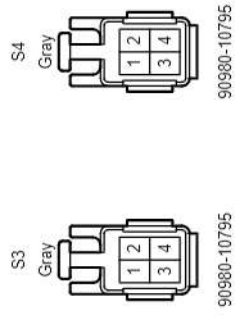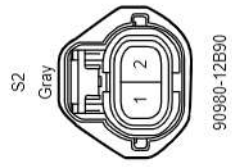


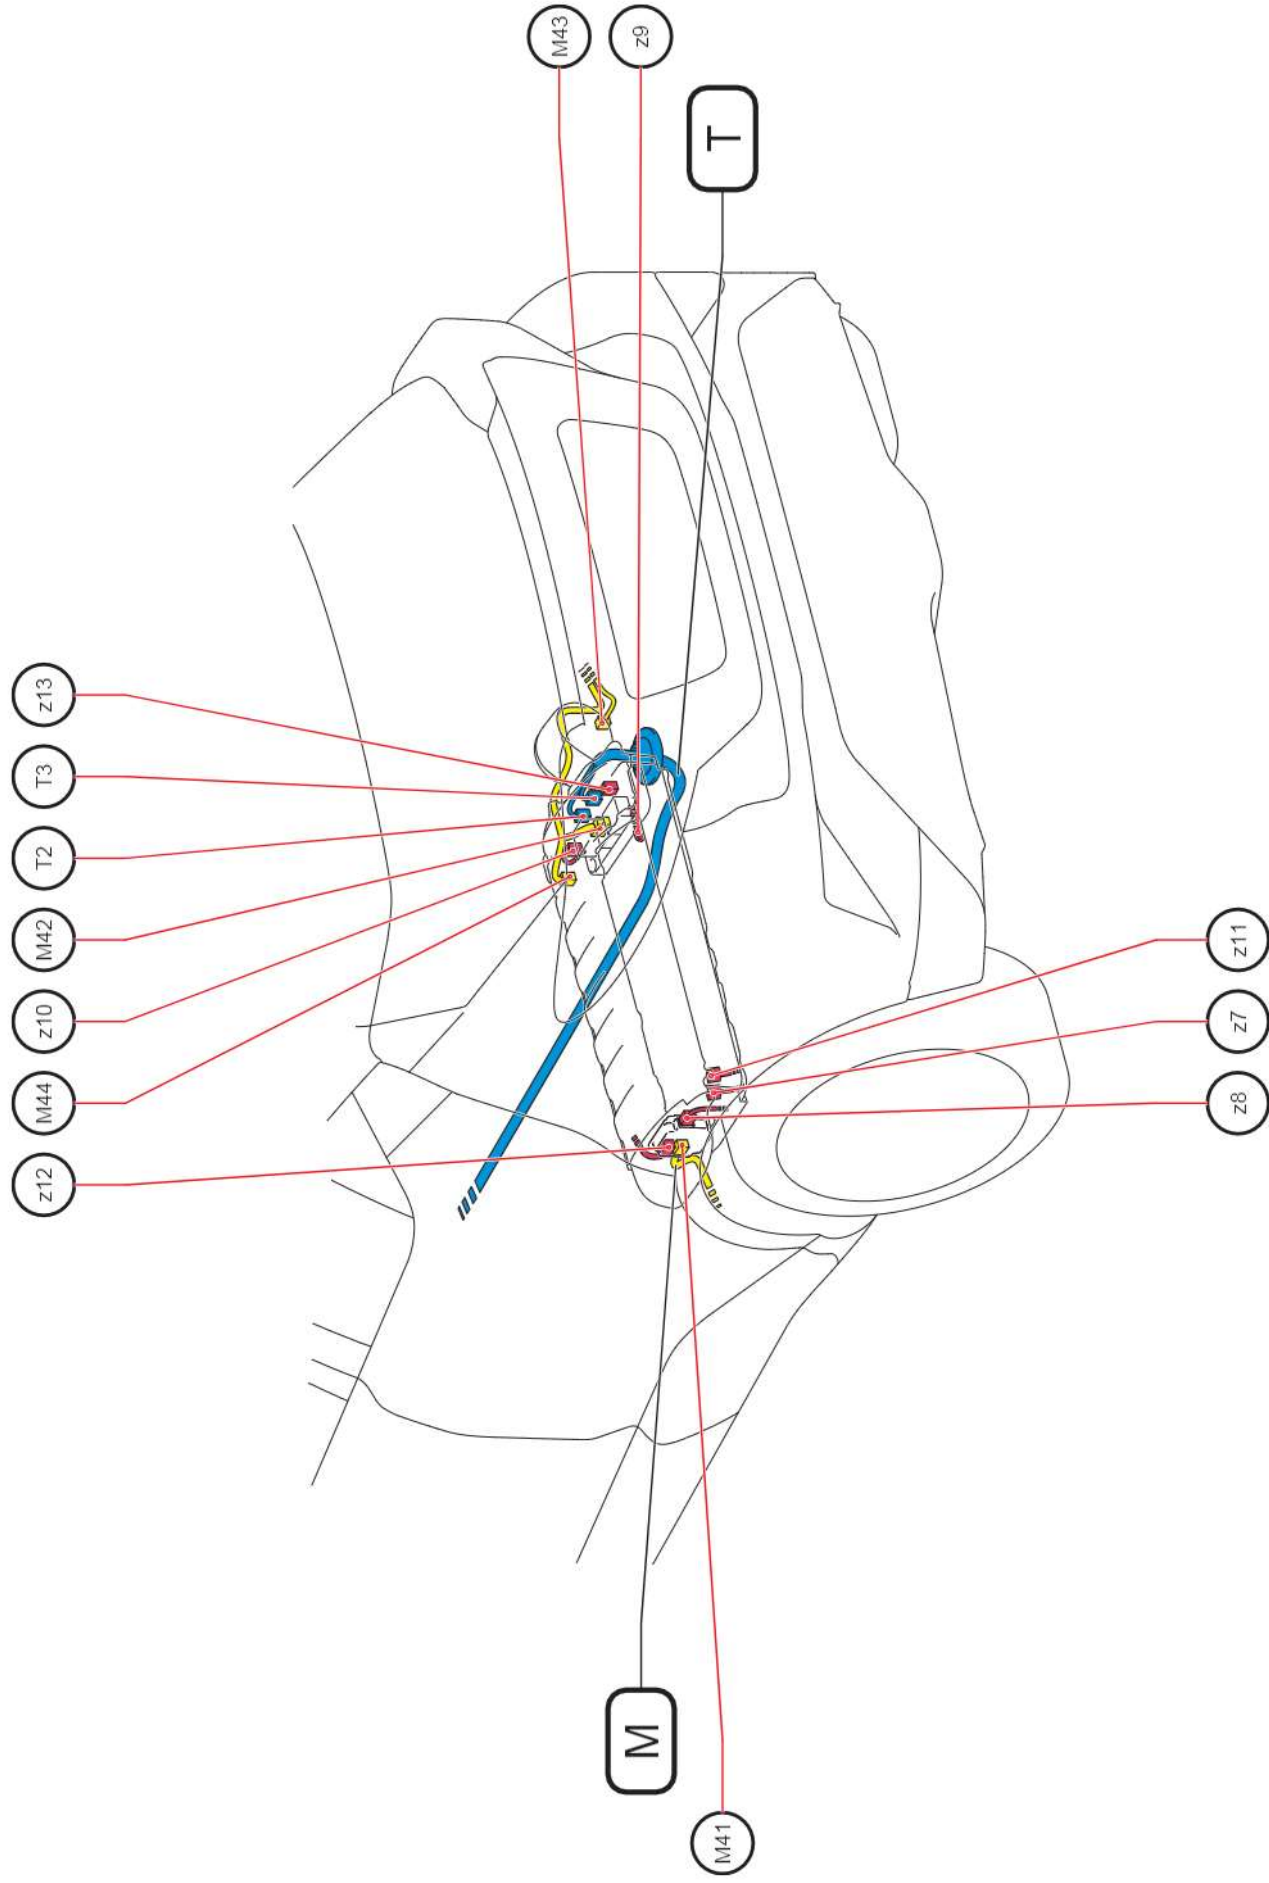

|     |                                                                 |
|-----|-----------------------------------------------------------------|
| M41 | Battery Voltage Sensor                                          |
| M42 | HV Battery Junction Block Assembly                              |
| M43 | Battery Cooling Blower Assembly                                 |
| M44 | Inter Lock Switch                                               |
| T2  | HV Battery Junction Block Assembly                              |
| T3  | HV Battery Junction Block Assembly                              |
| z7  | Hybrid Battery Terminal Block , HV Supply Battery Assembly      |
| z8  | HV Supply Battery Assembly , Battery Voltage Sensor             |
| z9  | HV Supply Battery Assembly                                      |
| z10 | HV Battery Junction Block Assembly                              |
| z11 | Hybrid Battery Terminal Block , HV Supply Battery Assembly      |
| z12 | HV Supply Battery Assembly , Battery Voltage Sensor             |
| z13 | HV Battery Junction Block Assembly , HV Supply Battery Assembly |

  
Position of Parts in Body (RHD)

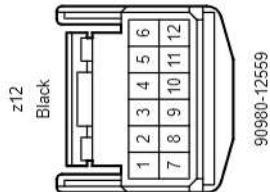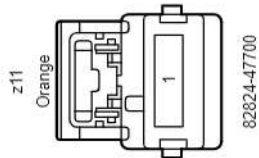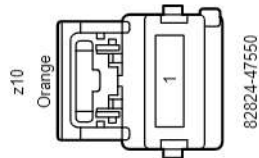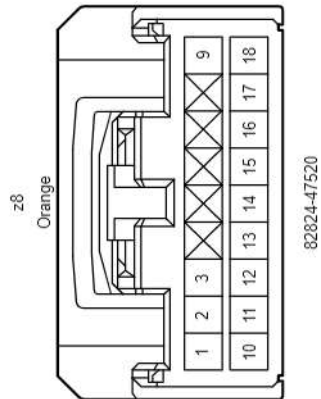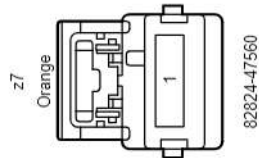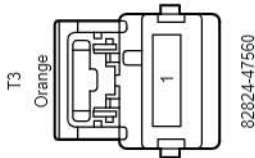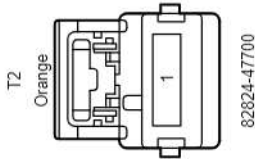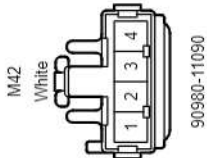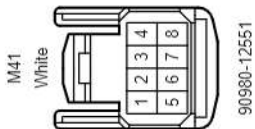

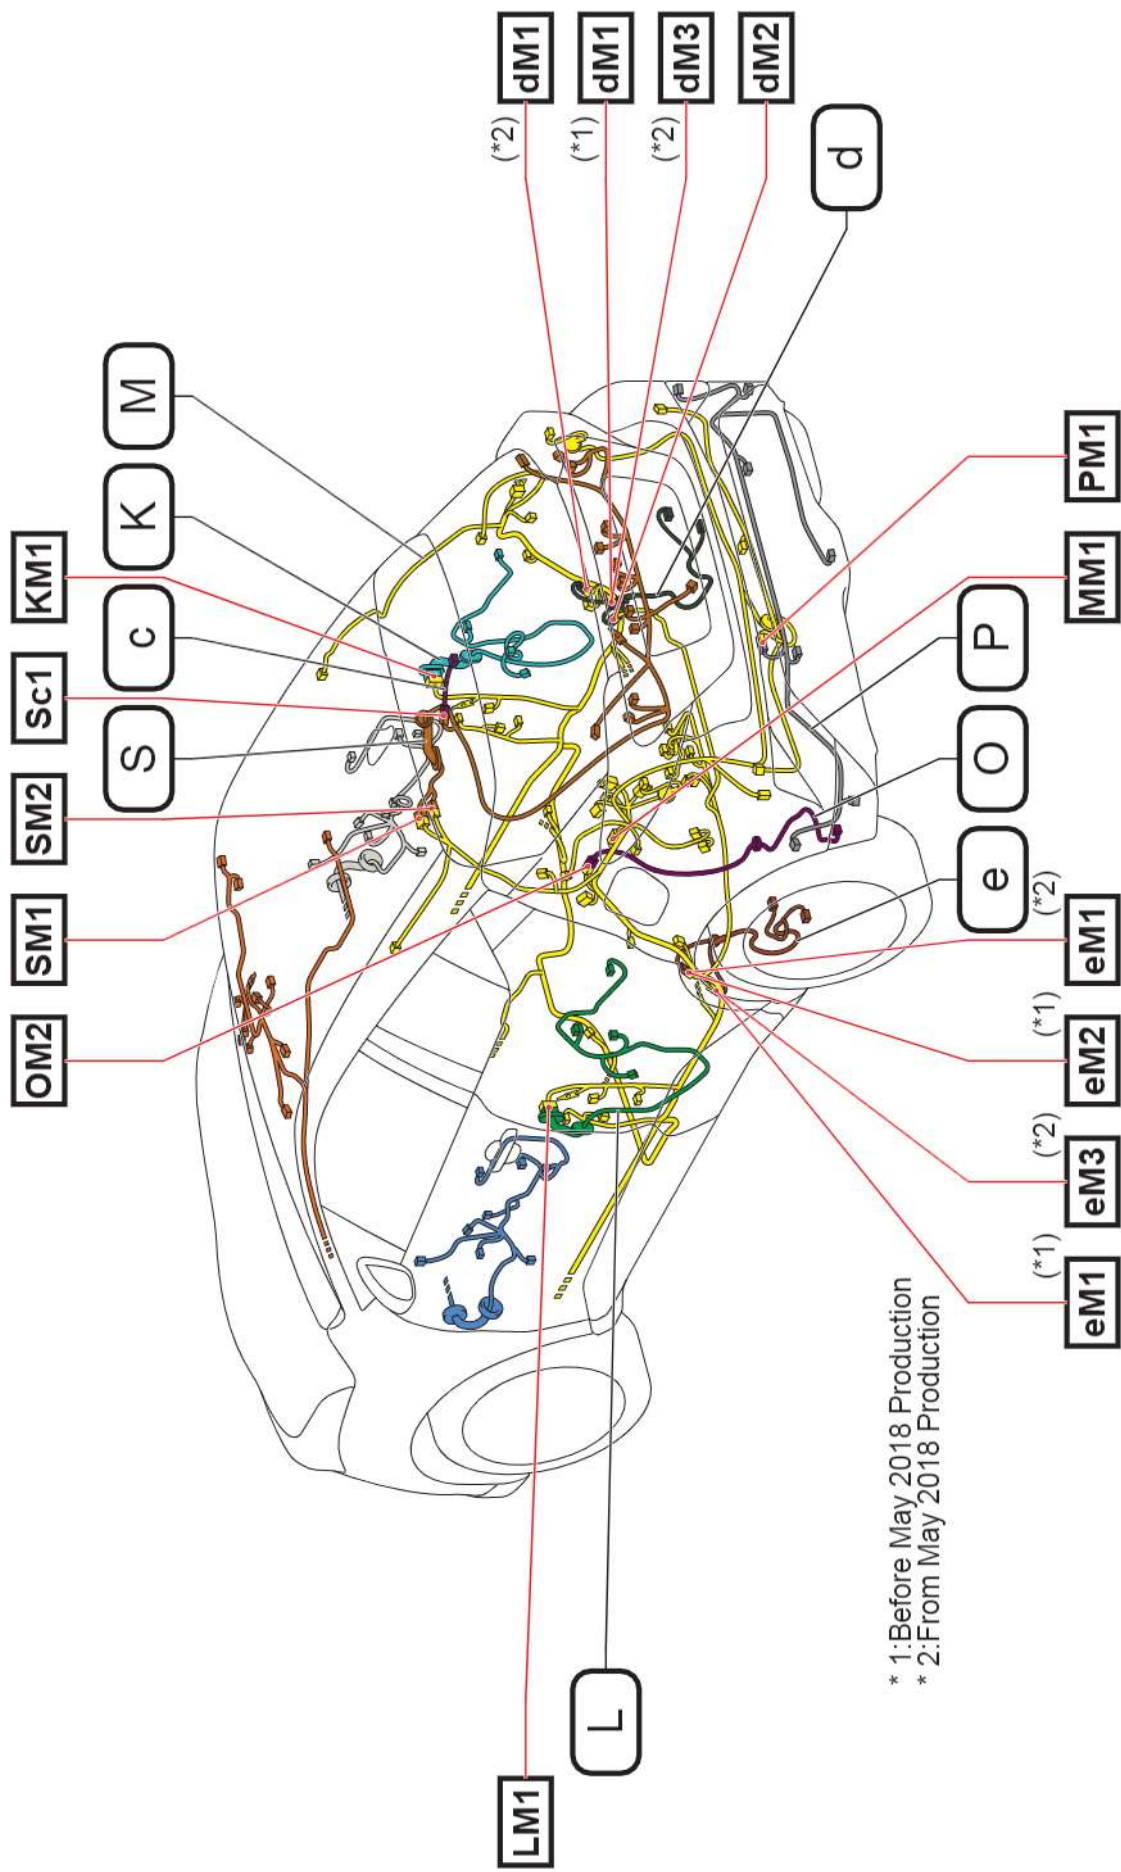


Wire and Wire in Body (RHD)

KM1  
White

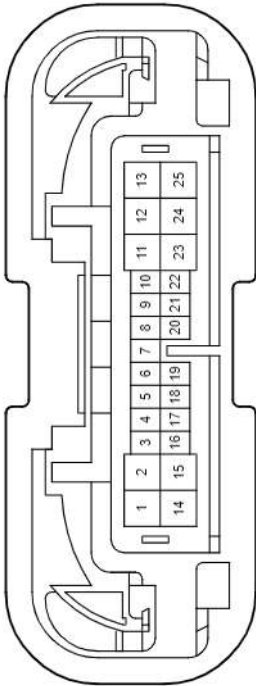


90980-12802

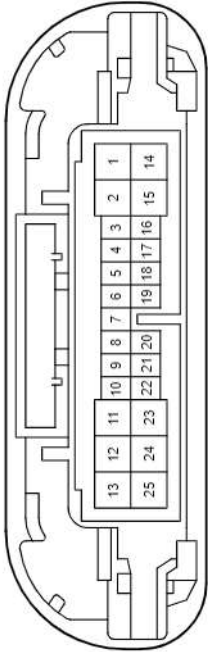


90980-12801

LM1  
White

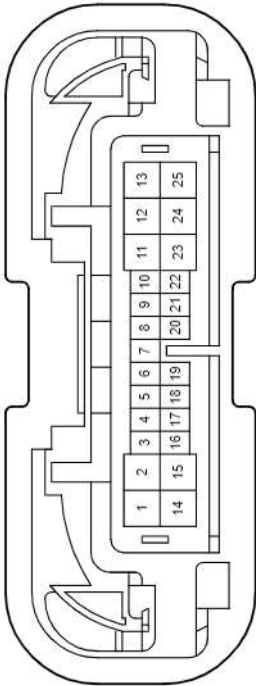


90980-12802

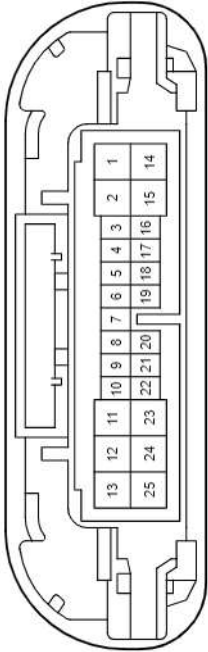


90980-12801

MM1  
White

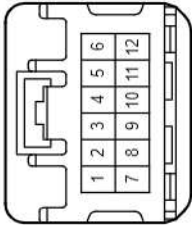


90980-12737

OM2  
White

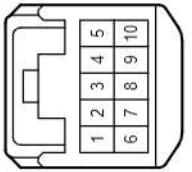

90980-12368

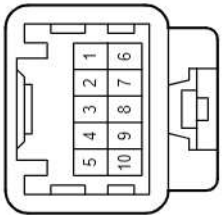

90980-12367


PM1  
White




SM1  
White




## Wire and Wire in Body (RHD)

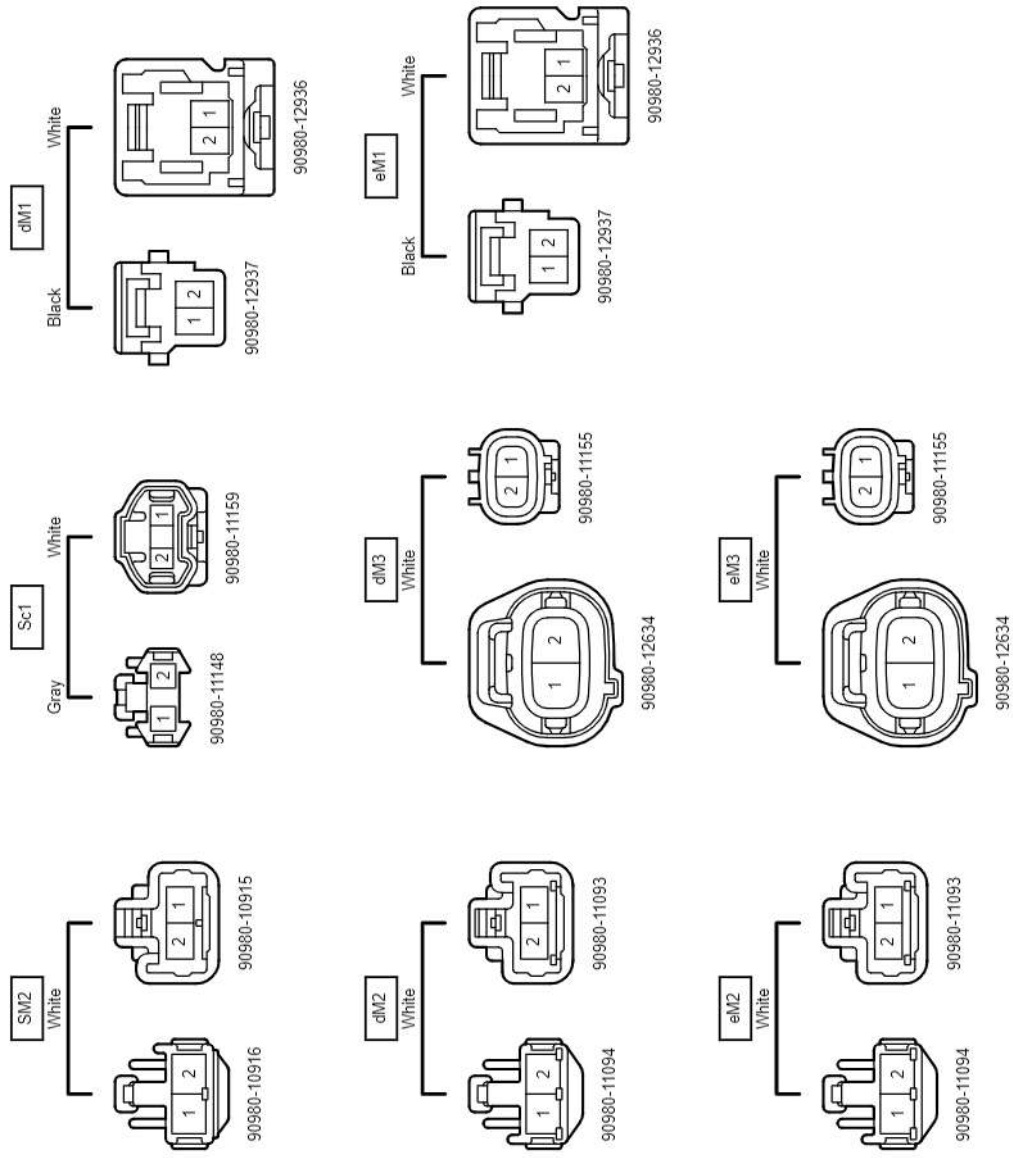

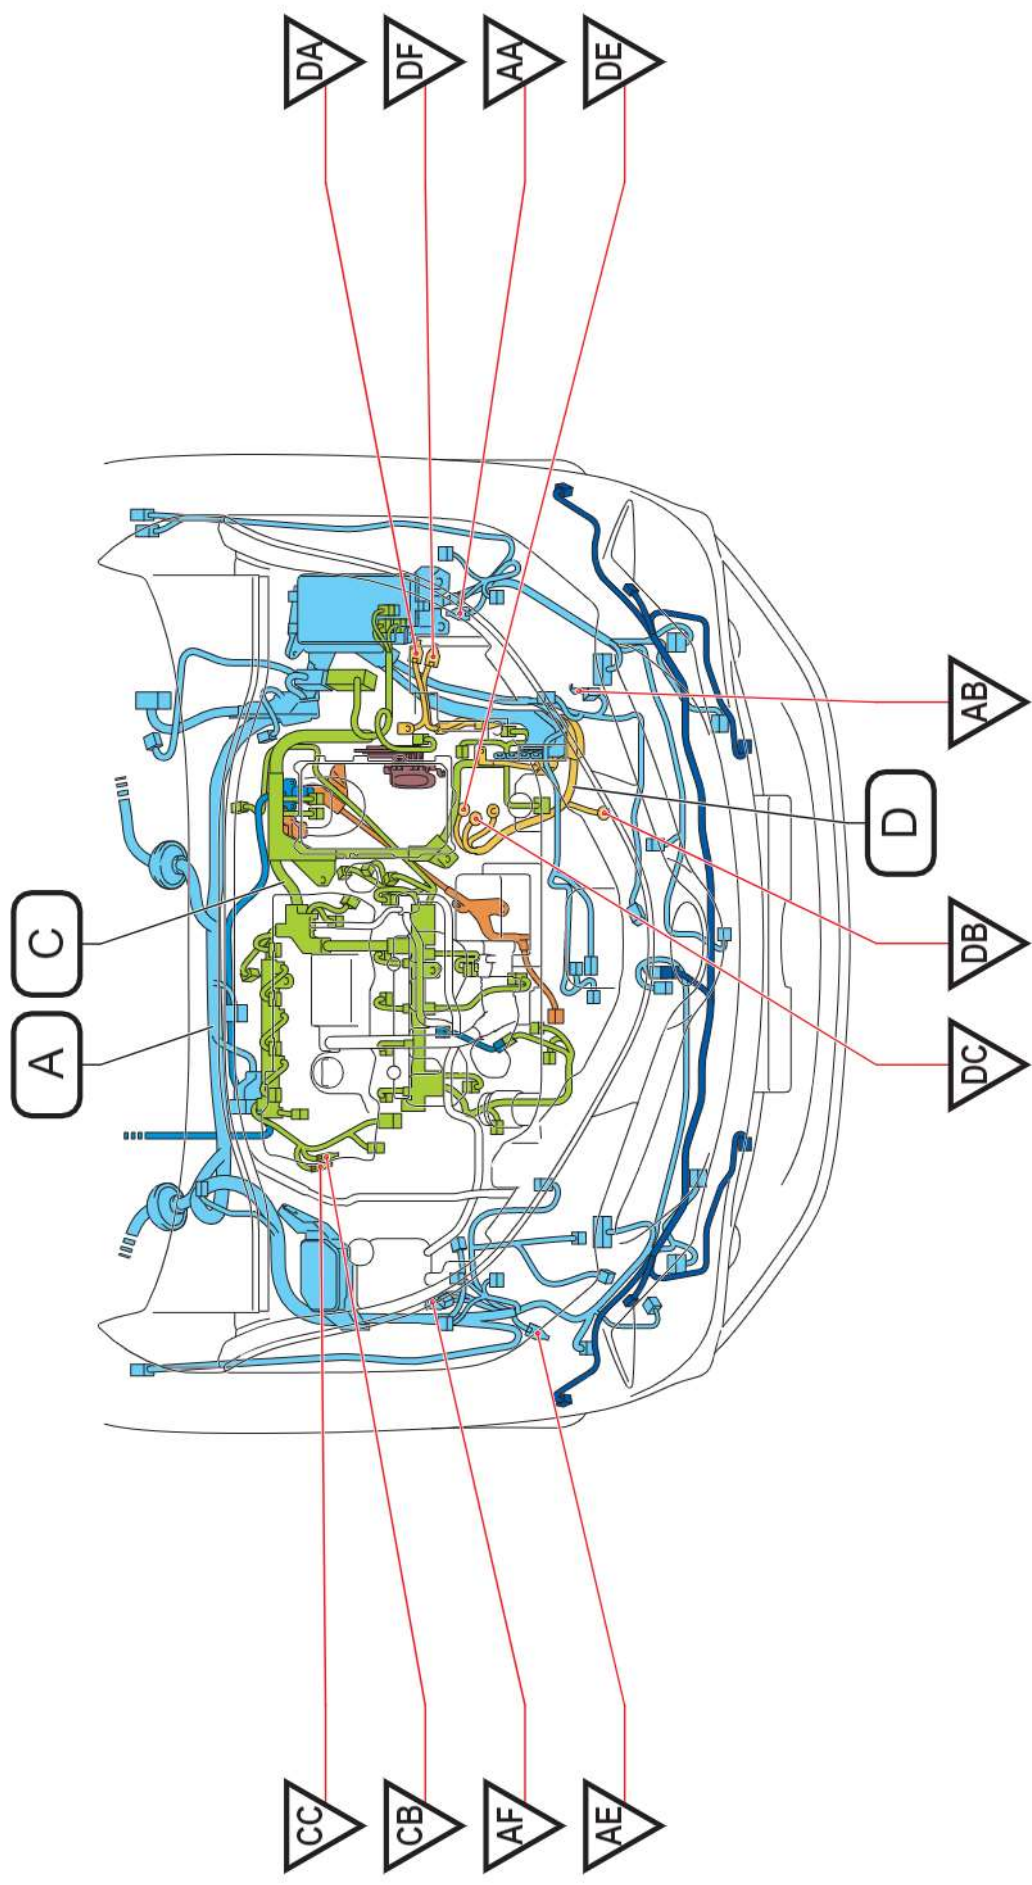













Position of Parts in Engine Compartment (LHD)

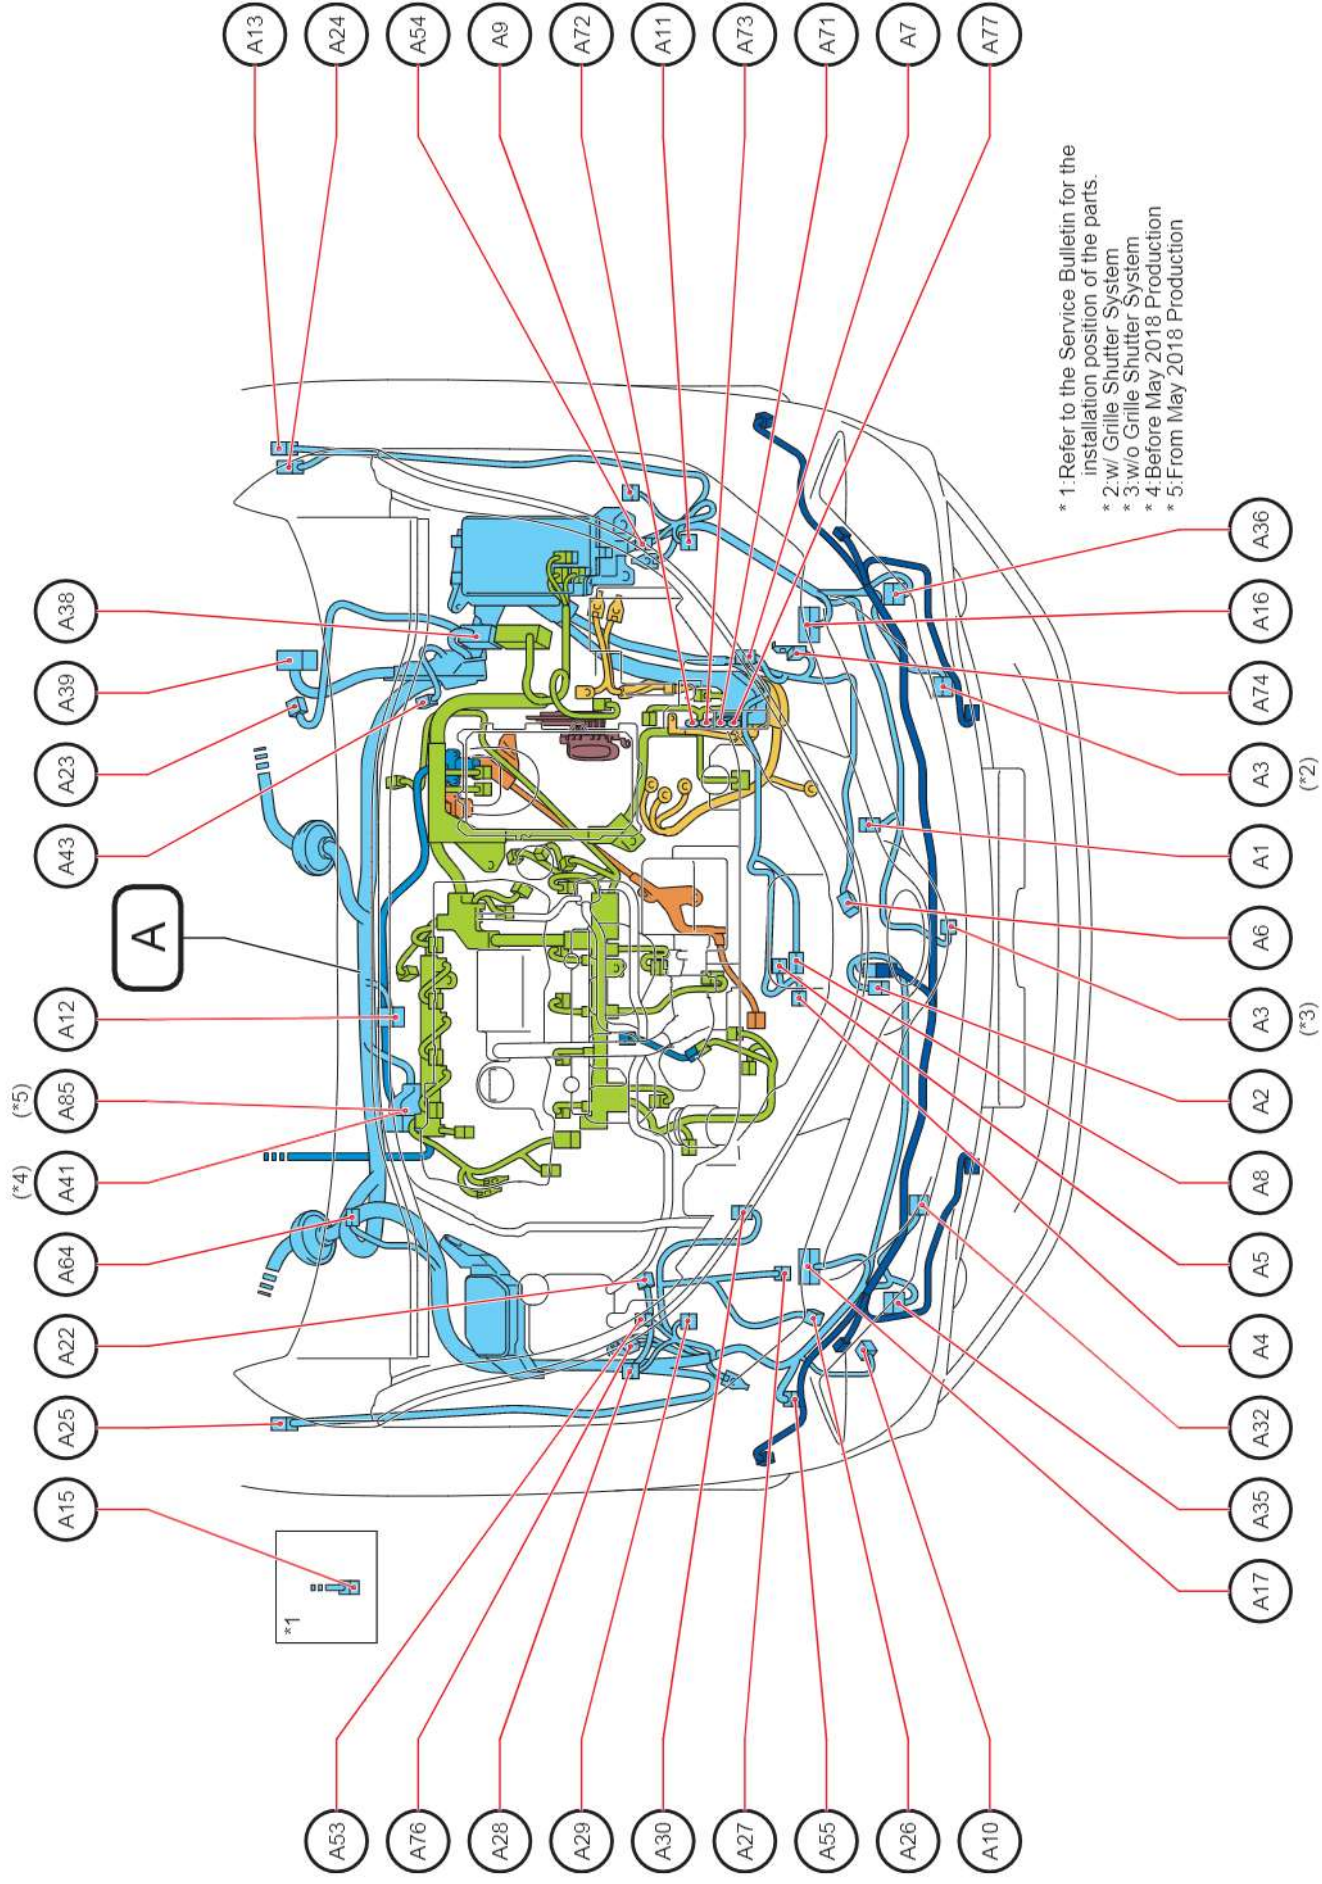












# Position of Parts in Engine Compartment (LHD)

|     |                                                                             |  |
|-----|-----------------------------------------------------------------------------|--|
| A1  | Low Pitched Horn Assembly                                                   |  |
| A2  | Millimeter Wave Radar Sensor Assembly                                       |  |
| A3  | Ambient Temperature Sensor (Thermistor Assembly)                            |  |
| A4  | Cooling Fan Motor RH                                                        |  |
| A5  | Cooling Fan Motor LH                                                        |  |
| A6  | Inverter Water Pump Assembly (with Motor)                                   |  |
| A7  | Front Airbag Sensor LH                                                      |  |
| A8  | Hood Courtesy Switch (Hood Lock Assembly)                                   |  |
| A9  | Headlight Assembly LH                                                       |  |
| A10 | Headlight Cleaner Control Relay                                             |  |
| A11 | Headlight Assembly LH                                                       |  |
| A12 | Brake Booster Pump Assembly                                                 |  |
| A13 | Front Speed Sensor LH                                                       |  |
| A15 | Security Horn Assembly                                                      |  |
| A16 | Headlight ECU Sub-Assembly LH                                               |  |
| A17 | Headlight ECU Sub-Assembly RH                                               |  |
| A22 | A/C Pressure Sensor                                                         |  |
| A23 | Windshield Wiper Motor Assembly                                             |  |
| A24 | Wireless Door Lock Buzzer                                                   |  |
| A25 | Front Speed Sensor RH                                                       |  |
| A26 | Level Warning Switch Assembly                                               |  |
| A27 | Windshield Washer Motor and Pump Assembly                                   |  |
| A28 | Headlight Assembly RH                                                       |  |
| A29 | Headlight Assembly RH                                                       |  |
| A30 | Front Airbag Sensor RH                                                      |  |
| A32 | Radiator Shutter Sub-Assembly                                               |  |
| A35 | Fog Light Assembly RH                                                       |  |
| A36 | Fog Light Assembly LH                                                       |  |
| A38 | ECM                                                                         |  |
| A39 | Brake Booster with Master Cylinder Assembly                                 |  |
| A41 | Brake Actuator Assembly                                                     |  |
| A43 | Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly) |  |
| A53 | Headlight Assembly RH                                                       |  |
| A54 | Headlight Assembly LH                                                       |  |
| A55 | Headlight Cleaner Motor and Pump Assembly                                   |  |
| A64 | Windshield Deicer (Windshield Glass)                                        |  |
| A71 | Fusible Link Block Assembly                                                 |  |
| A72 | Fusible Link Block Assembly                                                 |  |
| A73 | Fusible Link Block Assembly                                                 |  |
| A74 | No. 1 Ground Junction Connector                                             |  |
| A76 | No. 3 Ground Junction Connector                                             |  |
| A77 | Fusible Link Block Assembly                                                 |  |
| A85 | Brake Actuator Assembly                                                     |  |
 
# Position of Parts in Engine Compartment (LHD)

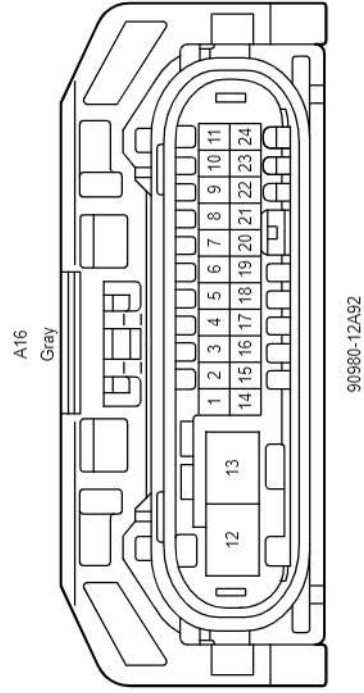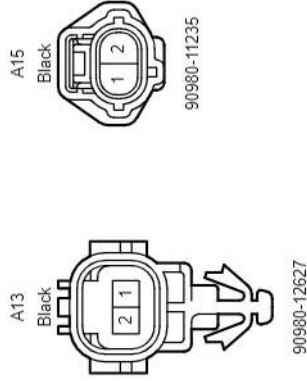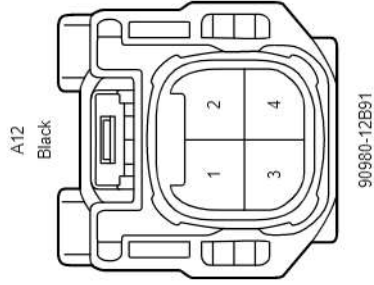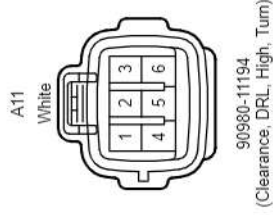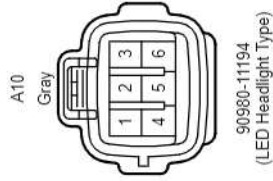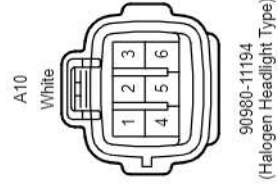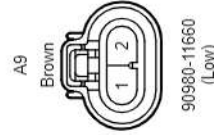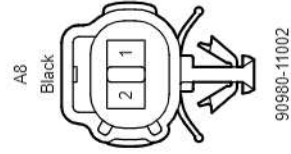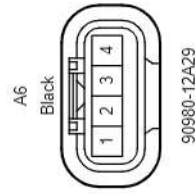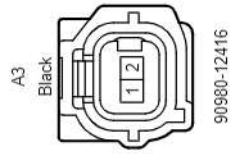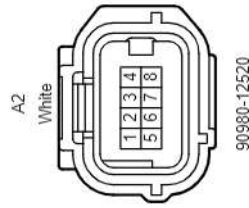


Position of Parts in Engine Compartment (LHD)

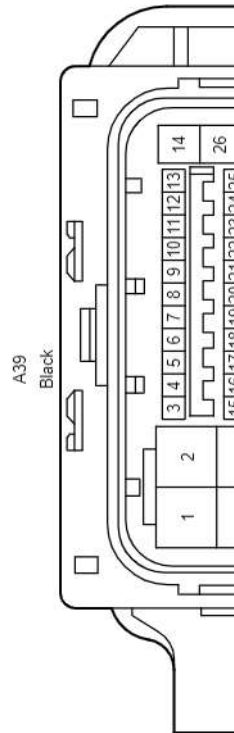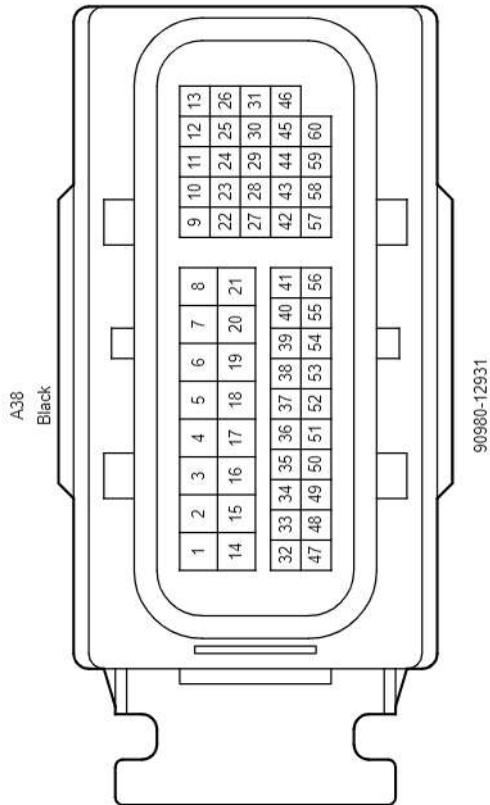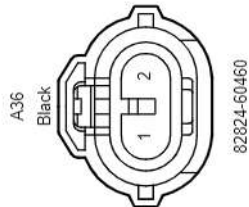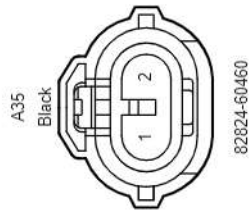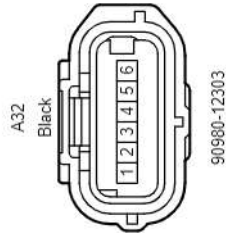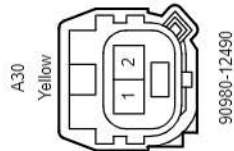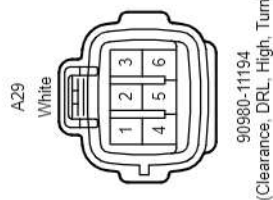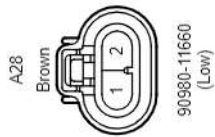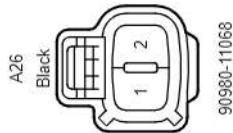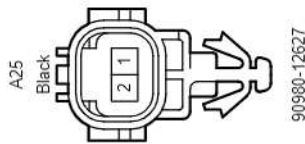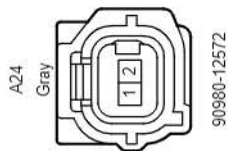


Position of Parts in Engine Compartment (LHD)

A41  
Black

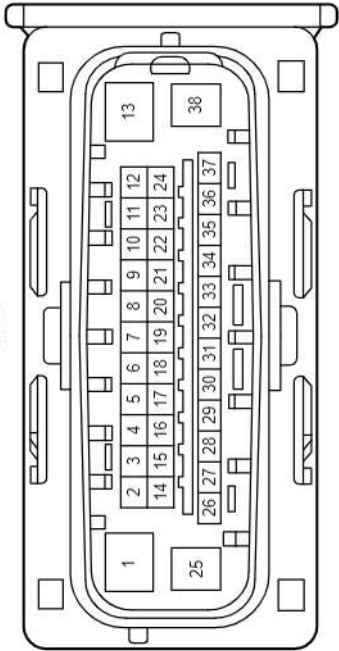


90980-12B01

A54  
Black

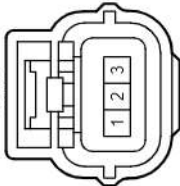

90980-WA052  
(Headlight Levelling Motor LH)

A55  
Black

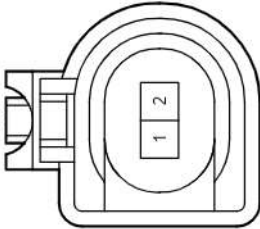

90980-WA054

A64  
Black



90980-11155

A71



A72




A43  
Black



90980-11207

A53  
Black

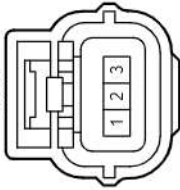


90980-WA052  
(Headlight Levelling Motor RH)

A73



A74  
Black

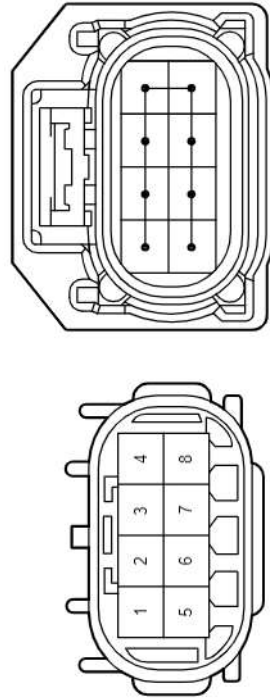

90980-12B56

A76  
Black




A77




Position of Parts in Engine Compartment (LHD)

A85  
Black

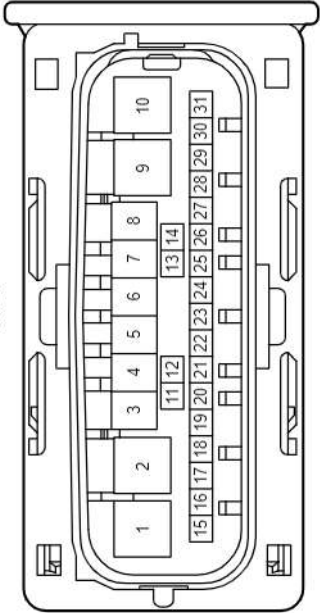























82824-12690

Position of Parts in Engine Compartment (LHD)

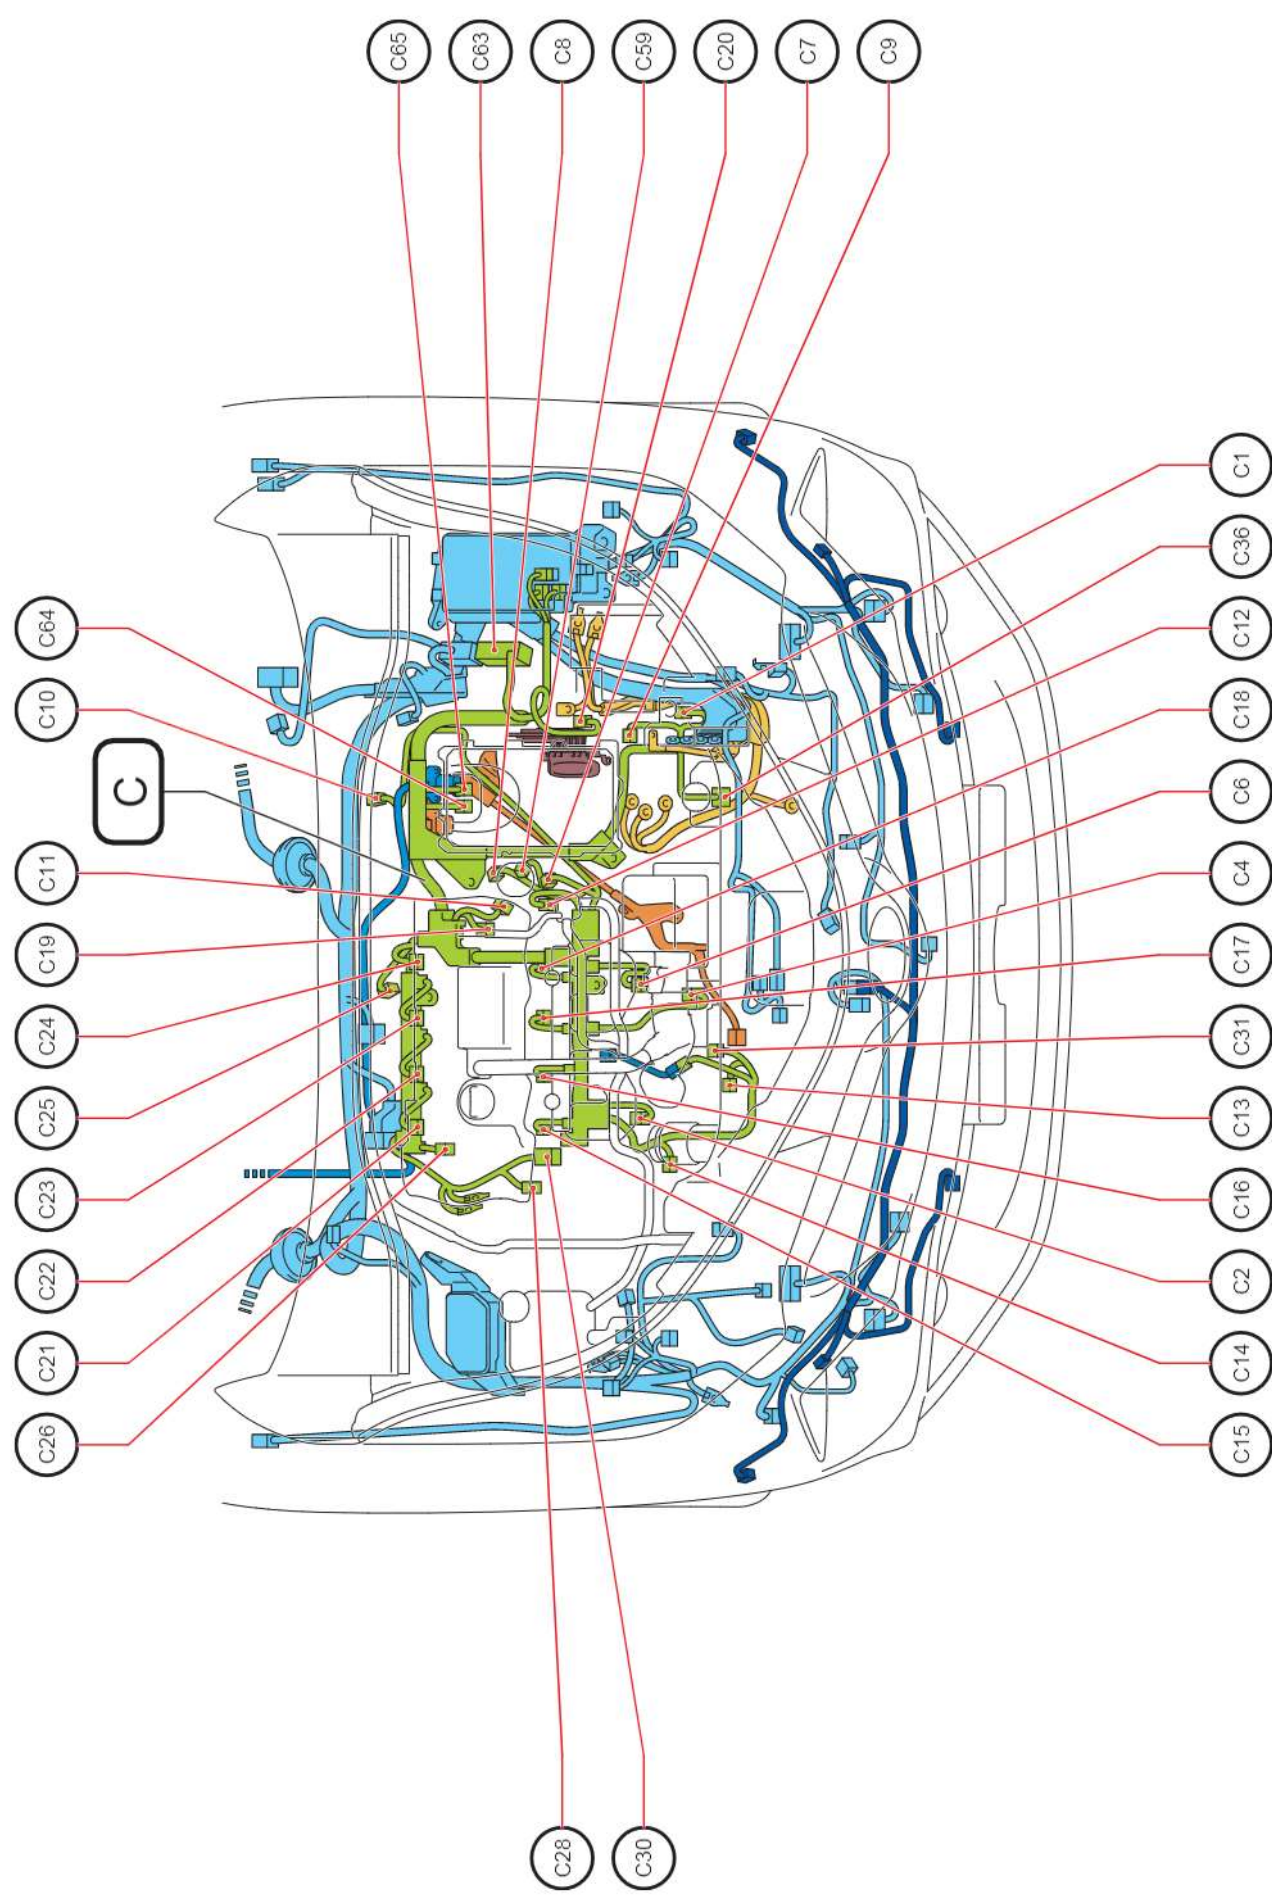

|     |                                            |
|-----|--------------------------------------------|
| C1  | Hybrid Vehicle Transaxle Assembly          |
| C2  | E.F.I. Vacuum Sensor Assembly              |
| C4  | Throttle with Motor Body Assembly          |
| C6  | Intake Mass Air Flow Meter Sub-Assembly    |
| C7  | E.F.I. Engine Coolant Temperature Sensor   |
| C8  | Engine Coolant Temperature Sensor (Heater) |
| C9  | Hybrid Vehicle Transaxle Assembly          |
| C10 | Oxygen Sensor (Bank 1 Sensor 2)            |
| C11 | EGR Valve Assembly                         |
| C12 | Purge VSV                                  |
| C13 | Compressor with Motor Assembly             |
| C14 | Engine Water Pump Assembly                 |
| C15 | Fuel Injector Assembly No. 1               |
| C16 | Fuel Injector Assembly No. 2               |
| C17 | Fuel Injector Assembly No. 3               |
| C18 | Fuel Injector Assembly No. 4               |
| C19 | WT Sensor (Intake Side)                    |
| C20 | Battery State Sensor Assembly              |
| C21 | Ignition Coil Assembly No. 1               |
| C22 | Ignition Coil Assembly No. 2               |
| C23 | Ignition Coil Assembly No. 3               |
| C24 | Ignition Coil Assembly No. 4               |
| C25 | Air Fuel Ratio Sensor (Bank 1 Sensor 1)    |
| C26 | Camshaft Timing Oil Control Valve Assembly |
| C28 | Engine Oil Pressure Switch Assembly        |
| C30 | Crank Position Sensor                      |
| C31 | Engine Oil Level Sensor                    |
| C36 | Shift Lever Position Sensor                |
| C59 | Water Valve                                |
| C63 | ECM                                        |
| C64 | Inverter with Converter Assembly           |
| C65 | Inverter with Converter Assembly           |

# Position of Parts in Engine Compartment (LHD)

    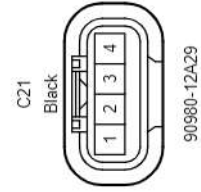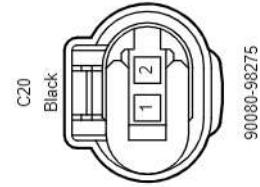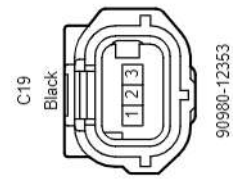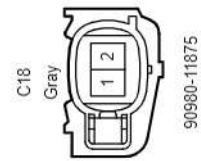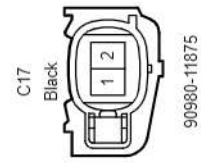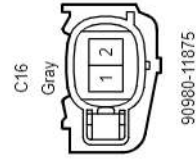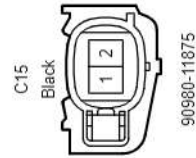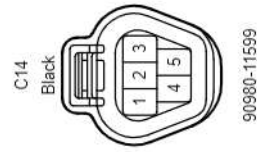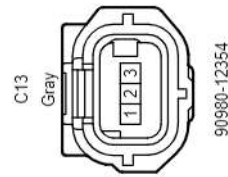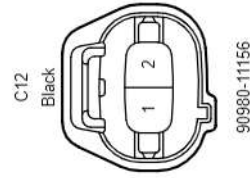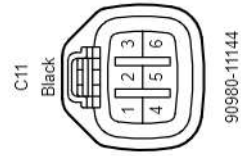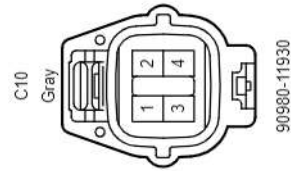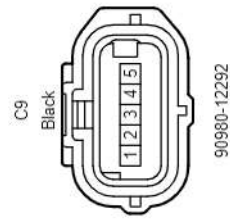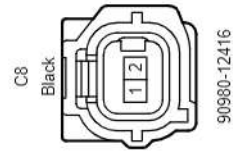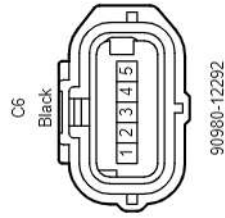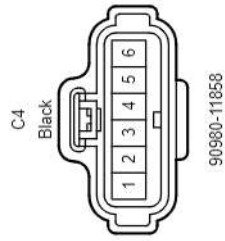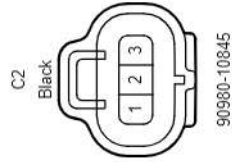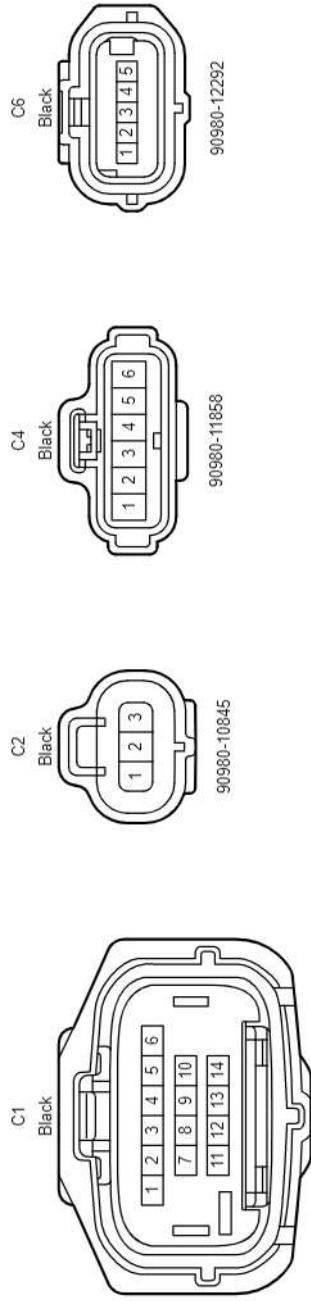

Position of Parts in Engine Compartment (LHD)

C28

Gray



90980-11363

C30

Black



90980-12611

C31


Black



90980-11166

C36


Black

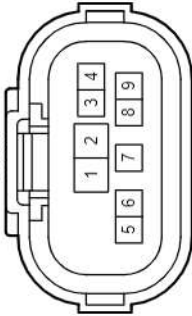

90980-12362

C59


Gray

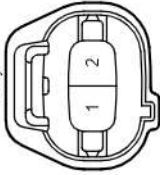

90980-11156

C63


Black

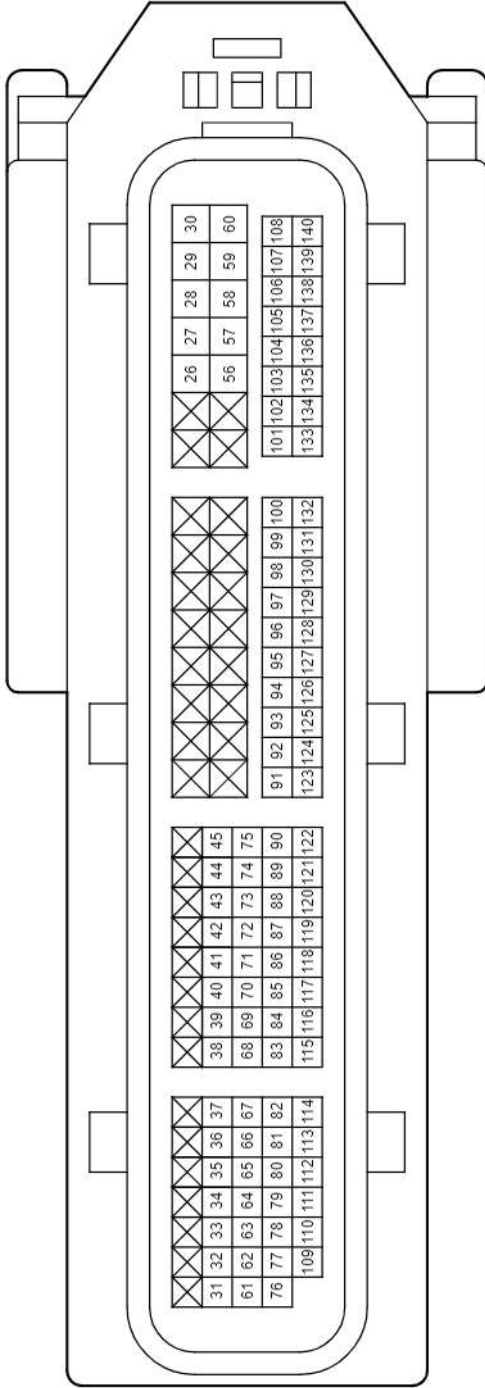

90980-12A39


C64


Black

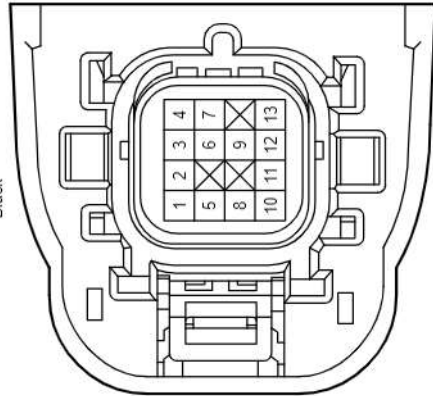

C65












Black

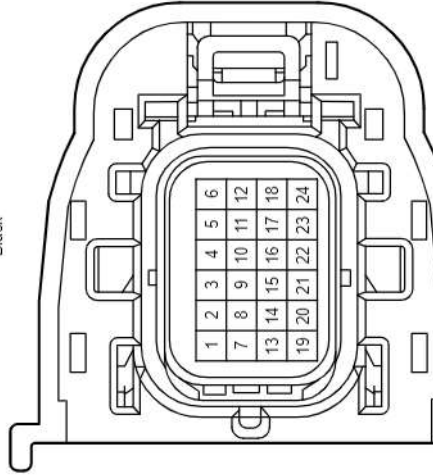

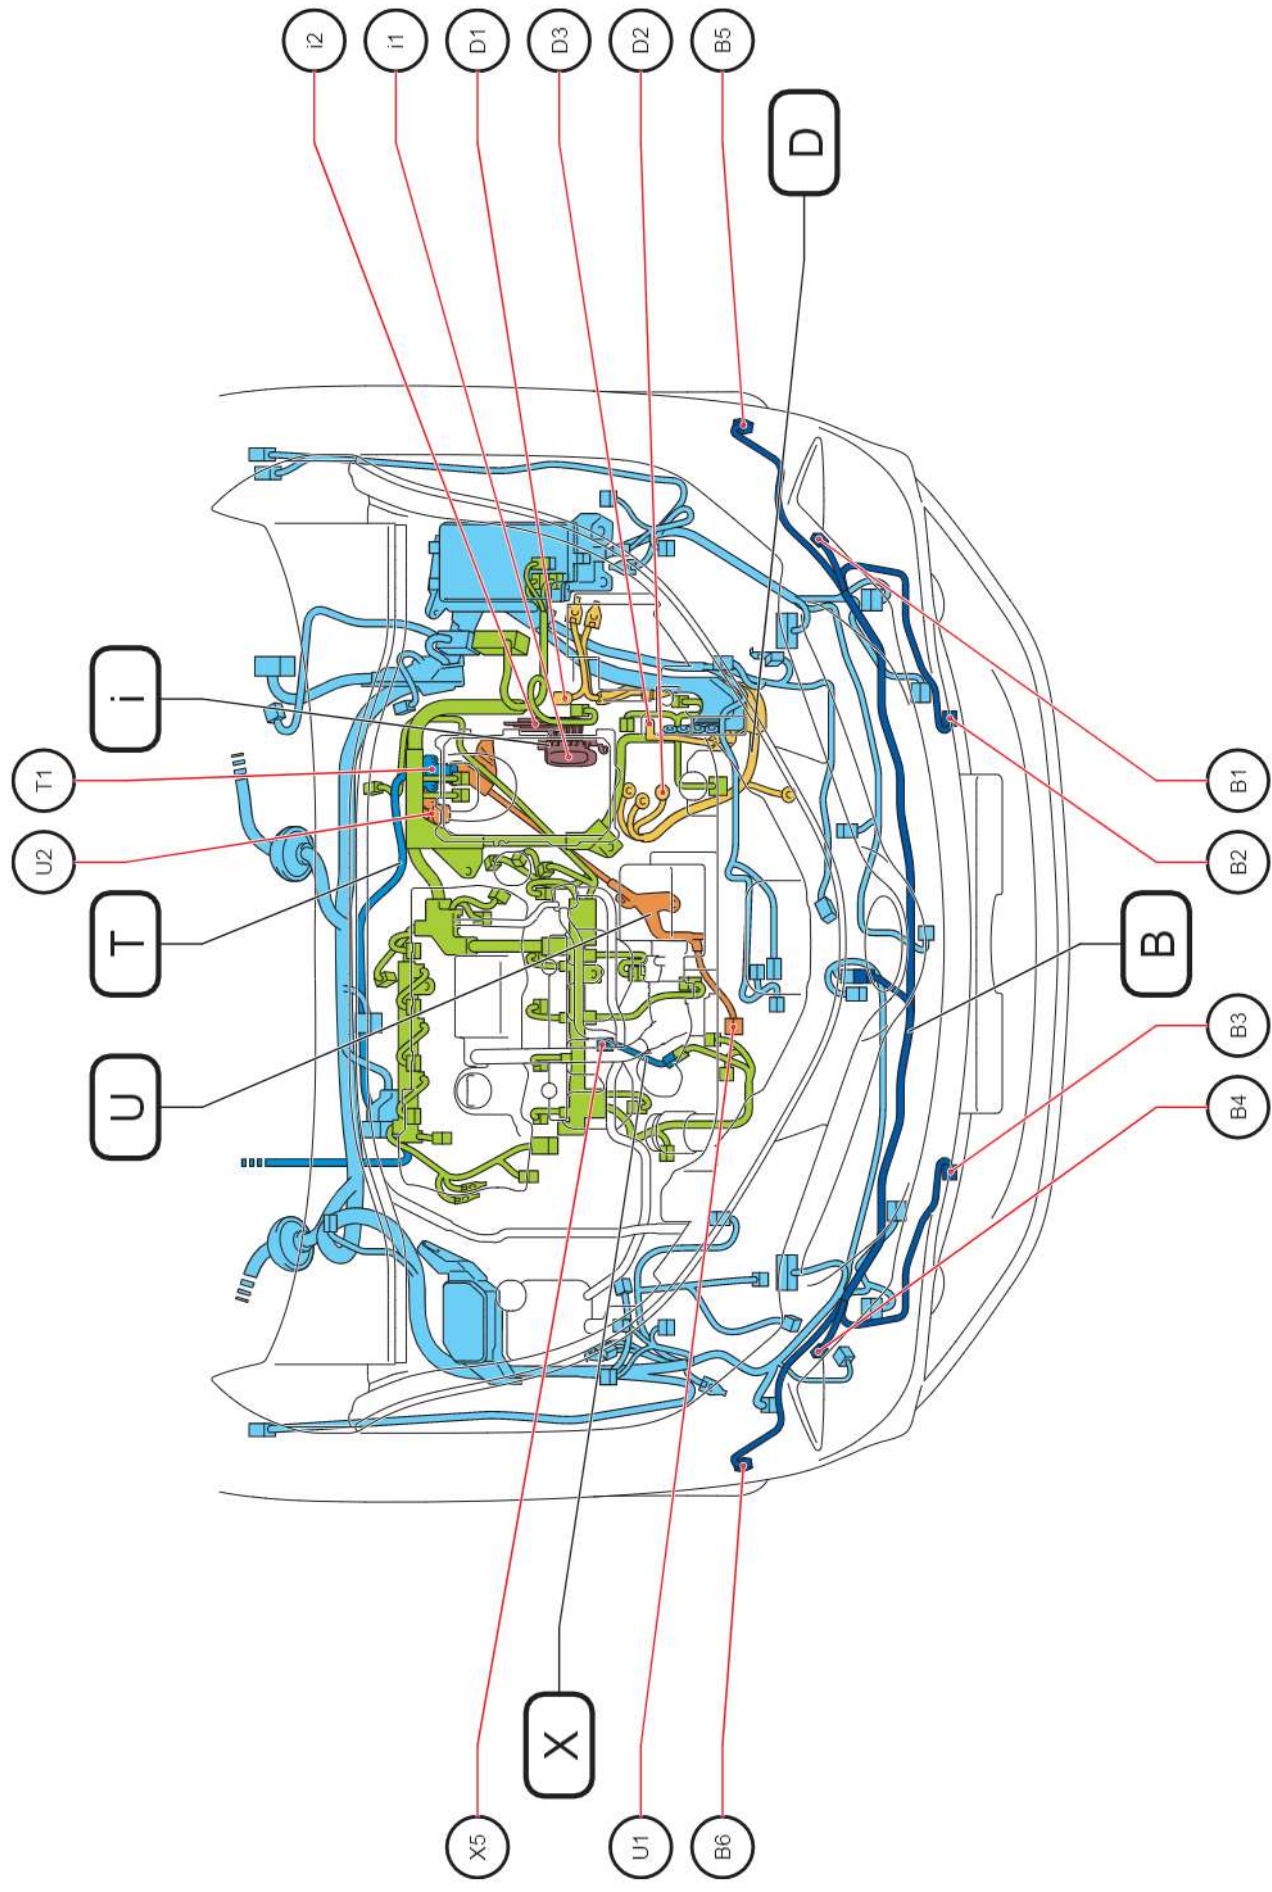



|    |                                   |
|----|-----------------------------------|
| B1 | Front Ultrasonic Sensor Corner LH |
| B2 | Front Ultrasonic Sensor Center LH |
| B3 | Front Ultrasonic Sensor Center RH |
| B4 | Front Ultrasonic Sensor Corner RH |
| B5 | Front Ultrasonic Sensor Side LH   |
| B6 | Front Ultrasonic Sensor Side RH   |
| D1 | Battery                           |
| D2 | Inverter with Converter Assembly  |
| D3 | Fusible Link Block Assembly       |
| T1 | Inverter with Converter Assembly  |
| U1 | Compressor with Motor Assembly    |
| U2 | Inverter with Converter Assembly  |
| X5 | Knock Control Sensor (Bank 1)     |
| i1 | Hybrid Vehicle Transaxle Assembly |
| i2 | Inverter with Converter Assembly  |

Position of Parts in Engine Compartment (LHD)

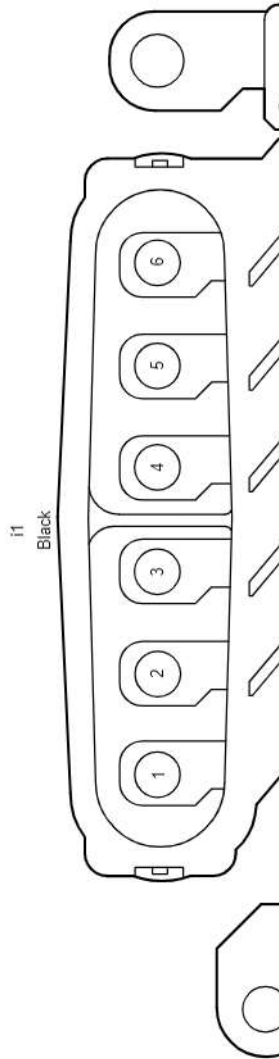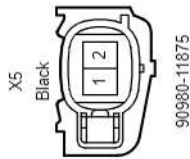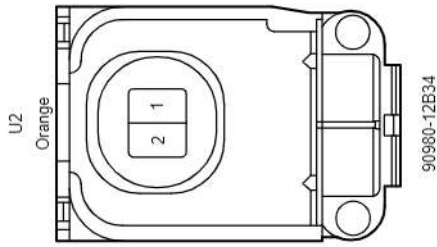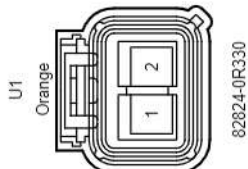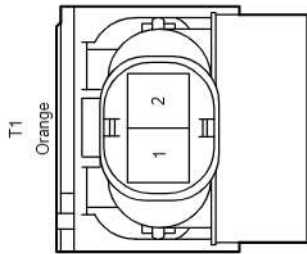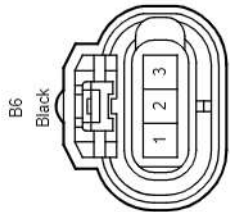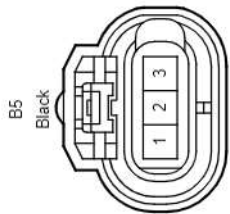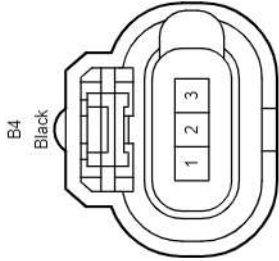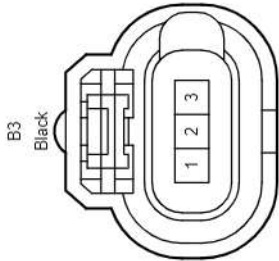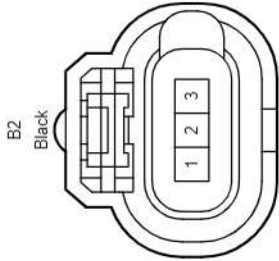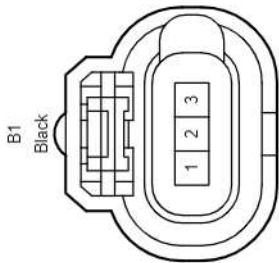


12  
Black

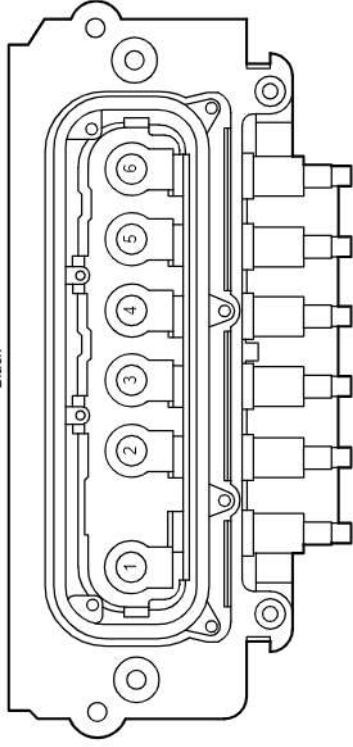

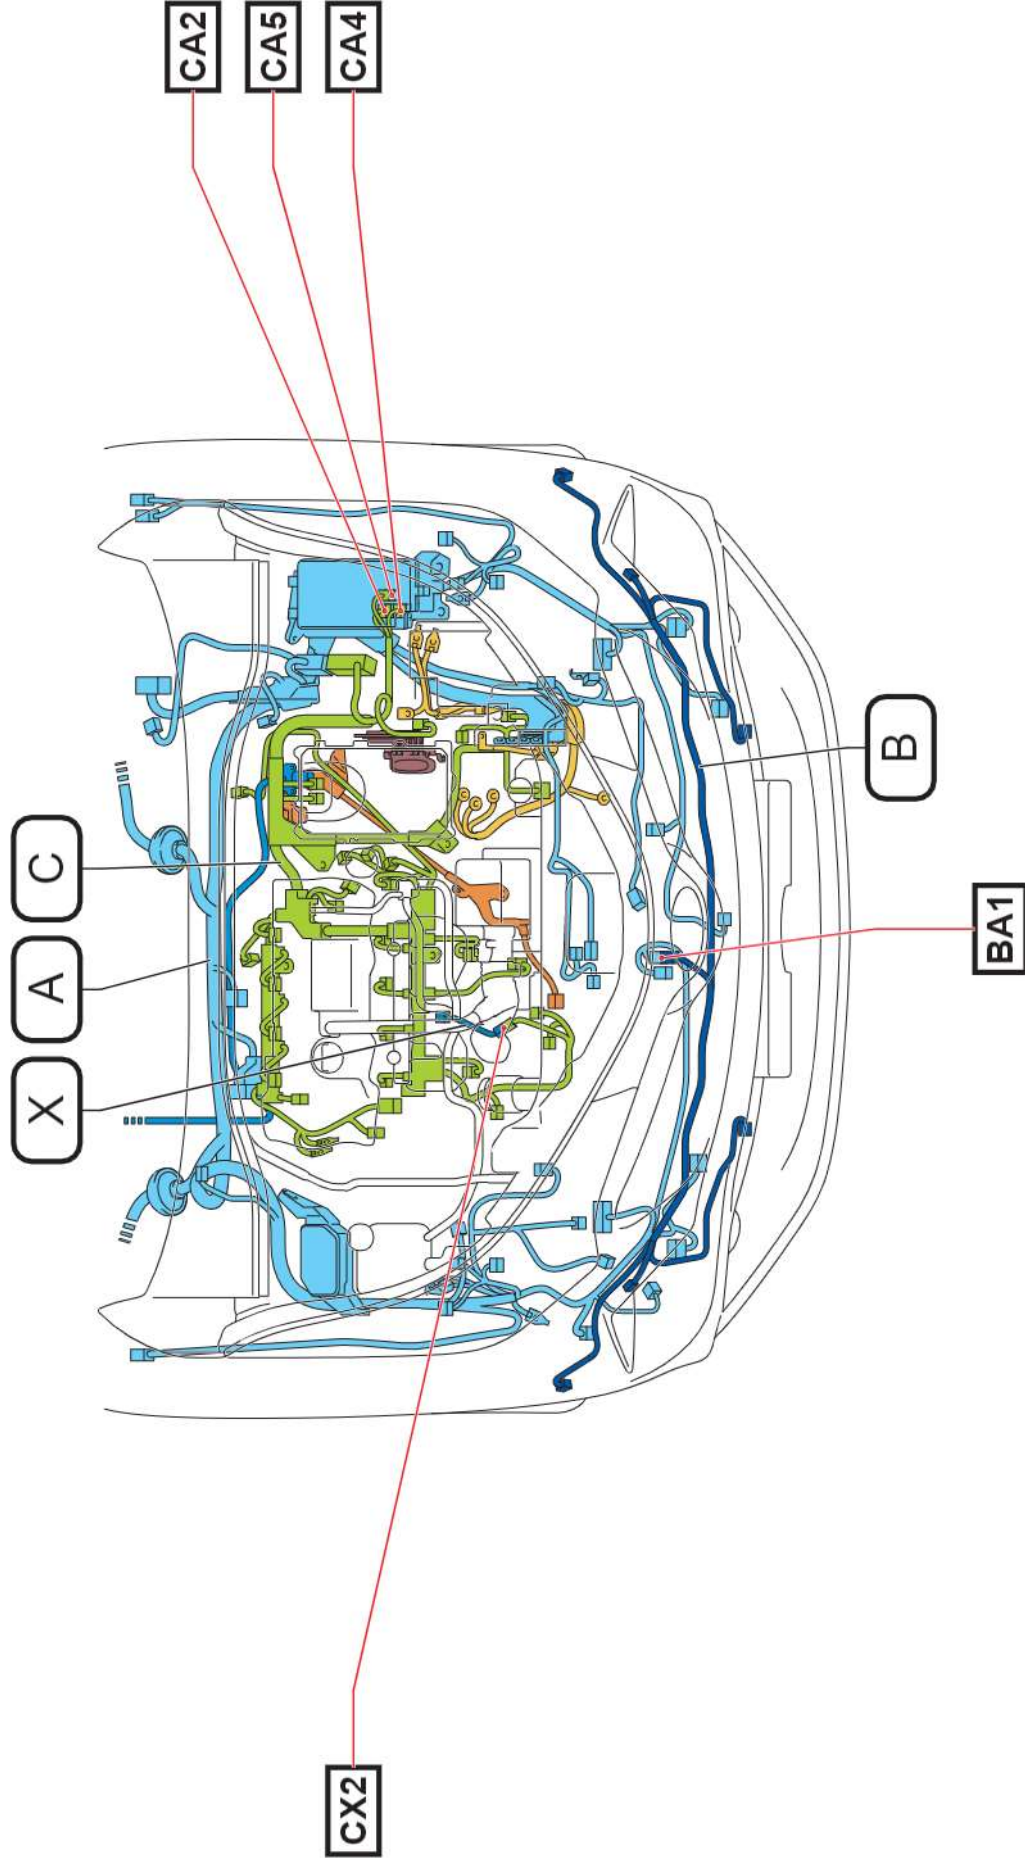


Wire and Wire in Engine Compartment (LHD)

BA1  
White

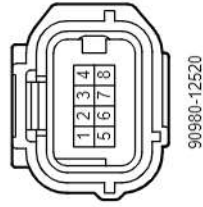


90980-12520

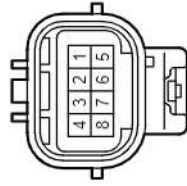


90980-12519

CA2  
Gray

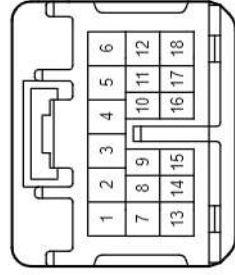


90980-12745

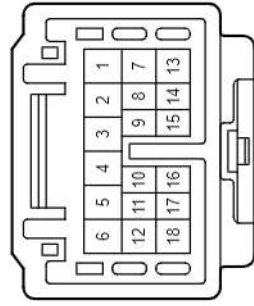


90980-12744

CA4  
Black

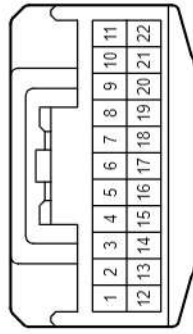


90980-12372

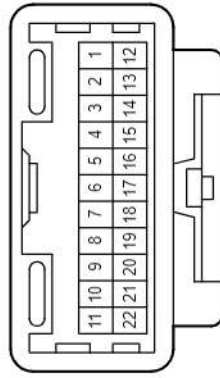


90980-12371

CA5  
White

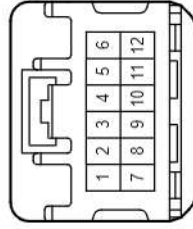


90980-12737

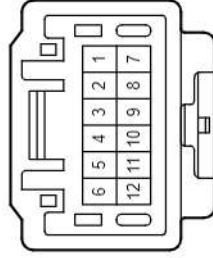


90980-12736


CX2  
Gray

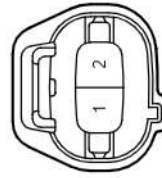

90980-11156

 

90980-11155

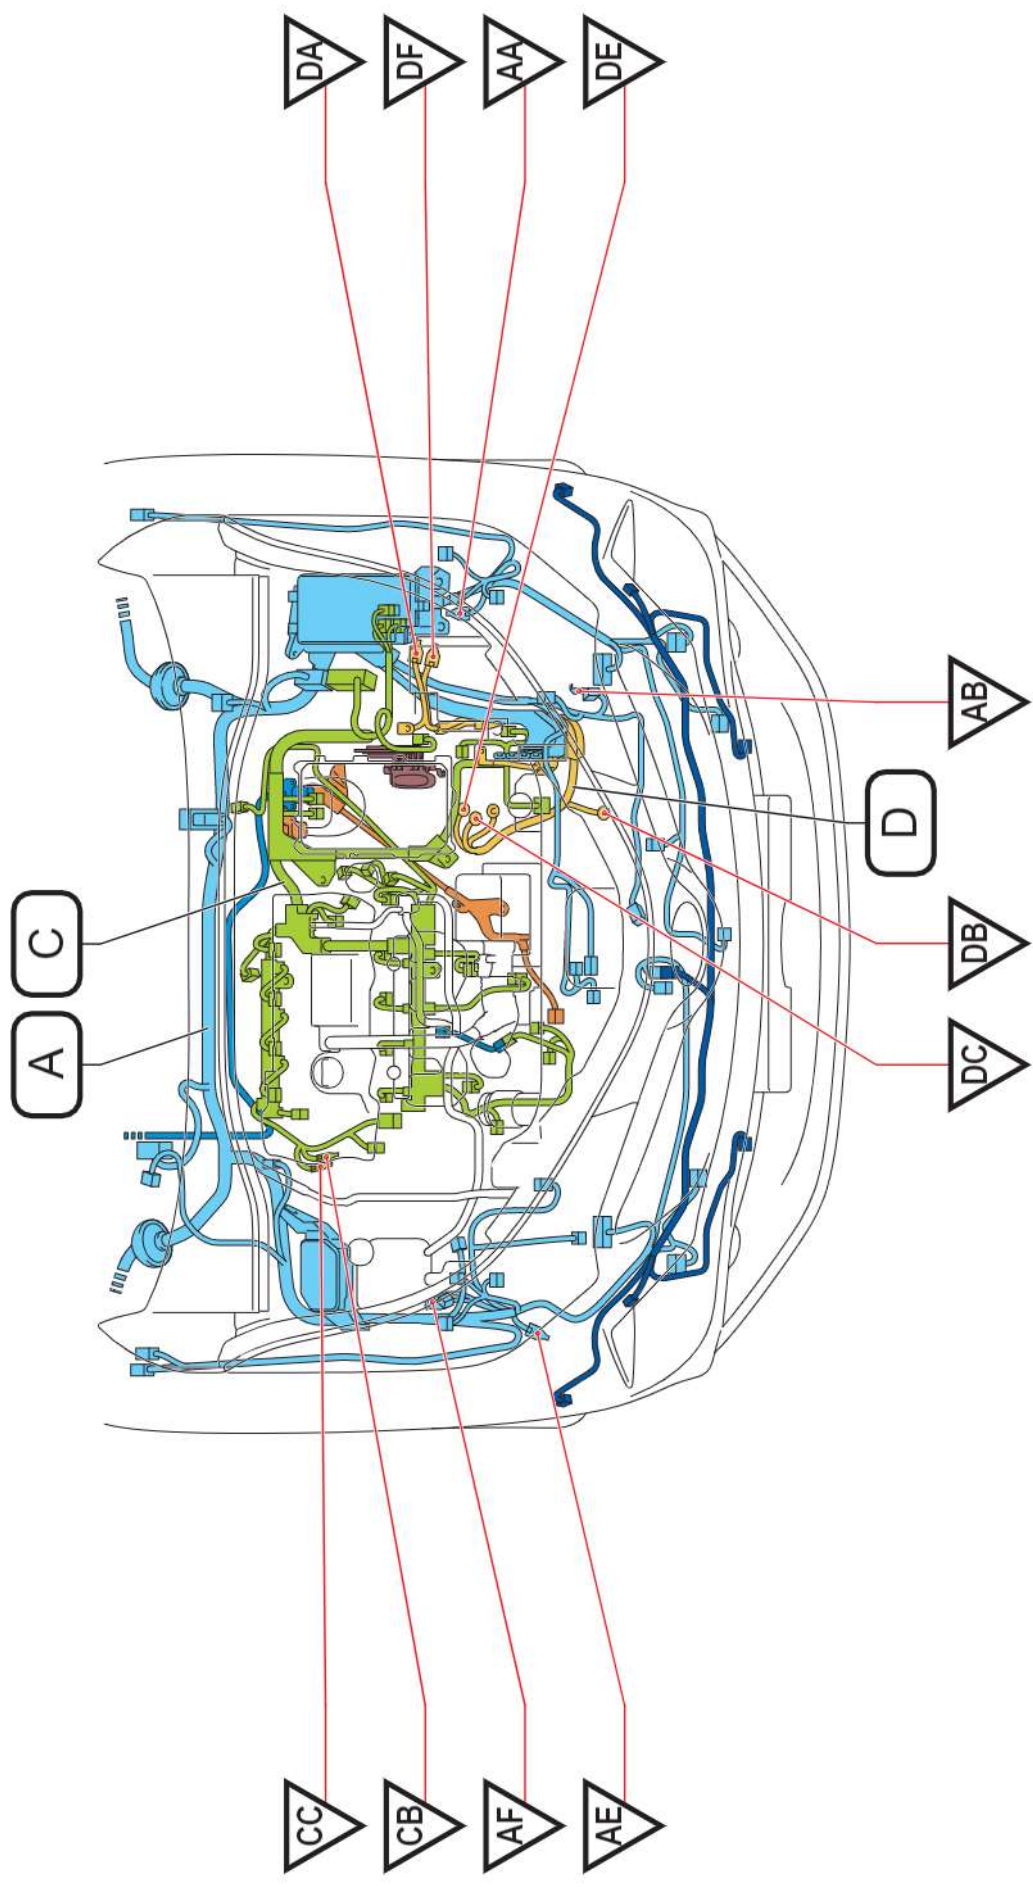

# Position of Parts in Engine Compartment (RHD)













 


- \* 1: Refer to the Service Bulletin for the installation position of the parts.
- \* 2: w/ Grille Shutter System
- \* 3: w/o Grille Shutter System
- \* 4: Before May 2018 Production
- \* 5: From May 2018 Production

# Position of Parts in Engine Compartment (RHD)

|     |                                                                             |
|-----|-----------------------------------------------------------------------------|
| A1  | Low Pitched Horn Assembly                                                   |
| A2  | Millimeter Wave Radar Sensor Assembly                                       |
| A3  | Ambient Temperature Sensor (Thermistor Assembly)                            |
| A4  | Cooling Fan Motor RH                                                        |
| A5  | Cooling Fan Motor LH                                                        |
| A6  | Inverter Water Pump Assembly (with Motor)                                   |
| A7  | Front Airbag Sensor LH                                                      |
| A8  | Hood Courtesy Switch (Hood Lock Assembly)                                   |
| A9  | Headlight Assembly LH                                                       |
| A11 | Headlight Assembly LH                                                       |
| A12 | Brake Booster Pump Assembly                                                 |
| A13 | Front Speed Sensor LH                                                       |
| A15 | Security Horn Assembly                                                      |
| A16 | Headlight ECU Sub-Assembly LH                                               |
| A17 | Headlight ECU Sub-Assembly RH                                               |
| A22 | A/C Pressure Sensor                                                         |
| A23 | Windshield Wiper Motor Assembly                                             |
| A24 | Wireless Door Lock Buzzer                                                   |
| A25 | Front Speed Sensor RH                                                       |
| A27 | Windshield Washer Motor and Pump Assembly                                   |
| A28 | Headlight Assembly RH                                                       |
| A29 | Headlight Assembly RH                                                       |
| A30 | Front Airbag Sensor RH                                                      |
| A32 | Radiator Shutter Sub-Assembly                                               |
| A35 | Fog Light Assembly RH                                                       |
| A36 | Fog Light Assembly LH                                                       |
| A38 | ECM                                                                         |
| A39 | Brake Booster with Master Cylinder Assembly                                 |
| A40 | Brake Actuator Assembly                                                     |
| A43 | Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly) |
| A53 | Headlight Assembly RH                                                       |
| A54 | Headlight Assembly LH                                                       |
| A71 | Fusible Link Block Assembly                                                 |
| A72 | Fusible Link Block Assembly                                                 |
| A73 | Fusible Link Block Assembly                                                 |
| A74 | No. 1 Ground Junction Connector                                             |
| A76 | No. 3 Ground Junction Connector                                             |
| A77 | Fusible Link Block Assembly                                                 |
| A84 | Brake Actuator Assembly                                                     |


Position of Parts in Engine Compartment (RHD)

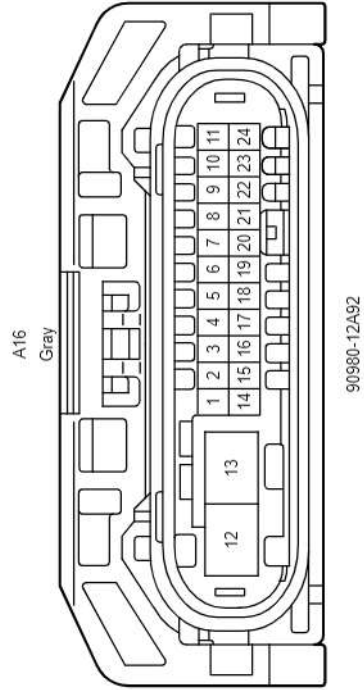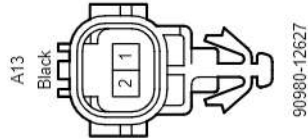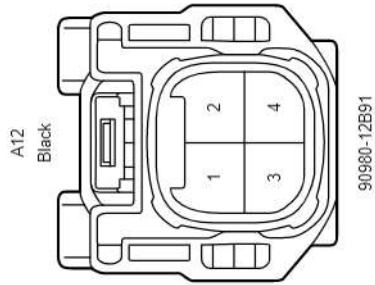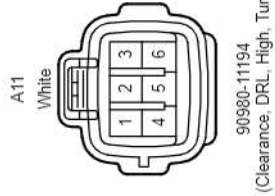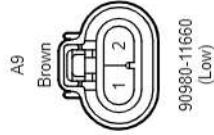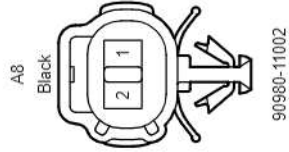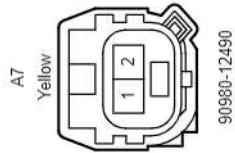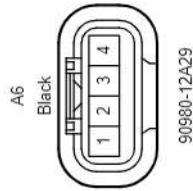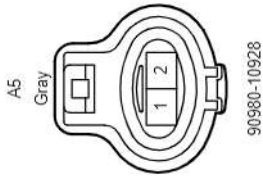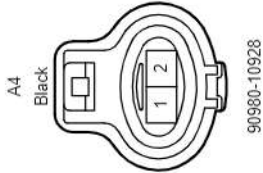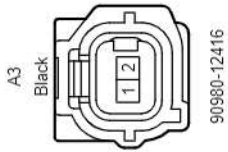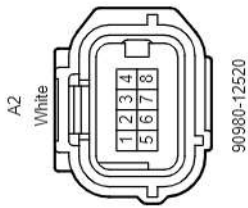

cardiagn.com


Position of Parts in Engine Compartment (RHD)

A24  
Gray

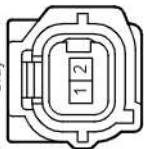

90980-12572

A25  
Black

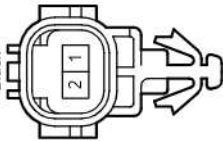


90980-12627

A27  
White




90980-11019

 A28  
Brown




90980-11660  
(Low)

A29  
White

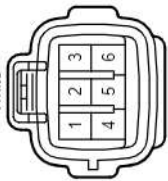


90980-11194  
(Clearance, DRL, High, Turn)

A30  
Yellow

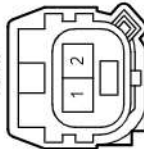


90980-12490

A32  
Black

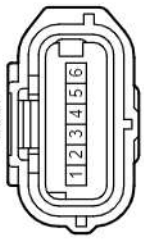


90980-12303

A35  
Black

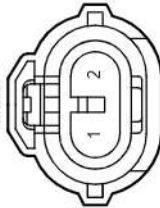


82824-60460

A36  
Black

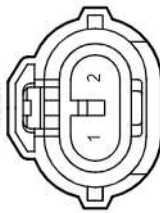


82824-60460

A38  
Black


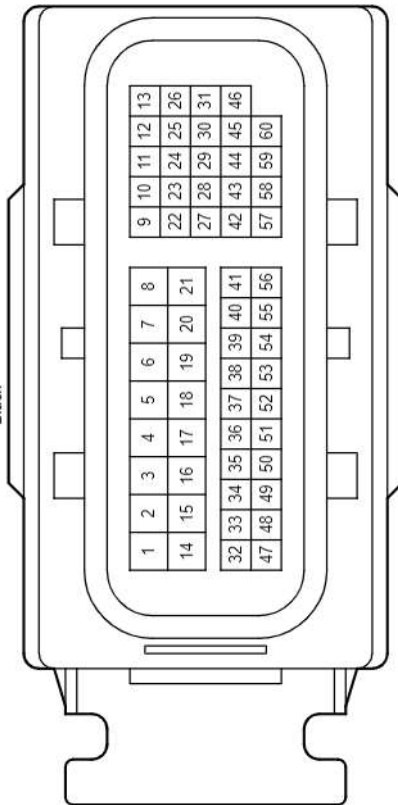


90980-12931

A39  
Black

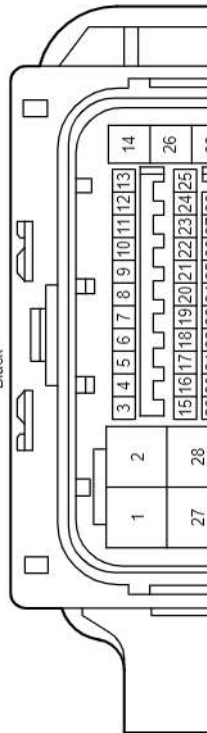


Position of Parts in Engine Compartment (RHD)

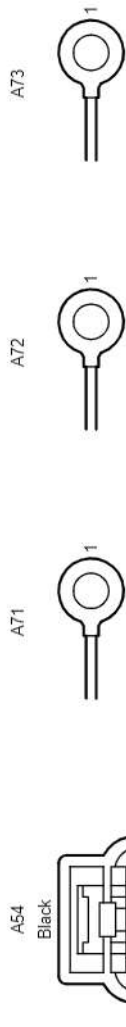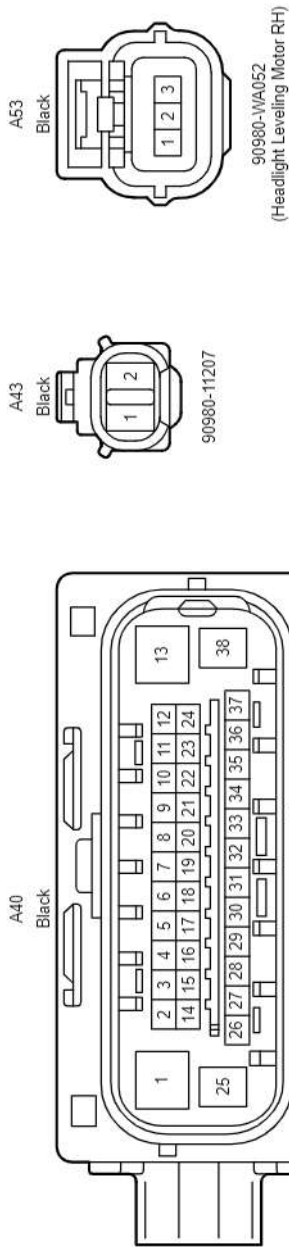


cardiagn.com

Position of Parts in Engine Compartment (RHD)

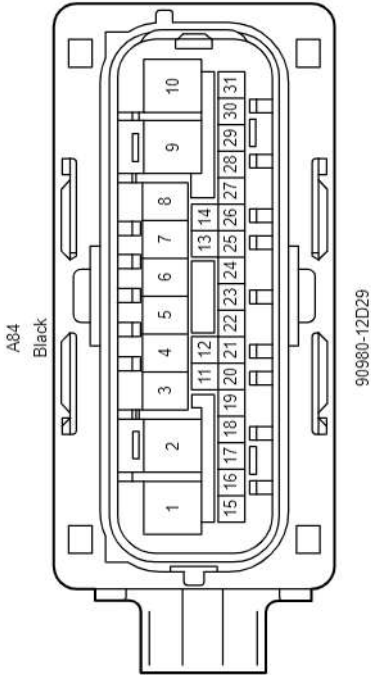


Position of Parts in Engine Compartment (RHD)

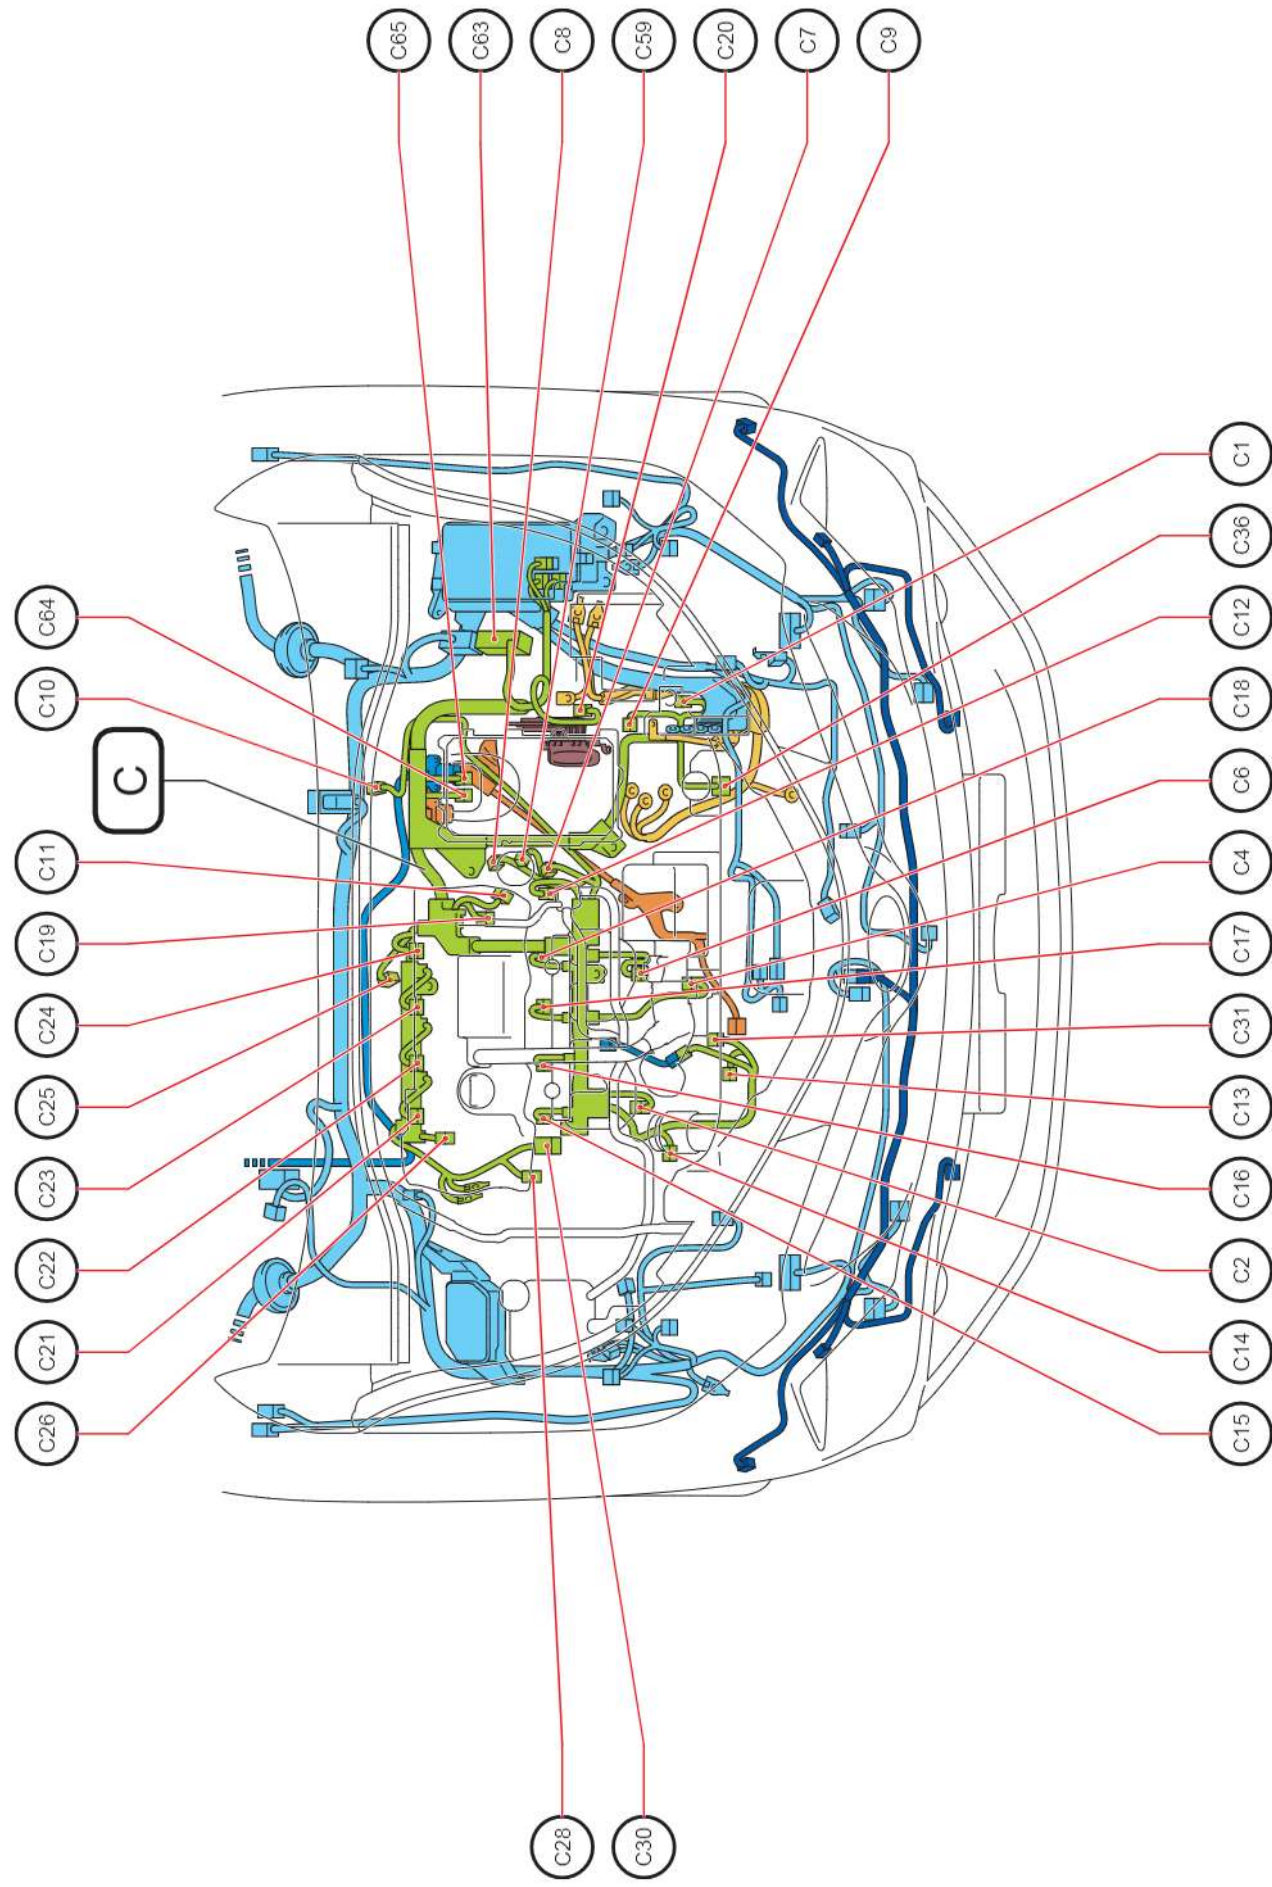


|     |                                            |
|-----|--------------------------------------------|
| C1  | Hybrid Vehicle Transaxle Assembly          |
| C2  | E.F.I. Vacuum Sensor Assembly              |
| C4  | Throttle with Motor Body Assembly          |
| C6  | Intake Mass Air Flow Meter Sub-Assembly    |
| C7  | E.F.I. Engine Coolant Temperature Sensor   |
| C8  | Engine Coolant Temperature Sensor (Heater) |
| C9  | Hybrid Vehicle Transaxle Assembly          |
| C10 | Oxygen Sensor (Bank 1 Sensor 2)            |
| C11 | EGR Valve Assembly                         |
| C12 | Purge VSV                                  |
| C13 | Compressor with Motor Assembly             |
| C14 | Engine Water Pump Assembly                 |
| C15 | Fuel Injector Assembly No. 1               |
| C16 | Fuel Injector Assembly No. 2               |
| C17 | Fuel Injector Assembly No. 3               |
| C18 | Fuel Injector Assembly No. 4               |
| C19 | WT Sensor (Intake Side)                    |
| C20 | Battery State Sensor Assembly              |
| C21 | Ignition Coil Assembly No. 1               |
| C22 | Ignition Coil Assembly No. 2               |
| C23 | Ignition Coil Assembly No. 3               |
| C24 | Ignition Coil Assembly No. 4               |
| C25 | Air Fuel Ratio Sensor (Bank 1 Sensor 1)    |
| C26 | Camshaft Timing Oil Control Valve Assembly |
| C28 | Engine Oil Pressure Switch Assembly        |
| C30 | Crank Position Sensor                      |
| C31 | Engine Oil Level Sensor                    |
| C36 | Shift Lever Position Sensor                |
| C59 | Water Valve                                |
| C63 | ECM                                        |
| C64 | Inverter with Converter Assembly           |
| C65 | Inverter with Converter Assembly           |


# Position of Parts in Engine Compartment (RHD)

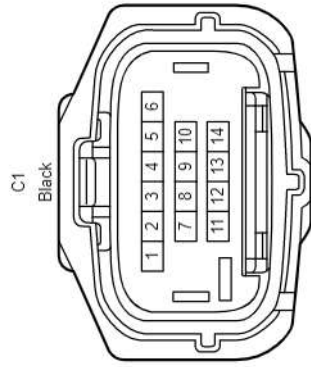


82824-47850

 


90980-10845

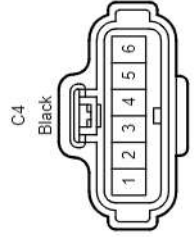


90980-11858

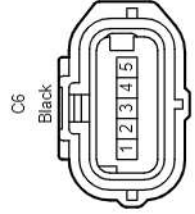


90980-12292

 


90980-10735

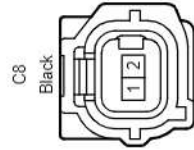


90980-12416

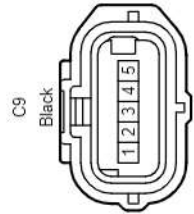


90980-12292

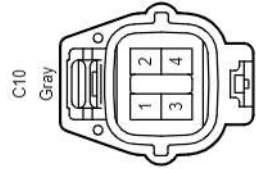


90980-11930

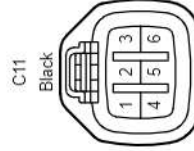


90980-11144

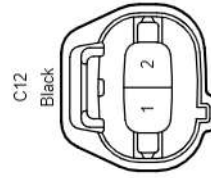


90980-11156

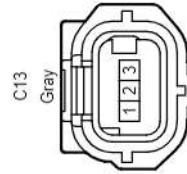


90980-12354

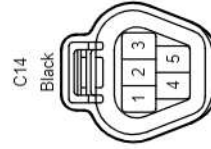


90980-11599

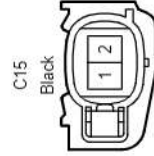

90980-11875

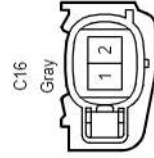


90980-11875

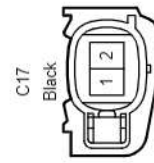


90980-11875




90980-11875

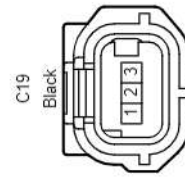




90980-12353

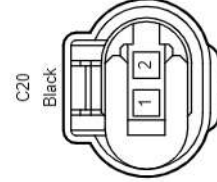




90980-98275

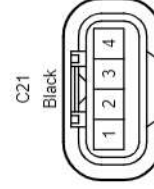


90980-12A29

   

Position of Parts in Engine Compartment (RHD)


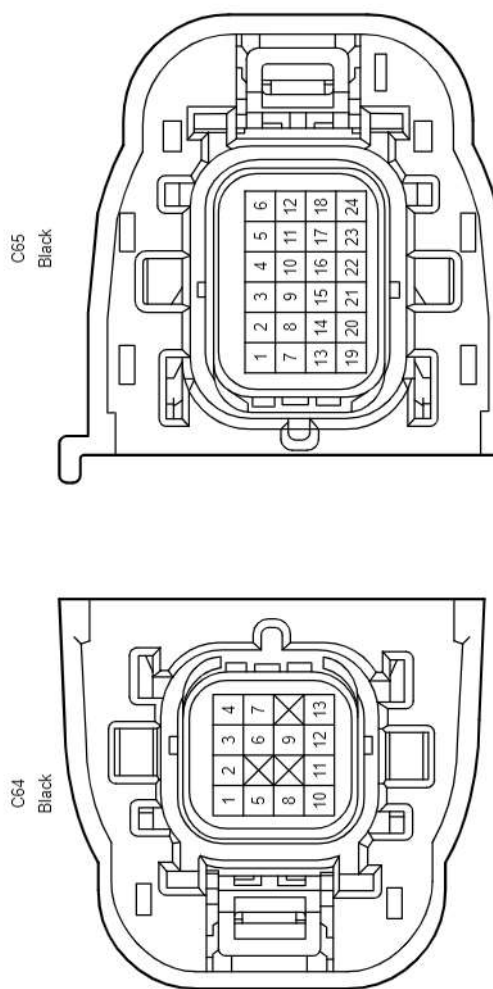
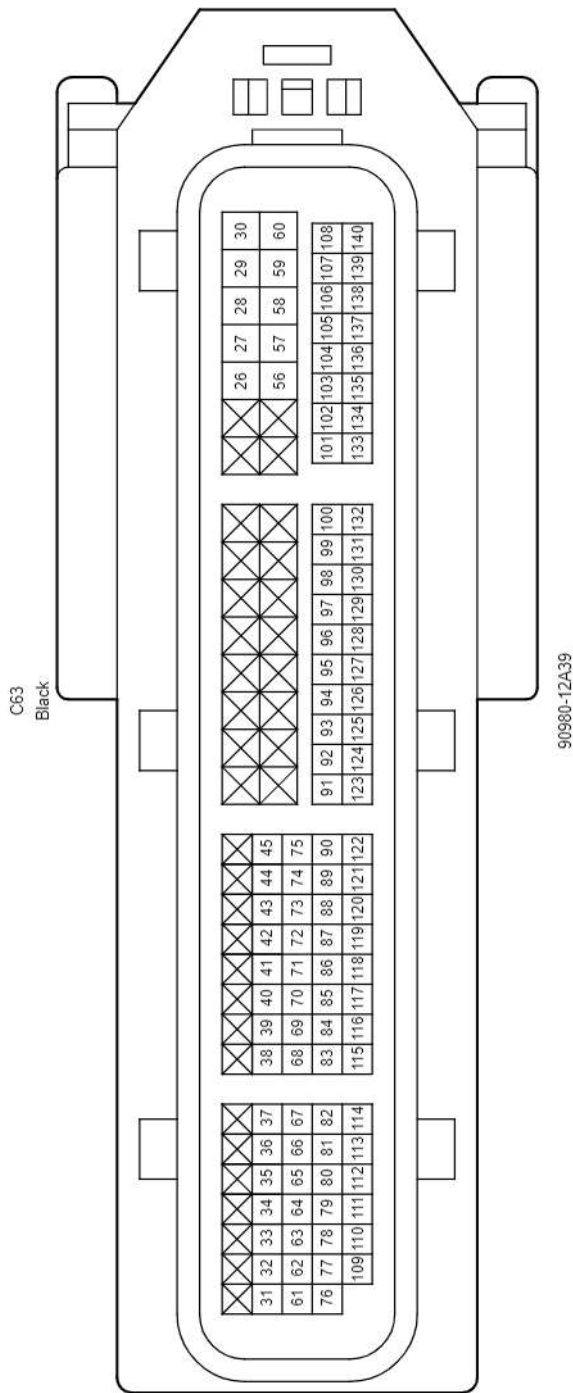
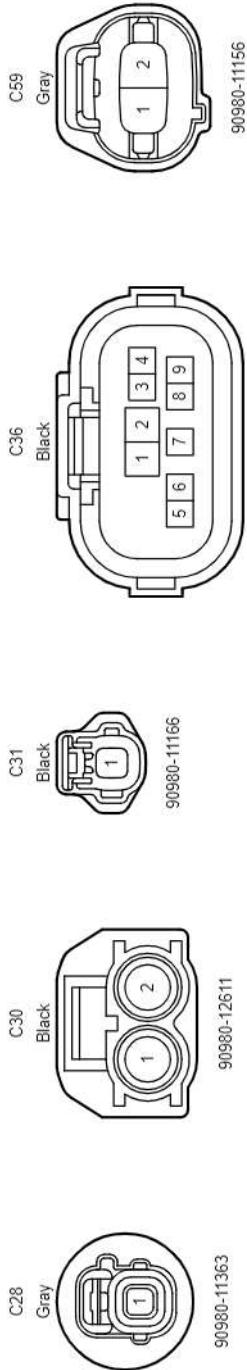


Position of Parts in Engine Compartment (RHD)

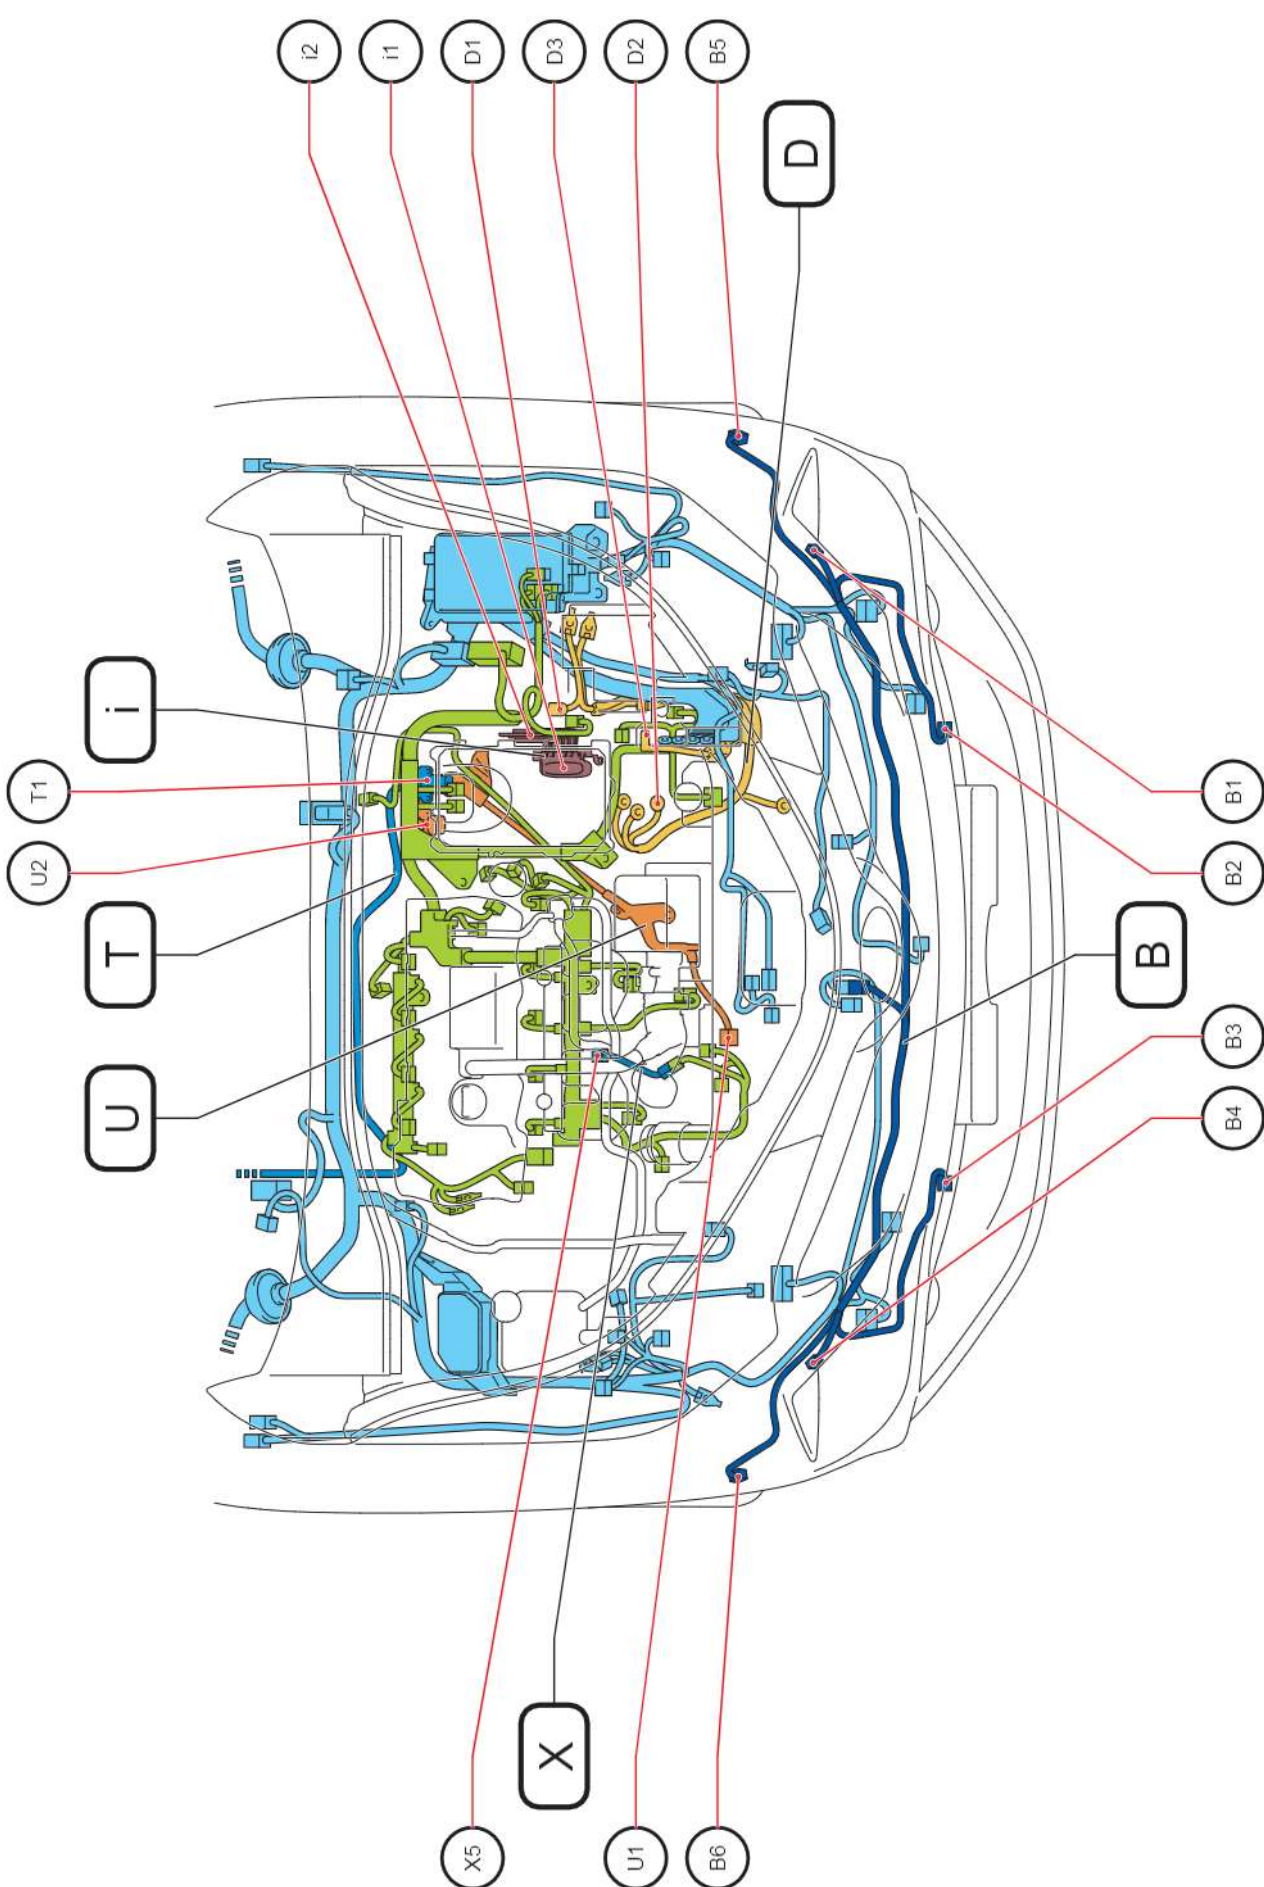



|    |                                   |
|----|-----------------------------------|
| B1 | Front Ultrasonic Sensor Corner LH |
| B2 | Front Ultrasonic Sensor Center LH |
| B3 | Front Ultrasonic Sensor Center RH |
| B4 | Front Ultrasonic Sensor Corner RH |
| B5 | Front Ultrasonic Sensor Side LH   |
| B6 | Front Ultrasonic Sensor Side RH   |
| D1 | Battery                           |
| D2 | Inverter with Converter Assembly  |
| D3 | Fusible Link Block Assembly       |
| T1 | Inverter with Converter Assembly  |
| U1 | Compressor with Motor Assembly    |
| U2 | Inverter with Converter Assembly  |
| X5 | Knock Control Sensor (Bank 1)     |
| i1 | Hybrid Vehicle Transaxle Assembly |
| i2 | Inverter with Converter Assembly  |

Position of Parts in Engine Compartment (RHD)

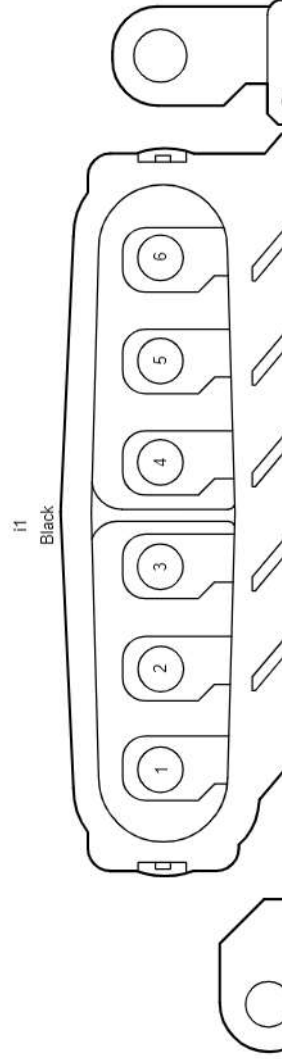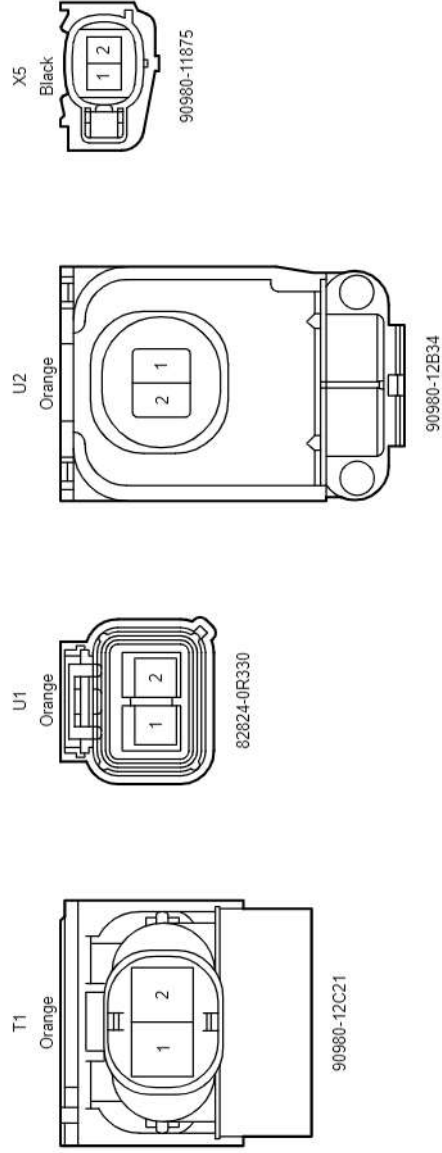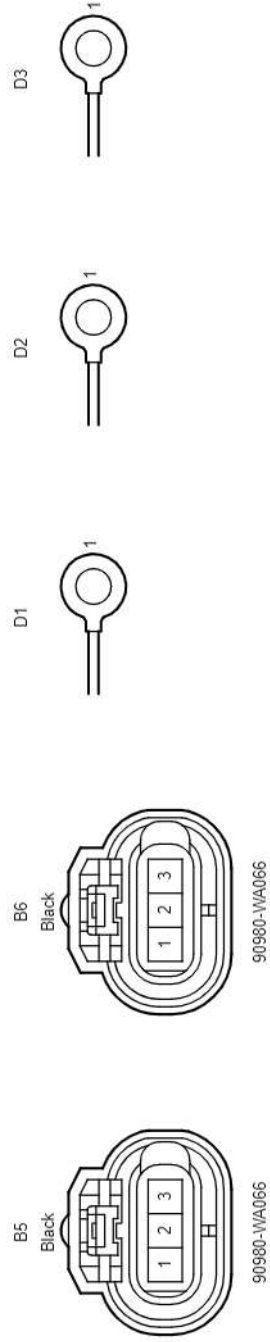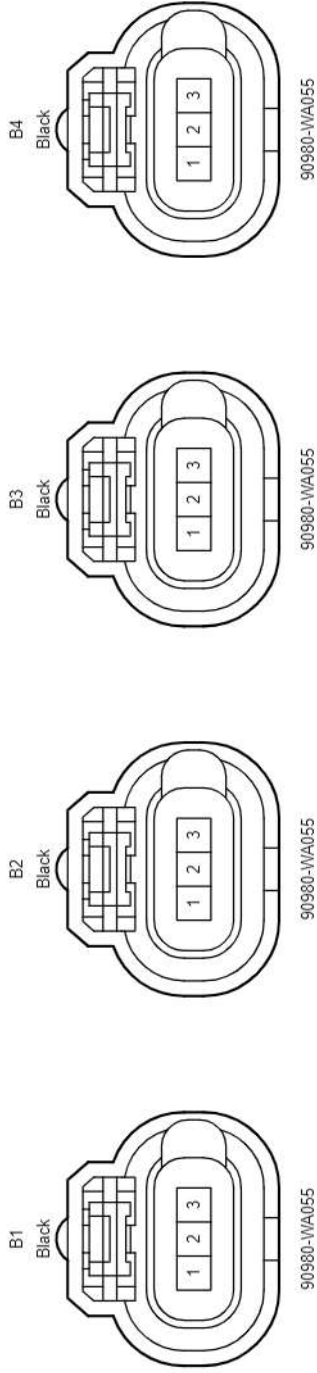


12  
Black

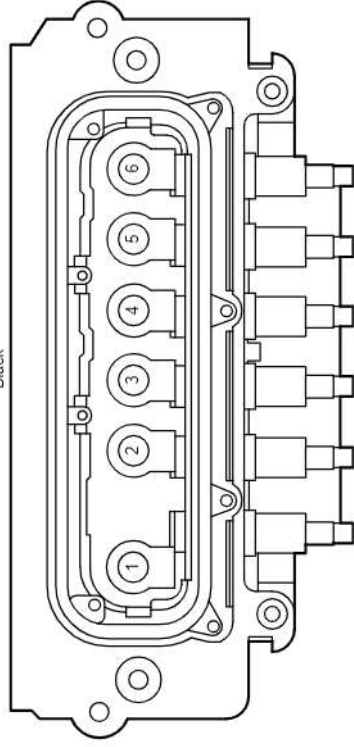

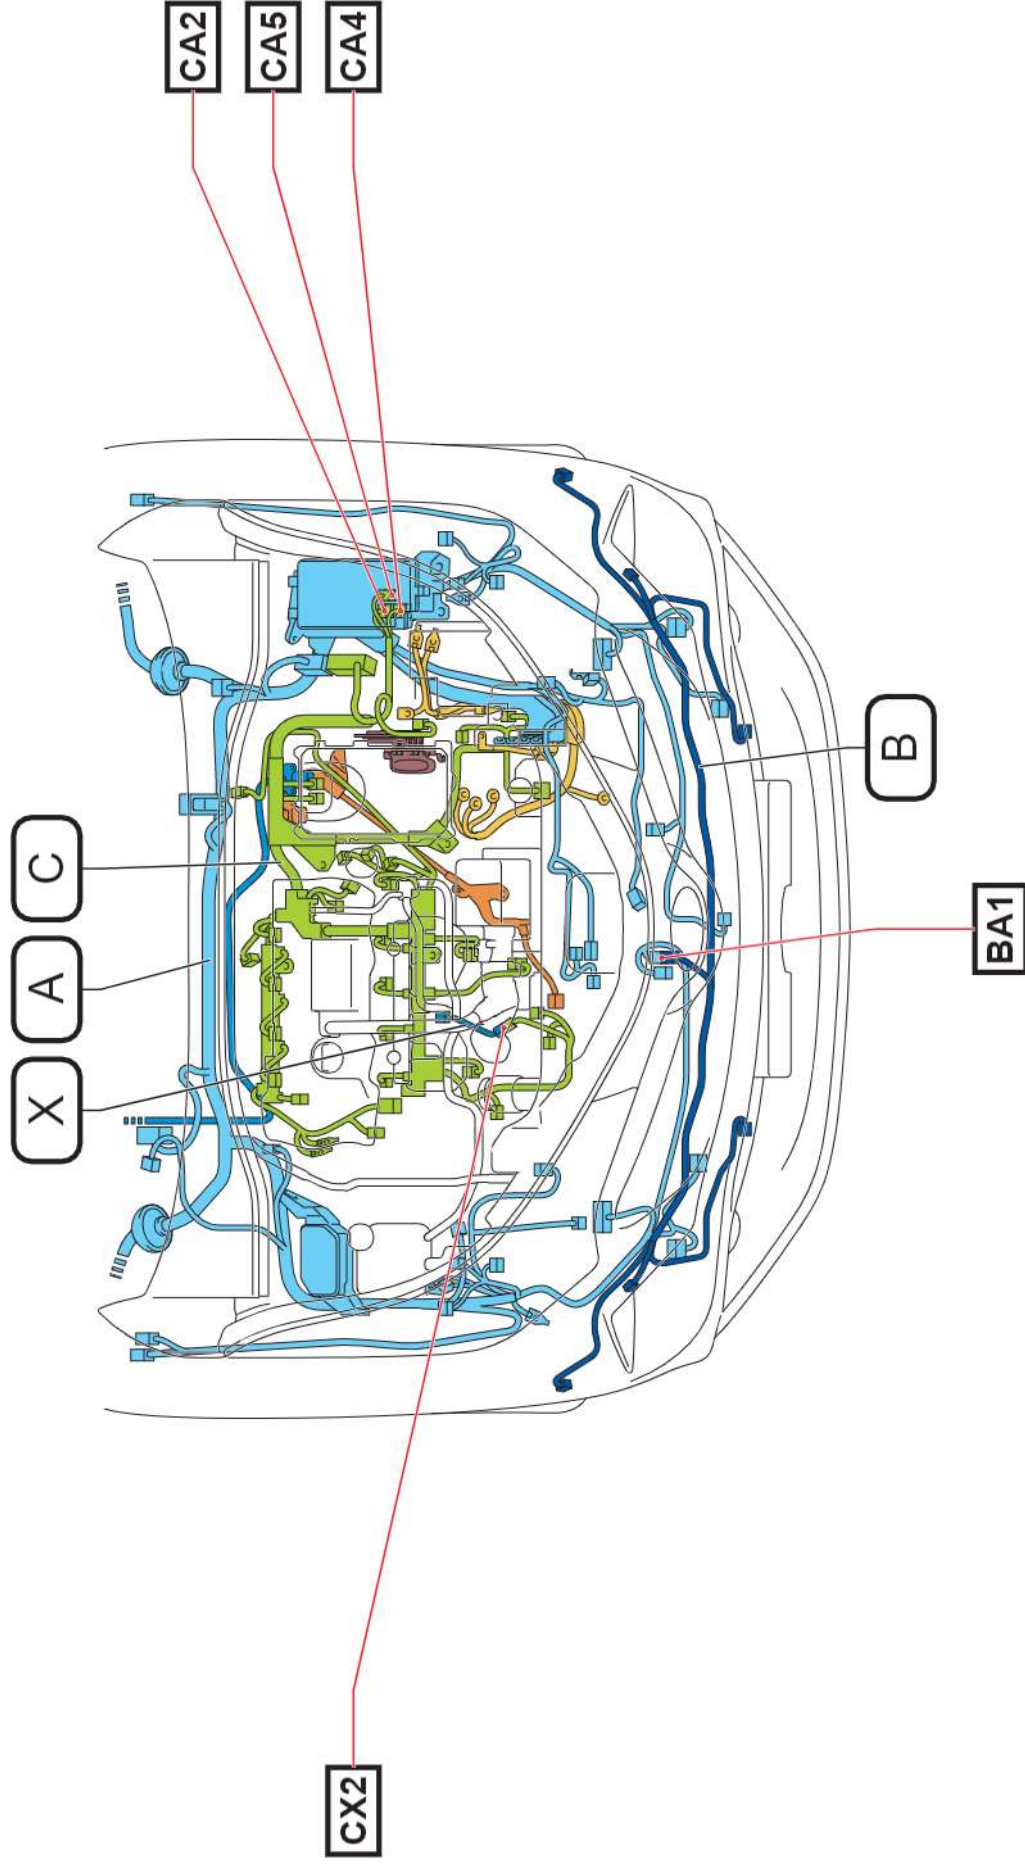


Wire and Wire in Engine Compartment (RHD)

BA1  
White

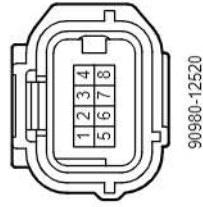


90980-12520

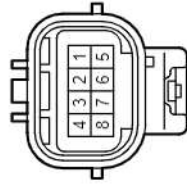


90980-12519

CA2  
Gray

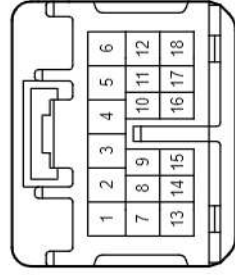


90980-12745

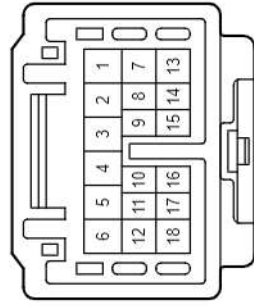


90980-12744

CA4  
Black

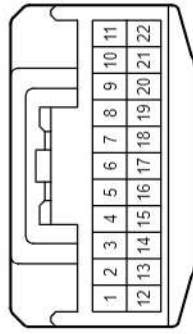


90980-12372

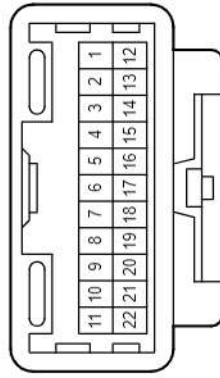


90980-12371

CA5  
White

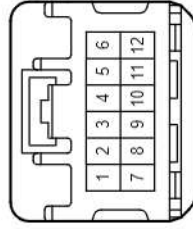


90980-12737

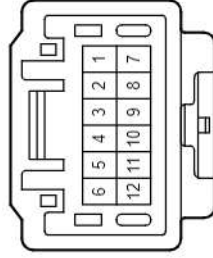


90980-12736


CX2  
Gray

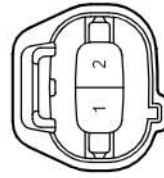


90980-11156

 

90980-11155

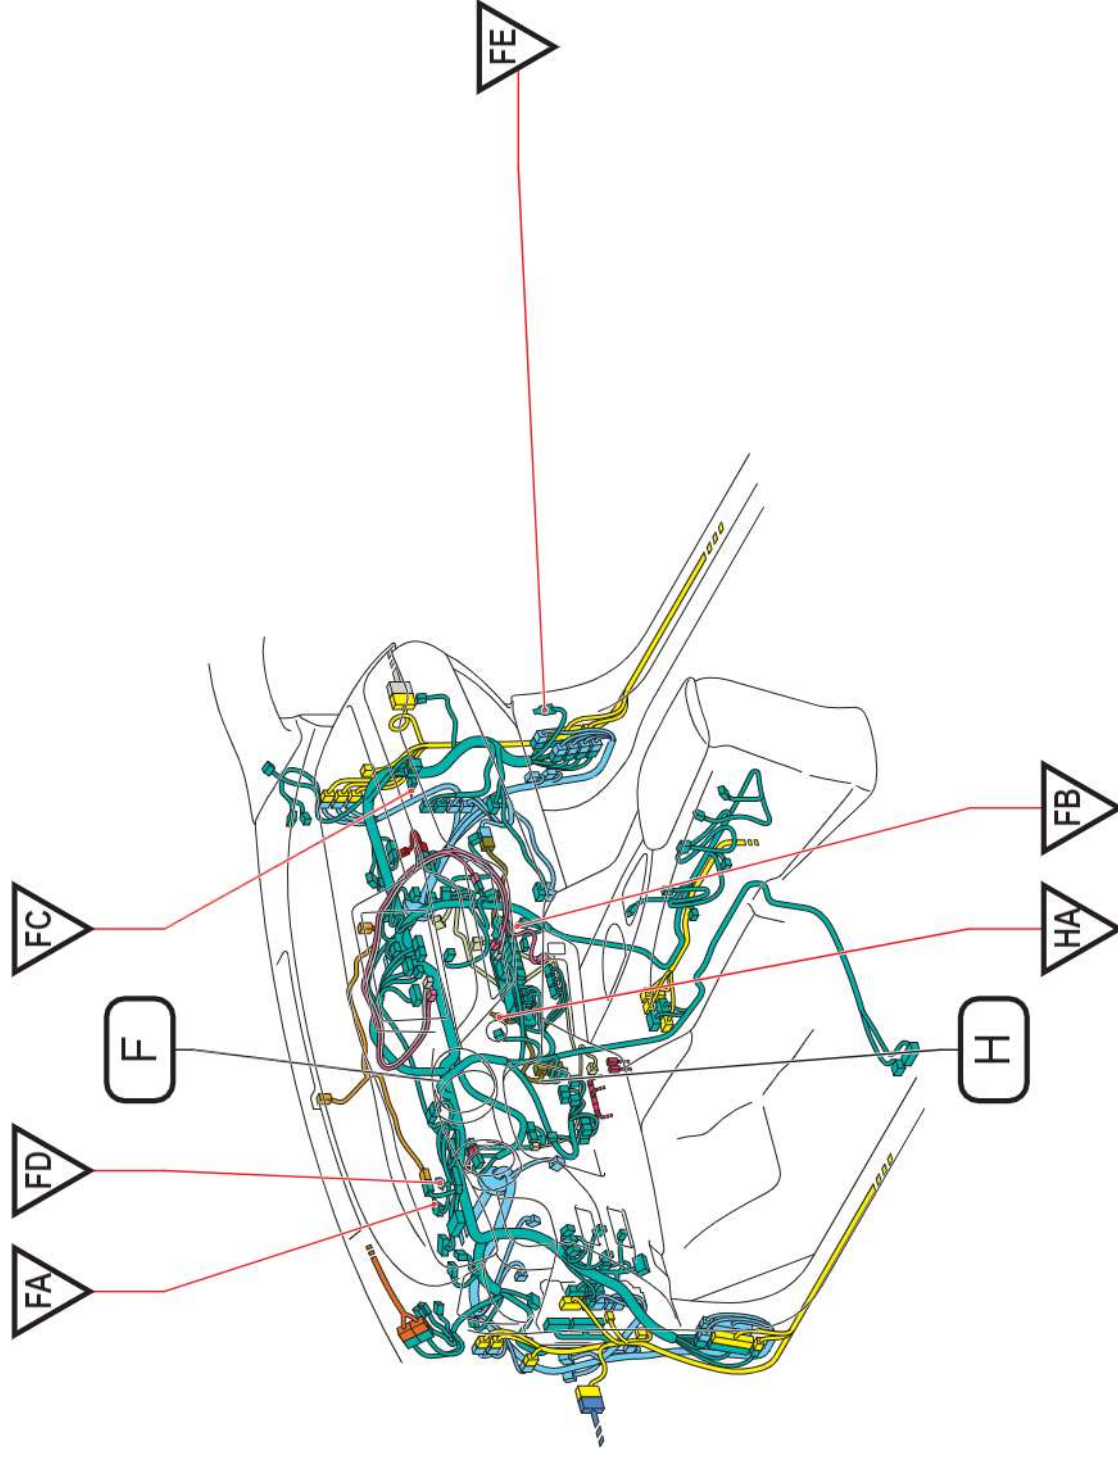

# Position of Parts in Instrument Panel (LHD)

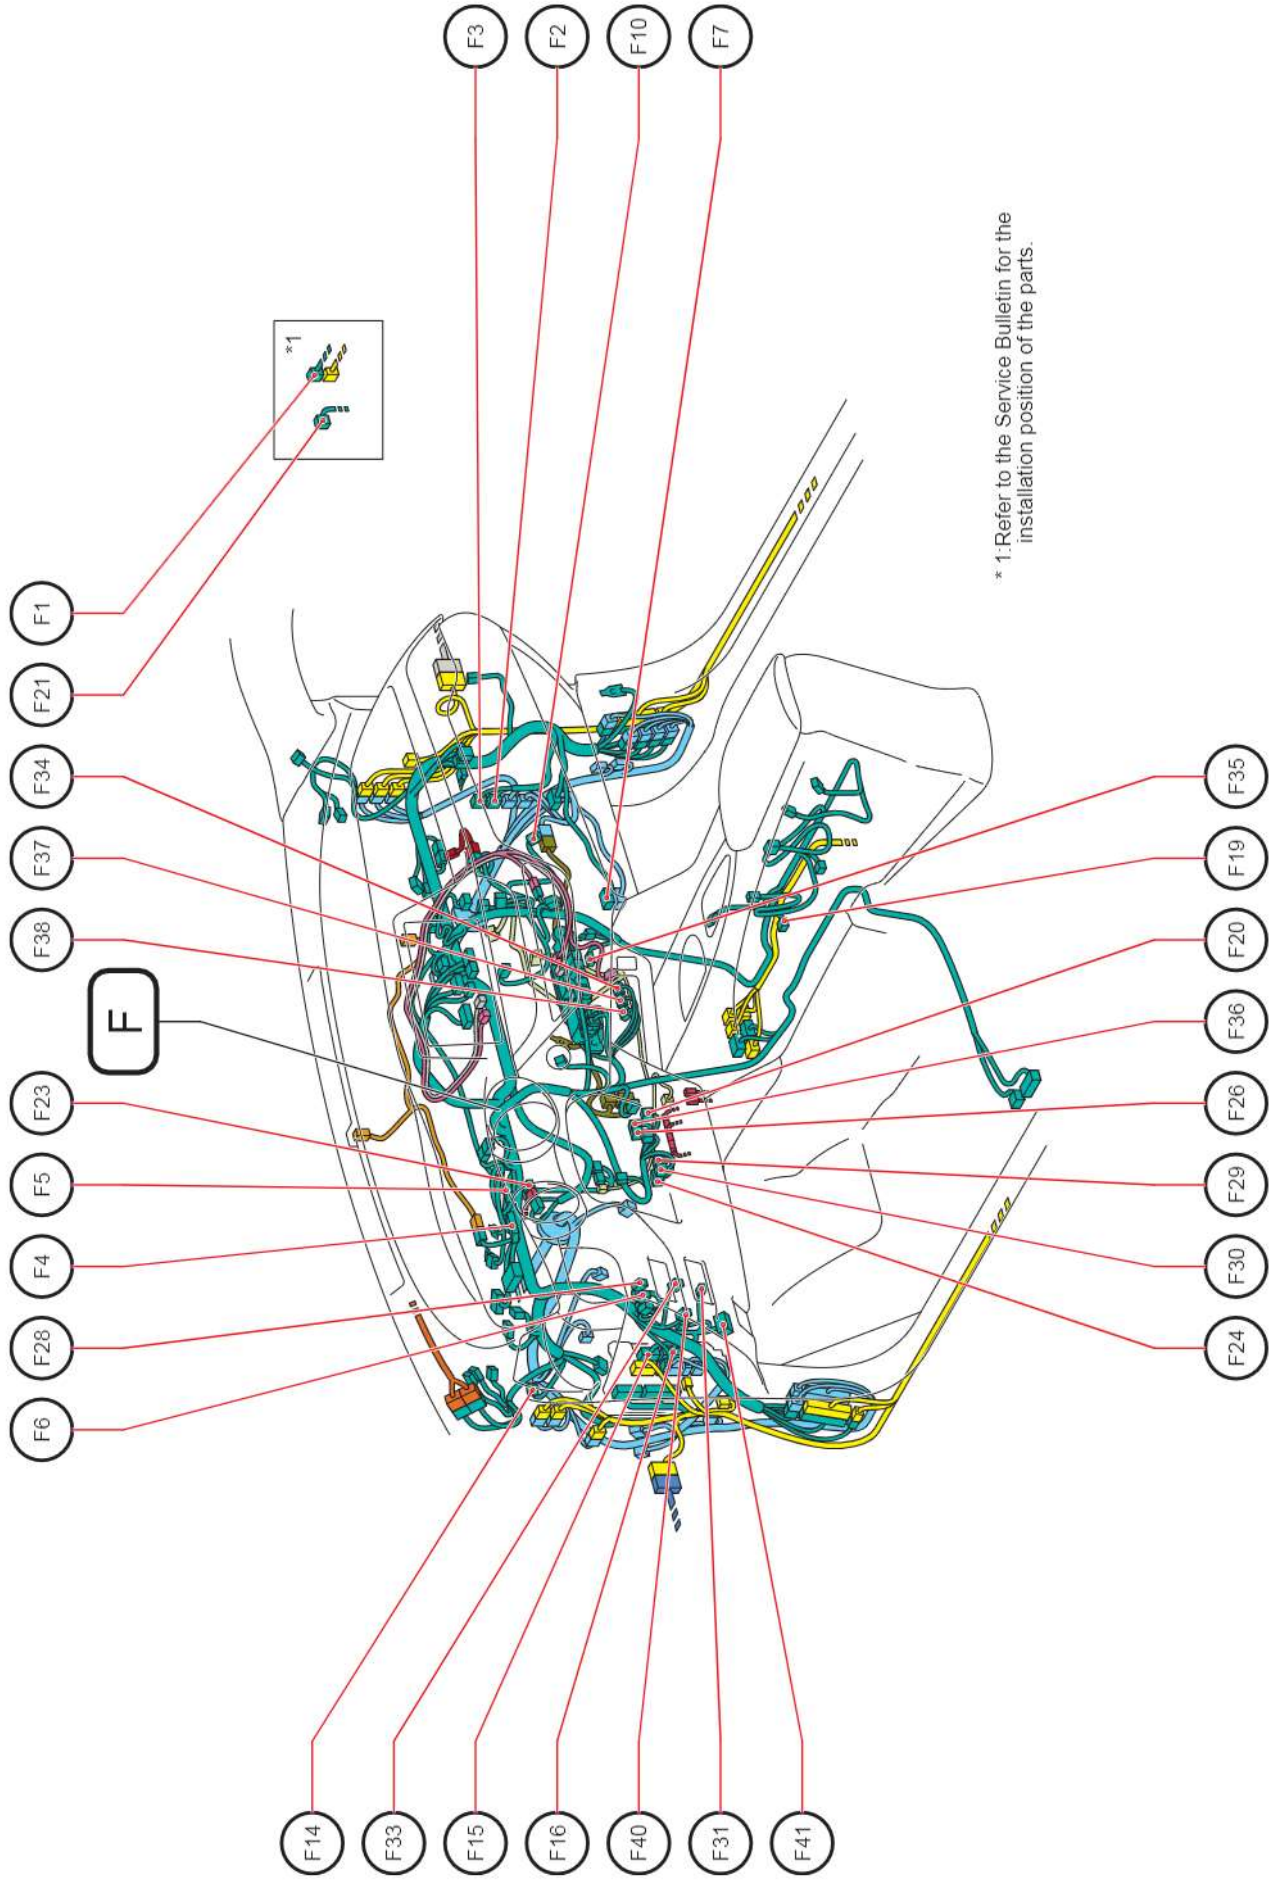


\* 1: Refer to the Service Bulletin for the installation position of the parts.

Position of Parts in Instrument Panel (LHD)

|     |                                              |
|-----|----------------------------------------------|
| F1  | Certification ECU                            |
| F2  | Hybrid Vehicle Control ECU                   |
| F3  | Hybrid Vehicle Control ECU                   |
| F4  | Combination Meter Assembly                   |
| F5  | Combination Meter Assembly                   |
| F6  | Auto High Beam Switch                        |
| F7  | Blower Motor with Fan Sub-Assembly           |
| F10 | Glove Box Light Assembly                     |
| F14 | Double Lock Door Control Relay Assembly      |
| F15 | Main Body ECU                                |
| F16 | Main Body ECU                                |
| F19 | Shift Lock Control Unit Assembly             |
| F20 | Spiral Cable with Sensor Sub-Assembly        |
| F21 | ID Code Box                                  |
| F23 | Power Steering ECU Assembly                  |
| F24 | Headlight Dimmer Switch Assembly             |
| F26 | Windshield Wiper Switch Assembly             |
| F28 | IPA Main Switch Assembly                     |
| F29 | Spiral Cable with Sensor Sub-Assembly        |
| F30 | Spiral Cable with Sensor Sub-Assembly        |
| F31 | No. 1 Instrument Panel Airbag Assembly Lower |
| F33 | Steering Heater Switch                       |
| F34 | Clearance Warning ECU Assembly               |
| F35 | No. 1 Clearance Warning Buzzer               |
| F36 | Windshield Wiper Switch Assembly             |
| F37 | Clearance Warning ECU Assembly               |
| F38 | Clearance Warning ECU Assembly               |
| F40 | Fuel Lid Opener Switch                       |
| F41 | DLC3                                         |


# Position of Parts in Instrument Panel (LHD)

F1  
White

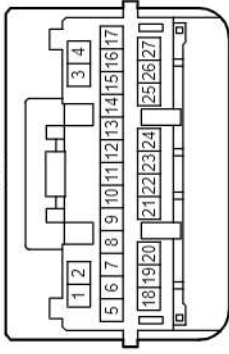


90980-12B78

F2  
Gray

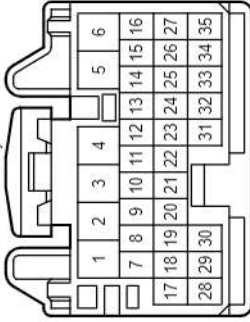


90980-12429

F3  
Gray

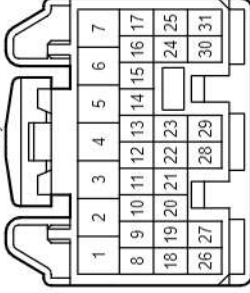


90980-12431

F4  
Black

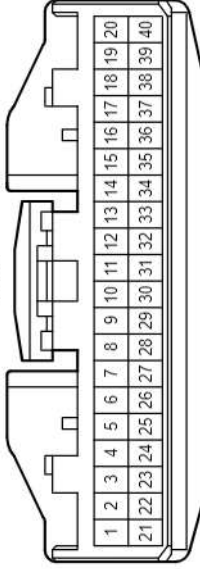


90980-12557

F5  
Black

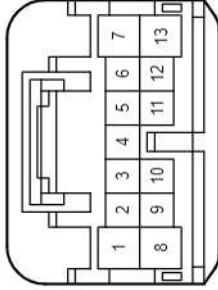


90980-12767

F6  
White

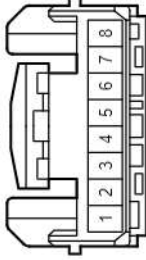

90980-12558

F7  
Black

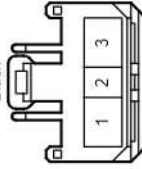


90980-11667

F10  
Black




90980-11918

F14  
White

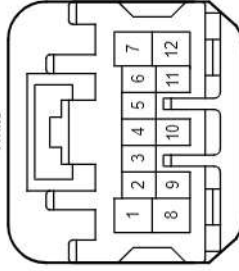


90980-12812



















F15  
White

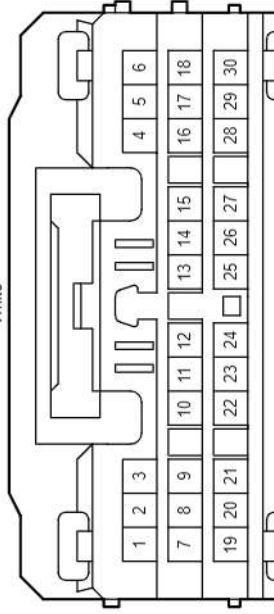


F16  
White

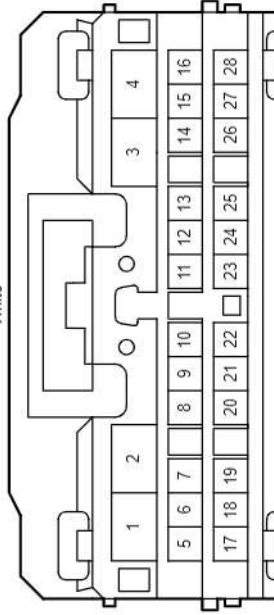

  Position of Parts in Instrument Panel (LHD)

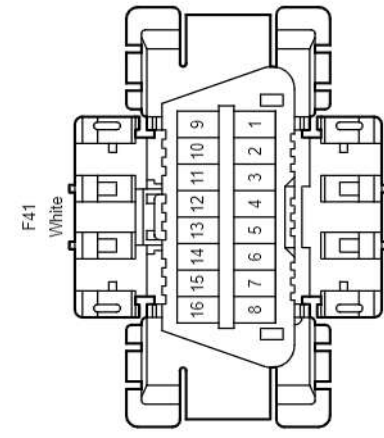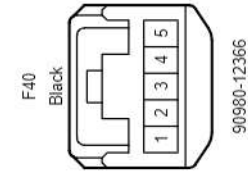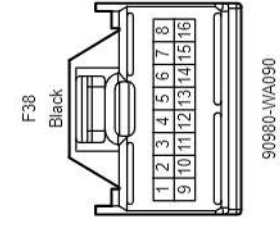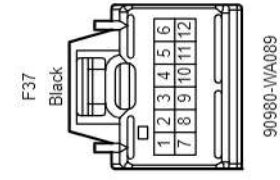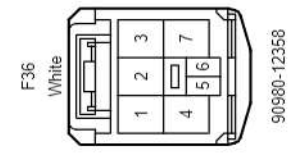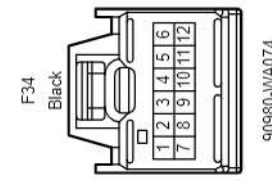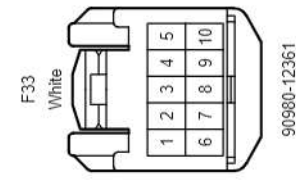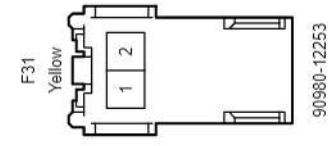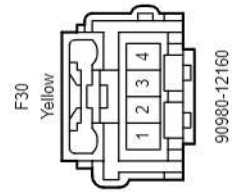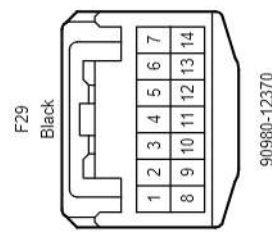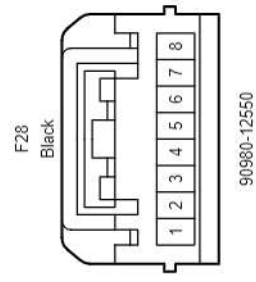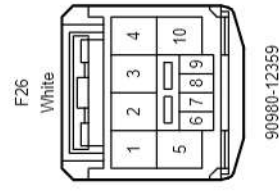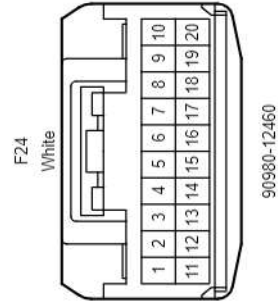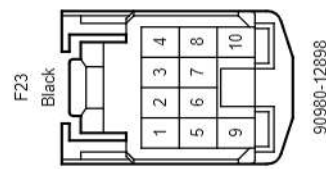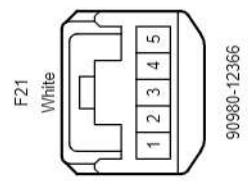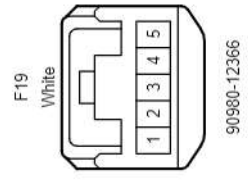


Position of Parts in Instrument Panel (LHD)

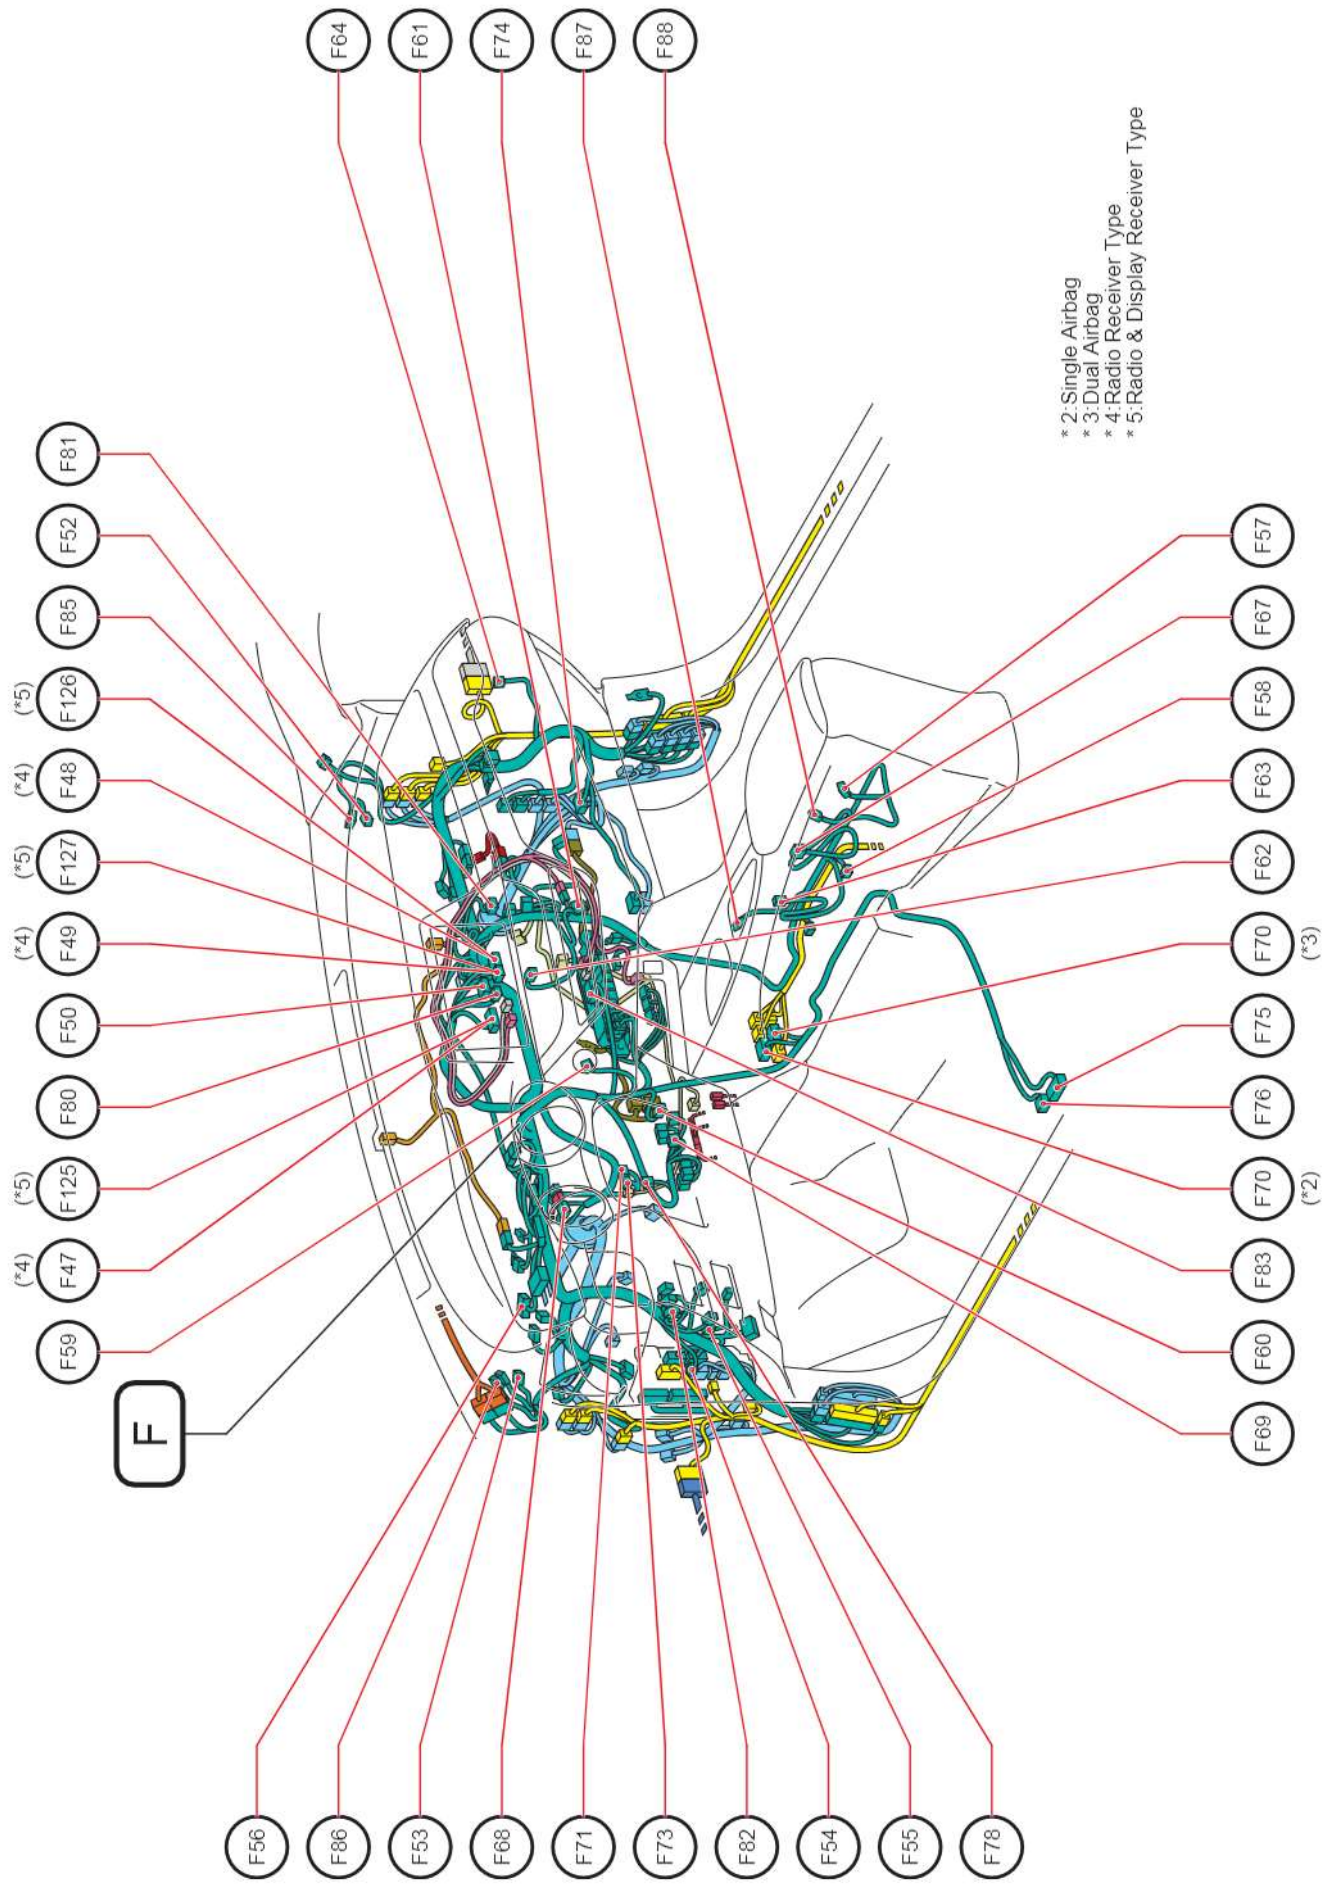


## Position of Parts in Instrument Panel (LHD)

|      |                                                                                    |  |
|------|------------------------------------------------------------------------------------|--|
| F47  | Radio Receiver Assembly                                                            |  |
| F48  | Radio Receiver Assembly                                                            |  |
| F49  | Radio Receiver Assembly                                                            |  |
| F50  | Radio & Display Receiver Assembly                                                  |  |
| F52  | Front No. 2 Speaker Assembly RH                                                    |  |
| F53  | Front No. 2 Speaker Assembly LH                                                    |  |
| F54  | Pre-Collision City Buzzer                                                          |  |
| F55  | No. 2 Clearance Warning Buzzer                                                     |  |
| F56  | Windshield Wiper Relay Assembly                                                    |  |
| F57  | No. 1 Power Outlet Socket Assembly                                                 |  |
| F58  | No. 1 Indoor Electrical Key Antenna Assembly                                       |  |
| F59  | Power Switch                                                                       |  |
| F60  | Cooler (Room Temperature Sensor) Thermistor                                        |  |
| F61  | A/C Control Assembly                                                               |  |
| F62  | Hazard Warning Signal Switch Assembly                                              |  |
| F63  | Shift Position Indicator                                                           |  |
| F64  | Airbag Cut Off Switch Cylinder Sub-Assembly                                        |  |
| F67  | Electric Parking Brake Switch Assembly                                             |  |
| F68  | Power Steering ECU Assembly                                                        |  |
| F69  | Steering Sensor                                                                    |  |
| F70  | Airbag Sensor Assembly                                                             |  |
| F71  | A/C Amplifier Assembly                                                             |  |
| F73  | A/C Amplifier Assembly                                                             |  |
| F74  | Network Gateway ECU                                                                |  |
| F75  | Stereo Component Amplifier Assembly                                                |  |
| F76  | Stereo Component Amplifier Assembly                                                |  |
| F78  | Steering Lock Actuator Assembly (Steering Lock Actuator or Upper Bracket Assembly) |  |
| F80  | Radio & Display Receiver Assembly                                                  |  |
| F81  | Clock Assembly                                                                     |  |
| F82  | Headlight Leveling Switch                                                          |  |
| F83  | Navigation ECU                                                                     |  |
| F85  | Front No. 2 Speaker Assembly RH                                                    |  |
| F86  | Front No. 2 Speaker Assembly LH                                                    |  |
| F87  | Front Instrument Cluster Finish Panel Garnish Center                               |  |
| F88  | Rear Instrument Cluster Finish Panel Garnish Center                                |  |
| F125 | Radio & Display Receiver Assembly                                                  |  |
| F126 | Radio & Display Receiver Assembly                                                  |  |
| F127 | Radio & Display Receiver Assembly                                                  |  |


Position of Parts in Instrument Panel (LHD)

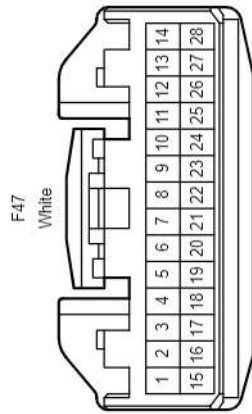


90980-12555

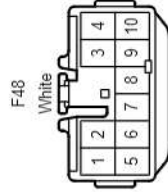


90980-10997

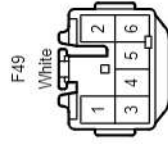


90980-10996

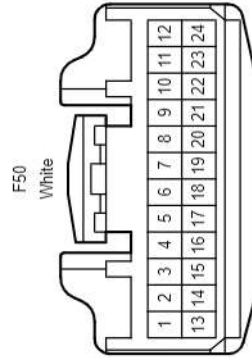


90980-12554

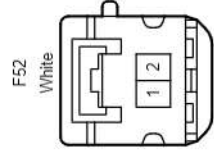


90980-12808

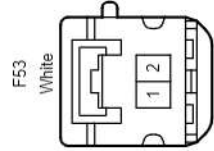


90980-12808

 


90980-10860

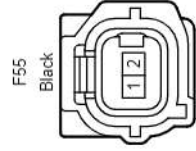


90980-12572

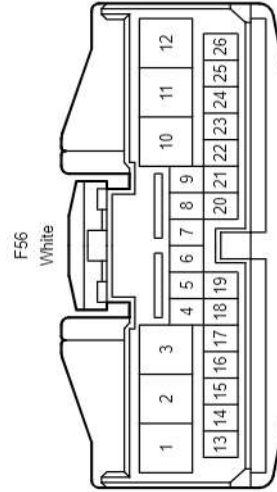


90980-12444

 

90980-12498

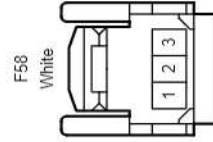


90980-12795

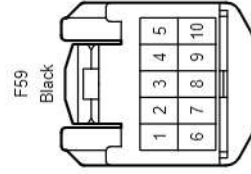


90980-12361




90980-11918

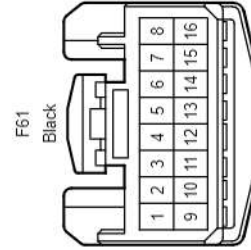

82824-33470

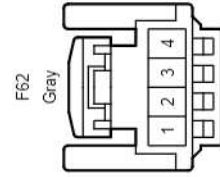

90980-12876

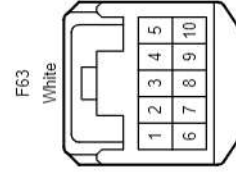

90980-12368



90980-12063

F67  
Black


F68  
Black

F69  
Blue

F70  
Yellow


# Position of Parts in Instrument Panel (LHD)

F71  
White

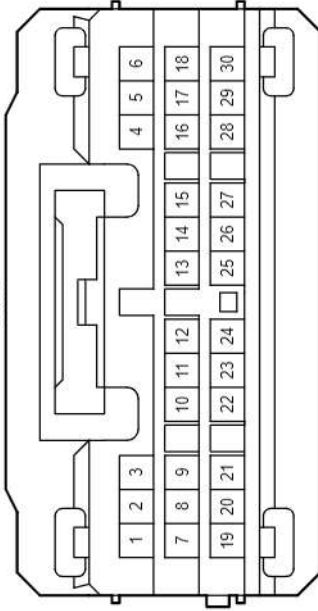


90980-12761

F73  
White

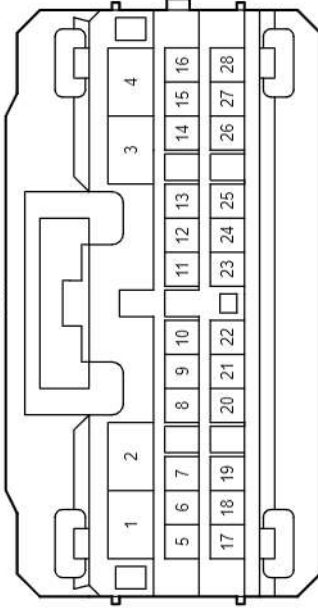


90980-12760

F74  
Black

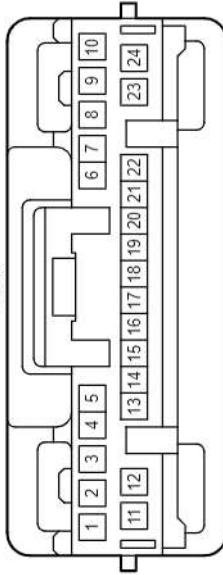


90980-12912

F75  
White

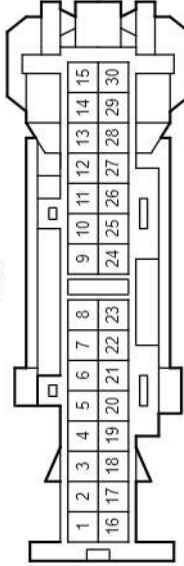


90980-12979

F76  
White

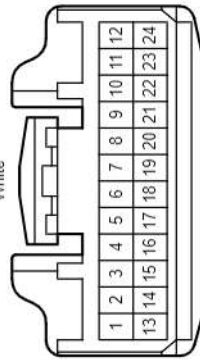


90980-12554

F78  
Black

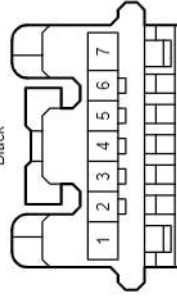


90980-12092

F81  
White

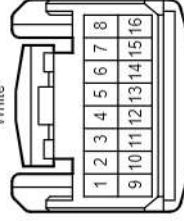

90980-12553

F80  
White

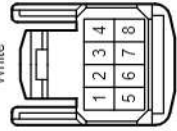


90980-12551

F82  
Black




90980-11950

F83  
Black

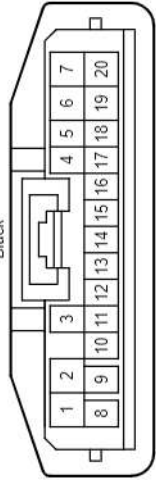


90980-12976

 F85  
White




90980-12304

 F86  
White



90980-12304

Position of Parts in Instrument Panel (LHD)

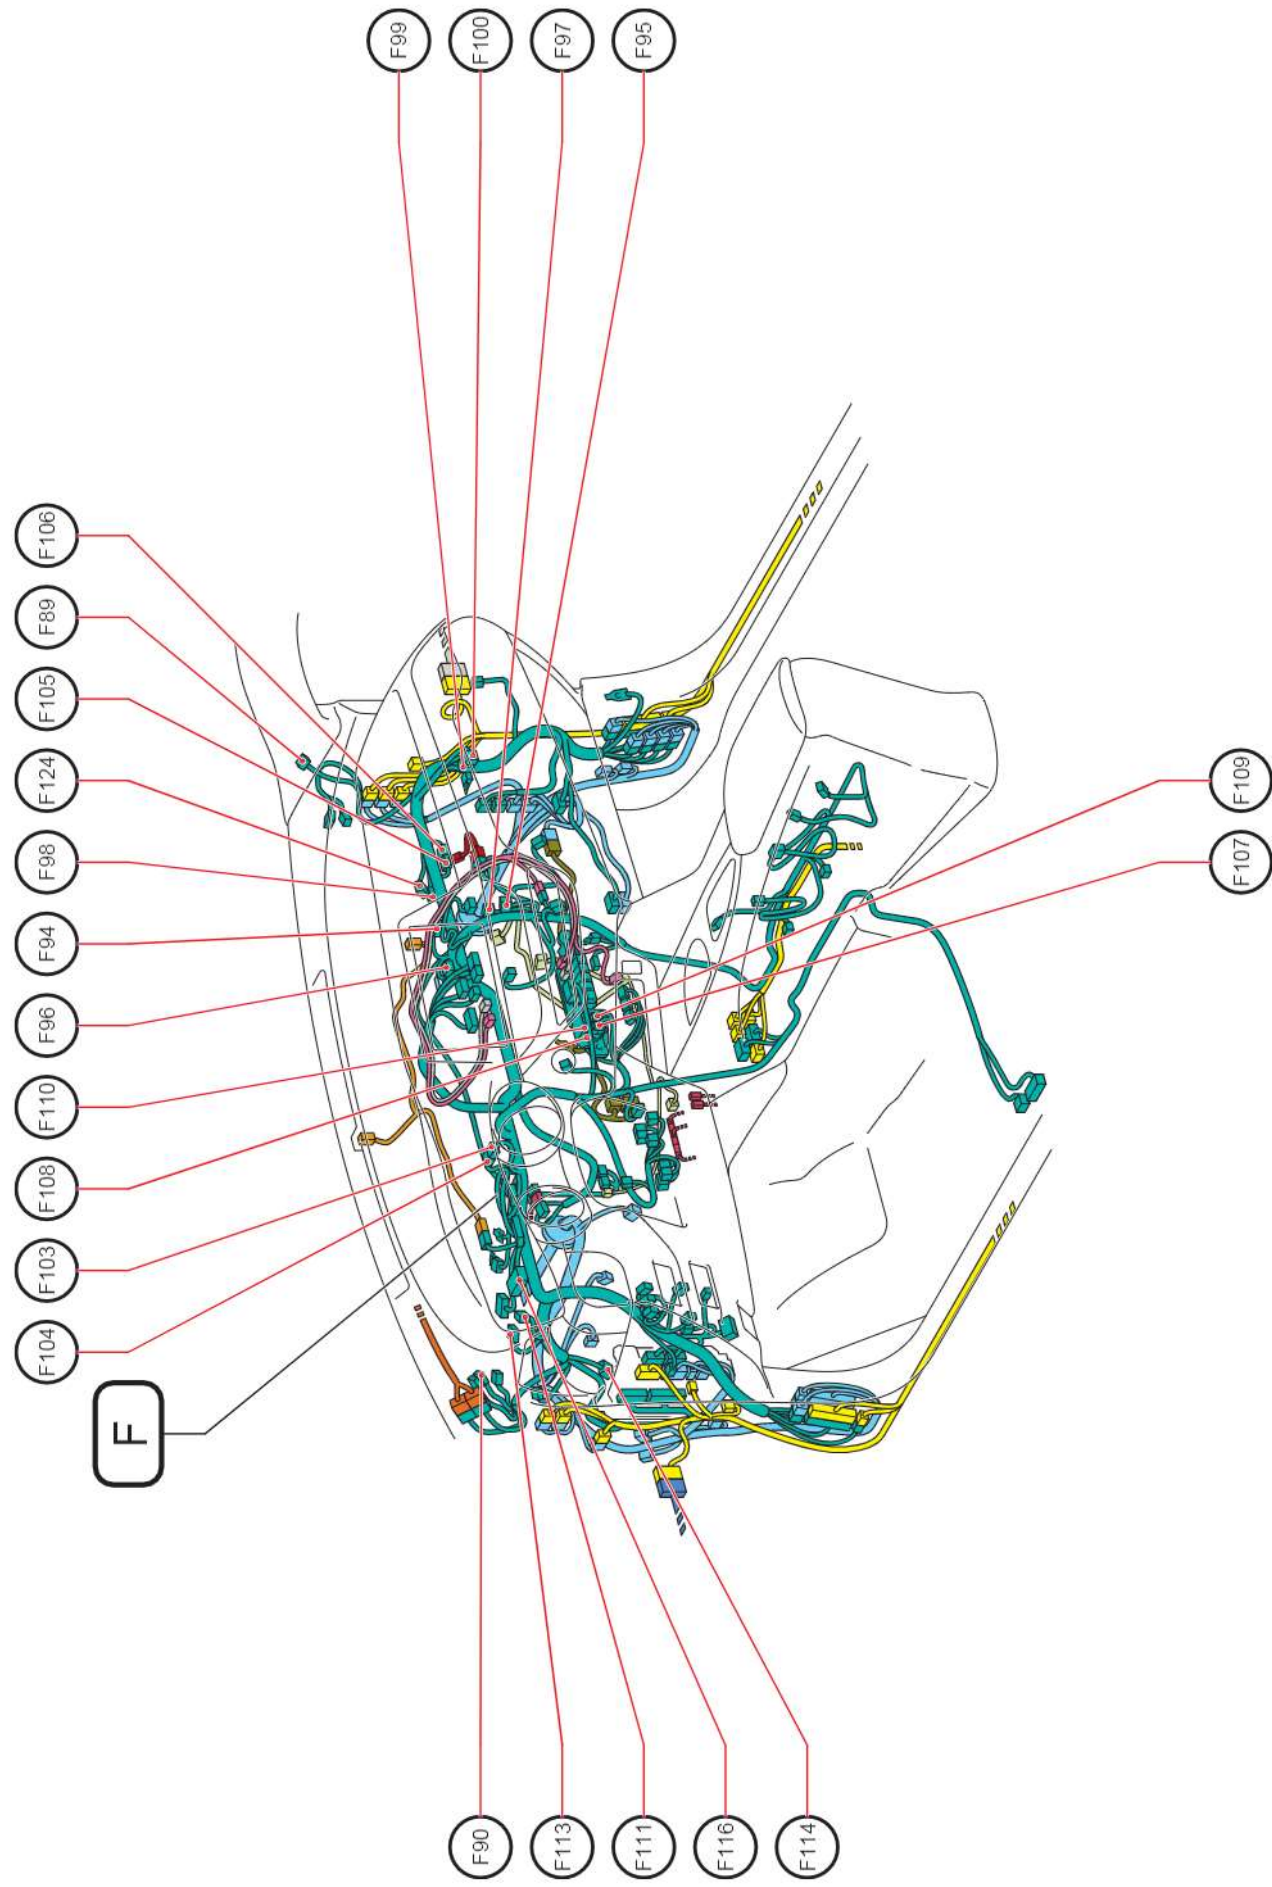


Position of Parts in Instrument Panel (LHD)

|      |                                 |
|------|---------------------------------|
| F89  | Front No. 3 Speaker Assembly RH |
| F90  | Front No. 3 Speaker Assembly LH |
| F94  | No. 8 Junction Connector        |
| F95  | No. 9 Junction Connector        |
| F96  | No. 10 Junction Connector       |
| F97  | No. 11 Junction Connector       |
| F98  | No. 12 Junction Connector       |
| F99  | No. 13 Junction Connector       |
| F100 | No. 14 Junction Connector       |
| F103 | No. 21 Junction Connector       |
| F104 | No. 21 Junction Connector       |
| F105 | No. 22 Junction Connector       |
| F106 | No. 22 Junction Connector       |
| F107 | No. 23 Junction Connector       |
| F108 | No. 23 Junction Connector       |
| F109 | No. 24 Junction Connector       |
| F110 | No. 24 Junction Connector       |
| F111 | No. 1 CAN Junction Connector    |
| F113 | No. 2 CAN Junction Connector    |
| F114 | No. 3 CAN Junction Connector    |
| F116 | No. 4 CAN Junction Connector    |
| F124 | No. 5 CAN Junction Connector    |


Position of Parts in Instrument Panel (LHD)

F89  
White

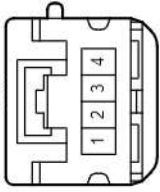


90980-12733

F90  
White

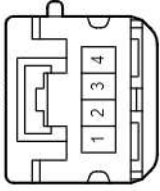


90980-12733


F94  
Black

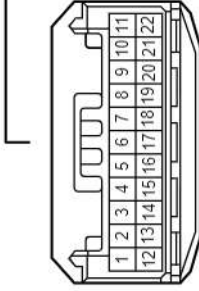


90980-12B54

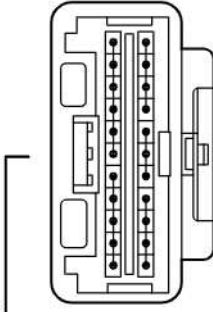


F95  
Black

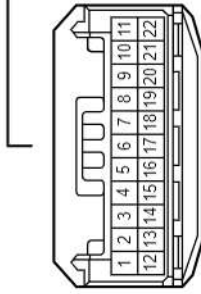


90980-12B54

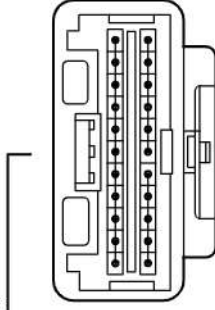


F96  
Black

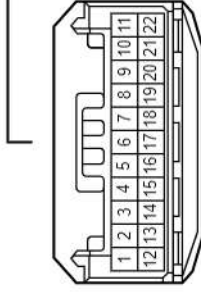


90980-12B54

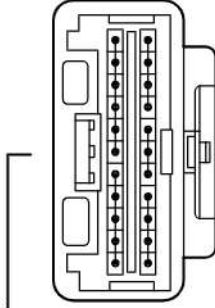


F97  
Black

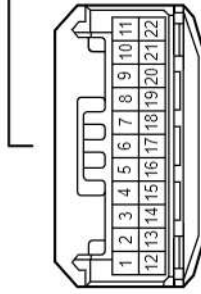


90980-12B54

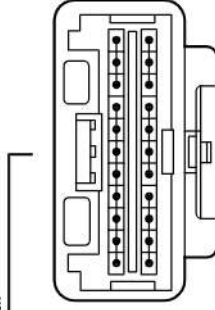


F98  
Black

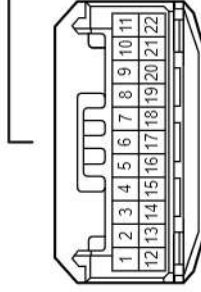


90980-12B54

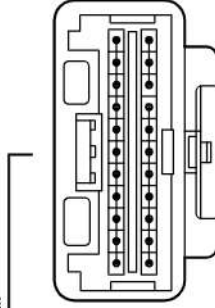


F99  
Black

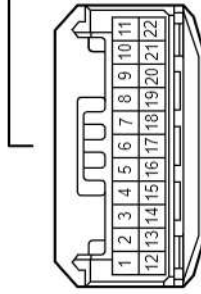


90980-12B54

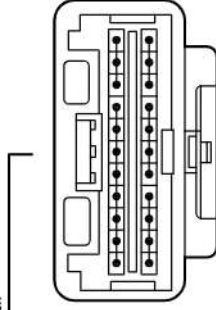

F100  
White

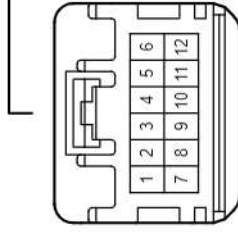


90980-12737

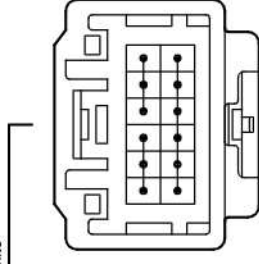


Position of Parts in Instrument Panel (LHD)

F104  
White

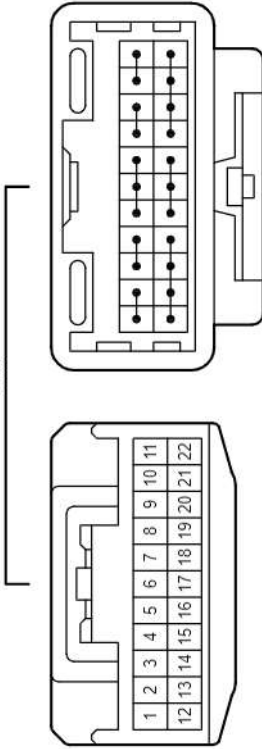


90980-12372

F105  
White

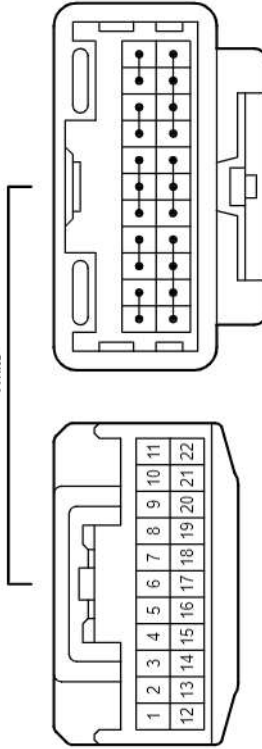


90980-12372

F106  
White

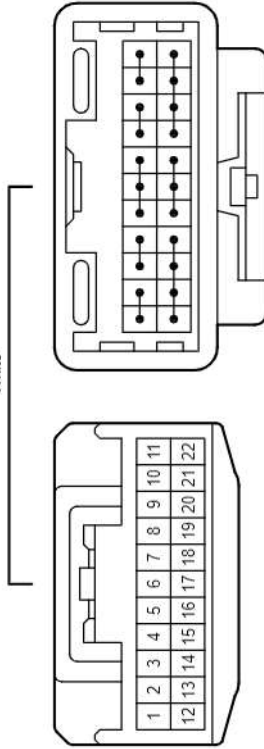


90980-12372

F107  
White

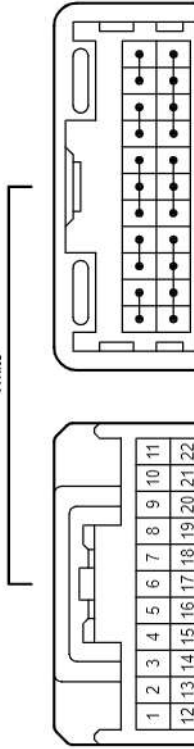


Position of Parts in Instrument Panel (LHD)

F108  
White

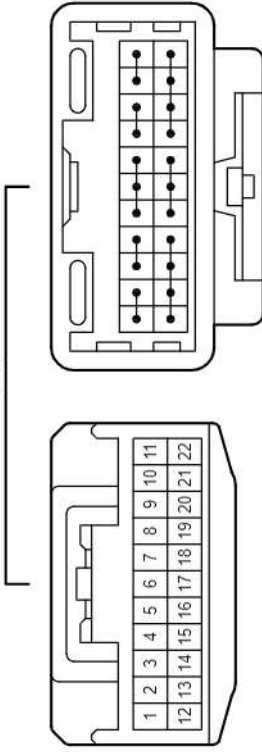


90980-12372

F109  
Black

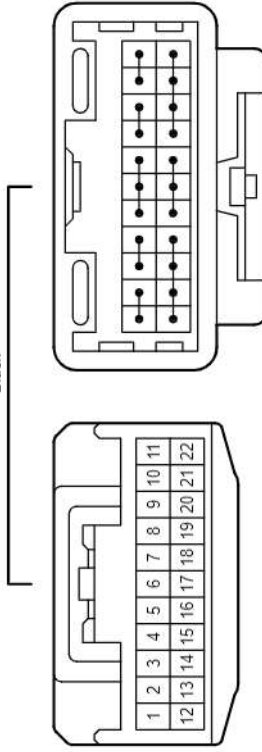


90980-12372

F110  
Black

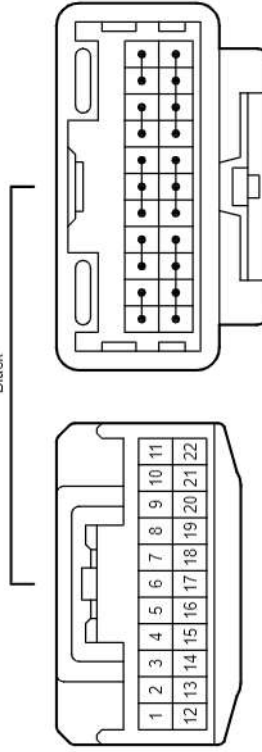

90980-12372


F111  
White

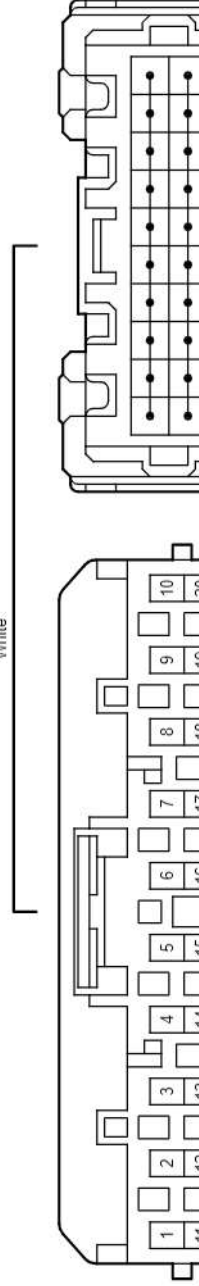


Position of Parts in Instrument Panel (LHD)

F113

Black

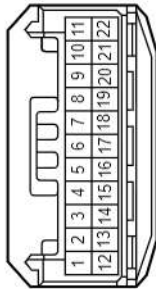


90980-12B54

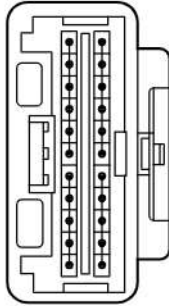


F114

Black

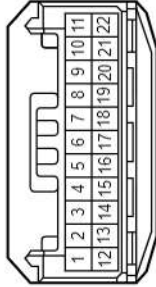


90980-12B54

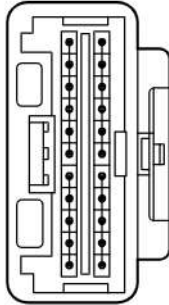


F116

White

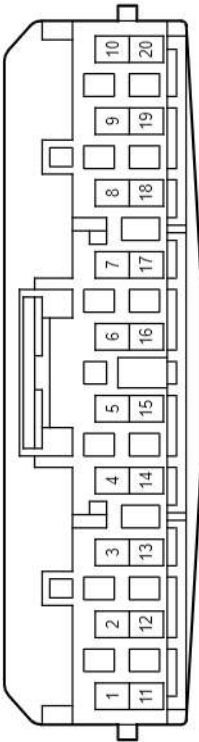


90980-12A58

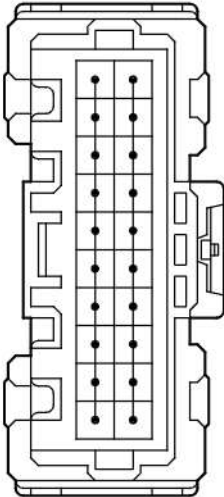



F124

Black

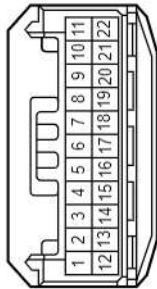

90980-12B54













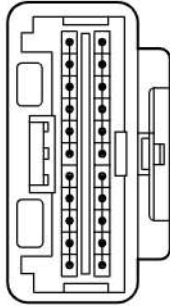


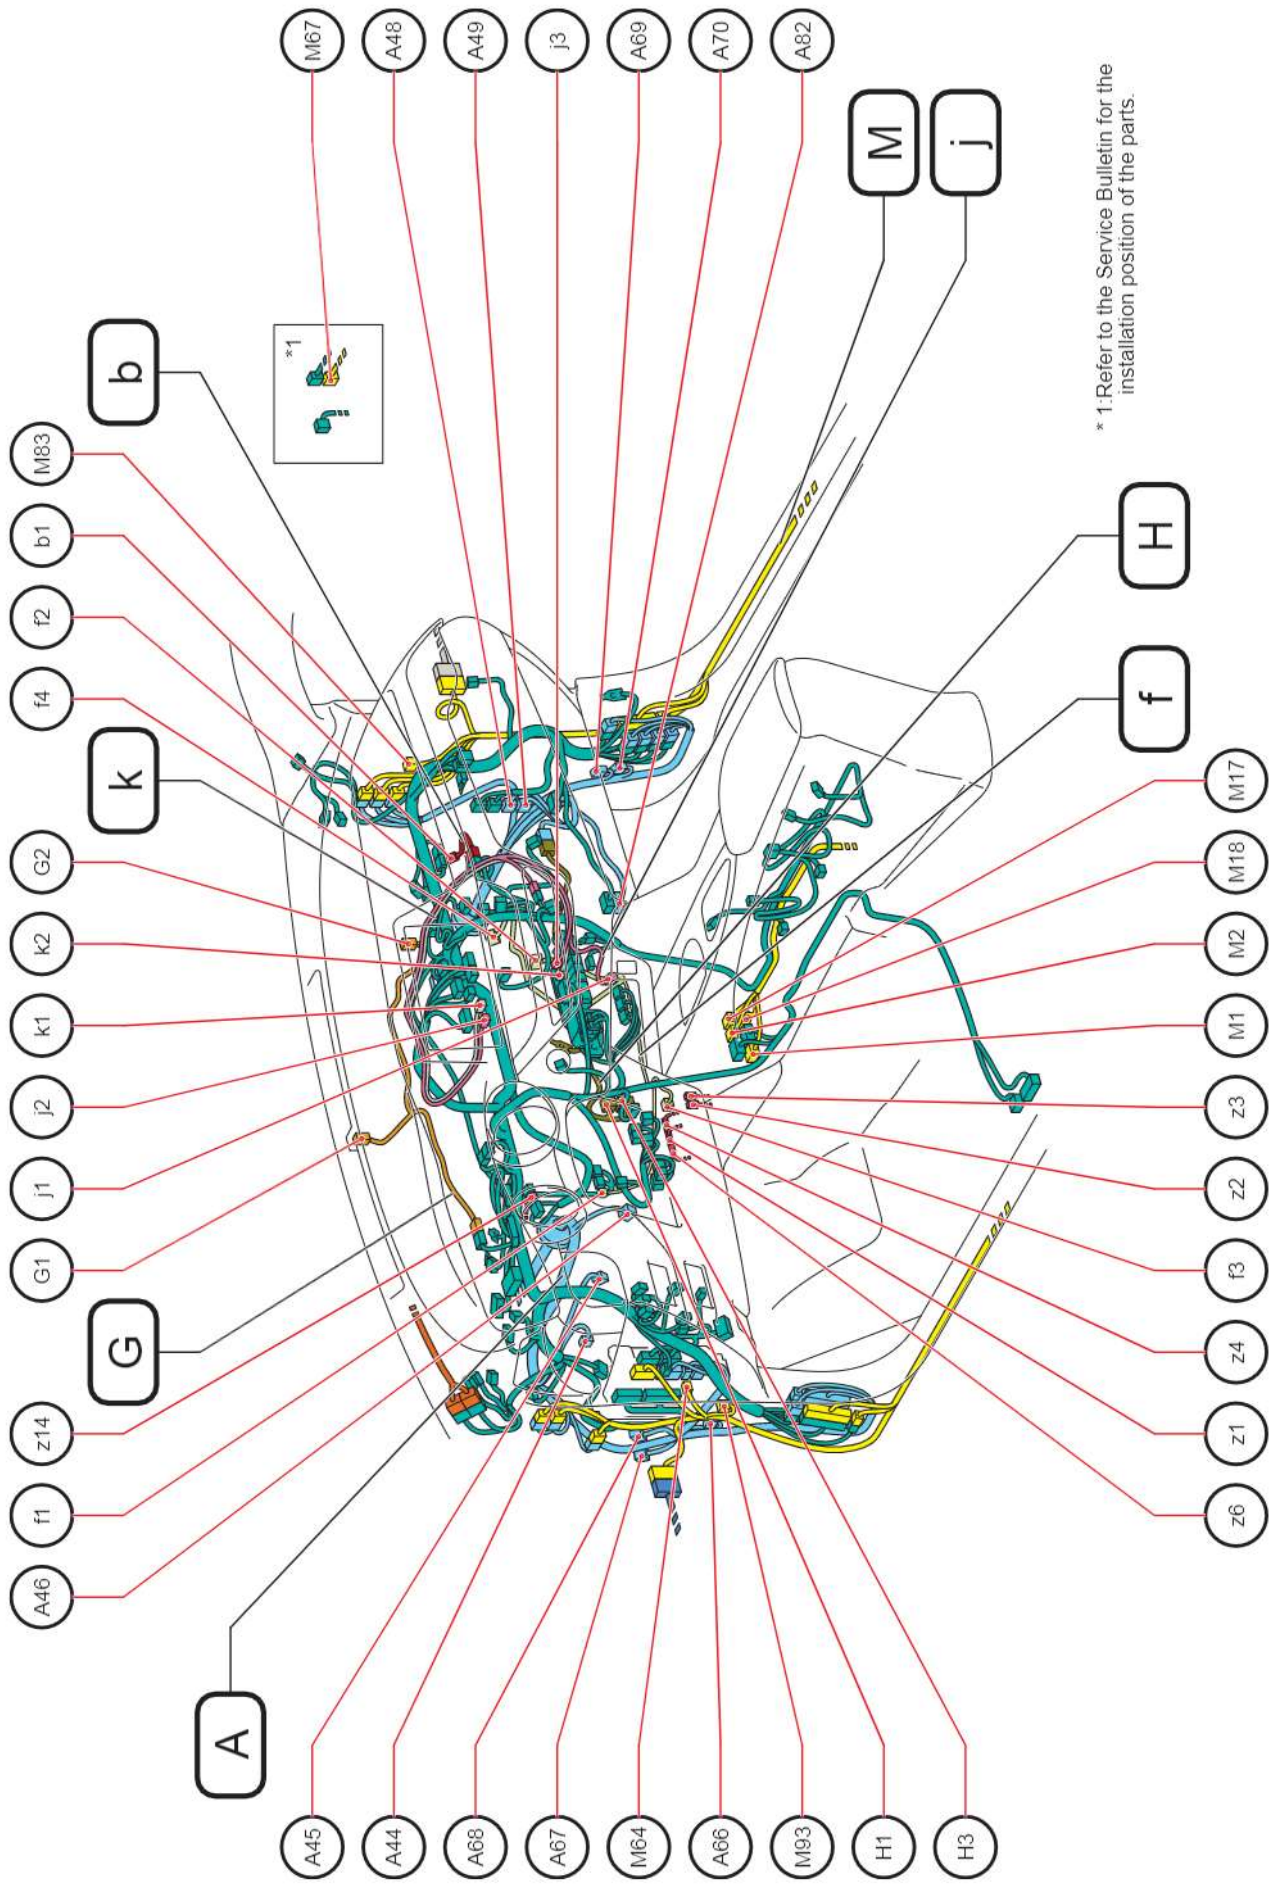


## Position of Parts in Instrument Panel (LHD)

|     |                                                                                          |
|-----|------------------------------------------------------------------------------------------|
| A44 | Brake Pedal Stroke Sensor Assembly                                                       |
| A45 | Stop Light Switch Assembly                                                               |
| A46 | Accelerator Pedal Sensor Assembly                                                        |
| A48 | Hybrid Vehicle Control ECU                                                               |
| A49 | Hybrid Vehicle Control ECU                                                               |
| A66 | No. 1 Junction Connector                                                                 |
| A67 | No. 2 Junction Connector                                                                 |
| A68 | No. 3 Junction Connector                                                                 |
| A69 | No. 4 Junction Connector                                                                 |
| A70 | No. 5 Junction Connector                                                                 |
| A82 | Blower Motor with Fan Sub-Assembly                                                       |
| G1  | Automatic Light Control Sensor                                                           |
| G2  | Ion Generator Sub-Assembly                                                               |
| H1  | Quick Heater Assembly                                                                    |
| H3  | Quick Heater Assembly                                                                    |
| M1  | Airbag Sensor Assembly                                                                   |
| M2  | Airbag Sensor Assembly                                                                   |
| M17 | Airbag Sensor Assembly                                                                   |
| M18 | Airbag Sensor Assembly                                                                   |
| M64 | Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)                              |
| M67 | Certification ECU                                                                        |
| M83 | No. 27 Junction Connector                                                                |
| M93 | No. 28 Junction Connector                                                                |
| b1  | Instrument Panel Passenger without Door Airbag Assembly                                  |
| f1  | A/C Amplifier Assembly                                                                   |
| f2  | No. 1 A/C Radiator Damper Servo Sub-Assembly                                             |
| f3  | No. 1 Cooler Thermistor                                                                  |
| f4  | No. 2 A/C Radiator Damper Servo Sub-Assembly                                             |
| j1  | No. 1 Stereo Jack Adapter Assembly                                                       |
| j2  | Radio & Display Receiver Assembly                                                        |
| j3  | Navigation ECU                                                                           |
| k1  | Radio & Display Receiver Assembly                                                        |
| k2  | Navigation ECU                                                                           |
| z1  | Steering Pad Switch Assembly , Spiral Cable with Sensor Sub-Assembly                     |
| z2  | Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly |
| z3  | Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly |
| z4  | Cruise Control Switch Wire , Spiral Cable with Sensor Sub-Assembly                       |
| z6  | Steering Heater Switch , Spiral Cable with Sensor Sub-Assembly                           |
| z14 | Electric Power Steering Column Sub-Assembly , Power Steering ECU Assembly                |


Position of Parts in Instrument Panel (LHD)

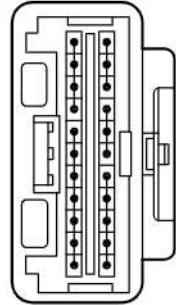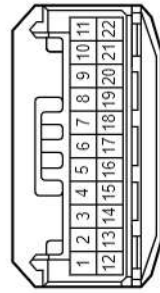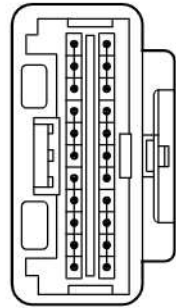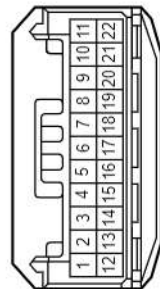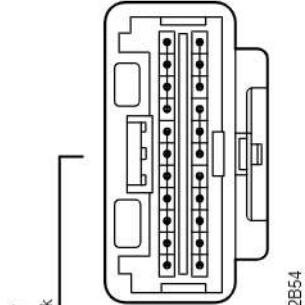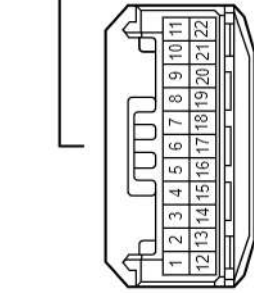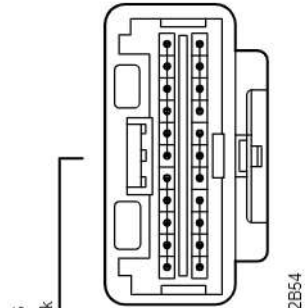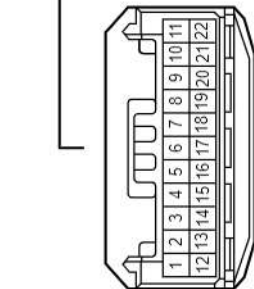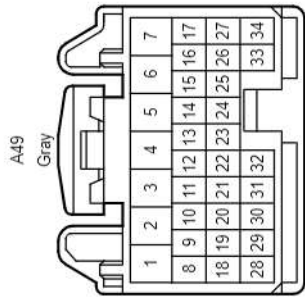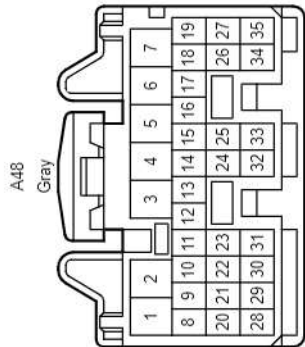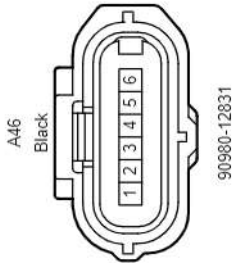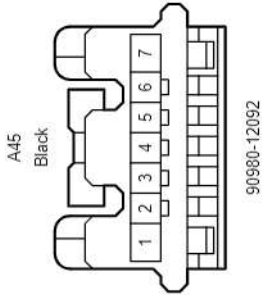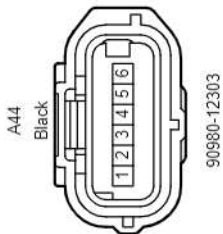


# Position of Parts in Instrument Panel (LHD)

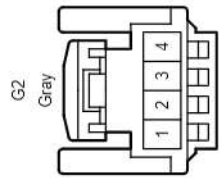


90980-12876

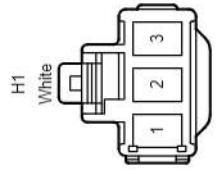


90980-10956

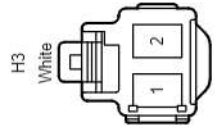


90980-10903

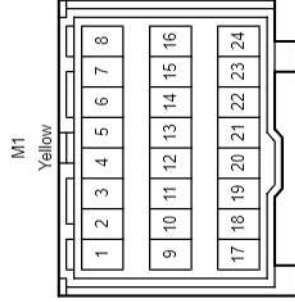


90980-12392

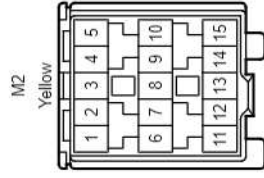


90980-12449

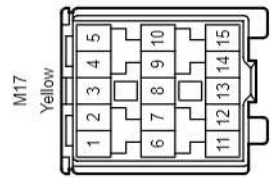


90980-12450

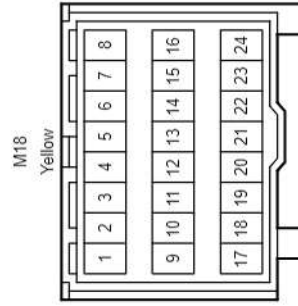

90980-12390

 


90980-11142

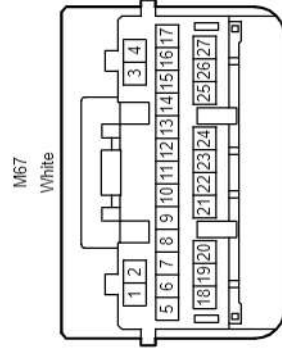


90980-12B77


M83  
Black

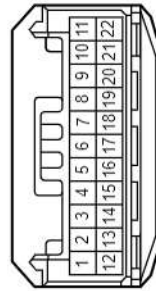


90980-12B54

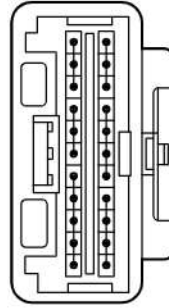


M93  
Black

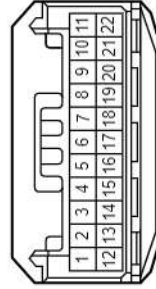

90980-12B54

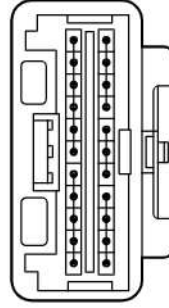


b1  
Orange

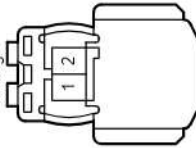


90980-12576

f11  
White

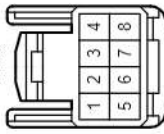


90980-12221

f12  
White

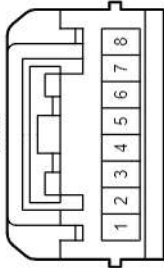


90980-12550

 f13  
White









90980-12937

 
f14  
White



90980-11909

  
Position of Parts in Instrument Panel (LHD)

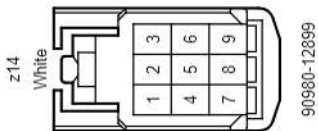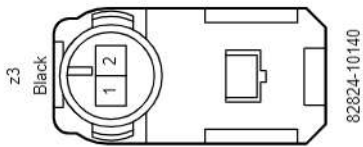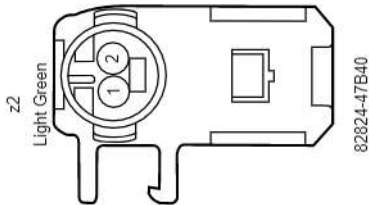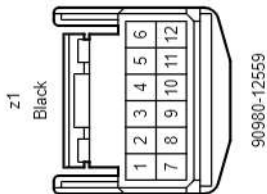

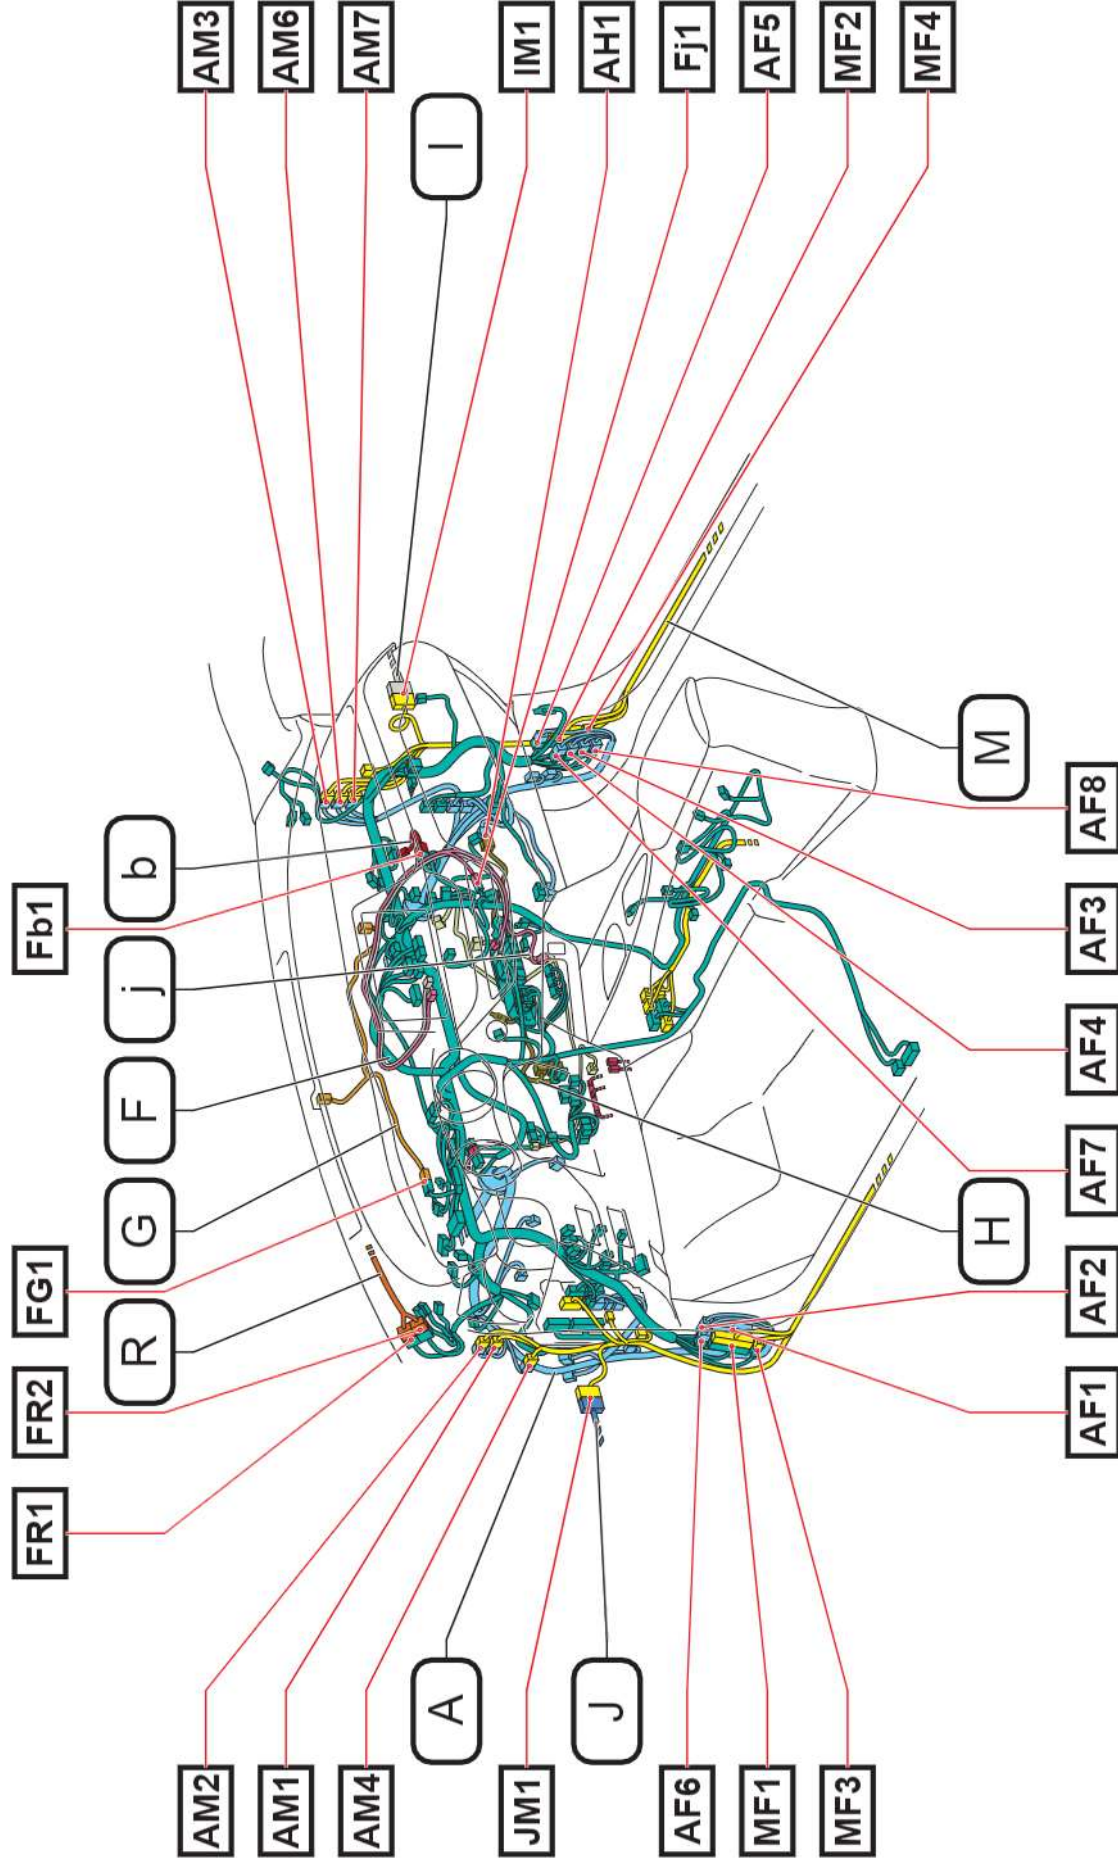


Wire and Wire in Instrument Panel (LHD)

AF1  
Gray

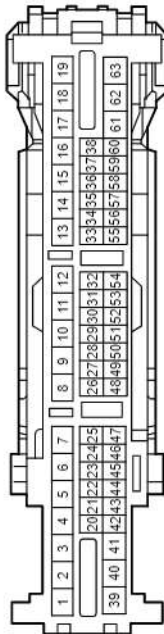


90980-12B20

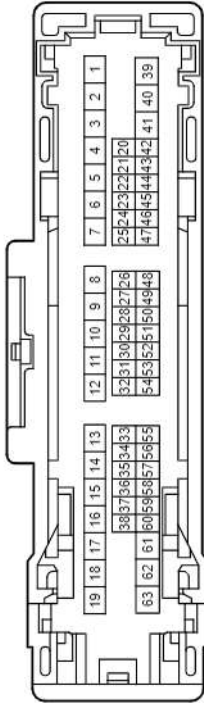


90980-12B19

 AF2  
White




90980-10995

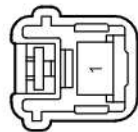


90980-10594

AF3  
White

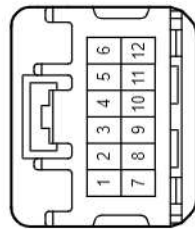


90980-12737

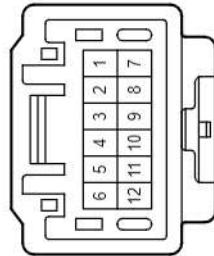


90980-12736

AF4  
Gray

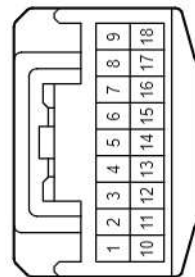


90980-12412


AF5  
Yellow

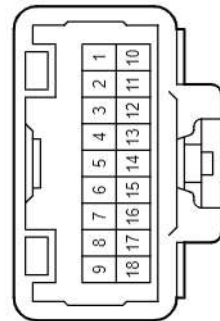

90980-12411

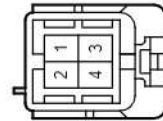


90980-12988


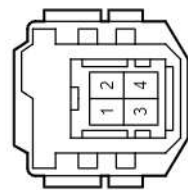


90980-12989

AF6  
White

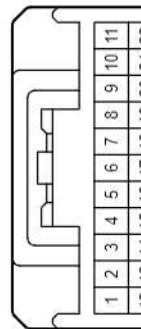

AF7  
White

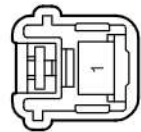 


cardiagn.com

cardiagn.com




Wire and Wire in Instrument Panel (LHD)

FR1  
White

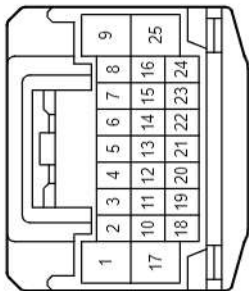


90980-12414

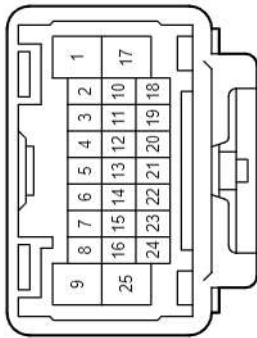


90980-12413

FR2  
Black

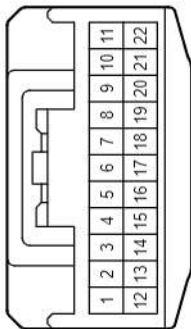


90980-12372

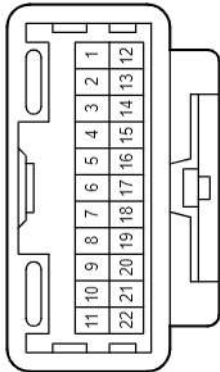


90980-12371

 Fb1  
Yellow




90980-11886

 


90980-11992

FJ1  
White


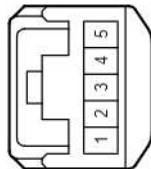


90980-12366

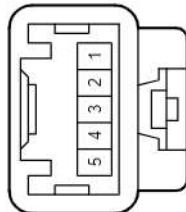

90980-12419

  
IM1  
White




cardiagn.com

Wire and Wire in Instrument Panel (LHD)

JM1  
White

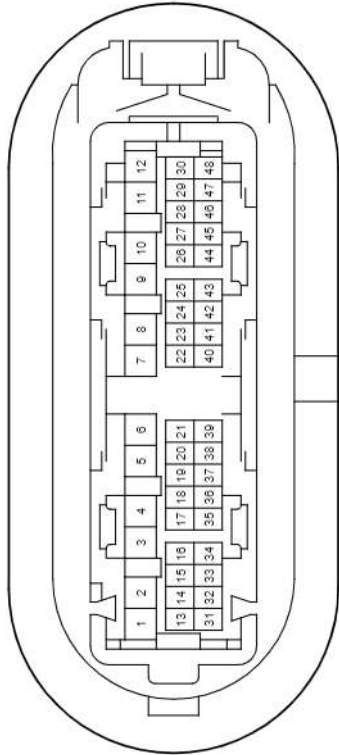


90980-12A09

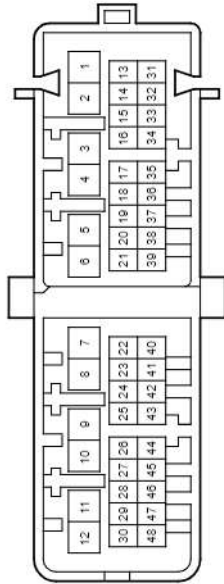


90980-12A06

MF1  
White

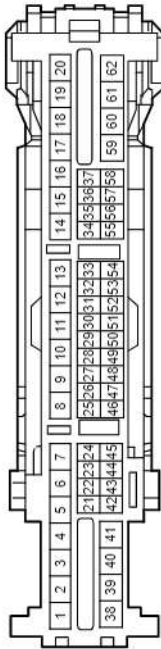


90980-12B22

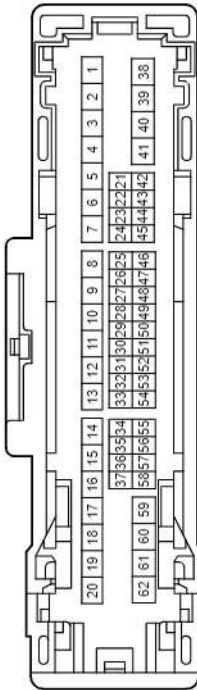


90980-12B21

MF2  
White

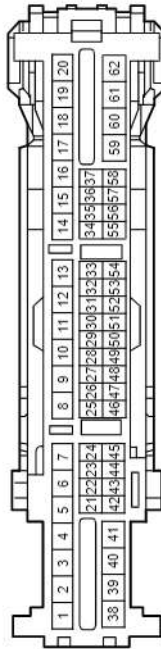


90980-12B22

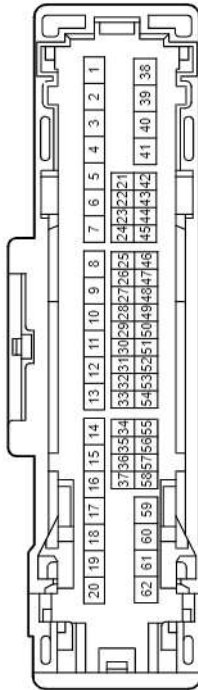


90980-12B21

MF3  
White

MF4  
White

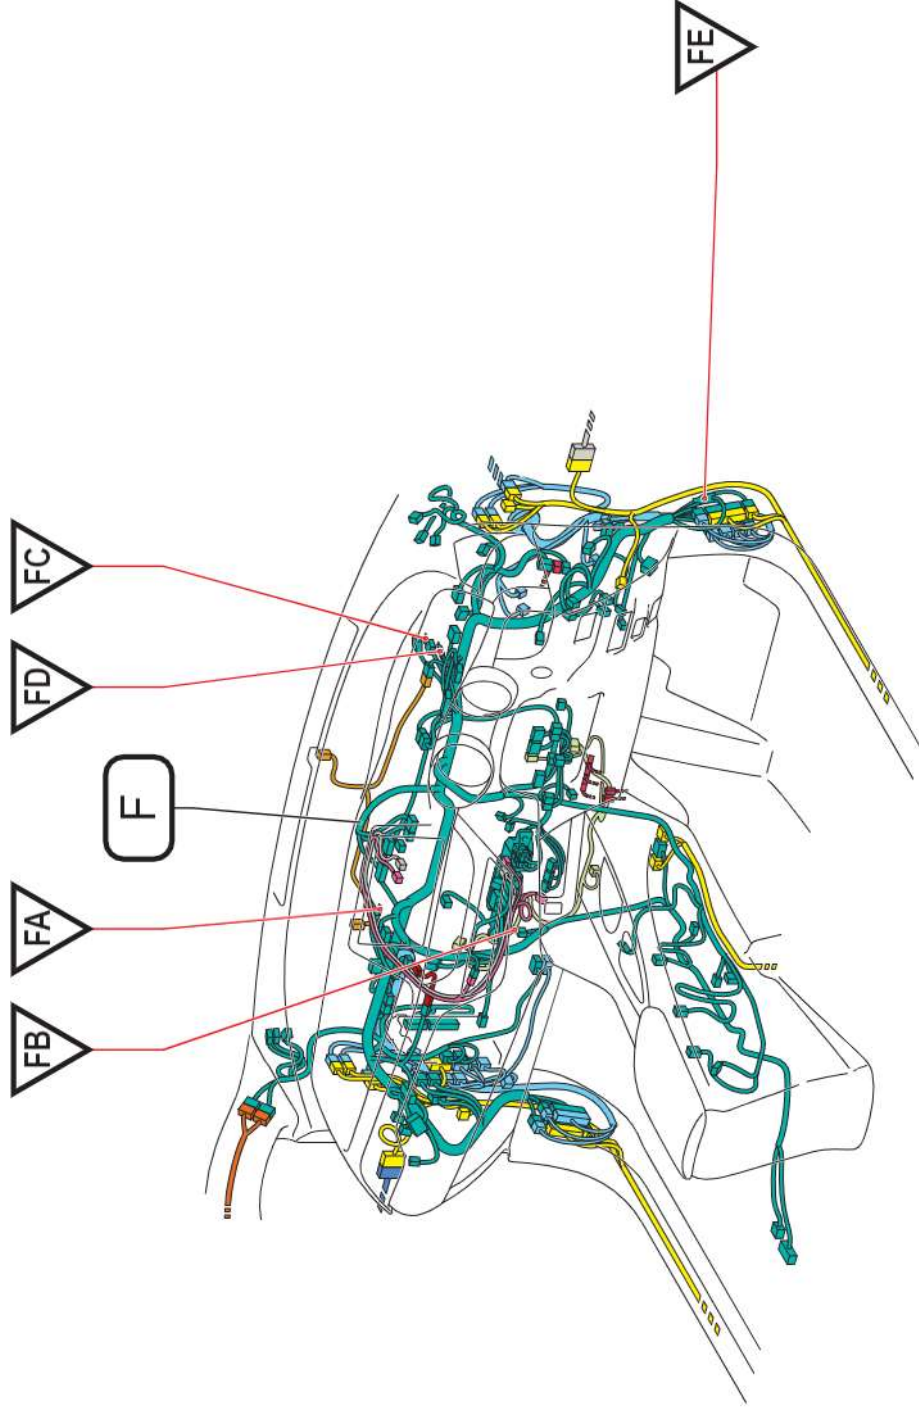

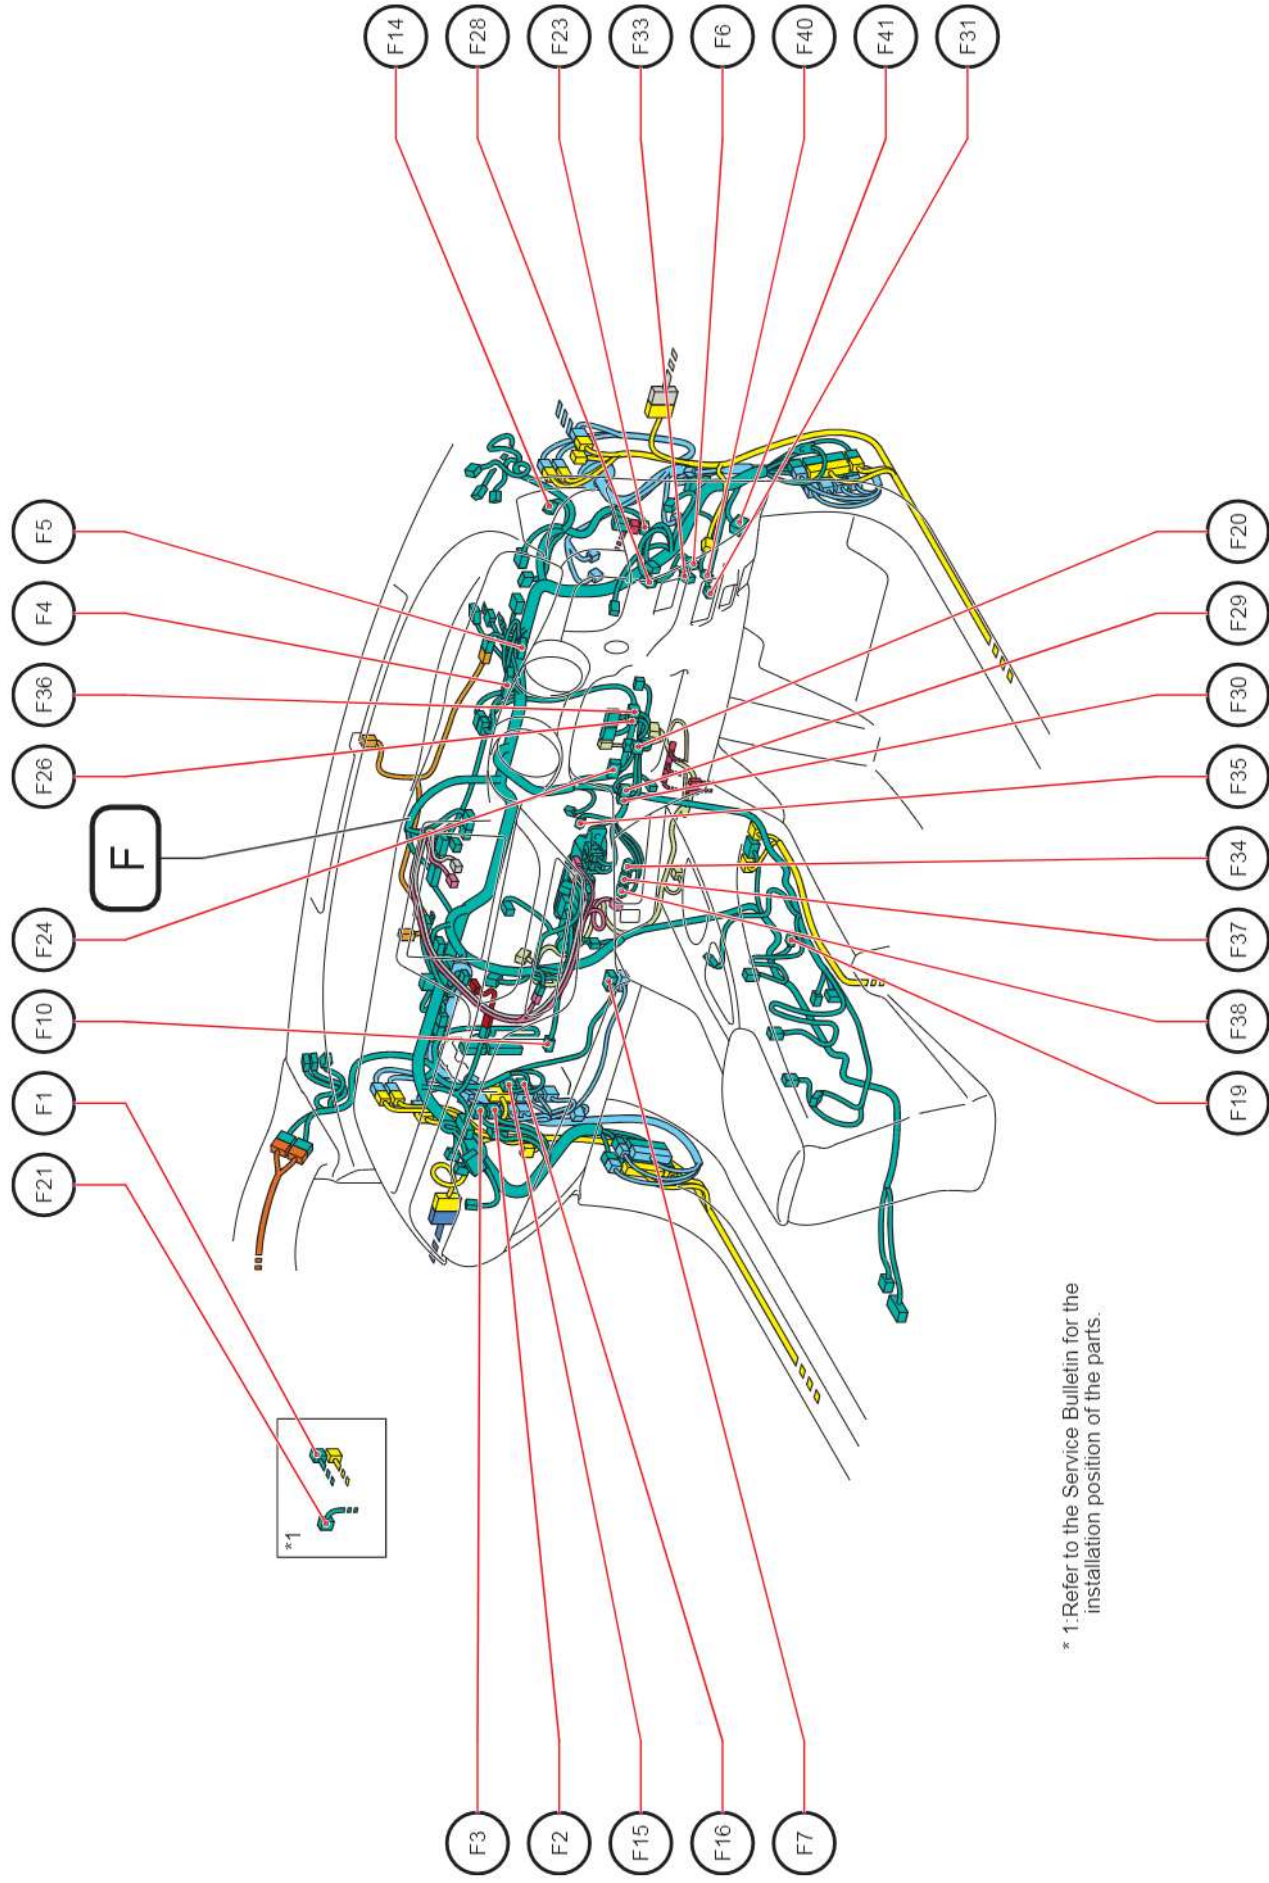


\* 1: Refer to the Service Bulletin for the installation position of the parts.

## Position of Parts in Instrument Panel (RHD)

|     |                                              |
|-----|----------------------------------------------|
| F1  | Certification ECU                            |
| F2  | Hybrid Vehicle Control ECU                   |
| F3  | Hybrid Vehicle Control ECU                   |
| F4  | Combination Meter Assembly                   |
| F5  | Combination Meter Assembly                   |
| F6  | Auto High Beam Switch                        |
| F7  | Blower Motor with Fan Sub-Assembly           |
| F10 | Glove Box Light Assembly                     |
| F14 | Double Lock Door Control Relay Assembly      |
| F15 | Main Body ECU                                |
| F16 | Main Body ECU                                |
| F19 | Shift Lock Control Unit Assembly             |
| F20 | Spiral Cable with Sensor Sub-Assembly        |
| F21 | ID Code Box                                  |
| F23 | Power Steering ECU Assembly                  |
| F24 | Headlight Dimmer Switch Assembly             |
| F26 | Windshield Wiper Switch Assembly             |
| F28 | IPA Main Switch Assembly                     |
| F29 | Spiral Cable with Sensor Sub-Assembly        |
| F30 | Spiral Cable with Sensor Sub-Assembly        |
| F31 | No. 1 Instrument Panel Airbag Assembly Lower |
| F33 | Steering Heater Switch                       |
| F34 | Clearance Warning ECU Assembly               |
| F35 | No. 1 Clearance Warning Buzzer               |
| F36 | Windshield Wiper Switch Assembly             |
| F37 | Clearance Warning ECU Assembly               |
| F38 | Clearance Warning ECU Assembly               |
| F40 | Fuel Lid Opener Switch                       |
| F41 | DLC3                                         |


Position of Parts in Instrument Panel (RHD)

F1  
White

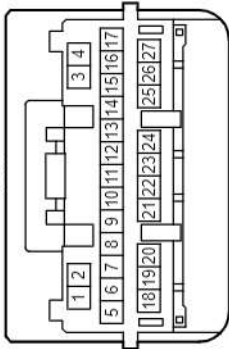


90980-12B78

F2  
Gray

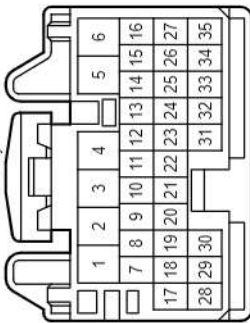


90980-12429

F3  
Gray

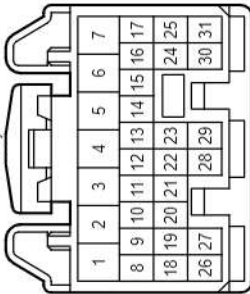


90980-12431

F4  
Black

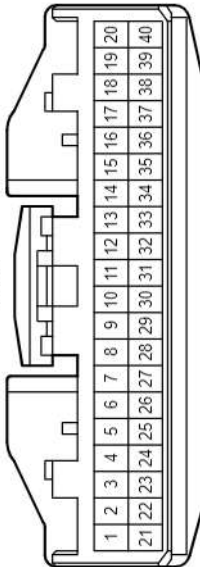


90980-12557

F5  
Black

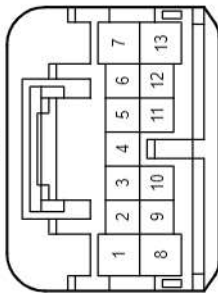


90980-12767

F6  
White

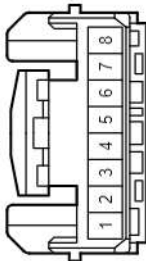

90980-12558

F7  
Black

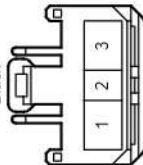


90980-11667

F10  
Black




90980-11918

F14  
White

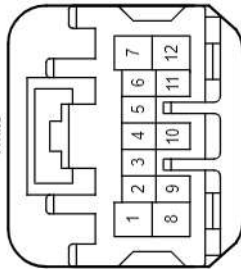


90980-12812



















F15  
White

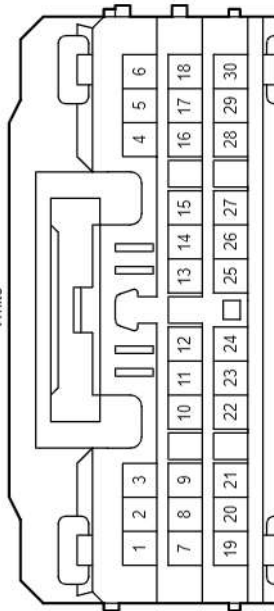


F16  
White

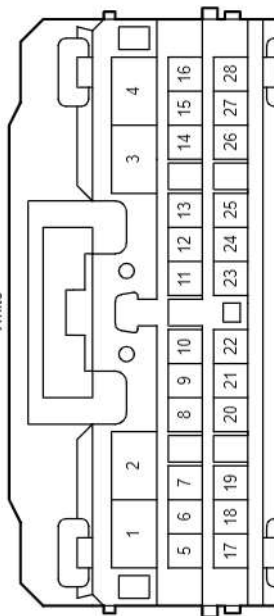

  Position of Parts in Instrument Panel (RHD)

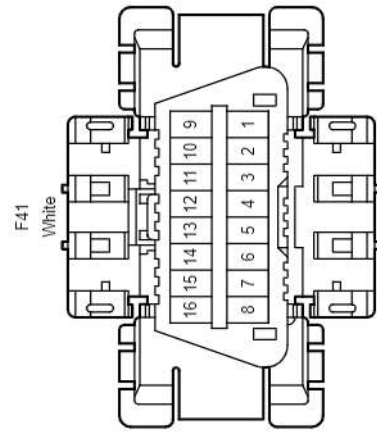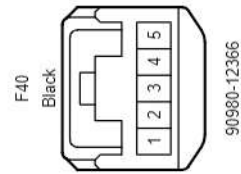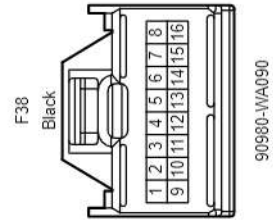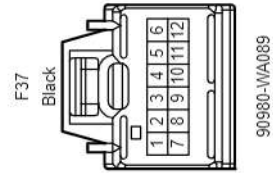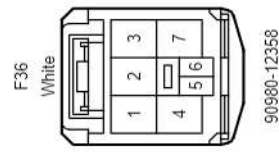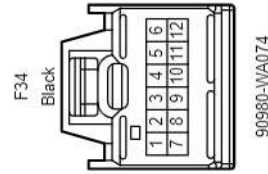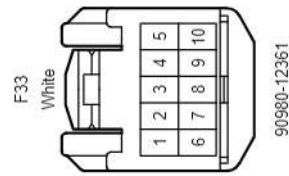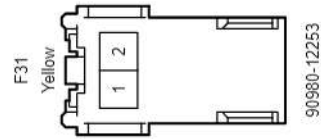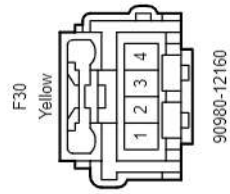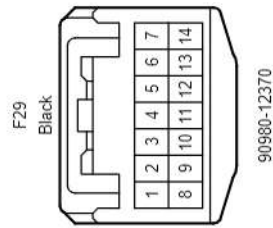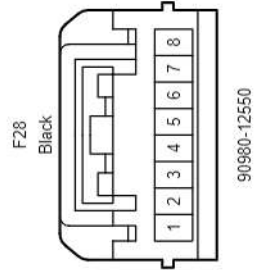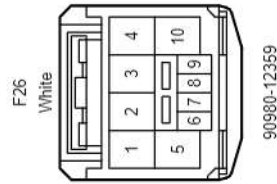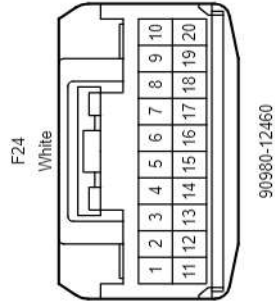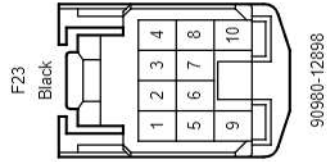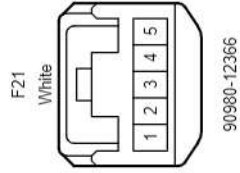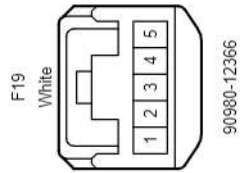


Position of Parts in Instrument Panel (RHD)

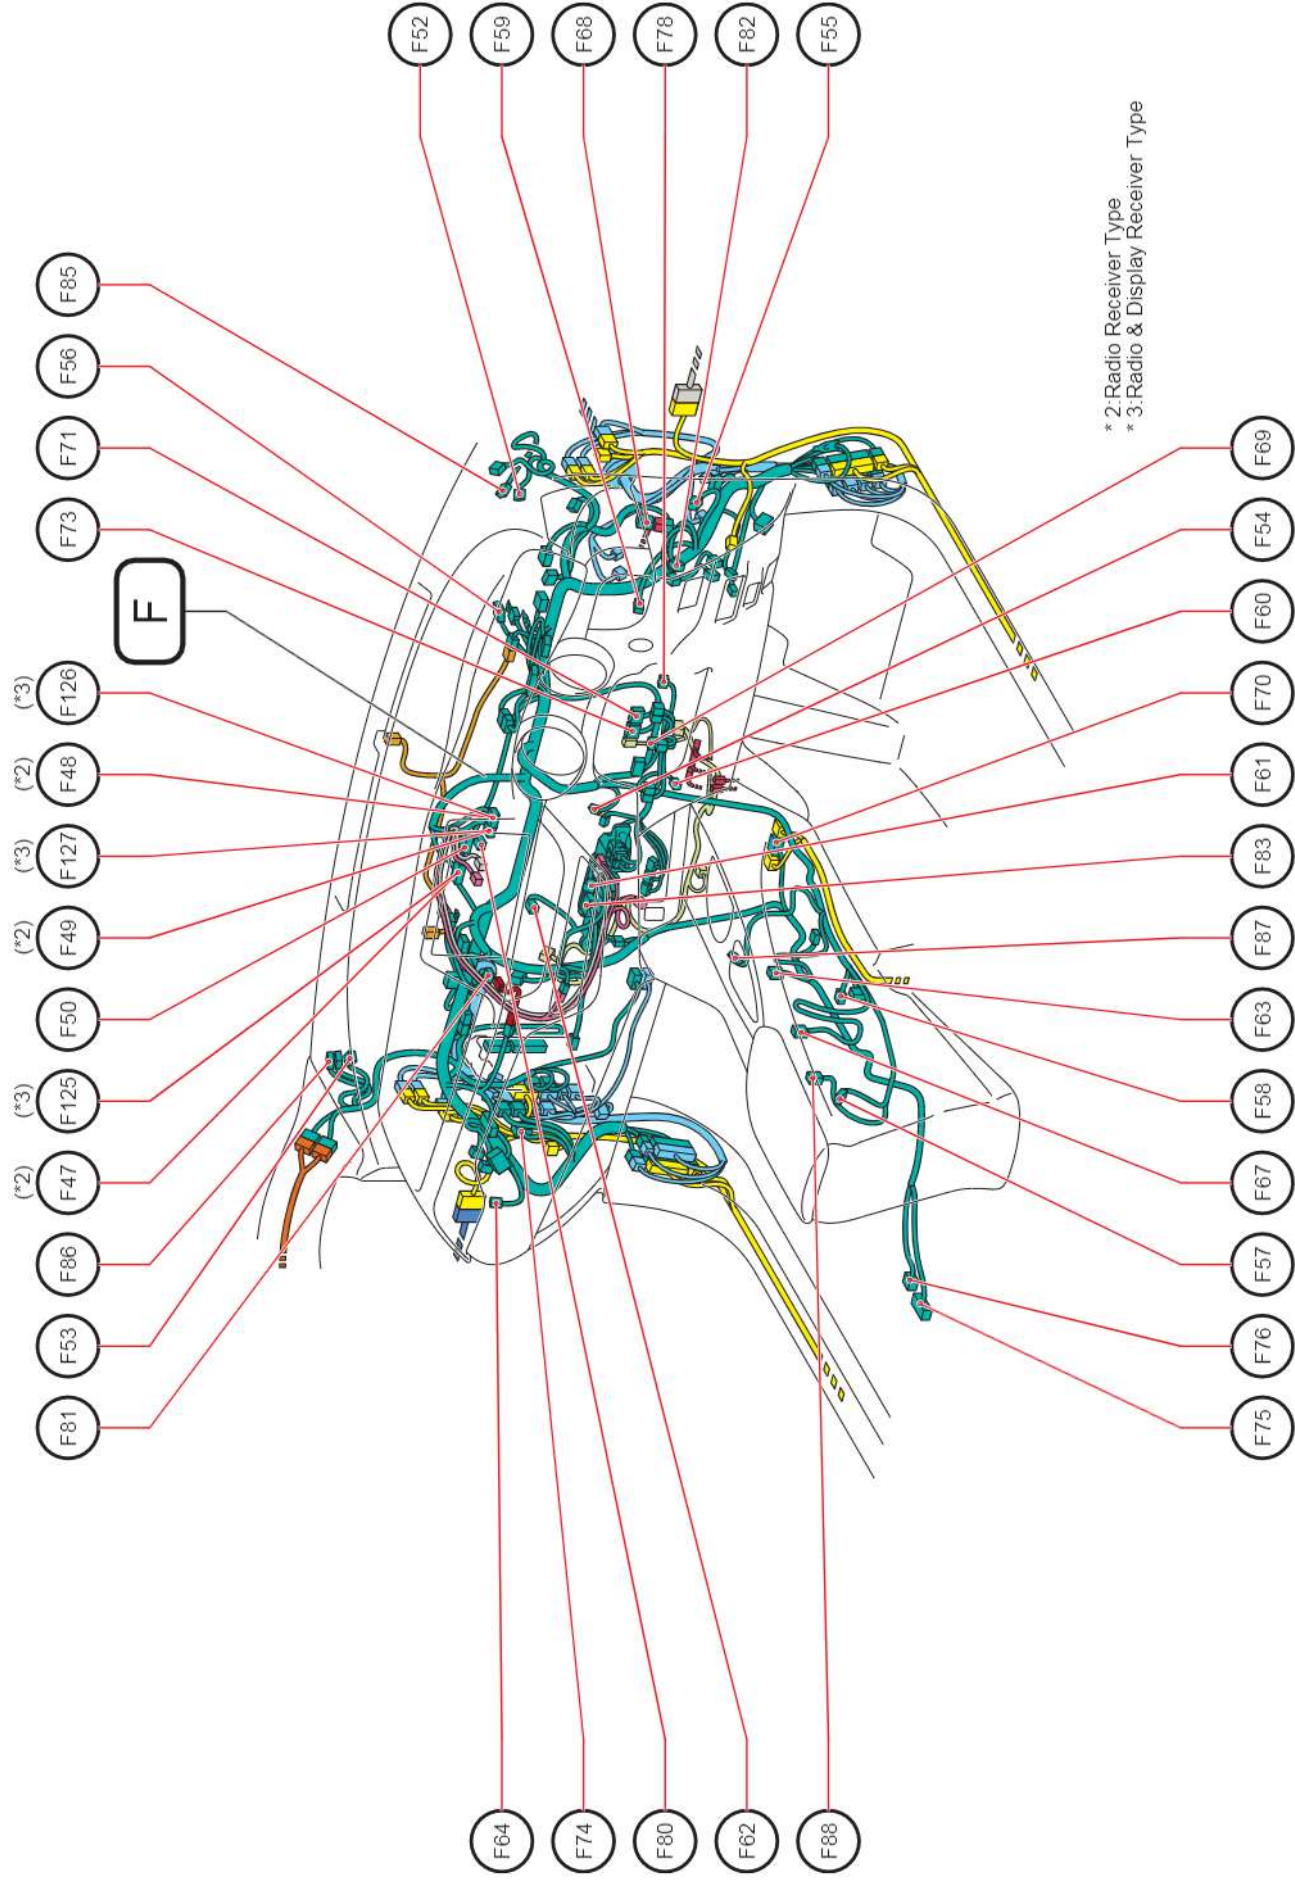


Position of Parts in Instrument Panel (RHD)

|      |                                                                                    |  |
|------|------------------------------------------------------------------------------------|--|
| F47  | Radio Receiver Assembly                                                            |  |
| F48  | Radio Receiver Assembly                                                            |  |
| F49  | Radio Receiver Assembly                                                            |  |
| F50  | Radio & Display Receiver Assembly                                                  |  |
| F52  | Front No. 2 Speaker Assembly RH                                                    |  |
| F53  | Front No. 2 Speaker Assembly LH                                                    |  |
| F54  | Pre-Collision City Buzzer                                                          |  |
| F55  | No. 2 Clearance Warning Buzzer                                                     |  |
| F56  | Windshield Wiper Relay Assembly                                                    |  |
| F57  | No. 1 Power Outlet Socket Assembly                                                 |  |
| F58  | No. 1 Indoor Electrical Key Antenna Assembly                                       |  |
| F59  | Power Switch                                                                       |  |
| F60  | Cooler (Room Temperature Sensor) Thermistor                                        |  |
| F61  | A/C Control Assembly                                                               |  |
| F62  | Hazard Warning Signal Switch Assembly                                              |  |
| F63  | Shift Position Indicator                                                           |  |
| F64  | Airbag Cut Off Switch Cylinder Sub-Assembly                                        |  |
| F67  | Electric Parking Brake Switch Assembly                                             |  |
| F68  | Power Steering ECU Assembly                                                        |  |
| F69  | Steering Sensor                                                                    |  |
| F70  | Airbag Sensor Assembly                                                             |  |
| F71  | A/C Amplifier Assembly                                                             |  |
| F73  | A/C Amplifier Assembly                                                             |  |
| F74  | Network Gateway ECU                                                                |  |
| F75  | Stereo Component Amplifier Assembly                                                |  |
| F76  | Stereo Component Amplifier Assembly                                                |  |
| F78  | Steering Lock Actuator Assembly (Steering Lock Actuator or Upper Bracket Assembly) |  |
| F80  | Radio & Display Receiver Assembly                                                  |  |
| F81  | Clock Assembly                                                                     |  |
| F82  | Headlight Leveling Switch                                                          |  |
| F83  | Navigation ECU                                                                     |  |
| F85  | Front No. 2 Speaker Assembly RH                                                    |  |
| F86  | Front No. 2 Speaker Assembly LH                                                    |  |
| F87  | Front Instrument Cluster Finish Panel Garnish Center                               |  |
| F88  | Rear Instrument Cluster Finish Panel Garnish Center                                |  |
| F125 | Radio & Display Receiver Assembly                                                  |  |
| F126 | Radio & Display Receiver Assembly                                                  |  |
| F127 | Radio & Display Receiver Assembly                                                  |  |


# Position of Parts in Instrument Panel (RHD)

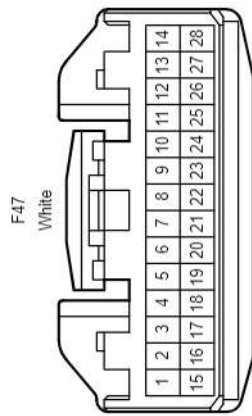


90980-12555

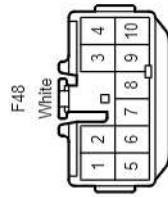


90980-10997

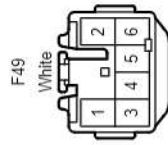


90980-10996

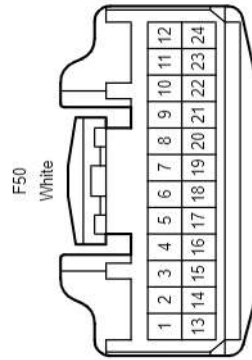


90980-12554

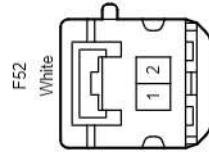


90980-12808

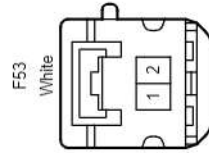


90980-12808

 

90980-10860

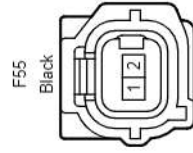


90980-12572

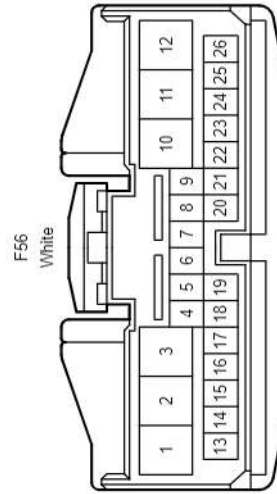


90980-12444



90980-12498

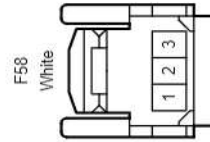


90980-12795

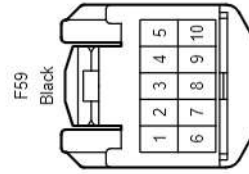


90980-12361




90980-11918

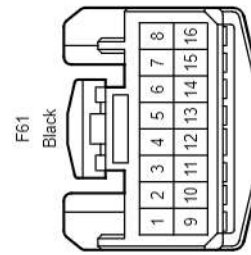

82824-33470

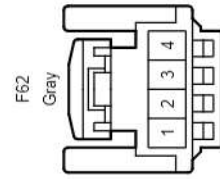

90980-12876

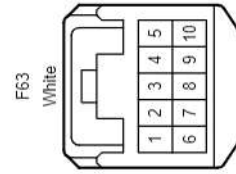


90980-12368



90980-12063


# Position of Parts in Instrument Panel (RHD)

F71  
White

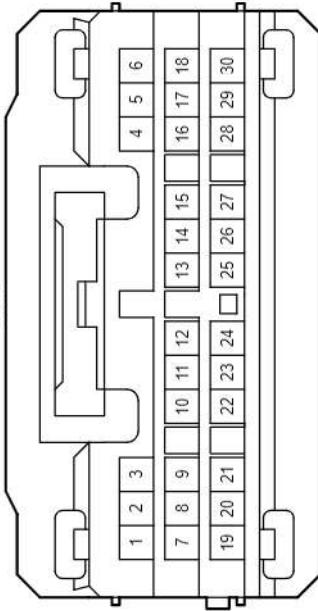


90980-12761

F73  
White

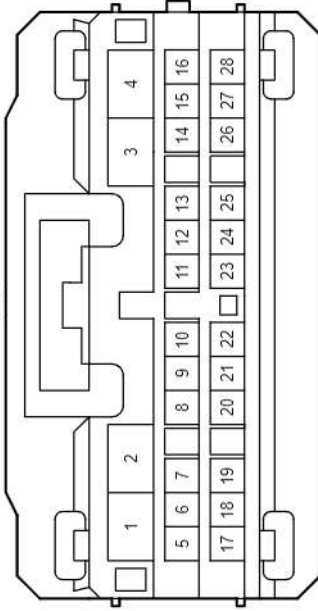


90980-12760

F74  
Black

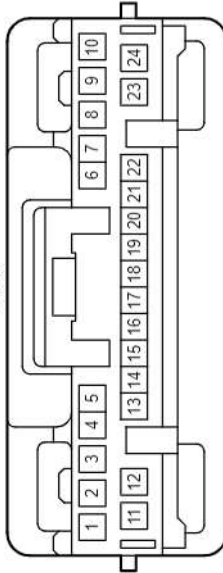


90980-12912

F75  
White

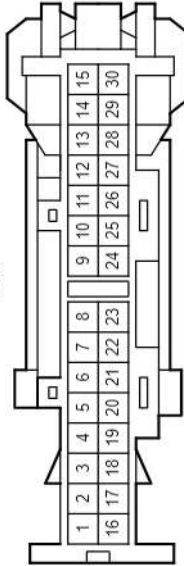


90980-12979

F76  
White

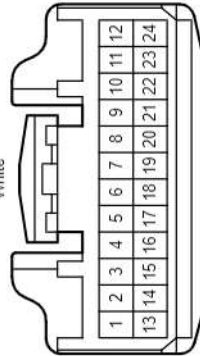


90980-12554

F78  
Black

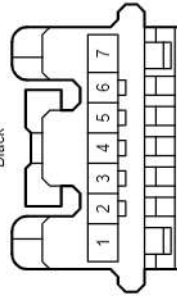


90980-12092

F81  
White

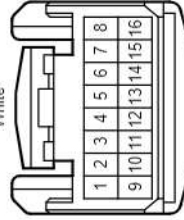

90980-12553

F80  
White

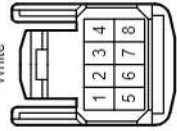


90980-12551

F82  
Black




90980-11950

F83  
Black

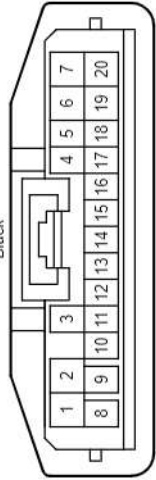


90980-12976

 F85  
White




90980-12304

 F86  
White



90980-12304

Position of Parts in Instrument Panel (RHD)

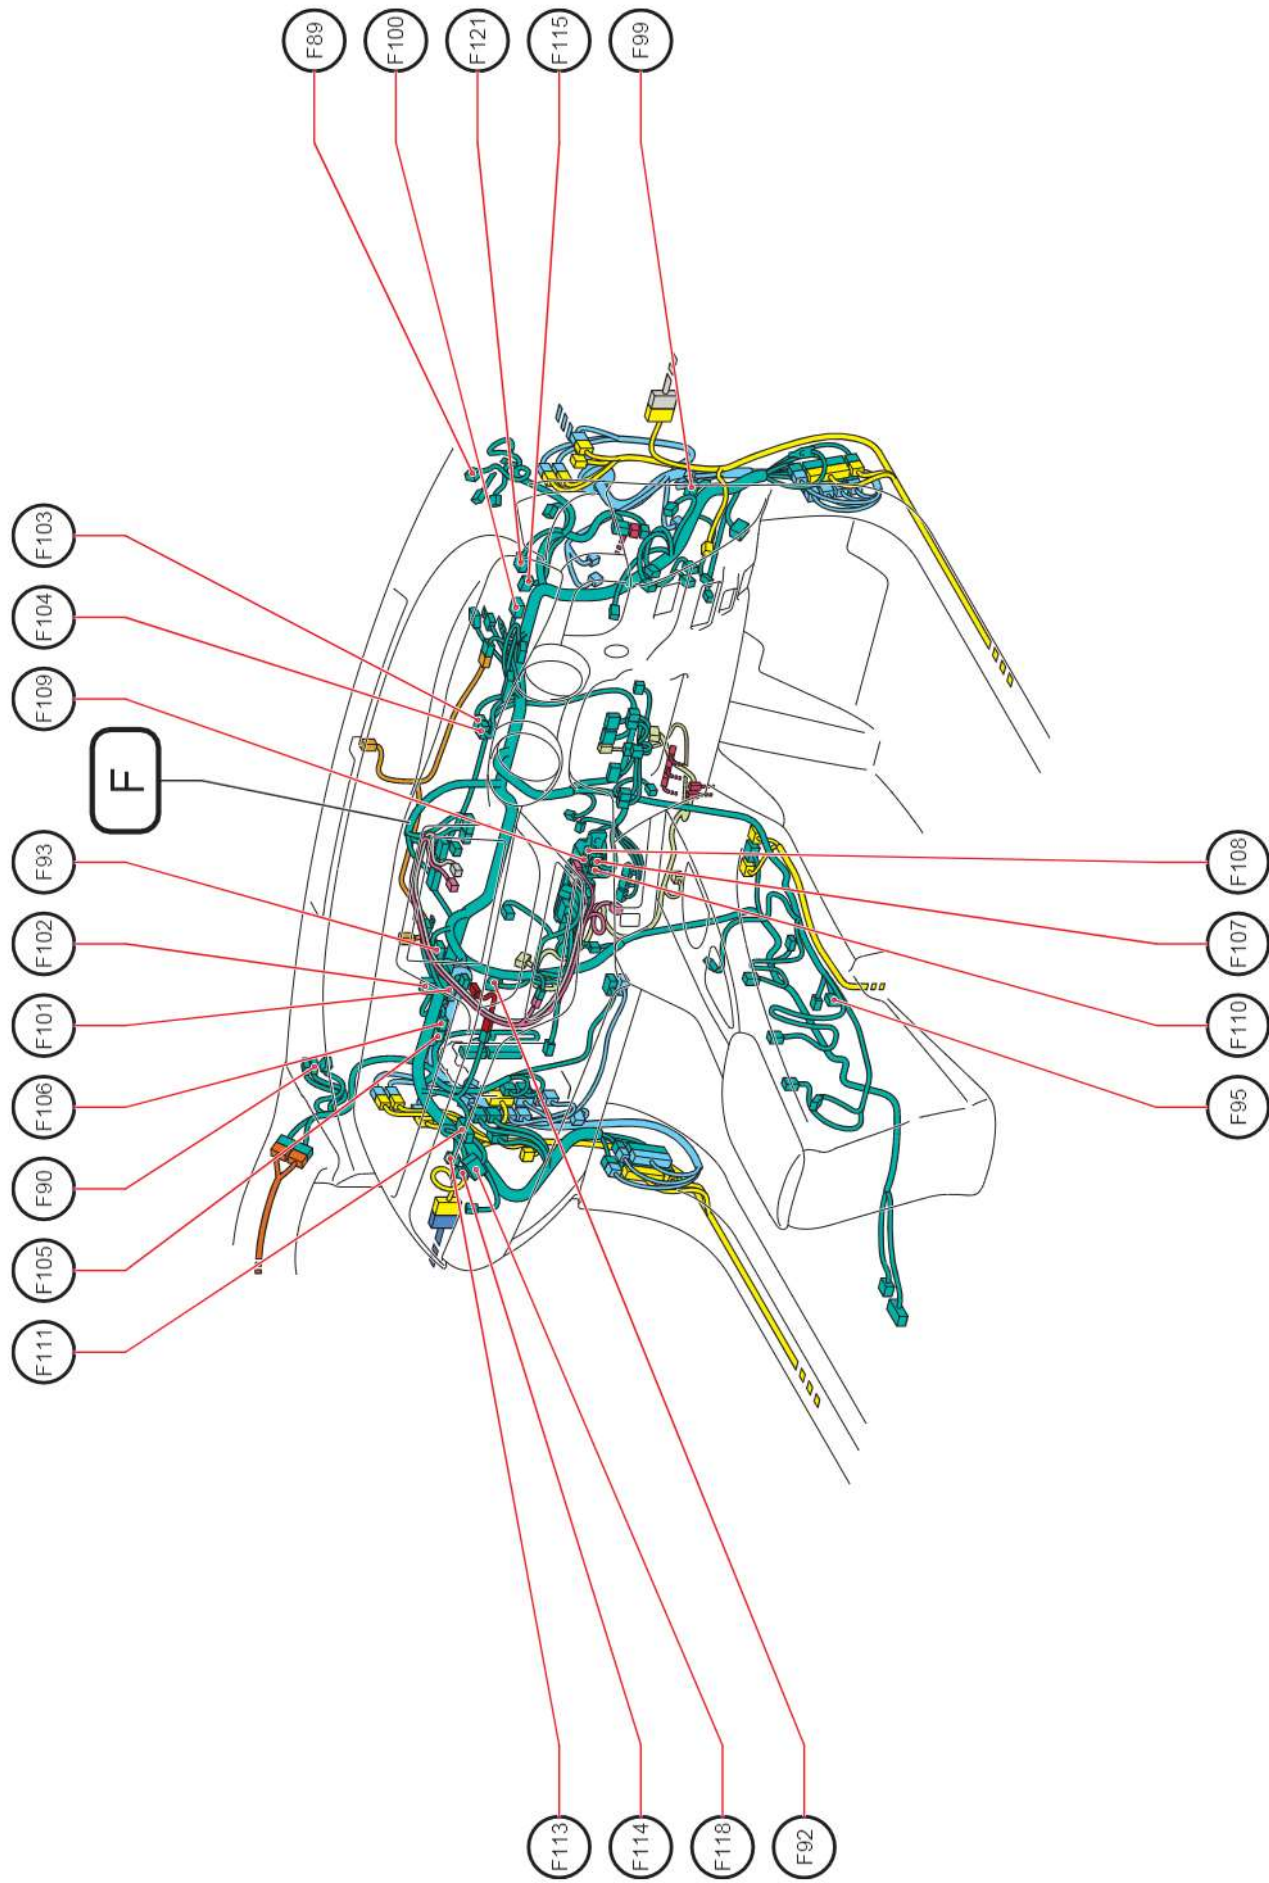


Position of Parts in Instrument Panel (RHD)

|      |                                 |
|------|---------------------------------|
| F89  | Front No. 3 Speaker Assembly RH |
| F90  | Front No. 3 Speaker Assembly LH |
| F92  | No. 6 Junction Connector        |
| F93  | No. 7 Junction Connector        |
| F95  | No. 9 Junction Connector        |
| F99  | No. 13 Junction Connector       |
| F100 | No. 14 Junction Connector       |
| F101 | No. 15 Junction Connector       |
| F102 | No. 16 Junction Connector       |
| F103 | No. 21 Junction Connector       |
| F104 | No. 21 Junction Connector       |
| F105 | No. 22 Junction Connector       |
| F106 | No. 22 Junction Connector       |
| F107 | No. 23 Junction Connector       |
| F108 | No. 23 Junction Connector       |
| F109 | No. 24 Junction Connector       |
| F110 | No. 24 Junction Connector       |
| F111 | No. 1 CAN Junction Connector    |
| F113 | No. 2 CAN Junction Connector    |
| F114 | No. 3 CAN Junction Connector    |
| F115 | No. 4 CAN Junction Connector    |
| F118 | No. 5 CAN Junction Connector    |
| F121 | No. 19 Junction Connector       |


## Position of Parts in Instrument Panel (RHD)

F89  
White

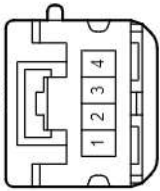


90980-12733

F90  
White

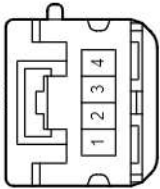


90980-12733

F92  
Black

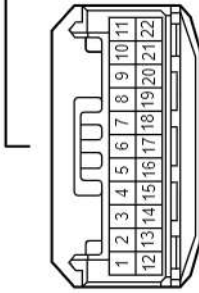


90980-12B54

F93  
Black

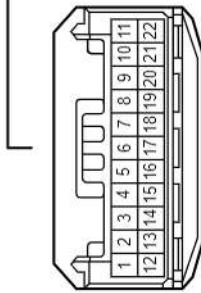


90980-12B54

F95  
Black

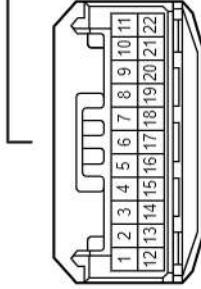


90980-12B54

F99  
Black

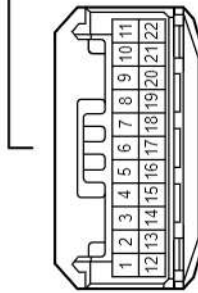


90980-12B54

F100  
White

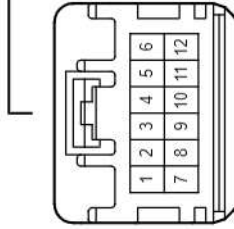


90980-12737

F101  
Black

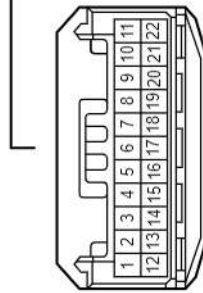

90980-12B54


F102  
Black

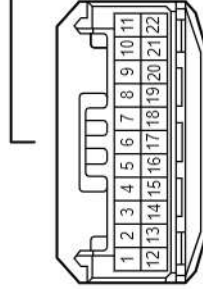

90980-12B54


Position of Parts in Instrument Panel (RHD)

F104  
White

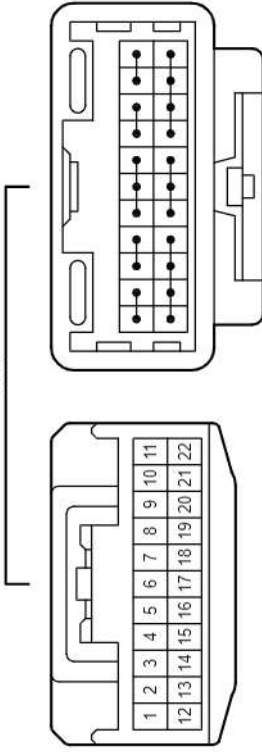


90980-12372

F105  
White

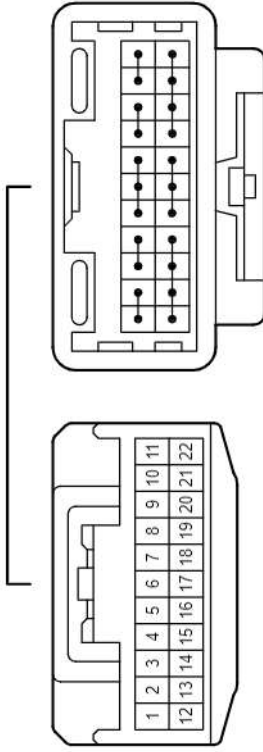


90980-12372

F106  
White

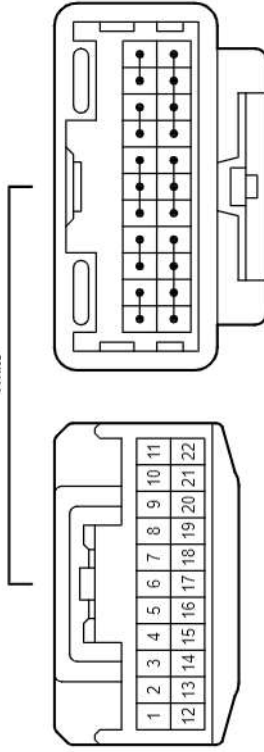


90980-12372

F107  
White

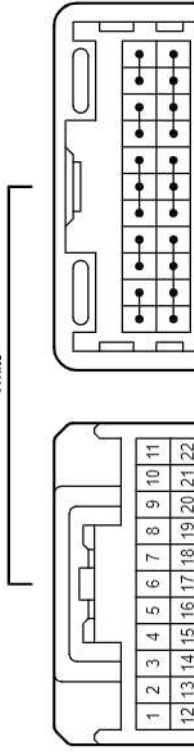


Position of Parts in Instrument Panel (RHD)

F108  
White

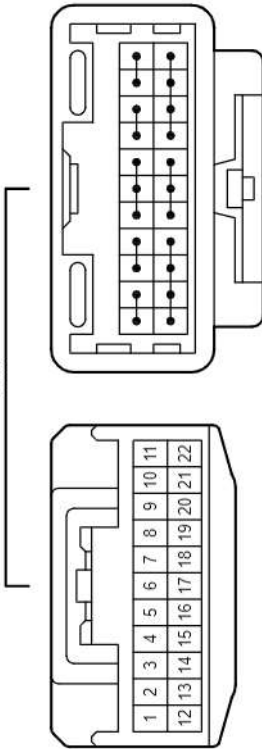


90980-12372

F109  
Black

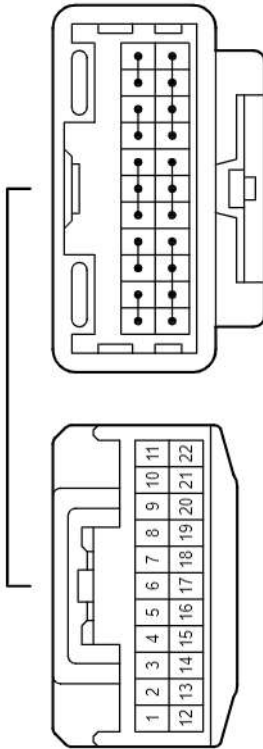


90980-12372

F110  
Black

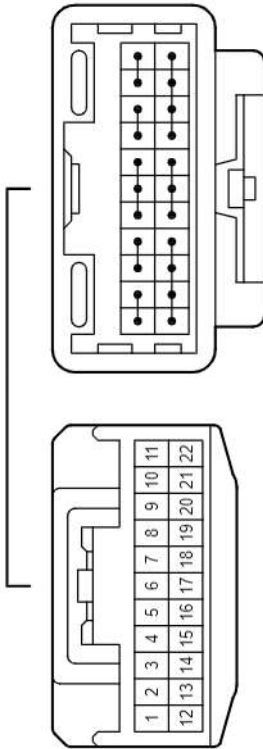


90980-12372

F111  
White

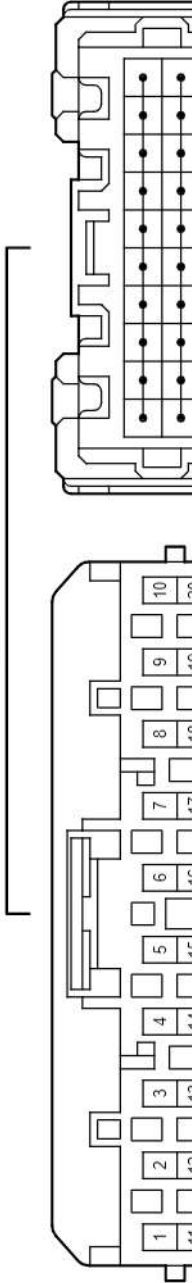


Position of Parts in Instrument Panel (RHD)

F113  
Black

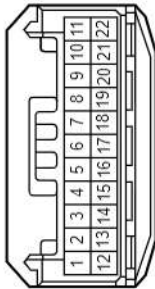


90980-12B54

F114  
Black

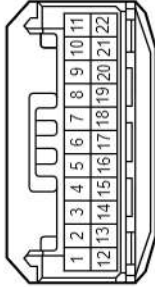


90980-12B54


F115  
Black

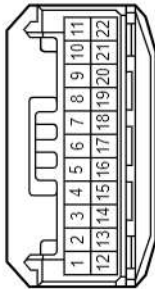


90980-12B54

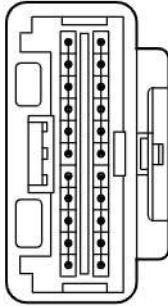


F118  
White

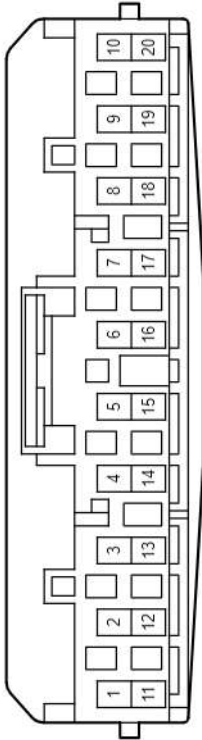


90980-12A58

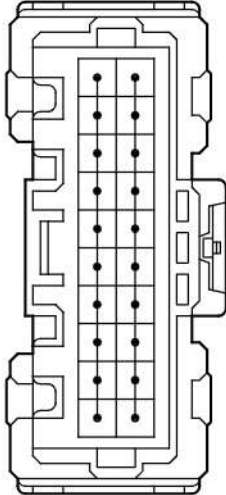


F121  
Black

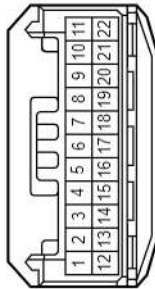

90980-12B54

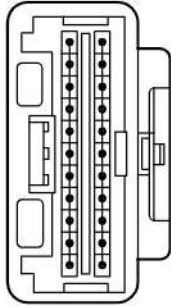












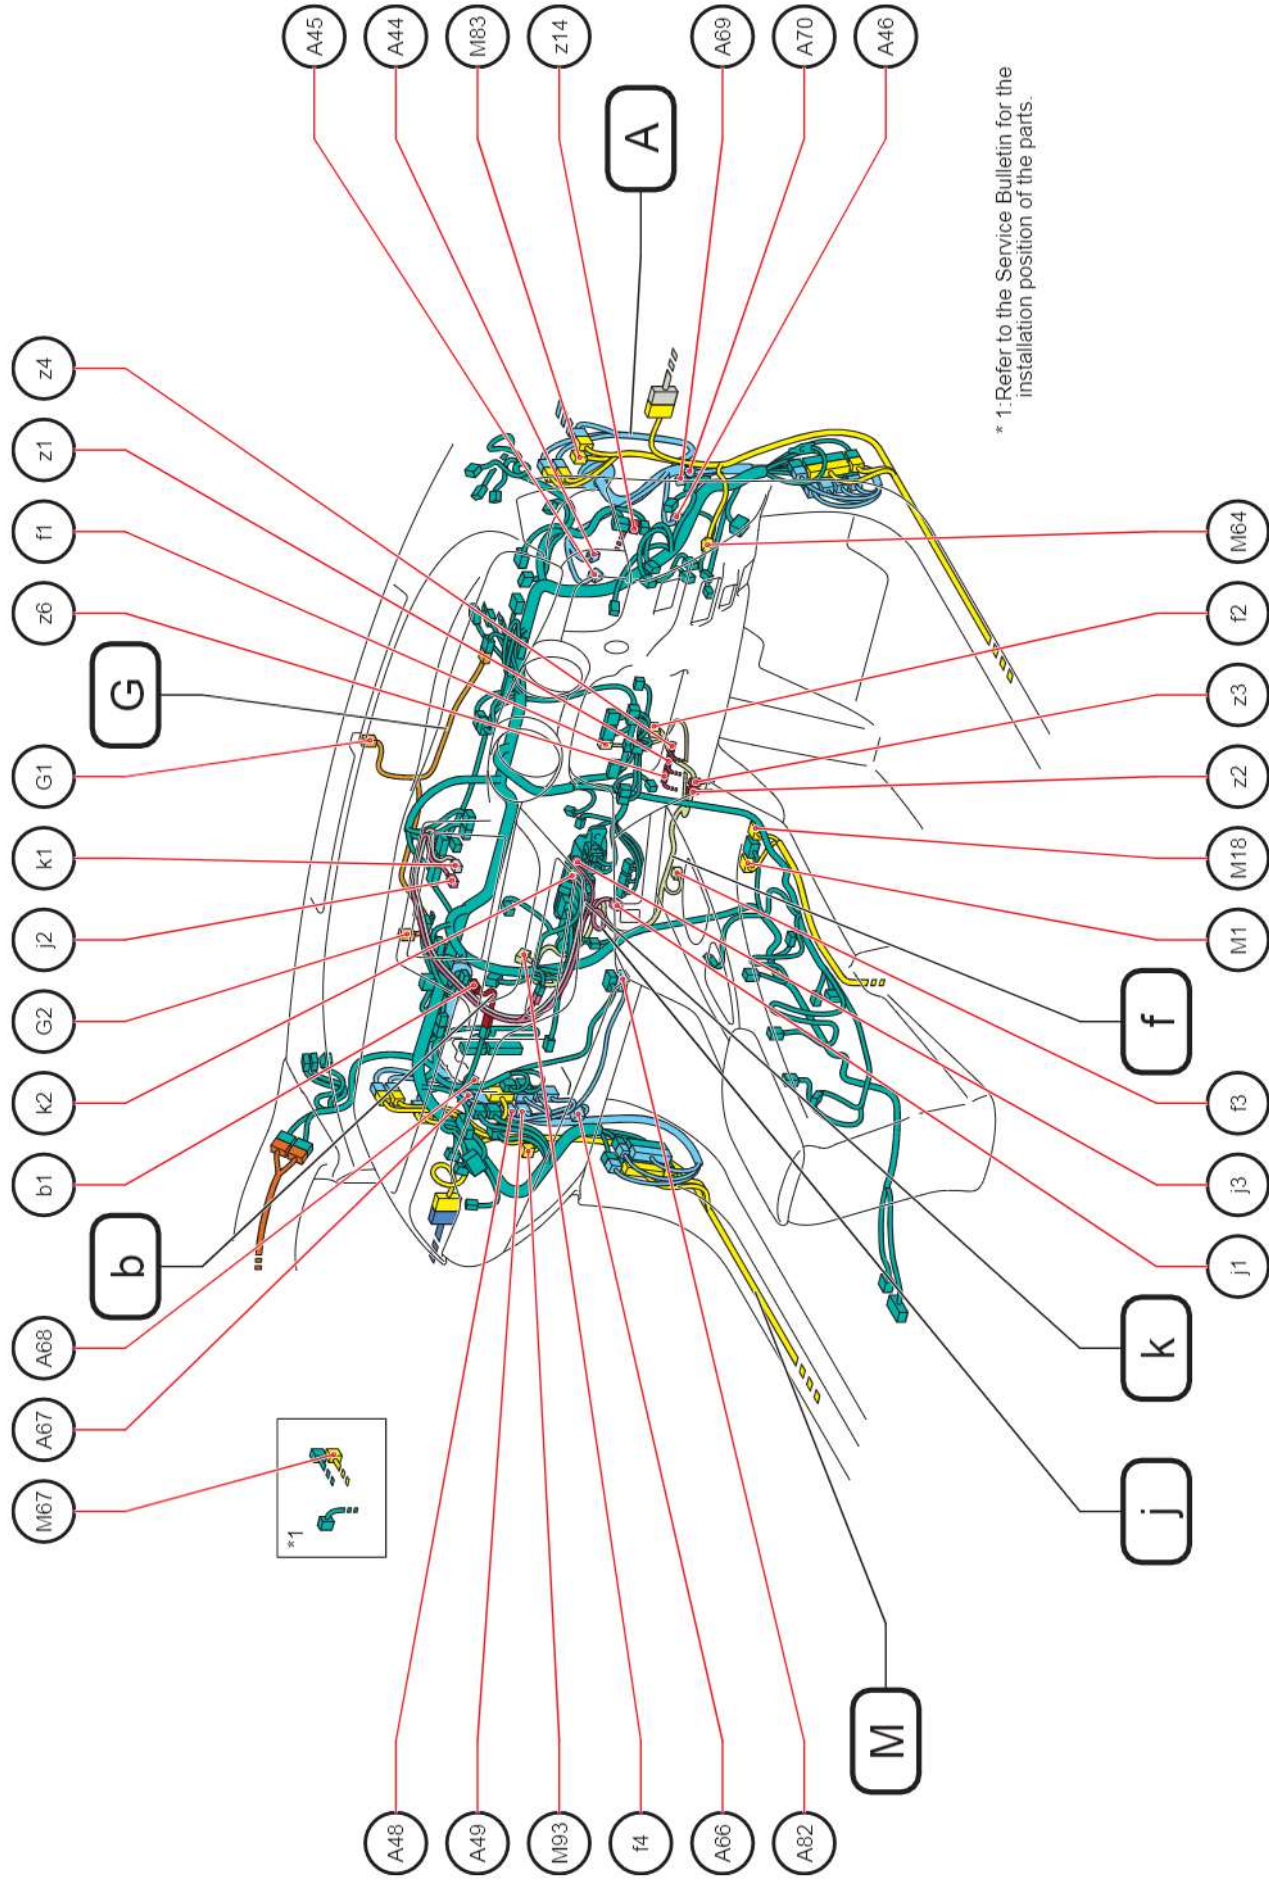


\* 1: Refer to the Service Bulletin for the installation position of the parts.

## Position of Parts in Instrument Panel (RHD)


|     |                                                                                          |
|-----|------------------------------------------------------------------------------------------|
| A44 | Brake Pedal Stroke Sensor Assembly                                                       |
| A45 | Stop Light Switch Assembly                                                               |
| A46 | Accelerator Pedal Sensor Assembly                                                        |
| A48 | Hybrid Vehicle Control ECU                                                               |
| A49 | Hybrid Vehicle Control ECU                                                               |
| A66 | No. 1 Junction Connector                                                                 |
| A67 | No. 2 Junction Connector                                                                 |
| A68 | No. 3 Junction Connector                                                                 |
| A69 | No. 4 Junction Connector                                                                 |
| A70 | No. 5 Junction Connector                                                                 |
| A82 | Blower Motor with Fan Sub-Assembly                                                       |
| G1  | Automatic Light Control Sensor                                                           |
| G2  | Ion Generator Sub-Assembly                                                               |
| M1  | Airbag Sensor Assembly                                                                   |
| M18 | Airbag Sensor Assembly                                                                   |
| M64 | Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)                              |
| M67 | Certification ECU                                                                        |
| M83 | No. 27 Junction Connector                                                                |
| M93 | No. 28 Junction Connector                                                                |
| b1  | Instrument Panel Passenger without Door Airbag Assembly                                  |
| f1  | A/C Amplifier Assembly                                                                   |
| f2  | No. 1 A/C Radiator Damper Servo Sub-Assembly                                             |
| f3  | No. 1 Cooler Thermistor                                                                  |
| f4  | No. 2 A/C Radiator Damper Servo Sub-Assembly                                             |
| j1  | No. 1 Stereo Jack Adapter Assembly                                                       |
| j2  | Radio & Display Receiver Assembly                                                        |
| j3  | Navigation ECU                                                                           |
| k1  | Radio & Display Receiver Assembly                                                        |
| k2  | Navigation ECU                                                                           |
| z1  | Steering Pad Switch Assembly , Spiral Cable with Sensor Sub-Assembly                     |
| z2  | Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly |
| z3  | Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly |
| z4  | Cruise Control Switch Wire , Spiral Cable with Sensor Sub-Assembly                       |
| z6  | Steering Heater Switch , Spiral Cable with Sensor Sub-Assembly                           |
| z14 | Electric Power Steering Column Sub-Assembly , Power Steering ECU Assembly                |

Position of Parts in Instrument Panel (RHD)

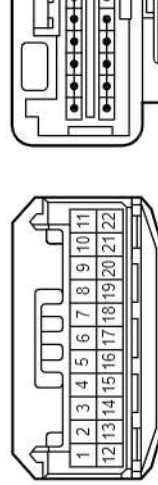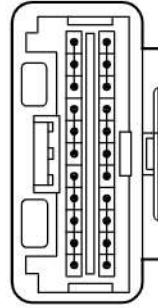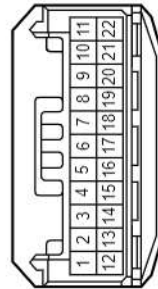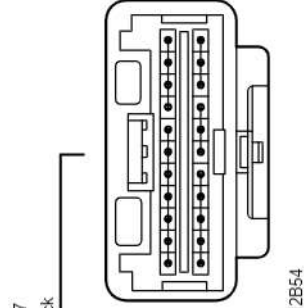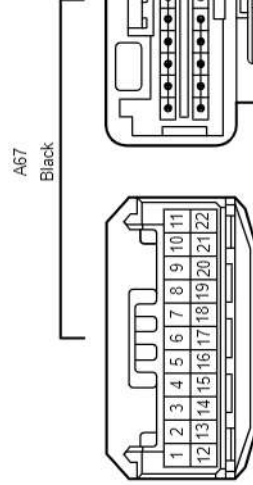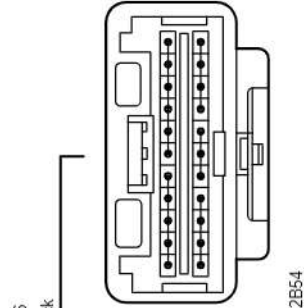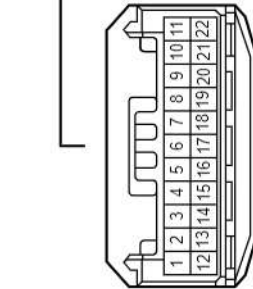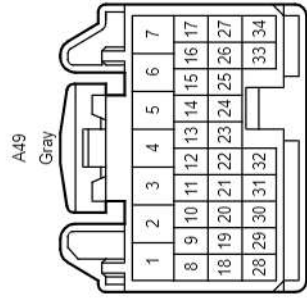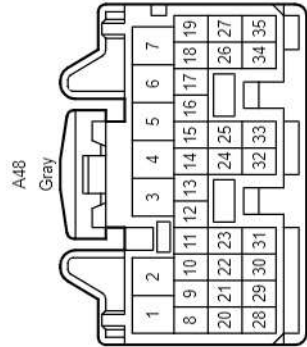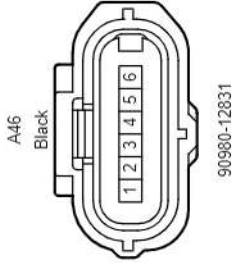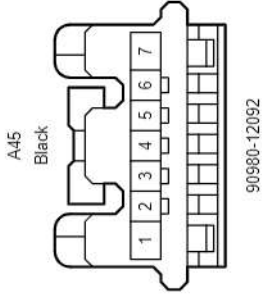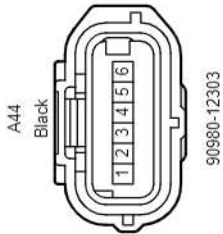


# Position of Parts in Instrument Panel (RHD)

G2  
Gray

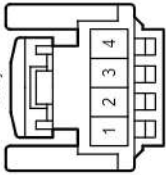


90980-12876

M1  
Yellow

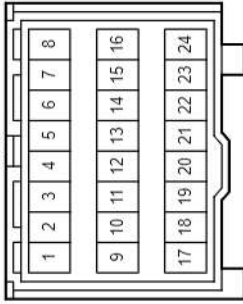

90980-12392

M18  
Yellow

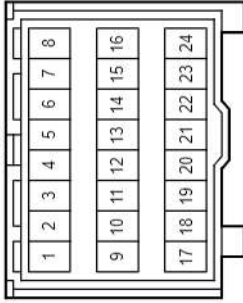


90980-12390

M64  
Black




90980-11142

M67  
White

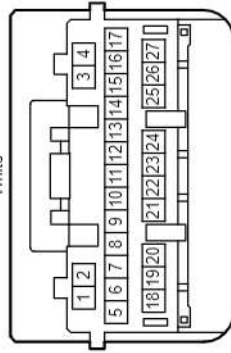


90980-12B77


M83  
Black

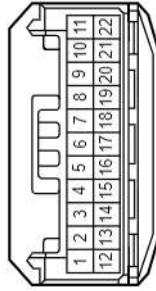


90980-12B54

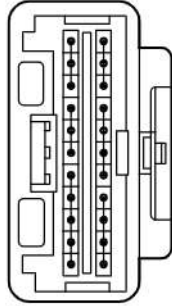


M93  
Black

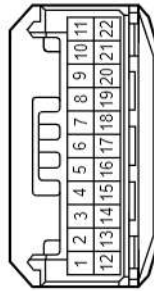

90980-12B54

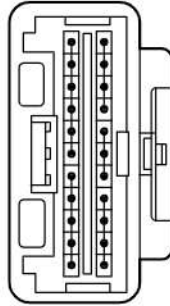


b1  
Orange

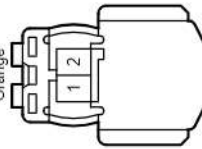


90980-12576

f1  
White

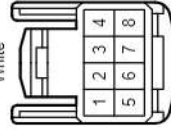


90980-12221

f2  
White

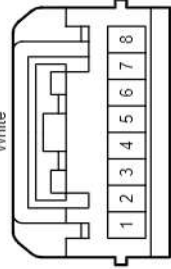


90980-12550

f3  
White

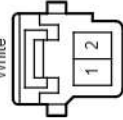


90980-12937

f4  
White

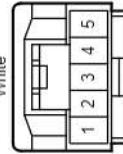


90980-11909

j1  
Black

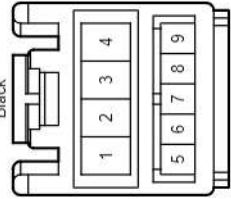





90980-12849


j2  
Gray

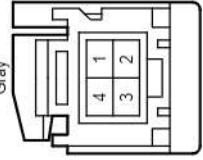

90980-12A52

  
Position of Parts in Instrument Panel (RHD)

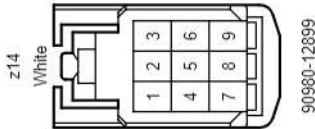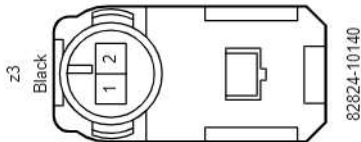

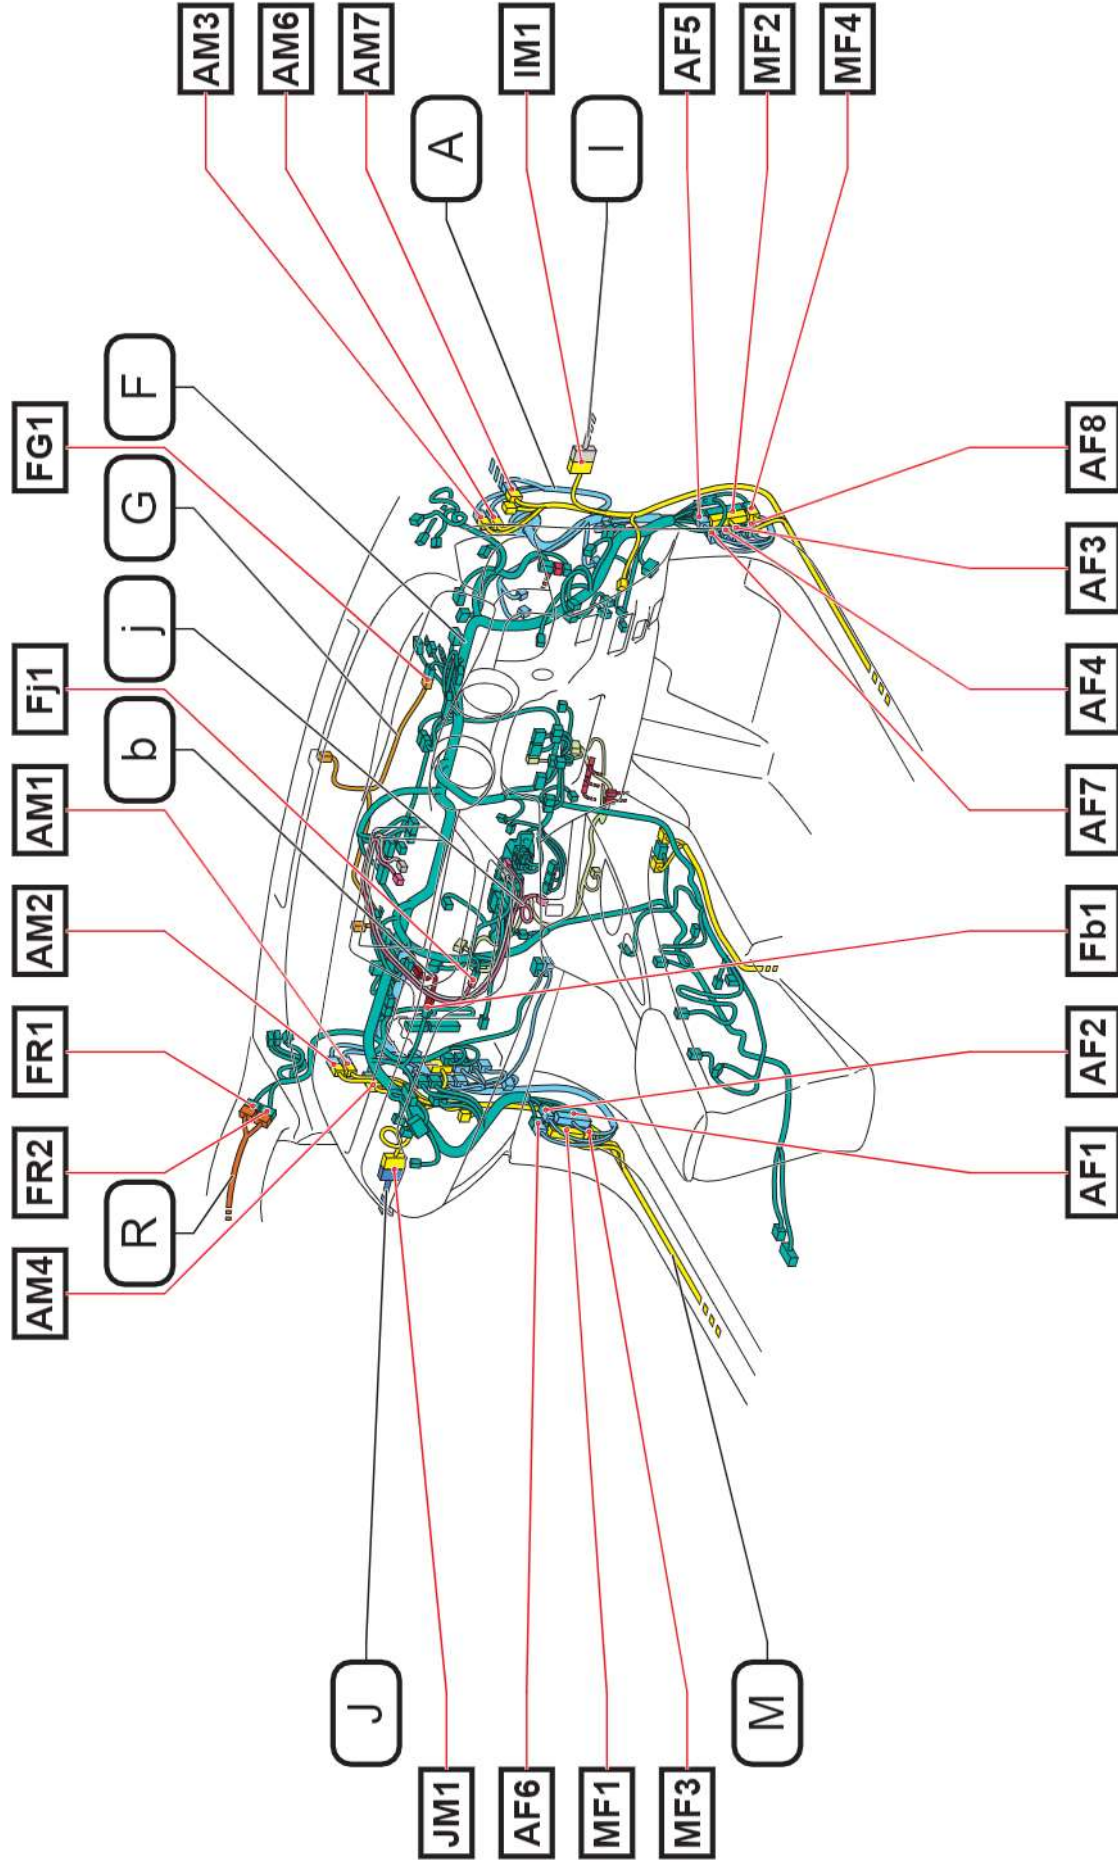





Wire and Wire in Instrument Panel (RHD)

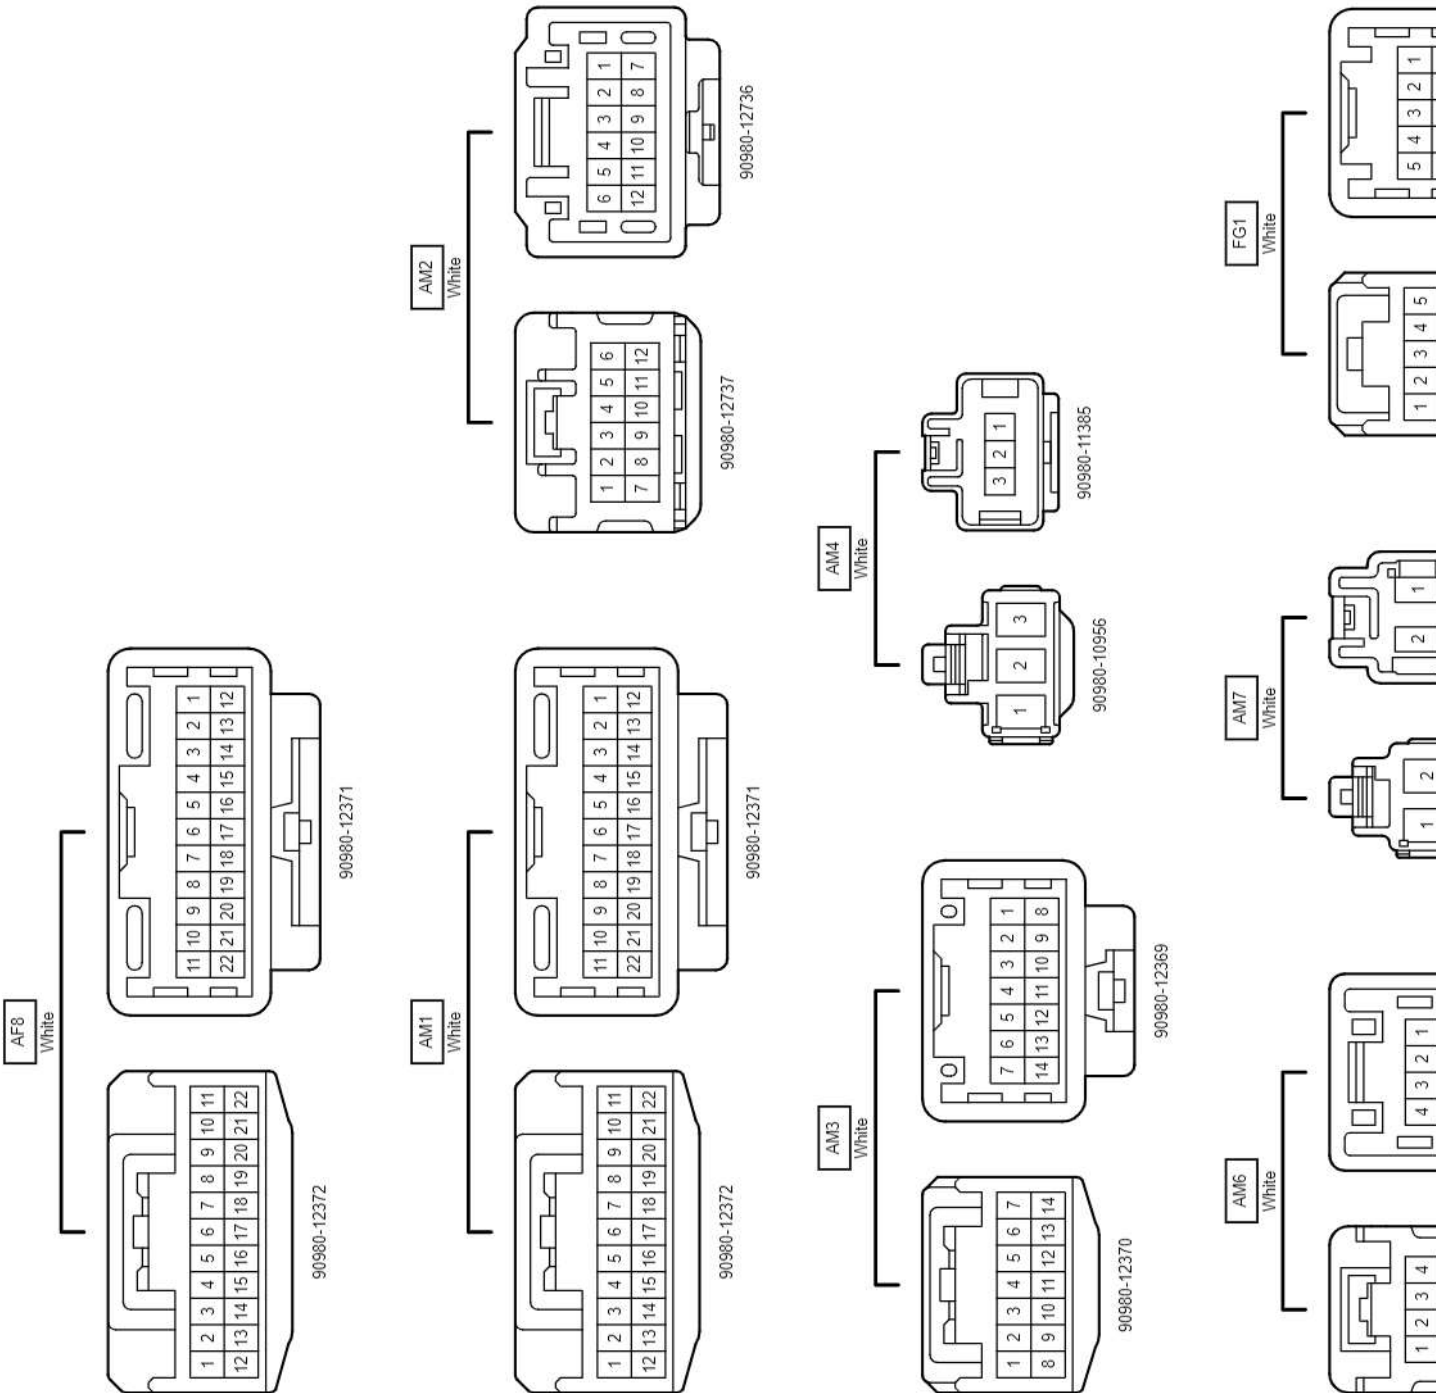

FR1  
White

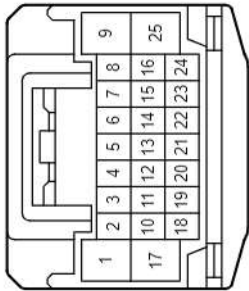


90980-12414

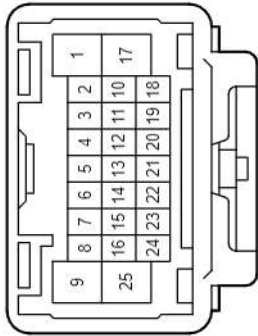


90980-12413

FR2  
Black

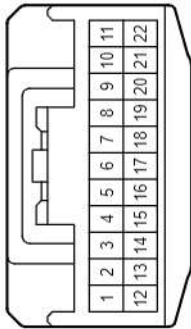


90980-12372

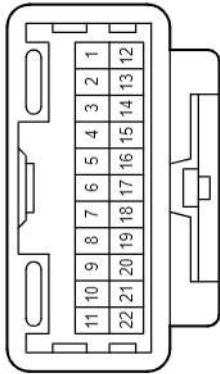


90980-12371

 Fb1  
Yellow




90980-11886

 


90980-11992

FJ1  
White


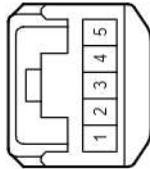


90980-12366

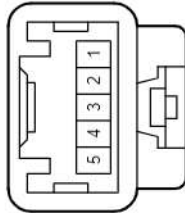


90980-12419

  IM1  
White




Wire and Wire in Instrument Panel (RHD)

JM1  
White

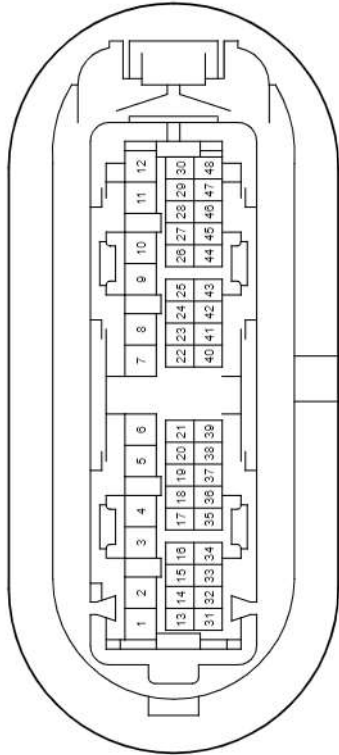


90980-12A09

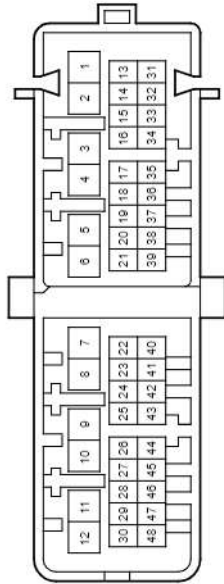


90980-12A06

MF1  
White

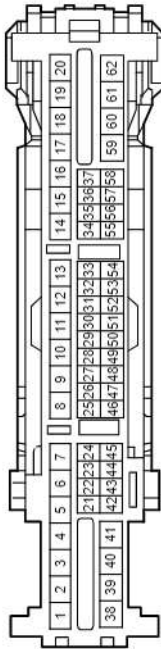


90980-12B22

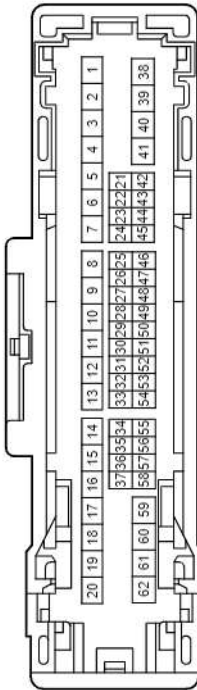


90980-12B21

MF2  
White

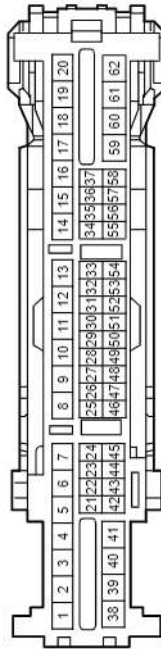

90980-12B22

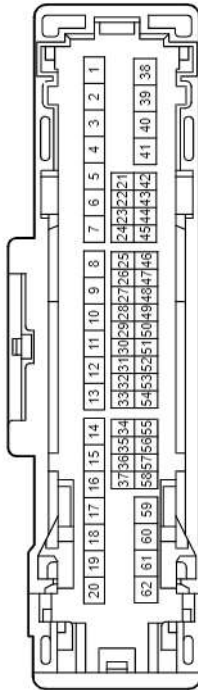

90980-12B21

MF3  
White

MF4  
White

