

SERVICE HINTS

N1 BACK-UP LIGHT SW [NEUTRAL START SW] (A/T)

3-2 : Closed with the shift lever at **R** position

B1 BACK-UP LIGHT SW (M/T)

2-1 : Closed with the shift lever in **R** position

○ : PARTS LOCATION

Code	See Page	Code		See Page	Code	See Page
B1	88 (LHD 1ZZ–FE)	J14	A	92 (LHD)	R6	93 (LHD)
	94 (RHD 1ZZ–FE)			100 (RHD)		101 (RHD)
	96 (RHD 2ZZ–GE)	J15	B	92 (LHD)	R7	93 (LHD)
C11	90 (LHD)			100 (RHD)		101 (RHD)
	98 (RHD)	N1		97 (RHD 2ZZ–GE)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	81	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
II	81	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IM		
2C	79	Engine Wire and Engine Room J/B (Engine Compartment Left)
2F	79	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE5	104 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
	114 (RHD)	
II1	106 (LHD)	Engine Room Main Wire and Floor Wire (Instrument Panel Brace LH)
	116 (RHD)	

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	104 (LHD)	Instrument Panel Brace RH
	114 (RHD)	
BL	108 (LHD)	Back Panel Center
	118 (RHD)	