

COMBINATION METER

SERVICE HINTS

B2 BRAKE FLUID LEVEL WARNING SW

1-2 : Closed with the float down

P2 PARKING BRAKE SW

1-GROUND : Closed with the parking brake lever pulled up

O2 OIL PRESSURE SW

1-GROUND : Opened with the oil pressure above approx. **0.2 kgf/cm² (2.8 psi, 19.6 kpa)**

C11 (A), C12 (B) COMBINATION METER

(A)22-GROUND : Approx. **12** volts with the ignition SW at **ON** position

(A)11-GROUND : Always approx. **12** volts

(A) 3, (A) 7, (A) 10, (A) 19-GROUND : Always continuity

○ : PARTS LOCATION

Code		See Page		Code		See Page		Code		See Page	
B2		88 (LHD 1ZZ-FE)		D3		92 (LHD)		E6	D	96 (RHD 2ZZ-GE)	
		94 (RHD 1ZZ-FE)				100 (RHD)		E7		96 (RHD 2ZZ-GE)	
		96 (RHD 2ZZ-GE)		D4		92 (LHD)		F17		92 (LHD)	
B6	A	90 (LHD)				100 (RHD)				100 (RHD)	
		98 (RHD)		88 (LHD 1ZZ-FE)		J3		91 (LHD)			
B7	B	90 (LHD)		E3	A	94 (RHD 1ZZ-FE)		J14		100 (RHD)	
		98 (RHD)				96 (RHD 2ZZ-GE)		O2		89 (LHD 1ZZ-FE)	
B8		90 (LHD)		E4	B	88 (LHD 1ZZ-FE)				95 (RHD 1ZZ-FE)	
		98 (RHD)				94 (RHD 1ZZ-FE)		97 (RHD 2ZZ-GE)			
B9		90 (LHD)		E4	B	96 (RHD 2ZZ-GE)		O3		99 (RHD)	
		98 (RHD)				88 (LHD 1ZZ-FE)		P2		91 (LHD)	
C11	A	90 (LHD)		E5	C	94 (RHD 1ZZ-FE)				S1	
		98 (RHD)				96 (RHD 2ZZ-GE)		97 (RHD 2ZZ-GE)			
C12	B	90 (LHD)		E6	D	88 (LHD 1ZZ-FE)					
		98 (RHD)				94 (RHD 1ZZ-FE)					

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	81	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IF	81	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
II		
IM		
IP	81	Cowl No.2 Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2C	79	Engine Wire and Engine Room J/B (Engine Compartment Left)
2F	79	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	112 (RHD 2ZZ-GE)	Engine Wire and Engine Room Main Wire (Inside of Engine Room R/B No.1)
IE4	104 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
	114 (RHD)	
IE5	104 (LHD)	
	114 (RHD)	
IG2	116 (RHD)	Engine Room No.2 Wire and Instrument Panel Wire (Instrument Panel Brace LH)

**: GROUND POINTS**

Code	See Page	Ground Points Location
EA	110 (RHD 1ZZ-FE)	Front Right Fender
	112 (RHD 2ZZ-GE)	
EB	102 (LHD 1ZZ-FE)	Front Left Fender
	110 (RHD 1ZZ-FE)	
	112 (RHD 2ZZ-GE)	
IE	104 (LHD)	Cowl Side Panel LH
	114 (RHD)	
IF	104 (LHD)	Instrument Panel Brace RH
	114 (RHD)	
IG	114 (RHD)	Cowl Side Panel RH
IH	104 (LHD)	
	114 (RHD)	