

SERVICE HINTS

F12 FRONT FOG LIGHT RELAY

5-3 : Closed with the front fog light SW at **ON** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B6	90 (LHD)	F5	94 (RHD 1ZZ-FE)	J3	91 (LHD)
	98 (RHD)		96 (RHD 2ZZ-GE)		99 (RHD)
C11	90 (LHD)	F6	88 (LHD 1ZZ-FE)	J7	91 (LHD)
	98 (RHD)		94 (RHD 1ZZ-FE)		99 (RHD)
C14	90 (LHD)	F12	96 (RHD 2ZZ-GE)	J10	99 (RHD)
	98 (RHD)		91 (LHD)		
F5	88 (LHD 1ZZ-FE)		98 (RHD)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IF	81	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
II		
IM		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE4	104 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
	114 (RHD)	
IG2	106 (LHD)	Engine Room No.2 Wire and Instrument Panel Wire (Right Kick Panel)
	116 (RHD)	Engine Room No.2 Wire and Instrument Panel Wire (Instrument Panel Brace LH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	102 (LHD 1ZZ-FE)	Front Right Fender
	110 (RHD 1ZZ-FE)	
	112 (RHD 2ZZ-GE)	
EB	102 (LHD 1ZZ-FE)	Front Left Fender
	110 (RHD 1ZZ-FE)	
	112 (RHD 2ZZ-GE)	
IE	104 (LHD)	Cowl Side Panel LH
	114 (RHD)	
IF	104 (LHD)	Instrument Panel Brace RH
	114 (RHD)	
IG	104 (LHD)	Cowl Side Panel RH
	114 (RHD)	