

SERVICE HINTS**H1, H2 HEADLIGHT BEAM LEVEL CONTROL ACTUATOR LH, RH**3-GROUND : Approx. **12** volts with the light control SW at **HEAD** position

1-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
H1	89 (LHD 1ZZ-FE)	H10	91 (LHD)	J10	91 (LHD)
	94 (RHD 1ZZ-FE)		99 (RHD)		99 (RHD)
	96 (RHD 2ZZ-GE)	J3	91 (LHD)	J11	91 (LHD)
H2	89 (LHD 1ZZ-FE)		99 (RHD)		99 (RHD)
	94 (RHD 1ZZ-FE)	J8	91 (LHD)		
	96 (RHD 2ZZ-GE)		99 (RHD)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	79	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE4	104 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
	114 (RHD)	
IG3	106 (LHD)	Engine Room No.2 Wire and Instrument Panel Wire (Right Kick Panel)
	116 (RHD)	Engine Room No.2 Wire and Instrument Panel Wire (Instrument Panel Brace LH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EB	102 (LHD 1ZZ-FE)	Front Left Fender
	110 (RHD 1ZZ-FE)	
	112 (RHD 2ZZ-GE)	
IE	104 (LHD)	Cowl Side Panel LH
	114 (RHD)	
IG	104 (LHD)	Cowl Side Panel RH
	114 (RHD)	
IH	104 (LHD)	
	114 (RHD)	