

HEADLIGHT (w/ DAYTIME RUNNING LIGHT)

SYSTEM OUTLINE

When the ignition SW is ON and a signal is input from the alternator, if the light control SW is OFF, the daytime running light system operates.

When any of the following conditions are met, the daytime running light is canceled.

- * Ignition SW is turned OFF from ON.
- * Light control SW is turned to TAIL or HEAD position

SERVICE HINTS

HEAD RELAY

- 5-3 : Closed with the light control SW at **HEAD** position or the dimmer SW at **FLASH** position
- Closed with the engine running and the parking brake lever released (Parking brake SW off)

C14 COMBINATION SW

- 13-16 : Closed with the light control SW at **HEAD** position
- 8-16 : Closed with the dimmer SW at **FLASH** position
- 7-16 : Closed with the dimmer SW at **FLASH** or **HIGH** position

P2 PARKING BRAKE SW

- 1-GROUND : Closed with the parking brake lever pulled up

○ : PARTS LOCATION

Code		See Page	Code	See Page	Code		See Page
B6	A	90 (LHD)	H3	89 (LHD 1ZZ-FE)	J3		91 (LHD)
B7	B	90 (LHD)	H4	89 (LHD 1ZZ-FE)	J4	A	91 (LHD)
C11		90 (LHD)	H5	89 (LHD 1ZZ-FE)	J5	B	91 (LHD)
C14		90 (LHD)	H6	89 (LHD 1ZZ-FE)	P2		91 (LHD)

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	83	Engine Room R/B No.2 (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	81	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IB		
IK	81	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2A	79	Engine Wire and Engine Room J/B (Engine Compartment Left)
2D	79	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2E		
2F		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE4	104 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
II1	106 (LHD)	Engine Room Main Wire and Floor Wire (Instrument Panel Brace LH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	102 (LHD 1ZZ-FE)	Front Right Fender
EB	102 (LHD 1ZZ-FE)	Front Left Fender
IE	104 (LHD)	Cowl Side Panel LH
IG	104 (LHD)	Cowl Side Panel RH

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	106 (LHD)	Engine Room No.2 Wire			

