

HEADLIGHT (w/o DAYTIME RUNNING LIGHT)

SERVICE HINTS

HEAD RELAY

5-3 : Closed with the light control SW at **HEAD** position or the dimmer SW at **FLASH** position

C14 COMBINATION SW (EUROPE)

13-16 : Closed with the light control SW at **HEAD** position

8-16 : Closed with the dimmer SW at **FLASH** position

7-16 : Closed with the dimmer SW at **FLASH** or **HIGH** position

C14 COMBINATION SW (AUSTRALIA)

14-9 : Closed with the light control SW at **HEAD** position

1-9 : Closed with the dimmer SW at **FLASH** position

2-9 : Closed with the dimmer SW at **FLASH** or **HIGH** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B6	A	90 (LHD)	89 (LHD 1ZZ-FE)	J3	91 (LHD)
C11		98 (RHD)	94 (RHD 1ZZ-FE)	J4	A
C14		90 (LHD)	96 (RHD 2ZZ-GE)	J5	B
H3		98 (RHD)	89 (LHD 1ZZ-FE)	J11	91 (LHD)
H4		90 (LHD)	94 (RHD 1ZZ-FE)	J11	99 (RHD)
H5		98 (RHD)	96 (RHD 2ZZ-GE)	J11	99 (RHD)
H6		89 (LHD 1ZZ-FE)	94 (RHD 1ZZ-FE)	J11	91 (LHD)
H6		94 (RHD 1ZZ-FE)	96 (RHD 2ZZ-GE)	J11	99 (RHD)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	81	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2A	79	Engine Wire and Engine Room J/B (Engine Compartment Left)
2D	79	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE4	104 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
	114 (RHD)	
IG2	106 (LHD)	Engine Room No.2 Wire and Instrument Panel Wire (Right Kick Panel)
	116 (RHD)	Engine Room No.2 Wire and Instrument Panel Wire (Instrument Panel Brace LH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	102 (LHD 1ZZ-FE)	Front Right Fender
	110 (RHD 1ZZ-FE)	
	112 (RHD 2ZZ-GE)	
EB	102 (LHD 1ZZ-FE)	Front Left Fender
	110 (RHD 1ZZ-FE)	
	112 (RHD 2ZZ-GE)	
IE	104 (LHD)	Cowl Side Panel LH
	114 (RHD)	
IG	104 (LHD)	Cowl Side Panel RH
	114 (RHD)	
IH	104 (LHD)	Cowl Side Panel RH
	114 (RHD)	

