

I GROUND POINT (LHD)

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J1	89 (LHD 1ZZ-FE)	J10	91 (LHD)	J13	92 (LHD)
J2	89 (LHD 1ZZ-FE)	J11	91 (LHD)	J16	92 (LHD)
J3	91 (LHD)	J12	92 (LHD)		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	82	Engine Room R/B No.1 (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IE	81	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IF		
IH		
II		
IL		
IM		
IO	81	Floor Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IP	81	Cowl No.2 Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IQ		
2B	79	Engine Wire and Engine Room J/B (Engine Compartment Left)
2F	79	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G		
2H		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	102 (LHD 1ZZ-FE)	Engine Wire and Engine Room Main Wire (Inside of Engine Room R/B No.1)
IA1	104 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IB1	104 (LHD)	Roof Wire and Instrument Panel Wire (Left Kick Panel)
ID1	104 (LHD)	Cowl No.2 Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IE5	104 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IH1	106 (LHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
BA1	108 (LHD)	Back Door No.1 Wire and Floor Wire (Quarter Panel LH)
BB1	108 (LHD)	Back Door No.2 Wire and Back Door No.1 Wire (Back Door Upper Left)

: GROUND POINTS

Code	See Page	Ground Points Location
EA	102 (LHD 1ZZ-FE)	Front Right Fender
EB	102 (LHD 1ZZ-FE)	Front Left Fender
EC	102 (LHD 1ZZ-FE)	Cylinder Head Cover LH
ED		
IE	104 (LHD)	Cowl Side Panel LH
IF	104 (LHD)	Instrument Panel Brace RH
IG	104 (LHD)	Cowl Side Panel RH
IH	104 (LHD)	
BI	108 (LHD)	Roof Left
BJ	108 (LHD)	Luggage Room Left
BK	108 (LHD)	Back Door Left
BL	108 (LHD)	Back Panel Center

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	102 (LHD 1ZZ-FE)	Engine Room Main Wire	I1	106 (LHD)	Engine Room Main Wire
E2			I3	106 (LHD)	Engine Room No.2 Wire