

I GROUND POINT (RHD)

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J1	95 (RHD 1ZZ-FE)	J3	99 (RHD)	J13	100 (RHD)
	97 (RHD 2ZZ-GE)	J10	99 (RHD)	J16	100 (RHD)
J2	95 (RHD 1ZZ-FE)	J11	99 (RHD)		
	97 (RHD 2ZZ-GE)	J12	100 (RHD)		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	82	Engine Room R/B No.1 (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IE	81	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IF		
IH		
II		
IL		
IM		
IN	81	Floor Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IO		
IP	81	Cowl No.2 Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IQ		
2B	79	Engine Wire and Engine Room J/B (Engine Compartment Left)
2F	79	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G		
2H		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	110 (RHD 1ZZ-FE)	Engine Wire and Engine Room Main Wire (Inside of Engine Room R/B No.1)
	112 (RHD 2ZZ-GE)	
IA1	114 (RHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IB1	114 (RHD)	Roof Wire and Instrument Panel Wire (Left Kick Panel)
ID1	114 (RHD)	Cowl No.2 Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IE5	114 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IG3	116 (RHD)	Engine Room No.2 Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IH1	116 (RHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
BA1	118 (RHD)	Back Door No.1 Wire and Floor Wire (Quarter Panel LH)
BB1	118 (RHD)	Back Door No.2 Wire and Back Door No.1 Wire (Back Door Upper Left)

**: GROUND POINTS**

Code	See Page	Ground Points Location
EA	110 (RHD 1ZZ-FE)	Front Right Fender
	112 (RHD 2ZZ-GE)	
EB	110 (RHD 1ZZ-FE)	Front Left Fender
	112 (RHD 2ZZ-GE)	
EC	110 (RHD 1ZZ-FE)	Cylinder Head Cover LH
	112 (RHD 2ZZ-GE)	
ED	110 (RHD 1ZZ-FE)	
	112 (RHD 2ZZ-GE)	
IE	114 (RHD)	Cowl Side Panel LH
IF	114 (RHD)	Instrument Panel Brace RH
IG	114 (RHD)	Cowl Side Panel RH
IH		
BI	118 (RHD)	Roof Left
BJ	118 (RHD)	Luggage Room Left
BK	118 (RHD)	Back Door Left
BL	118 (RHD)	Back Panel Center

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	110 (RHD 1ZZ-FE)	Engine Room Main Wire	E2	112 (RHD 2ZZ-GE)	Engine Room Main Wire
	112 (RHD 2ZZ-GE)		I1	116 (RHD)	
E2	110 (RHD 1ZZ-FE)		I3	116 (RHD)	Engine Room No.2 Wire