

SYSTEM OUTLINE

ILLUMINATED ENTRY SYSTEM

* Lights ON condition

When any door (Driver's side, front passenger's side, or back door etc.) is opened.

* Lights OFF condition

If any of the following conditions are met while the dome light is ON, the light fades out and is turned OFF.

When approximately 15 seconds have elapsed after all doors are closed.

When all doors are closed and the driver's side door and the front passenger's side door is locked.

When all the doors are closed with the ignition SW at ACC or ON position.

SERVICE HINTS

D3, D4 DOOR COURTESY SW LH, RH

1-GROUND : Closed with door open

L4 LUGGAGE COMPARTMENT LIGHT SW

1-GROUND : Luggage compartment door open

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B6	A	90 (LHD)	D4	100 (RHD)	J15 B
		98 (RHD)		88 (LHD 1ZZ-FE)	L3
B7	B	90 (LHD)	E3 A	94 (RHD 1ZZ-FE)	
		98 (RHD)		96 (RHD 2ZZ-GE)	L4
C11	A	90 (LHD)		88 (LHD 1ZZ-FE)	
		98 (RHD)	E4 B	94 (RHD 1ZZ-FE)	M2 A
C12	B	90 (LHD)		96 (RHD 2ZZ-GE)	
		98 (RHD)	J6	99 (RHD)	P5 B
D3		92 (LHD)	J14 A	92 (LHD)	
		100 (RHD)		100 (RHD)	
D4		92 (LHD)	J15 B	92 (LHD)	

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
II		
IK	81	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IM		
IN	81	Floor Wire and Instrument Panel J/B (Instrument Panel Brace RH)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	104 (LHD) 114 (RHD)	Roof Wire and Instrument Panel Wire (Left Kick Panel)
IE4	104 (LHD) 114 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IE5	104 (LHD) 114 (RHD)	
BA1	108 (LHD) 118 (RHD)	Back Door No.1 Wire and Floor Wire (Quarter Panel LH)
BB1	108 (LHD) 118 (RHD)	Back Door No.2 Wire and Back Door No.1 Wire (Back Door Upper Left)

INTERIOR LIGHT



: GROUND POINTS

Code	See Page	Ground Points Location
IF	104 (LHD)	Instrument Panel Brace RH
	114 (RHD)	
IH	104 (LHD)	Cowl Side Panel RH
	114 (RHD)	

