

ILLUMINATION (w/o DAYTIME RUNNING LIGHT)

SERVICE HINTS

TAIL RELAY

5-3 : Closed with the light control SW at **TAIL** or **HEAD** position

C14 COMBINATION SW (EUROPE)

14-16 : Closed with the light control SW at **TAIL** or **HEAD** position

C14 COMBINATION SW (AUSTRALIA)

15-9 : Closed with the light control SW at **TAIL** or **HEAD** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A14	90 (LHD)	C12	B	98 (RHD)	J10
	98 (RHD)				
A18	90 (LHD)	C14		90 (LHD)	J11
	98 (RHD)				
B6	A	G1		91 (LHD)	O3
C9		H9		99 (RHD)	R2
C10		H10		91 (LHD)	R3
C11	A	J3		99 (RHD)	R5
C12	B	J6		99 (RHD)	
C12	B	J8		91 (LHD)	

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	81	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IE	81	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IF		
II		
IL		
IM		
IN	81	Floor Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IP	81	Cowl No.2 Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2A	79	Engine Wire and Engine Room J/B (Engine Compartment Left)
2E	79	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	104 (LHD)	Cowl No.2 Wire and Instrument Panel Wire (Instrument Panel Brace LH)
	114 (RHD)	

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	104 (LHD)	Cowl Side Panel LH
	114 (RHD)	
IF	104 (LHD)	Instrument Panel Brace RH
	114 (RHD)	
IH	104 (LHD)	Cowl Side Panel RH
	114 (RHD)	

