

MULTIPLEX COMMUNICATION SYSTEM (LHD)

SERVICE HINTS

BODY ECU

- 3-GROUND : Approx. **12** volts with the ignition SW at **ON** or **ST** position
- 8-GROUND : Always approx. **12** volts
- 5-GROUND : Always approx. **12** volts
- 11-GROUND : Always continuity
- 12-GROUND : Approx. **12** volts with the ignition SW at **ACC** or **ON** position

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
A14	A	90 (LHD)	D6		92 (LHD)	J16		92 (LHD)
A18	B	90 (LHD)	E3	A	88 (LHD 1ZZ-FE)	L3		92 (LHD)
B2		88 (LHD 1ZZ-FE)	E4	B	88 (LHD 1ZZ-FE)	L4		92 (LHD)
B6	A	90 (LHD)	F12		91 (LHD)	M1		92 (LHD)
B7	B	90 (LHD)	F17		92 (LHD)	M2	A	92 (LHD)
B8		90 (LHD)	H9		91 (LHD)	P2		91 (LHD)
B9		90 (LHD)	J3		91 (LHD)	P3		91 (LHD)
B10		92 (LHD)	J6		91 (LHD)	P4		91 (LHD)
C11	A	90 (LHD)	J7		91 (LHD)	P5	B	93 (LHD)
C12	B	90 (LHD)	J8		91 (LHD)	P6		93 (LHD)
C14		90 (LHD)	J11		91 (LHD)	P7		93 (LHD)
D2		92 (LHD)	J12		92 (LHD)	R4		91 (LHD)
D3		92 (LHD)	J13		92 (LHD)	T3		91 (LHD)
D4		92 (LHD)	J14	A	92 (LHD)	U1		91 (LHD)
D5		92 (LHD)	J15	B	92 (LHD)			

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	83	Engine Room R/B No.2 (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	81	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IB		
IF	81	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
II		
IK		
IL		
IM		
IN	81	Floor Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IO		
IP	81	Cowl No.2 Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2A	79	Engine Wire and Engine Room J/B (Engine Compartment Left)
2D	79	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2E		
2F		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	104 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2		
IB1	104 (LHD)	Roof Wire and Instrument Panel Wire (Left Kick Panel)
IE4	104 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IE5		
IF1	106 (LHD)	Floor Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IF2		
IG2	106 (LHD)	Engine Room No.2 Wire and Instrument Panel Wire (Right Kick Panel)
IH1	106 (LHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IH2		
II1	106 (LHD)	Engine Room Main Wire and Floor Wire (Instrument Panel Brace LH)
BA1	108 (LHD)	Back Door No.1 Wire and Floor Wire (Quarter Panel LH)
BB1	108 (LHD)	Back Door No.2 Wire and Back Door No.1 Wire (Back Door Upper Left)

 : GROUND POINTS

Code	See Page	Ground Points Location
EB	102 (LHD 1ZZ-FE)	Front Left Fender
IE	104 (LHD)	Cowl Side Panel LH
IF	104 (LHD)	Instrument Panel Brace RH
IH	104 (LHD)	Cowl Side Panel RH
BJ	108 (LHD)	Luggage Room Left