

MULTIPLEX COMMUNICATION SYSTEM (RHD)

SERVICE HINTS

BODY ECU

- 3-GROUND : Approx. **12** volts with the ignition SW at **ON** or **ST** position
- 8-GROUND : Always approx. **12** volts
- 5-GROUND : Always approx. **12** volts
- 11-GROUND : Always continuity
- 12-GROUND : Approx. **12** volts with the ignition SW at **ACC** or **ON** position

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
A14	A	98 (RHD)	D6	B	100 (RHD)	J15	B	100 (RHD)
A18	B	98 (RHD)	E3	A	94 (RHD 1ZZ–FE)	J16		100 (RHD)
B2		94 (RHD 1ZZ–FE)			96 (RHD 2ZZ–GE)	L3		100 (RHD)
		96 (RHD 2ZZ–GE)	E4	B	94 (RHD 1ZZ–FE)	L4	100 (RHD)	
B6	A	98 (RHD)			96 (RHD 2ZZ–GE)	M1		101 (RHD)
B7	B	98 (RHD)	F12		98 (RHD)	M2	A	101 (RHD)
B8		98 (RHD)	F17		100 (RHD)	O3		99 (RHD)
B9		98 (RHD)	H9		99 (RHD)	P2		99 (RHD)
B10		100 (RHD)	J3		99 (RHD)	P3		99 (RHD)
C11	A	98 (RHD)	J6		99 (RHD)	P4		99 (RHD)
C12	B	98 (RHD)	J7		99 (RHD)	P5	B	101 (RHD)
C14		98 (RHD)	J8		99 (RHD)	P6		101 (RHD)
D2		100 (RHD)	J9		99 (RHD)	P7		101 (RHD)
D3		100 (RHD)	J11		99 (RHD)	R4		99 (RHD)
D4		100 (RHD)	J12		100 (RHD)	T3		99 (RHD)
D5	A	100 (RHD)	J13		100 (RHD)	U1		99 (RHD)
	B	100 (RHD)	J14		100 (RHD)			
D6	A	100 (RHD)	J14	A	100 (RHD)			

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	81	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IB		
IF	81	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
II		
IK		
IL		
IM		
IN	81	Floor Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IO		
IP	81	Cowl No.2 Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2A	79	Engine Wire and Engine Room J/B (Engine Compartment Left)
2E	79	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	114 (RHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2		
IB1	114 (RHD)	Roof Wire and Instrument Panel Wire (Left Kick Panel)
IE4	114 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IE5		
IF1	116 (RHD)	Floor Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IF2		
IG2	116 (RHD)	Engine Room No.2 Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IH1	116 (RHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IH2		
BA1	118 (RHD)	Back Door No.1 Wire and Floor Wire (Quarter Panel LH)
BB1	118 (RHD)	Back Door No.2 Wire and Back Door No.1 Wire (Back Door Upper Left)

 : GROUND POINTS

Code	See Page	Ground Points Location
EA	110 (RHD 1ZZ-FE)	Front Right Fender
	112 (RHD 2ZZ-GE)	
IE	114 (RHD)	Cowl Side Panel LH
IF	114 (RHD)	Instrument Panel Brace RH
IG	114 (RHD)	Cowl Side Panel RH
IH		
BJ	118 (RHD)	Luggage Room Left