

SYSTEM OUTLINE

KEY OFF MOON ROOF OPERATION

Within approx. 43 sec. after the ignition SW is turned from on to off, the moon roof can be operated. However, if the driver or passenger door is opened during this period of time, the moon roof operation is stopped even through 43 sec. have not elapsed.

SERVICE HINTS

M1 MOON ROOF CONTROL RELAY AND MOTOR

- 1, 6-GROUND : Always continuity
- 8-GROUND : Approx. **12** volts with the ignition SW at **ON** position
- 10-GROUND : Approx. **12** volts with the ignition SW on and the moon roof control SW at **CLOSE** or **UP** position
- 9-GROUND : Approx. **12** volts with the ignition SW on and the moon roof control SW at **OPEN** or **DOWN** position

M2 MOON ROOF CONTROL SW

- 4-8 : Closed with the moon roof control SW at **CLOSE** position
- 3-8 : Closed with the moon roof control SW at **OPEN** position
- 8-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B6	A	90 (LHD)	D4	100 (RHD)	J14
		98 (RHD)	J3	99 (RHD)	M1
B7	B	90 (LHD)	J8	91 (LHD)	101 (RHD)
		98 (RHD)		99 (RHD)	M2
D3		92 (LHD)	J10	91 (LHD)	101 (RHD)
		100 (RHD)		99 (RHD)	
D4		92 (LHD)	J11	91 (LHD)	

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
II	81	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IK		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	104 (LHD)	Roof Wire and Instrument Panel Wire (Left Kick Panel)
	114 (RHD)	

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	114 (RHD)	Cowl Side Panel LH
IF	104 (LHD)	Instrument Panel Brace RH
	114 (RHD)	
IH	104 (LHD)	Cowl Side Panel RH
BI	108 (LHD)	Roof Left
	118 (RHD)	