

SYSTEM OUTLINE

Fan motor operation

The fan motor is operated according to the condition of the A/C operation, water temperature, or abnormality in the A/C system.

SERVICE HINTS

A4 A/C SINGLE PRESSURE SW

3-2 : Open above approx. **15.5 kgf/cm² (220 psi, 1520 kpa)**

Close below approx. **12.5 kgf/cm² (178 psi, 1226 kpa)**

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A2	88 (LHD 1ZZ-FE)	A4	94 (RHD 1ZZ-FE)	E4	96 (RHD 2ZZ-GE)
	94 (RHD 1ZZ-FE)		96 (RHD 2ZZ-GE)	R1	89 (LHD 1ZZ-FE)
	96 (RHD 2ZZ-GE)	E4	88 (LHD 1ZZ-FE)		95 (RHD 1ZZ-FE)
A4	88 (LHD 1ZZ-FE)		94 (RHD 1ZZ-FE)		97 (RHD 2ZZ-GE)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	81	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2F	79	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G		
2H		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE5	104 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IG2	106 (LHD)	Engine Room No.2 Wire and Instrument Panel Wire (Right Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	102 (LHD 1ZZ-FE)	Front Right Fender
EB	102 (LHD 1ZZ-FE)	Front Left Fender
	110 (RHD 1ZZ-FE)	
	112 (RHD 2ZZ-GE)	
IG	104 (LHD)	Cowl Side Panel RH