

SERVICE HINTS

C14 REAR FOR LIGHT SW [COMB. SW]

12-10 : Closed with the rear fog light SW at **ON** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B6	90 (LHD)	C14	98 (RHD)	R4	91 (LHD)
	98 (RHD)	J3	91 (LHD)		99 (RHD)
C11	A		99 (RHD)	R8	93 (LHD)
		J8	91 (LHD)		101 (RHD)
C12	B		99 (RHD)	R9	93 (LHD)
		J16	92 (LHD)		101 (RHD)
C14	90 (LHD)		100 (RHD)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IF	81	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
II		
IL		
IM		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF2	106 (LHD)	Floor Wire and Instrument Panel Wire (Instrument Panel Brace LH)
	116 (RHD)	

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	104 (LHD)	Cowl Side Panel LH
	114 (RHD)	
IF	104 (LHD)	Instrument Panel Brace RH
	114 (RHD)	
IG	104 (LHD)	Cowl Side Panel RH
	114 (RHD)	
BJ	108 (LHD)	Luggage Room Left
	118 (RHD)	
BL	108 (LHD)	Back Panel Center
	118 (RHD)	

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	108 (LHD)	Floor Wire	B1	116 (RHD)	Floor Wire