

REAR WINDOW DEFOGGER AND MIRROR HEATER

SERVICE HINTS

DEF RELAY

5-3 : Closed with the ignition SW at **ON** position and the defogger SW [A/C SW] on

A18 A/C SW

1-GROUND : Approx. **12** volts with the ignition SW at **ON** position

3-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code		See Page
A14	90 (LHD)	J12	92 (LHD)	R13	B	93 (LHD)
	98 (RHD)		100 (RHD)			101 (RHD)
A18	90 (LHD)	J13	92 (LHD)	R15		93 (LHD)
	98 (RHD)		100 (RHD)		101 (RHD)	
J3	91 (LHD)	N3	93 (LHD 1ZZ–FE)	R16		93 (LHD)
	99 (RHD)		101 (RHD)		101 (RHD)	
J11	91 (LHD)	R12	A	93 (LHD)		
	99 (RHD)			101 (RHD)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IE	81	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
II		
IL		
IN	81	Floor Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IP	81	Cowl No.2 Wire and Instrument Panel J/B (Instrument Panel Brace RH)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	104 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
	114 (RHD)	
IA2	104 (LHD)	
IH1	106 (LHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
	116 (RHD)	
IH2	106 (LHD)	
BA1	108 (LHD)	Back Door No.1 Wire and Floor Wire (Quarter Panel LH)
	118 (RHD)	
BB1	108 (LHD)	Back Door No.2 Wire and Back Door No.1 Wire (Back Door Upper Left)
	118 (RHD)	

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	104 (LHD)	Cowl Side Panel LH
	114 (RHD)	
IF	104 (LHD)	Instrument Panel Brace RH
	114 (RHD)	
IH	104 (LHD)	Cowl Side Panel RH
	114 (RHD)	
BJ	108 (LHD)	Luggage Room Left
	118 (RHD)	



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	108 (LHD)	Floor Wire	B1	116 (RHD)	Floor Wire