

STARTING AND IGNITION

SERVICE HINTS

I10 IGNITION SW

5-6 : Closed with the ignition SW at **ON** or **ST** position

5-4 : Closed with the ignition SW at **ST** position

ST RELAY

5-3 : Closed with the ignition SW at **ST** position (M/T)

5-3 : Closed with the neutral start SW on and the ignition SW at **ST** position (A/T)

S3 (A), S4 (B) STARTER

Points closed with the ignition SW at **ST** position (M/T)

Points closed with the neutral start SW at **P** or **N** position and the ignition SW at **ST** position (A/T)

N1 NEUTRAL START SW

6-9 : Closed with the A/T shift lever at **P** or **N** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
E4	B	88 (LHD 1ZZ-FE)	I2	97 (RHD 2ZZ-GE)	J2
		94 (RHD 1ZZ-FE)	I3	89 (LHD 1ZZ-FE)	N1
		96 (RHD 2ZZ-GE)		95 (RHD 1ZZ-FE)	N2
E6	D	88 (LHD 1ZZ-FE)		97 (RHD 2ZZ-GE)	
		94 (RHD 1ZZ-FE)	I4	89 (LHD 1ZZ-FE)	
		96 (RHD 2ZZ-GE)		95 (RHD 1ZZ-FE)	
I1		89 (LHD 1ZZ-FE)		97 (RHD 2ZZ-GE)	S3
		95 (RHD 1ZZ-FE)	I10	91 (LHD)	A
		97 (RHD 2ZZ-GE)		99 (RHD)	
I2		89 (LHD 1ZZ-FE)	J2	89 (LHD 1ZZ-FE)	S4
		95 (RHD 1ZZ-FE)		95 (RHD 1ZZ-FE)	
					B
					89 (LHD 1ZZ-FE)
					95 (RHD 1ZZ-FE)
					97 (RHD 2ZZ-GE)

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	82	Engine Room R/B No.1 (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	81	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IK	81	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2A	79	Engine Wire and Engine Room J/B (Engine Compartment Left)
2B		
2C		
2F	79	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G		
2H		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	102 (LHD 1ZZ-FE)	Engine Wire and Engine Room Main Wire (Inside of Engine Room R/B No.1)
	110 (RHD 1ZZ-FE)	
	112 (RHD 2ZZ-GE)	
IE1	104 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
	114 (RHD)	

**: GROUND POINTS**

Code	See Page	Ground Points Location
EB	102 (LHD 1ZZ-FE)	Front Left Fender
	110 (RHD 1ZZ-FE)	
	112 (RHD 2ZZ-GE)	
EC	102 (LHD 1ZZ-FE)	Cylinder Head Cover LH
	110 (RHD 1ZZ-FE)	
	112 (RHD 2ZZ-GE)	