

TAILLIGHT

SERVICE HINTS

TAIL RELAY

5-3 : Closed with the light control SW at **TAIL** or **HEAD** position

C14 COMBINATION SW (EUROPE)

14-16 : Closed with the light control SW at **TAIL** or **HEAD** position

C14 COMBINATION SW (AUSTRALIA)

15-9 : Closed with the light control SW at **TAIL** or **HEAD** position

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
B6	A	90 (LHD)	J3		91 (LHD)	J15	B	92 (LHD)
		98 (RHD)			99 (RHD)			100 (RHD)
C14		90 (LHD)	J4	A	91 (LHD)	L1		92 (LHD)
		98 (RHD)			99 (RHD)			100 (RHD)
F3		88 (LHD 1ZZ-FE)	J5	B	91 (LHD)	L2		92 (LHD)
		94 (RHD 1ZZ-FE)			99 (RHD)			100 (RHD)
		96 (RHD 2ZZ-GE)	J11		91 (LHD)	R6		93 (LHD)
F4		88 (LHD 1ZZ-FE)			99 (RHD)			101 (RHD)
		94 (RHD 1ZZ-FE)	J14	A	92 (LHD)	R7		93 (LHD)
		96 (RHD 2ZZ-GE)			100 (RHD)			101 (RHD)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	81	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IC		
IE	81	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IO	81	Floor Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2A	79	Engine Wire and Engine Room J/B (Engine Compartment Left)
2E	79	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BA1	108 (LHD)	Back Door No.1 Wire and Floor Wire (Quarter Panel LH)
	118 (RHD)	
BB1	108 (LHD)	Back Door No.2 Wire and Back Door No.1 Wire (Back Door Upper Left)
	118 (RHD)	

**: GROUND POINTS**

Code	See Page	Ground Points Location
EA	102 (LHD 1ZZ-FE)	Front Right Fender
	110 (RHD 1ZZ-FE)	
	112 (RHD 2ZZ-GE)	
EB	102 (LHD 1ZZ-FE)	Front Left Fender
	110 (RHD 1ZZ-FE)	
	112 (RHD 2ZZ-GE)	
IE	104 (LHD)	Cowl Side Panel LH
IG	104 (LHD)	Cowl Side Panel RH
	114 (RHD)	
IH	114 (RHD)	
BK	108 (LHD)	Back Door Left
	118 (RHD)	
BL	108 (LHD)	Back Panel Center
	118 (RHD)	

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B2	108 (LHD)	Back Door No.2 Wire	B2	116 (RHD)	Back Door No.2 Wire