

SERVICE HINTS

T3 TURN SIGNAL FLASHER RELAY

- 3-GROUND : Approx. **12** volts with the ignition SW on or the hazard SW on
 1-GROUND : Changes from **12** to **0** volts with the ignition SW on and the turn signal SW **LH** or **RH** position,
 and with the hazard SW on
 2-GROUND : Always continuity

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code	See Page
C11	A	98 (RHD)	F10		96 (RHD 2ZZ–GE)	J9	99 (RHD)
C12	B	98 (RHD)	H9		99 (RHD)	J11	99 (RHD)
C14		98 (RHD)	J4	A	99 (RHD)	R6	101 (RHD)
F7		96 (RHD 2ZZ–GE)	J5	B	99 (RHD)	R7	101 (RHD)
F8		96 (RHD 2ZZ–GE)	J6		99 (RHD)	T3	99 (RHD)
F9		96 (RHD 2ZZ–GE)	J7		99 (RHD)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	81	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IE	81	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
II		
IM		
IO	81	Floor Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2F	79	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE4	114 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	112 (RHD 2ZZ-GE)	Front Right Fender
EB	112 (RHD 2ZZ-GE)	Front Left Fender
IF	114 (RHD)	Instrument Panel Brace RH
IG	114 (RHD)	Cowl Side Panel LH
IH	114 (RHD)	Cowl Side Panel RH
BL	118 (RHD)	Back Panel Center

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	112 (RHD 2ZZ-GE)	Engine Room Main Wire	I3	116 (RHD)	Engine Room No.2 Wire