

TURN SIGNAL AND HAZARD WARNING LIGHT (EUROPE)

SERVICE HINTS

T3 TURN SIGNAL FLASHER RELAY

- 1-GROUND : Approx. **12** volts with the ignition SW on
- 7-GROUND : Always continuity
- 4-GROUND : Always approx. **12** volts

○ : PARTS LOCATION

Code		See Page		Code	See Page	Code	See Page			
B6		90 (LHD)		F9	88 (LHD 1ZZ–FE)		J7	91 (LHD)		
		98 (RHD)			94 (RHD 1ZZ–FE)			99 (RHD)		
C11	A	90 (LHD)		F10	88 (LHD 1ZZ–FE)		J9	99 (RHD)		
		98 (RHD)			94 (RHD 1ZZ–FE)		J10	91 (LHD)		
C12	B	90 (LHD)		H9	91 (LHD)		J11	91 (LHD)		
		98 (RHD)			99 (RHD)			99 (RHD)		
C14		90 (LHD)		J3		91 (LHD)		R6	93 (LHD)	
		98 (RHD)		J4	A	91 (LHD)			101 (RHD)	
F7		88 (LHD 1ZZ–FE)				J5		B	99 (RHD)	
		94 (RHD 1ZZ–FE)		91 (LHD)					101 (RHD)	
F8		88 (LHD 1ZZ–FE)		J6		99 (RHD)		T3	91 (LHD)	
		94 (RHD 1ZZ–FE)				99 (RHD)			99 (RHD)	

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	81	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IE	81	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
II		
IM		
IO	81	Floor Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2F	79	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE4	104 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
	114 (RHD)	

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	102 (LHD 1ZZ-FE)	Front Right Fender
	110 (RHD 1ZZ-FE)	
EB	102 (LHD 1ZZ-FE)	Front Left Fender
	110 (RHD 1ZZ-FE)	
IE	104 (LHD)	Cowl Side Panel LH
IF	104 (LHD)	Instrument Panel Brace RH
	114 (RHD)	
IG	104 (LHD)	Cowl Side Panel RH
	114 (RHD)	
IH	104 (LHD)	Cowl Side Panel RH
	114 (RHD)	
BL	108 (LHD)	Back Panel Center
	118 (RHD)	

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	102 (LHD 1ZZ-FE)	Engine Room Main Wire	I3	106 (LHD)	Engine Room No.2 Wire
	110 (RHD 1ZZ-FE)			116 (RHD)	