



The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

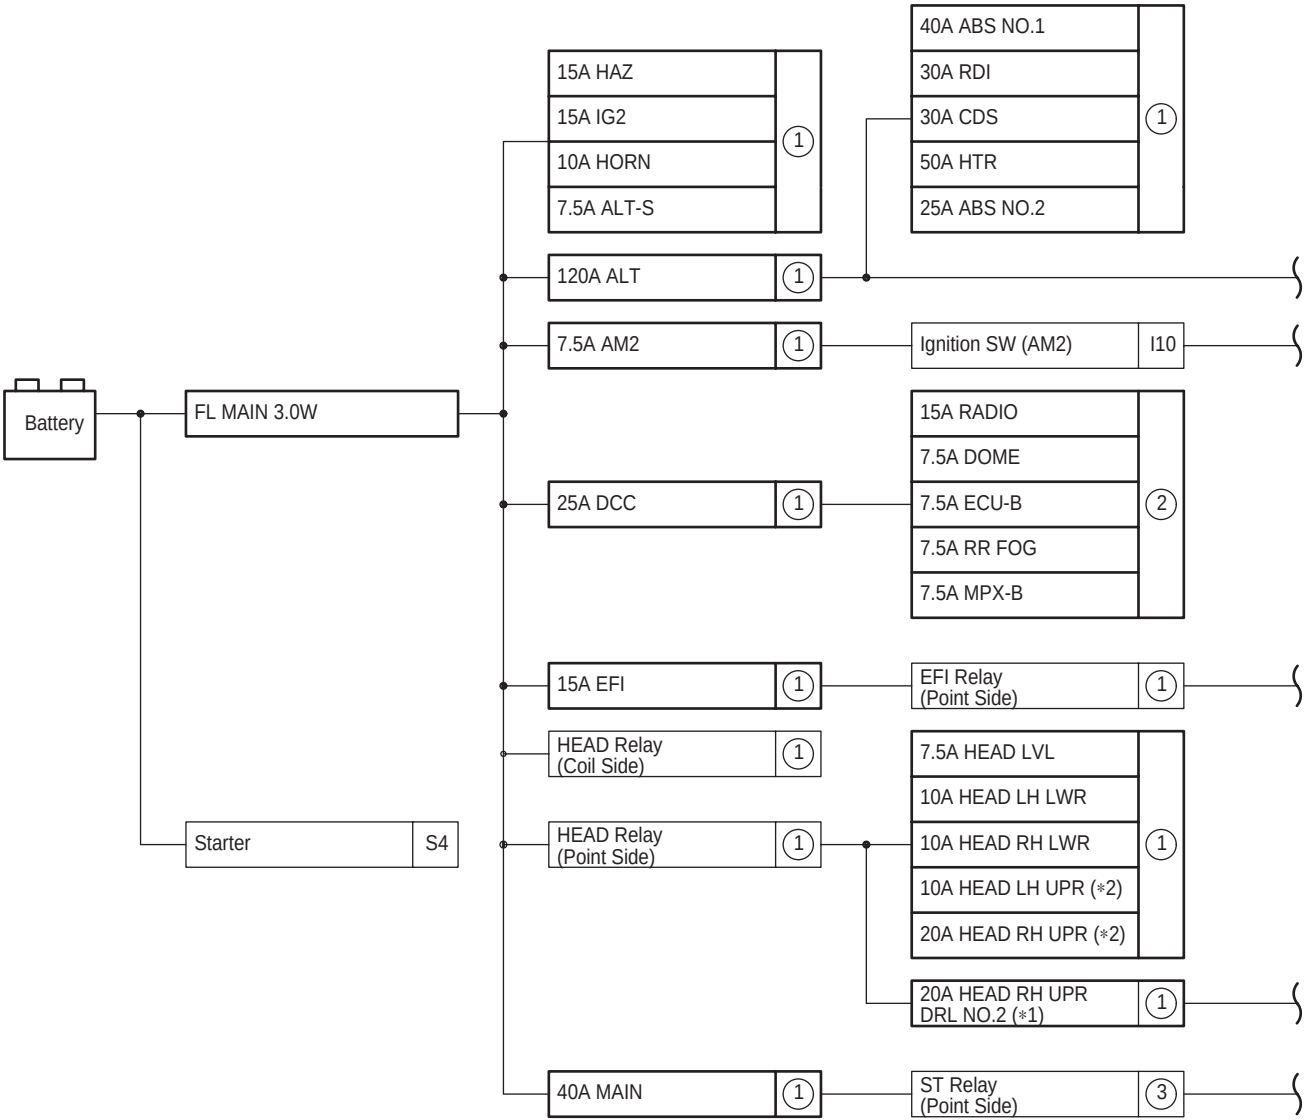

[LOCATION] ① : Engine Room J/B (See page 78) ② : Instrument Panel J/B (See page 80)

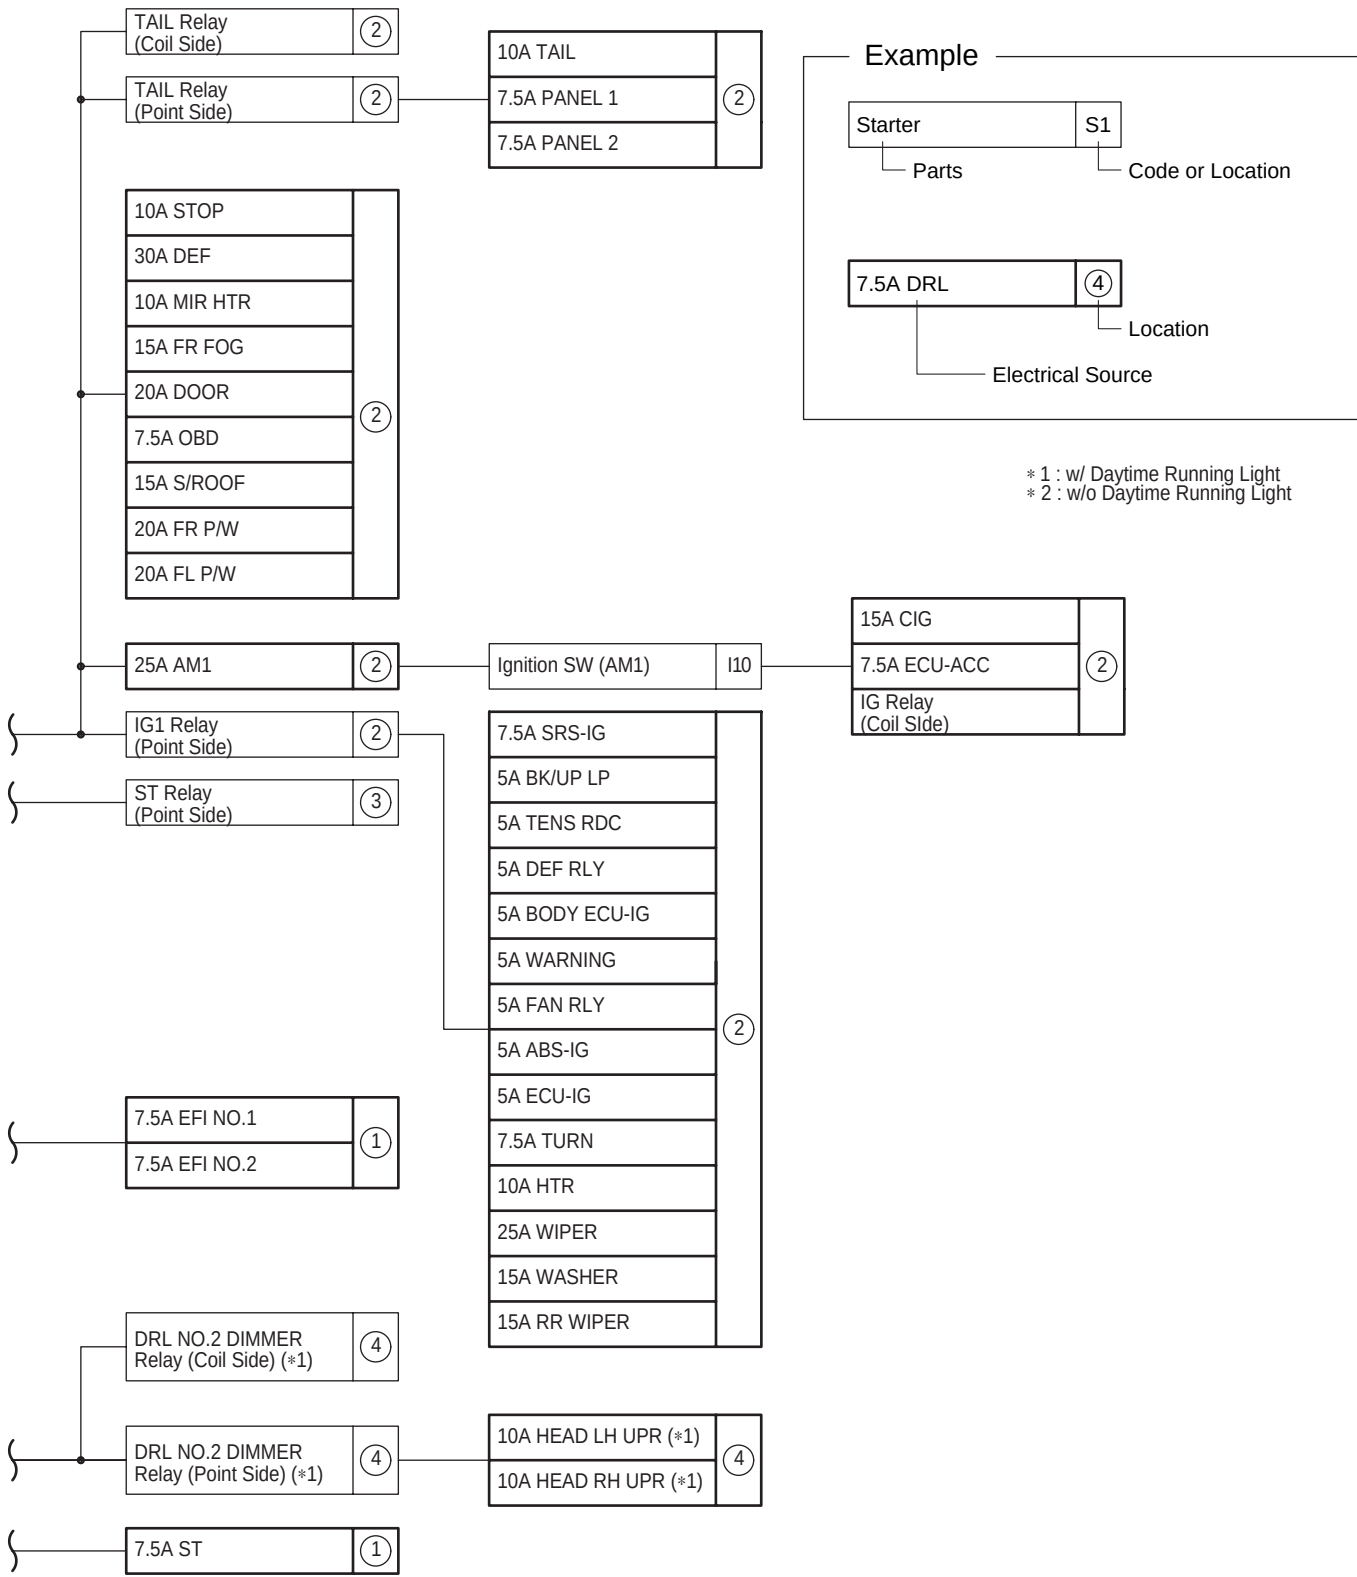

③ : Engine Room R/B No.1 (See page 82) ④ : Engine Room R/B No.2 (See page 83)