


Position of Parts in Instrument Panel

[LHD]

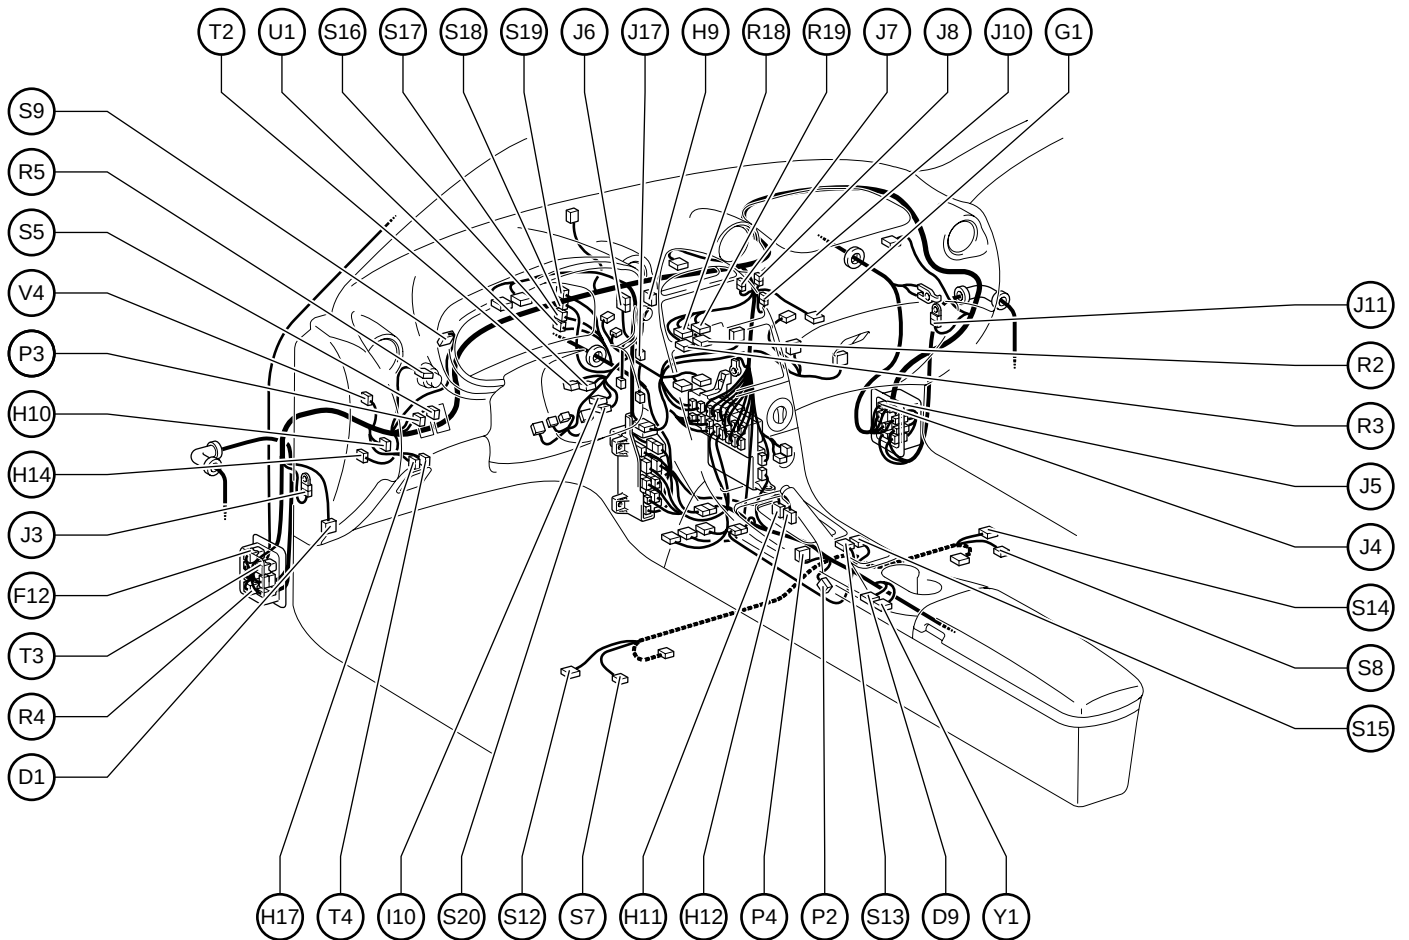

D 1 DLC3
D 9 Deceleration Sensor

F 12 Front Fog Light Relay

G 1 Glove Box Light and SW

H 9 Hazard SW
H10 Headlight Beam Level Control SW
H11 Heated Oxygen Sensor (Bank 1 Sensor 1)
H12 Heated Oxygen Sensor (Bank 1 Sensor 2)
H14 Headlight Beam Level Control ECU
H17 Headlight Cleaner SW

I 10 Ignition SW

J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 17 Junction Connector

P 2 Parking Brake SW
P 3 Power Window Lock SW
P 4 Power Window Master SW

R 2 Radio and Player
R 3 Radio and Player
R 4 Rear Fog Light Relay
R 5 Rheostat
R18 Radio and Player
R19 Radio and Player

S 5 Security Indicator
S 7 Side Airbag Squib LH
S 8 Side Airbag Squib RH
S 9 Stop Light SW
S12 Seat Heater LH
S13 Seat Heater Relay
S14 Seat Heater RH
S15 Seat Heater SW
S16 Skid Control ECU
S17 Skid Control ECU
S18 Skid Control ECU
S19 Skid Control ECU
S20 Steering Sensor

T 2 Transponder Key Amplifier
T 3 Turn Signal Flasher Relay
T 4 Traction Cut SW

U 1 Unlock Warning SW

V 4 VSC Warning Buzzer

Y 1 Yaw Rate Sensor