


Position of Parts in Instrument Panel

[RHD]

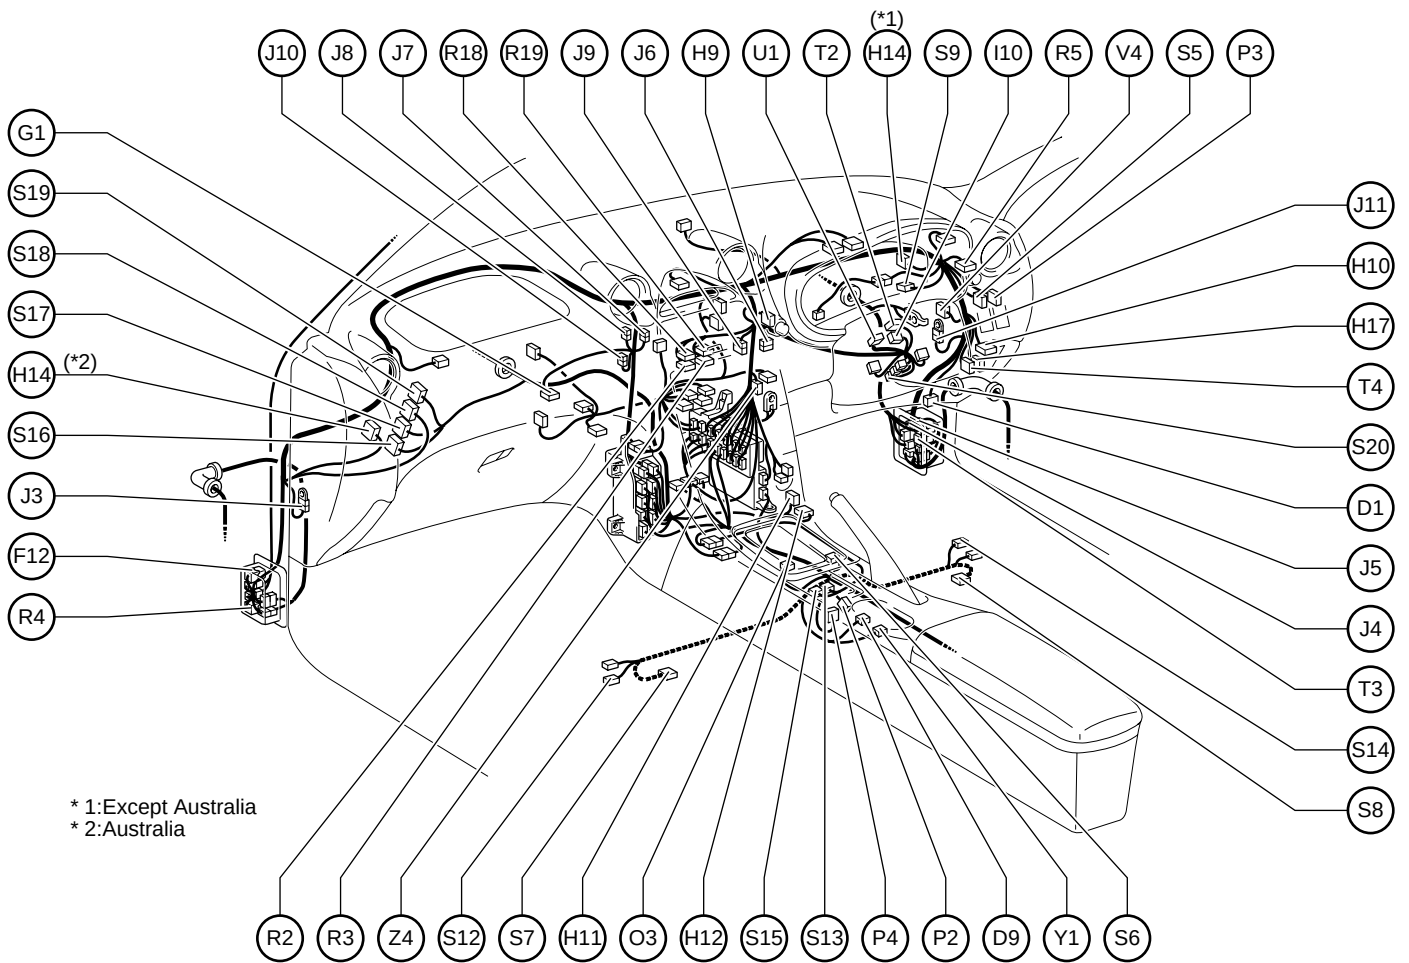

* 1:Except Australia
* 2:Australia

D 1 DLC3
D 9 Deceleration Sensor
F 12 Front Fog Light Relay
G 1 Glove Box Light and SW

H 9 Hazard SW
H 10 Headlight Beam Level Control SW
H 11 Heated Oxygen Sensor (Bank 1 Sensor 1)
H 12 Heated Oxygen Sensor (Bank 1 Sensor 2)
H 14 Headlight Beam Level Control ECU
H 17 Headlight Cleaner SW

I 10 Ignition SW

J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 11 Junction Connector

O 3 O/D Main SW

P 2 Parking Brake SW
P 3 Power Window Lock SW
P 4 Power Window Master SW

R 2 Radio and Player
R 3 Radio and Player
R 4 Rear Fog Light Relay
R 5 Rheostat
R 18 Radio and Player
R 19 Radio and Player

S 5 Security Indicator
S 6 Shift Lock Control ECU
S 7 Side Airbag Squib LH
S 8 Side Airbag Squib RH
S 9 Stop Light SW
S 12 Seat Heater LH
S 13 Seat Heater Relay
S 14 Seat Heater RH
S 15 Seat Heater SW
S 16 Skid Control ECU
S 17 Skid Control ECU
S 18 Skid Control ECU
S 19 Skid Control ECU
S 20 Steering Sensor

T 2 Transponder Key Amplifier
T 3 Turn Signal Flasher Relay
T 4 Traction Cut SW

U 1 Unlock Warning SW

V 4 VSC Warning Buzzer

Y 1 Yaw Rate Sensor

Z 4 Option Connector (TVSS ECU)