


## BRAKE Warning Light Circuit

## CIRCUIT DESCRIPTION

The BRAKE warning light comes on when the brake fluid is insufficient, the parking brake is applied or the EBD is defective.

## WIRING DIAGRAM

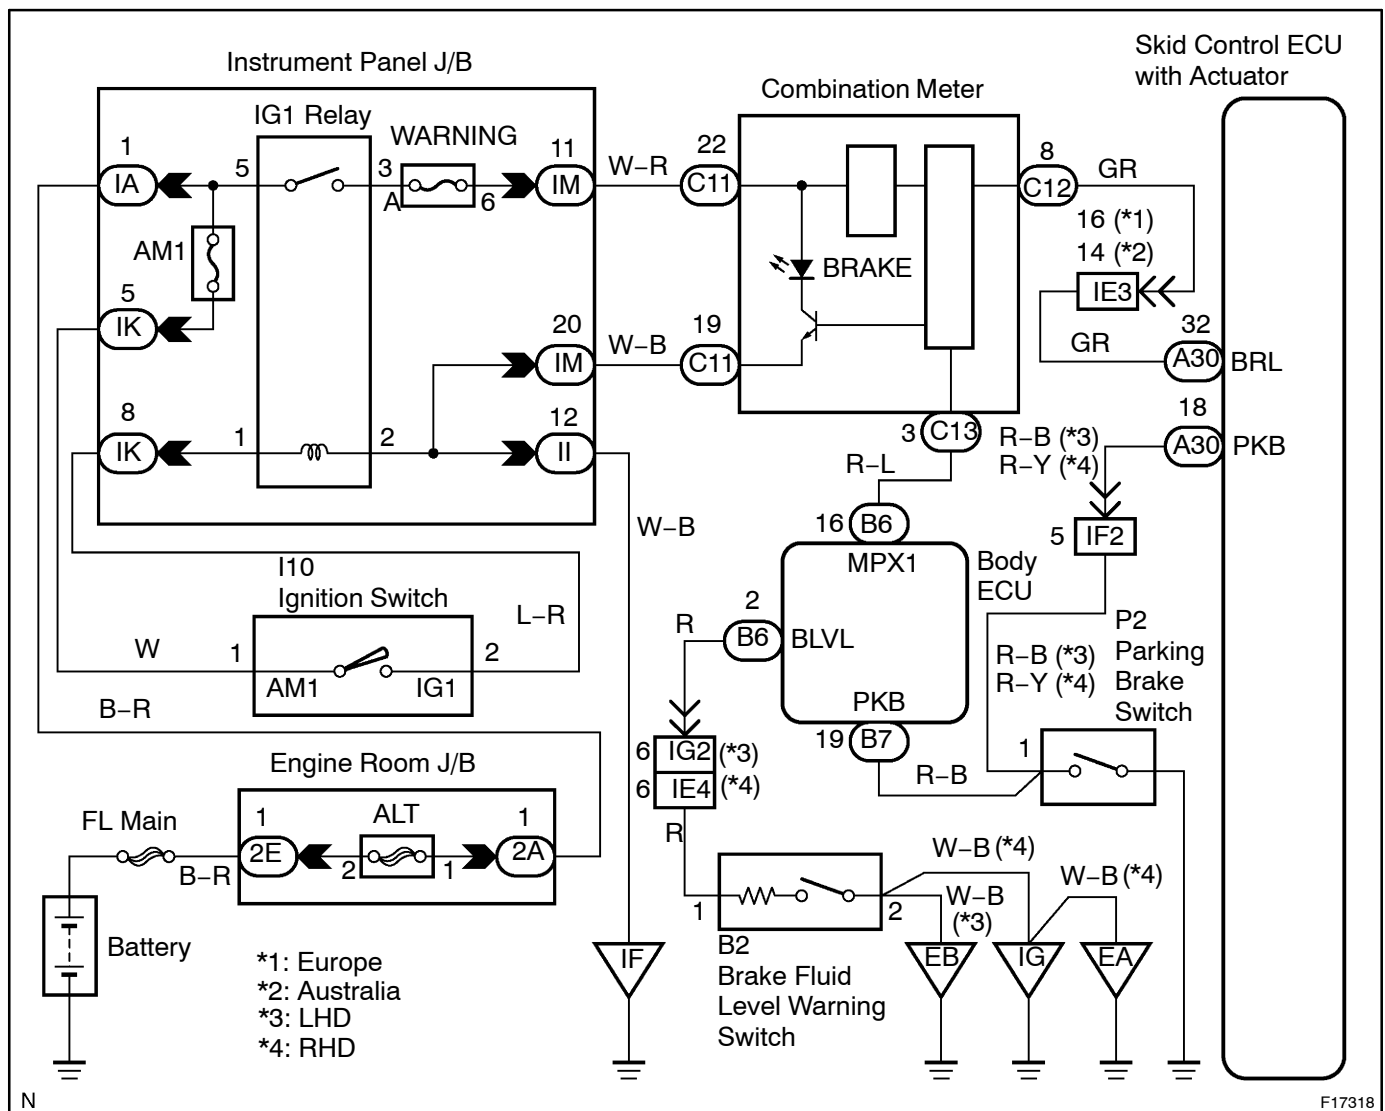

## INSPECTION PROCEDURE

1 Check parking brake switch circuit (See page BE-2).

NG

Repair or replace parking brake switch circuit.

OK

2 Check brake fluid level warning switch circuit (See page BE-2).

NG

Repair or replace brake fluid level warning switch circuit.

OK

3 Is DTC output for ABS?

Check DTC on page DI-3.

Yes

Repair circuit indicated by the output code.

No

4 Check BRAKE warning light.

See combination meter troubleshooting on page BE-2.

NG

Repair or replace combination meter.

OK

Check and replace Skid Control ECU (ABS Actuator Assembly). (See page IN-30)