

Check for Fluid Leakage

Check for fluid leakage from the actuator or the hydraulic lines.

