

DTC INDEX - THEORY & OPERATION (N63)

Theory & Operation - X6 (N63)

DIAGNOSTIC TROUBLE CODE INDEX

DIAGNOSTIC TROUBLE CODE INDEX - THEORY & OPERATION (N63)

DTC	Definition
<u>P0420, P0430</u>	Catalyst Monitoring
<u>P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P1396</u>	Misfire Monitoring
<u>P0440</u>	EVAP Canister Purge Solenoid (CPS) Functional Check
<u>P0442, P0456, P1434, P1447, P1448, P1449</u>	EVAP System Leak Measurement (Module DM-TL)
<u>P1434, P1447, P1448, P1449</u>	Monitoring function - EVAP Pump Current Diagnosis
<u>P2418, P2419, P2420</u>	EVAP - DMTL Valve Electrical Check
<u>P240A, P240B, P240C</u>	EVAP - DMTL Heater Electrical Check
<u>P2400, P2401, P2402</u>	DMTL Pump Electrical Check
<u>P0444, P0458, P0459</u>	EVAP - Purge Control Valve Electrical Check
<u>P0171, P0174, P0172, P0175</u>	Fuel System Monitoring Lambda Adaptation
<u>P2096, P2098, P2097, P2099</u>	Fuel System Trim Control Plausibility Monitoring
<u>P119D, P119E</u>	Diagnosis of Injector Aging
<u>P302A, P302B, P302C, P302D, P3283, P3285, P3284, P3286</u>	Monitoring function - High Pressure Fuel Control System
<u>P303A, P303B, P303C, P303D</u>	Monitoring function - Fuel Pressure Range Check
<u>P0192, P3250, P0193, P3251</u>	Fuel Rail Pressure Sensor Electrical Check
<u>P0003, P1281, P0004, P1282</u>	Volume Control Valve Electrical Check
<u>P10C3, P10C2, P10C1</u>	Volume Control Valve Relay Output Electrical Check
<u>P140E, P142E, P142F</u>	Injection Deactivation
<u>P0462, P2067, P0463, P2068</u>	Fuel Level Sensor Electrical Circuit Continuity Check
<u>P144B</u>	Fuel Level Sensor Signal Correlation Check
<u>P0131, P0151, P0132, P0152</u>	Upstream Oxygen Sensor - Short Circuit Monitoring
<u>P112C, P112D, P2626, P2629, P2243, P2247</u>	Upstream Oxygen Sensor - Open Circuit Monitoring
<u>P3022, P3023, P3024, P3025</u>	Upstream Oxygen Sensor - Signal Controller Monitoring
<u>P2414, P2415</u>	Upstream Oxygen Sensor - Signal Activity Check
<u>P0040</u>	Upstream Oxygen Sensor - Swapped Sensors Check

<u>P2195, P2197, P2196, P2198</u>	Upstream Oxygen Sensor - Active Signal Check (Shift to lean/rich)
<u>P0133, P0153</u>	Upstream Oxygen Sensor - Signal Dynamic Monitoring (Slow Response)
<u>P2297, P2298</u>	Upstream Oxygen Sensor - Signal Monitoring During DFCO
<u>P3026, P3027, P0135, P0155, P165F, P166F</u>	Upstream Oxygen Sensor - Heater Monitoring
<u>P0030, P0050, P0031, P0051, P0032, P0052</u>	Upstream Oxygen Sensor - Heater Circuit Monitoring
<u>P0137, P157, P0138, P158, P0140, P0160</u>	Downstream Oxygen Sensor - Circuit Monitoring
<u>P013E, P014A</u>	Downstream Oxygen Sensor - Signal Dynamic Check During DFCO
<u>P013A, P013C</u>	Downstream Oxygen Sensor - Dynamic/Transition Time in Sensor Midpoint Range Monitoring
<u>P114A, P114C, P114B, P114D</u>	Downstream Oxygen Sensor - Signal Activity Check
<u>P2270, P2272, P2271, P2273, P0041</u>	Downstream Oxygen Sensor - Signal Check (Stuck lean/rich, Swap)
<u>P0141, P0161</u>	Downstream Oxygen Sensor - Heater Plausibility Monitoring
<u>P0036, P0056, P0037, P0057, P0038, P0058</u>	Downstream Oxygen Sensor - Heater Circuit Monitoring
<u>P0128</u>	Thermostat Monitoring
<u>P0597, P0598, P0599</u>	Thermostat Electrical Check (Comprehensive component attendant to thermostat)
<u>P0117, P0118</u>	Engine Coolant Temperature Electrical Check
<u>P3198</u>	Engine Coolant Temperature Gradient Diagnosis
<u>P3199</u>	Engine Coolant Temperature Stuck Diagnosis
<u>P316A</u>	Engine Coolant Temperature Stuck in Range Diagnosis
<u>P00B4, P00B3</u>	Radiator Outlet Temperature Electrical Check
<u>P3197</u>	Radiator Outlet Temperature Gradient Diagnosis
<u>P316C, P00B2</u>	Radiator Outlet Temperature Plausibility Diagnosis
<u>P1561, P1562</u>	Cold Start Emission Reduction Strategy Monitoring
<u>P0012, P0022, P0015, P0025</u>	Variable Camshaft Timing (Vanos) (detection of mechanical IVVT error)
<u>P0340, P0345, P0365, P0390</u>	Camshaft Monitoring function - Diagnosis of Signal Plausibility
<u>P1300, P139A, P130A, P139B</u>	Camshaft Monitoring function - Diagnosis of Period Length
<u>P13B0, P13B1, P13B2, P13B3</u>	Camshaft Monitoring function - Diagnosis of Synchronization state
<u>P0017</u>	Monitoring function - Crankshaft Camshaft Synchronization

<u>P13B4, P13B5, P13B6, P13B7</u>	Crankshaft Camshaft Monitoring function - Diagnosis of Mechanical Reference Position
<u>P13BA, P13BB, P13BC, P13BD</u>	Crankshaft Camshaft Monitoring function - Diagnosis of Mechanical Chain Jump
<u>P0335, P0336, P0370, P138F</u>	Crankshaft Position Sensor (CRK)
<u>P0010, P0020, P2088, P2092, P2089, P2093, P0013, P0023, P2090, P2094, P2091, P2095</u>	Camshaft Position Actuator Electrical Check
<u>P0072, P0073</u>	CAN based Ambient Air Temperature Signal Diagnosis
<u>P0071</u>	Ambient Air Temperature (AAT) Signal Plausibility Check
<u>P113C, P11B2, P111E, P117F, P111F, P118F</u>	Intake Air Temperature Sensor Plausibility Diagnosis
<u>P0112, P00AC, P0113, P00AD</u>	Intake Air Temperature Sensor Electrical Check
<u>P10B8, P10B9, P10B0, P10B2, P10B1, P10B3</u>	Charge Air Cooler Temperature Plausibility Diagnosis
<u>P10B4, P10B5, P10B6, P10B7</u>	Charge Air Cooler Temperature Gradient Diagnosis
<u>P007C, P00A2, P007D, P00A3</u>	Charge Air Cooler Temperature Sensor Electrical Check
<u>P2100, P210A</u>	Electronic Throttle Control (ETC) Power Stage Diagnosis (H-bridge)
<u>P11AA, P11AB, P16D0, P16D1</u>	Electronic Throttle Control (ETC) Motor Control Performance
<u>P1417, P1455</u>	Electronic Throttle Control (ETC) Composite Error
<u>P1632, P16AA, P1633, P16AB, P169B, P169C, P16BC, P16BD, P16BE, P16BF, P16CA, P16CB, P16CC, P16CD</u>	Monitoring function - ETC Adaptation Diagnosis
<u>P16BA, P16BB, P169A, P16AD</u>	Monitoring function - ETC Start Check
<u>P0121, P0226, P0221, P212B</u>	Throttle Position Sensor (TPS) Plausibility Check
<u>P115F, P117E</u>	Throttle Position Sensor (TPS) Ratio Check
<u>P0122, P0227, P0123, P0228, P0222, P212C, P0223, P212D</u>	Throttle Position Sensor Electrical Check
<u>P164C, P1625, P1224</u>	Pedal Position Sensor
<u>P0506, P0507, P1561, P1562</u>	Idle Speed Control Rationality Diagnosis
<u>P00BC, P00BE, P00BD, P00BF, P112E, P11B0, P112F, P11B1</u>	Mass Air Flow and Manifold Absolute Pressure Plausibility Diagnosis
<u>P12B8, P12B9, P12A8, P12B6, P12A9, P12B7, P12A4, P12A6, P12A5, P12A7</u>	Ambient Pressure, Boost Pressure and Manifold Absolute Pressure
<u>P119B, P11AF, P119A, P11AE</u>	Manifold Absolute Pressure Sensor Electrical Check
<u>P10C7, P10C8</u>	Mass Air Flow Sensor Internal Error Diagnosis
<u>P0102, P010C, P0103, P010D</u>	Temperature Sensor Diagnosis Electrical Check
<u>P00BC, P00BE, P00BD, P00BF</u>	Temperature Sensor Diagnosis Range Check
<u>P0102, P010C, P0103, P010D</u>	Mass Air Flow Sensor Diagnosis Electrical Check

<u>P00BC, P00BE, P00BD, P00BF</u>	Mass Air Flow Sensor Diagnosis Range check
<u>P0503</u>	Vehicle Speed Sensor Signal Plausibility Check
<u>P0500</u>	Vehicle Speed Sensor Signal Check
<u>P0326, P0327, P0328, P135B, P1327, P1328, P135F, P1329, P1330, P033B, P033C, P033D</u>	Knock Sensor (KS)
<u>P0237, P0241, P0238, P0242</u>	Supercharger Boost Sensor Electrical Check
<u>P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P310B, P310E, P311B, P311E, P312B, P312E, P313B, P313E</u>	Injector Valve Diagnosis Electrical Check
<u>P10A5, P10A8, P10BA, P10BD, P10A6, P10A9, P10BB, P10BE, P10A7, P10AA, P10BC, P10BF</u>	Injector Power Stage Diagnosis
<u>P2228, P2229</u>	Ambient Pressure Sensor Electrical Check
<u>P321E, P321F</u>	Ambient Pressure Sensor Rationality Check