


3. Horn

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front bumper. <Ref. to EI-28, REMOVAL, Front Bumper.>
- 3) Disconnect the harness connector.
- 4) Remove the horn bracket mounting bolt to remove the horn assembly.

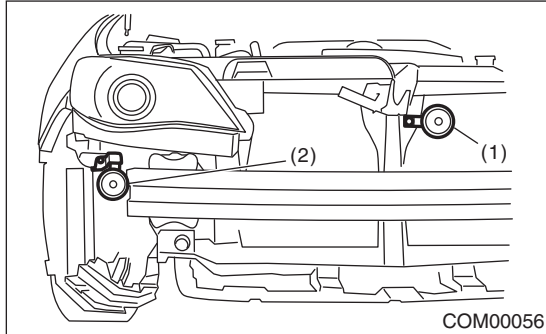

- (1) Low side horn
(2) High side horn

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

With 12 V direct current supply between horn terminal and case ground, check that the horn sounds properly.

