

4. Horn Switch

A: REMOVAL

WARNING:

Before servicing, be sure to read the notes in the AB section for proper handling of the driver's airbag module. <Ref. to AB-5, CAUTION, General Description.>

NOTE:

Horn switch is a unit with the driver's airbag module.


- 1) Disconnect the ground cable from battery.
- 2) Remove the driver's airbag module. <Ref. to AB-16, REMOVAL, Driver's Airbag Module.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance between horn switch terminal and airbag module bracket.

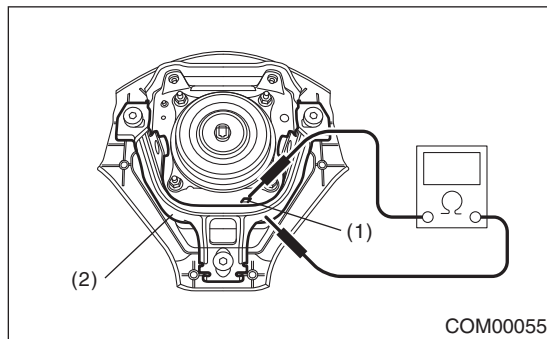

- (1) Horn switch terminal
(2) Airbag module bracket

Switch position	Terminal No.	Resistance
The airbag module bracket being pushed	Horn switch terminal and airbag module bracket	Less than 1 Ω
The airbag module bracket being separated		1 M Ω or more

Horn Switch

COMMUNICATION SYSTEM

GLASS/WINDOWS/MIRRORS

GW

	Page
1. General Description	2
2. Power Window System	7
3. Power Window Control Switch	8
4. Front Door Glass	10
5. Front Regulator and Motor Assembly	11
6. Remote Control Mirror System	12
7. Scalp Cap	13
8. Outer Mirror Assembly	14
9. Outer Mirror	15
10. Remote Control Mirror Switch	16
11. Rear Door Glass	17
12. Rear Regulator and Motor Assembly	18
13. Windshield Glass	19
14. Rear Gate Glass	24
15. Rear Window Defogger	27
16. Rear Quarter Glass	29
17. Rearview Mirror	31
18. Wiper Deicer System	32