


Buick Regal 1995 fuse box diagram

Instrument Panel Fuse Block

Some fuses are located in a fuse block on the passenger’s side of the instrument panel.

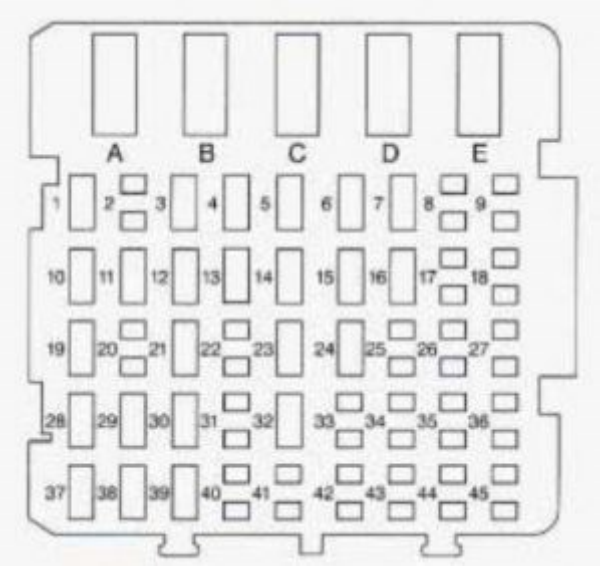

Buick Regal mk3 – fuse box – instrument panel


Circuit Breakers	Usage
C	Power Windows
D	Power Seat

Fuses	Usage
1	CIGAR LIGHTER — Instrument Panel Cigarette Lighter
5	HAZARD FLASHER
6	POWER ACCESSORY #2 — Sunroof Control Unit
7	LOCK CONTROL — Door Lock Relay
10	I/P ELECTRONICS BATTERY FEED — Chime Module, Electronic Brake Control Module (EBCM), Theft-Deterrent Module, Radio, Radio Amplifier, Trip Computer
11	STARTER RELAY
12	ANTI-THEFT — Theft-Deterrent Module
14	HVAC BLOWER MOTOR — Blower Motor Relay
15	HVAC #1 — Air Temperature Valve Motor: Trip Computer, Daytime Running Lamps Module (DRL), HVAC Control Assembly, Multifunction Lever Cruise Control Switch
16	REAR DEFOG — HVAC Control Assembly Rear Window Defogger Switch
19	POWER ACCESSORY #1 — Antenna Relay, Power Mirror Switch, Door Lock Switches, Door Handle Switches, Trunk Courtesy Lamp
21	AIR BAG SYSTEM

23	STOPLAMPS — TCC/Brake Switch
24	HVAC #2 — HVAC Control Assembly, Solenoid Box
28	CTSY LAMPS — Vanity Mirrors, T/P Courtesy Lamps, I/P Compartment Lamp, Header Courtesy and Reading Lamp, I/S Lighted Rearview Mirror, Dome and Reading Lamps, Quarter Courtesy Lamps
29	WIPER — Wiper Switch
30	TURN SIGNAL — Turn Signal Flasher
32	POWER LOCKS — Door Lock Relay
33	ABS — Electronic Brake Control Module (EBCM), ABS Relay
37	AUXILIARY POWER
38	RADIO — Radio, Steering Wheel Radio Switches
39	I/P ELECTRONICS IGNITION FEED — Headlamp Switch, Cruise Control Cut-Out Switch, Air Bag System, TCC/Brake Switch, Instrument Cluster, Chime Module, Second-Gear Start Switch, Daytime Running Lamps Module (DRL)

Underhood Electrical Center — Passenger's Side

Some fuses and relays are located in the underhood fuse block on the passenger's side of the vehicle in the engine compartment.

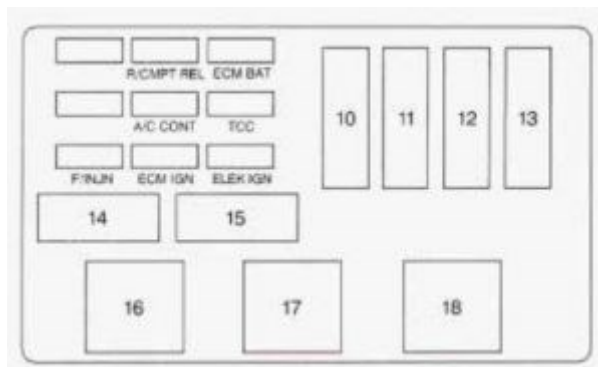

Buick Regal mk3 – fuse box – engine

compartment (passenger's side)


Fuses	Usage
R/CMPT REL	Remote Trunk Release
ECM BAT	Powertrain Control Module (PCM), Fuel Pump, Fuel Pump Relay, Fan Cont #1 Relay
ENG EMIS	Generator, Fan Cont #2 Relay, A/C CMPT Relay (VIN M only)
TCC	Automatic Transaxle, Transaxle Range Switch
F/IN J N	Fuel Injectors
ECM IGN	Powertrain Control Module (PCM), EGR, CCP, VAPSW, Mass Air Flow (MAF) Sensor (VIN X only). Oxy Sensor
ELEK IGN	Electronic Ignition (EI) Control Module
10	I/P Fuse Block
11	FAN CONT #1 Relay

12	Passenger's Side Underhood Electrical Center and I/P Fuse Blocks: Fuses 5, 14,23 and 32
13	FAN CONT #2 Relay and UP Fuse Block: Fuse 16, Power Seat Circuit Breaker "D"

Relays	Usage
14	FUEL PUMP
15	A/C CMPR
16	FAN CONT #2 — Secondary Cooling Fan (Passenger Side)
17	FAN CONT #1 — Primary Cooling Fan (Driver Side)
18	Ignition Relay

Underhood Electrical Center — Passenger's Side

Additional fuses are in the underhood electrical center on the driver's side of the engine compartment.

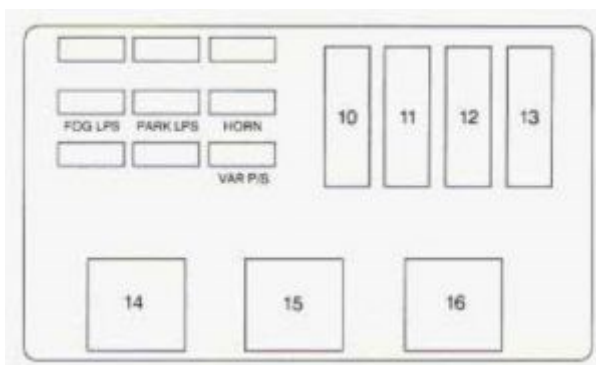

Buick Regal mk3 – fuse box – engine

compartment (driver's side)

Fuses	Usage
FOG LPS	Fog Lamps
PARK LPS	Headlamp Switch
HORN	Horn Relay, Underhood Lamp
VAR P/S	EVO Steering
10	IGN SW2 — I/P Fuse Block: PWR WDO and Circuit Breaker "D"; Passenger's Side Underhood Electrical Center: TCC and ENG EMIS Fuses
11	IGN SW1 — I/P Fuse Block: Radio, Wiper, HVAC, ABS and Turn Signal Fuses; Passenger's Side Underhood Electrical Center: F/IJN, ECM IGN and ELEK IGN Fuses
12	HD LPS — Circuit Breaker to Headlamp Switch
13	ABS — ABS Relay

Relay	Usage
14	ABS — Anti-Lock Brake System
15	FOG LPS
16	HORN