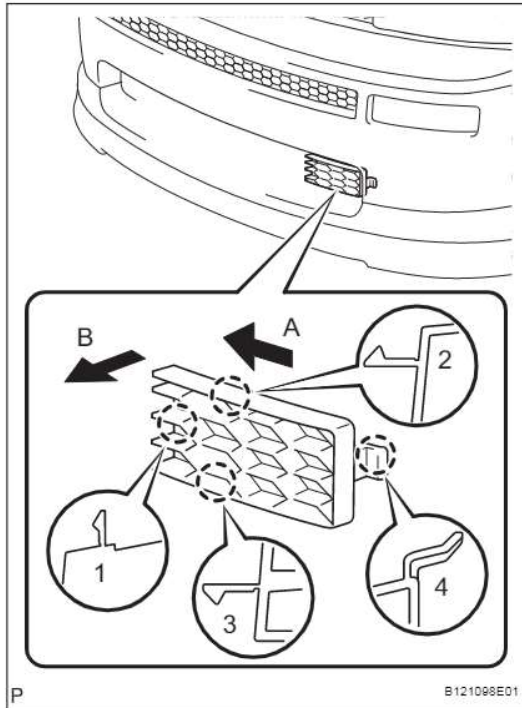


EXTERIOR – FRONT BUMPER

ET-3

DISASSEMBLY

- 1. REMOVE RADIATOR GRILLE LOWER**
 - (a) Using a screwdriver, detach the 9 claws and remove the grille lower.
- 2. REMOVE FRONT BUMPER EXTENSION MOUNTING BRACKET LH**
 - (a) Pull the mounting bracket in the direction indicated by the arrow labeled B. Then detach claws 1, 2 and 3.
 - (b) Pull the mounting bracket in the direction indicated by the arrow labeled A. Then detach claw 4 and remove the mounting bracket.
- 3. REMOVE FRONT BUMPER EXTENSION MOUNTING BRACKET RH**

HINT:
Use the same procedures for the RH side and LH side.
- 4. REMOVE FRONT SPOILER**
 - (a) Remove the 4 screws.
 - (b) Using a screwdriver, detach the 4 claws and remove the spoiler.

HINT:
Tape the screwdriver tip before use.
- 5. REMOVE RADIATOR GRILLE UPPER**
 - (a) Using a screwdriver, detach the 13 claws and remove the grille upper.

HINT:
Tape the screwdriver tip before use.
- 6. REMOVE FOG LIGHT COVER LH**
 - (a) Using a screwdriver, detach the 4 claws and remove the cover.


HINT:
Tape the screwdriver tip before use.
- 7. REMOVE FOG LIGHT COVER RH**

HINT:
Use the same procedures for the RH side and LH side.

ET

ET-4**EXTERIOR – FRONT BUMPER****REASSEMBLY**

1. **INSTALL FOG LIGHT COVER LH**
(a) Attach the 4 claws to install the cover.
2. **INSTALL FOG LIGHT COVER RH**
(a) Attach the 4 claws to install the cover.
3. **INSTALL RADIATOR GRILLE UPPER**
(a) Attach the 13 claws to install the grille upper.
4. **INSTALL FRONT SPOILER**
(a) Attach the 4 claws to install the spoiler.
(b) Install the 4 screws.
5. **INSTALL FRONT BUMPER EXTENSION MOUNTING BRACKET LH**
(a) Attach the 4 claws to install the mounting bracket.
6. **INSTALL FRONT BUMPER EXTENSION MOUNTING BRACKET RH**
HINT:
Use the same procedures for the RH side and LH side.
7. **INSTALL RADIATOR GRILLE LOWER**
(a) Attach the 9 claws to install the grille lower.

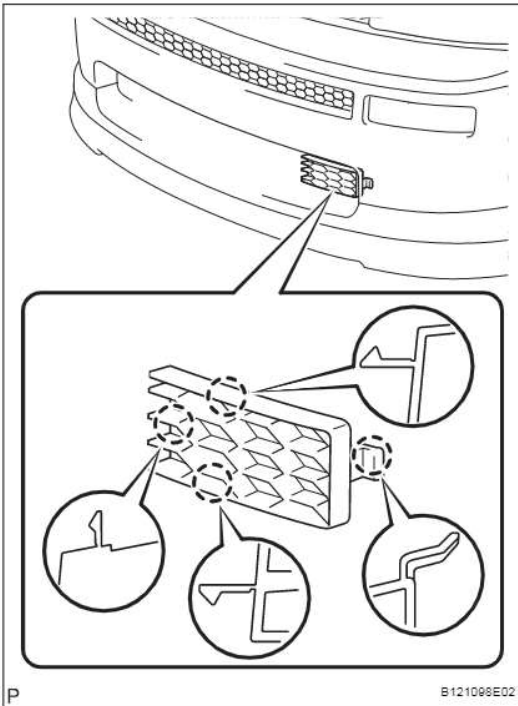

P

B121098E02

ET

EXTERIOR – FRONT BUMPER

ET-5

INSTALLATION

HINT:

A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

1. INSTALL FRONT BUMPER REINFORCEMENT

- (a) Install the reinforcement with the 4 nuts.

2. INSTALL FRONT BUMPER COVER



- (a) Put protective tape under the front fender.
(b) Attach the 2 claws to install the bumper cover.
(c) Install the 4 bolts, 6 screws and clip.

3. INSTALL FRONT FENDER LINER LH

- (a) Install the fender liner with the 2 screws.

4. INSTALL FRONT FENDER LINER RH

- (a) Install the fender liner with the 2 screws.

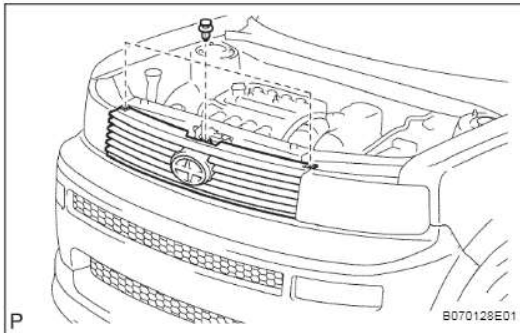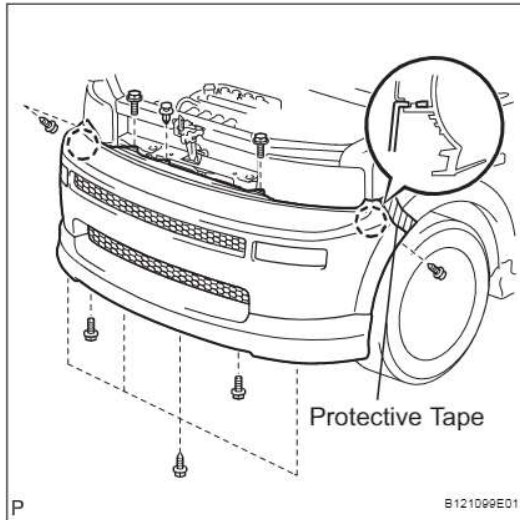**5. INSTALL RADIATOR GRILLE**

- (a) Install the radiator grille with the 3 clips.

ET

ET-8**EXTERIOR – REAR BUMPER**

DISASSEMBLY

- 1. REMOVE REAR BUMPER PROTECTOR LH**
 - (a) Using a clip remover, remove the 3 clips and bumper protector.
- 2. REMOVE REAR BUMPER PROTECTOR RH**
 - (a) Using a clip remover, remove the 3 clips and bumper protector.
- 3. REMOVE REAR BUMPER PIECE LH**
 - (a) Using a clip remover, remove the 5 clips.
 - (b) Using a screwdriver, detach the 8 claws and remove the bumper piece LH (with bumper piece RH).

HINT:
Tape the screwdriver tip before use.
- 4. REMOVE REAR BUMPER PIECE RH**
 - (a) Using a clip remover, remove the clip.
 - (b) Using a screwdriver, detach the claws and remove the bumper piece LH from the bumper piece RH.

HINT:
Tape the screwdriver tip before use.
- 5. REMOVE REAR BUMPER EXTENSION RH**
 - (a) Using a screwdriver, detach the 2 claws and remove the extension.


HINT:
Tape the screwdriver tip before use.
- 6. REMOVE REAR SIDE MARKER LIGHT ASSEMBLY LH**
 - (a) Remove the nut and marker light.
- 7. REMOVE REAR SIDE MARKER LIGHT ASSEMBLY RH**
 - (a) Remove the nut and marker light.

EXTERIOR – REAR BUMPER**ET-9****REASSEMBLY**


- 1. INSTALL REAR SIDE MARKER LIGHT ASSEMBLY LH**
(a) Install the marker light with the nut.
- 2. INSTALL REAR SIDE MARKER LIGHT ASSEMBLY RH**
(a) Install the marker light with the nut.
- 3. INSTALL REAR BUMPER EXTENSION RH**
(a) Attach the 2 claws to install the extension.
- 4. INSTALL REAR BUMPER PIECE RH**
(a) Attach the claw and install the bumper piece LH to the bumper piece RH with the clip.
- 5. INSTALL REAR BUMPER PIECE LH**
(a) Attach the 8 claws and install the bumper piece LH (with bumper piece RH) with the 5 clips.
- 6. INSTALL REAR BUMPER PROTECTOR LH**
(a) Install the bumper protector with the 3 clips.
- 7. INSTALL REAR BUMPER PROTECTOR RH**
(a) Install the bumper protector with the 3 clips.

ET

FRONT BUMPER
COMPONENTS

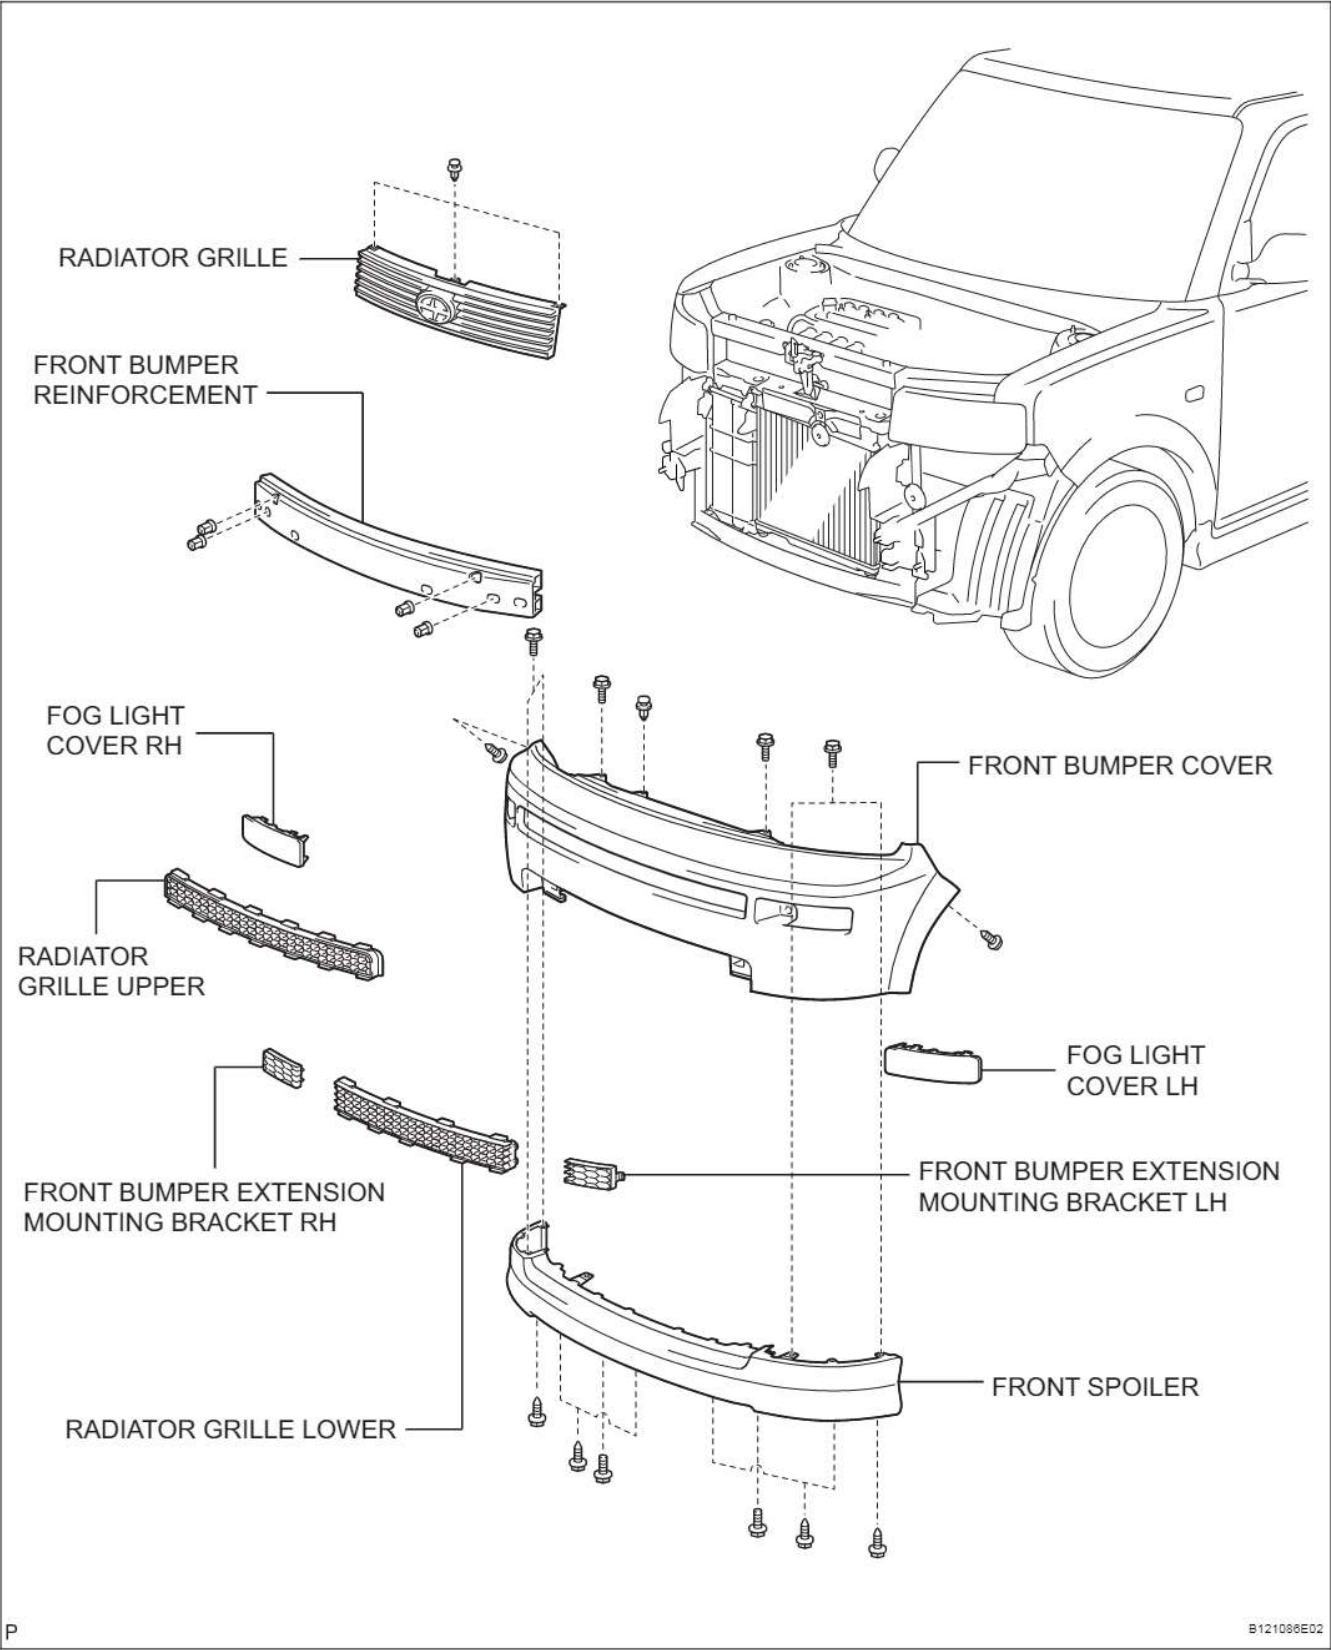

ET

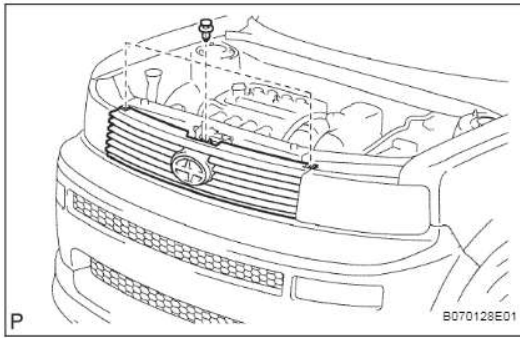ET-2**EXTERIOR – FRONT BUMPER****REMOVAL****1. REMOVE RADIATOR GRILLE**

- (a) Using a clip remover, remove the 3 clips and radiator grille.

2. REMOVE FRONT FENDER LINER LH

- (a) Remove the 2 screws.
- (b) Partially remove the fender liner.

HINT:

It is not necessary to fully remove the fender liner. Partially remove it so that the bumper cover can be removed in a later step.

3. REMOVE FRONT FENDER LINER RH

HINT:

Use the same procedures for the RH side and LH side.

4. REMOVE FRONT BUMPER COVER


- (a) Put protective tape under the front fender.
- (b) Remove the clip and 2 bolts from the upper side of the bumper cover.
- (c) Using a screwdriver, detach the 2 claws and remove the 2 bolts, 6 screws and bumper cover.

HINT:

Tape the screwdriver tip before use.

5. REMOVE FRONT BUMPER REINFORCEMENT

- (a) Remove the 4 nuts and reinforcement.

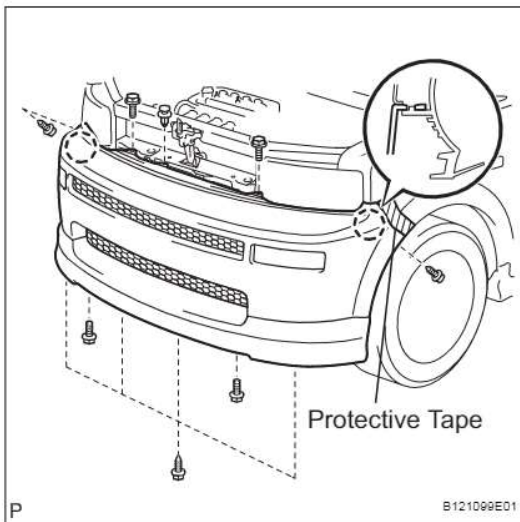**ET**

ET-10



EXTERIOR – REAR BUMPER

INSTALLATION

HINT:


A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

- 1. INSTALL REAR BUMPER SIDE RETAINER LH**
(a) Install the 2 side retainers with the 2 screws.
- 2. INSTALL REAR BUMPER SIDE RETAINER RH**
(a) Install the 2 side retainers with the 2 screws.
- 3. INSTALL REAR BUMPER REINFORCEMENT SUB-ASSEMBLY**
(a) Install the reinforcement with the 6 nuts.
- 4. INSTALL REAR BUMPER SHIELD BRACKET CENTER**
(a) Attach the 8 claws to install the 3 shield brackets.
- 5. INSTALL REAR BUMPER COVER**
(a) Put protective tape under the quarter panel.
(b) Attach the clamps and connect the rear side marker light wire harness's connectors.
(c) Connect the wire harness's connector to the vehicle body.
(d) Attach the 2 claws and install the bumper cover with the 6 bolts.

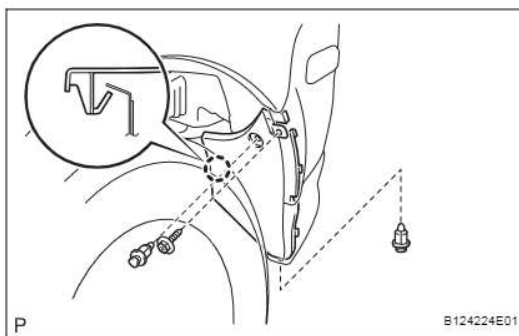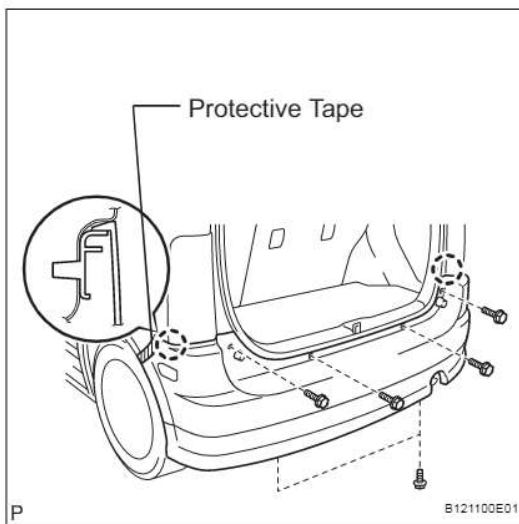

- 6. INSTALL REAR BUMPER SIDE SEAL LH**
(a) Attach the claw and install the side seal with the screw and 2 clips.
- 7. INSTALL REAR BUMPER SIDE SEAL RH**
HINT:
Use the same procedures described for the LH side.


REAR BUMPER
COMPONENTS

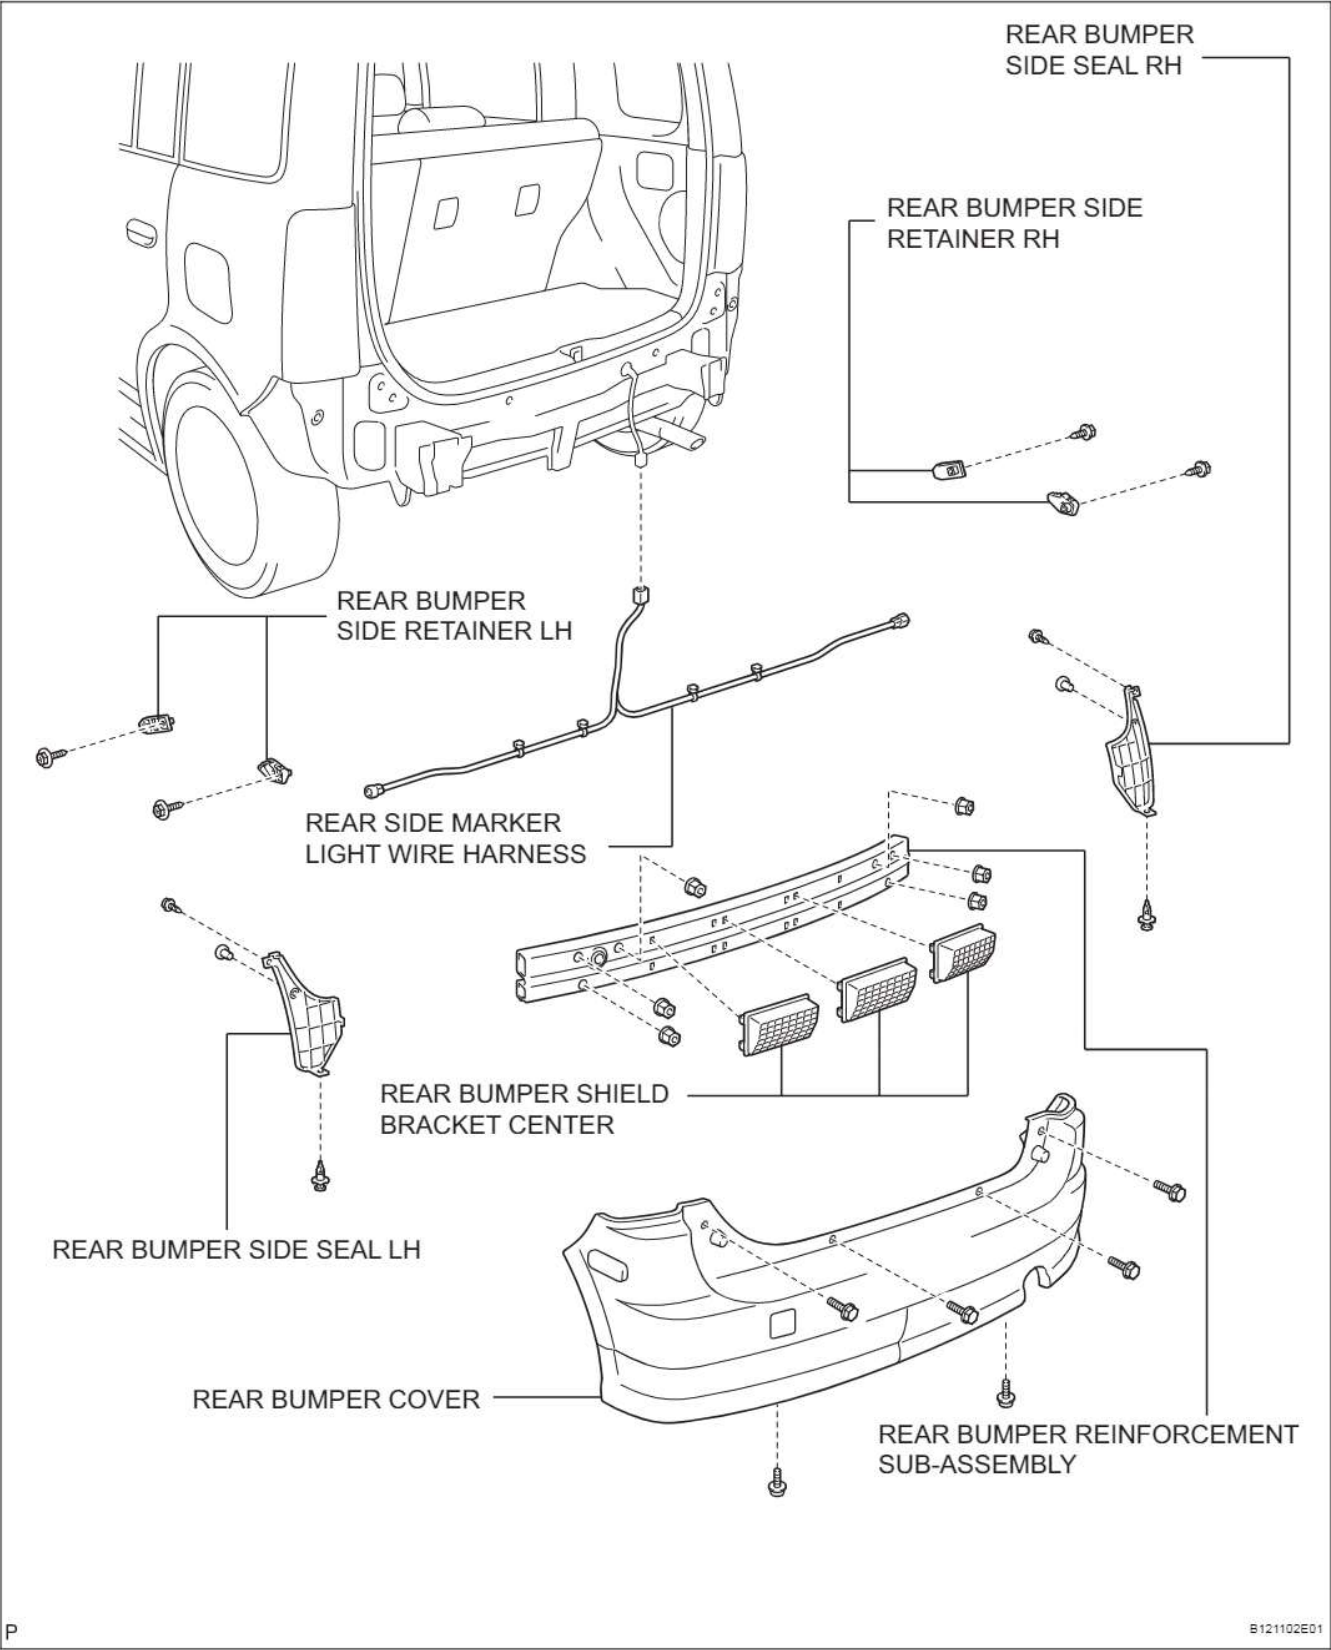

ET

ET-6

EXTERIOR – REAR BUMPER

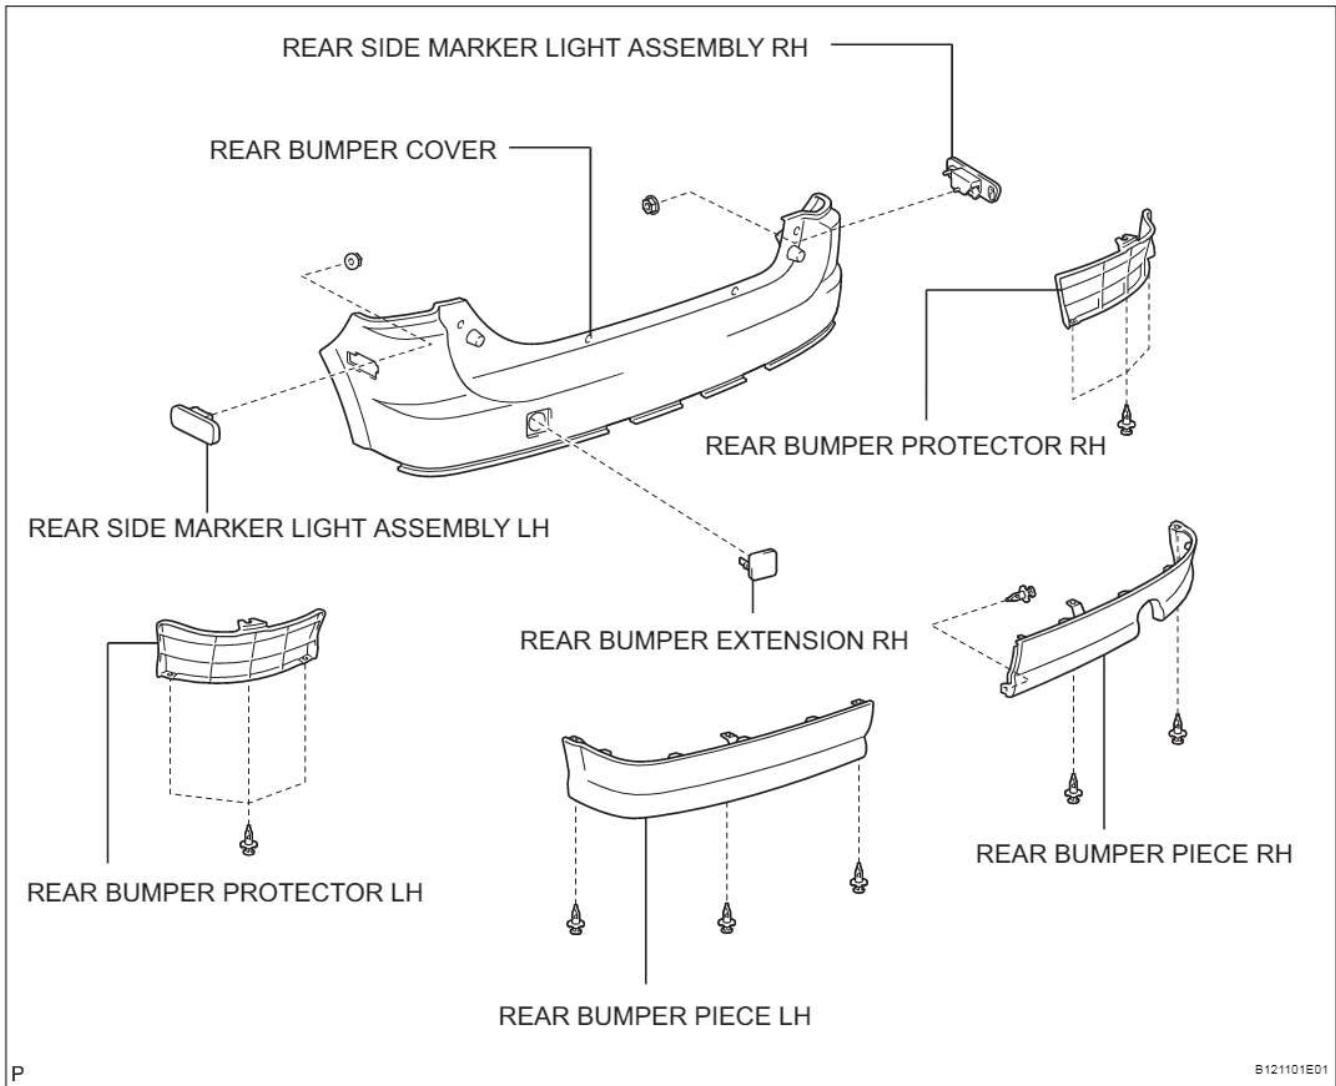

REMOVAL

1. REMOVE REAR BUMPER SIDE SEAL LH

- Using a clip remover, remove the 2 clips and screw.
- Using a screwdriver, detach the claw and remove the side seal.


HINT:

Tape the screwdriver tip before use.

2. REMOVE REAR BUMPER SIDE SEAL RH

HINT:

Use the same procedures described for the LH side.

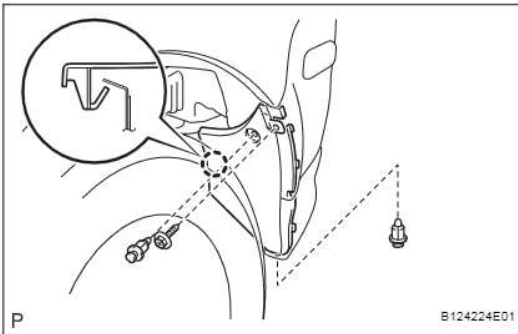

EXTERIOR – REAR BUMPER**ET-7****3. REMOVE REAR BUMPER COVER**

- (a) Put protective tape under the quarter panel.
- (b) Using a screwdriver, detach the 2 claws and remove the 6 bolts and bumper cover.

HINT:

Tape the screwdriver tip before use.

- (c) Disconnect the rear side marker light wire harness's connector from the vehicle body.
- (d) Disconnect the wire harness's connectors and detach the clamps. Then, remove the wire harness.

4. REMOVE REAR BUMPER SHIELD BRACKET CENTER

- (a) Using a screwdriver, detach the 8 claws and remove the 3 shield brackets.

HINT:

Tape the screwdriver tip before use.

5. REMOVE REAR BUMPER REINFORCEMENT SUB-ASSEMBLY

- (a) Remove the 6 nuts and reinforcement.

6. REMOVE REAR BUMPER SIDE RETAINER LH

- (a) Remove the 2 screws and 2 side retainers.

7. REMOVE REAR BUMPER SIDE RETAINER RH

- (a) Remove the 2 screws and 2 side retainers.

ET

INSTALLATION

HINT:
When installing the name plate, heat the vehicle body and name plate using a heat light.
Standard heating temperature

Item	Temperature
Vehicle body	40 to 60°C (104 to 140°F)
Name plate	20 to 30°C (68 to 86°F)

NOTICE:
Do not heat the vehicle body and name plate excessively.


1. **INSTALL NO. 2 BACK DOOR NAME PLATE**
- (a) Clean the vehicle body surface.
 - (1) Using a heat light, heat the vehicle body surface.
 - (2) Remove the double-sided tape from the vehicle body.
 - (3) Wipe off any tape adhesive residue with white gasoline.
 - (b) If reusing the name plate:
Clean the name plate.
 - (1) Using a heat light, heat the name plate.
 - (2) Remove the double-sided tape from the name plate.
 - (3) Wipe off any tape adhesive residue with white gasoline.
 - (4) Apply new double-sided tape to the name plate.
 - (c) Install the name plate.
 - (1) Using a heat light, heat the vehicle body and name plate.
 - (2) Remove the peeling paper from the face of the name plate.

HINT:
After removing the peeling paper, keep the exposed adhesive free from foreign matter.
 - (3) Install the name plate.

NOTICE:
Install the name plate exactly according to the specifications below.

EXTERIOR – NAME PLATE

ET-13

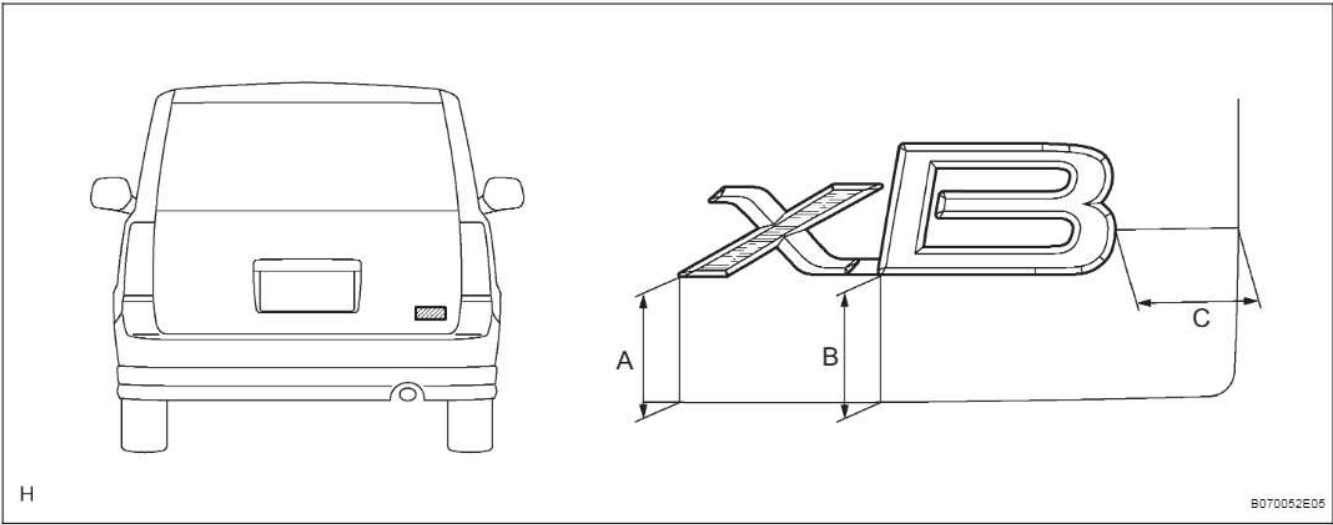

Standard measurement



Area	Measurement
A	163.9 mm (6.453 in.)
B	164.3 mm (6.468 in.)
C	61.7 mm (2.429 in.)

ET

ET-10

EXTERIOR – NAME PLATE

NAME PLATE
COMPONENTS

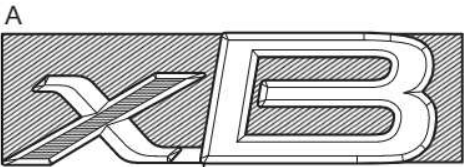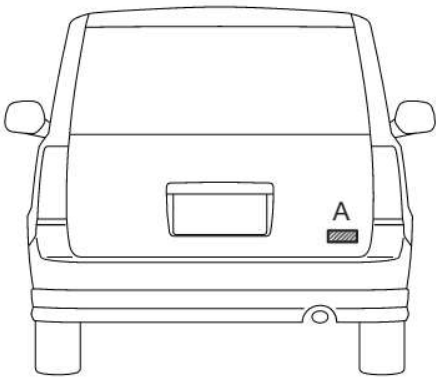

NO. 2 BACK DOOR NAME PLATE

ET

H

B121103E01

EXTERIOR – NAME PLATE

REMOVAL

HINT:
When removing the name plate, heat the vehicle body and name plate using a heat light.
Standard heating temperature

Item	Temperature
Vehicle body	40 to 60°C (104 to 140°F)
Name plate	20 to 30°C (68 to 86°F)

NOTICE:
Do not heat the vehicle body and name plate excessively.




- 1. REMOVE NO. 2 BACK DOOR NAME PLATE**
- (a) Put protective tape around the name plate.
 - (b) Insert a piano wire between the vehicle body and name plate.
 - (c) Tie objects that can serve as handles (for example, wooden blocks) to both wire ends.
 - (d) Pull the piano wire and scrape off the double-sided tape that holds the name plate to the vehicle body.
- NOTICE:**
- If reusing the name plate, take care not to damage the name plate.
 - Be careful not to damage the vehicle body.

INSTALLATION


HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

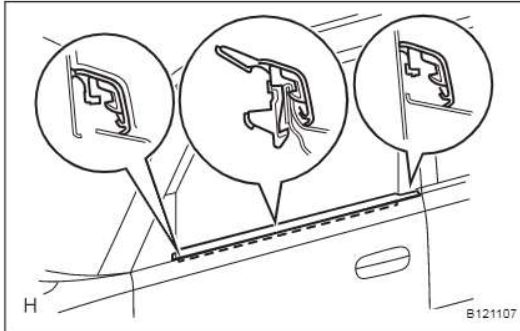

1. **INSTALL FRONT DOOR GLASS WEATHERSTRIP ASSEMBLY OUTER LH**
(a) Attach the claws to install the weatherstrip as shown in the illustration.
2. **INSTALL OUTER REAR VIEW MIRROR SUB-ASSEMBLY LH** (See page [MI-8](#))
3. **INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH** (See page [ED-18](#))
4. **INSTALL POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY** (See page [ED-16](#))
5. **INSTALL DOOR PULL HANDLE** (See page [ED-18](#))
6. **INSTALL FRONT DOOR LOWER FRAME BRACKET GARNISH LH** (See page [ED-19](#))
7. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

FRONT DOOR GLASS WEATHERSTRIP
COMPONENTS

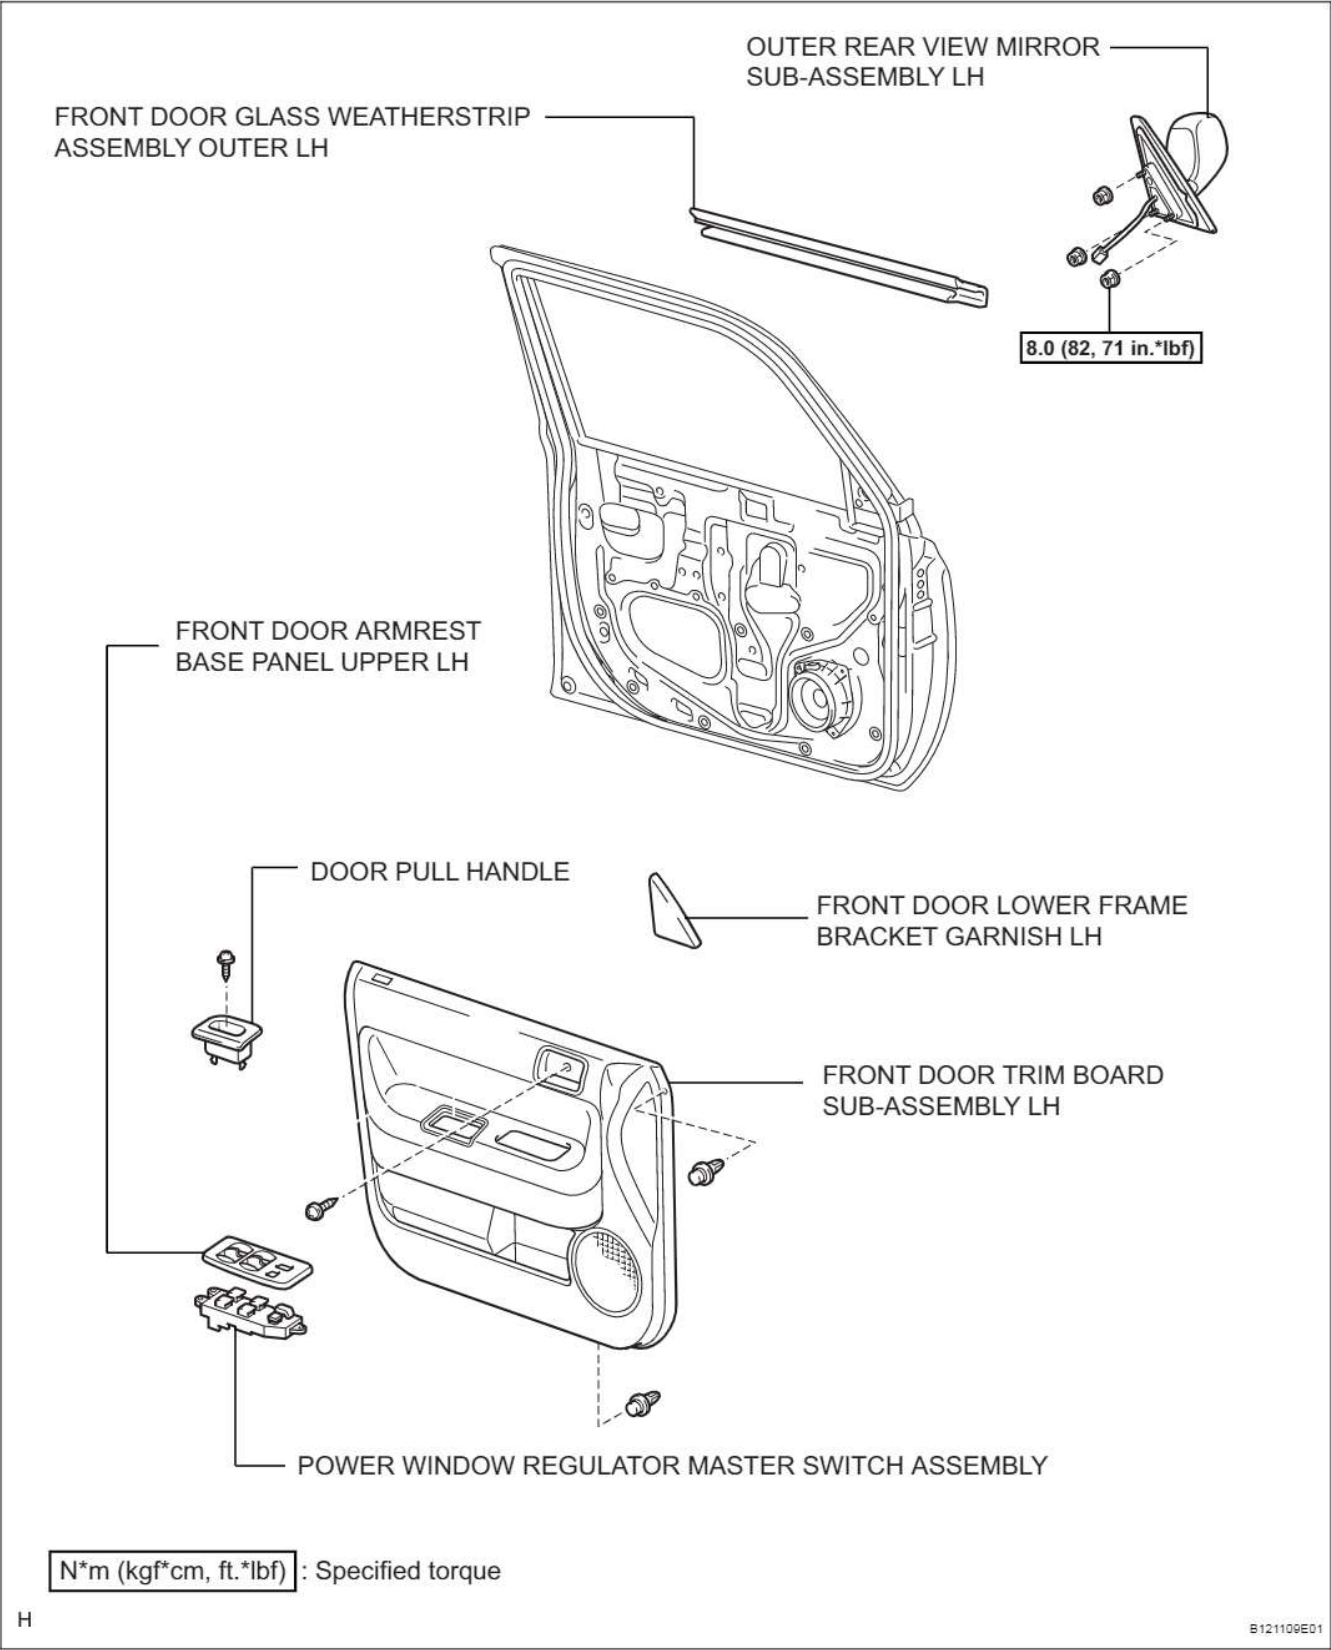

ET-14

EXTERIOR – FRONT DOOR GLASS WEATHERSTRIP

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


2. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page [ED-8](#))3. REMOVE DOOR PULL HANDLE (See page [ED-8](#))4. REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY (See page [ED-8](#))5. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-9](#))6. REMOVE OUTER REAR VIEW MIRROR SUB-ASSEMBLY LH (See page [MI-7](#))

7. REMOVE FRONT DOOR GLASS WEATHERSTRIP ASSEMBLY OUTER LH


- Put protective tape under the weatherstrip.
- Using a moulding remover, detach the claws to remove the moulding as shown in the illustration.

HINT:

Tape the remover tip before use.

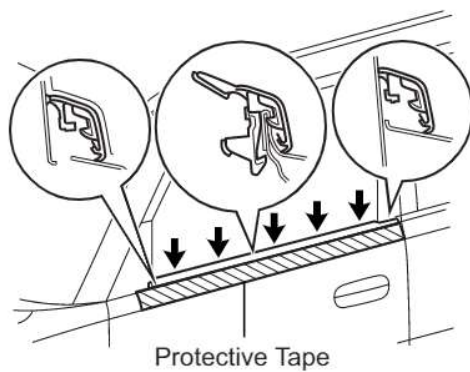

Protective Tape

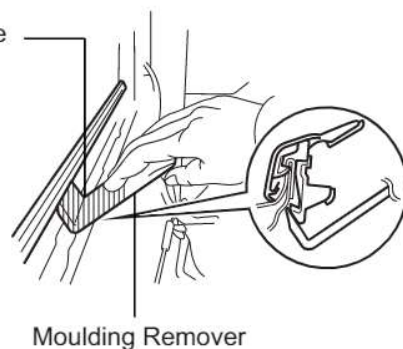

Moulding Remover

H

B121108E02

INSTALLATION

- HINT:
- Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - When installing the clip, heat the vehicle body and clip using a heat light.

Heating temperature

Item	Temperature
Vehicle body	40 to 60°C (104 to 140°F)
Clip	20 to 30°C (68 to 86°F)

NOTICE:
Do not heat the vehicle body and clip excessively.


1. REPLACE ROOF DRIP SIDE FINISH MOULDING CLIP


- HINT:
- Use the procedures below to replace damaged or accidentally removed clips. If this step is not necessary, go to the next step.

NOTICE:
After press-fitting the clips, wait 30 minutes or more before installing the moulding.

- HINT:
- Minimum hardening time: 30 minutes
 - Time needed for complete hardening: 24 hours
- (a) Remove the double-sided tape that remains on the moulding installation area of the vehicle body, and then clean the surface with white gasoline.
- (b) Heat the clip installation surfaces of the vehicle body and the installation part of the clips.
- (c) Install new clips in the positions shown in the illustration. Press-fit the clips by hand.

ET

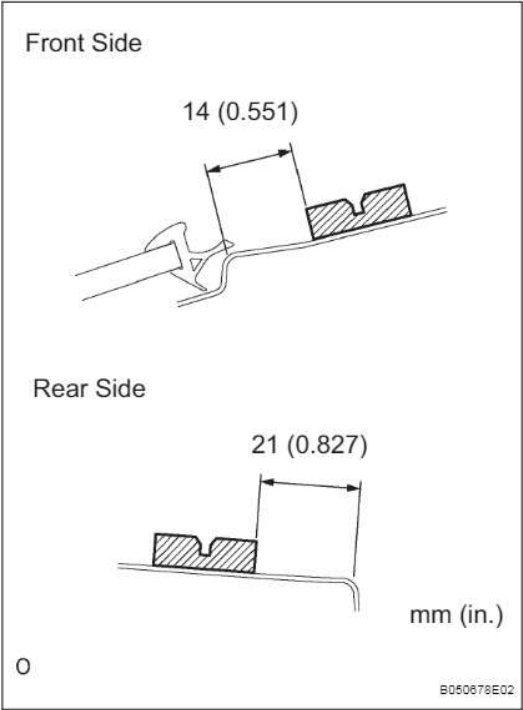

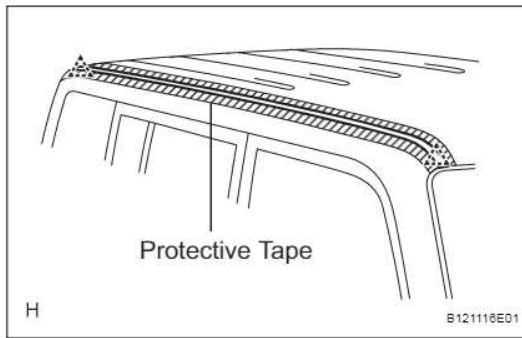EXTERIOR – ROOF DRIP SIDE FINISH MOULDING**ET-21**


- 2. INSTALL ROOF DRIP SIDE FINISH MOULDING LH**
- (a) Apply protective tape around the edges of the moulding.
 - (b) Attach the clips both in the front and rear ends of the moulding, and then install the moulding.
 - (c) Remove the protective tape from the edges of the moulding.

ET

ET-16

EXTERIOR – REAR DOOR GLASS WEATHERSTRIP

REAR DOOR GLASS WEATHERSTRIP COMPONENTS

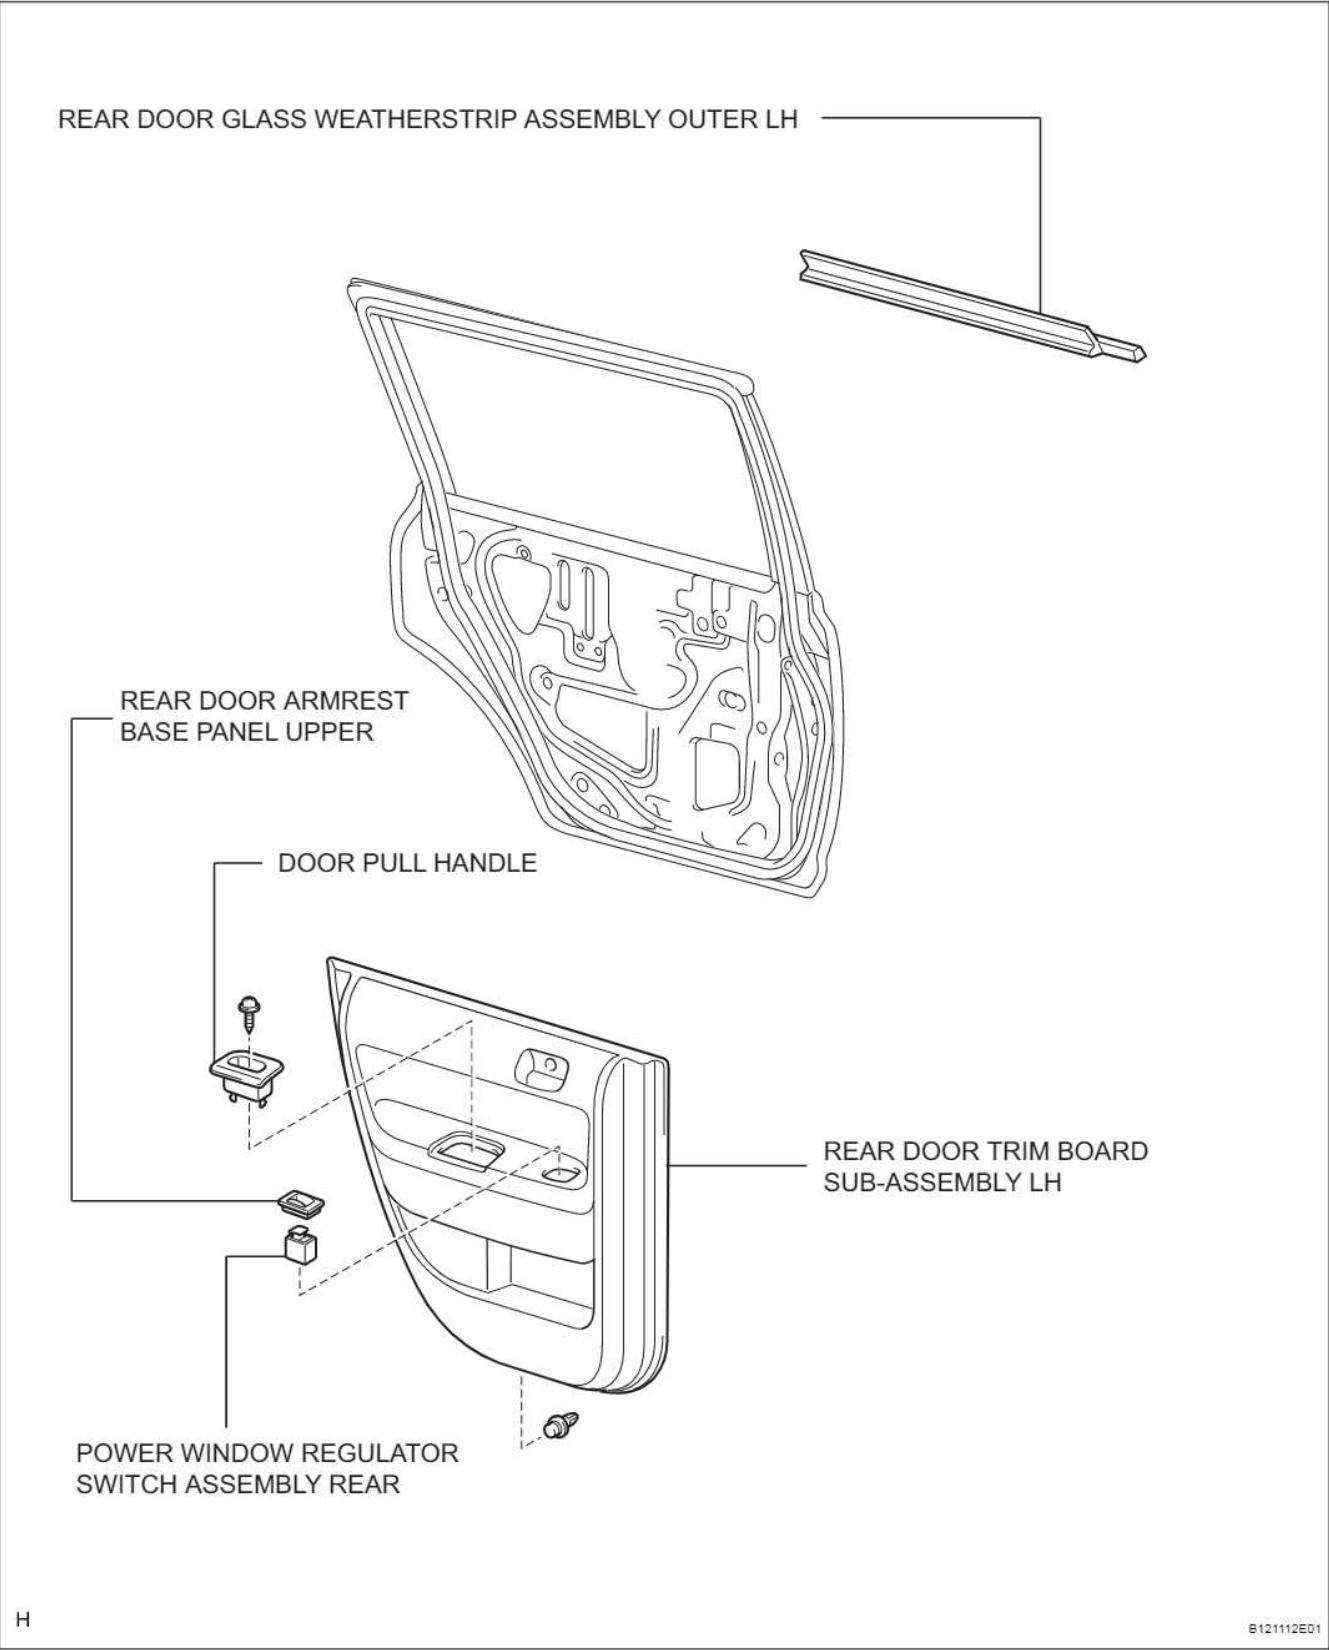

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. REMOVE CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE DOOR PULL HANDLE (See page [ED-25](#))

3. REMOVE POWER WINDOW REGULATOR SWITCH ASSEMBLY REAR (See page [ED-25](#))


4. REMOVE REAR DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-25](#))

5. REMOVE REAR DOOR GLASS WEATHERSTRIP ASSEMBLY OUTER LH

- Put protective tape under the weatherstrip.
- Using a moulding remover, detach the claws to remove the weatherstrip as shown in the illustration.

HINT:

Tape the remover tip before use.

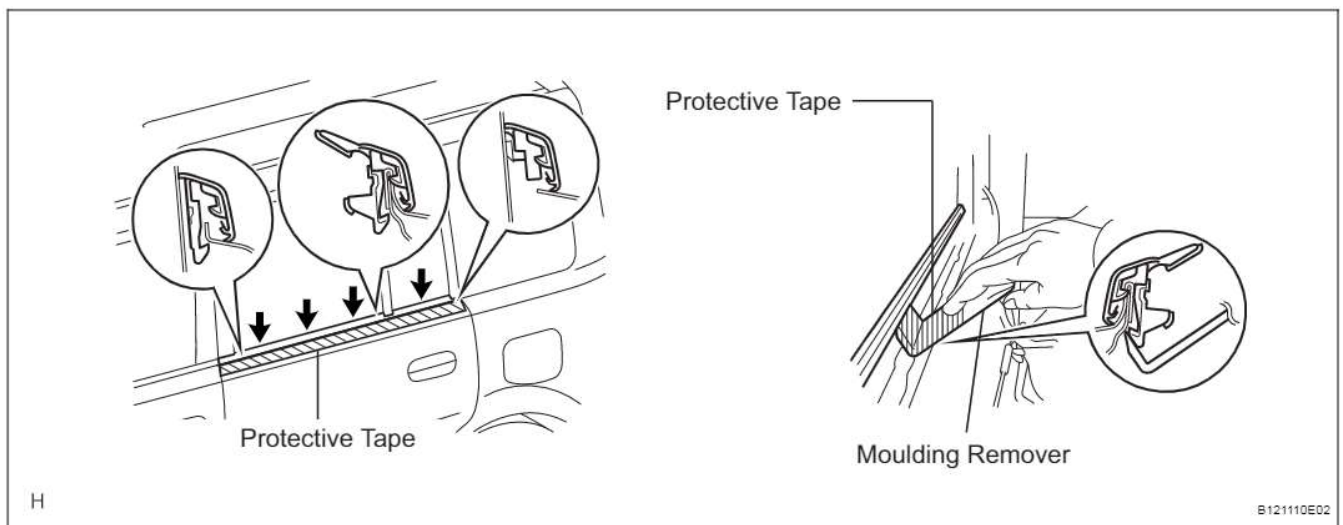
ET

INSTALLATION

1. INSTALL REAR DOOR GLASS WEATHERSTRIP ASSEMBLY OUTER LH


- Attach the claws to install the weatherstrip.

2. INSTALL REAR DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-34](#))

3. INSTALL POWER WINDOW REGULATOR SWITCH ASSEMBLY REAR (See page [ED-34](#))

4. INSTALL DOOR PULL HANDLE (See page [ED-35](#))

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

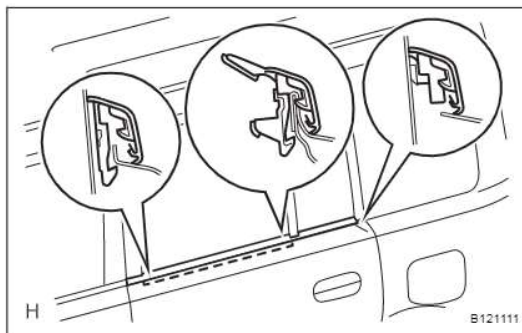


INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

1. INSTALL BODY ROCKER PANEL MOULDING LH


- (a) Attach the 6 clips to install the moulding.
- (b) Install the 2 bolts, 2 moulding end covers and 8 retainers.

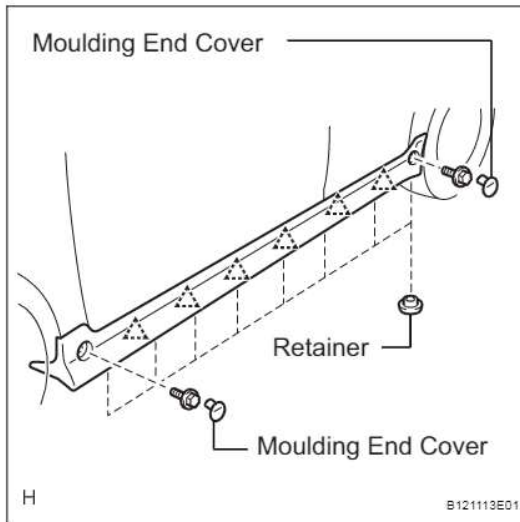

ET-18

EXTERIOR – ROOF DRIP SIDE FINISH MOULDING

ROOF DRIP SIDE FINISH MOULDING COMPONENTS

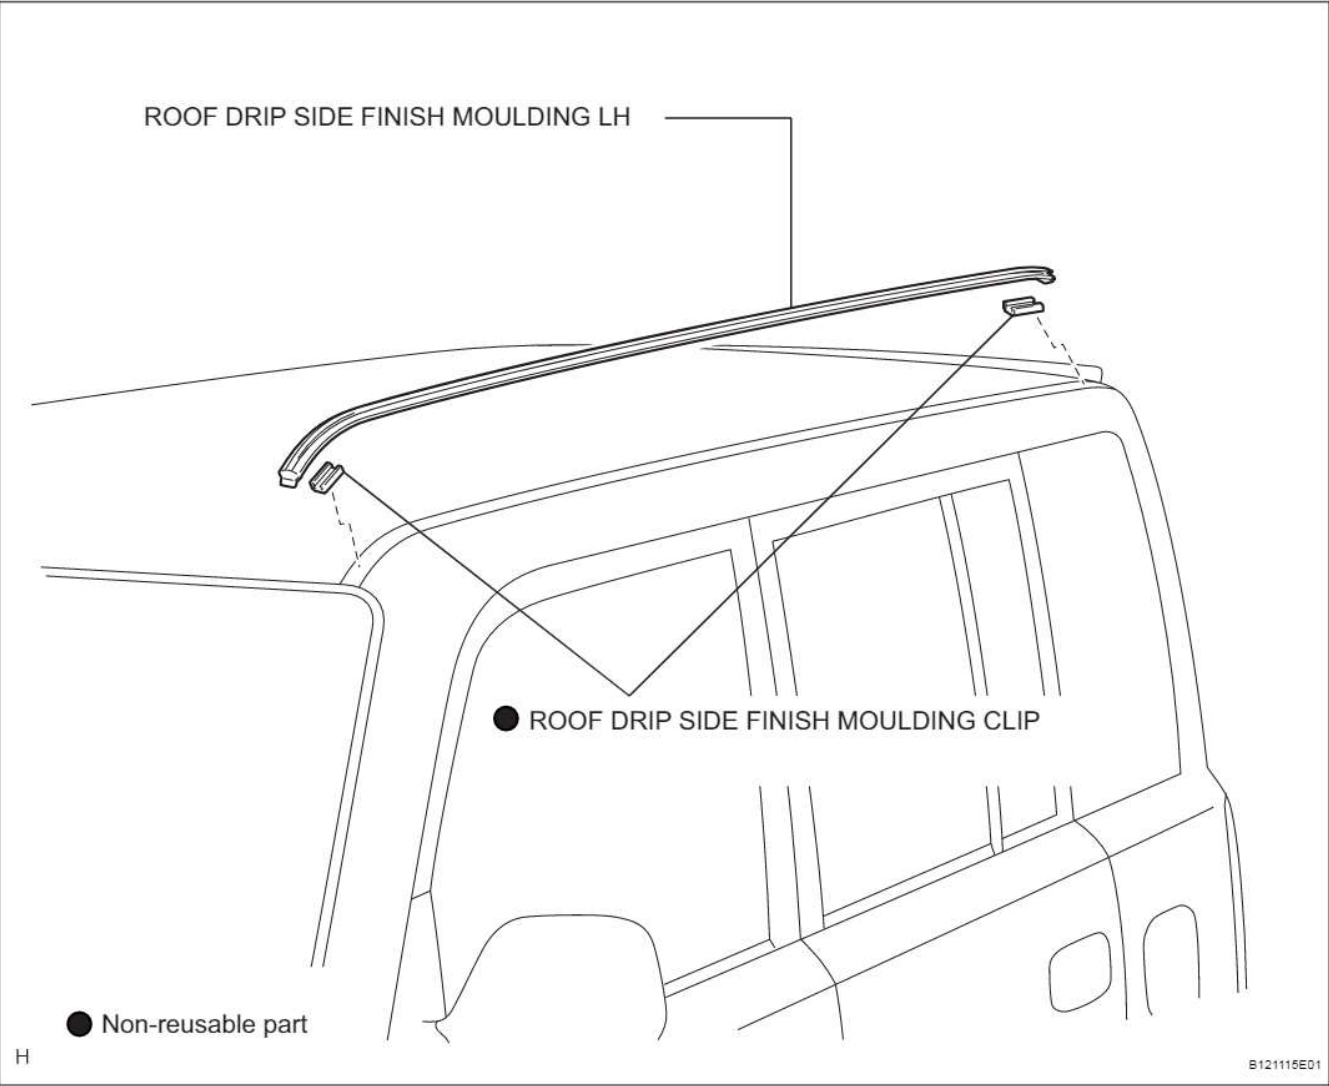

ET

REMOVAL

HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. REMOVE ROOF DRIP SIDE FINISH MOULDING LH


- (a) Apply protective tape around the edges of the moulding.
- (b) Using a moulding remover, detach the clips both in the front and rear ends of the moulding, and then remove the moulding.

NOTICE:

- Do not remove the clips.
- If the clips are damaged or removed accidentally, replace them.

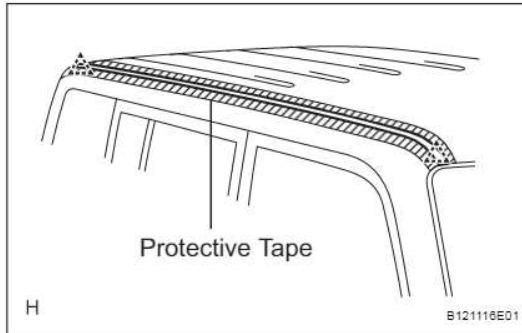

ROCKER PANEL MOULDING
COMPONENTS

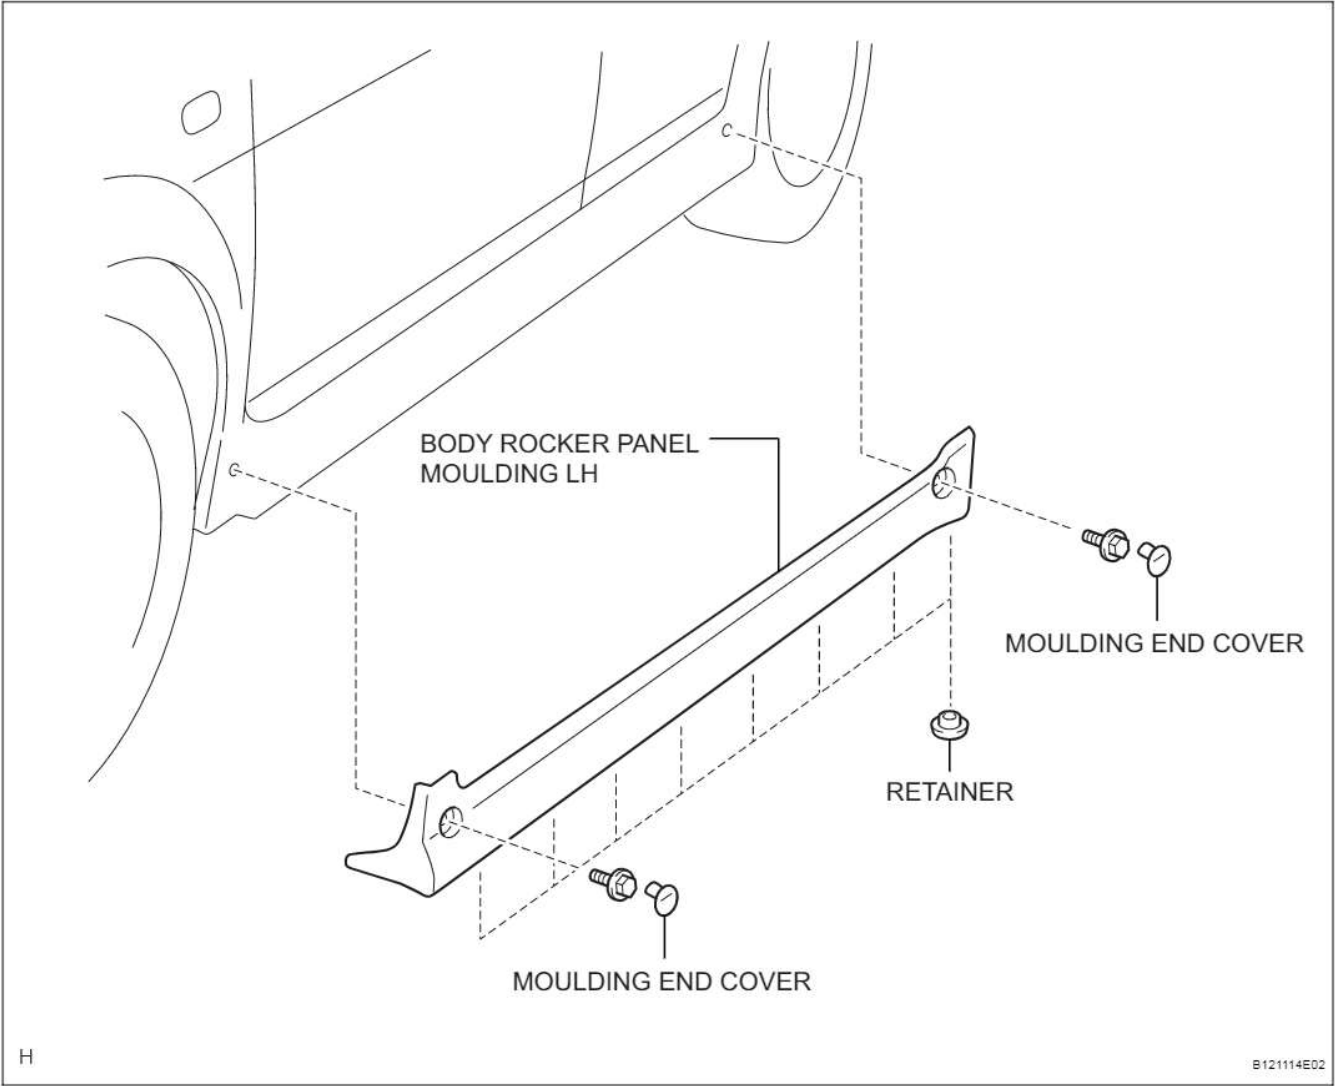

ET

ET-22

EXTERIOR – ROCKER PANEL MOULDING


REMOVAL

HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. REMOVE BODY ROCKER PANEL MOULDING LH

- (a) Using a clip remover, remove the 8 retainers.
- (b) Remove the 2 moulding end covers and 2 bolts.
- (c) Detach the 6 clips and remove the moulding.

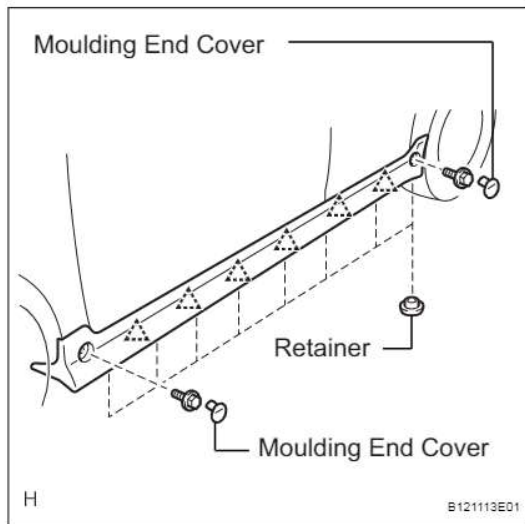


BACK DOOR OUTSIDE GARNISH COMPONENTS

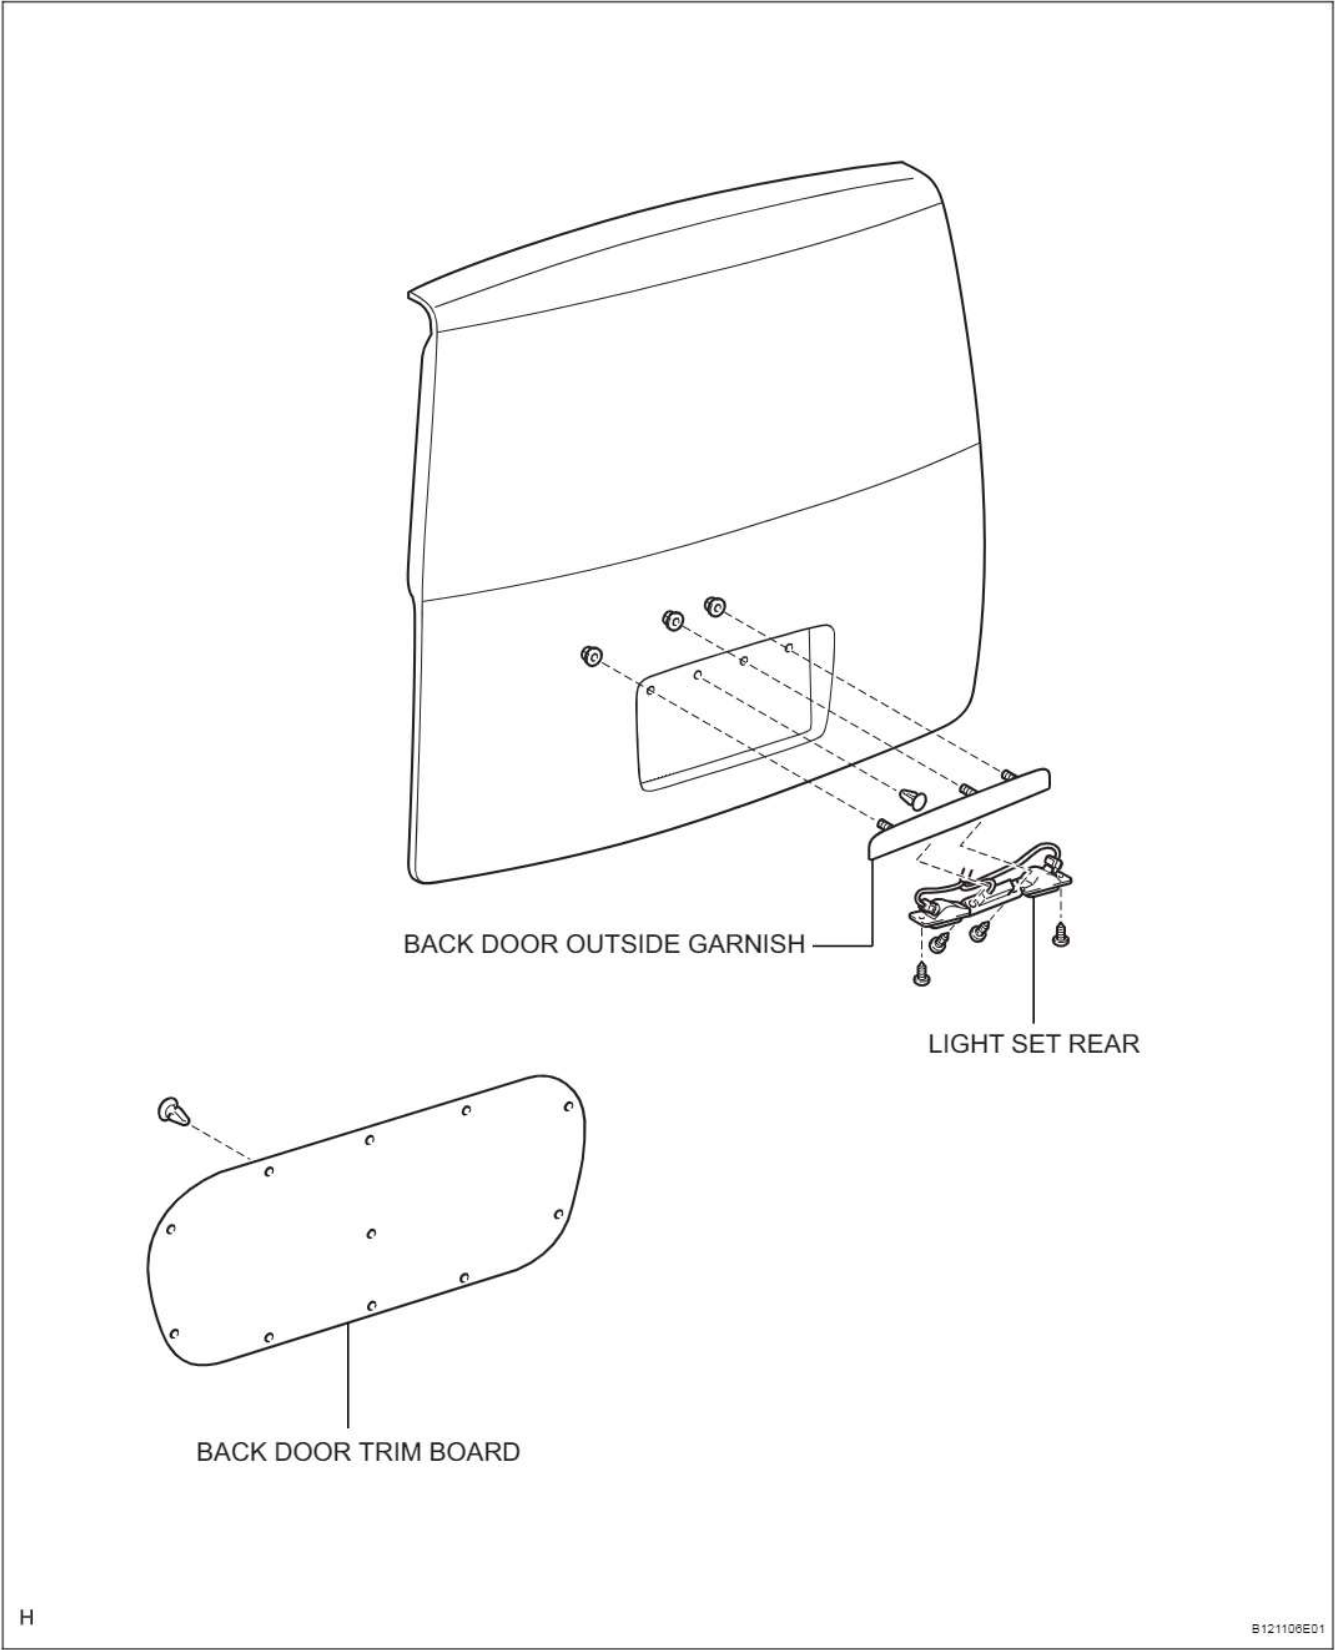


ET-24**EXTERIOR – BACK DOOR OUTSIDE GARNISH****REMOVAL**


1. **REMOVE BACK DOOR TRIM BOARD** (See page [ED-38](#))
2. **REMOVE BACK DOOR OUTSIDE GARNISH**
 - (a) Remove the 3 nuts and detach the clip. Then remove the garnish.

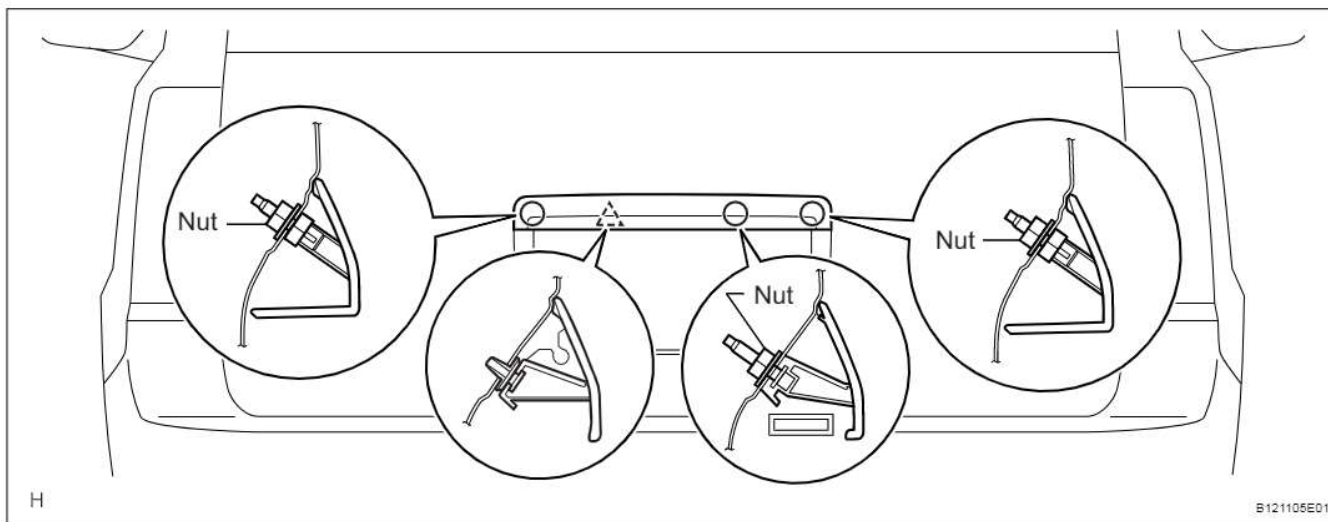

- (b) Remove the 4 screws and light set rear.

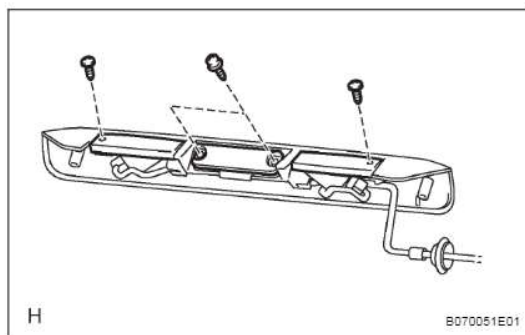
**INSTALLATION**

1. **INSTALL BACK DOOR OUTSIDE GARNISH**
 - (a) Install the light set rear with the 4 screws.

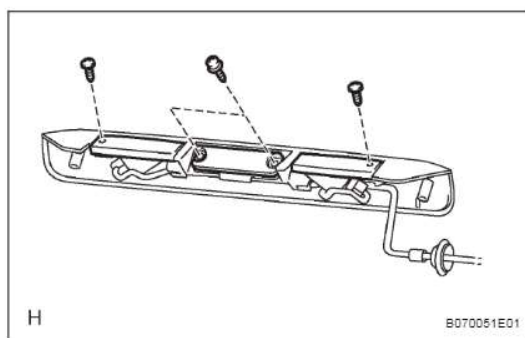**ET**

EXTERIOR – BACK DOOR OUTSIDE GARNISH**ET-25**

- (b) Attach the clip and install the garnish with the 3 nuts.

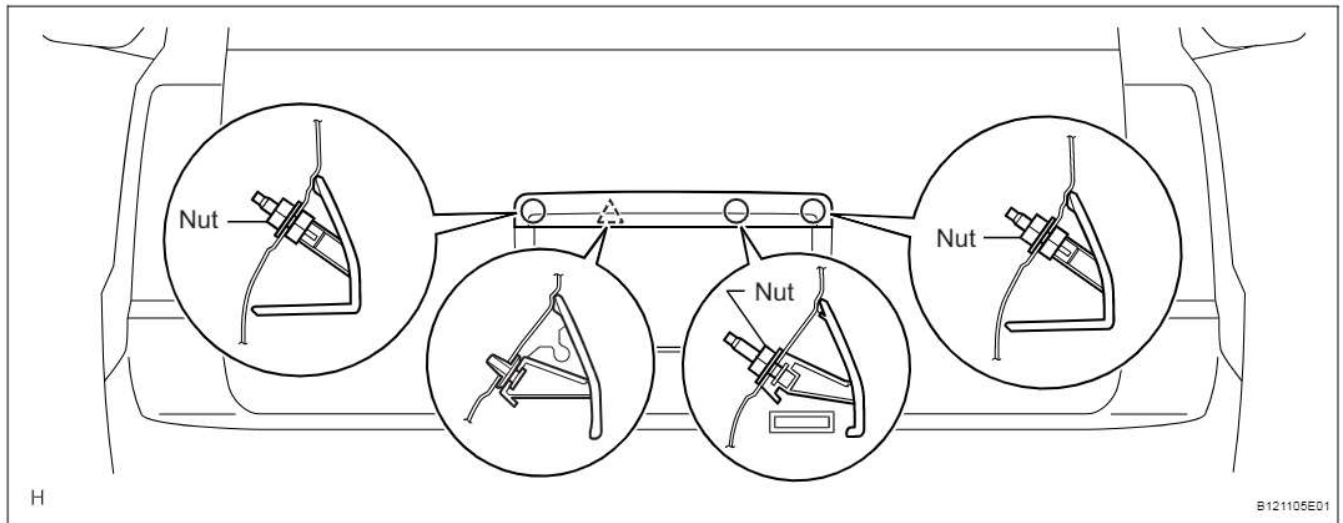

2. **INSTALL BACK DOOR TRIM BOARD** (See page [ED-41](#))

ET