


Chevrolet Colorado 2018 fuse box diagram

Engine compartment fuse block

The engine compartment fuse block is in the engine compartment, on the driver side of the vehicle.

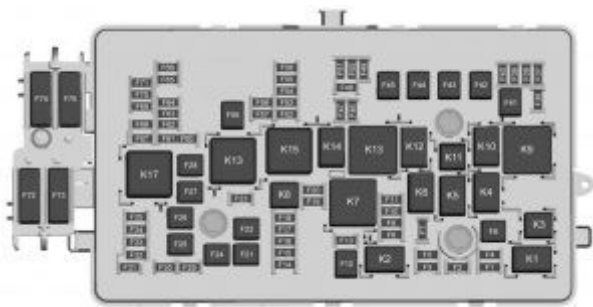

Chevrolet Colorado – fuse box diagram – engine

compartment

Mini Fuses (2 pin)	Usage
F01	Traction Control Module Power
F02	Engine Control Module Power
F03	A/C Clutch
F04	—
F05	Engine control module/Integrated chassis control module/Fuel pump power module
F06	Wipers
F07	Cargo lamp/Bed lighting (if equipped)
F08	Fuel Injectors – Even
F09	Fuel Injectors – Odd
F10	Engine Control Module 1
F11	Miscellaneous 1 / Ignition
F12	Starter
F13	Traction Control Module
F14	—
F15	—
F16	—
F17	Front Axle Actuator
F18	—
F19	—
F20	—
F21	Front blower
F22	Antilock brake system valves
F23	—


F24	Trailer
F25	Transfer case electronic control
F26	Antilock brake system pump
F27	Trailer brake control module (if equipped)/Trailer wiring
F28	Rear window defogger
F29	—
F30	Driver heated seat
F31	—
F32	Passenger heated seat
F33	Body Control Module 3
F34	Fuel System Control Module
F35	Integrated chassis control module (if equipped)
F36	Center high-mounted stoplamp
F37	Right high-beam headlamp
F38	Left high-beam headlamp
F39	Rear differential lock actuators (ZR2 only)
F40	Front differential lock actuators (ZR2 only)
F41	—
F42	—
F43	—
F44	Vacuum pump
F45	—
F46	Engine control module 2
F47	Miscellaneous 2/Ignition
F48	Fog Lamps (If Equipped)
F49	—
F50	Trailer Park Lamps
F51	Horn
F52	—
F53	—
F54	—
F55	—
F56	Washer Pump
F57	—
F58	—
F59	—
F60	Mirrors Defogger
F61	—
F62	Canister Vent Solenoid

F63	—
F64	Trailer Reverse Lamp
F65	Left trailer stoplamp/Turn signal lamps
F66	Right trailer stoplamp/Turn signal lamps
F67	Electric Power Steering
F68	—
F69	Battery Regulated Voltage Control
F70	—
F71	—
F72	—
F73	—
F74	Generator
F75	—

Relays	Usage
K1	A/C clutch
K2	Starter
K3	—
K4	Wipers Speed
K5	Wipers Control
K6	Cargo lamp/Bed lighting (if equipped)
K7	Powertrain
K8	—
K9	Front differential lock actuators (ZR2 only)
K10	Rear differential lock actuators (ZR2 only)
K11	Center high-mounted stoplamp
K12	Vacuum pump
K13	—
K14	Trailer parking lamps
K15	Run/Crank
K16	—
K17	Rear window/Mirror defogger

Instrument panel fuse block

The instrument panel fuse block is behind the passenger side cowl side trim panel.

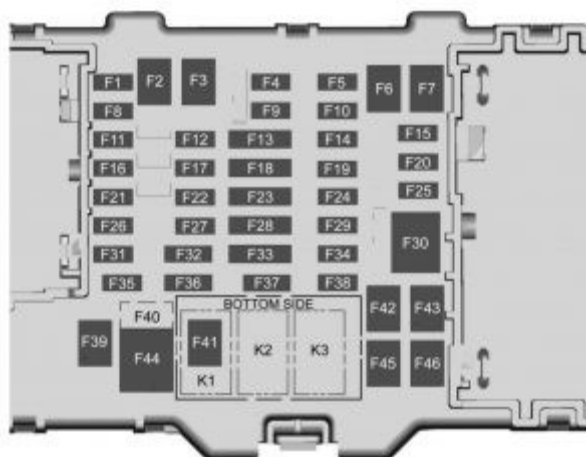

Chevrolet Colorado – fuse box diagram –

instrument panel

Fuses	Usage
F1	Body Control Module 1
F2	—
F3	—
F4	Steering Wheel Controls
F5	Body Control Module 2
F6	—
F7	—
F8	Mirror Window Module
F9	Instrument Cluster
F10	—
F11	Body Control Module 8
F12	—
F13	OnStar/HVAC
F14	Radio/HMI
F15	Body Control Module 6
F16	Communication gateway module
F17	Body Control Module 4
F18	Airbag
F19	—
F20	Amplifier (if equipped)
F21	—
F22	—
F23	Data link connector/USB
F24	HVAC ignition
F25	Body Control Module 7
F26	—
F27	—
F28	Instrument panel/Sensing and diagnostic module/Ignition

F29	Miscellaneous Ignition
F30	—
F31	Front Camera
F32	Steering wheel controls backlighting
F33	Heated steering wheel
F34	Front ventilated seats
F35	Park/Reverse/Neutral/Drive/Low/Wireless charging module
F36	Discrete Logic Ignition Sensor
F37	—
F38	—
F39	Auxiliary power outlet 2
F40	Auxiliary power outlet
F41	Auxiliary power outlet 1/Lighter
F42	Left power window
F43	Driver power seat
F44	—
F45	Right power window
F46	Passenger power seat

Micro Relay	Usage
K1	Retained accessory power
K2	Run/Crank