 



Land Rover Discovery II 1998 fuse box diagrams

Main fuse box

The main fuse box is fitted below and to one side of the steering column;

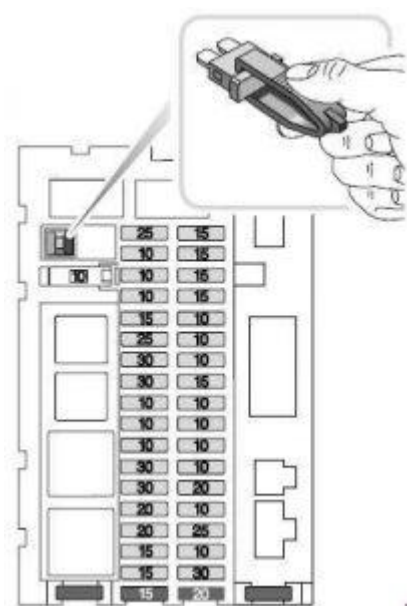

 Land Rover Discovery – fuse box diagram – main fuse

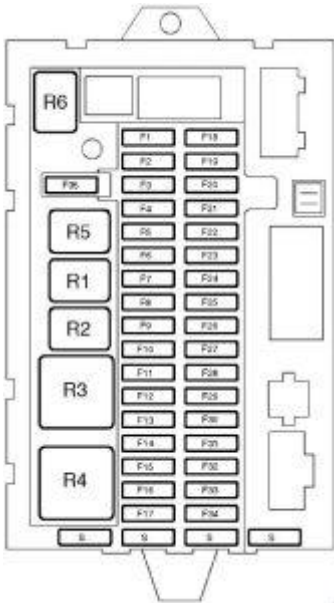

box
box

Land Rover Discovery – fuse box diagram – main fuse

Nº	A	Circuit protected
1	25	Central door locking

2	10	Fuel flap release
3	10	Instrument pack Switch illumination
4	10	Fog guard lights – rear
5	10	Headlight high beam – LH
6	25	Air conditioning blower – rear
7	30	Heater blower – front
8	30	Heated rear window Heated mirrors
9	10	Headlight normal beam – LH
10	10	Headlight normal beam – RH
11	10	Side & tail lights – LH Number plate light Switch illumination Trailer socket
12	30	Sunroof
13	30	Electric windows – rear
14	20	Ignition coils


15	20	Cigar lighter Interior lights Seat heaters Vanity mirror illumination
16	15	Clock Radio Park distance control Rear head phones
17	15	Radio amplifier Speakers
18	15	Wiper motor – rear
19	15	Wiper motor – front Screen washer – front
20	15	Interior lights Clock/radio memory Engine remobilisation Compact disc player Key i/lock Diagnostics
21	15	Transfer box Alarm audible warning Shift i/lock
22	10	Headlight high beam – RH
23	10	Starter motor

24	10	Alternator Automatic transmission Engine management
25	15	Brake lights Reverse lights
26	10	Auxiliary circuits relays
27	10	Instruments Hill descent control
28	10	Self levelling suspension Anti-lock braking
29	10	Active cornering enhancement (ACE)
30	20	Cruise control Electric mirrors Screen washer – rear
31	10	Air conditioning blower – front
32	25	Accessory socke
33	10	Side & tail lights – RH Radio Trailer socket Switch illumination
34	30	Electric windows – front

35	10	Airbag SRS
----	----	------------

Engine Compartment Fuse Box

 A second fuse box is located on the right side of the engine compartment adjacent to the coolant reservoir.

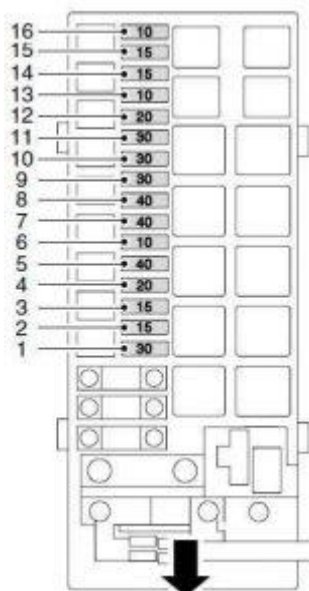

Land Rover Discover – fuse box diagram – engine


compartment

Nº	A	Circuit protected
1	30	Fuel injectors
2	15	Engine management system
3	15	Front fog lights
4	20	Headlight washers
5	40	Cooling fans
6	10	Air conditioning

7	40	Heated front screen – LH
8	40	Heated front screen – RH
9	30	Trailer lights
10	30	Fuel pump
11	30	ABS valve
12	20	Automatic gearbox
13	10	Body Control Unit (BCU)
14	15	Direction indicators Hazard lights
15	15	Active cornering enhancement (ACE)
16	10	Horn

Underseat fuses

 Two identical small fuse blocks are situated one beneath each front seat.

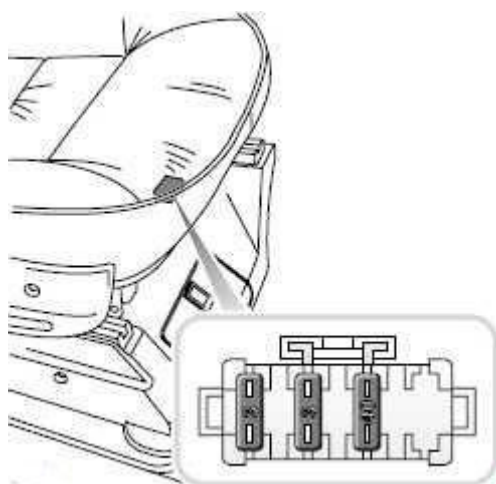

Land Rover Discover – fuse box diagram – under

seat

Nº	A	Circuit protected
1	40	Seat electrics
2	3	Lumbar support – pump
3	3	Lumbar support – solenoid