

Electrical Wiring Diagrams

GENERAL	ELE-1	Horns	ELE-153
ELECTRICAL WIRING DIAGRAMS	ELE-2	Instrument Panel	ELE-165
ABS	ELE-117	Interior Lights/Illumination	ELE-211
ABS/AST	ELE-120	Lumbar Control	ELE-247
Airbag (Supplemental Restraint System) ..	ELE-140	On-Board Computer	ELE-173
Air Conditioning and Heating	ELE-129	Park Ventilation	ELE-139
Anti-Theft (Alpine)	ELE-144	Power Distribution	ELE-2
Anti-Theft (EWS II)	ELE-150	Power Door Locks	ELE-226
Body Computer Module	ELE-176	Power Mirrors	ELE-241
Charging System	ELE-67	Power Seats	ELE-243
Convertible Top	ELE-253	Power Sunroof	ELE-248
Cruise Control	ELE-112	Power Windows	ELE-231
Data Link Connector	ELE-86	Radio/Cassette/CD/Speakers	ELE-255
Engine Cooling	ELE-94	Rear Window Defogger	ELE-160
Engine Management	ELE-70	Shift Interlock	ELE-110
Exterior Lights	ELE-194	Starting	ELE-63
Ground Distribution	ELE-35	Transmission Electronics	ELE-96
Headlights/Foglights	ELE-180	Warning System: Chimes	ELE-178
Heated Seats	ELE-245	Wiper/Washer	ELE-155

ELECTRICAL COMPONENT LOCATIONS

Relay and fuse positions, ground locations see **Repair Group 610**

GENERAL

This section contains wiring diagrams for 1992 through 1998 BMW 3 Series models.

WARNING —

On cars equipped with airbags, special precautions apply to any electrical testing or repair. The airbag unit is an explosive device and must be handled with extreme care. Before starting any work on an airbag equipped car, refer to the warnings and cautions in 720 Seatbelts and 721 Airbag Systems (SRS).

NOTE —

- The gear position/neutral safety switch is also sometimes referred to as the automatic transmission range switch.
- The EWS II system is also sometimes referred to as the Driveaway Protection System or the electronic immobilization system.

CAUTION —


- Always switch the ignition off and disconnect the negative (–) battery cable before removing any electrical components.
- Prior to disconnecting the battery, read the battery disconnection cautions given at the front of this manual on page viii.
- Connect and disconnect ignition system wires, multiple connectors and ignition test equipment leads only while ignition is switched off.
- Always switch a test meter to the appropriate function and range before making test connections.

- All-Season Traction (AST) is also referred to as ASC or ASC+T.

GENERAL


Power Distribution

1992-93 318i Only (1 of 7)

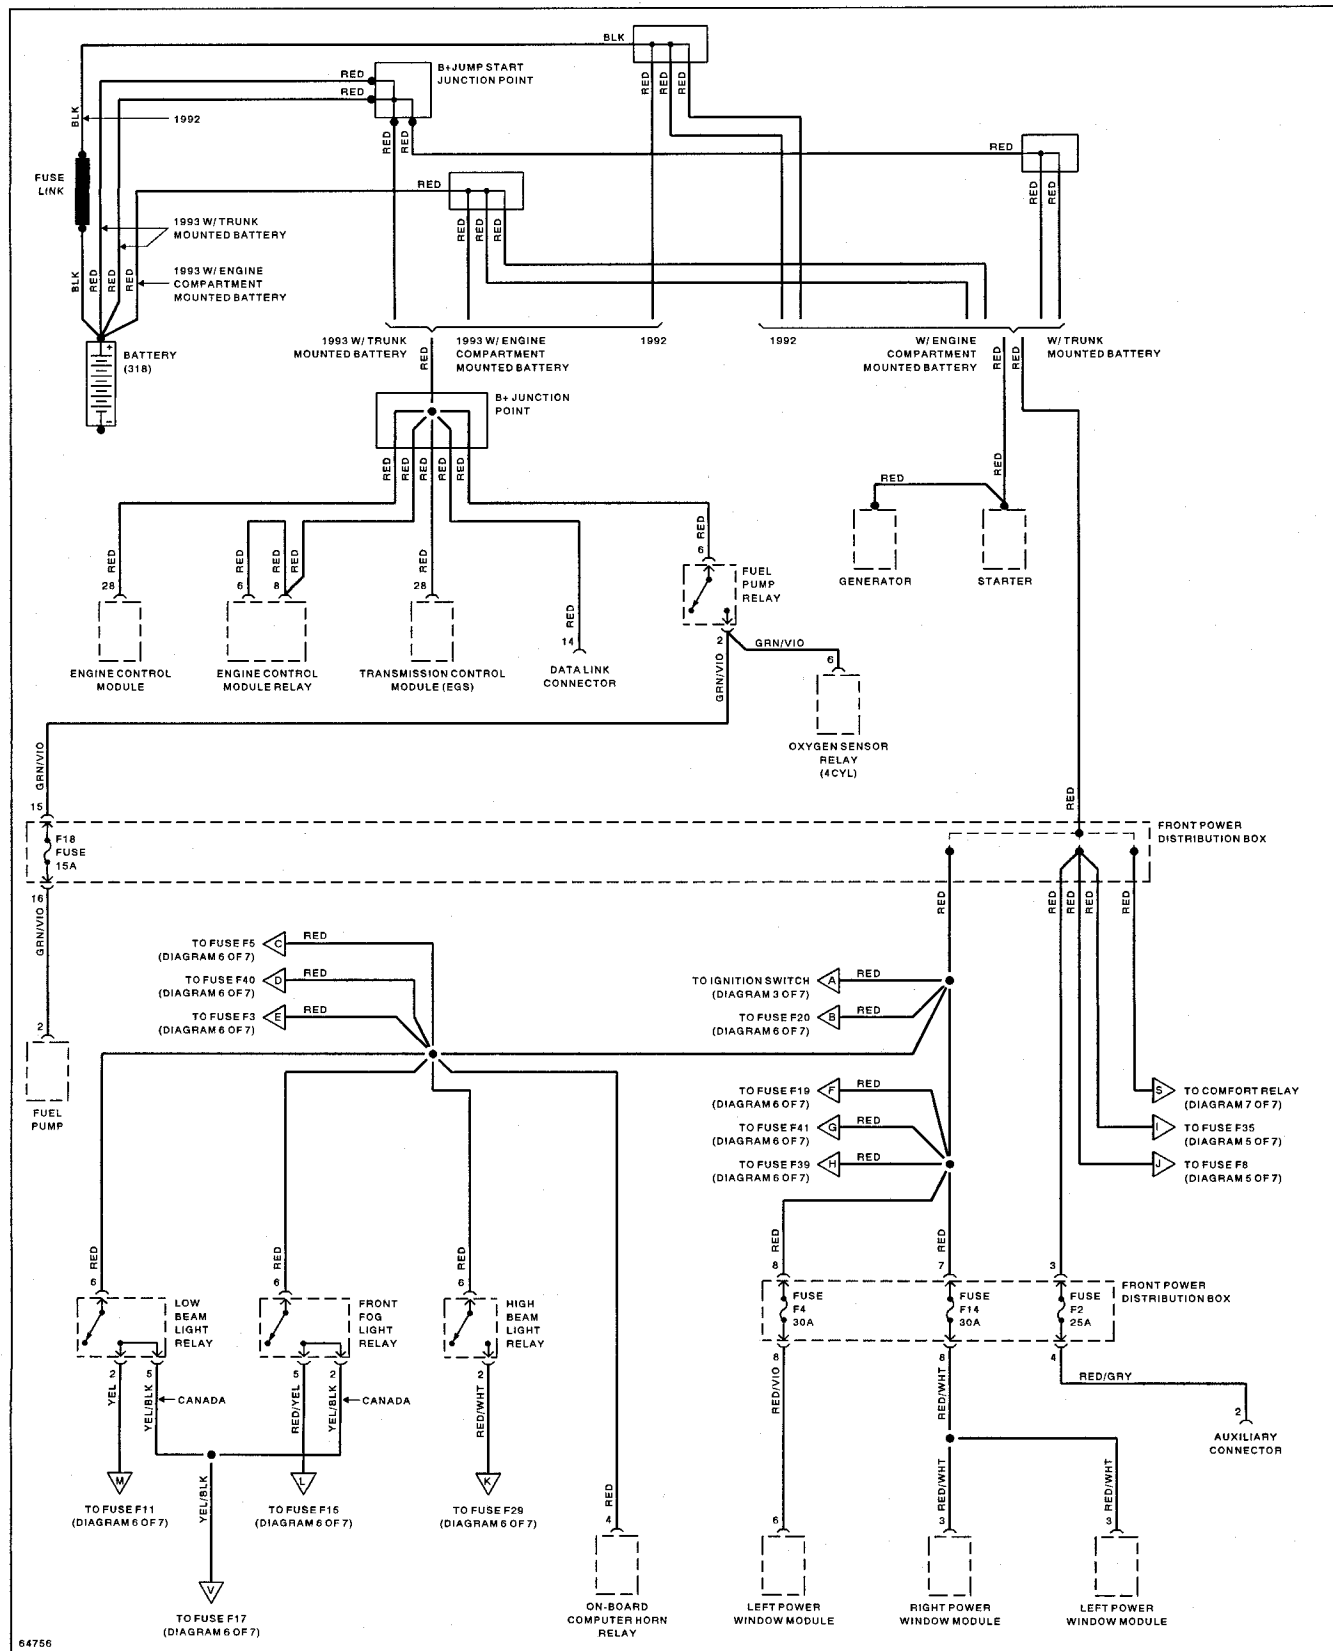


Power Distribution

1992-93 325i Only (2 of 7)

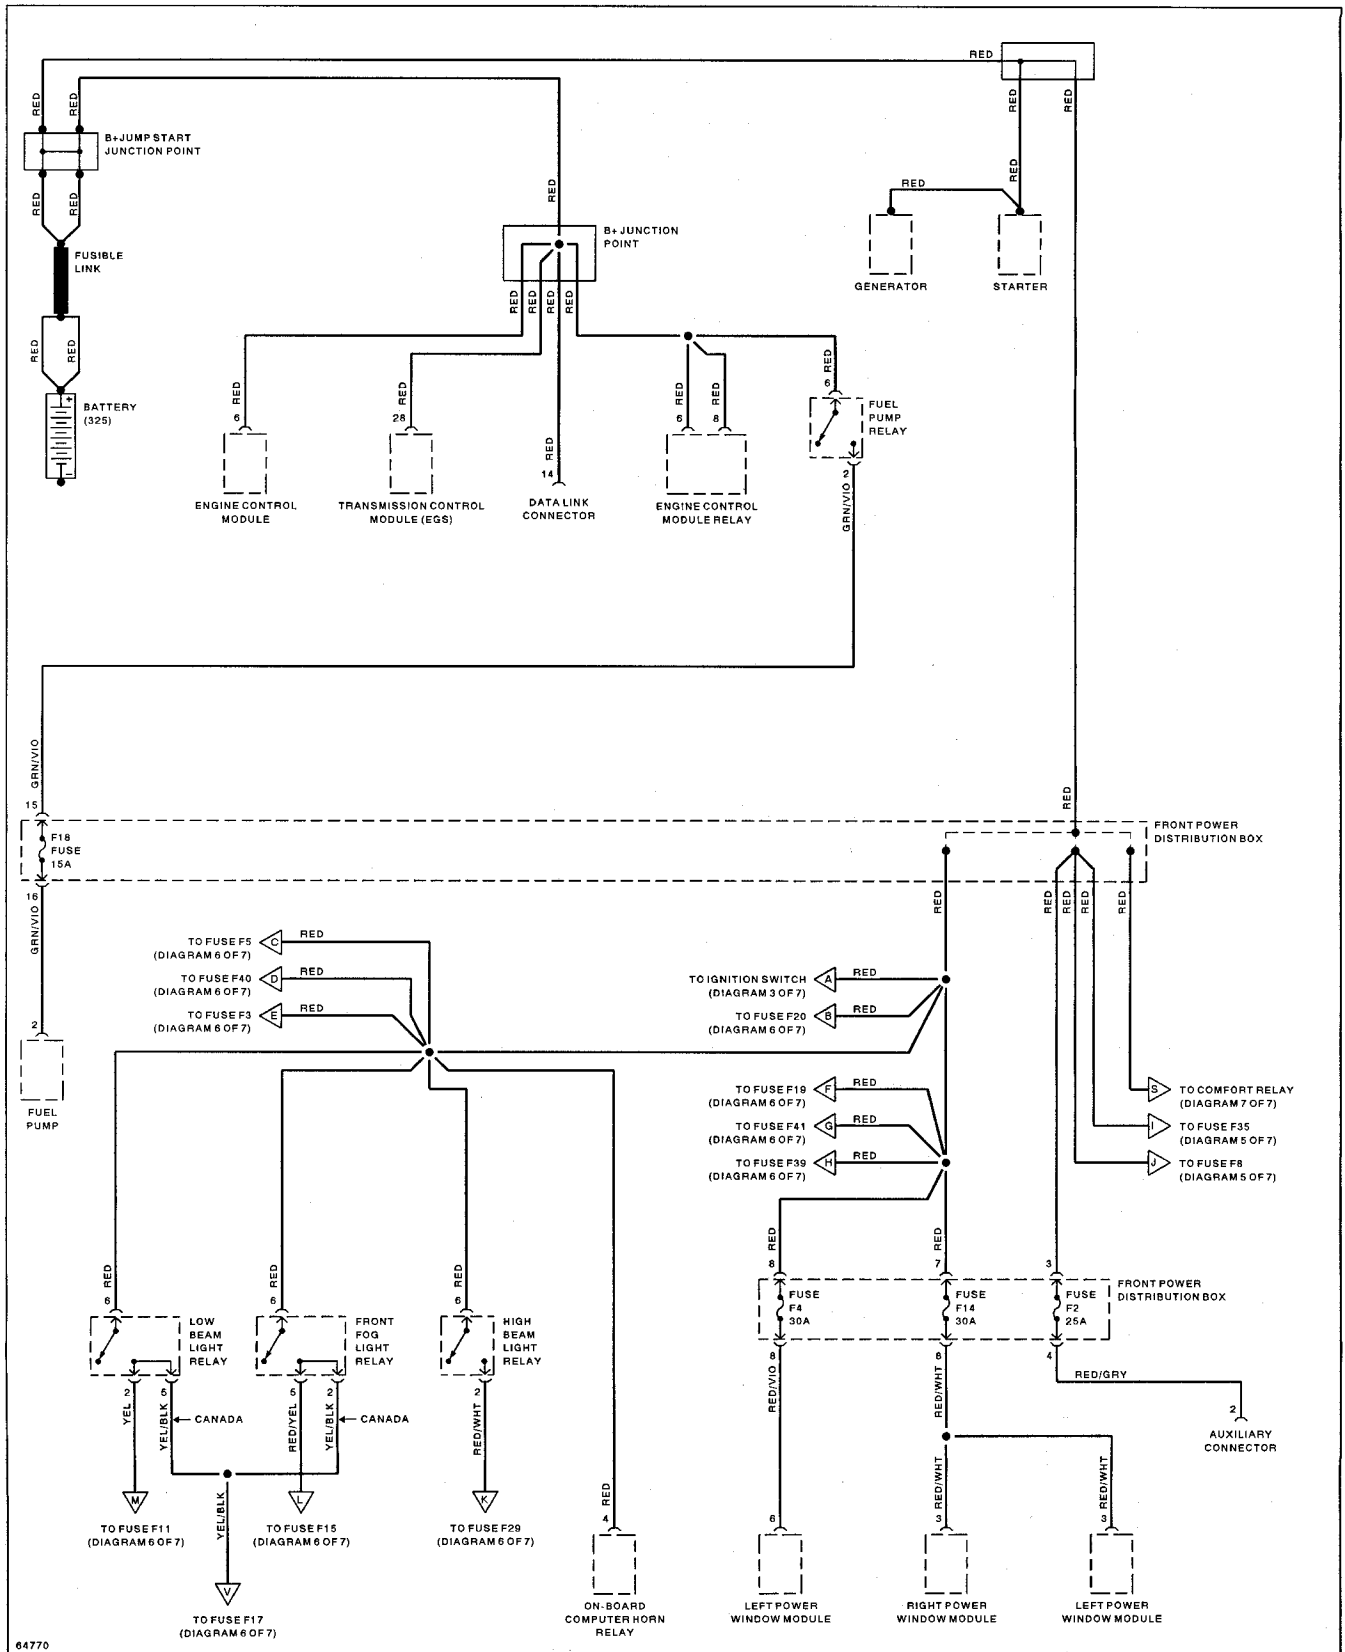


Power Distribution

1992-93 (3 of 7)

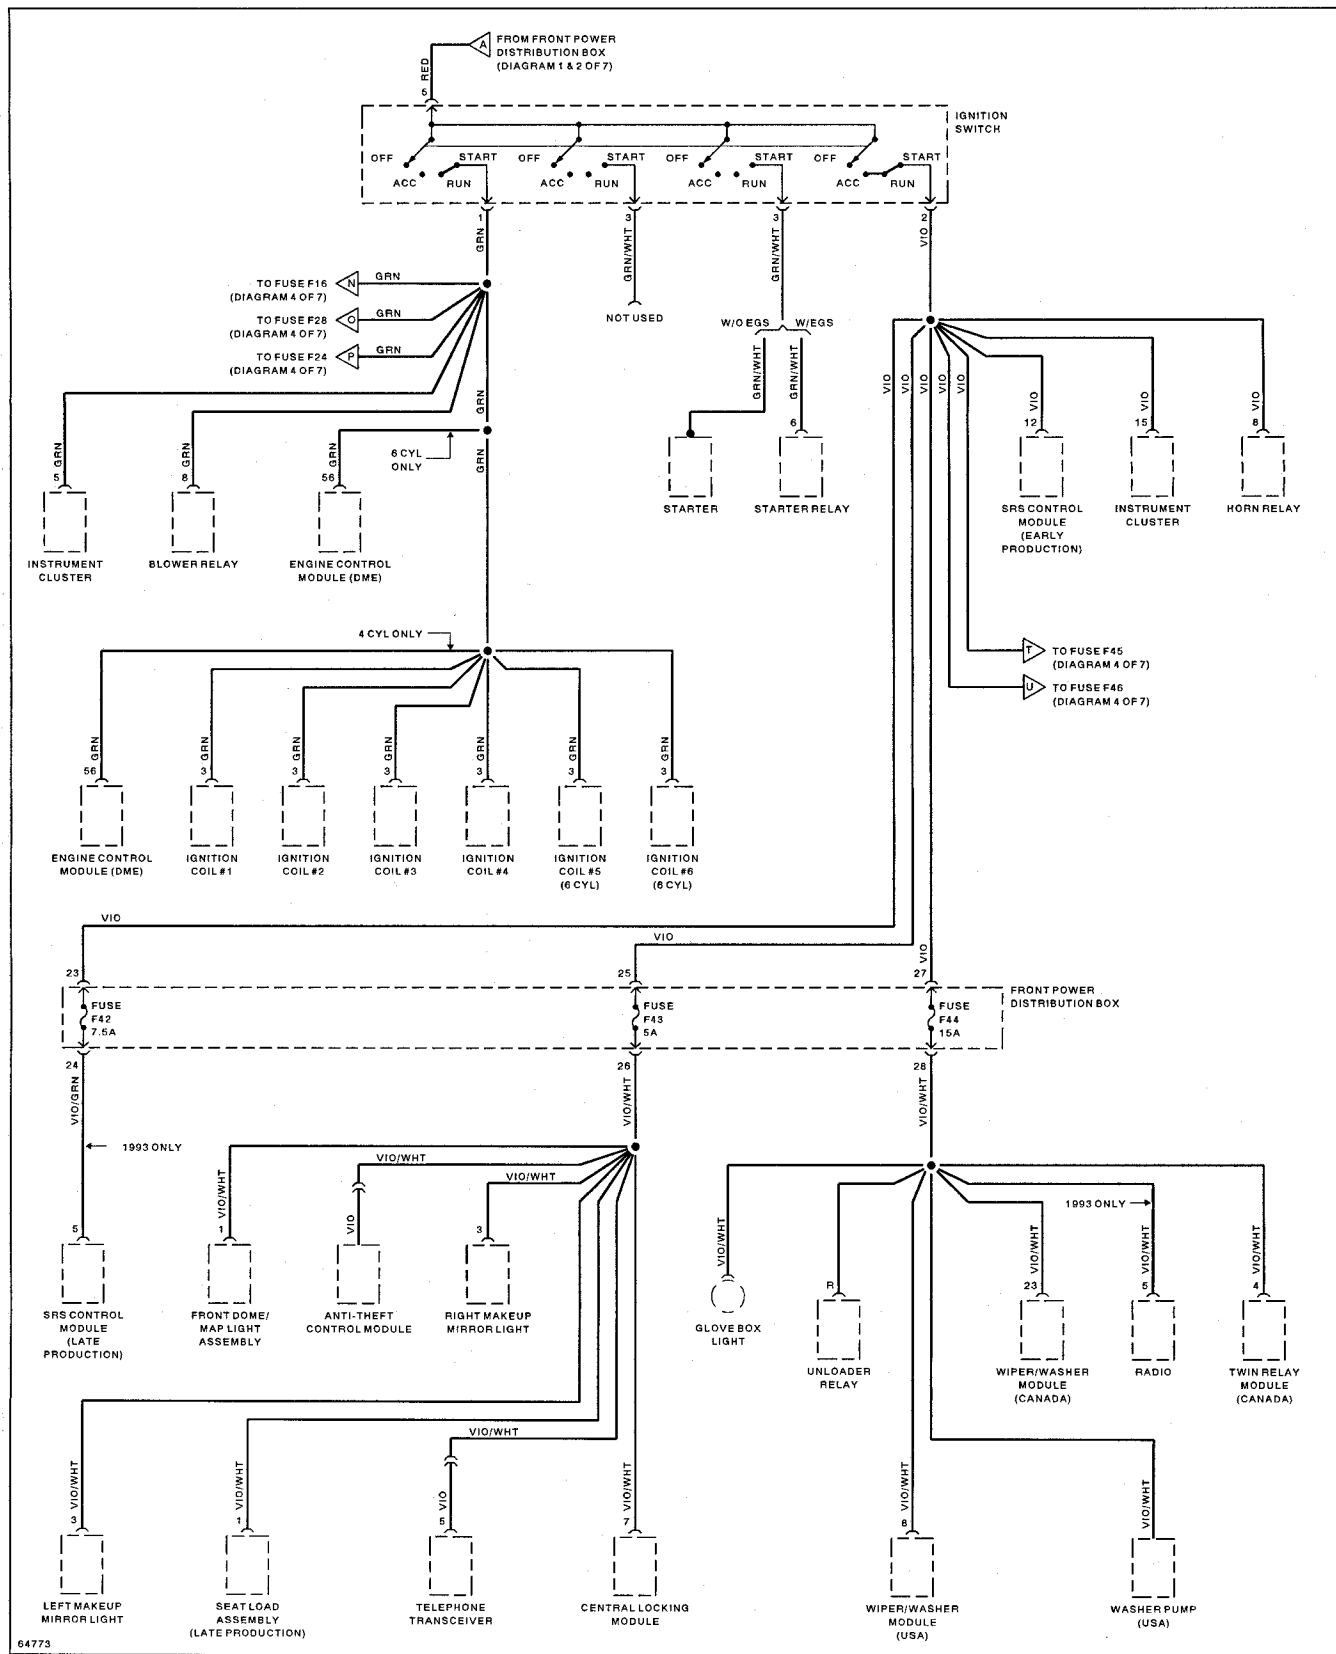


Power Distribution

1992-93 (4 of 7)

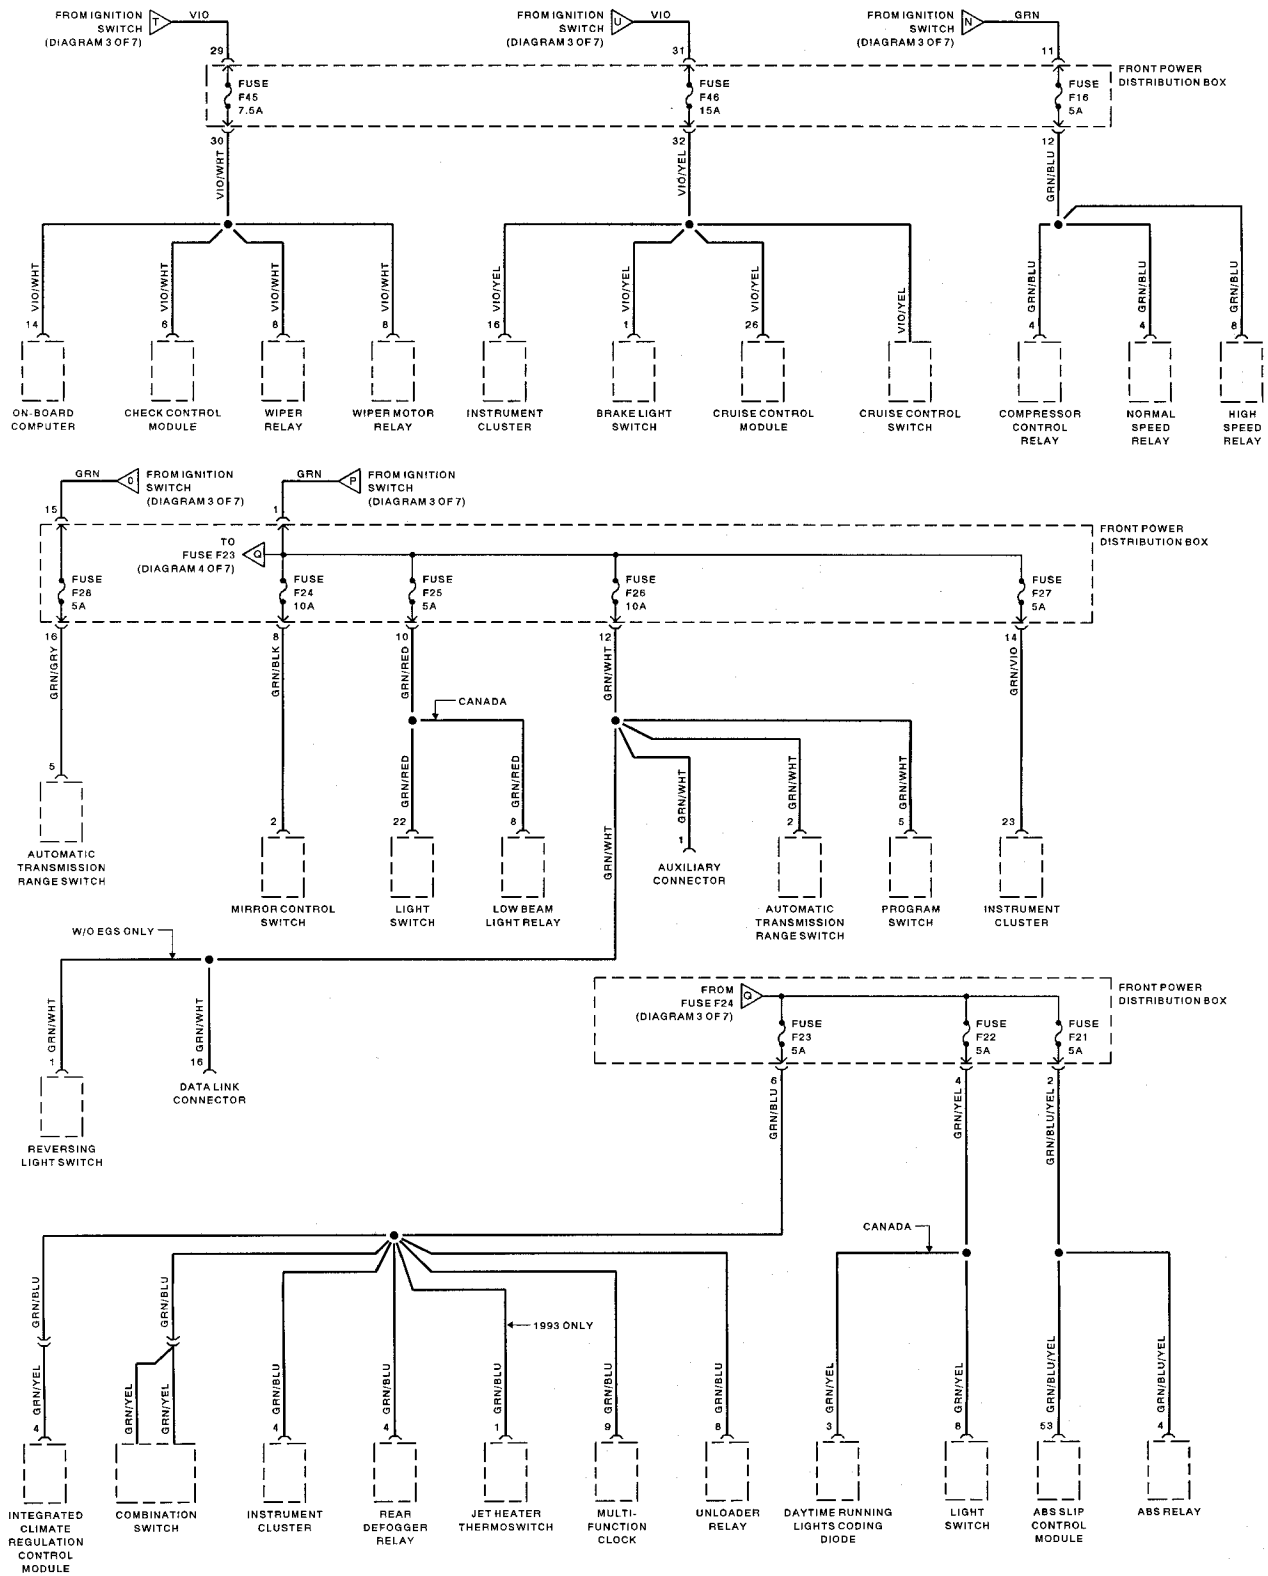


Power Distribution

1992-93 (5 of 7)

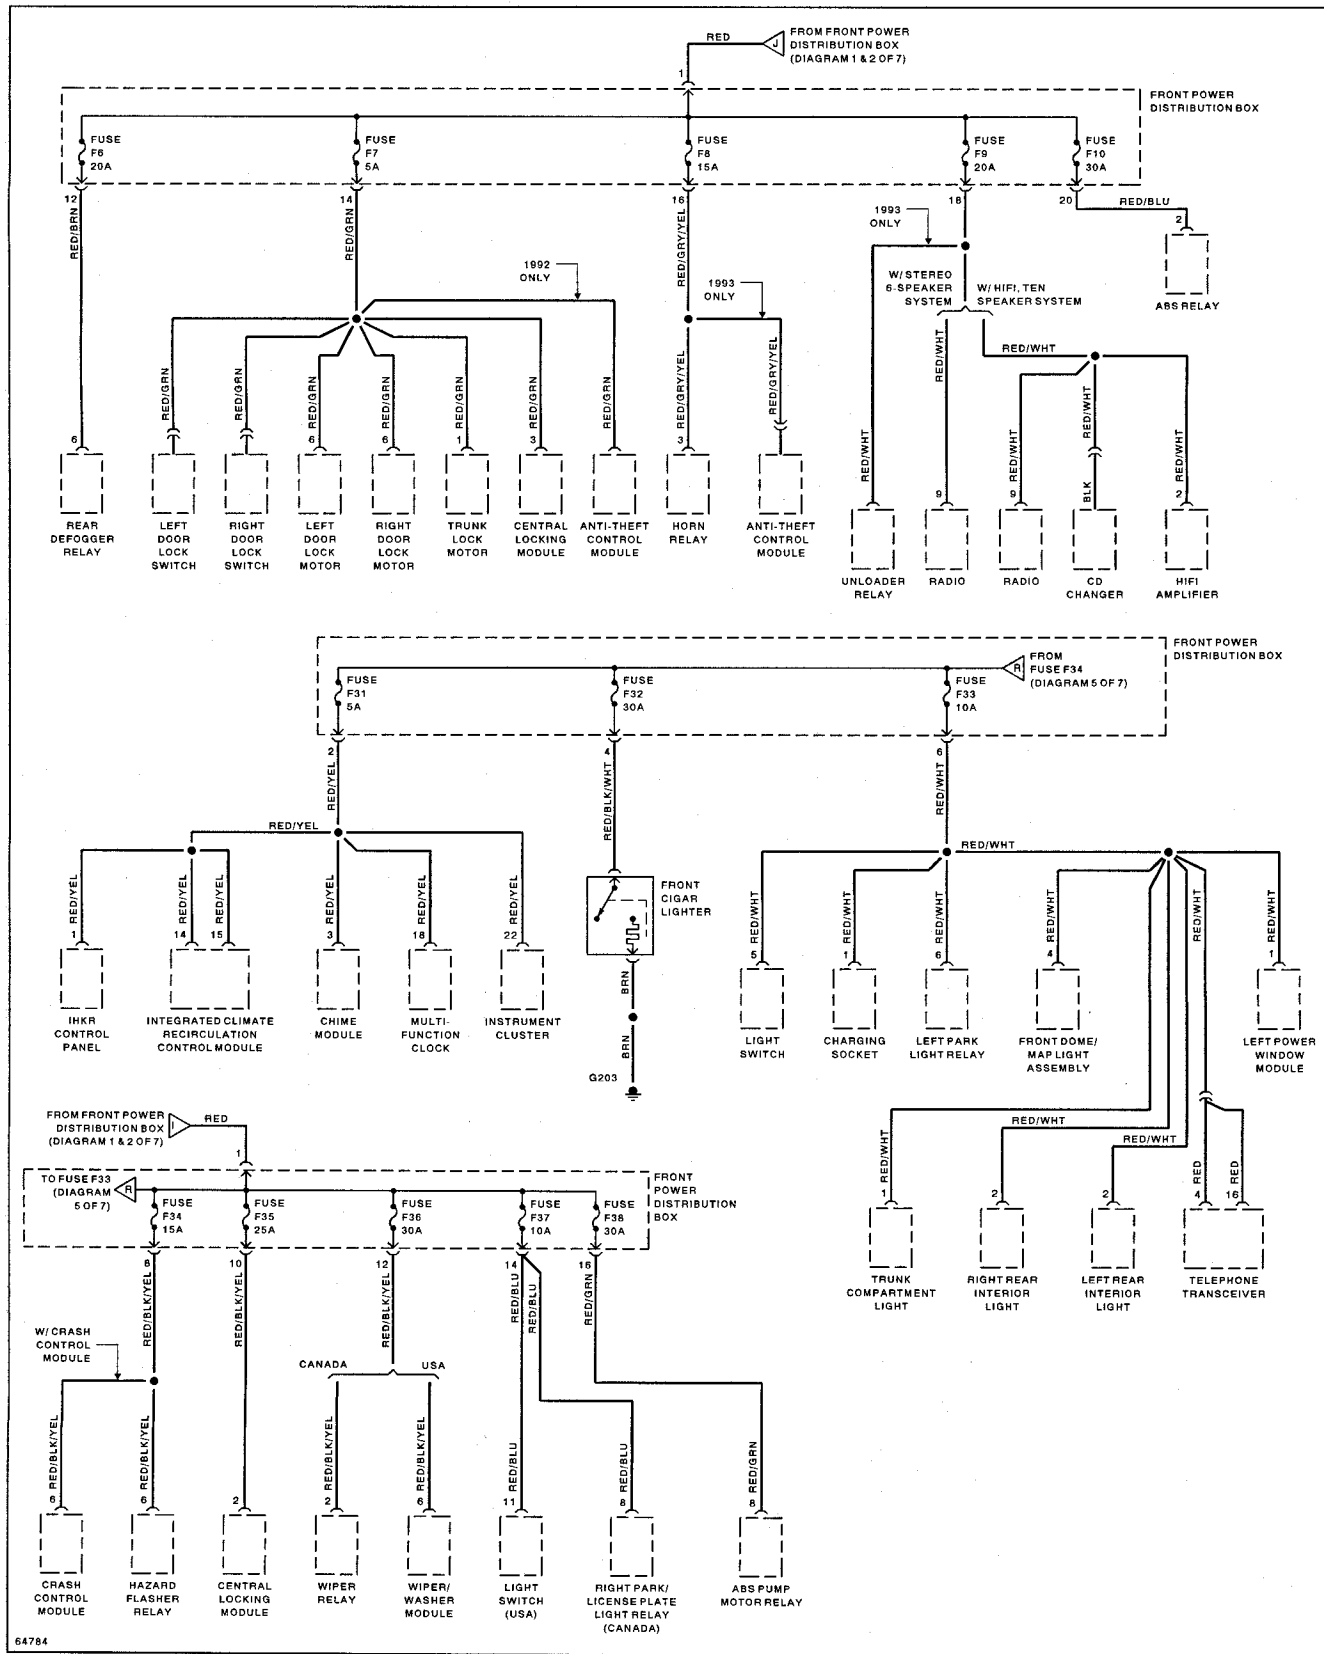

Power Distribution

1992-93 (6 of 7)

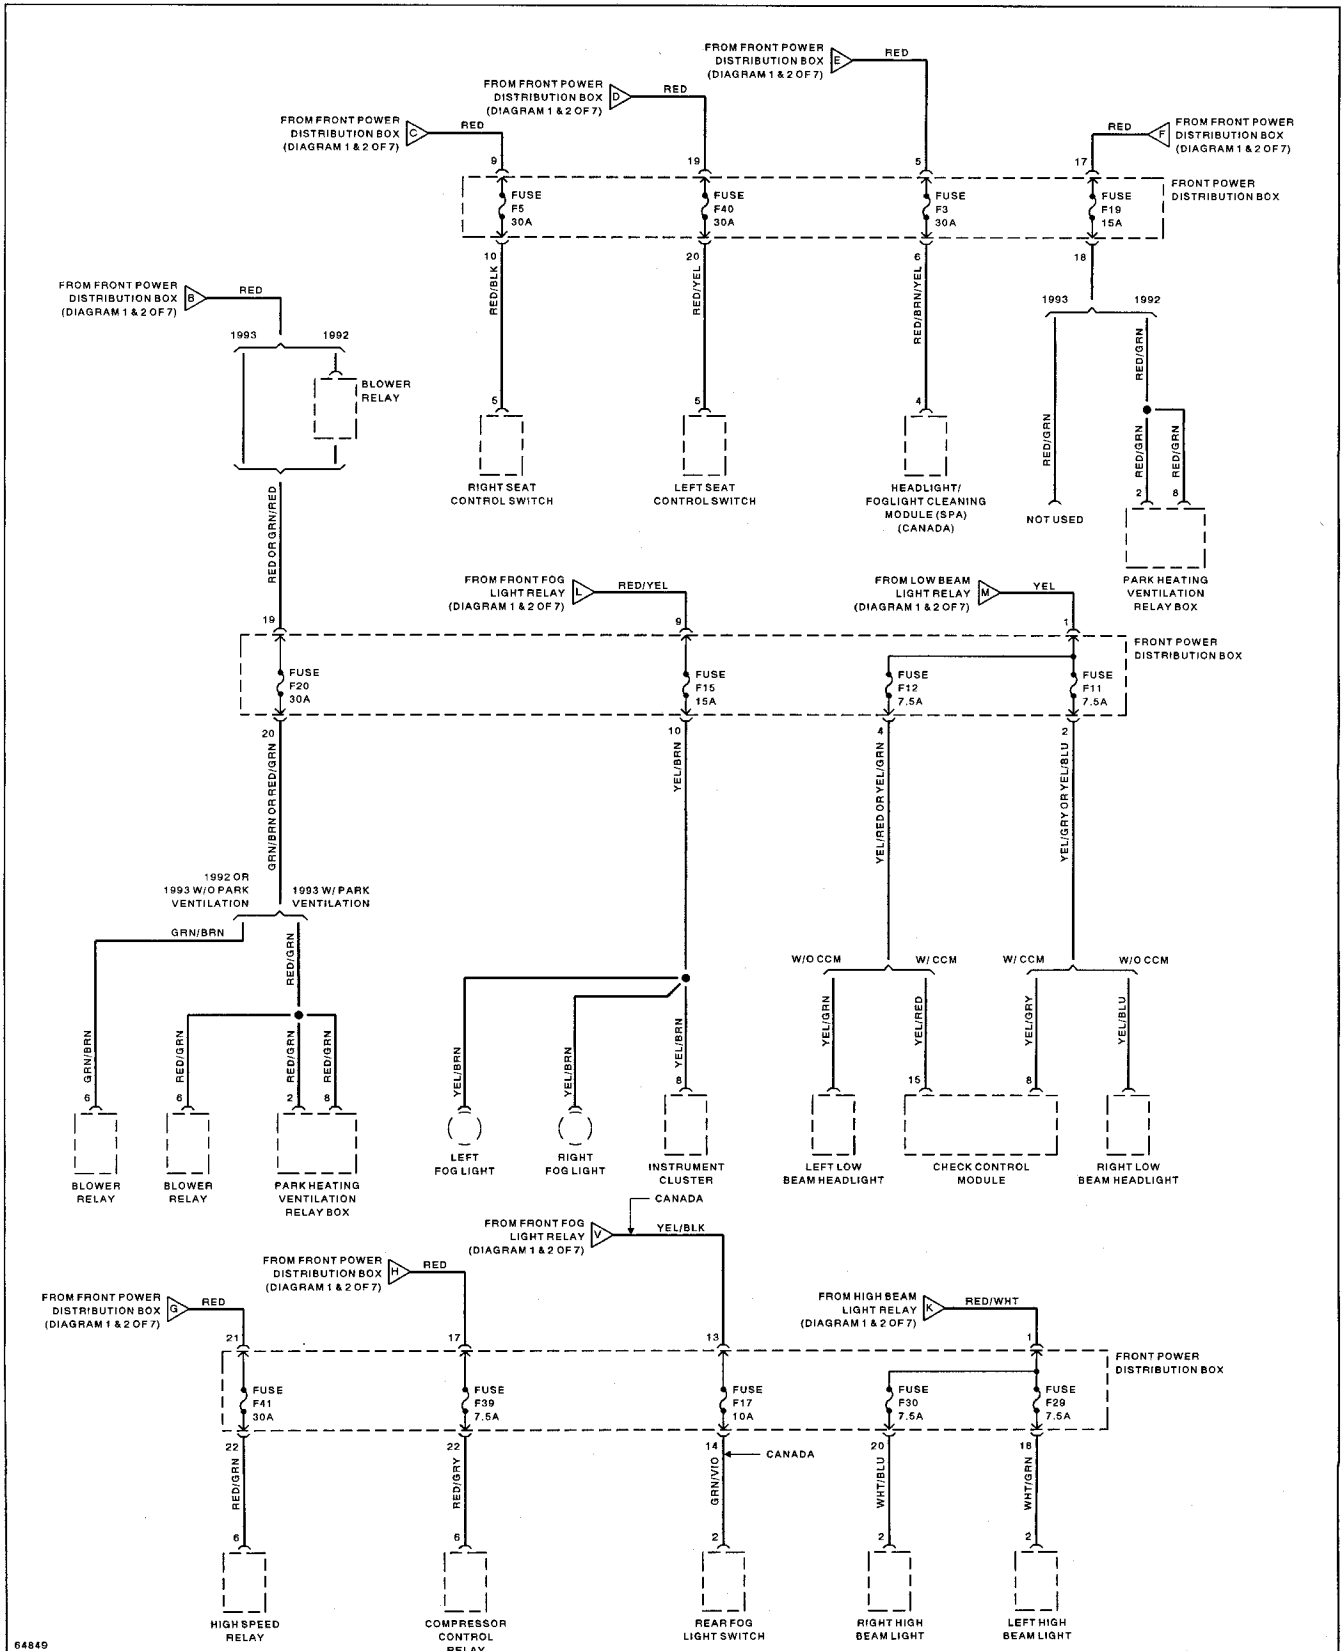


Power Distribution

1992-93 (7 of 7)




Power Distribution

1994-95 Except 318ti (1 of 5)

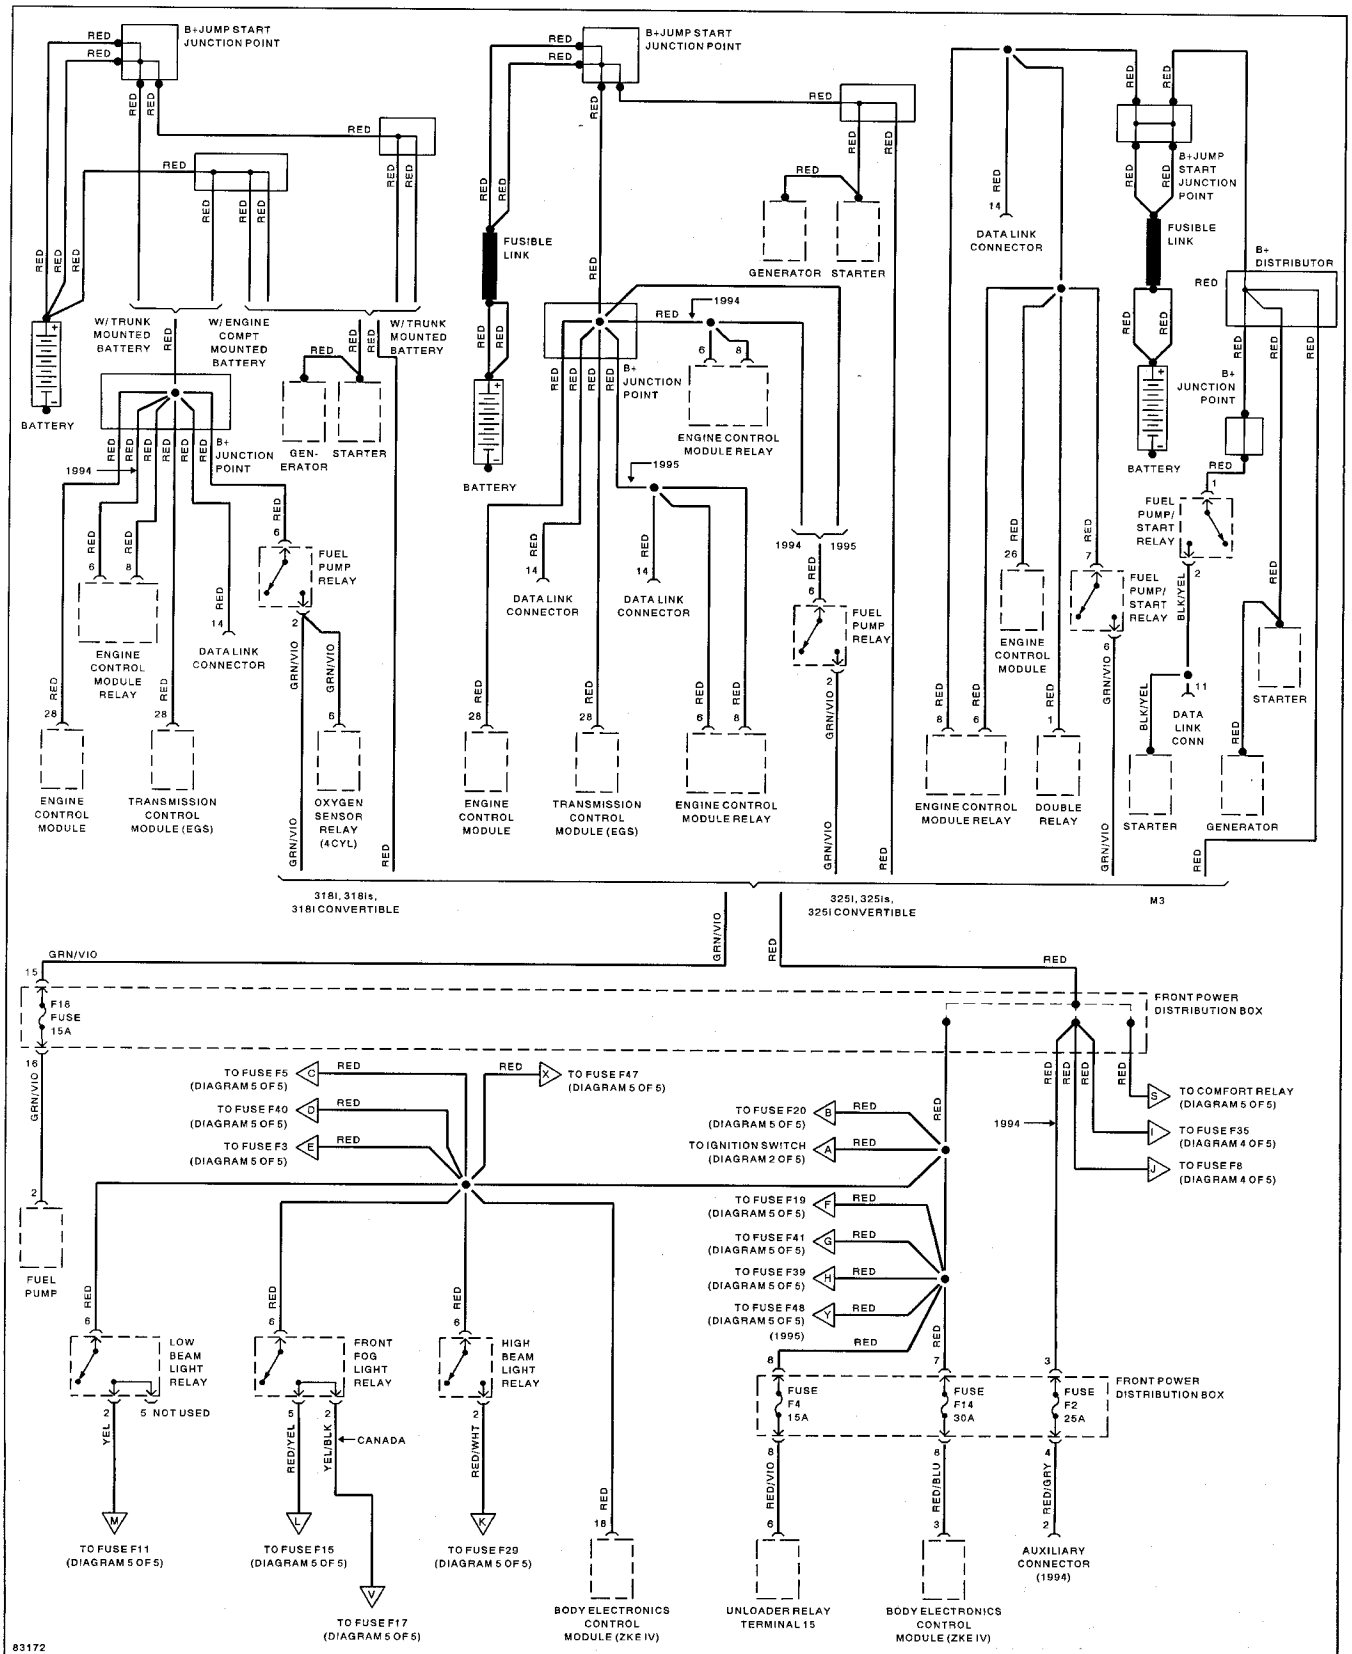


Power Distribution

1994-95 Except 318ti (2 of 5)

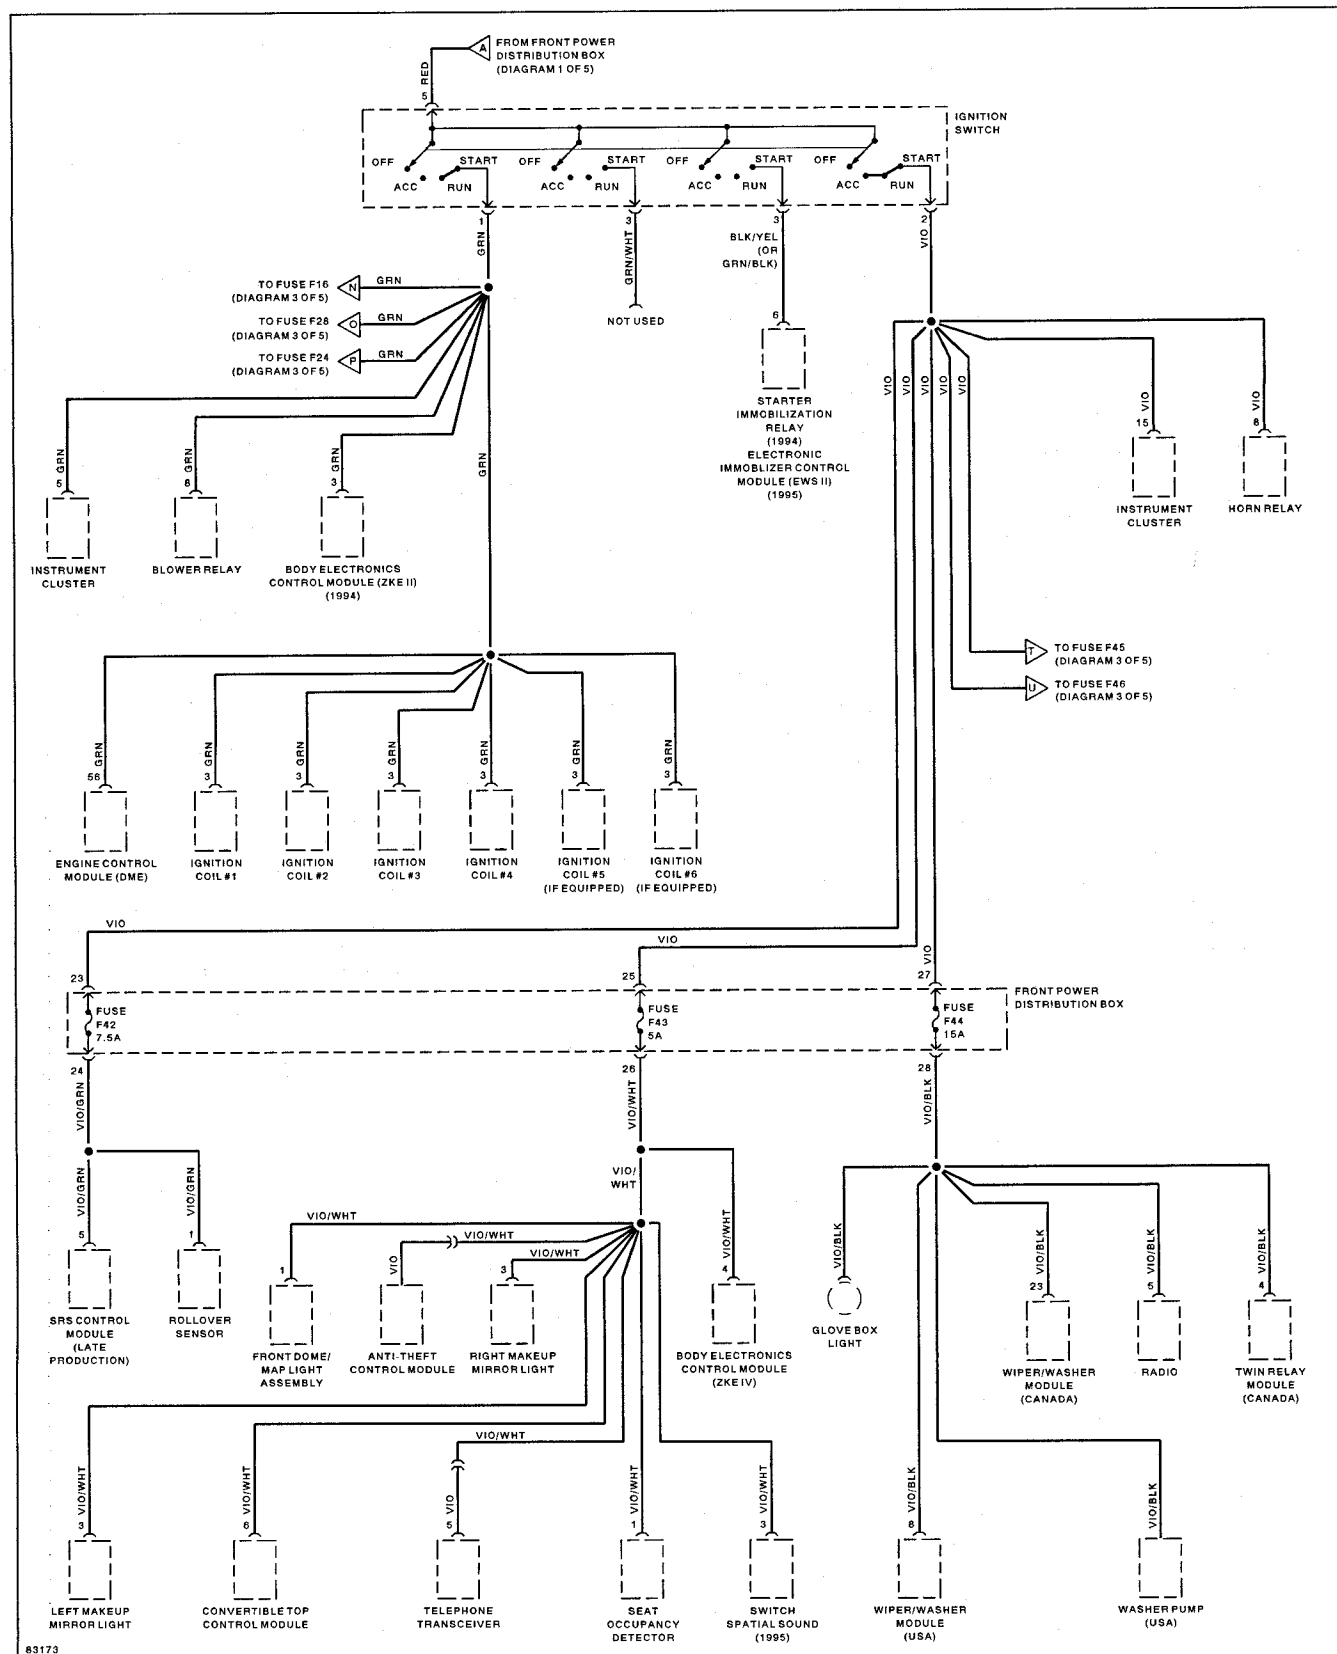


Power Distribution

1994-95 Except 318ti (3 of 5)

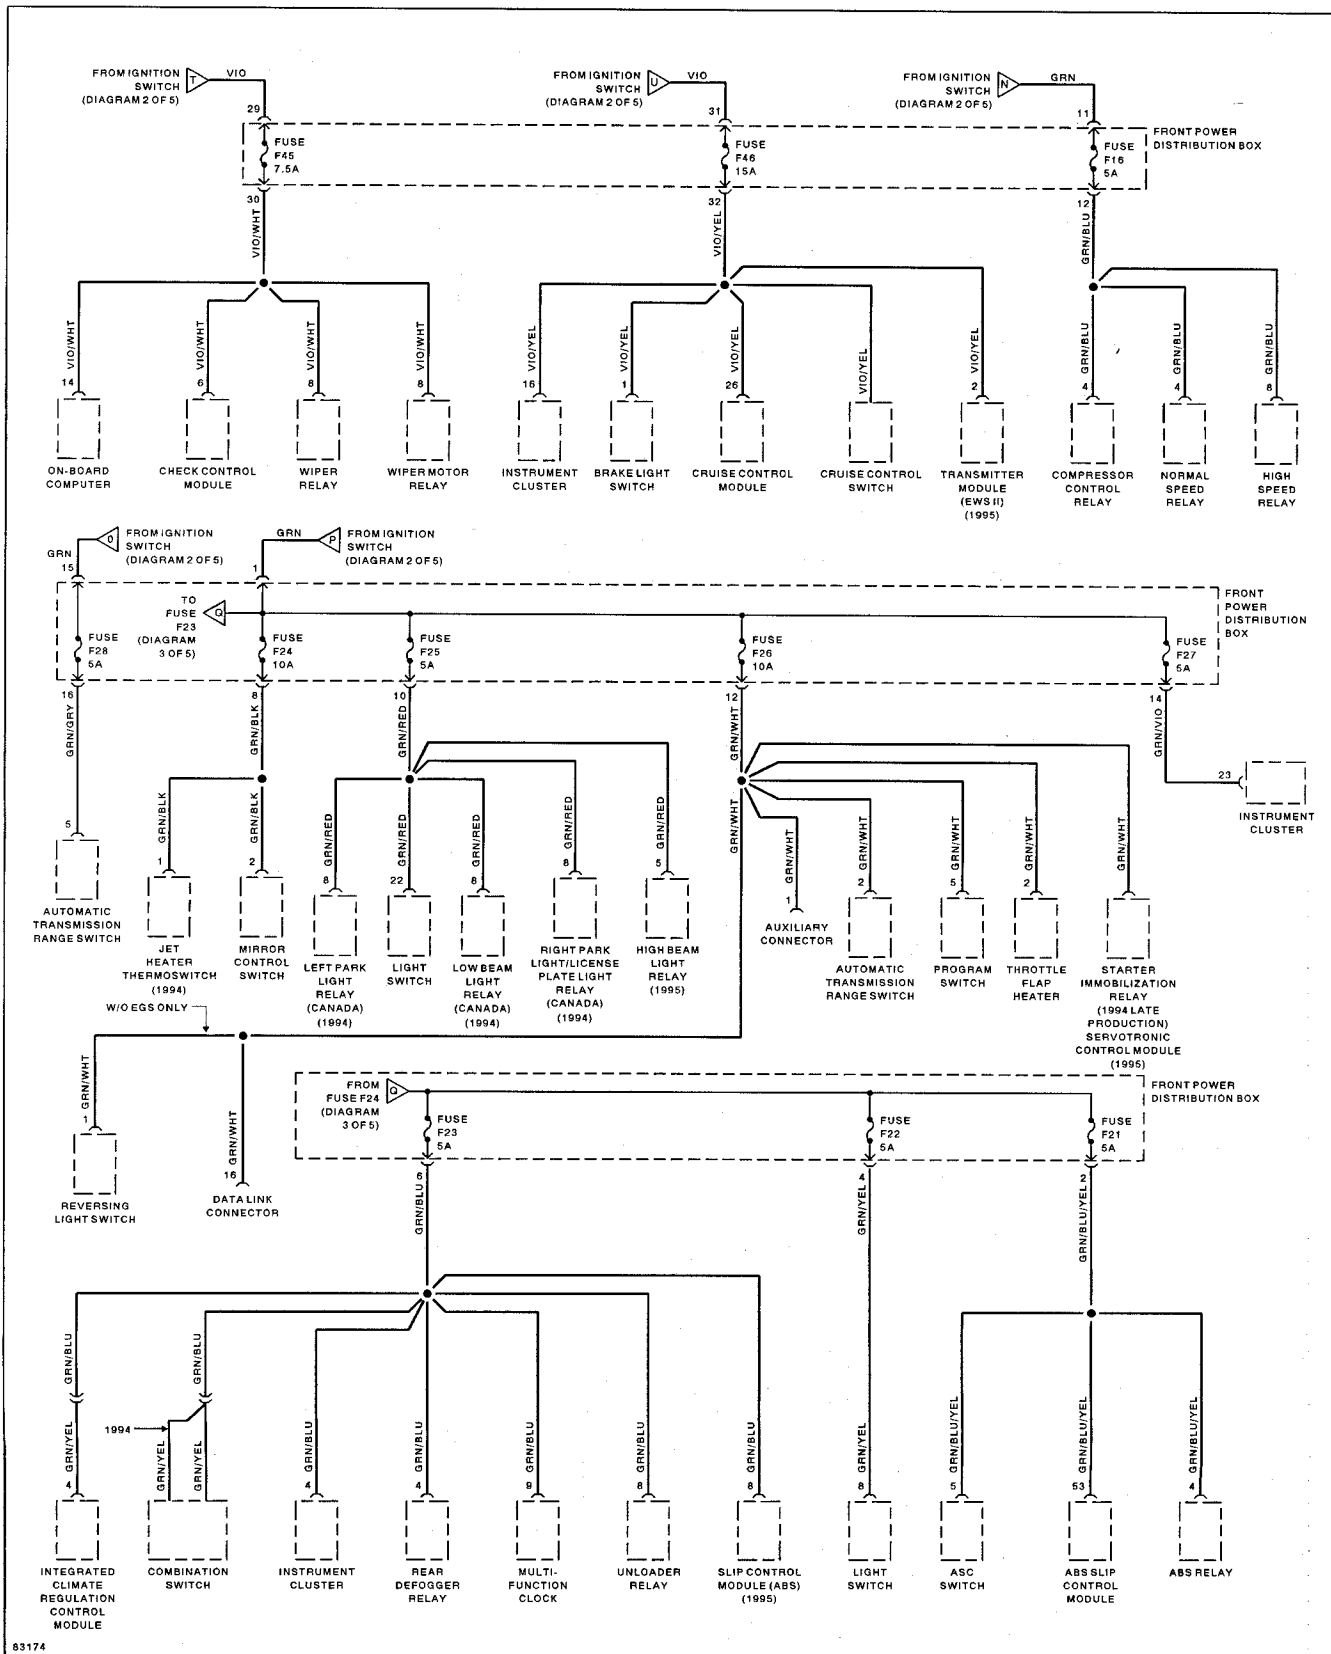


Power Distribution

1994-95 Except 318ti (4 of 5)

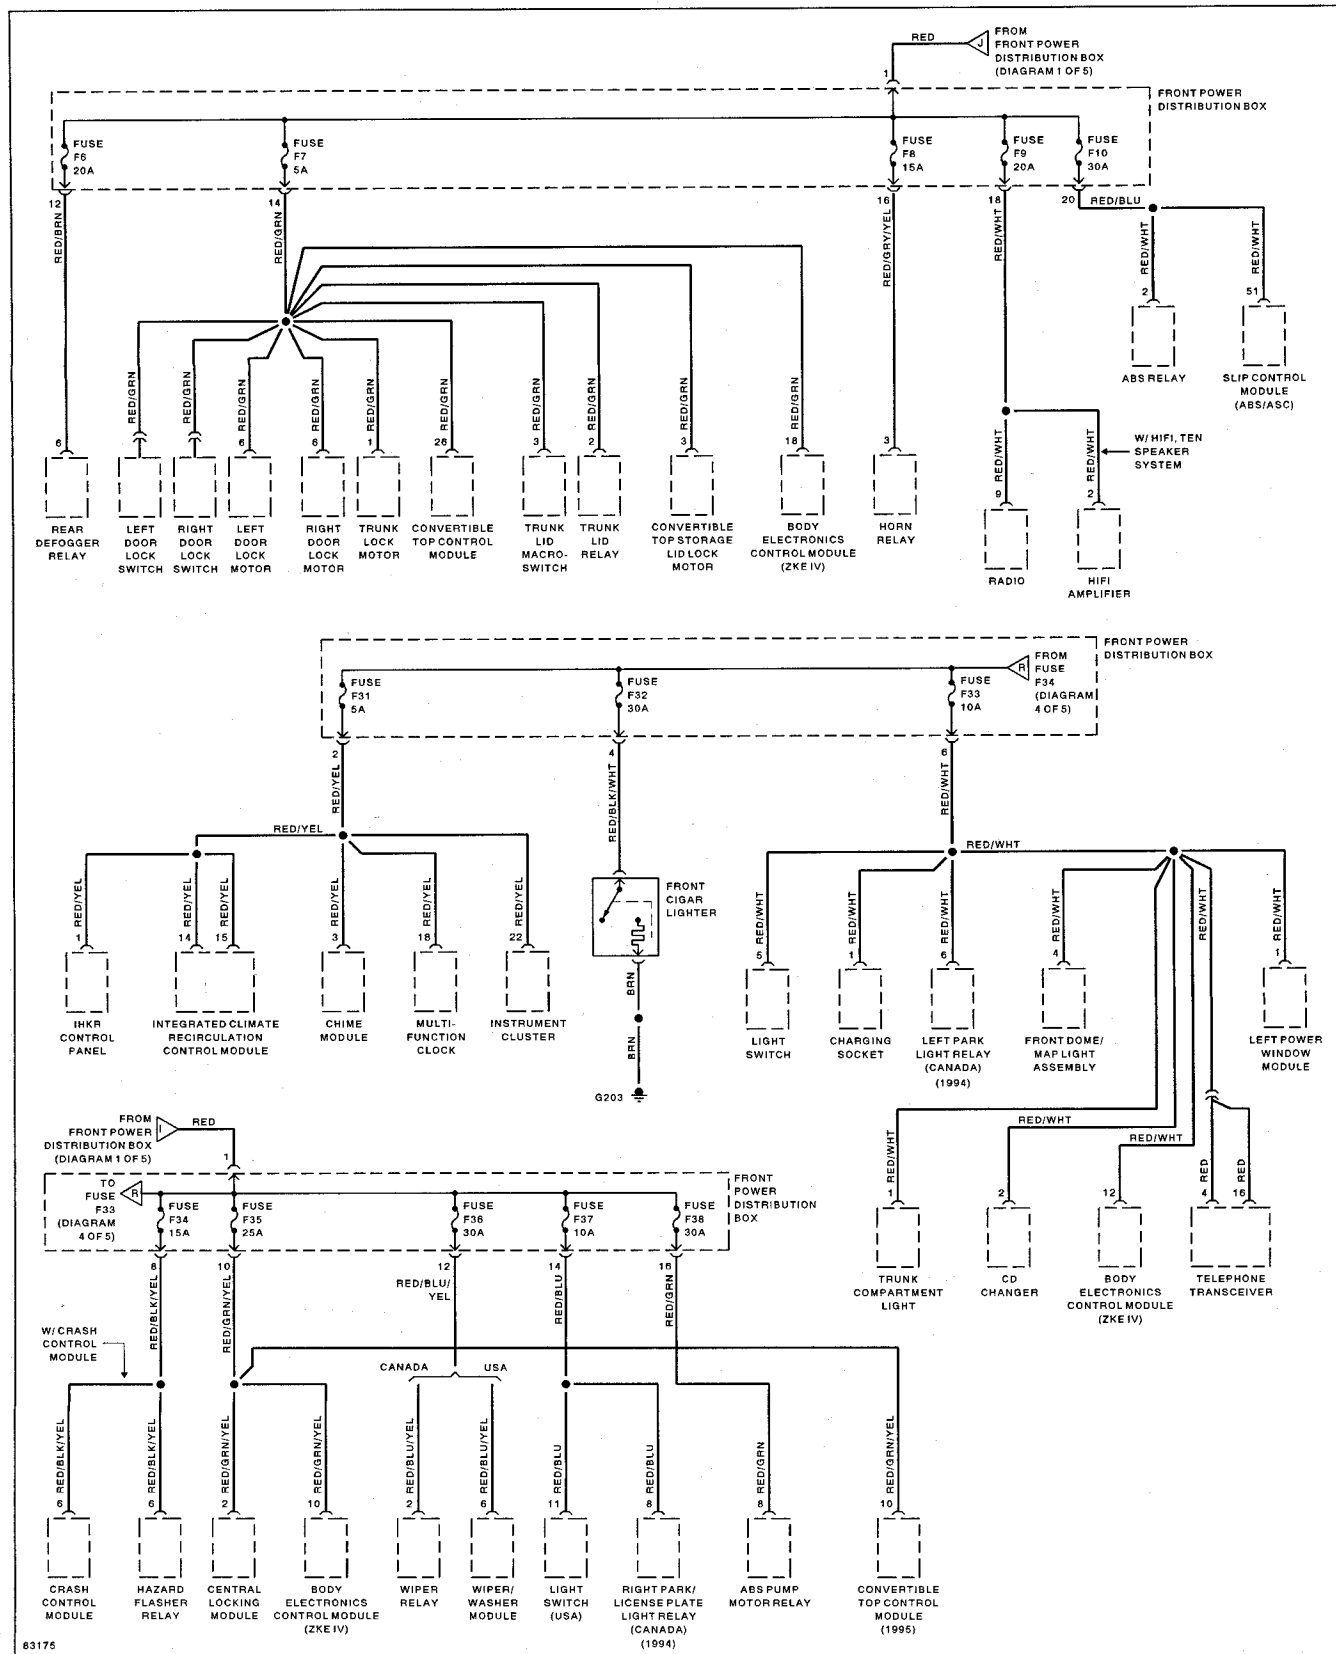

Power Distribution


1994-95 Except 318ti (5 of 5)

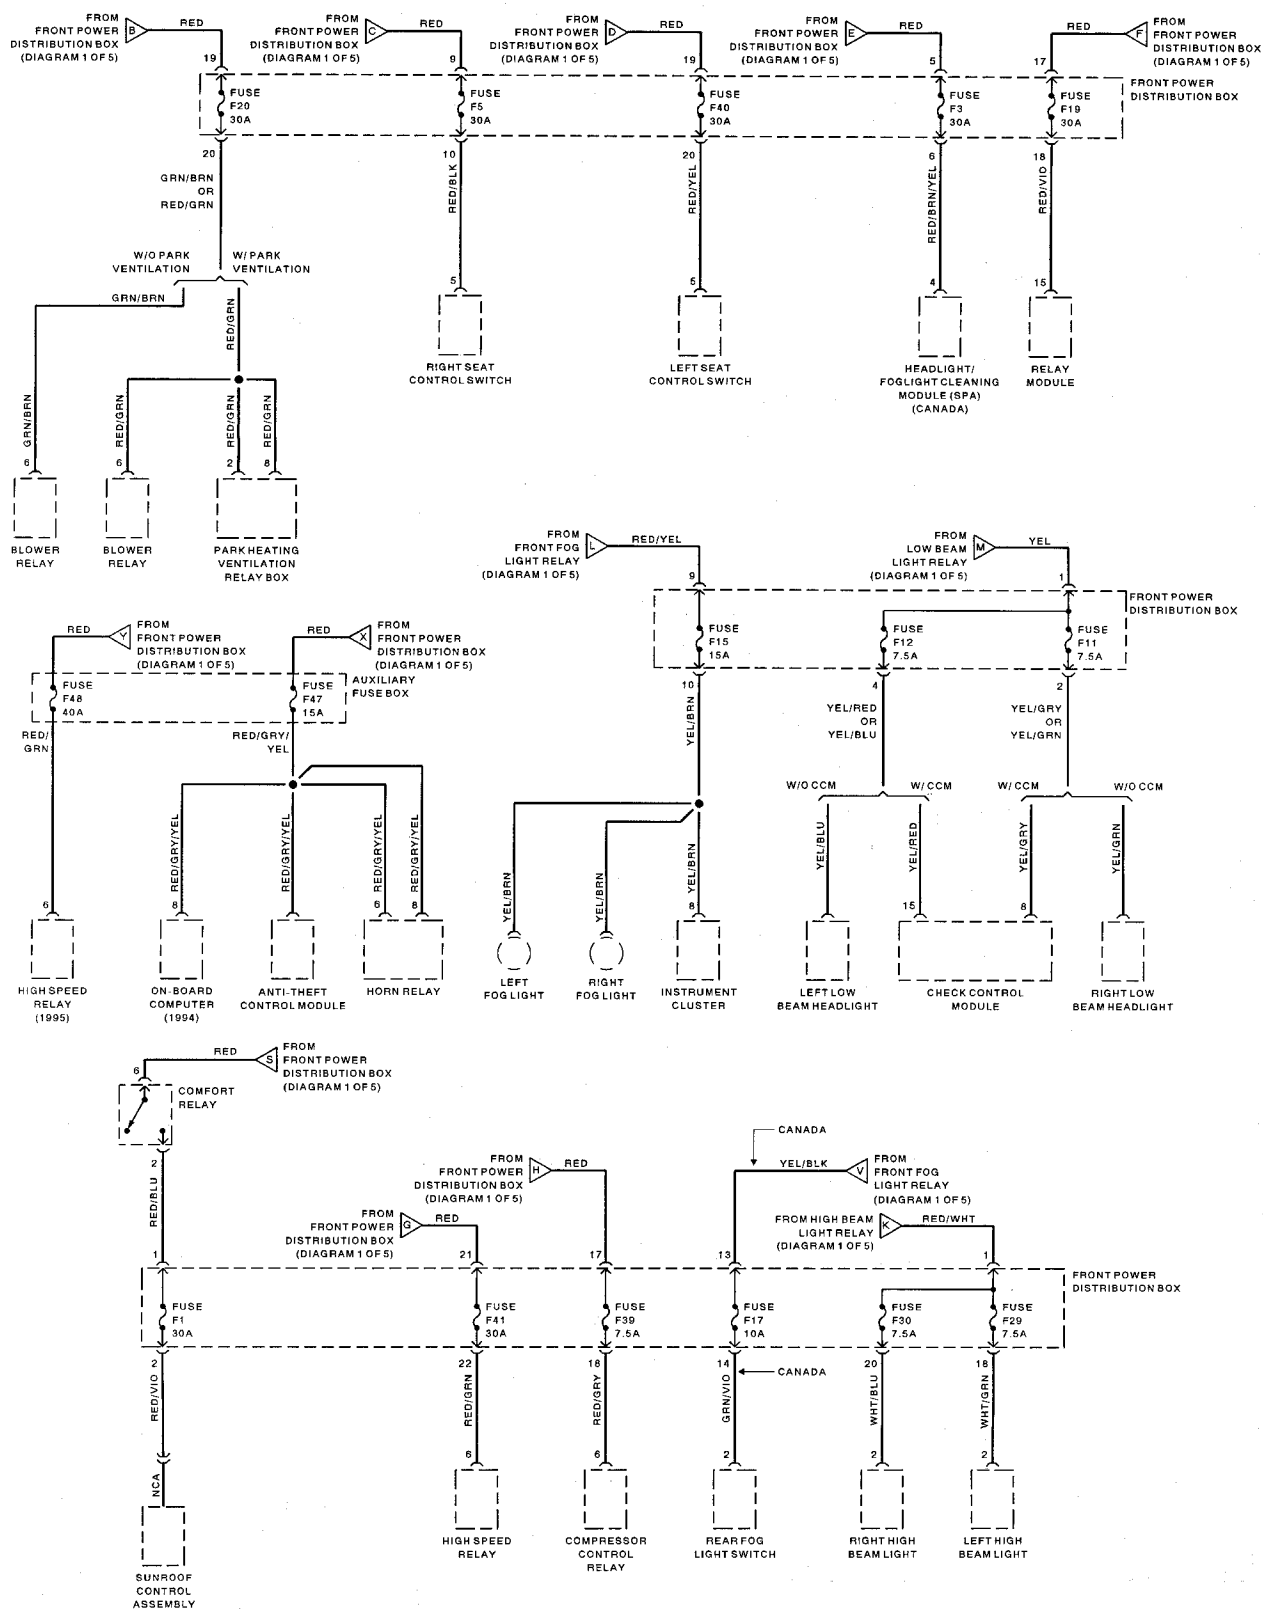

1996 M3 & 328i, 328is, 328i CONVERTIBLE		1997 M3 & 328i, 328is, 328i CONVERTIBLE	1996 & 1997 318i, 318is, 318i CONVERTIBLE
TO FRONT DISTRIBUTION BOX (DIAGRAM 2 OF 5)			


Power Distribution

1996-97 Except 318ti (2 of 5)

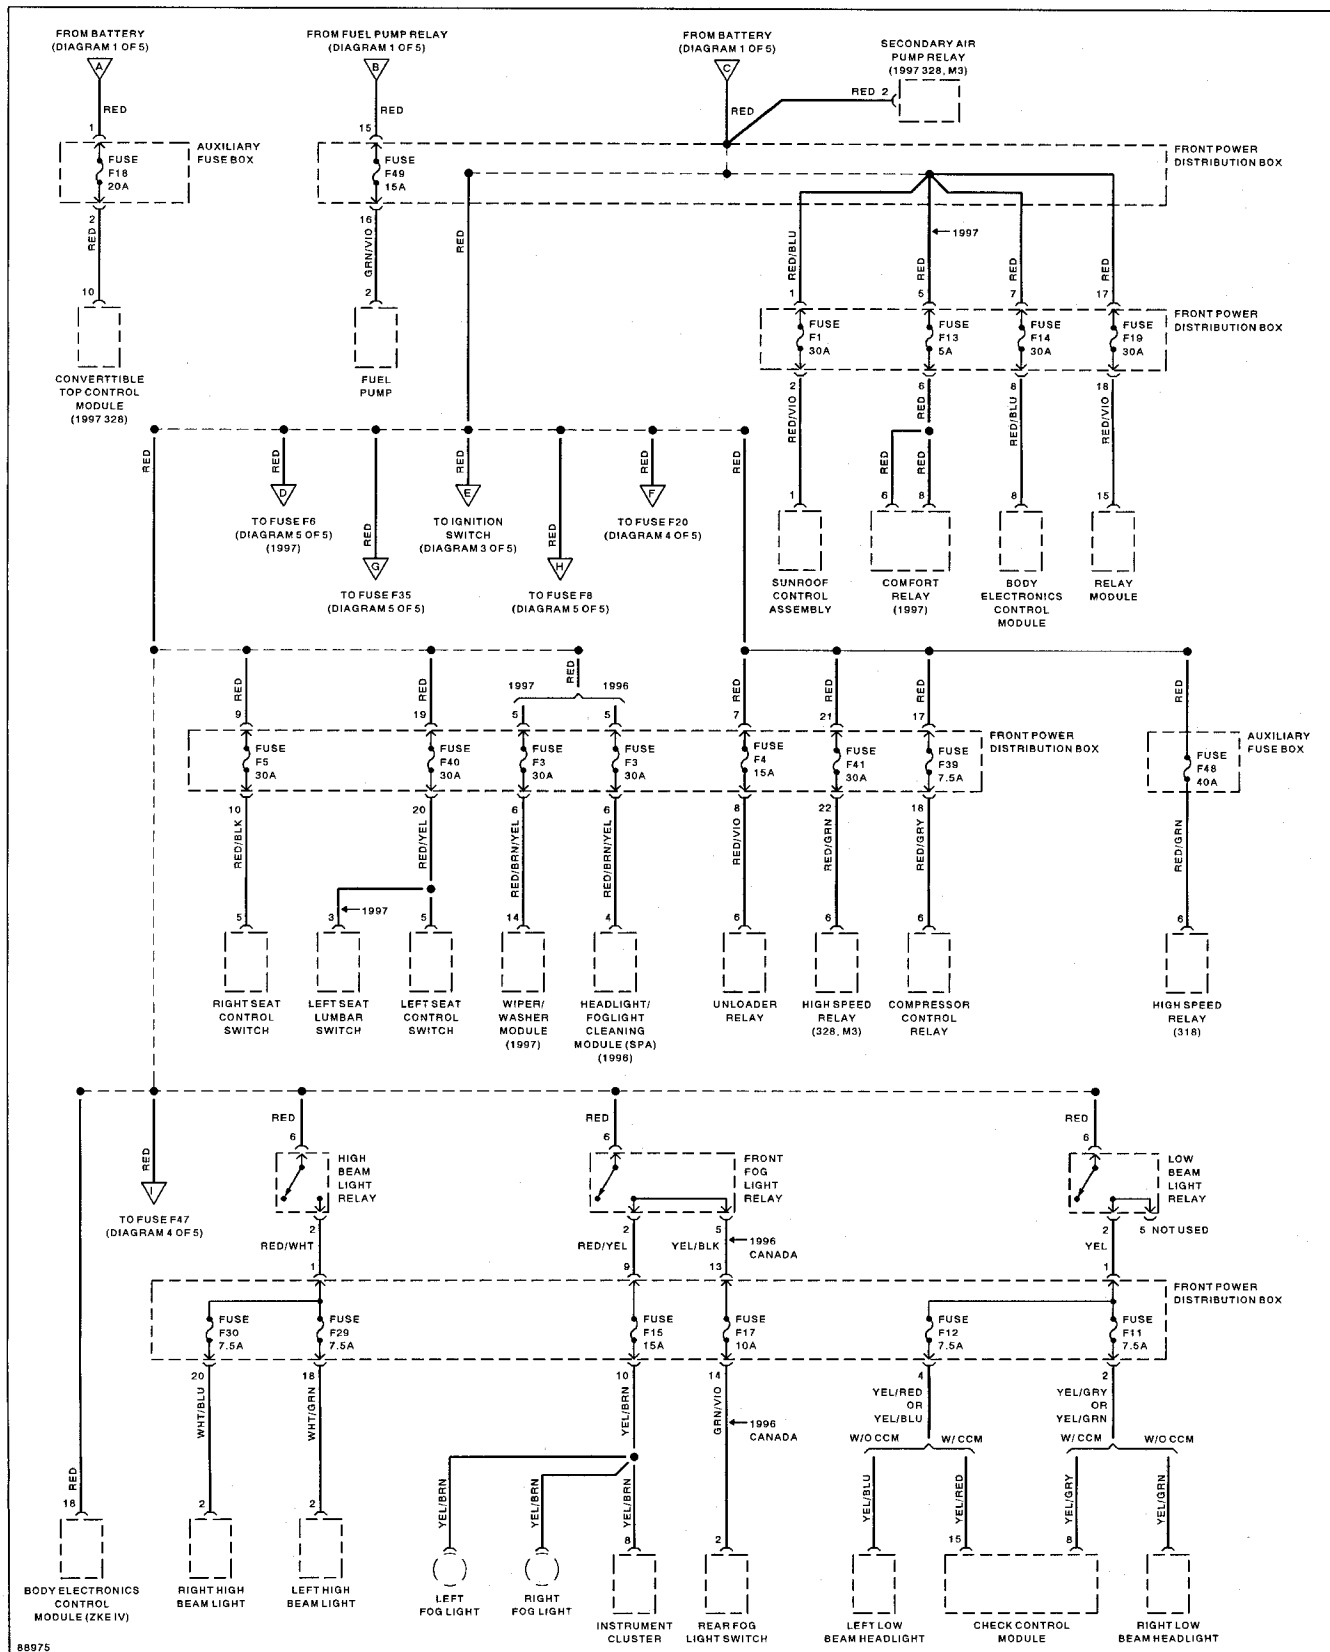


Power Distribution

1996-97 Except 318ti (3 of 5)

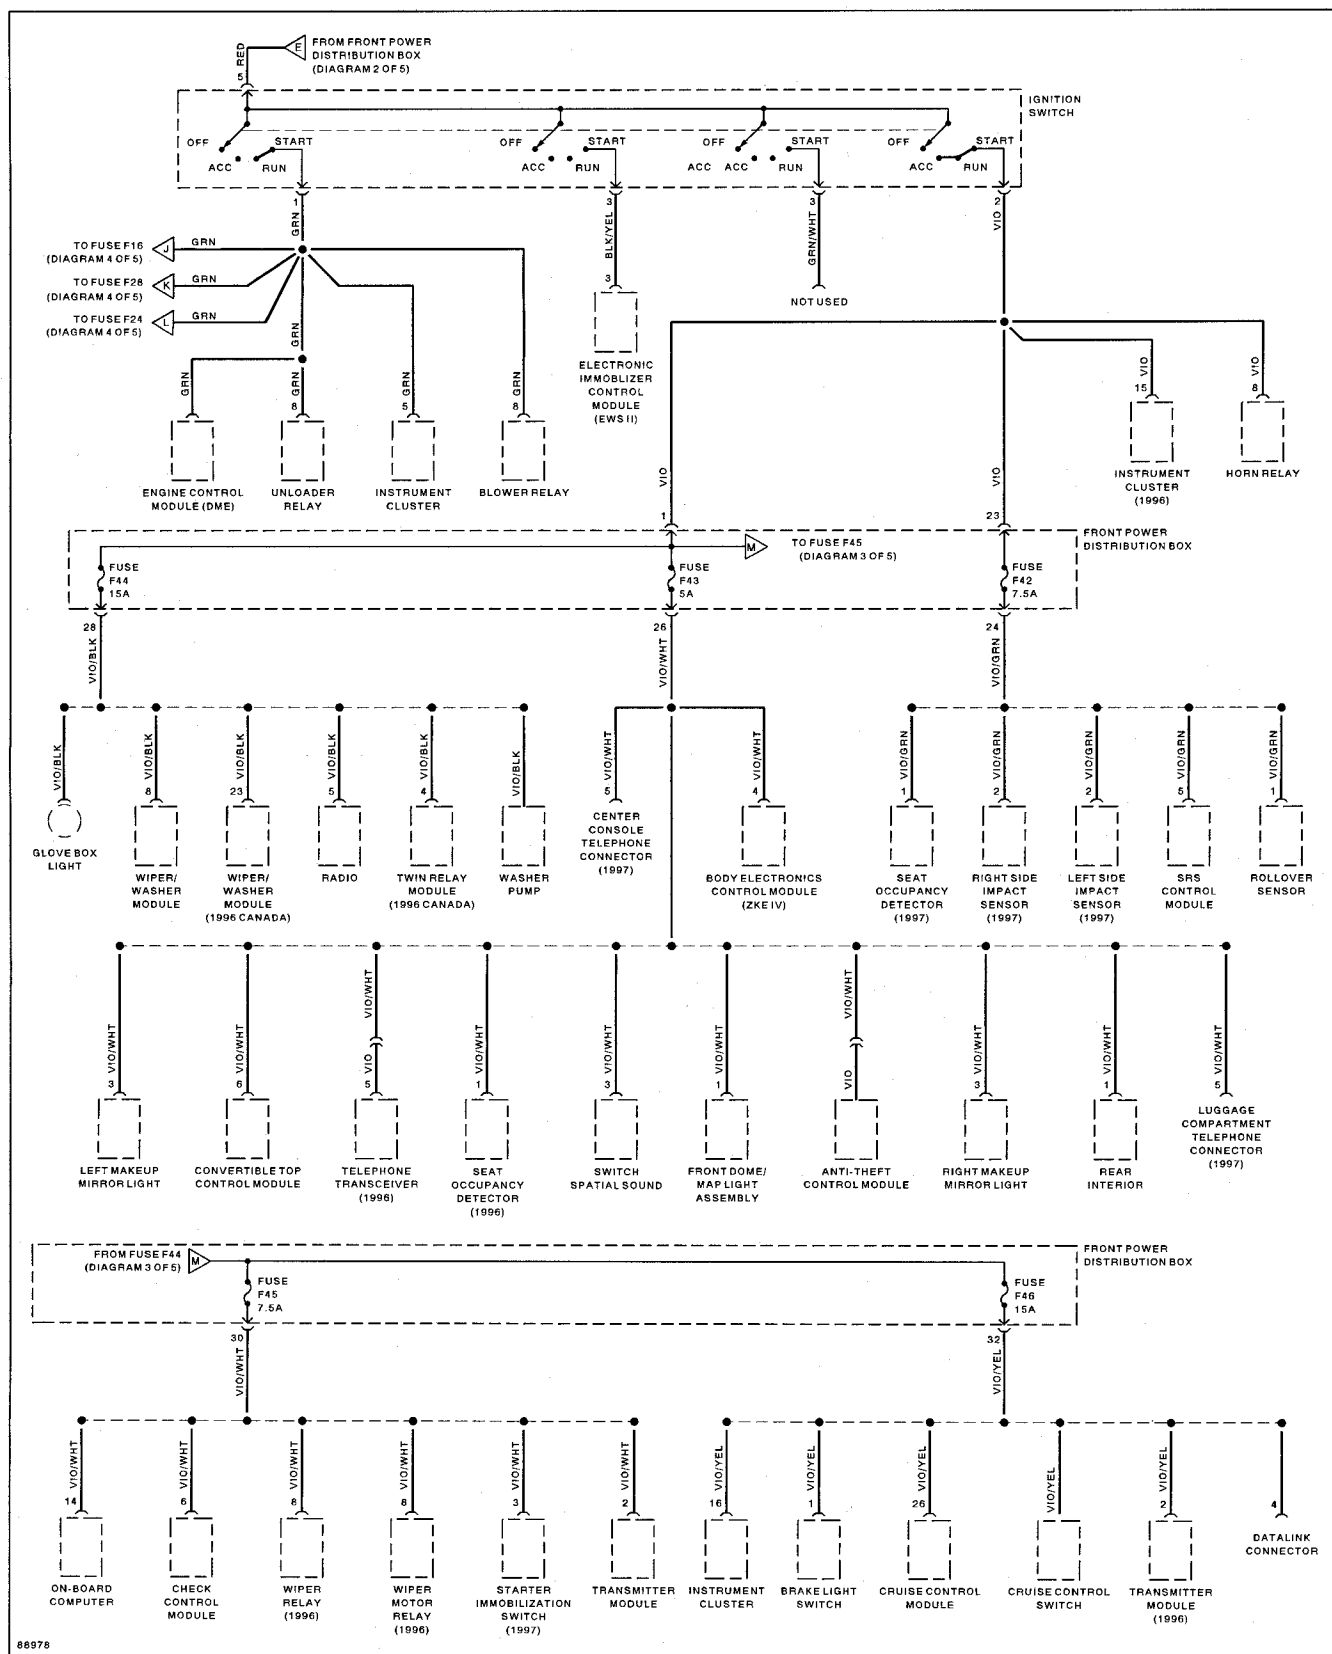


Power Distribution

1996-97 Except 318ti (4 of 5)

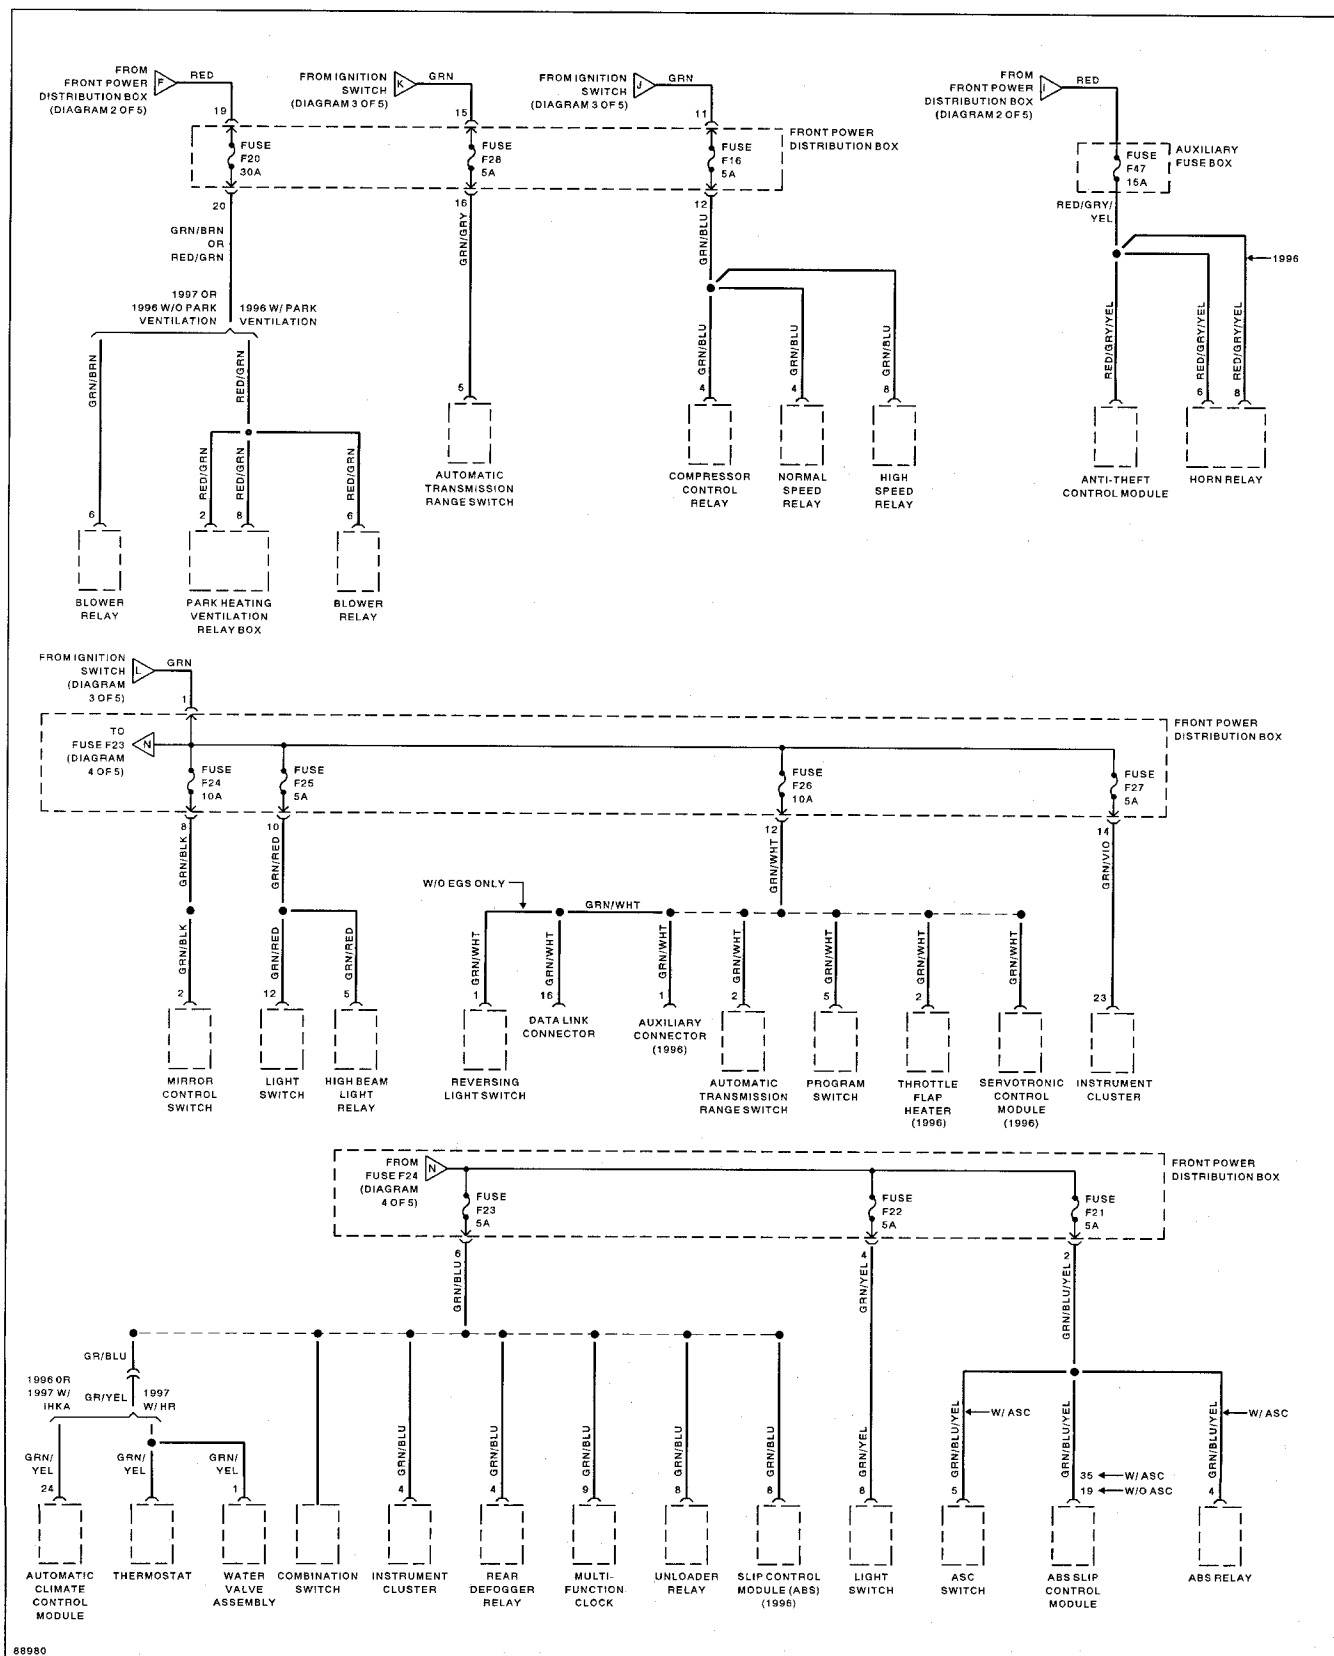


Power Distribution

1996-97 Except 318ti (5 of 5)

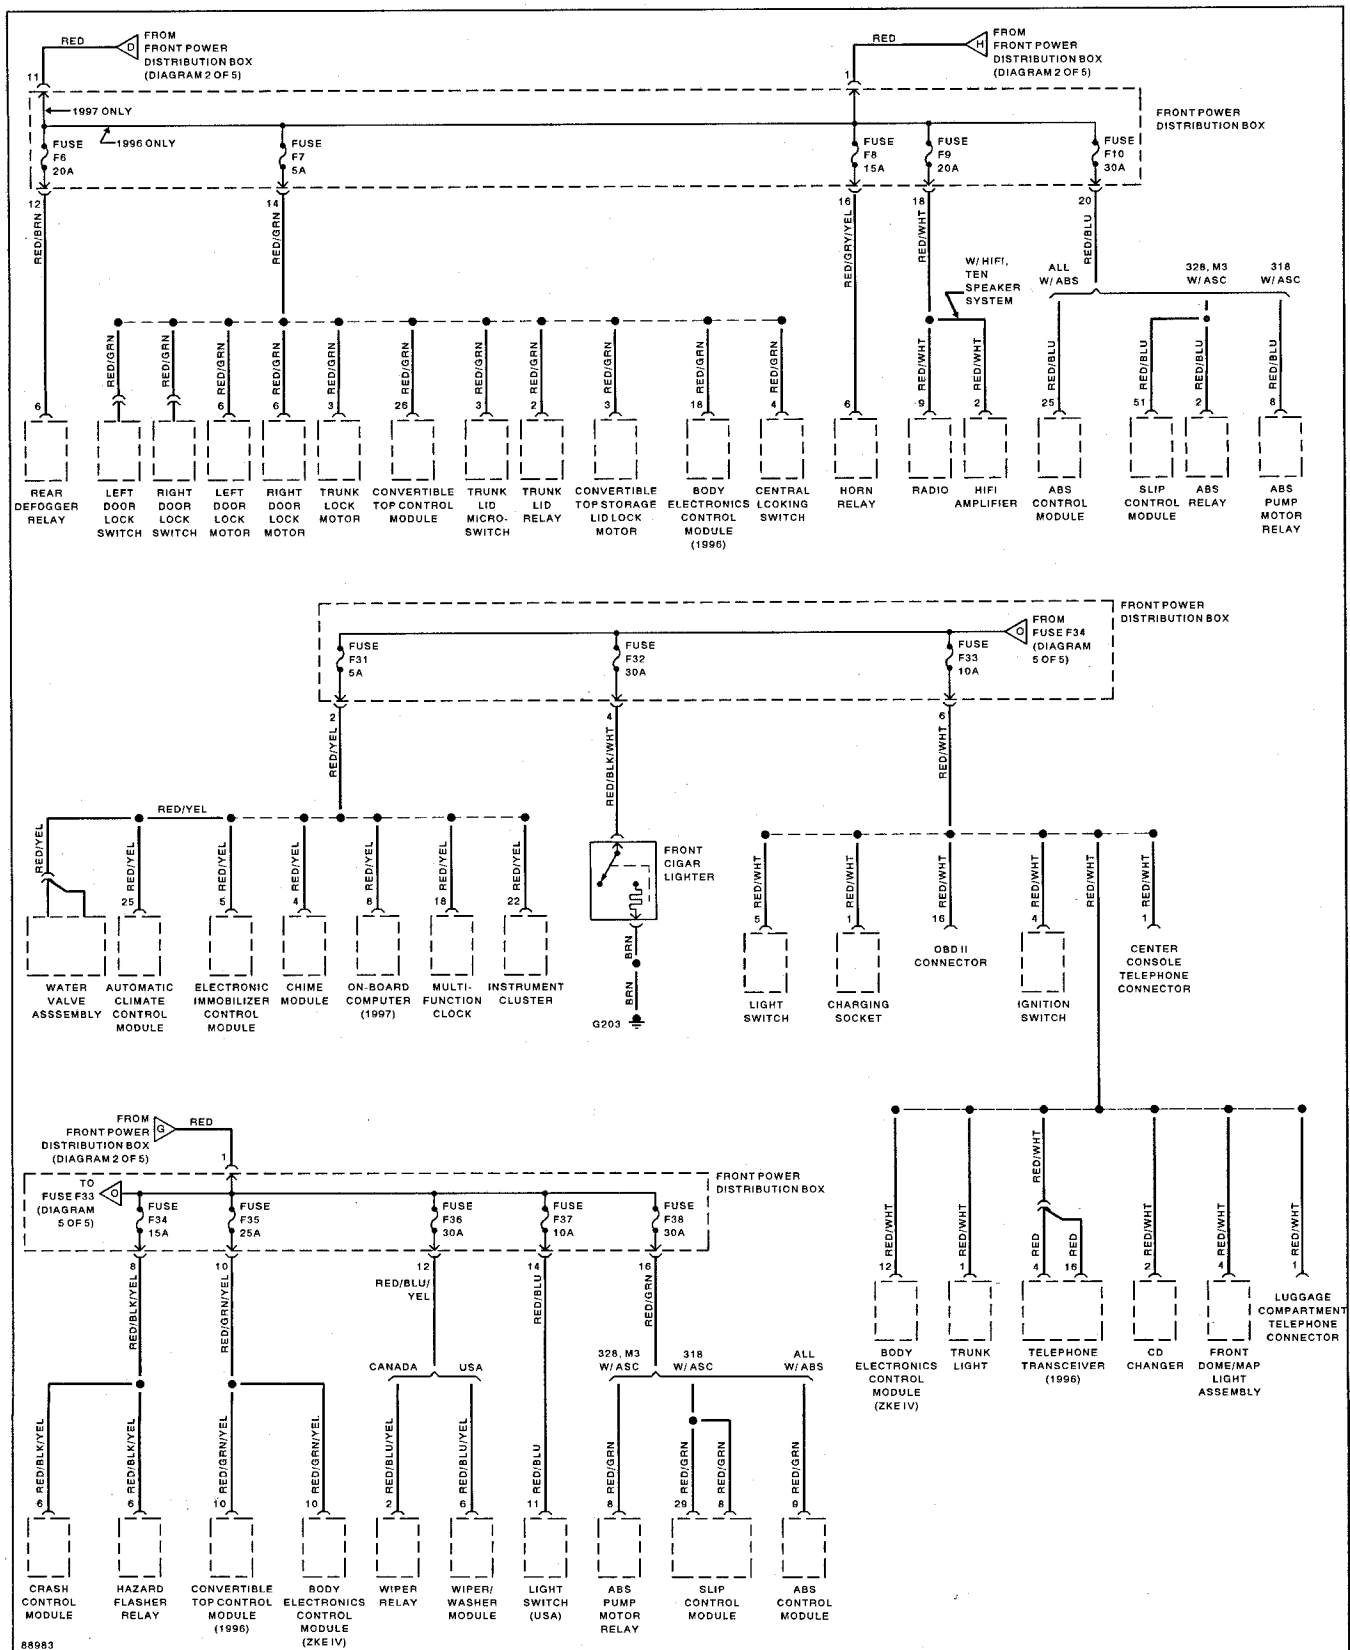


Power Distribution

1998 Except 318ti (1 of 5)

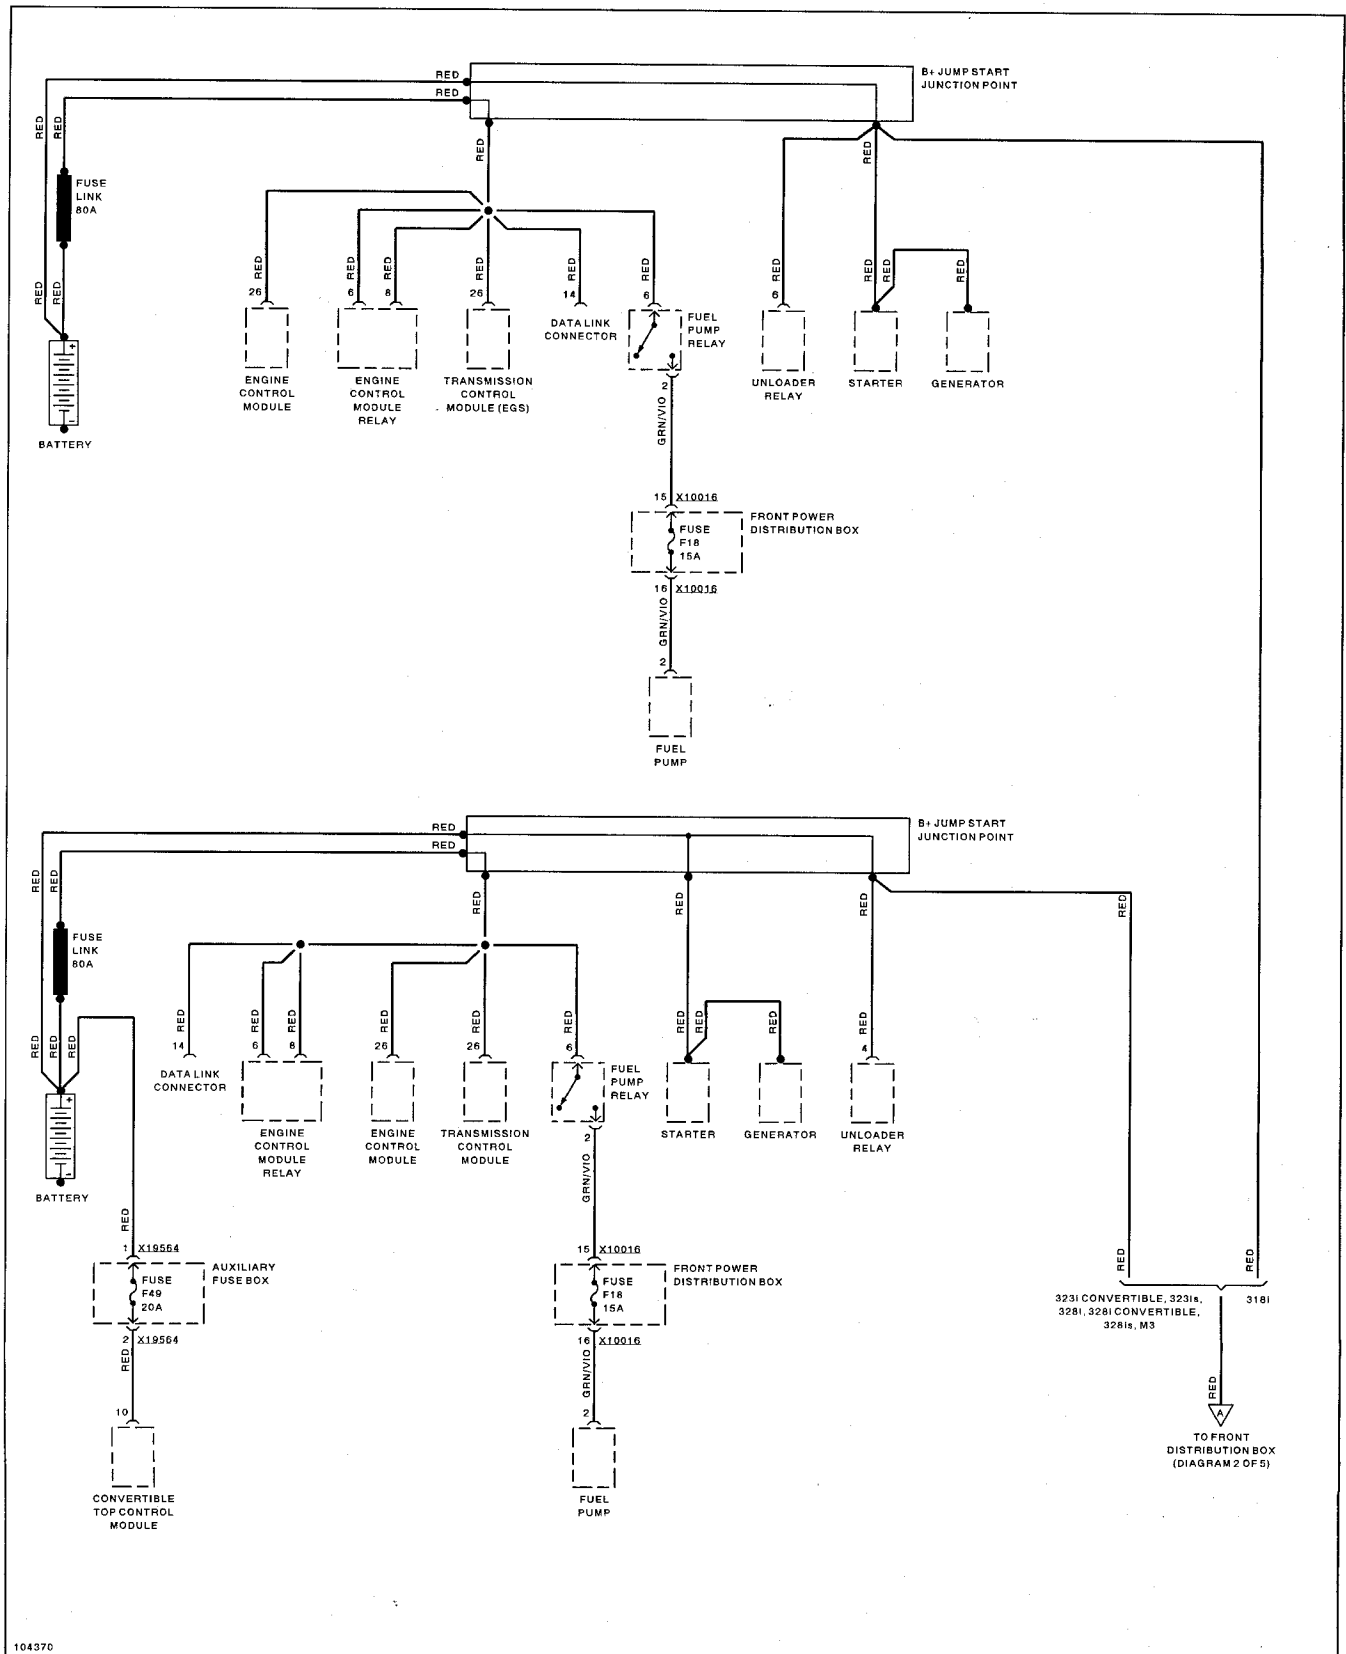

Power Distribution

1998 Except 318ti (2 of 5)

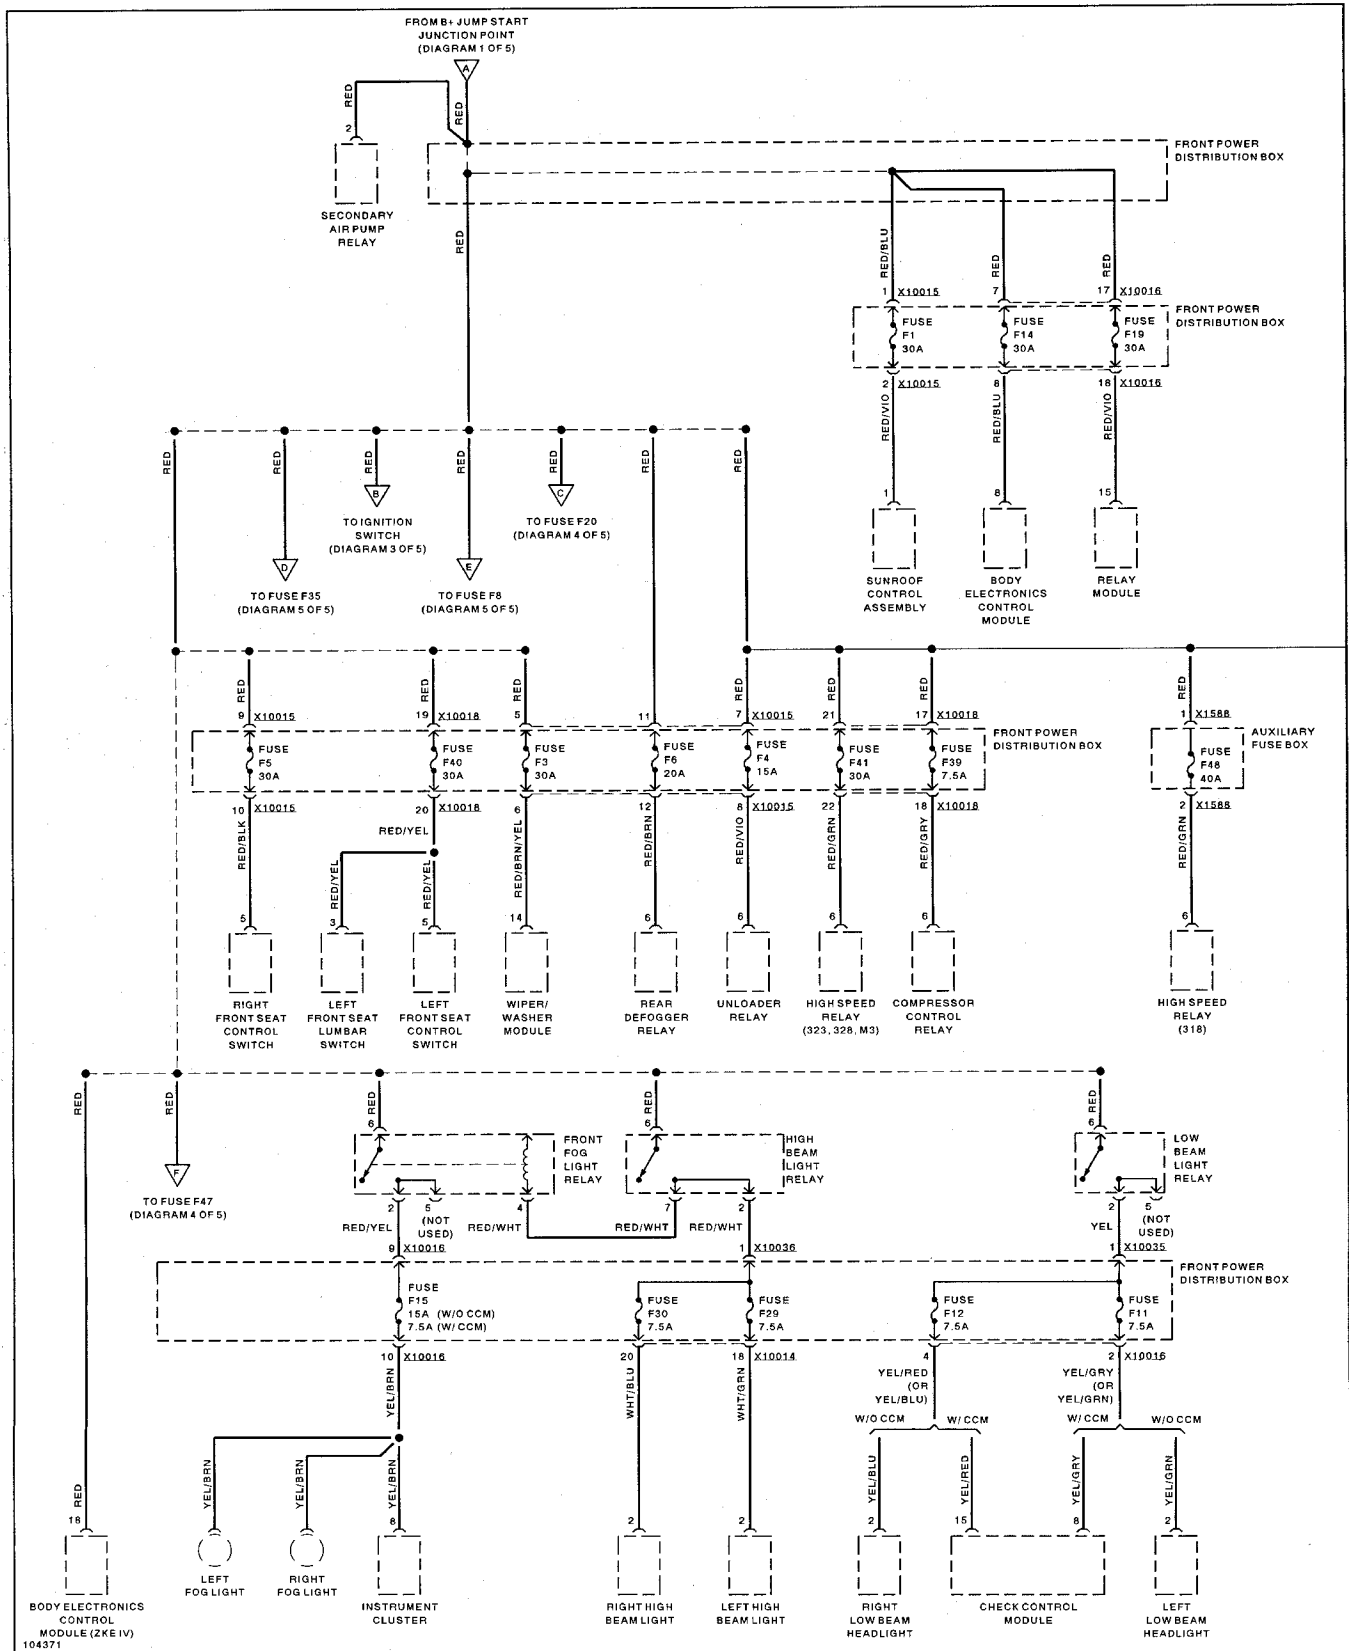


Power Distribution

1998 Except 318ti (3 of 5)



Power Distribution

1998 Except 318ti (4 of 5)

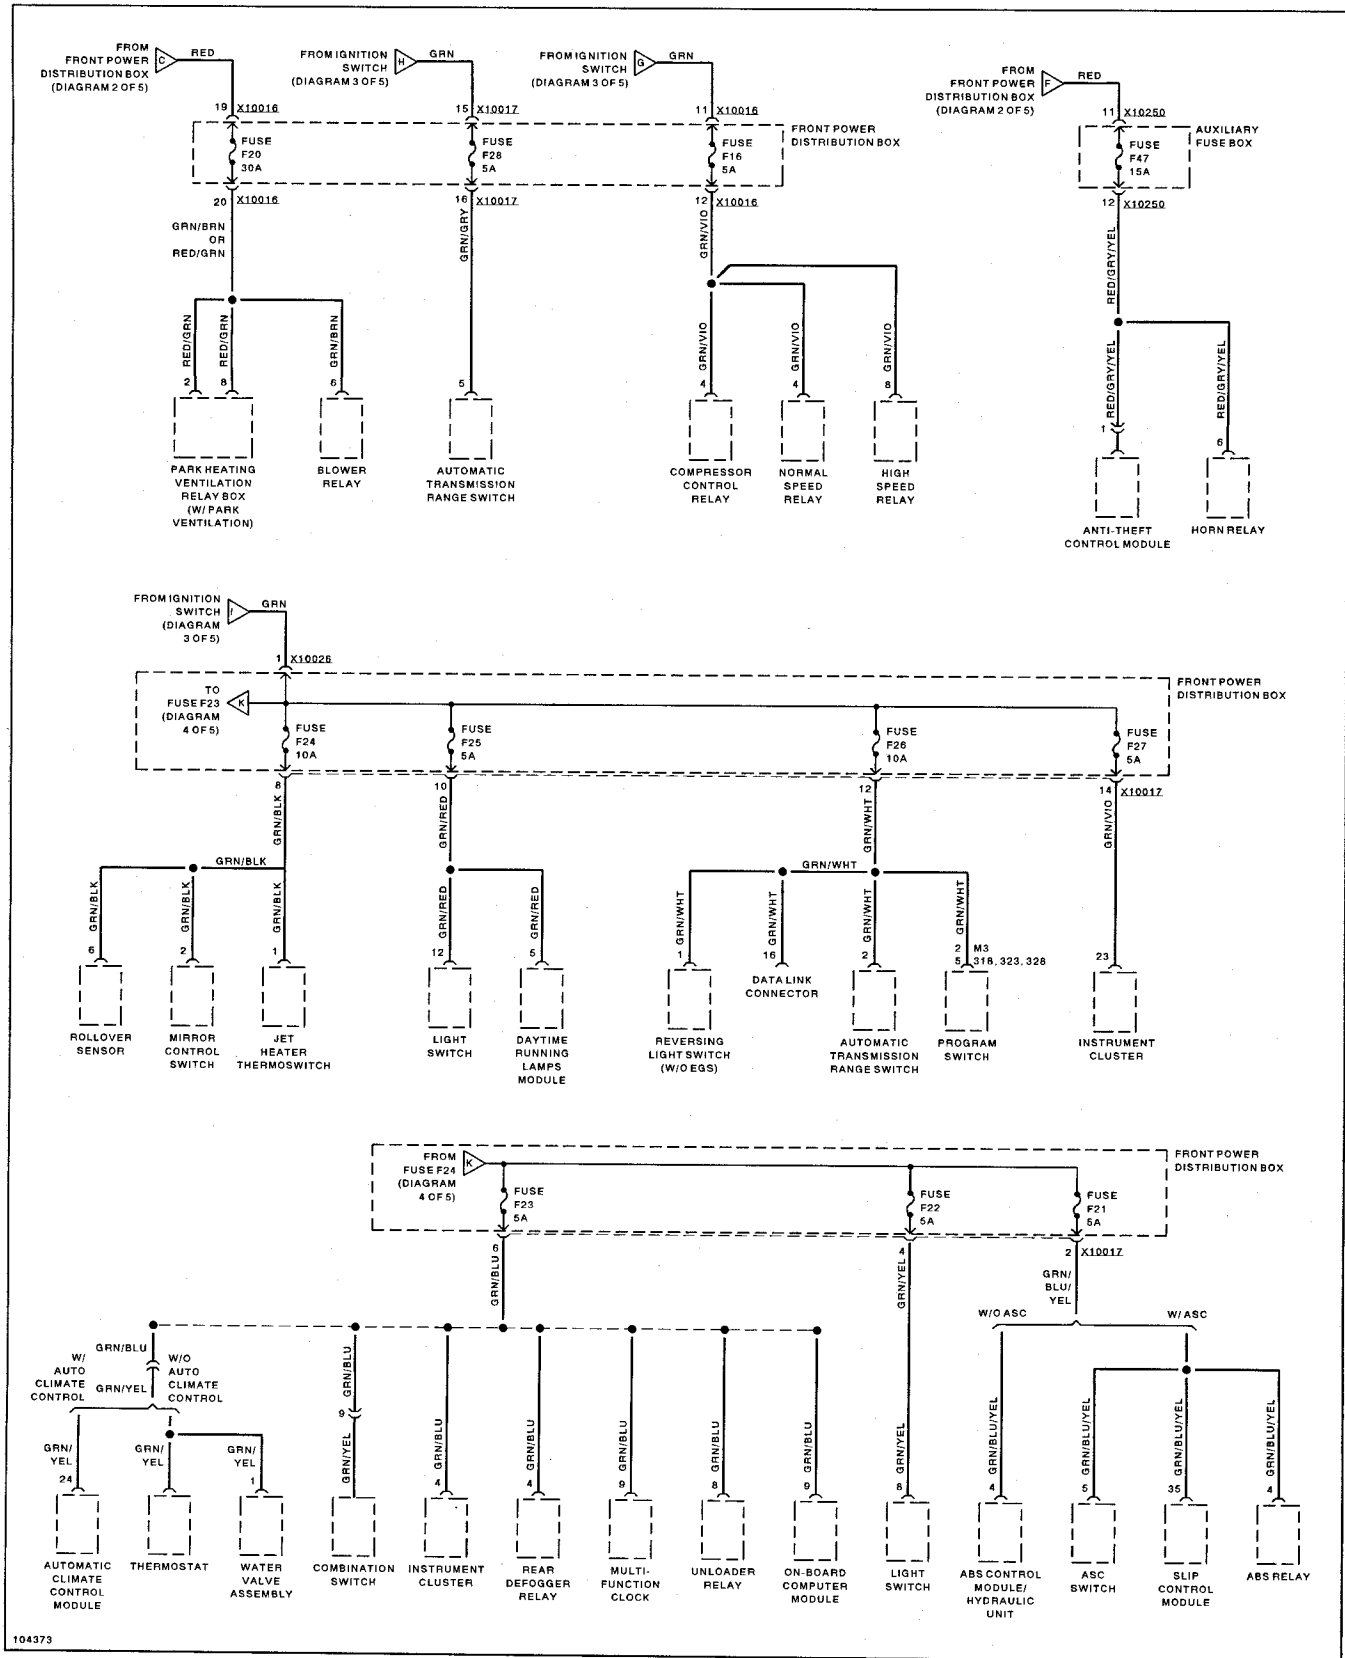


Power Distribution

1998 Except 318ti (5 of 5)




Power Distribution

1995-96 318ti (1 of 5)

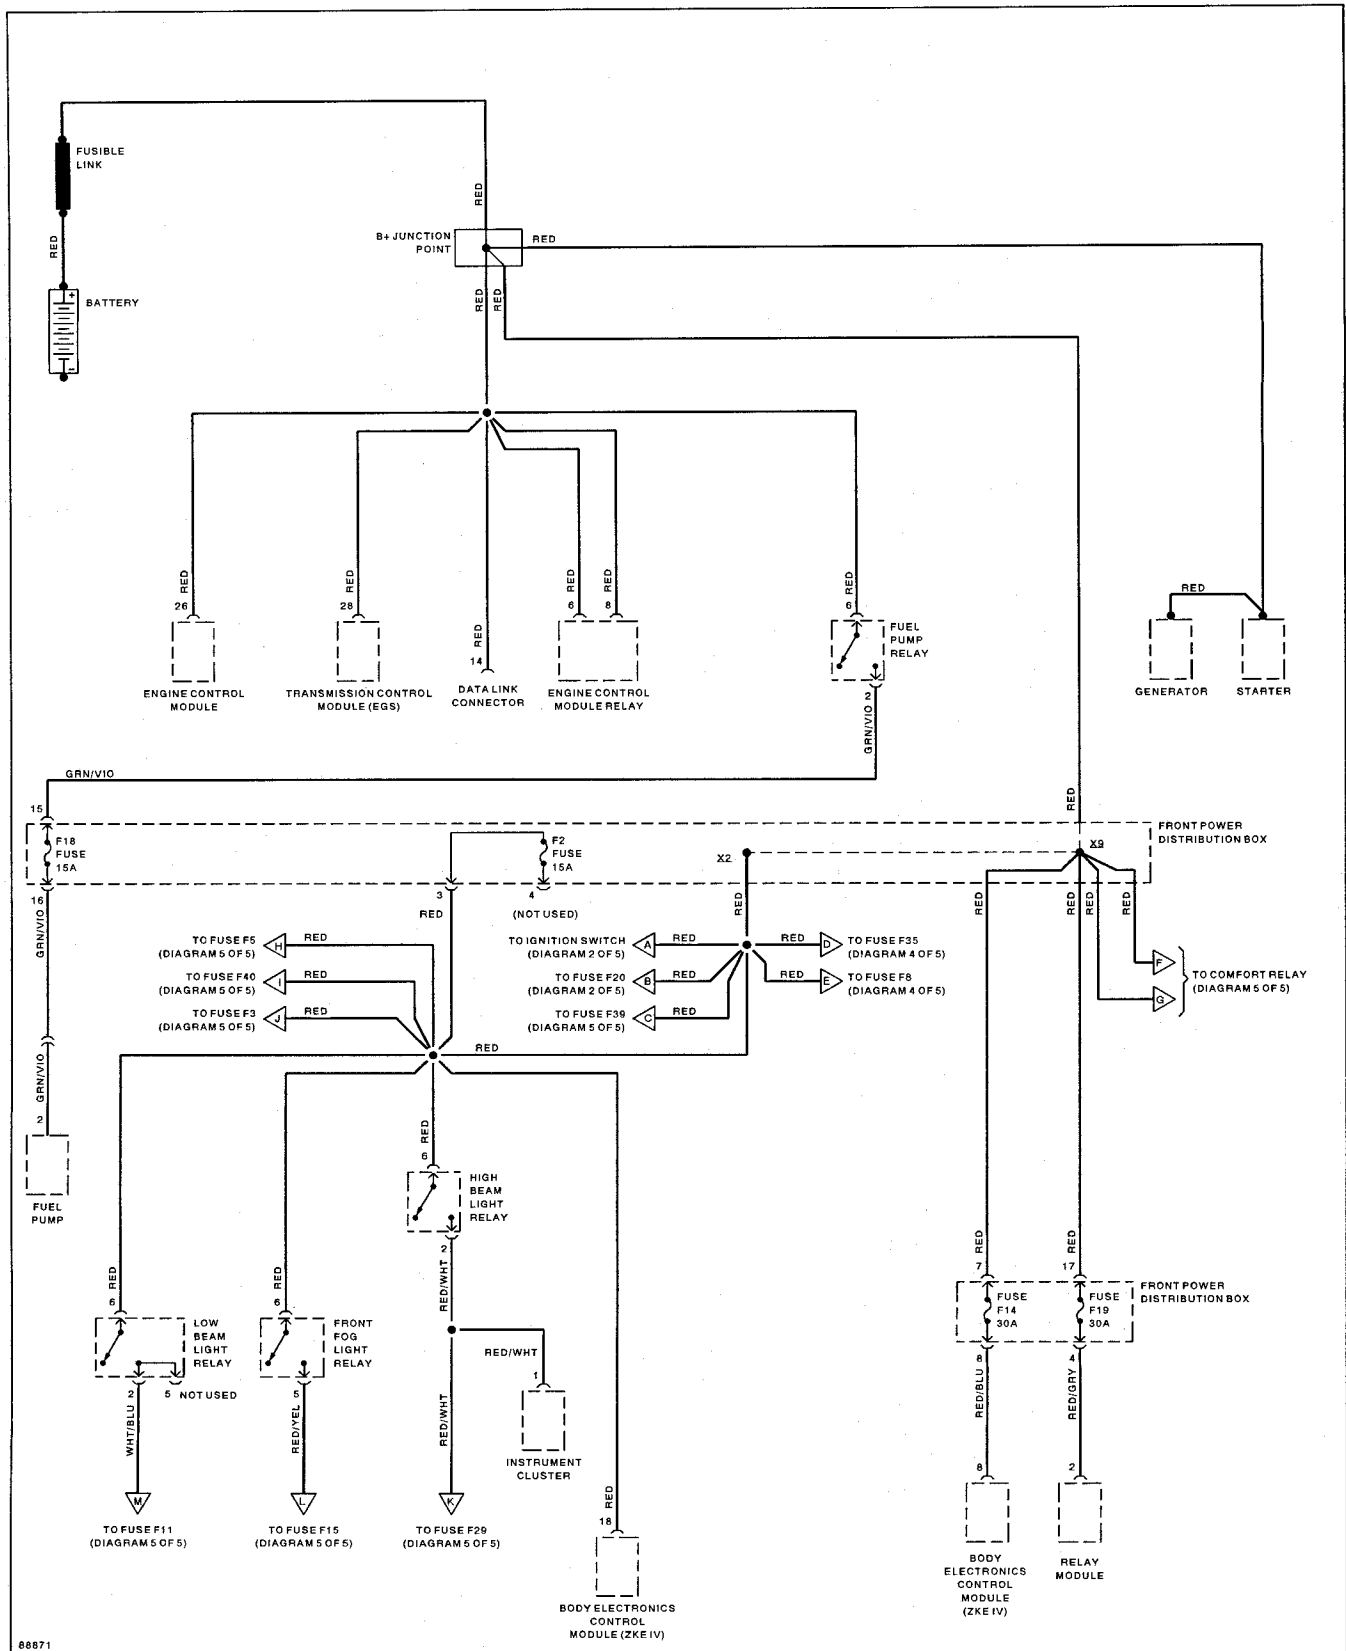


Power Distribution

1995-96 318ti (2 of 5)

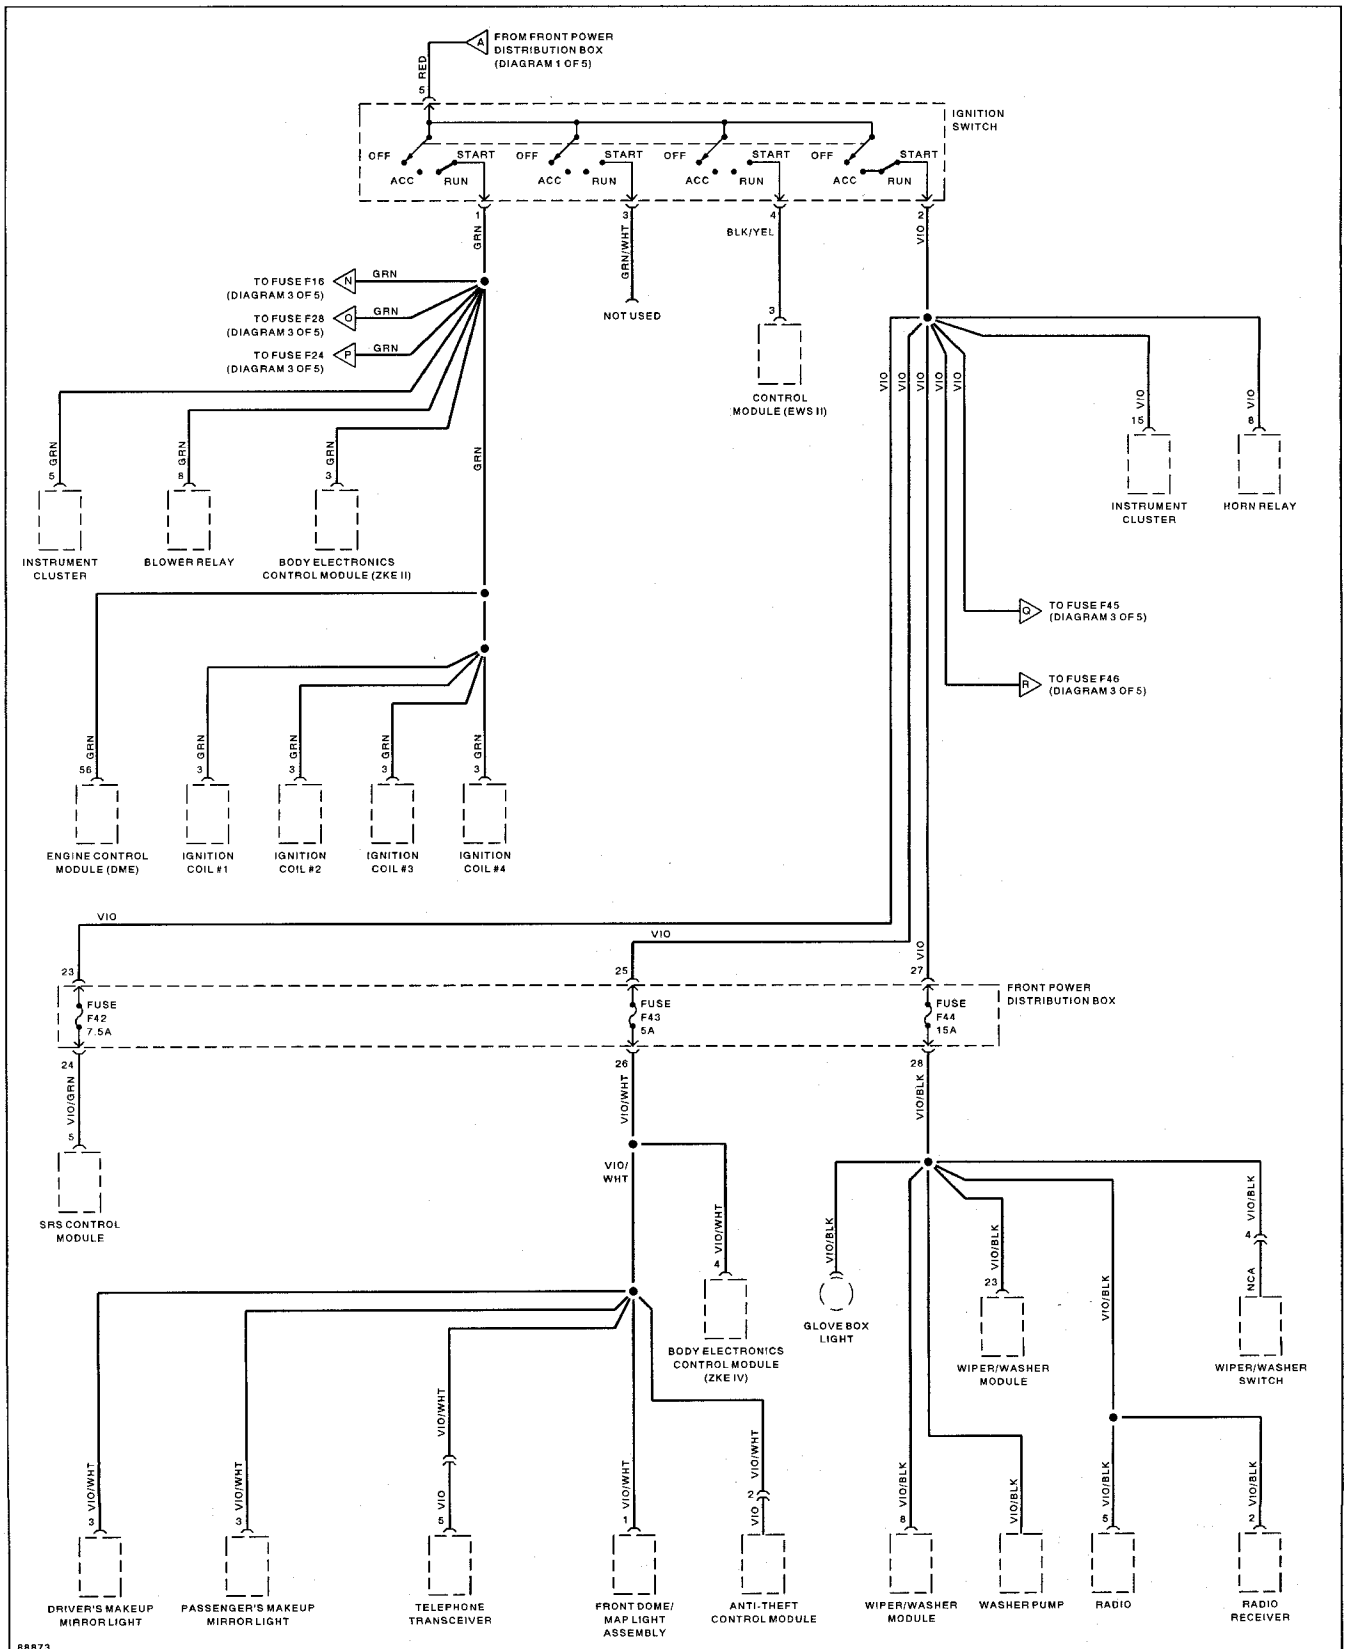


Power Distribution

1995-96 318ti (3 of 5)

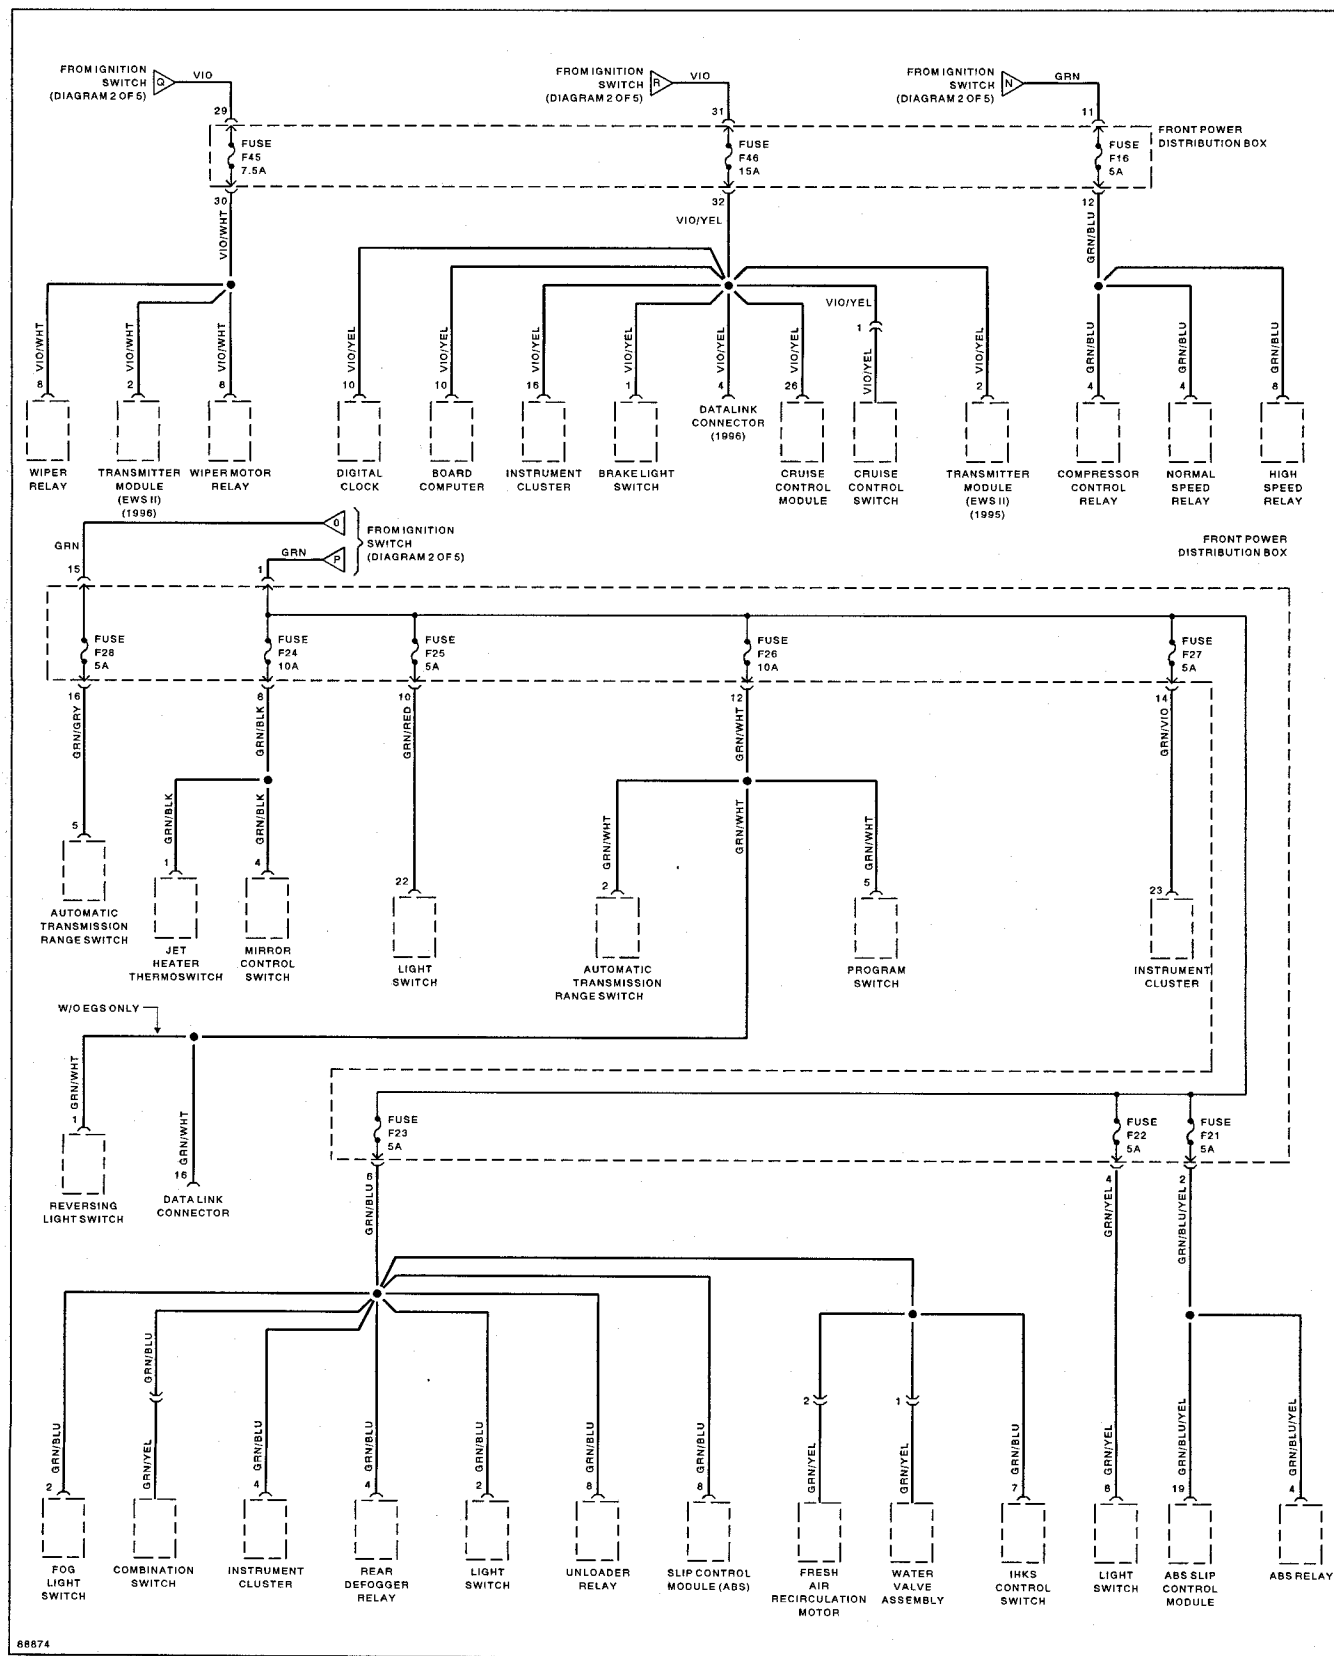


Power Distribution

1995-96 318ti (4 of 5)

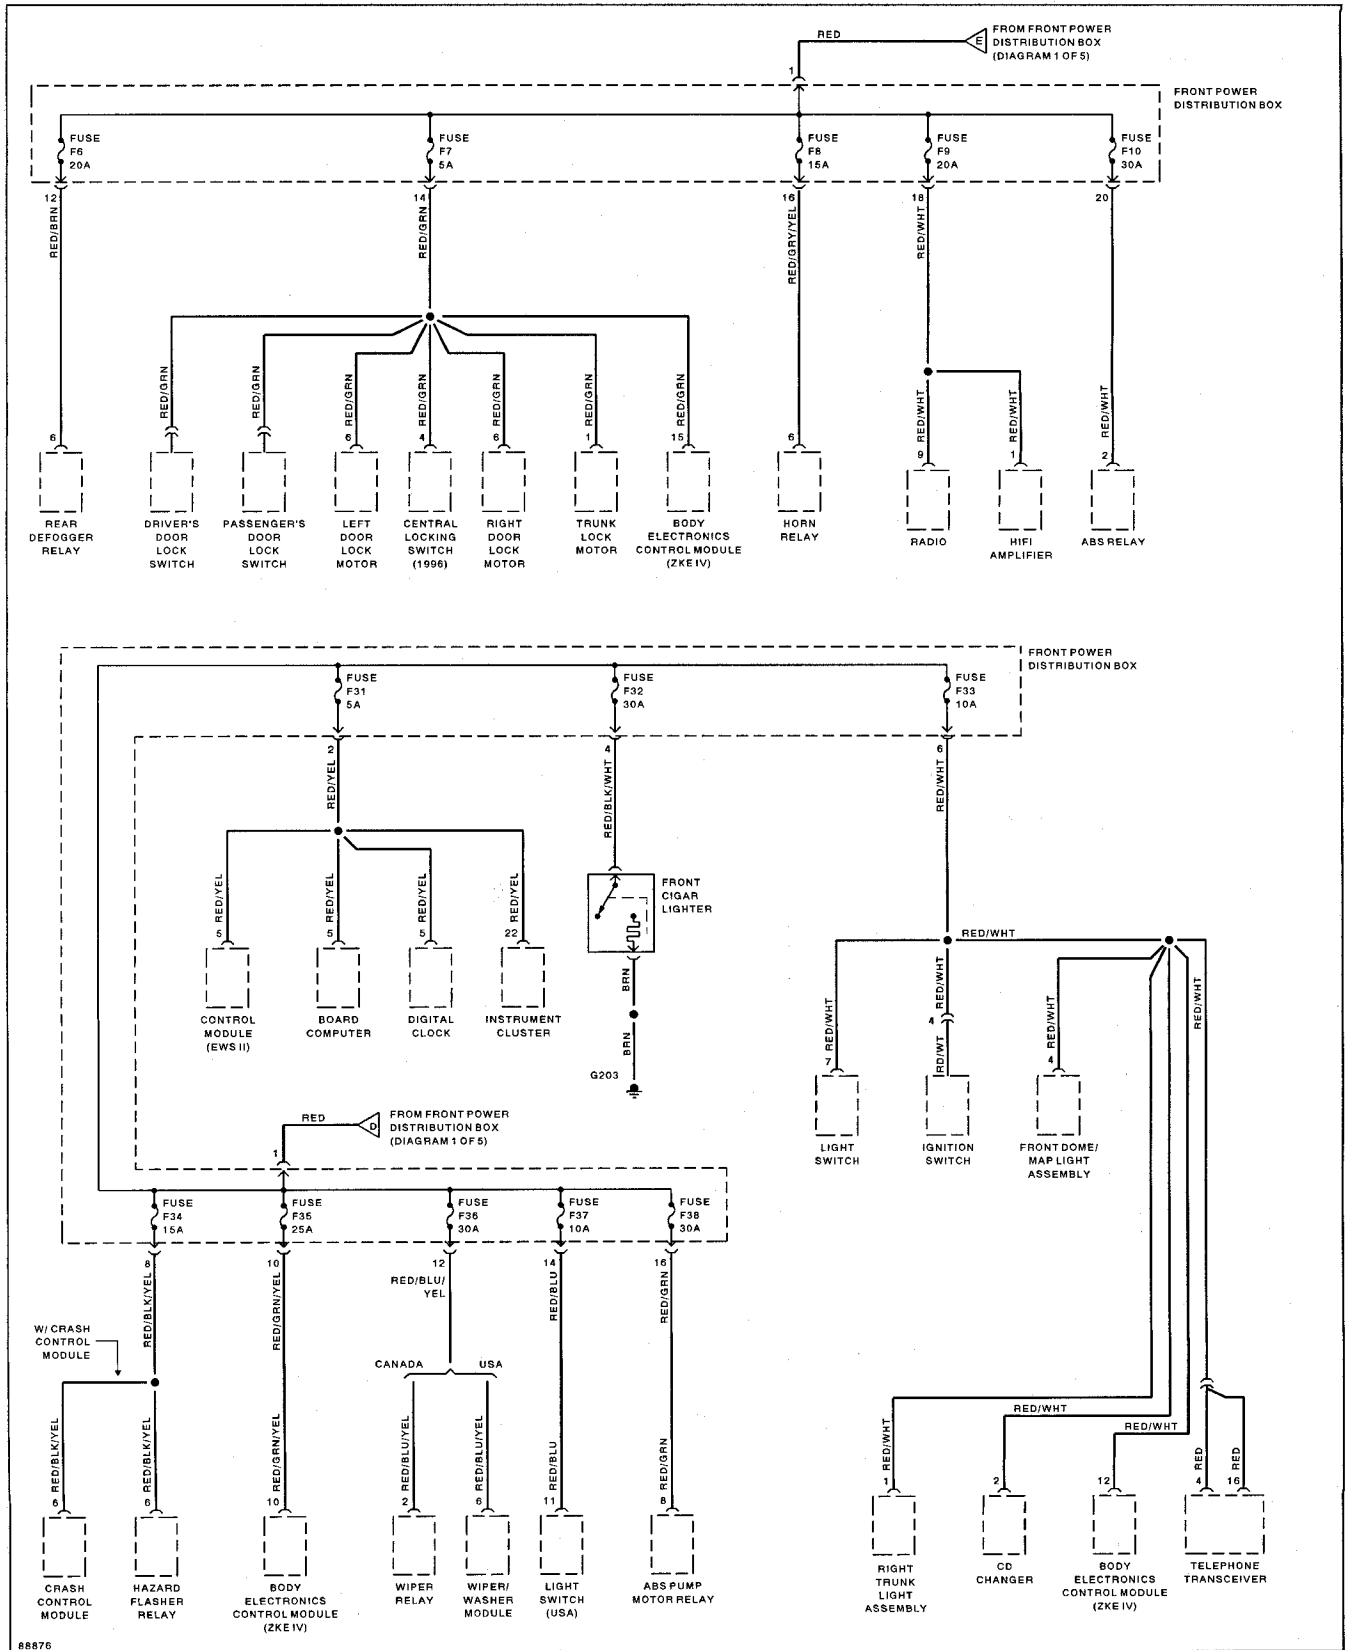


Power Distribution

1995-96 318ti (5 of 5)

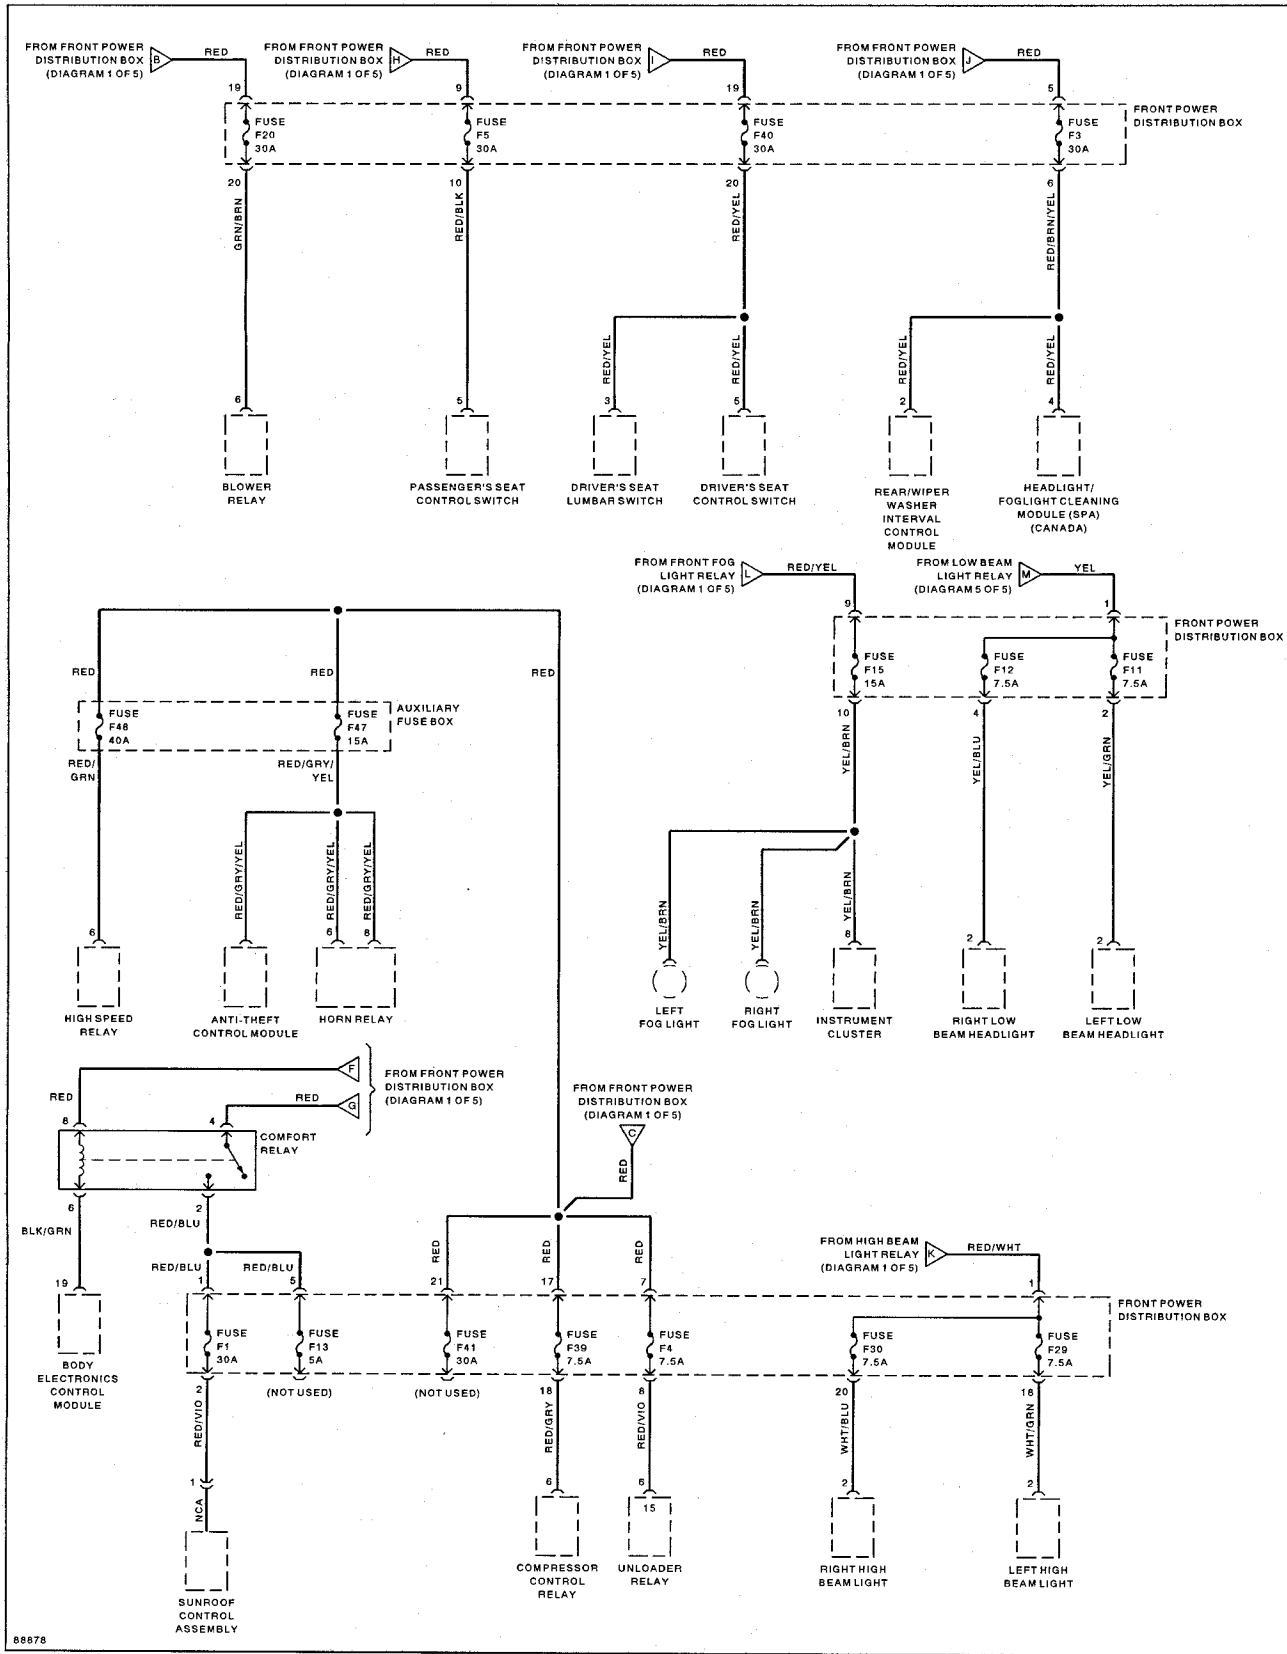


Power Distribution

1997 318ti (1 of 3)

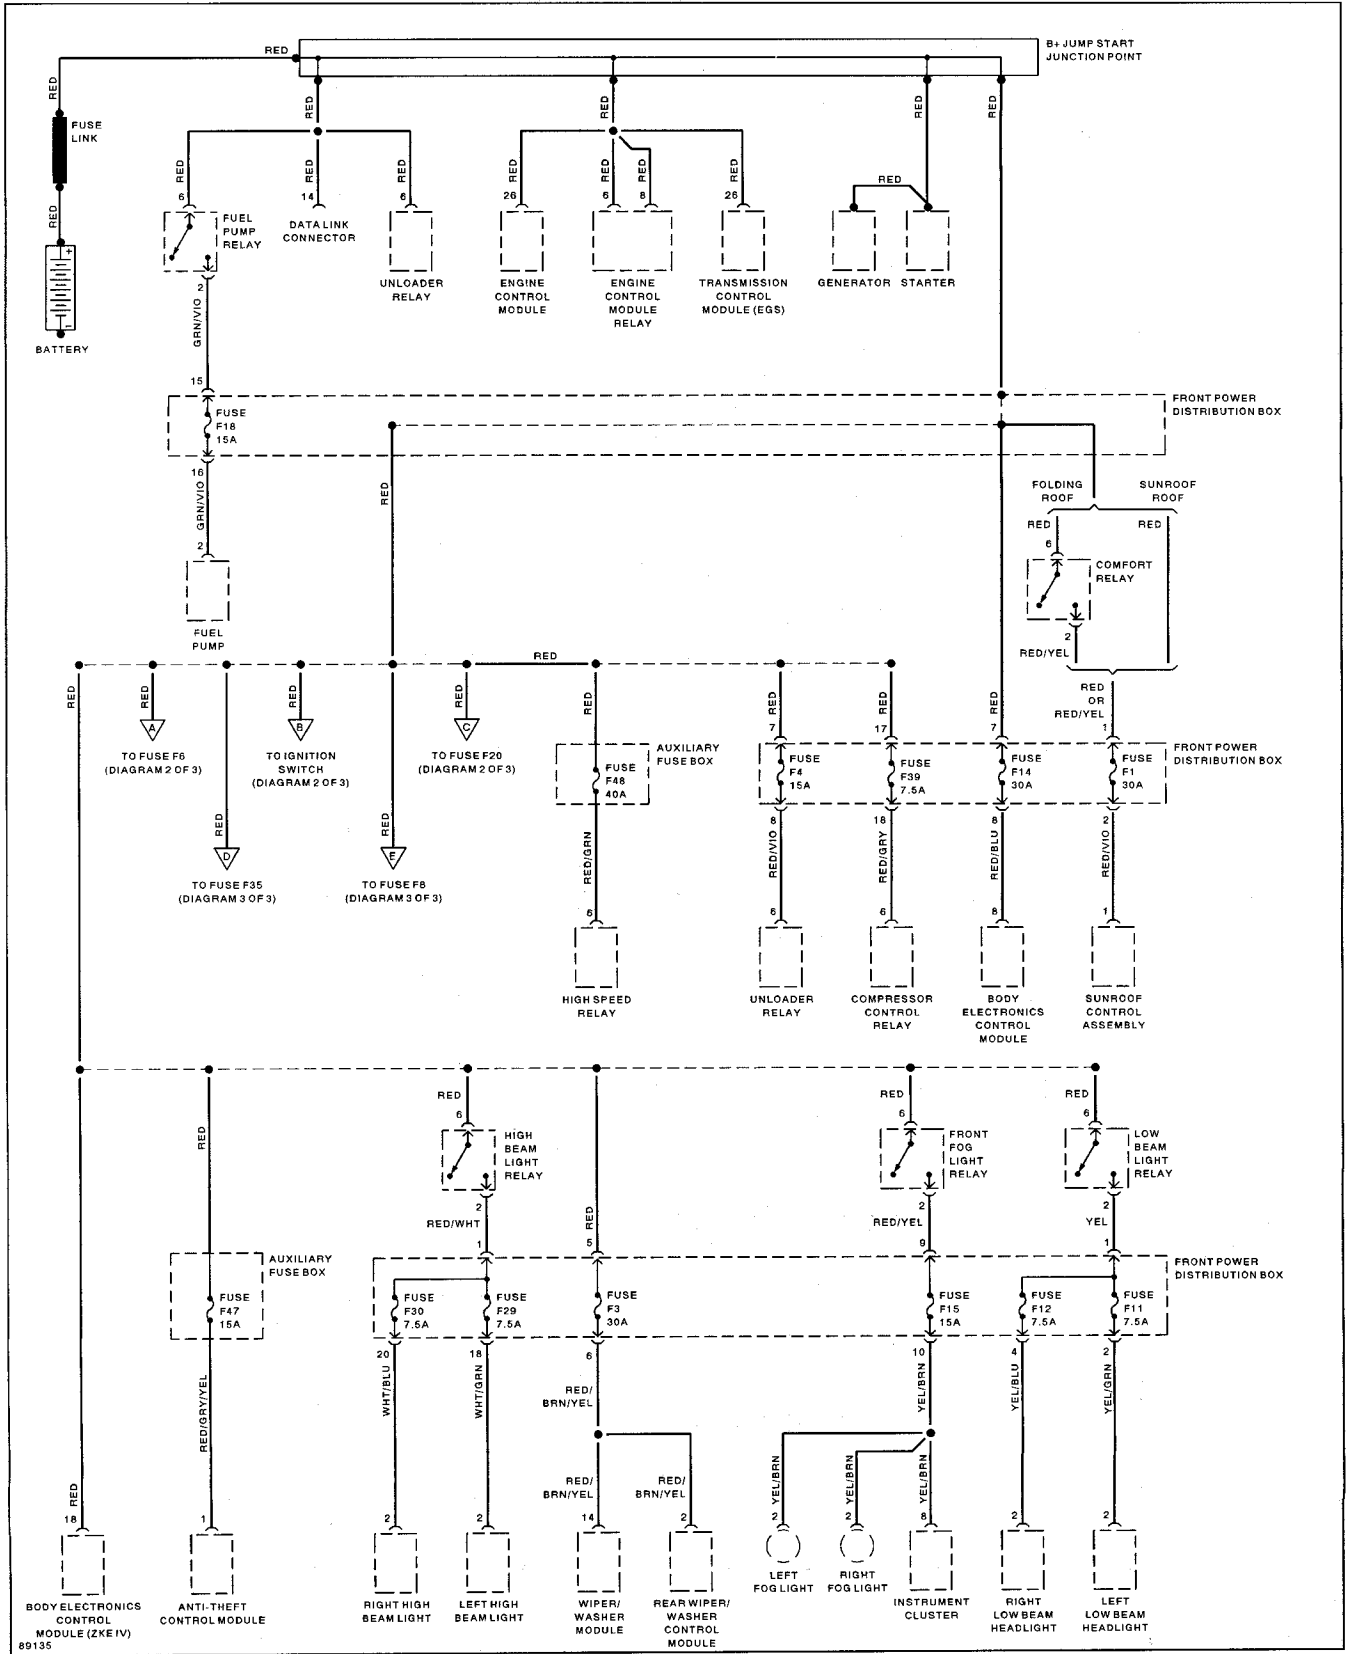


Power Distribution

1997 318ti (2 of 3)

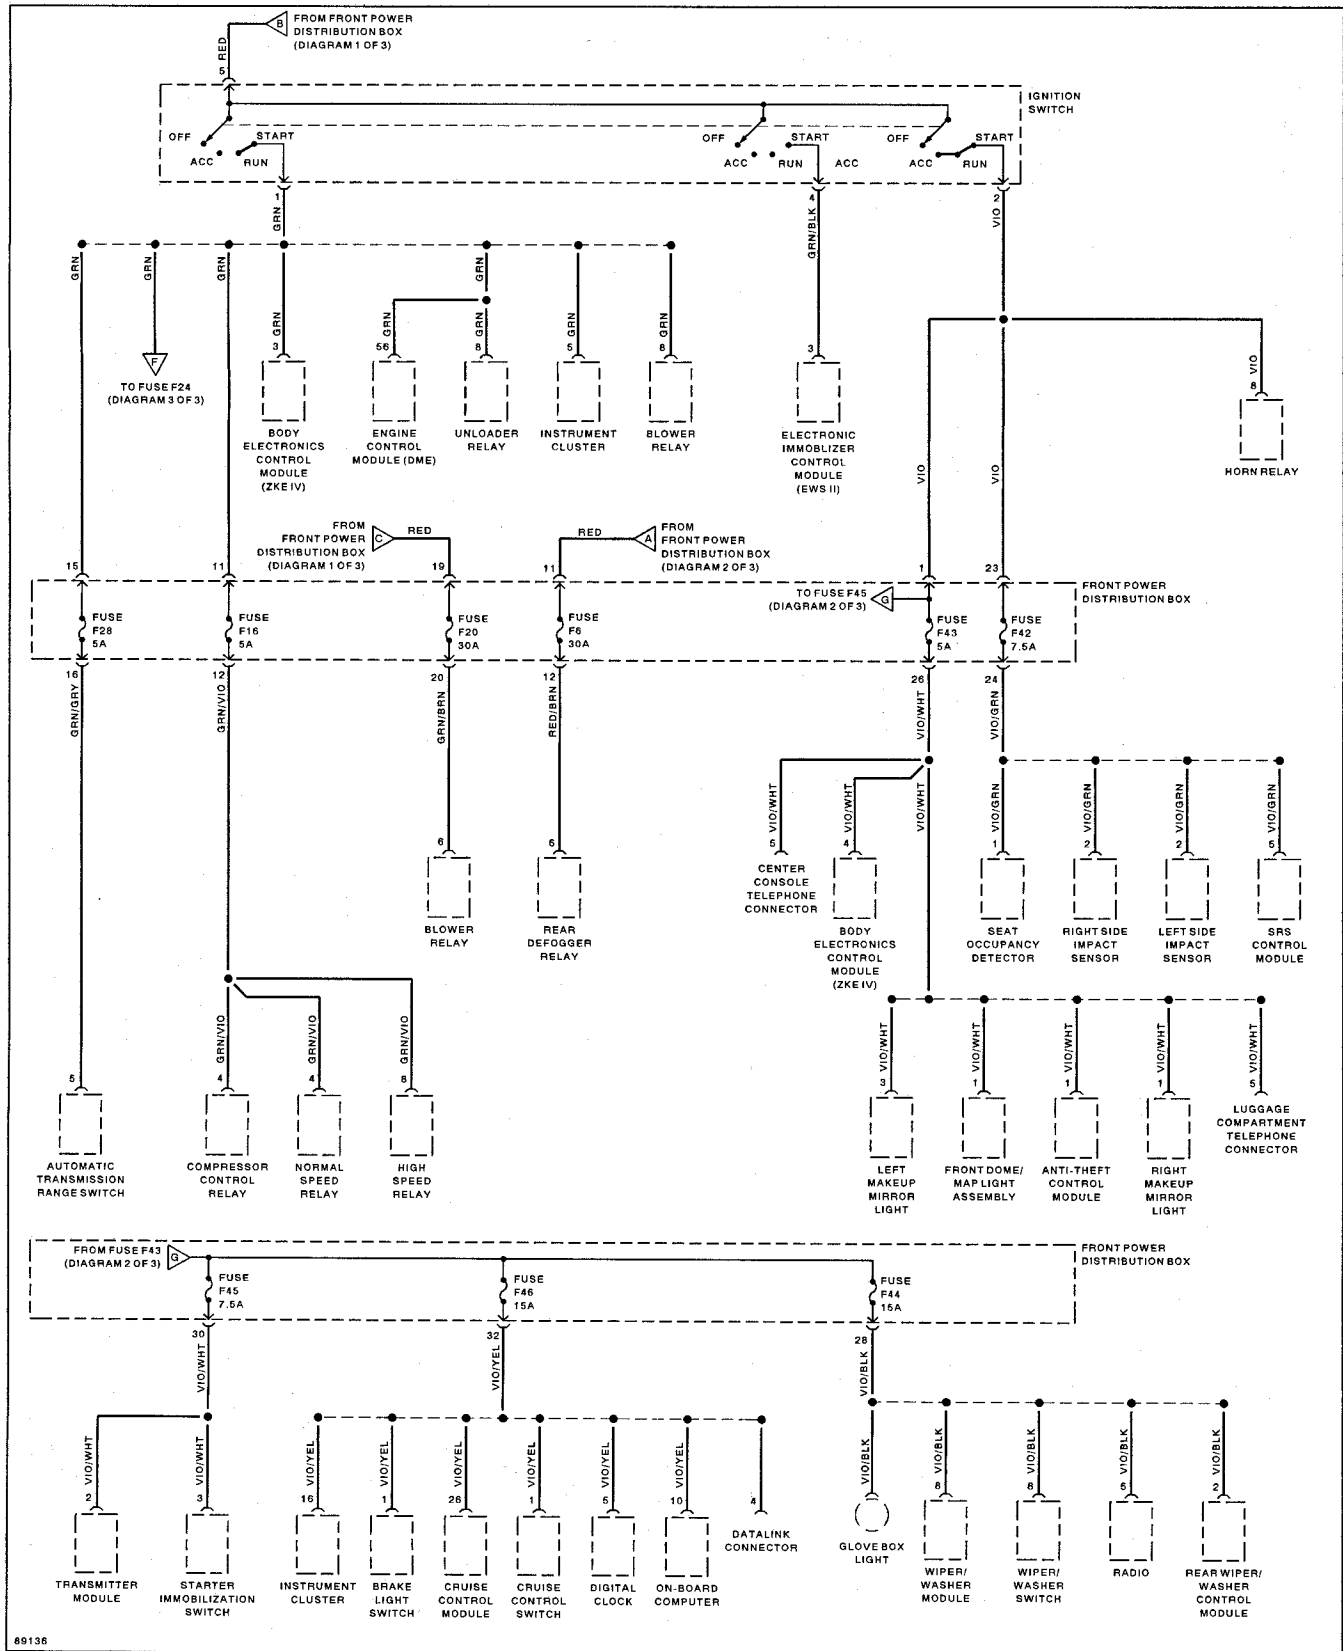


Power Distribution

1997 318ti (3 of 3)

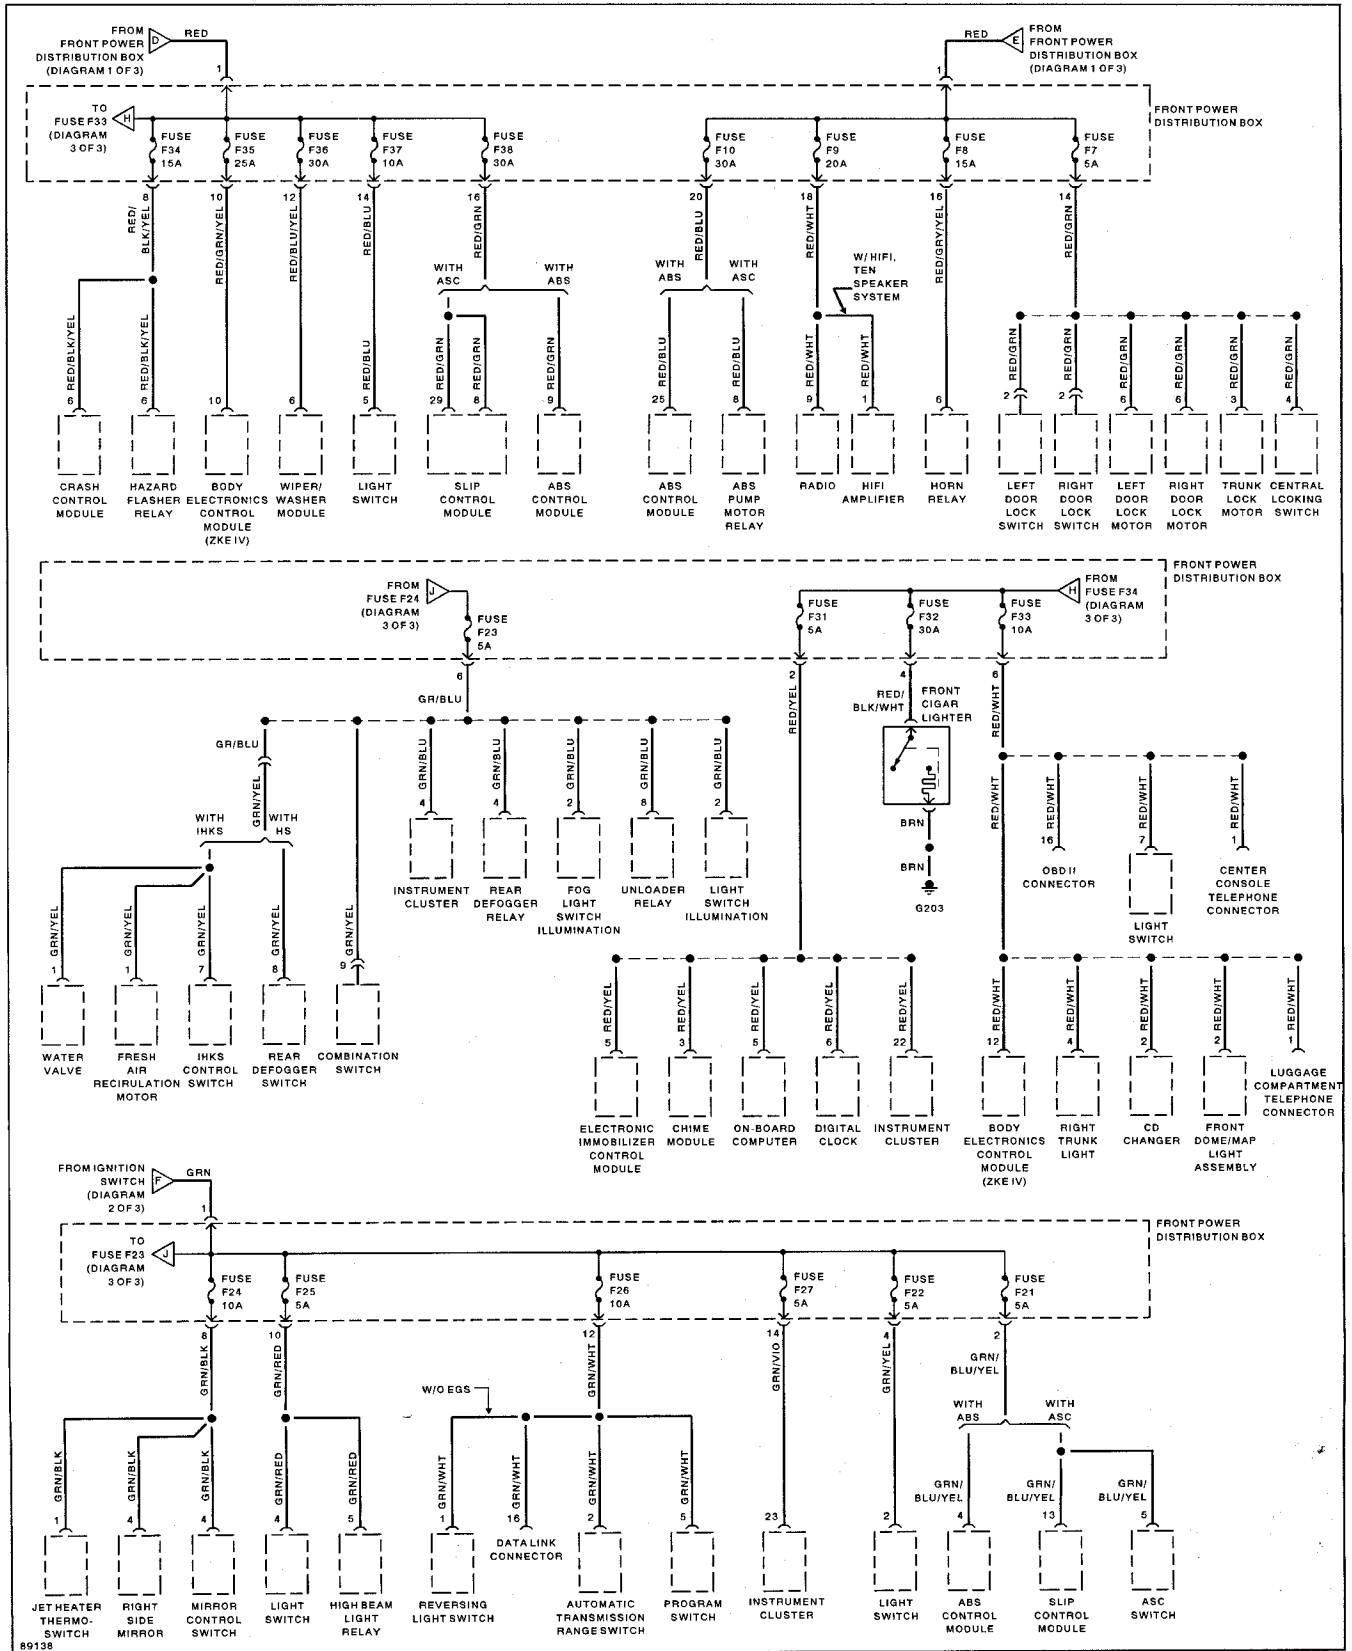


Power Distribution

1998 318ti (1 of 3)

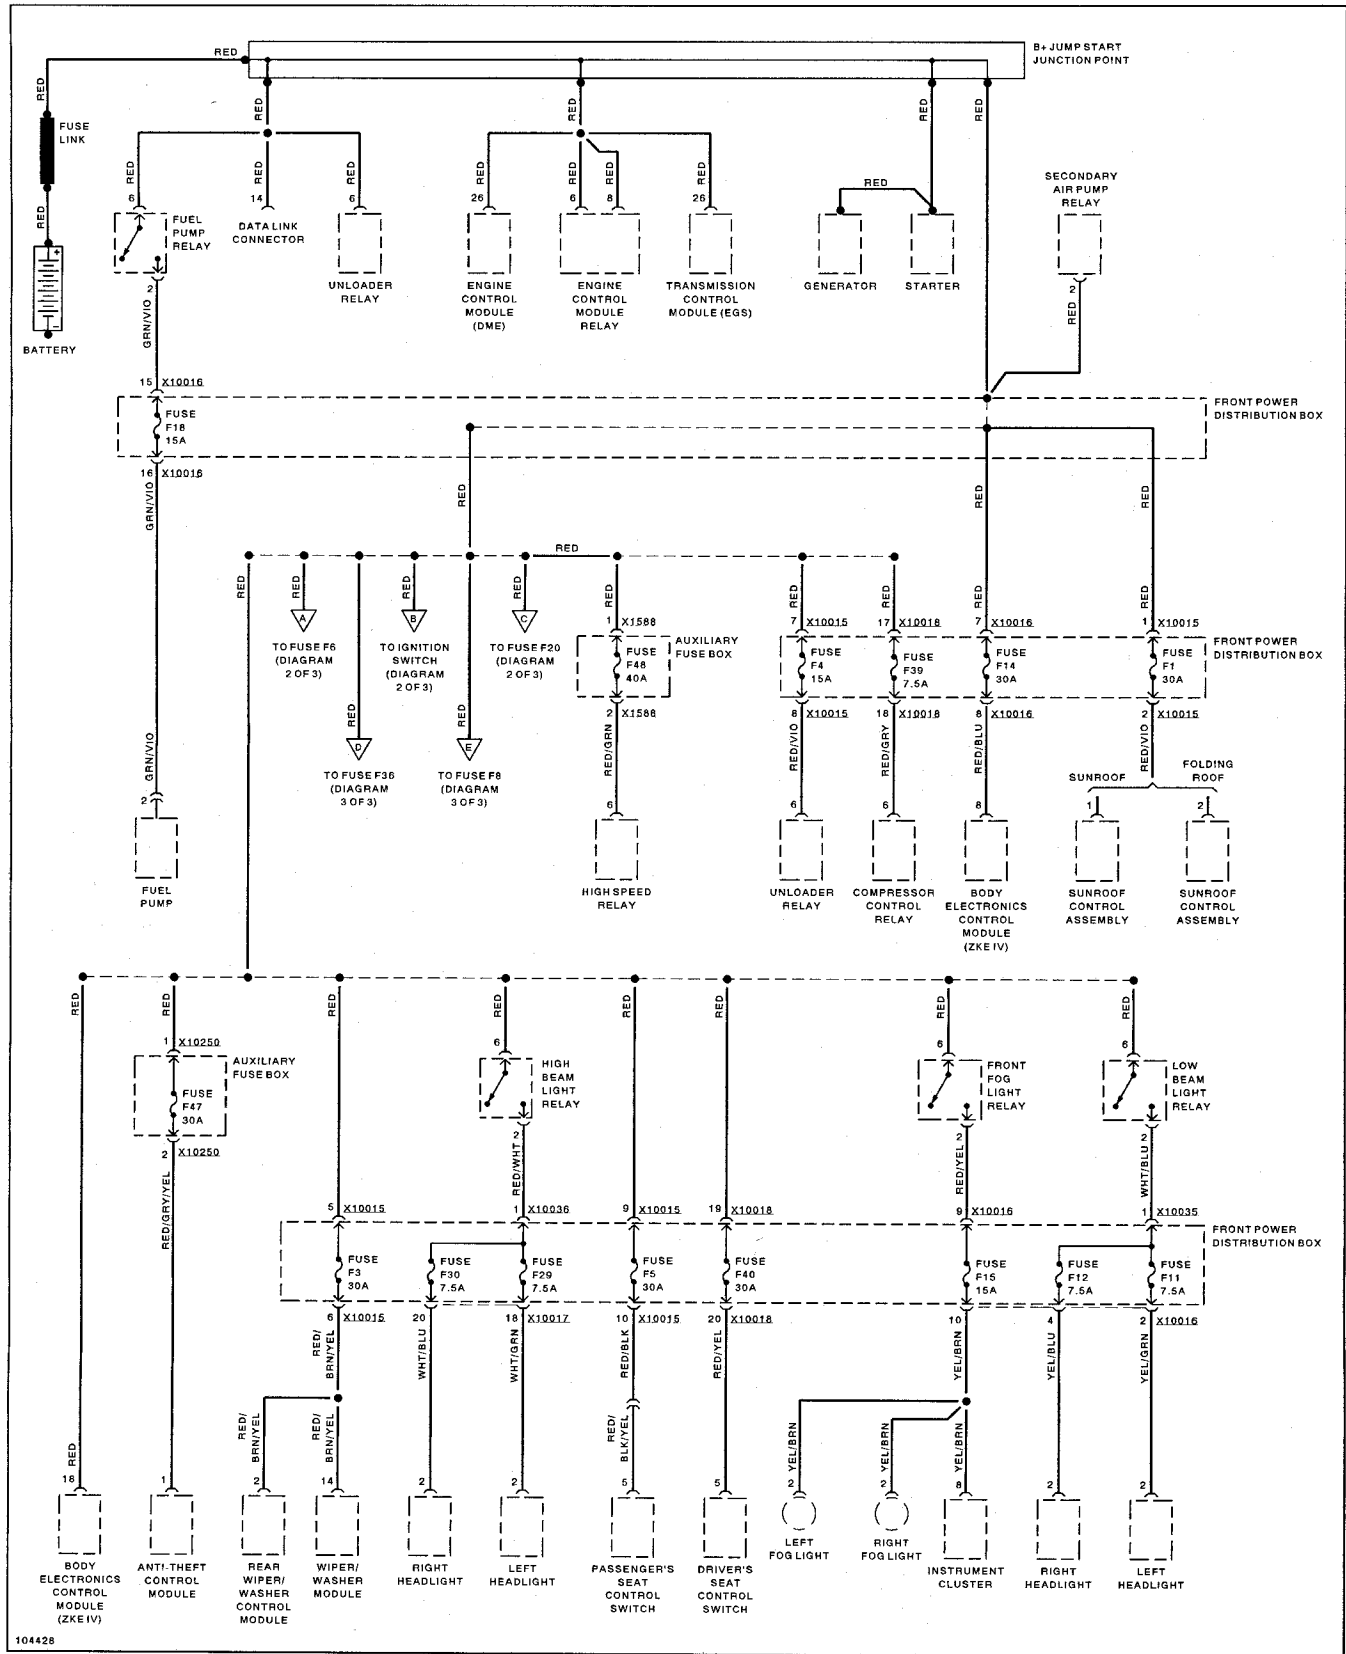


Power Distribution

1998 318ti (2 of 3)

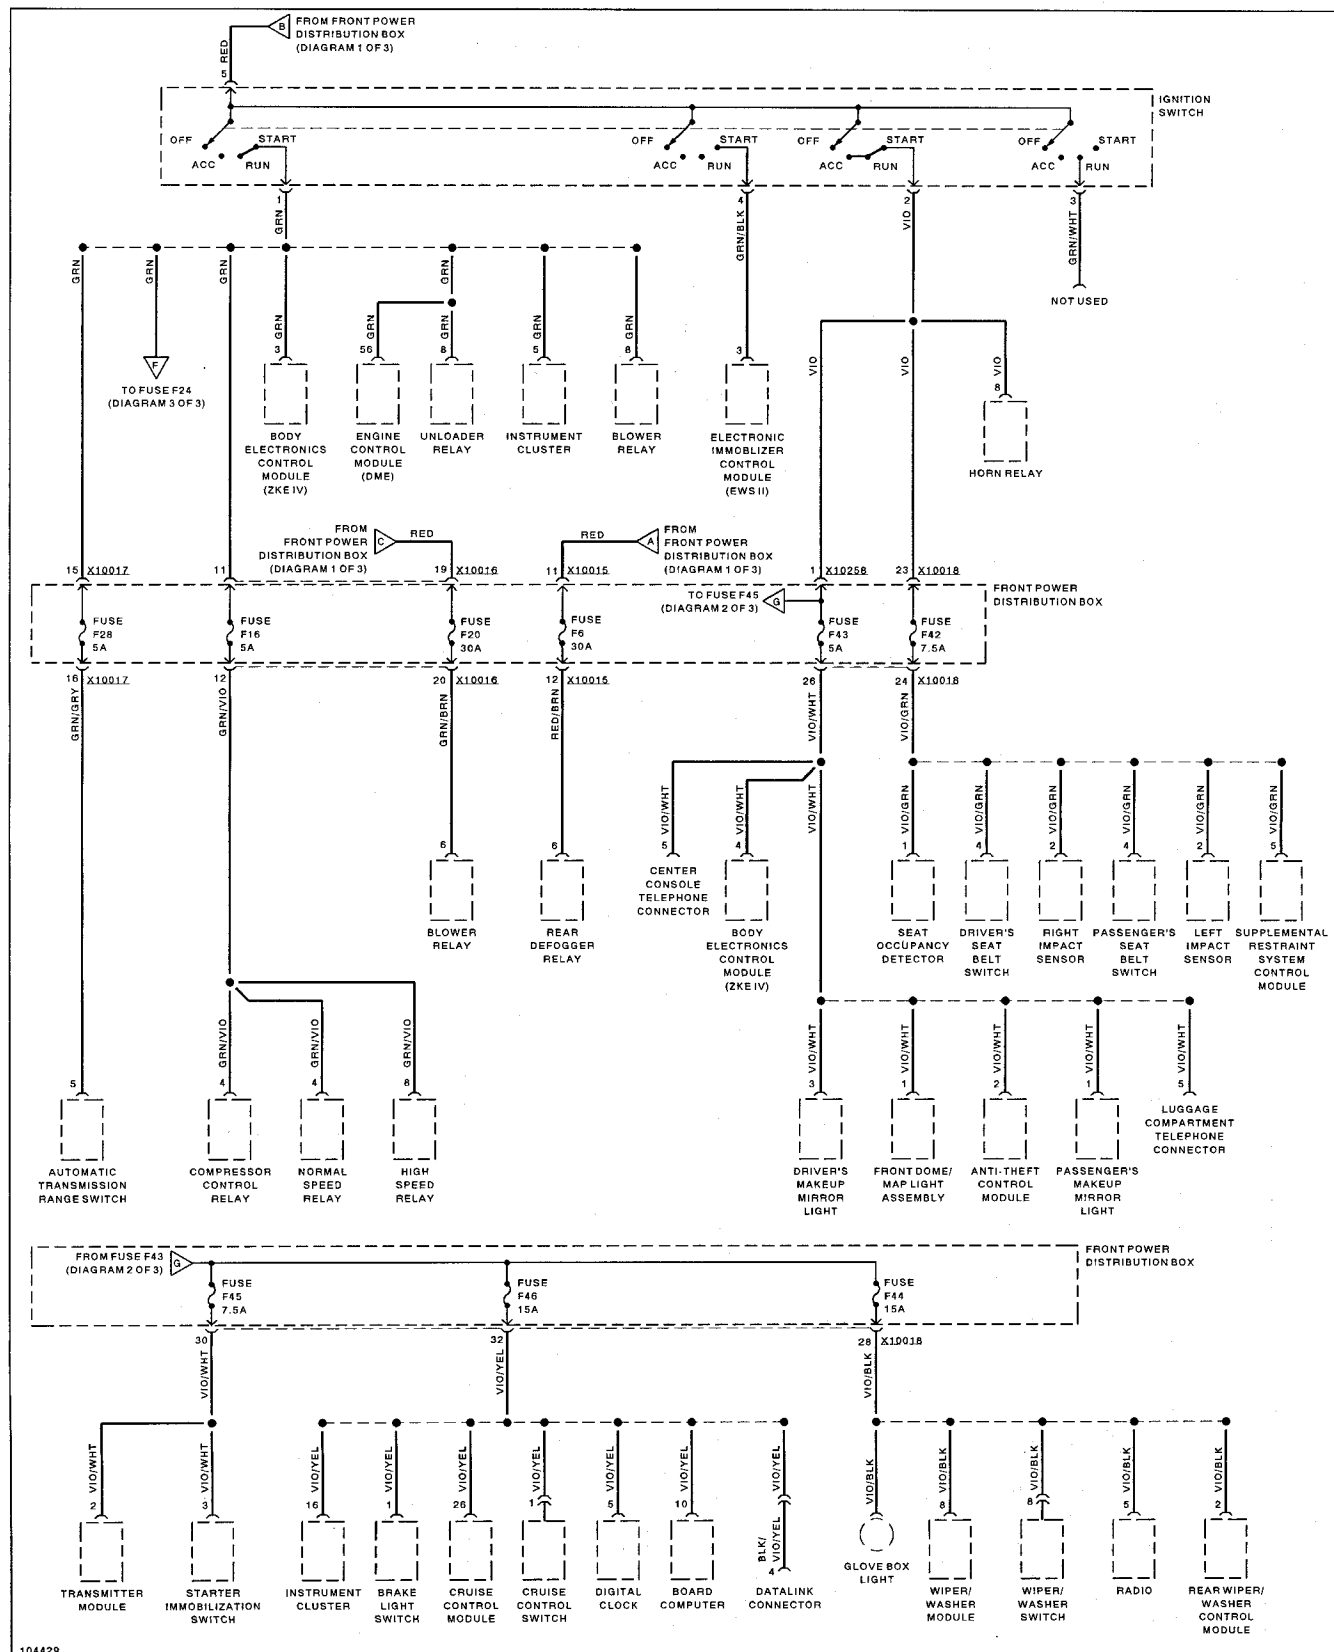


Power Distribution

1998 318ti (3 of 3)

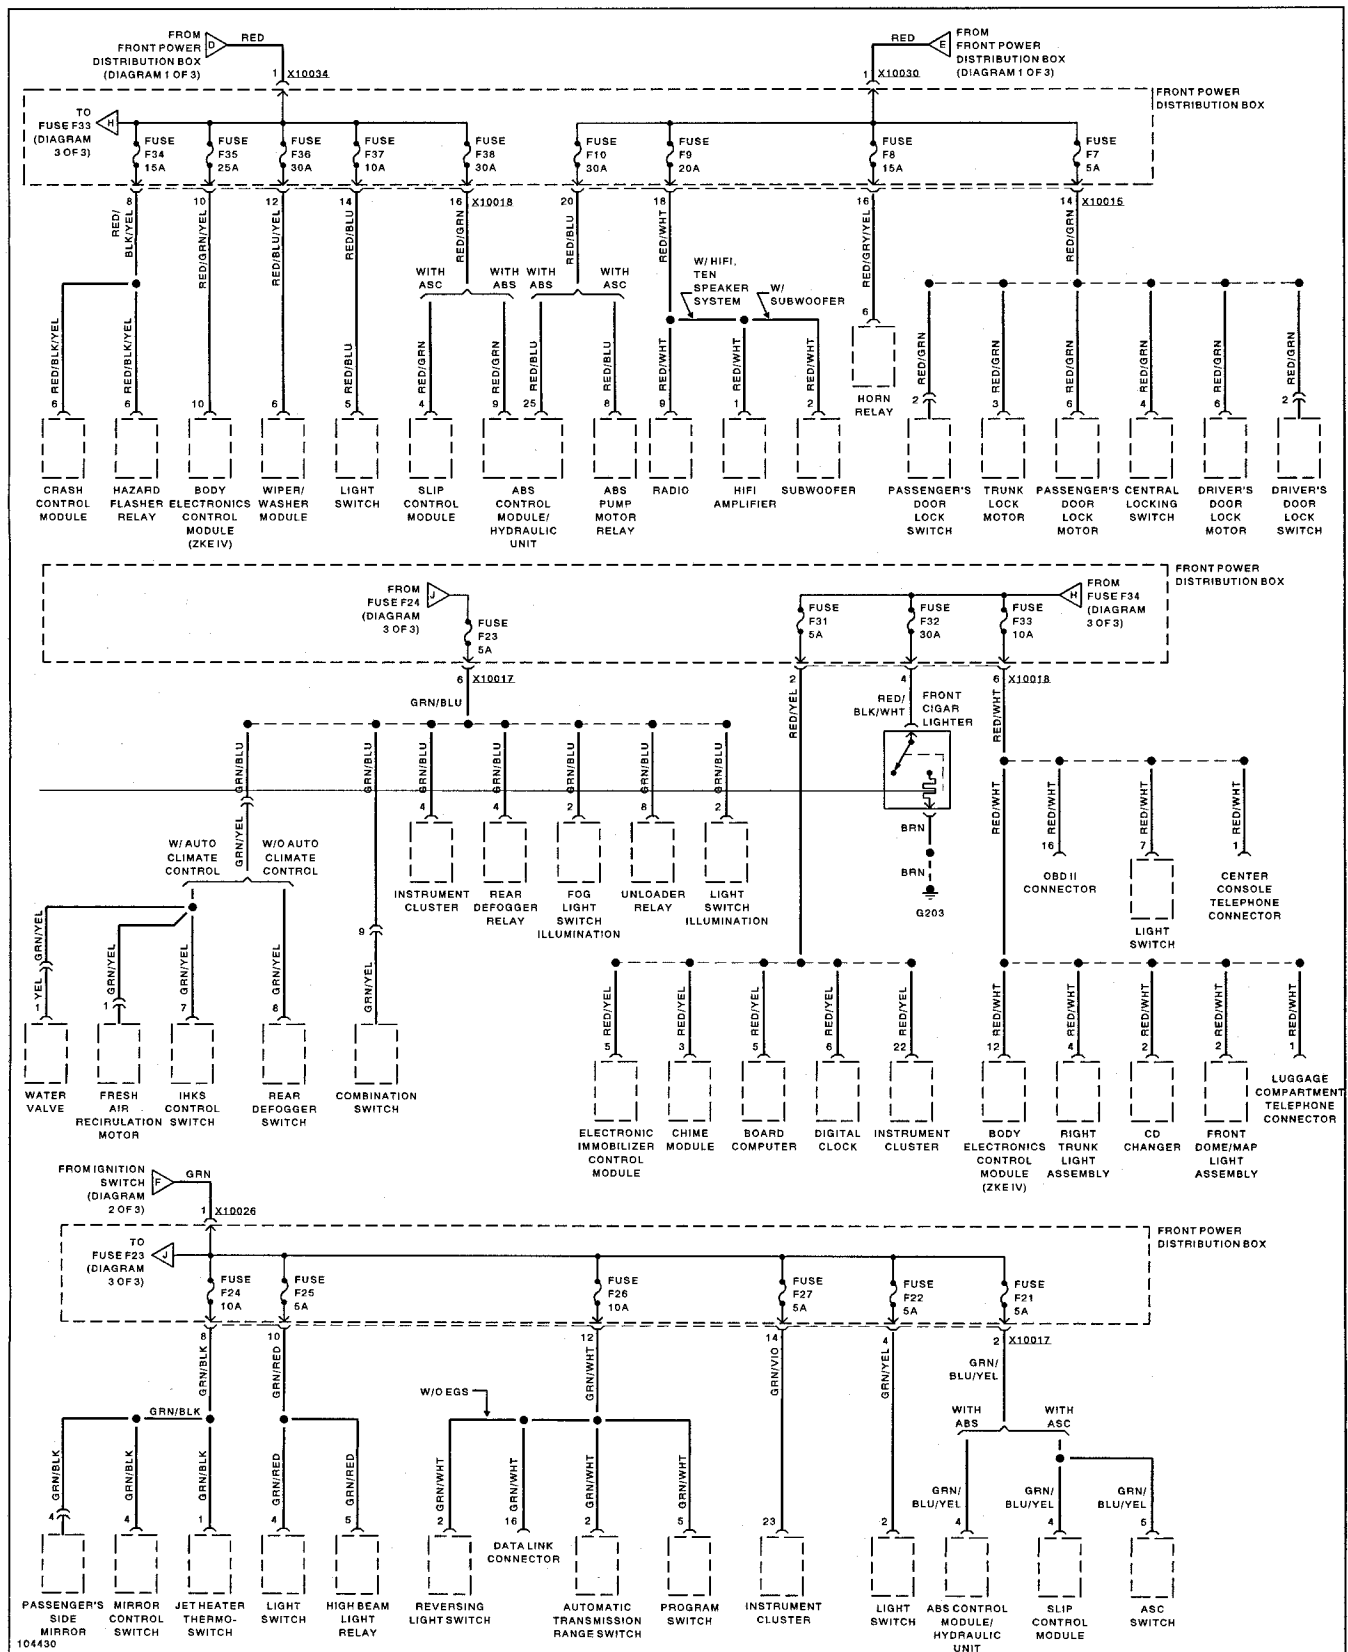


Ground Distribution

1992-93 (1 of 5)

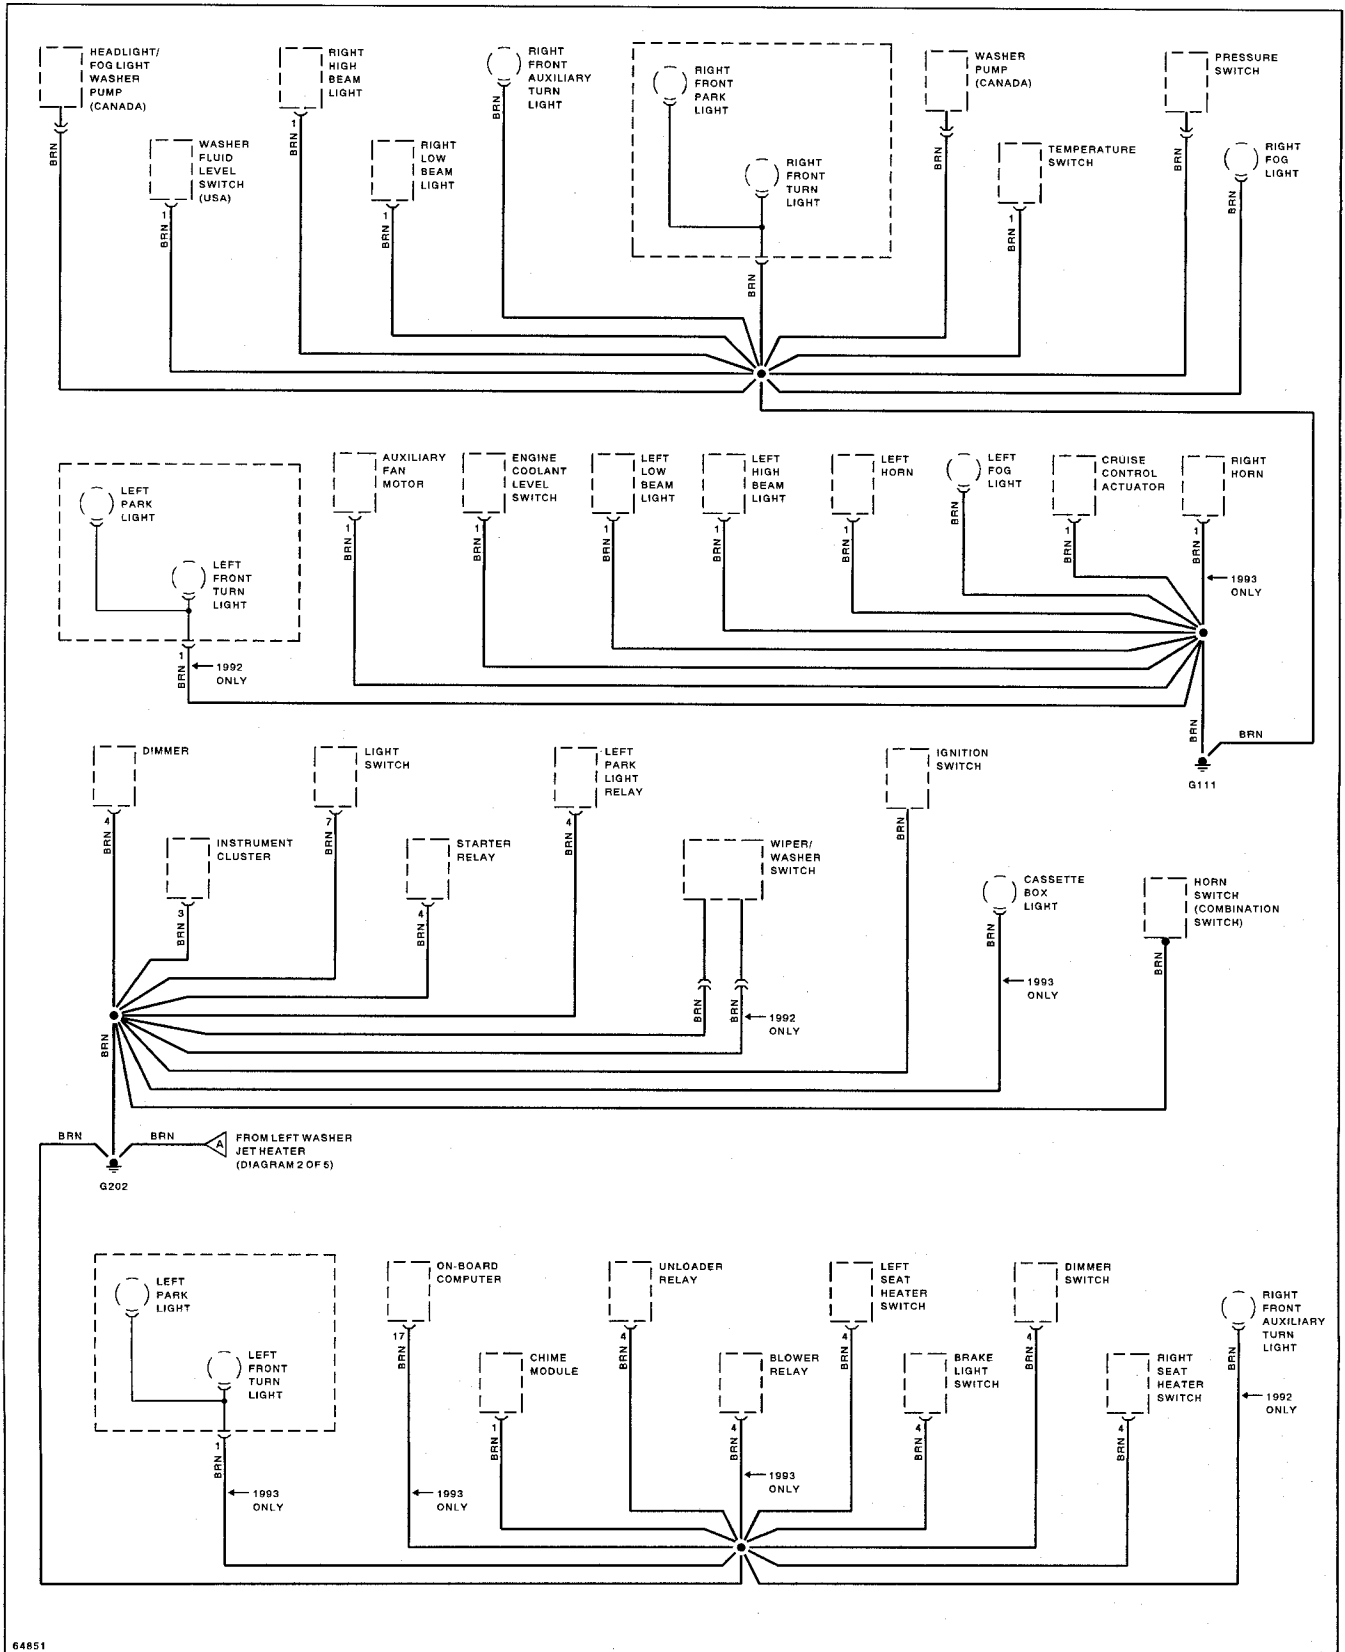


Ground Distribution

1992-93 (2 of 5)

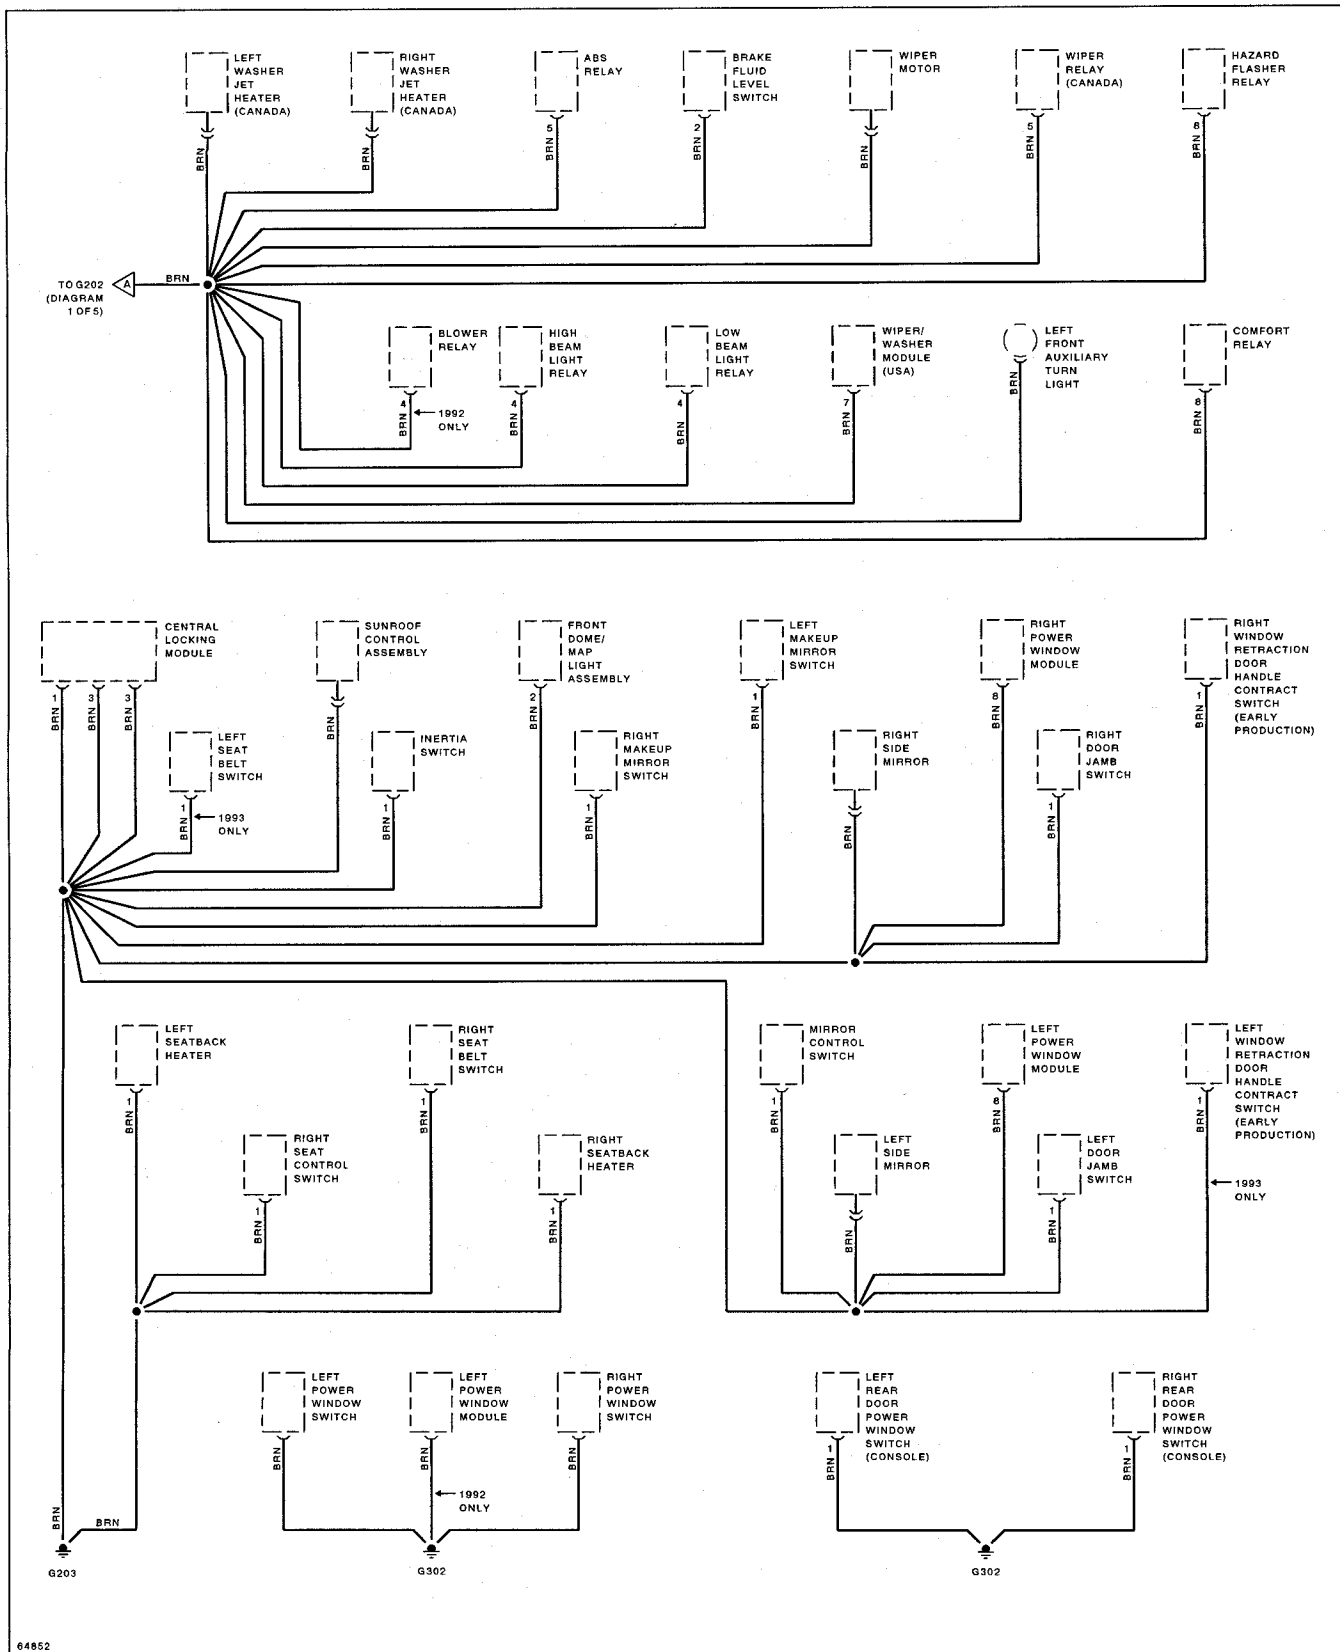


Ground Distribution

1992-93 (3 of 5)

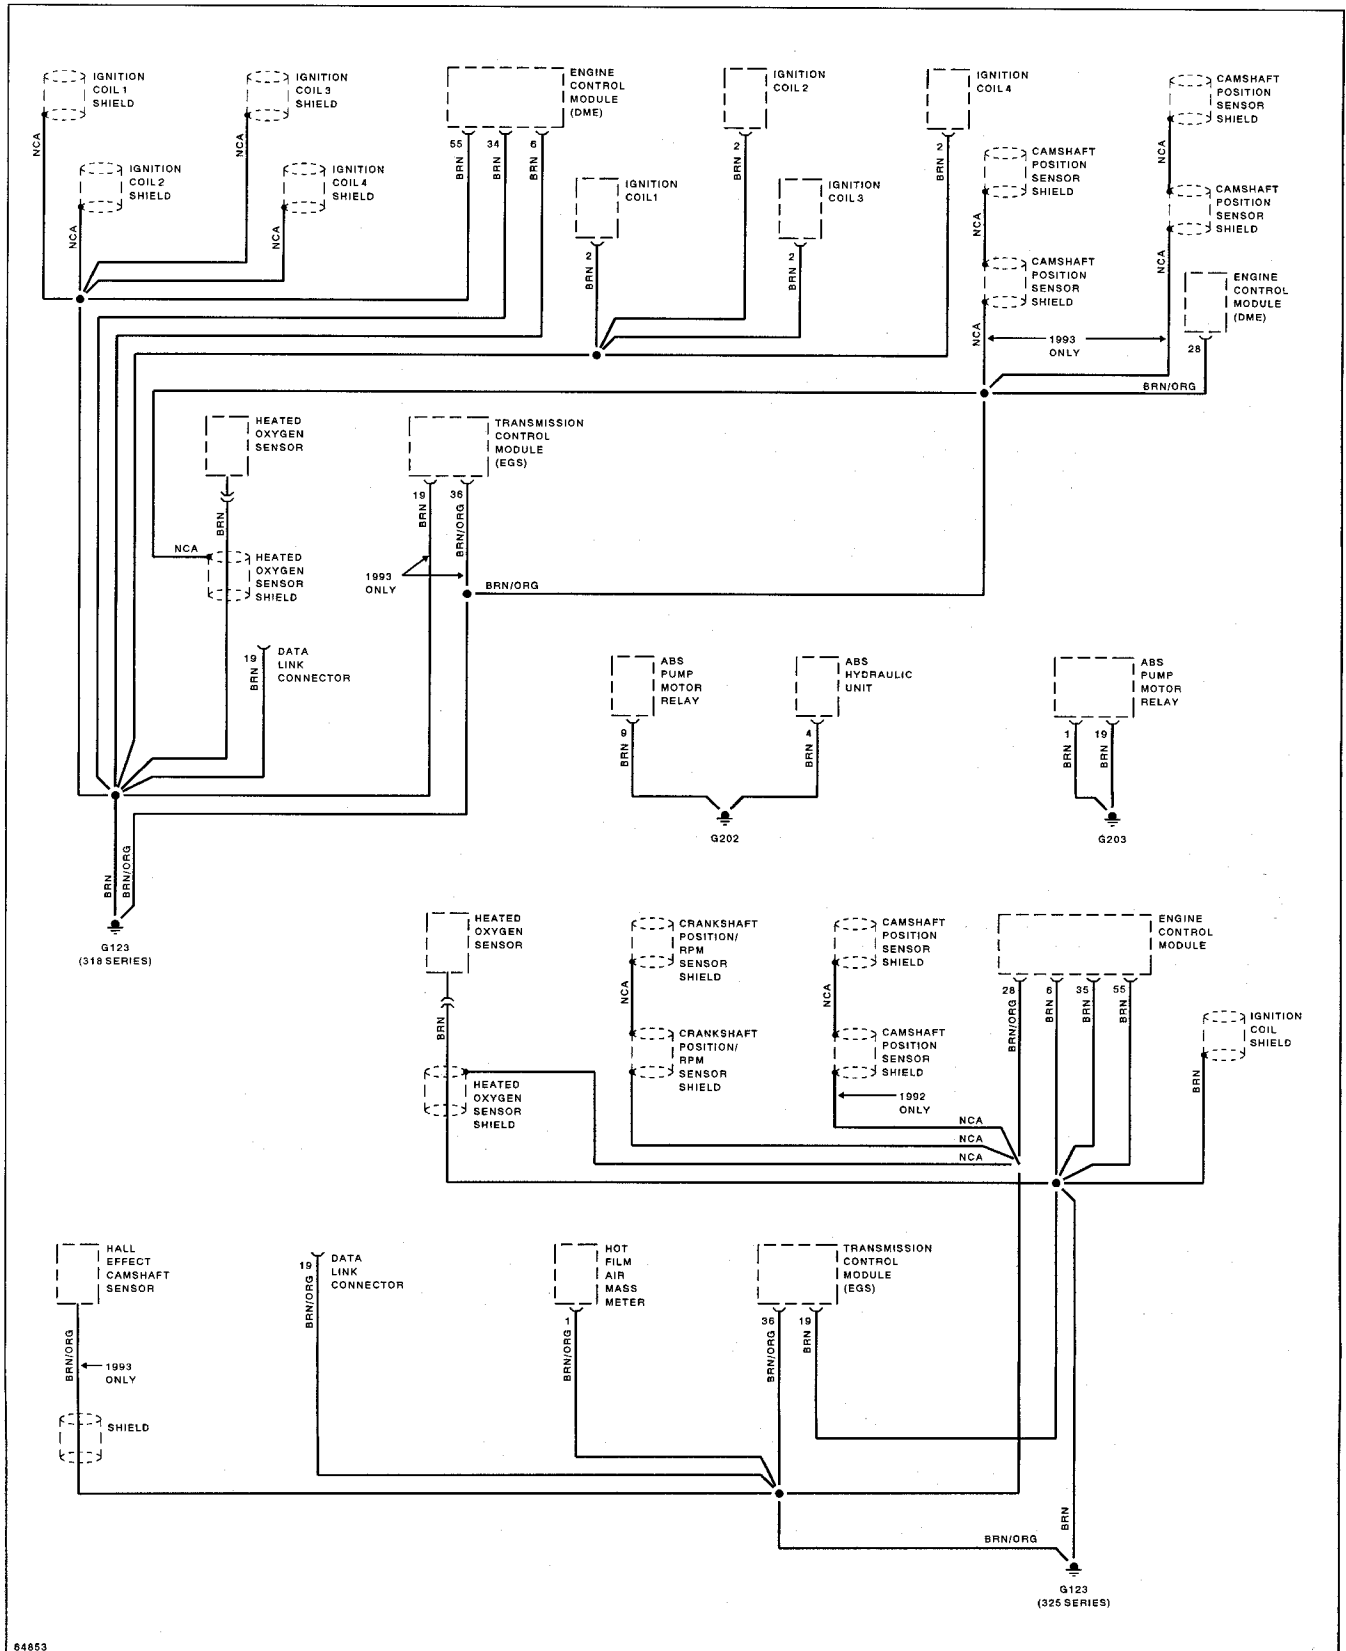


Ground Distribution

1992-93 (4 of 5)

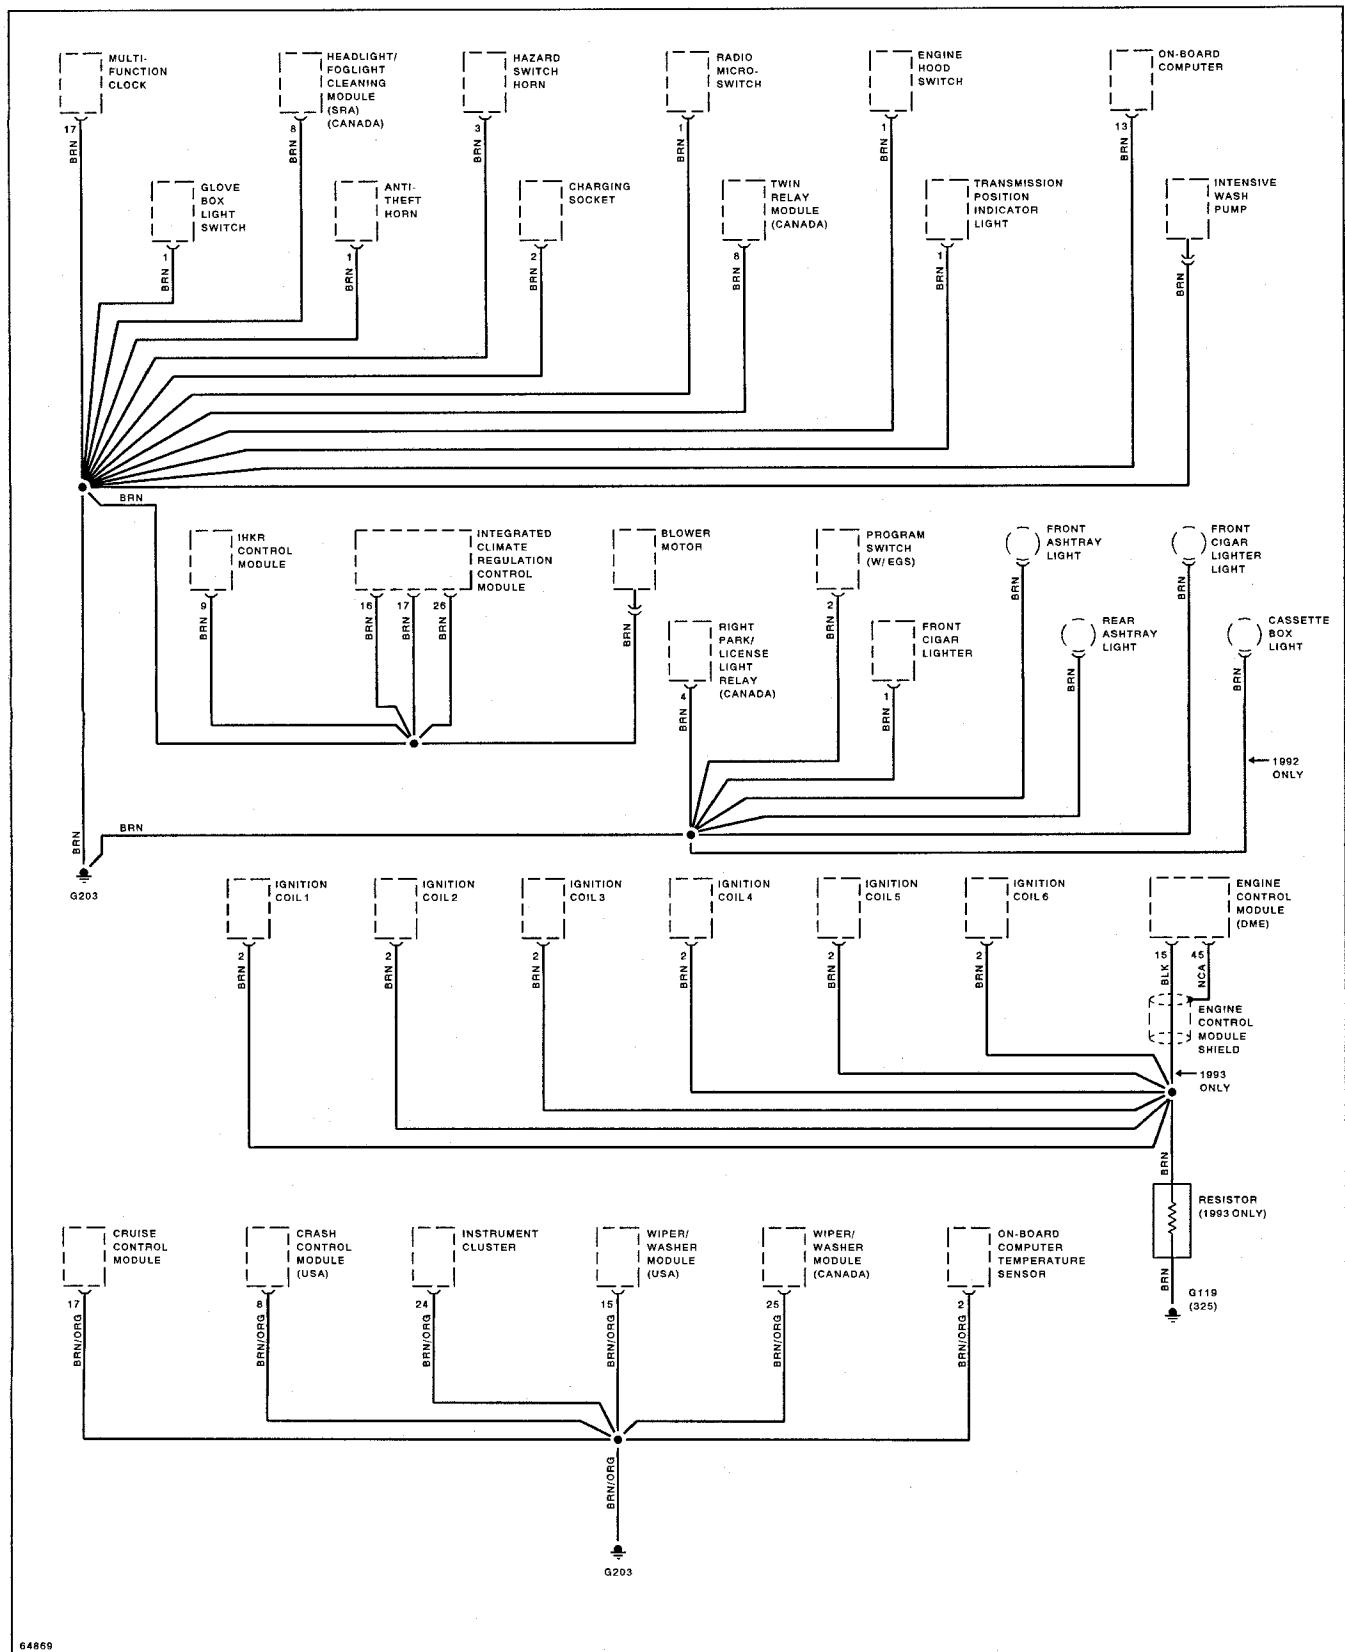


Ground Distribution

1992-93 (5 of 5)

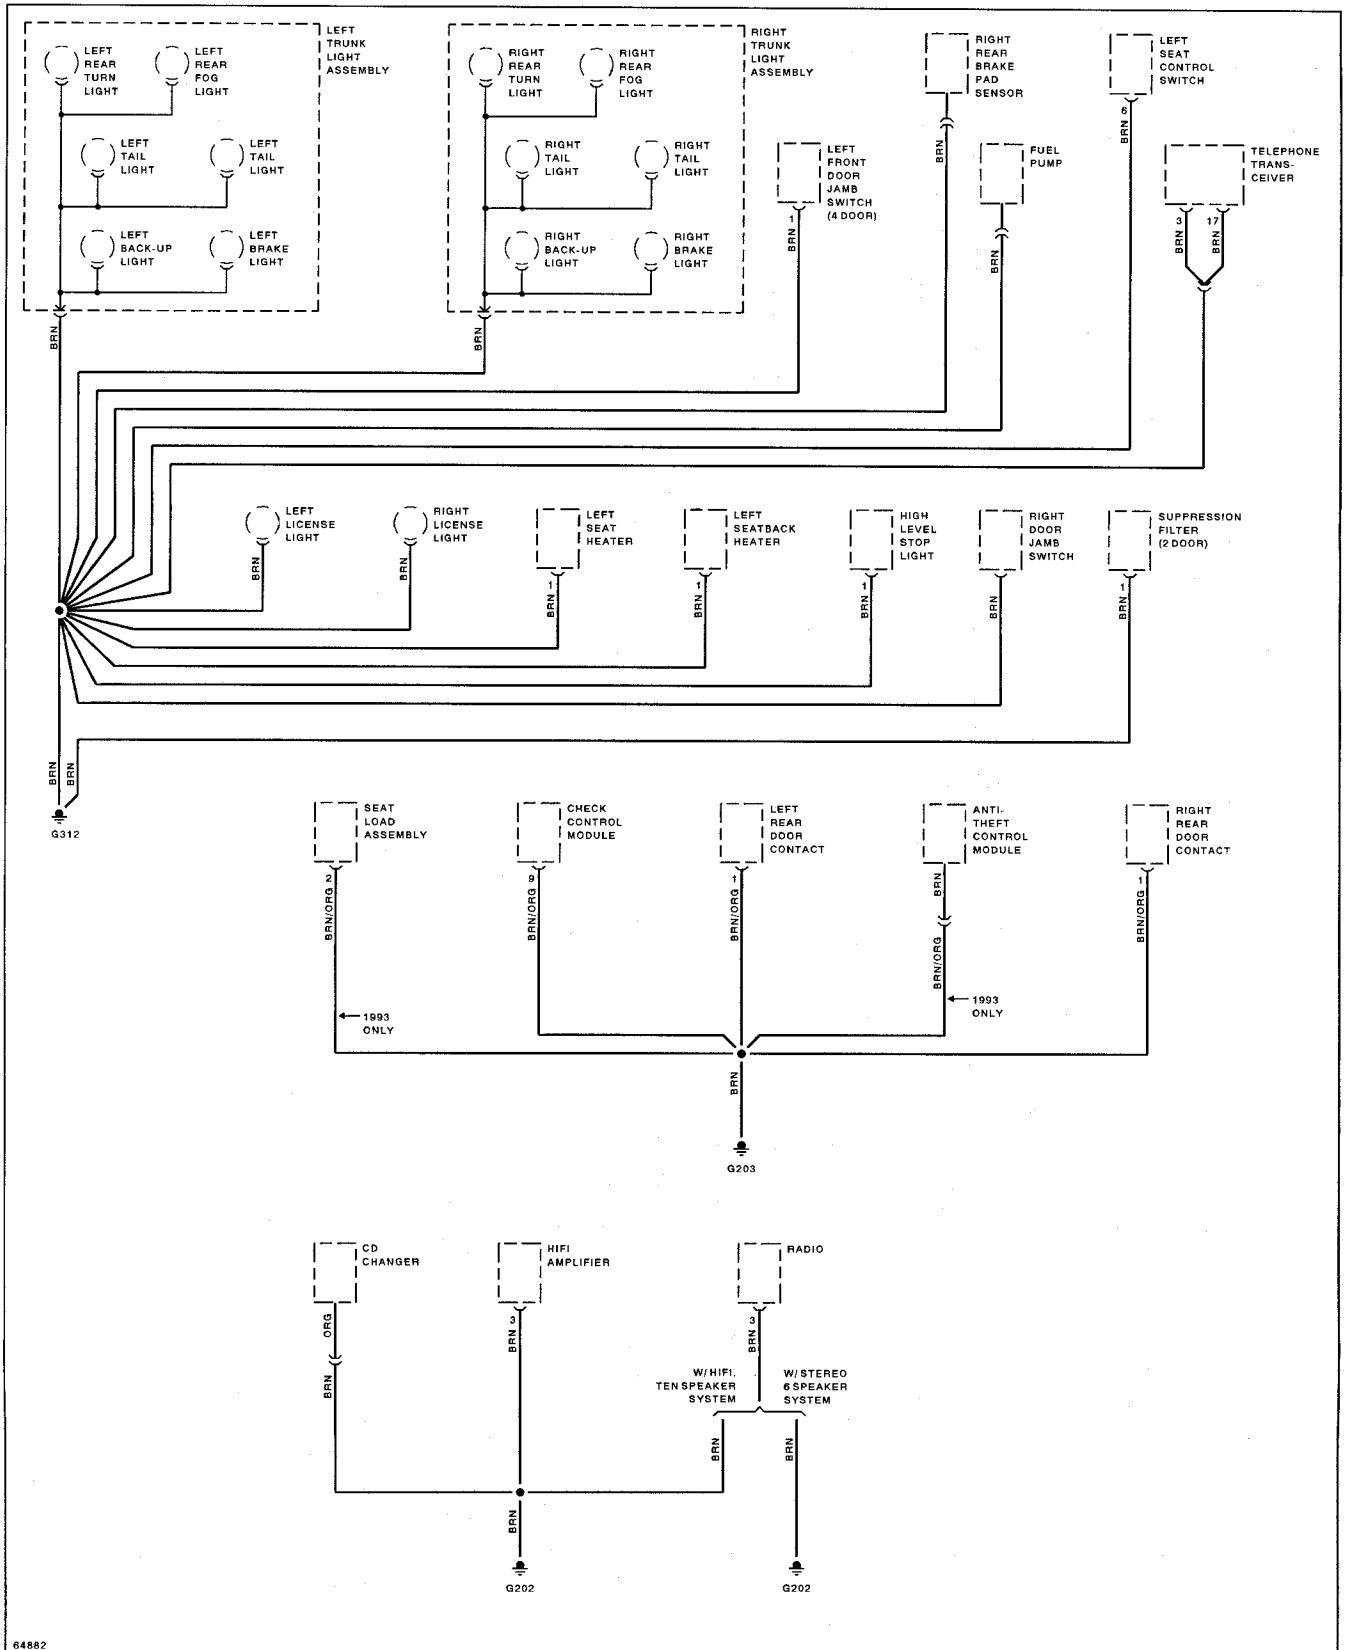


Ground Distribution 1994-95 Except 318ti (1 of 5)

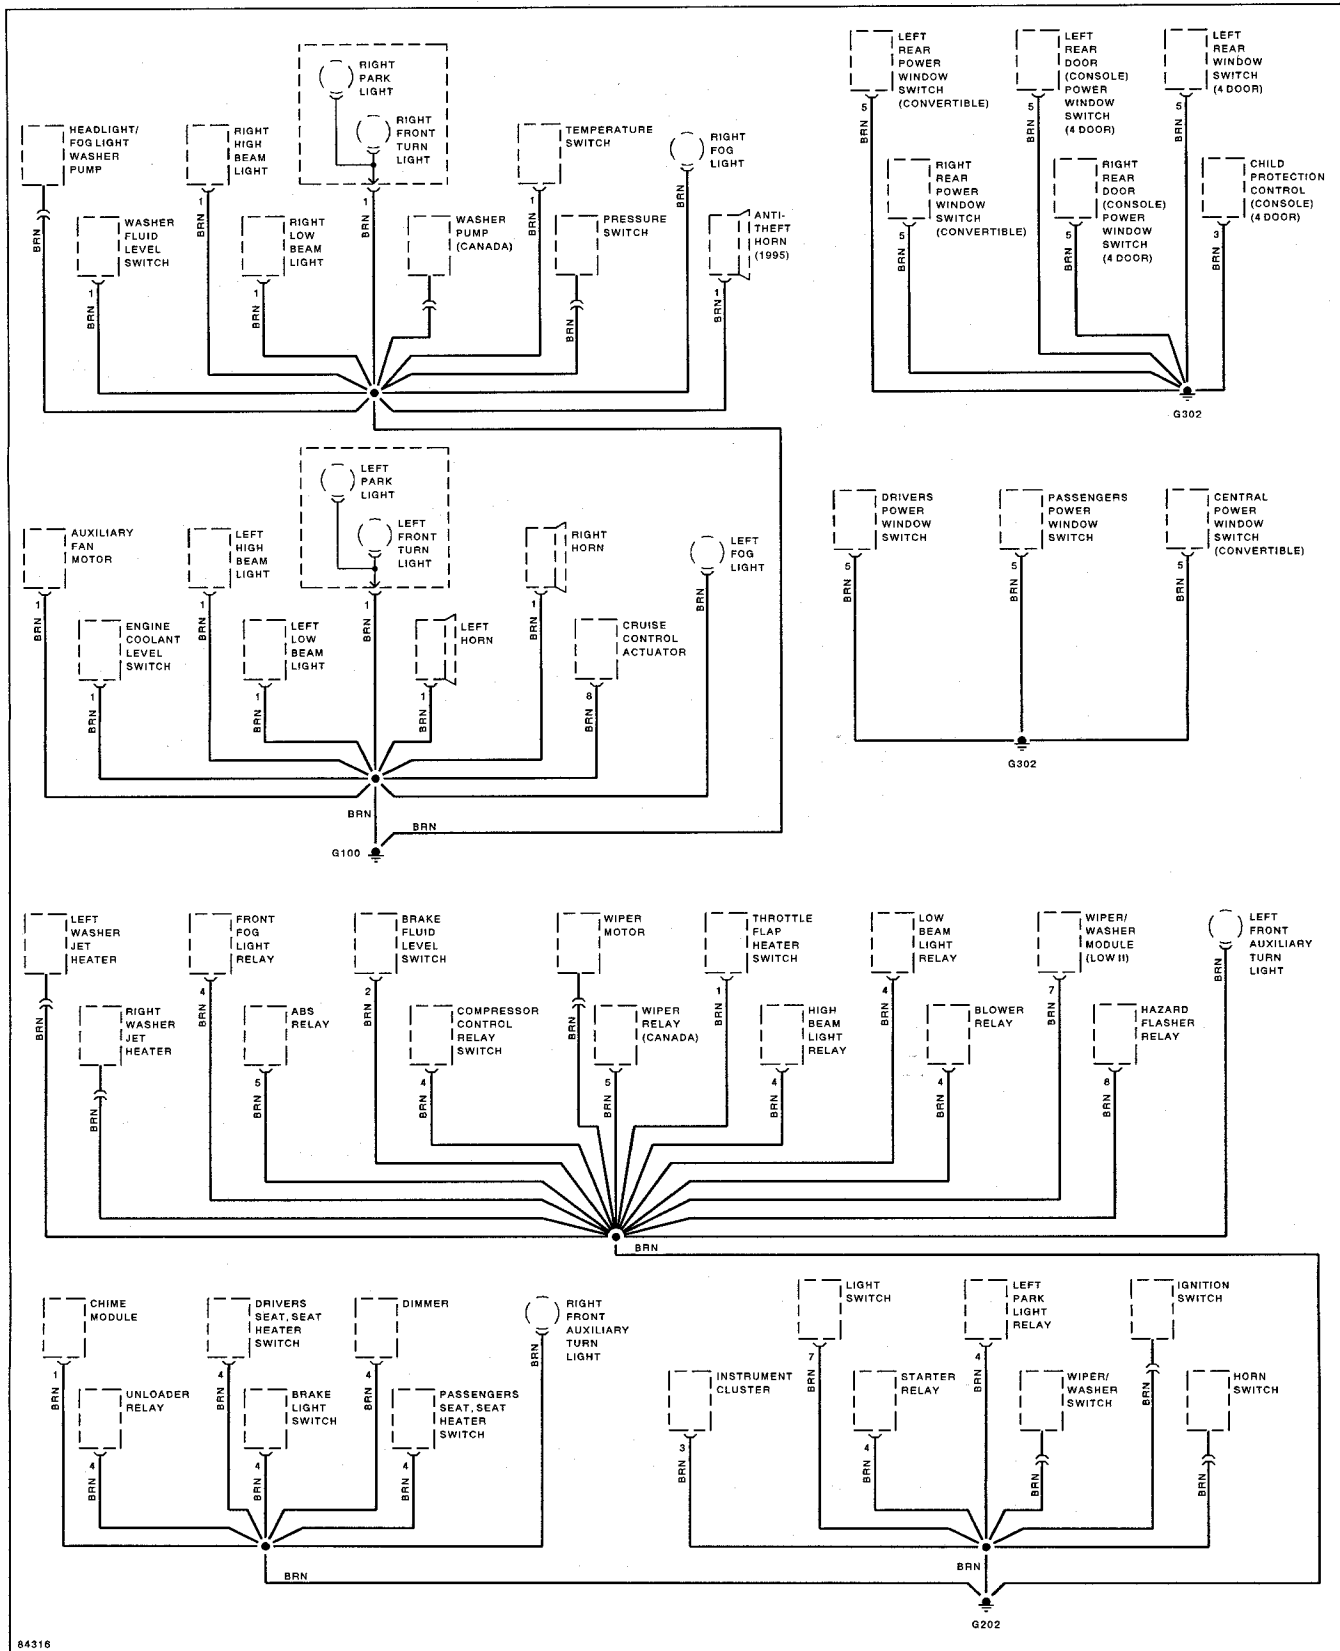


Ground Distribution

1994-95 Except 318ti (2 of 5)

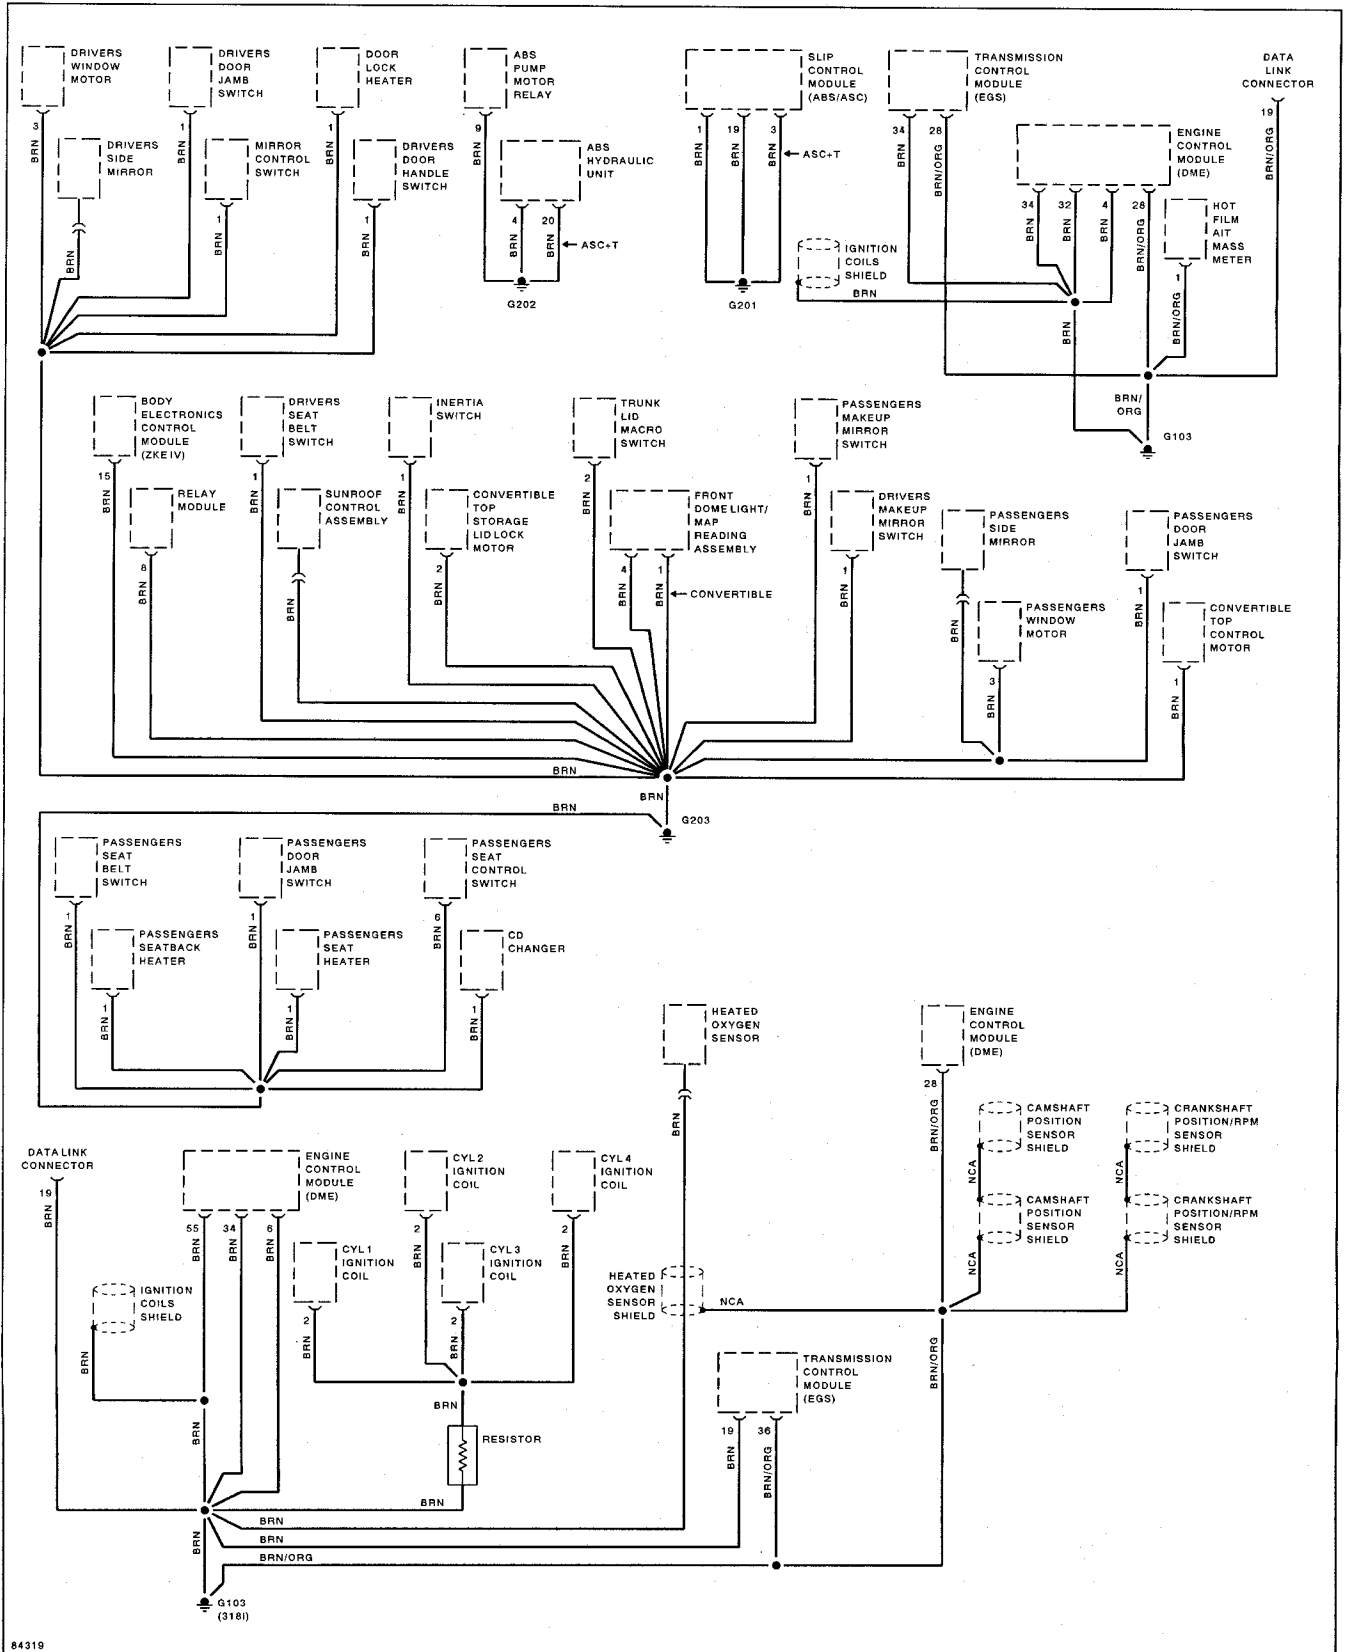


Ground Distribution

1994-95 Except 318ti (3 of 5)

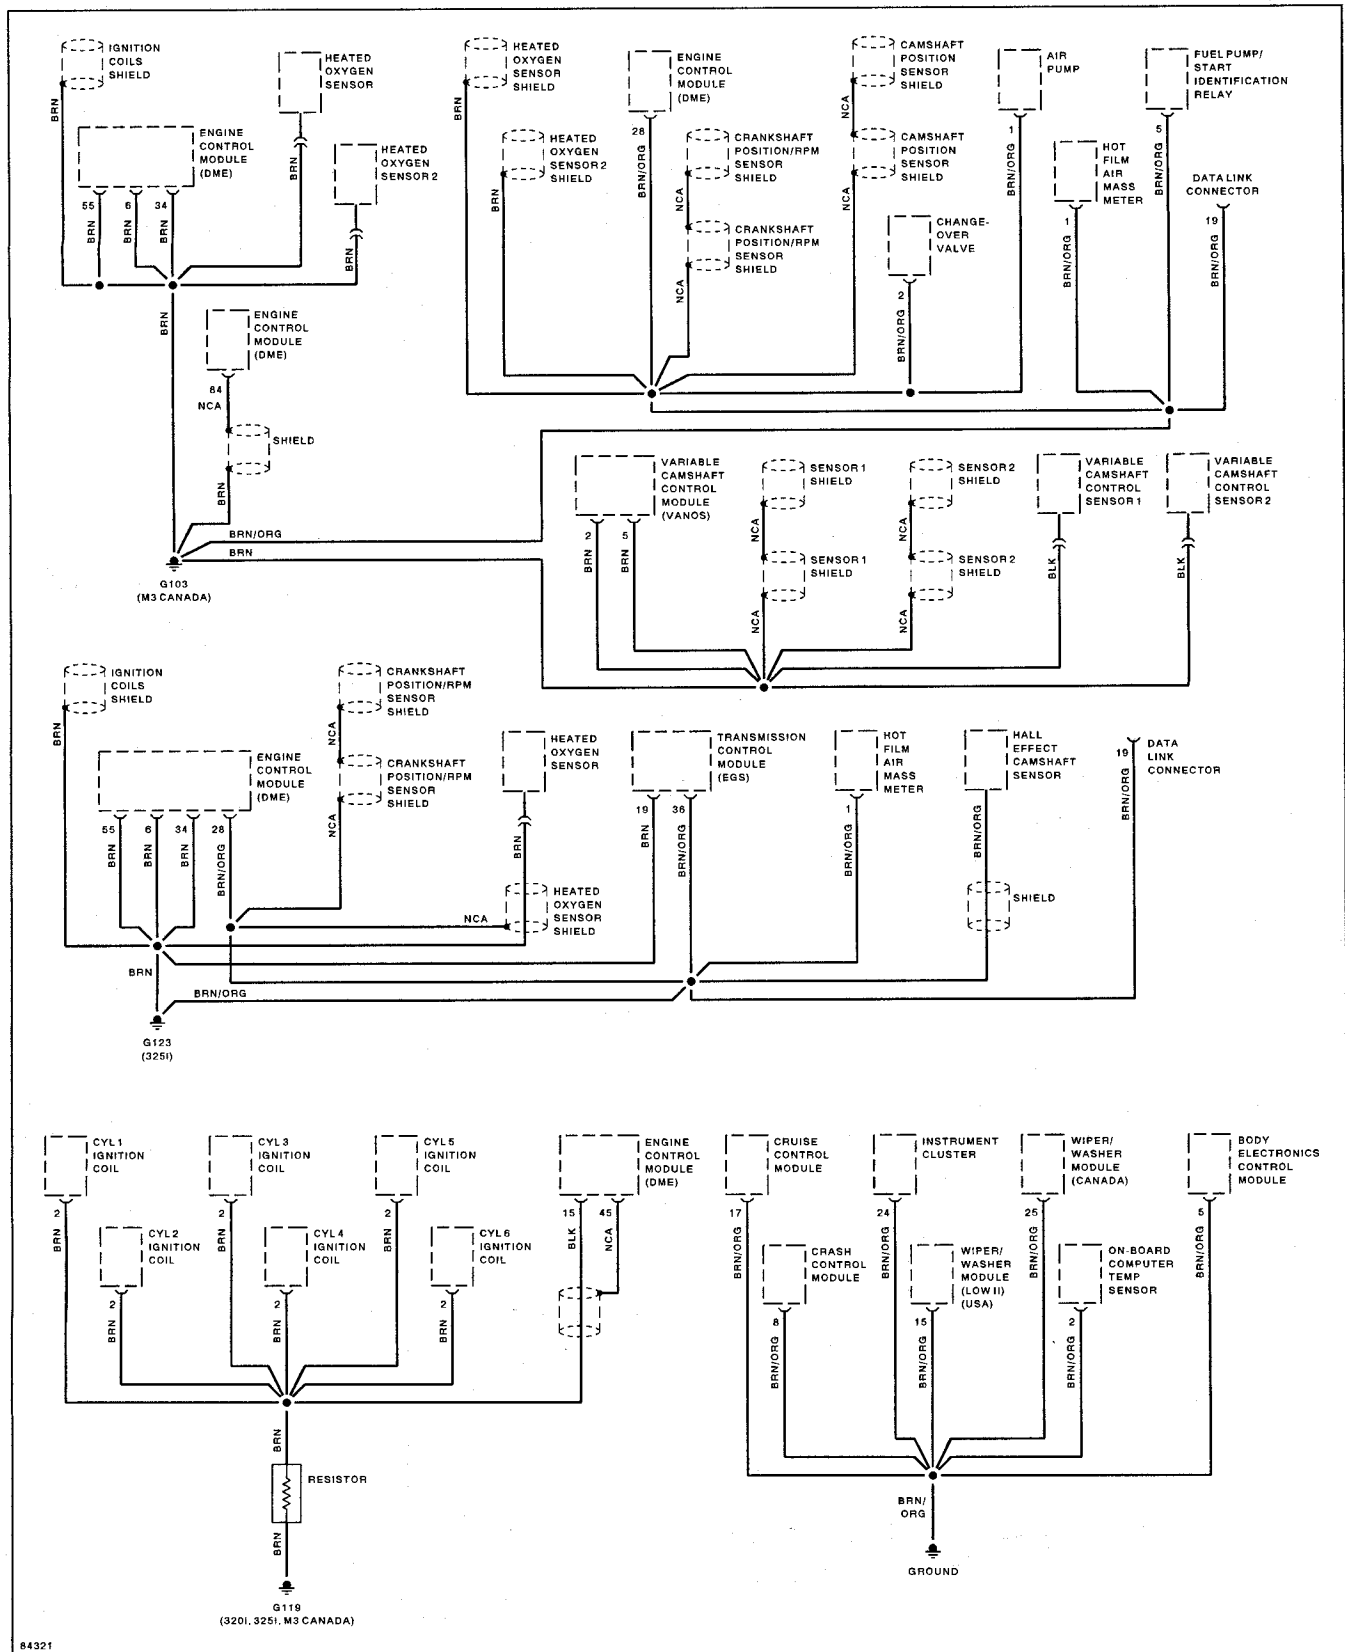


Ground Distribution

1994-95 Except 318ti (4 of 5)

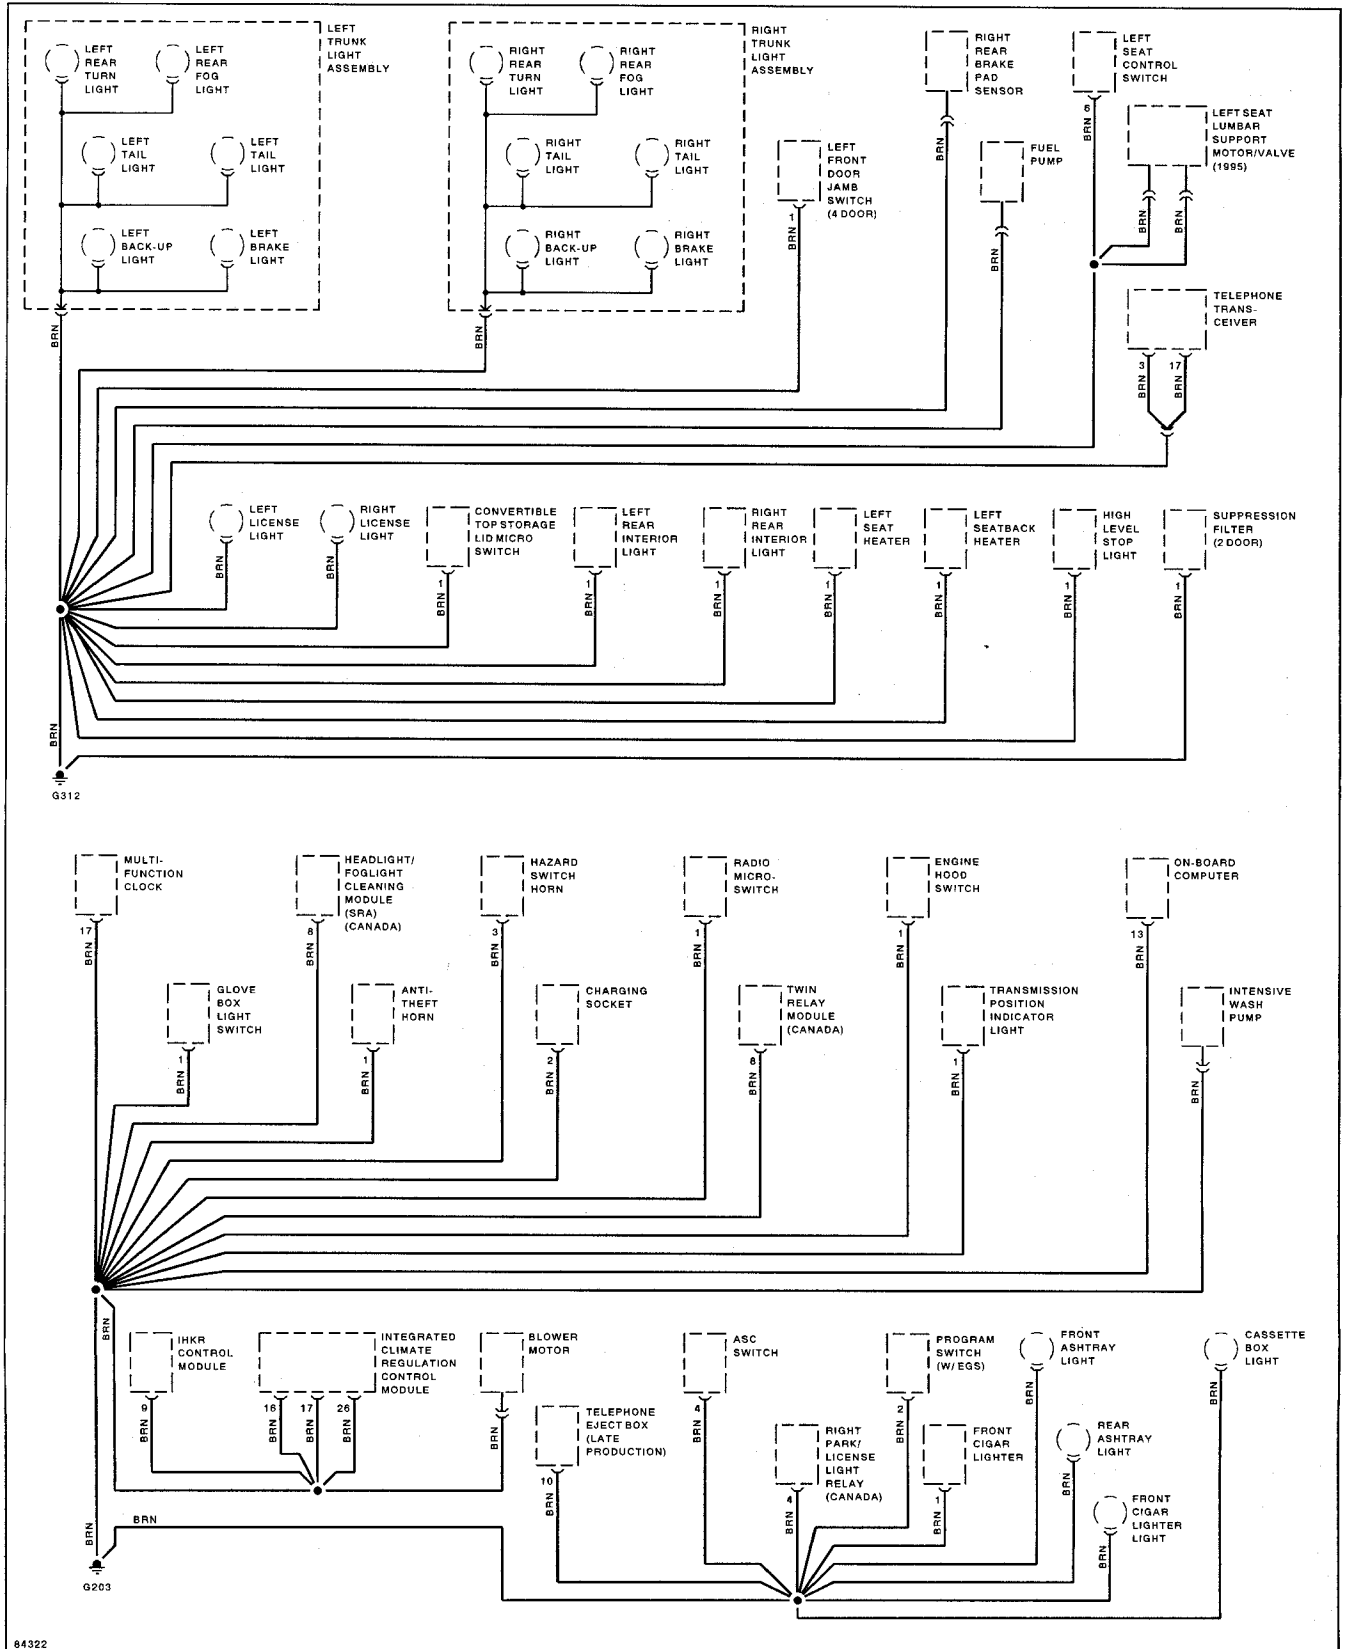


Ground Distribution 1994-95 Except 318ti (5 of 5)

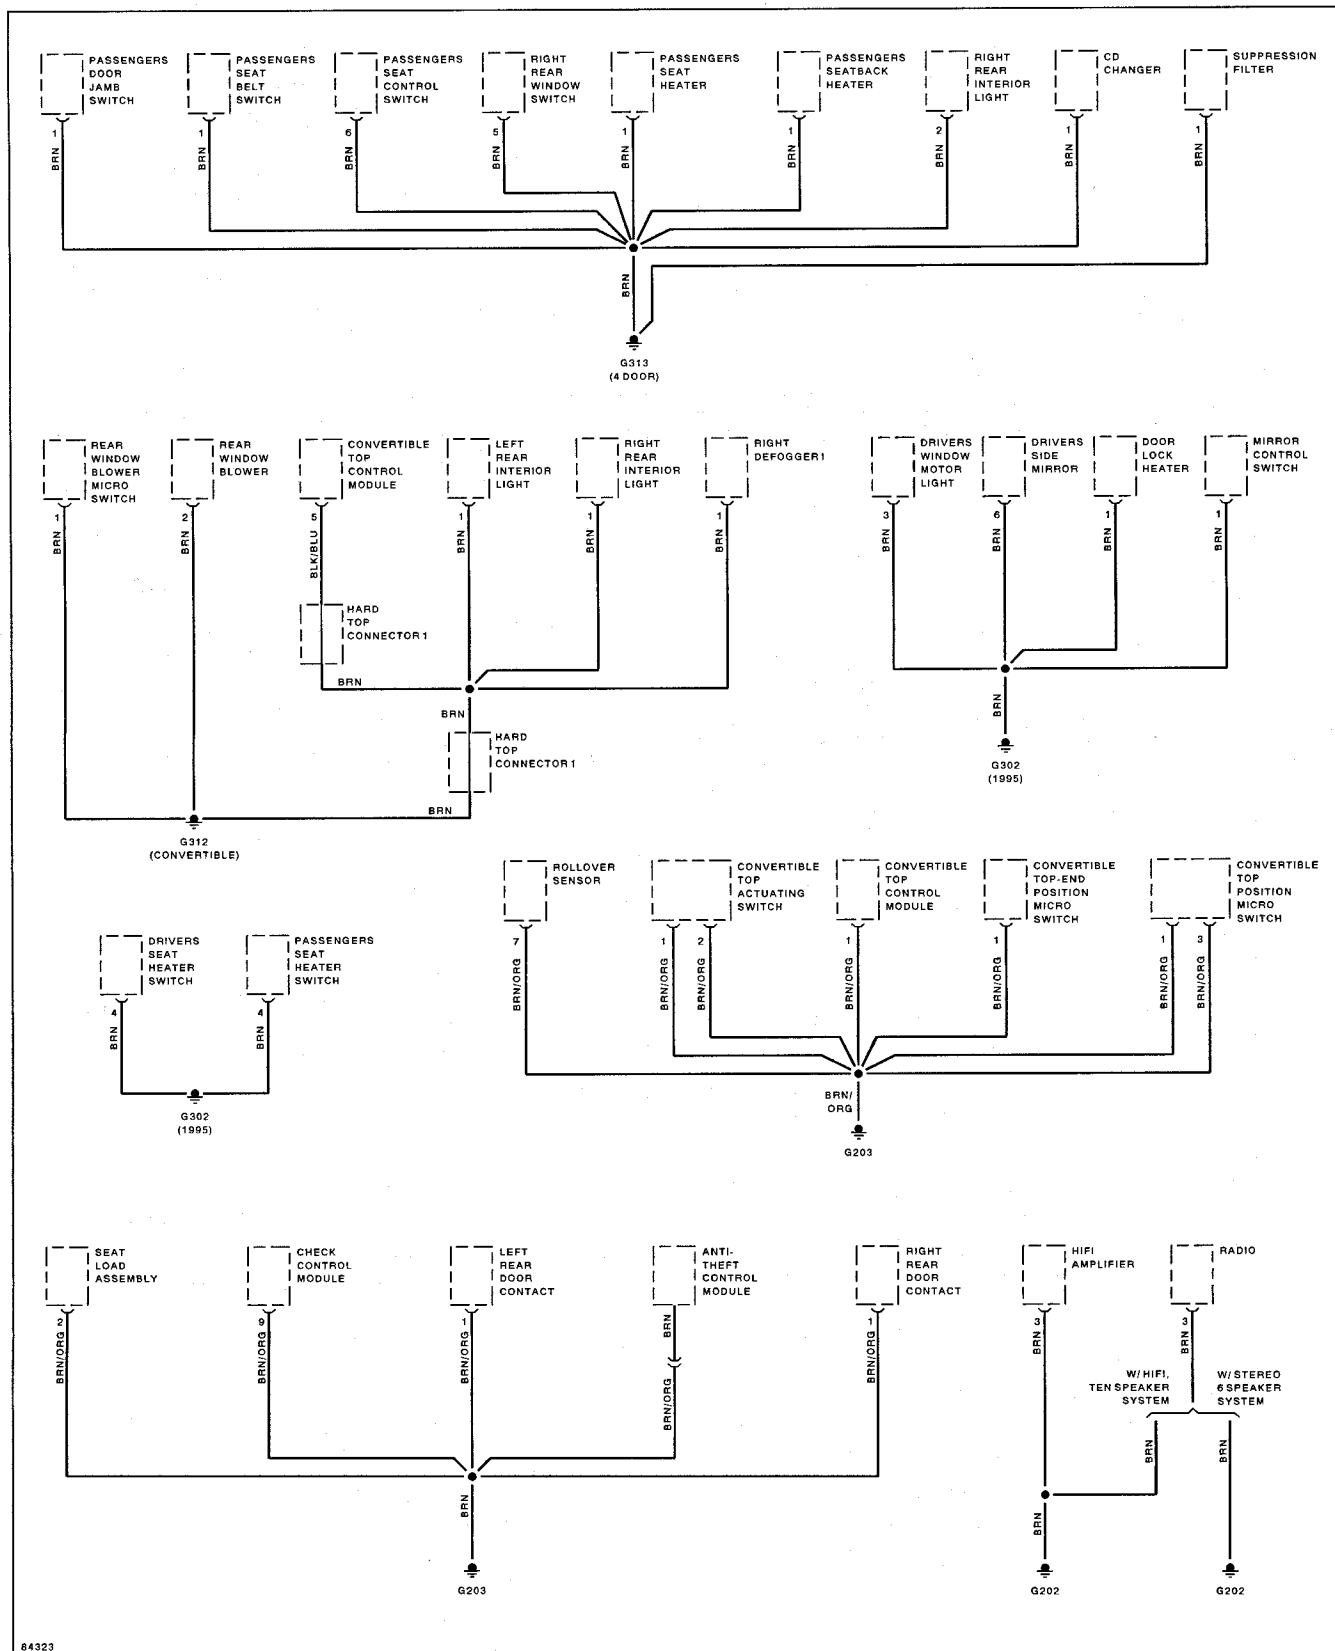


Ground Distribution

1996-97 Except 318ti (1 of 5)

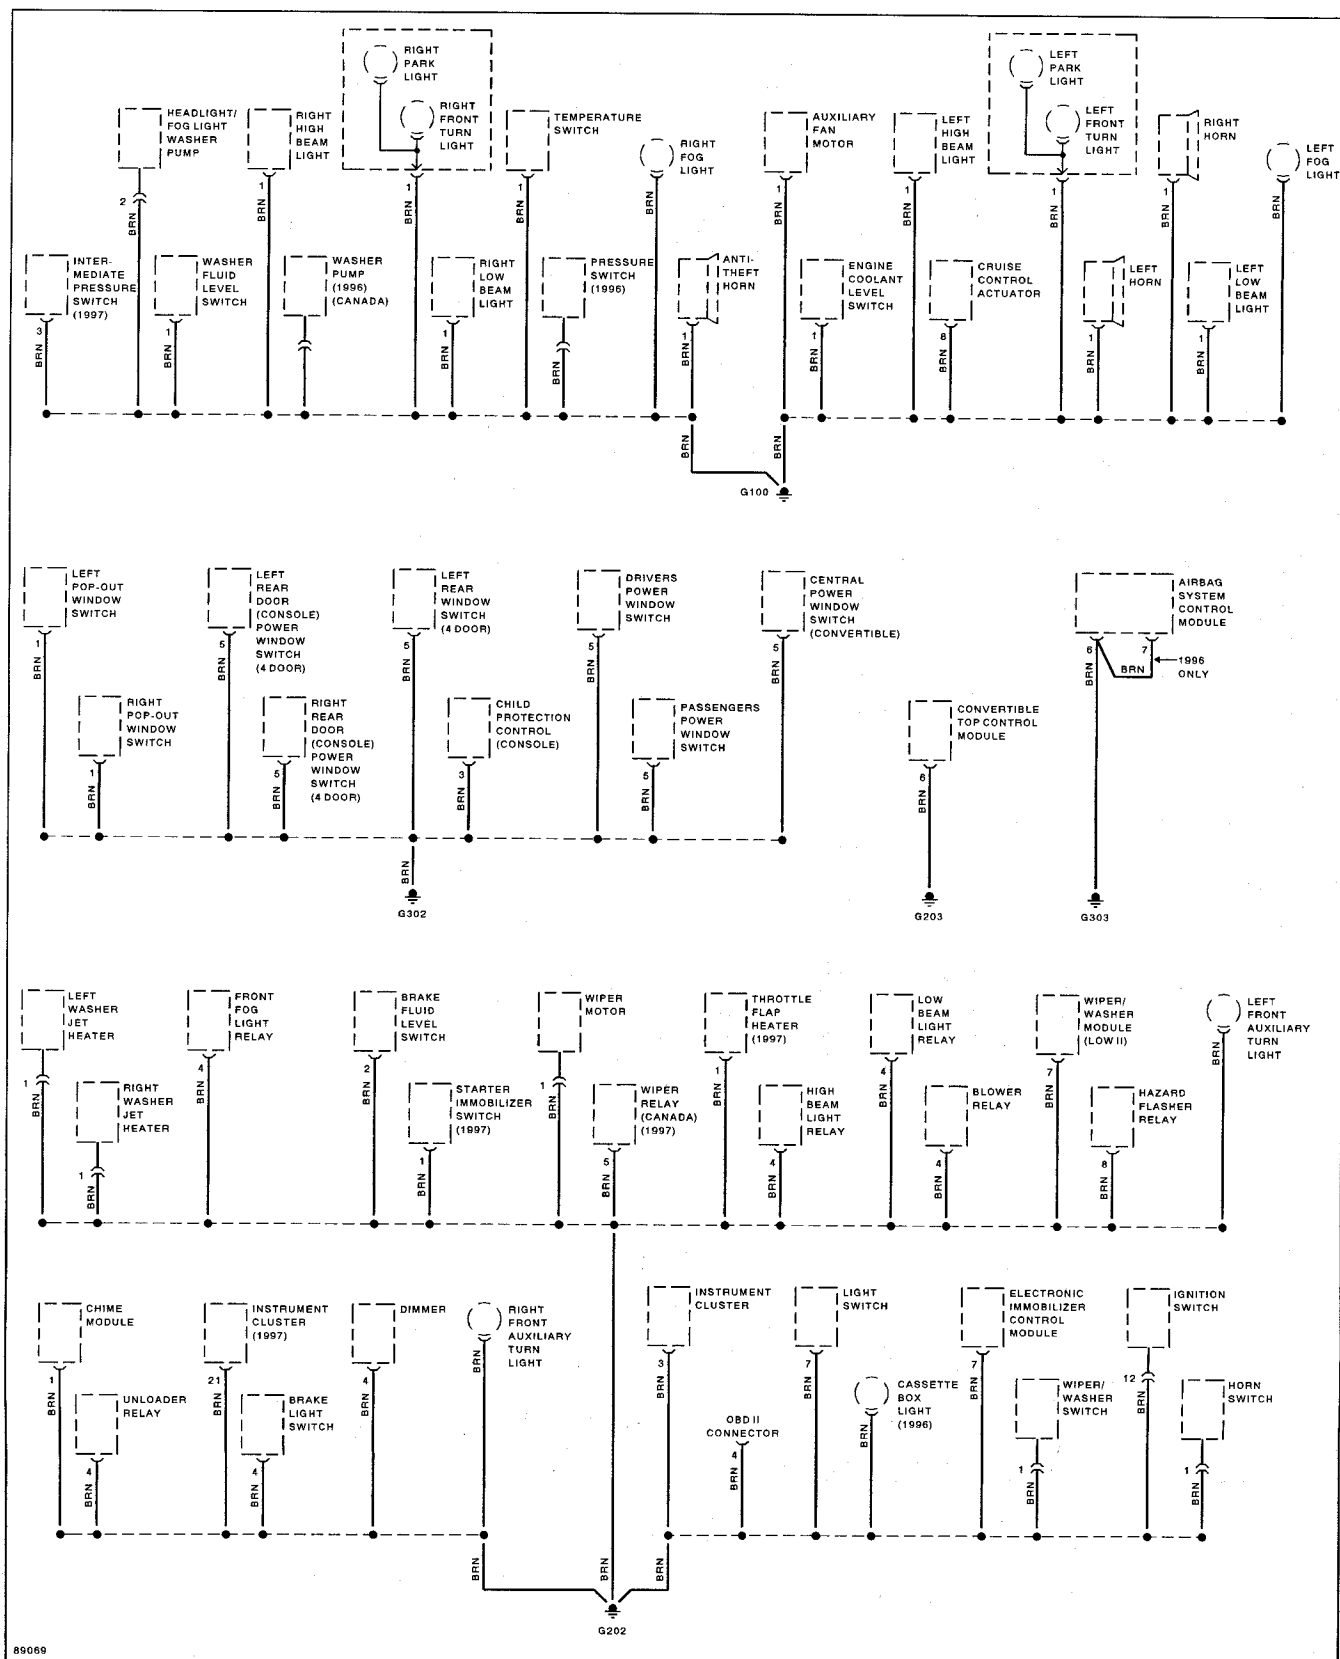


Ground Distribution

1996-97 Except 318ti (2 of 5)

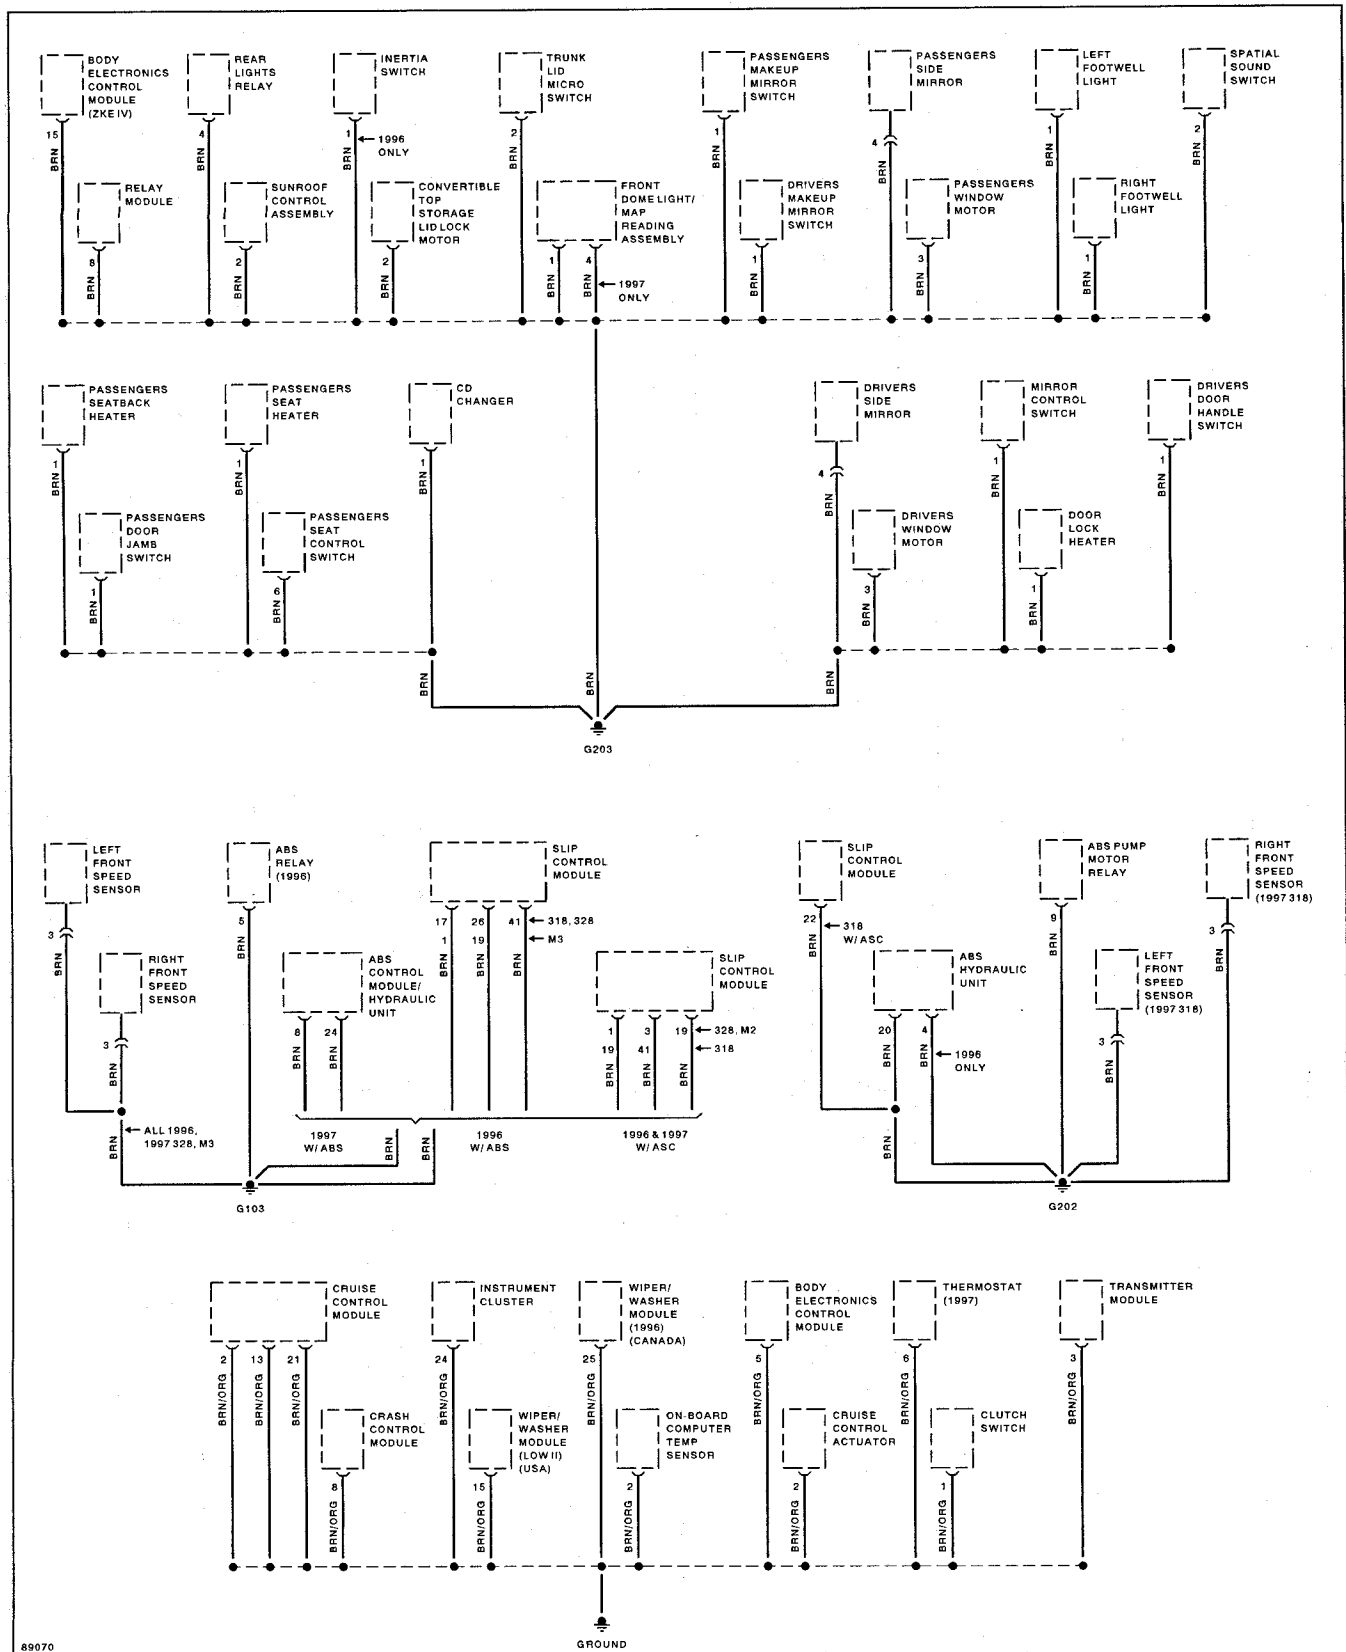


Ground Distribution

1996-97 Except 318ti (3 of 5)

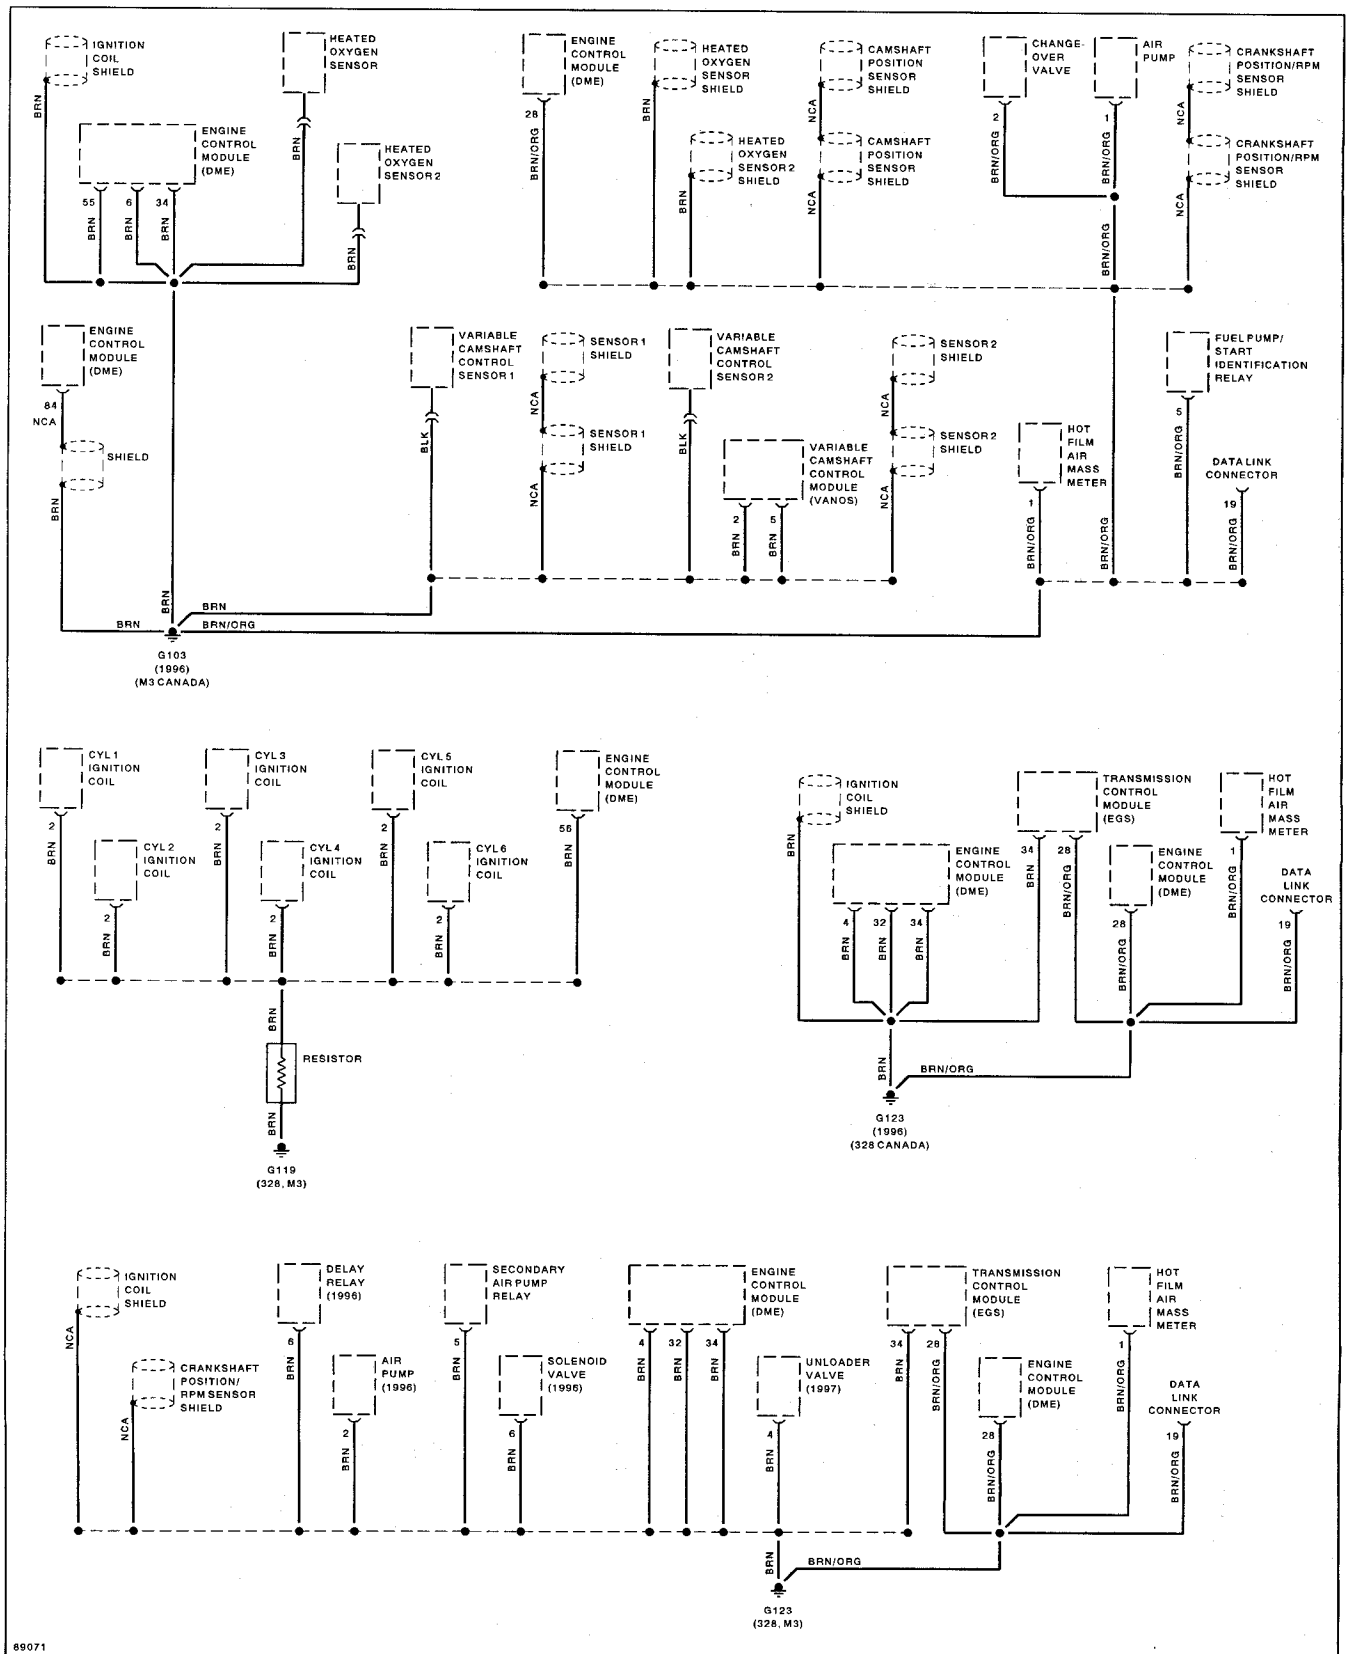


Ground Distribution 1996-97 Except 318ti (4 of 5)

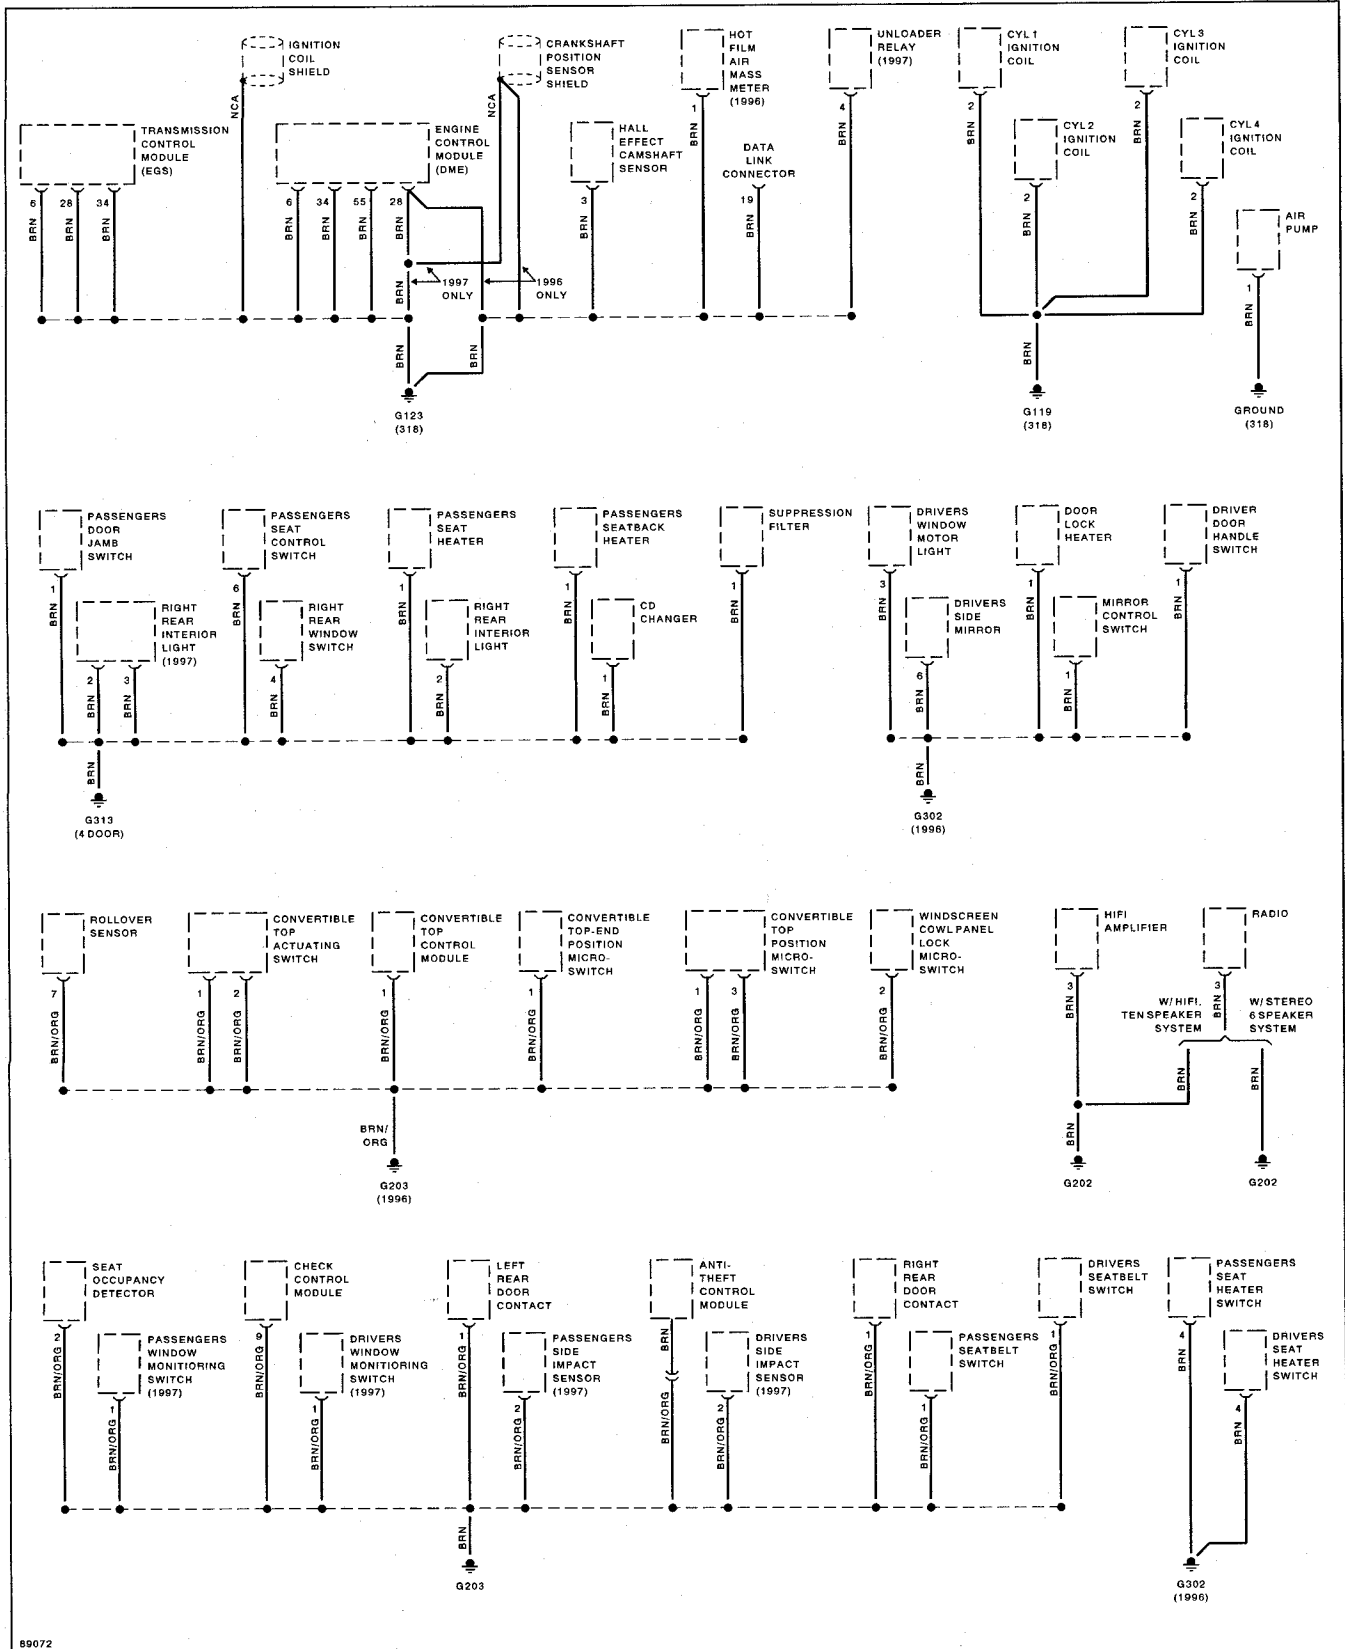


Ground Distribution

1996-97 Except 318ti (5 of 5)

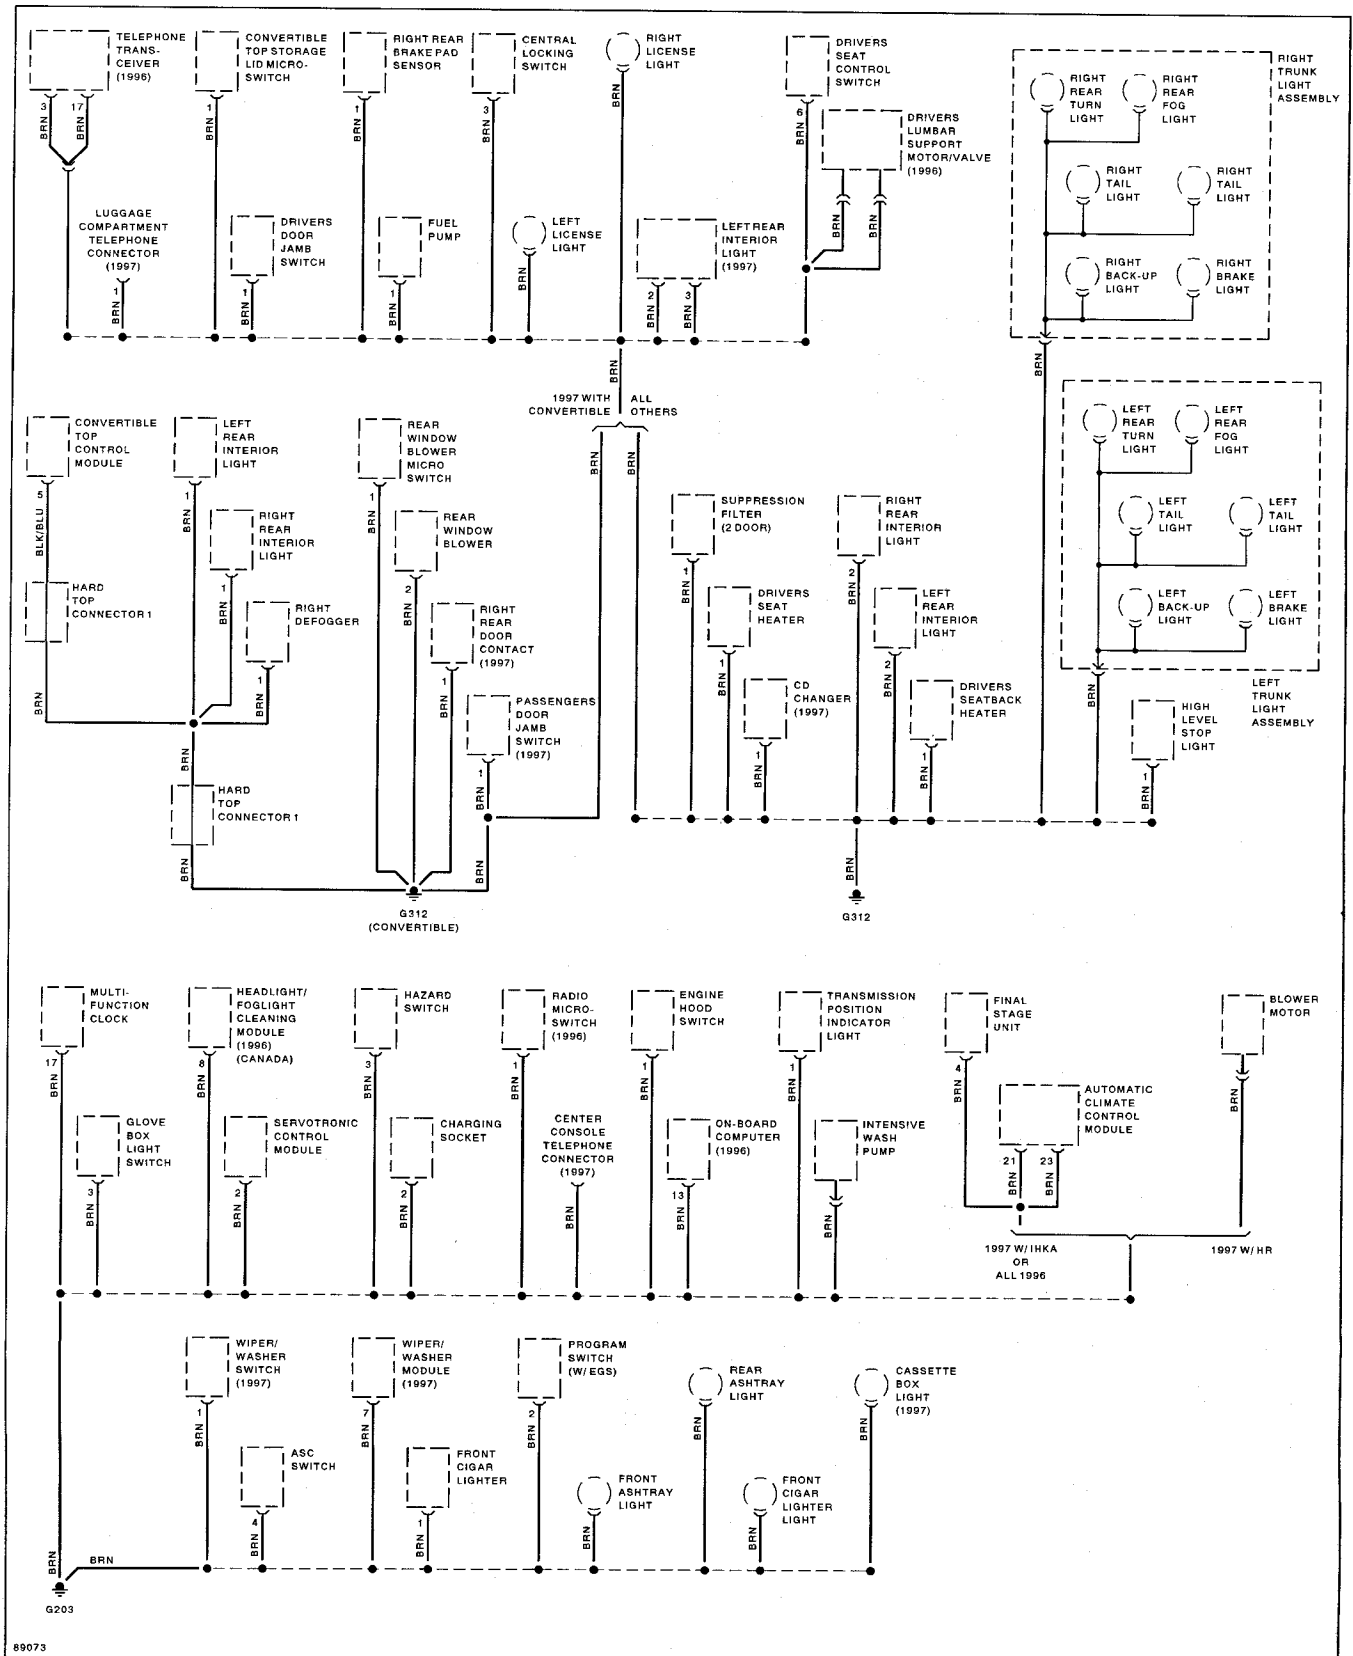


Ground Distribution

1998 Except 318ti (1 of 4)

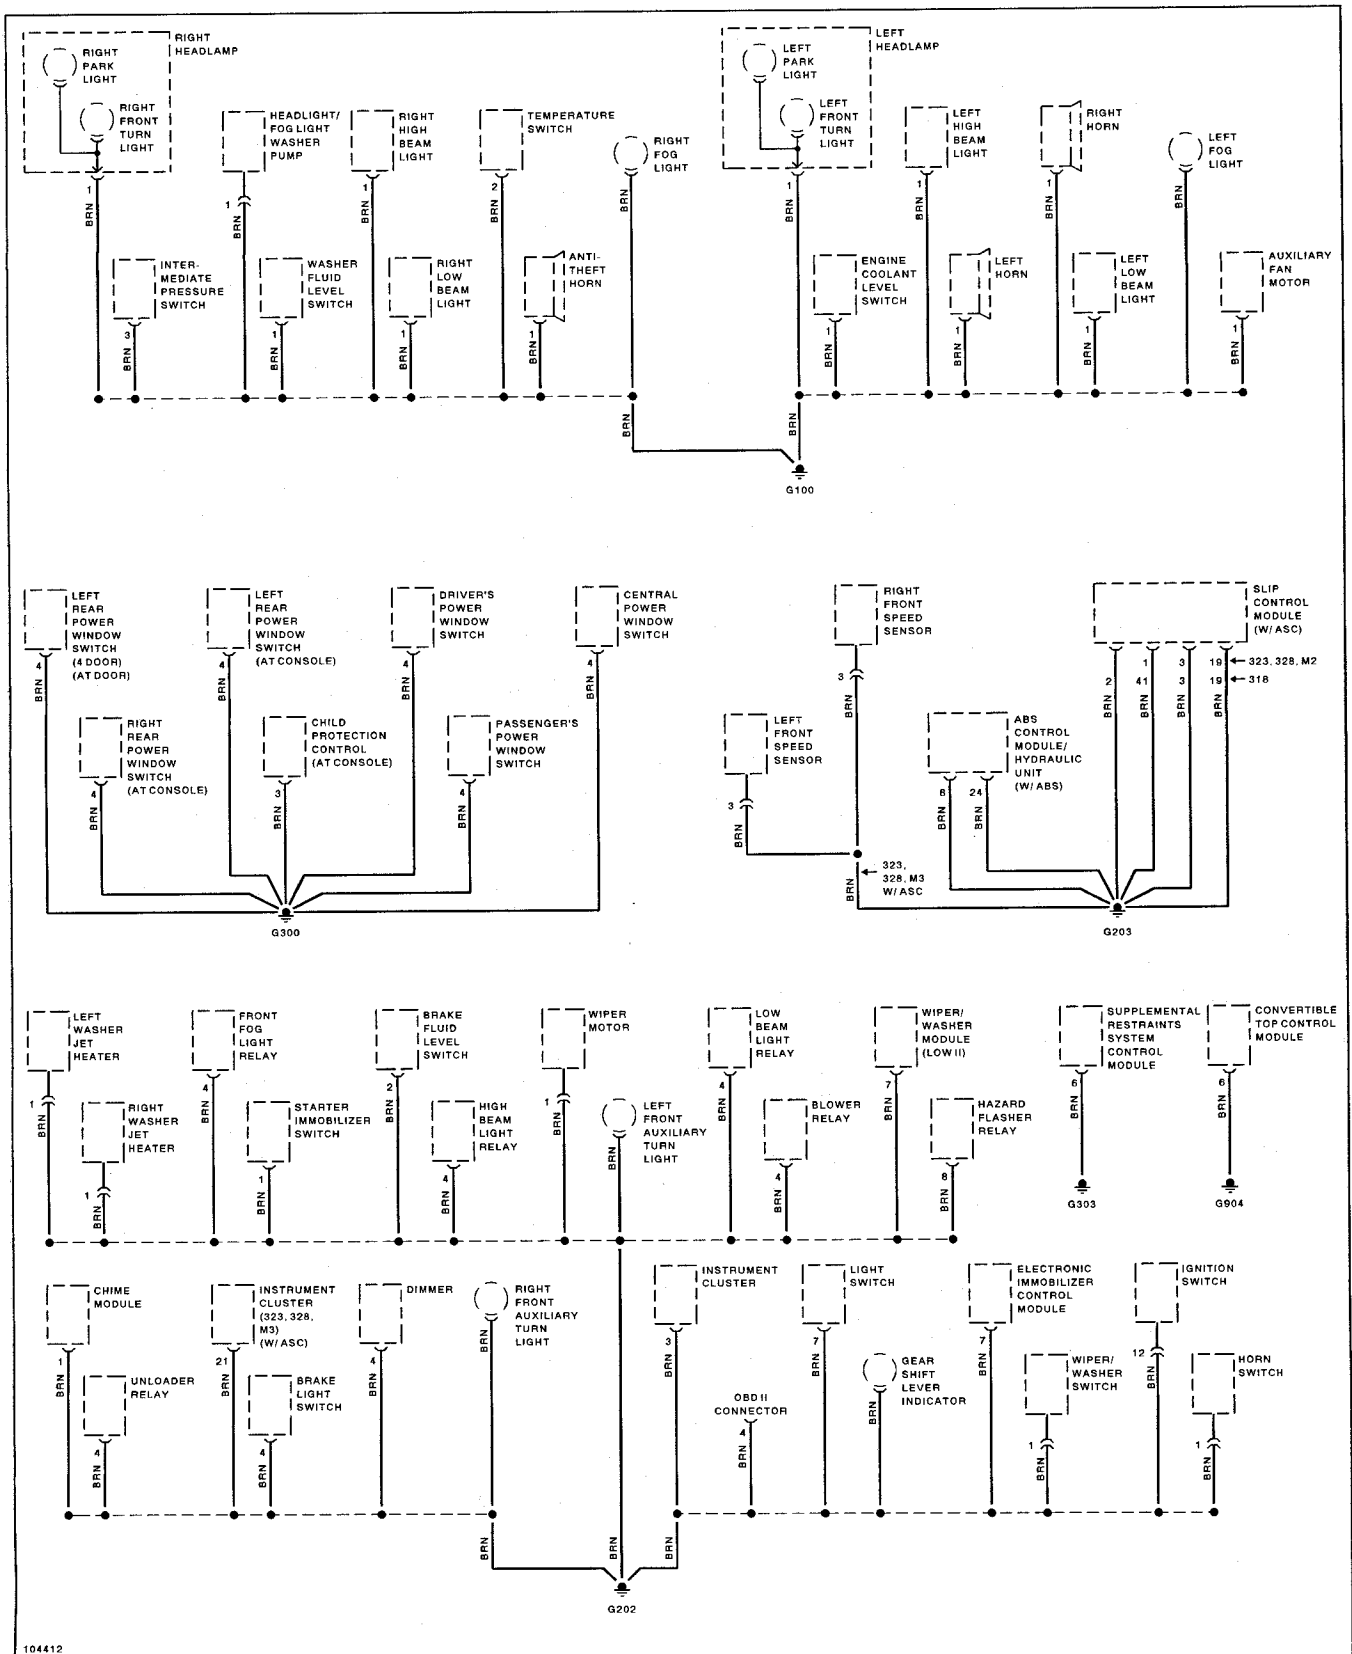


Ground Distribution

1998 Except 318ti (2 of 4)

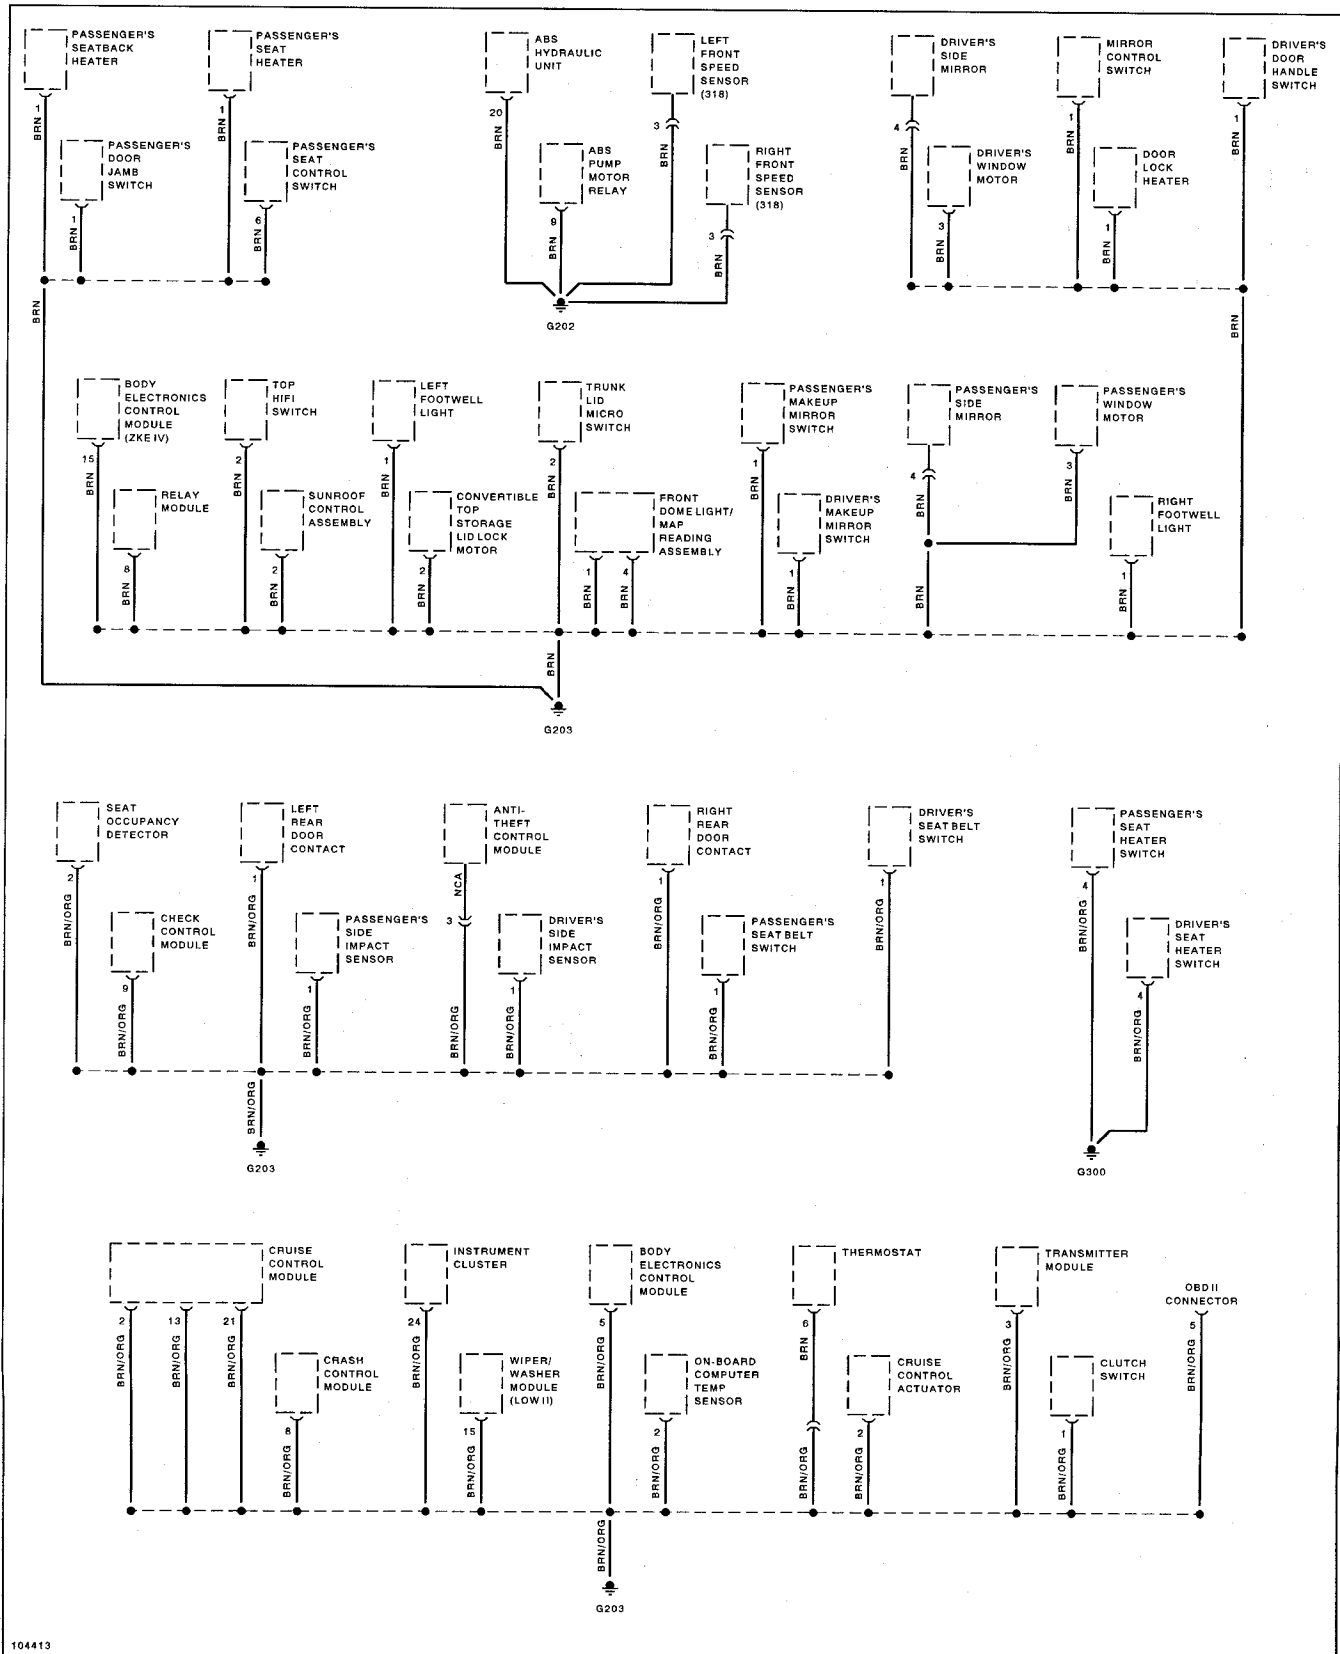


Ground Distribution

1998 Except 318ti (3 of 4)

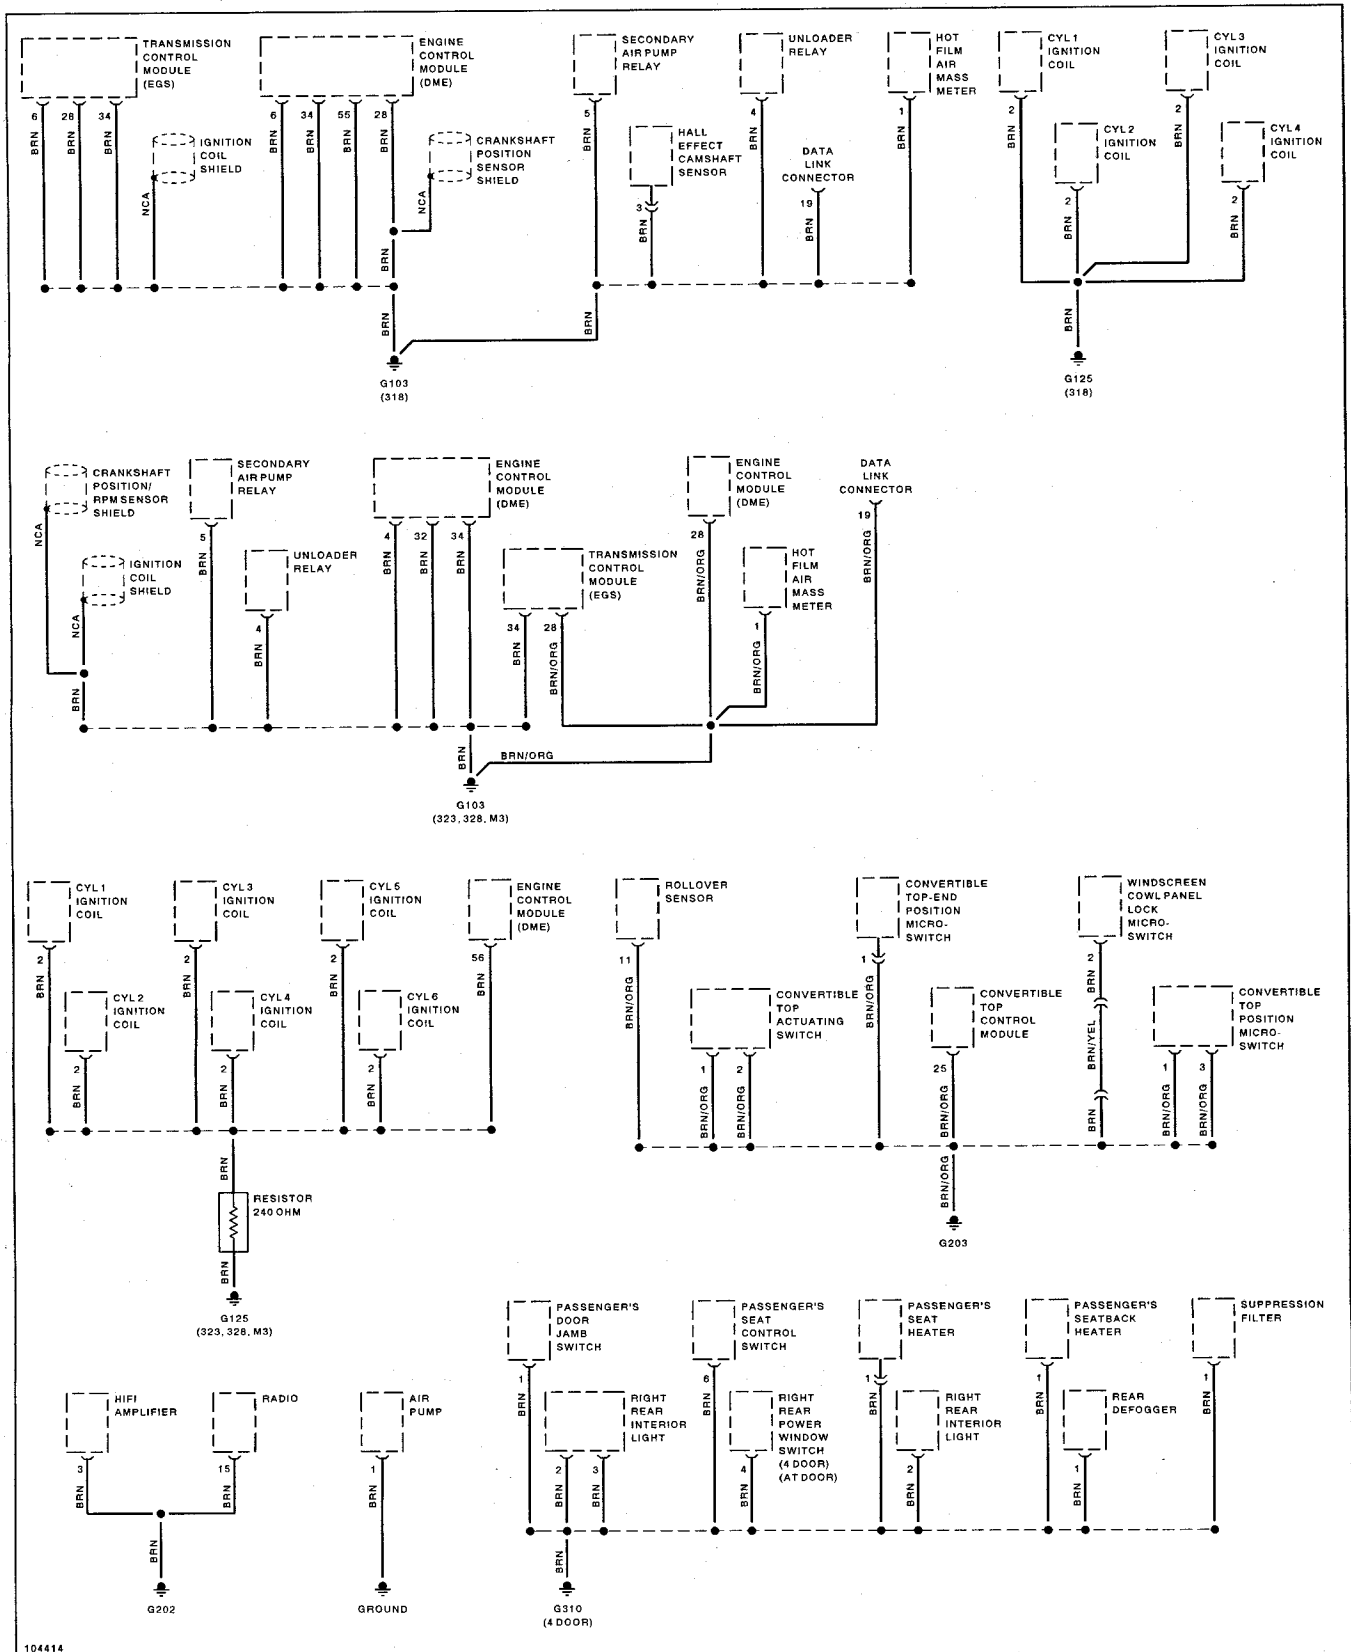


Ground Distribution

1998 Except 318ti (4 of 4)

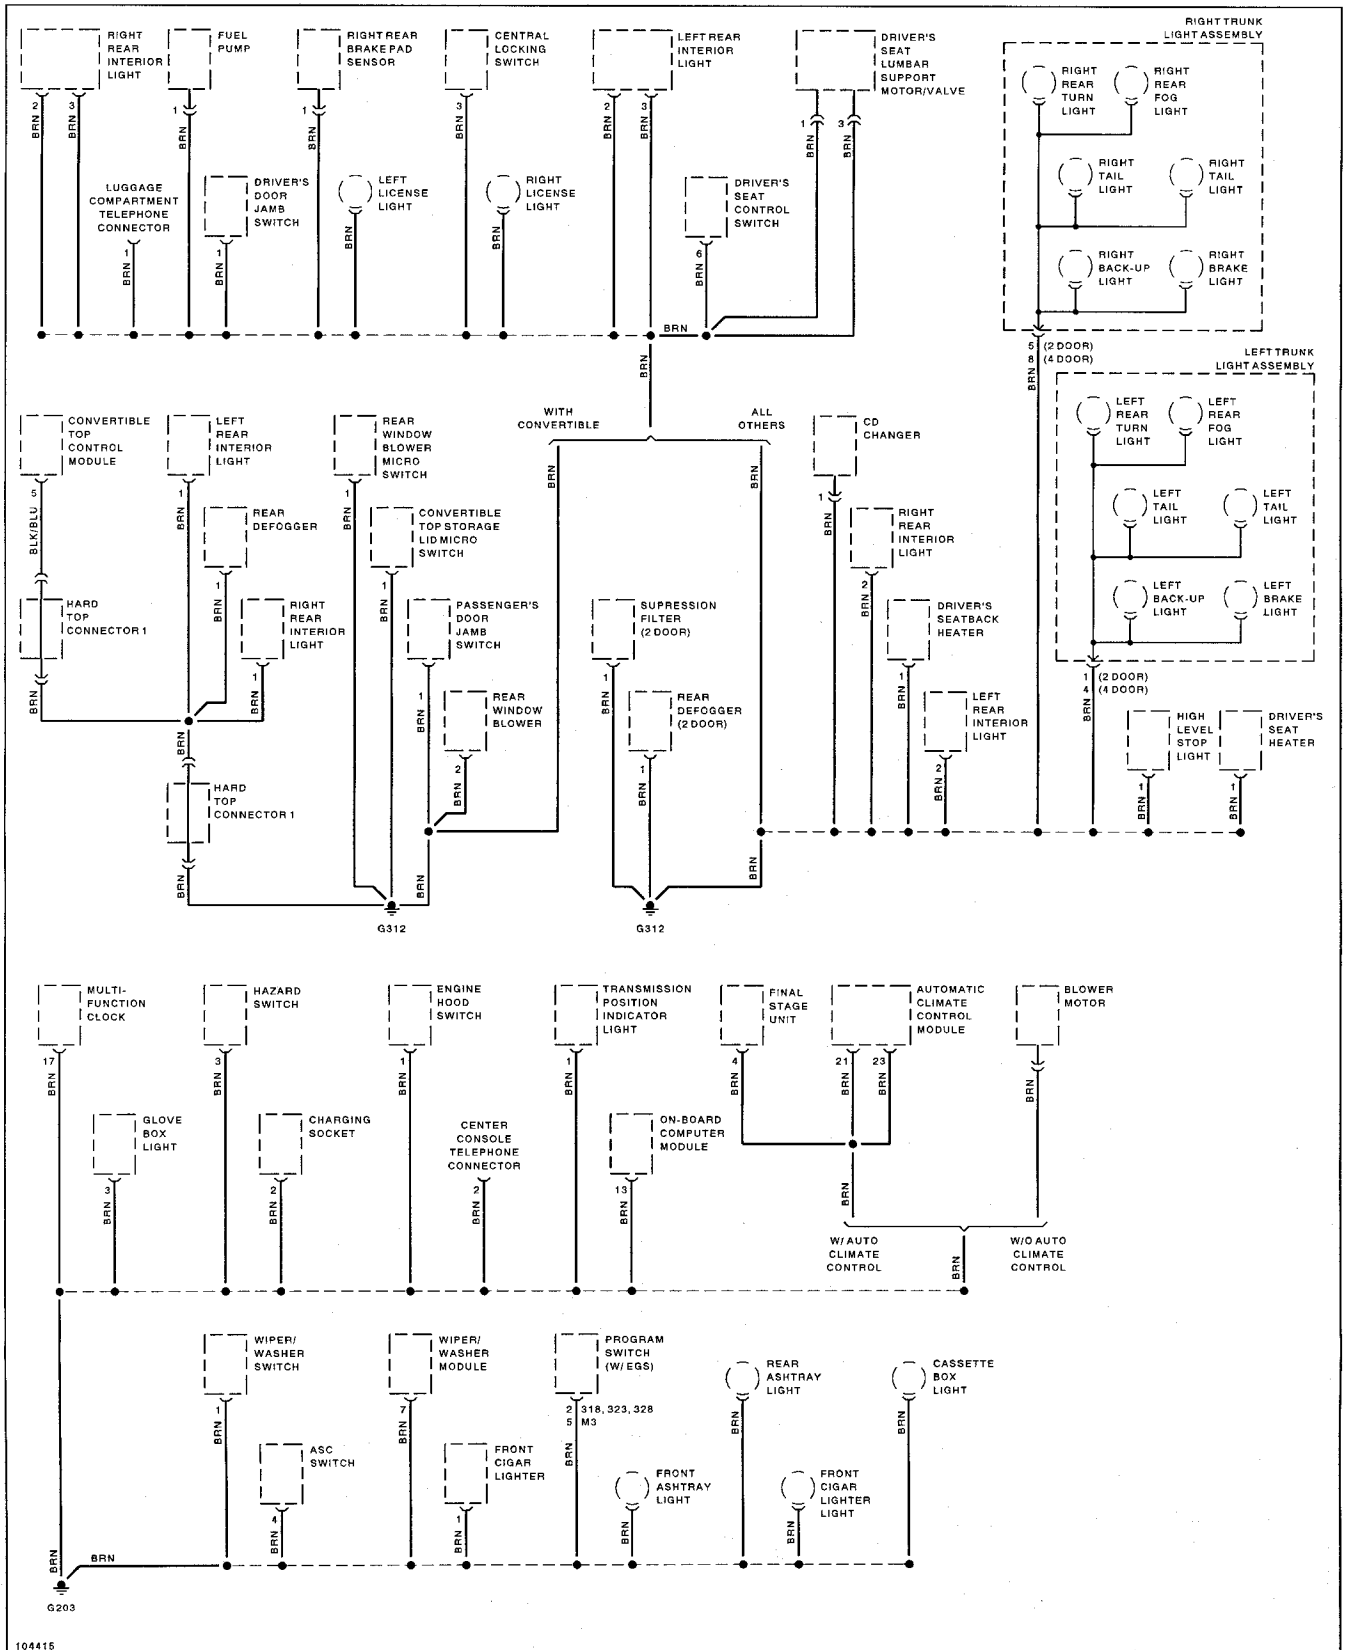

Ground Distribution


1995-96 318ti (1 of 3)

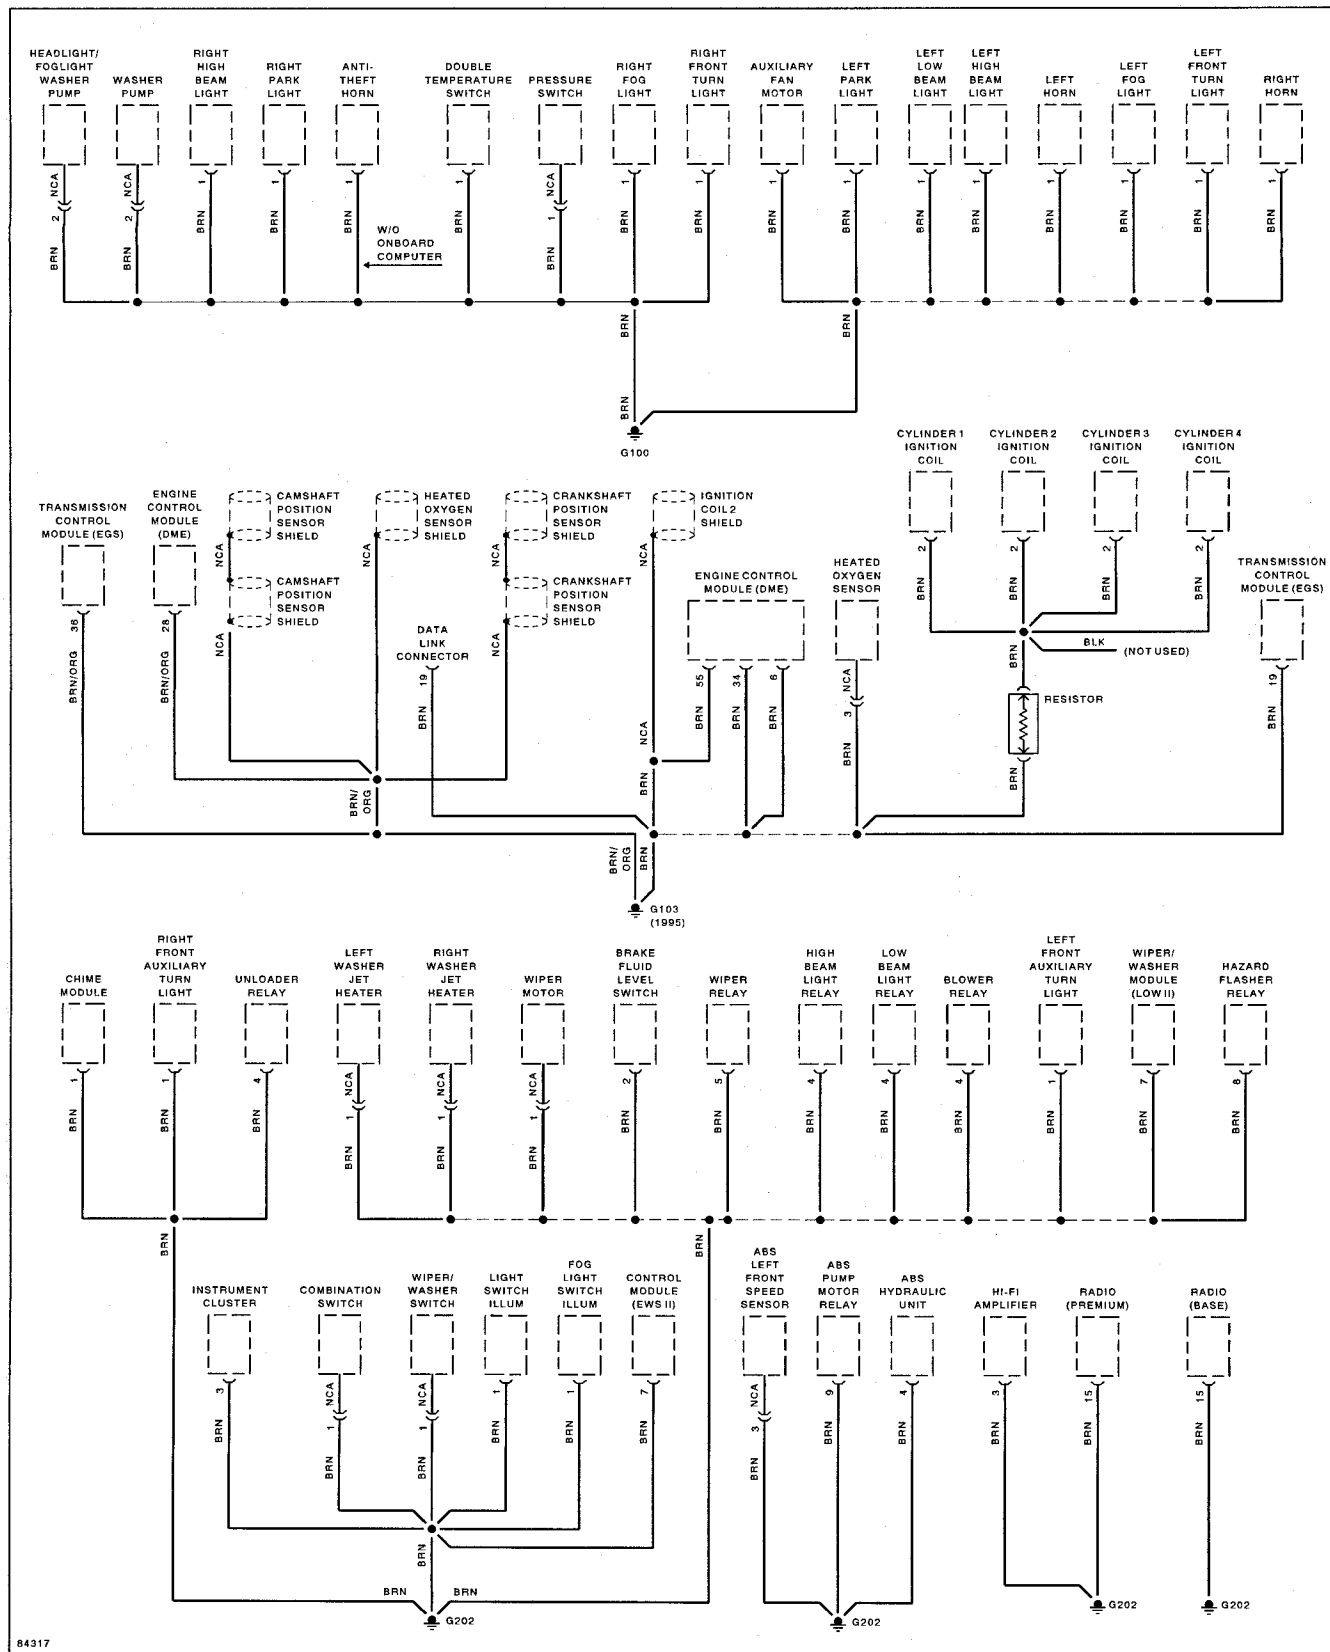

84317


Ground Distribution

1995-96 318ti (2 of 3)

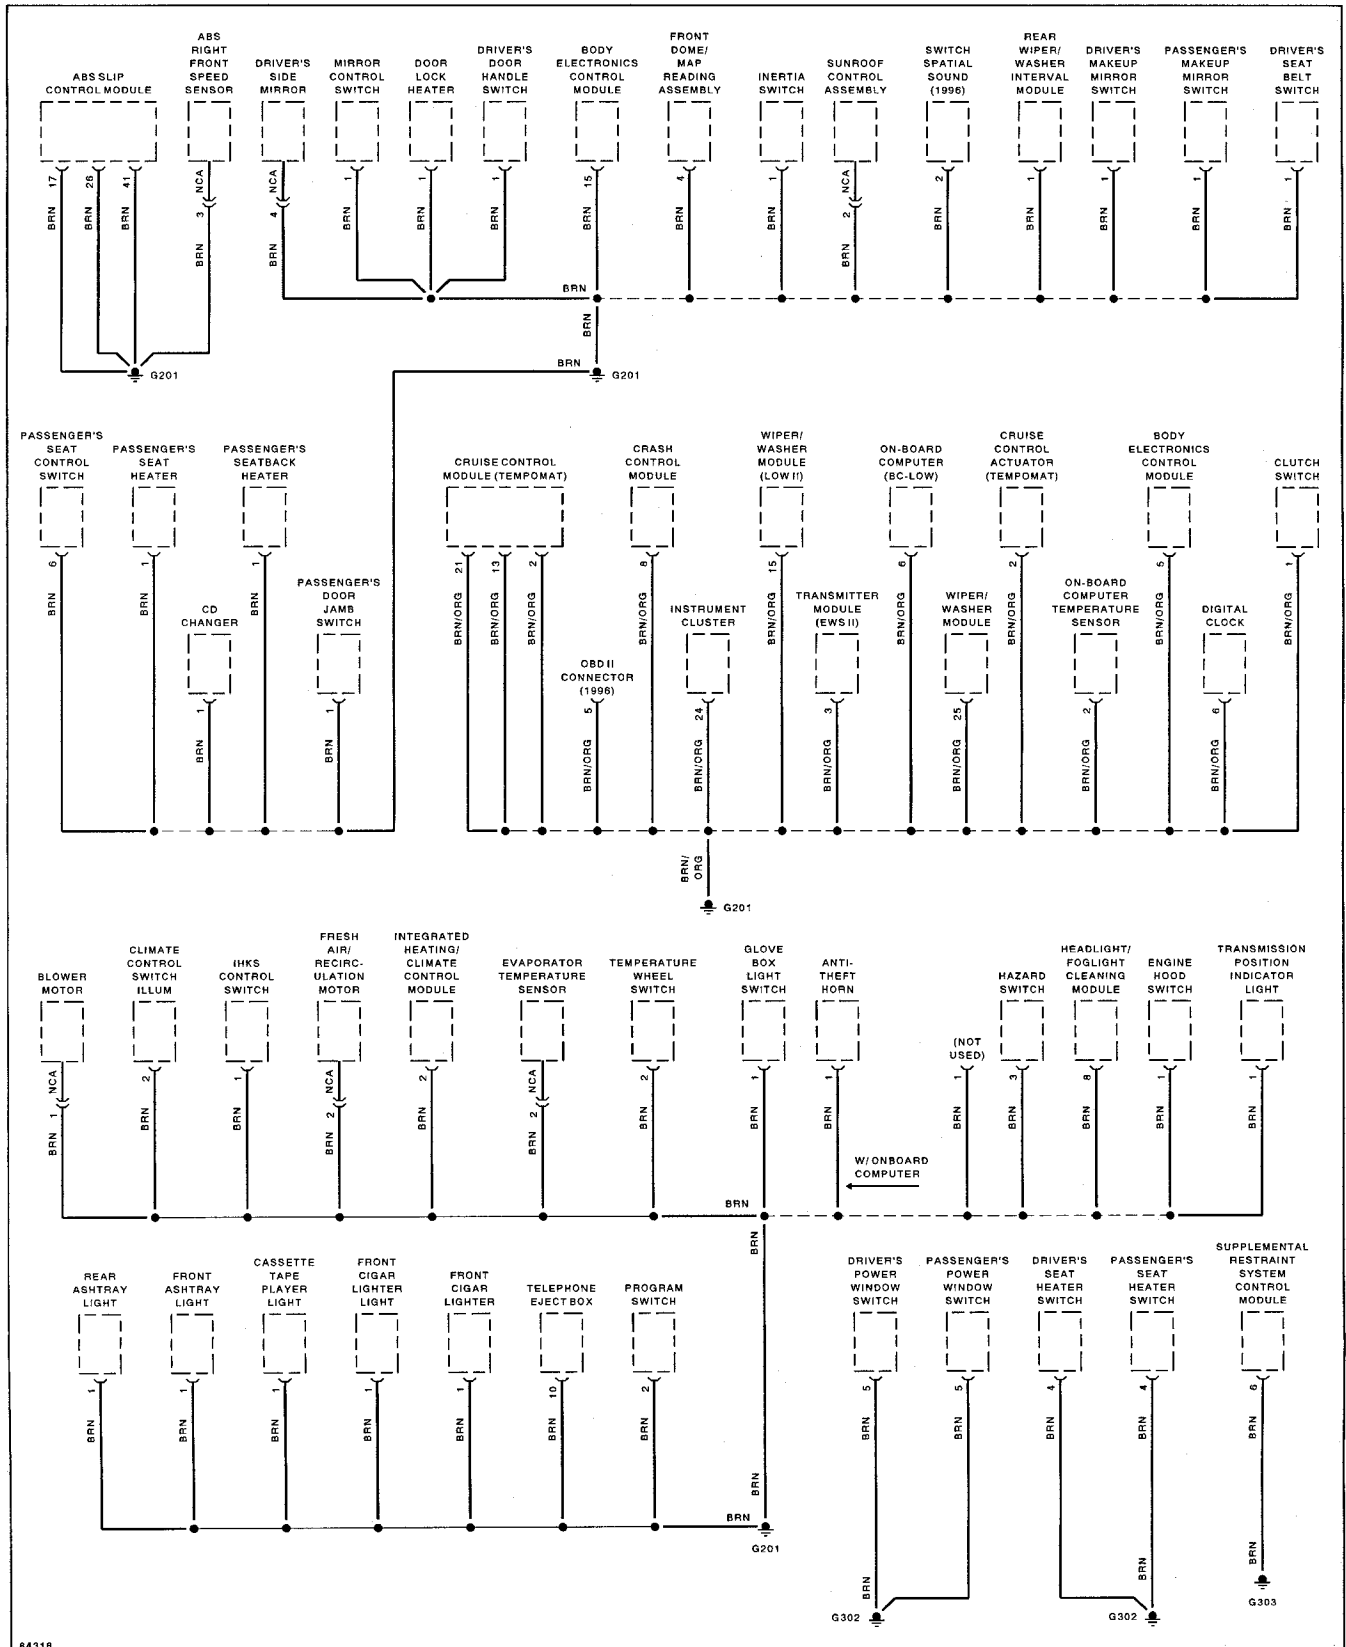


Ground Distribution

1995-96 318ti (3 of 3)

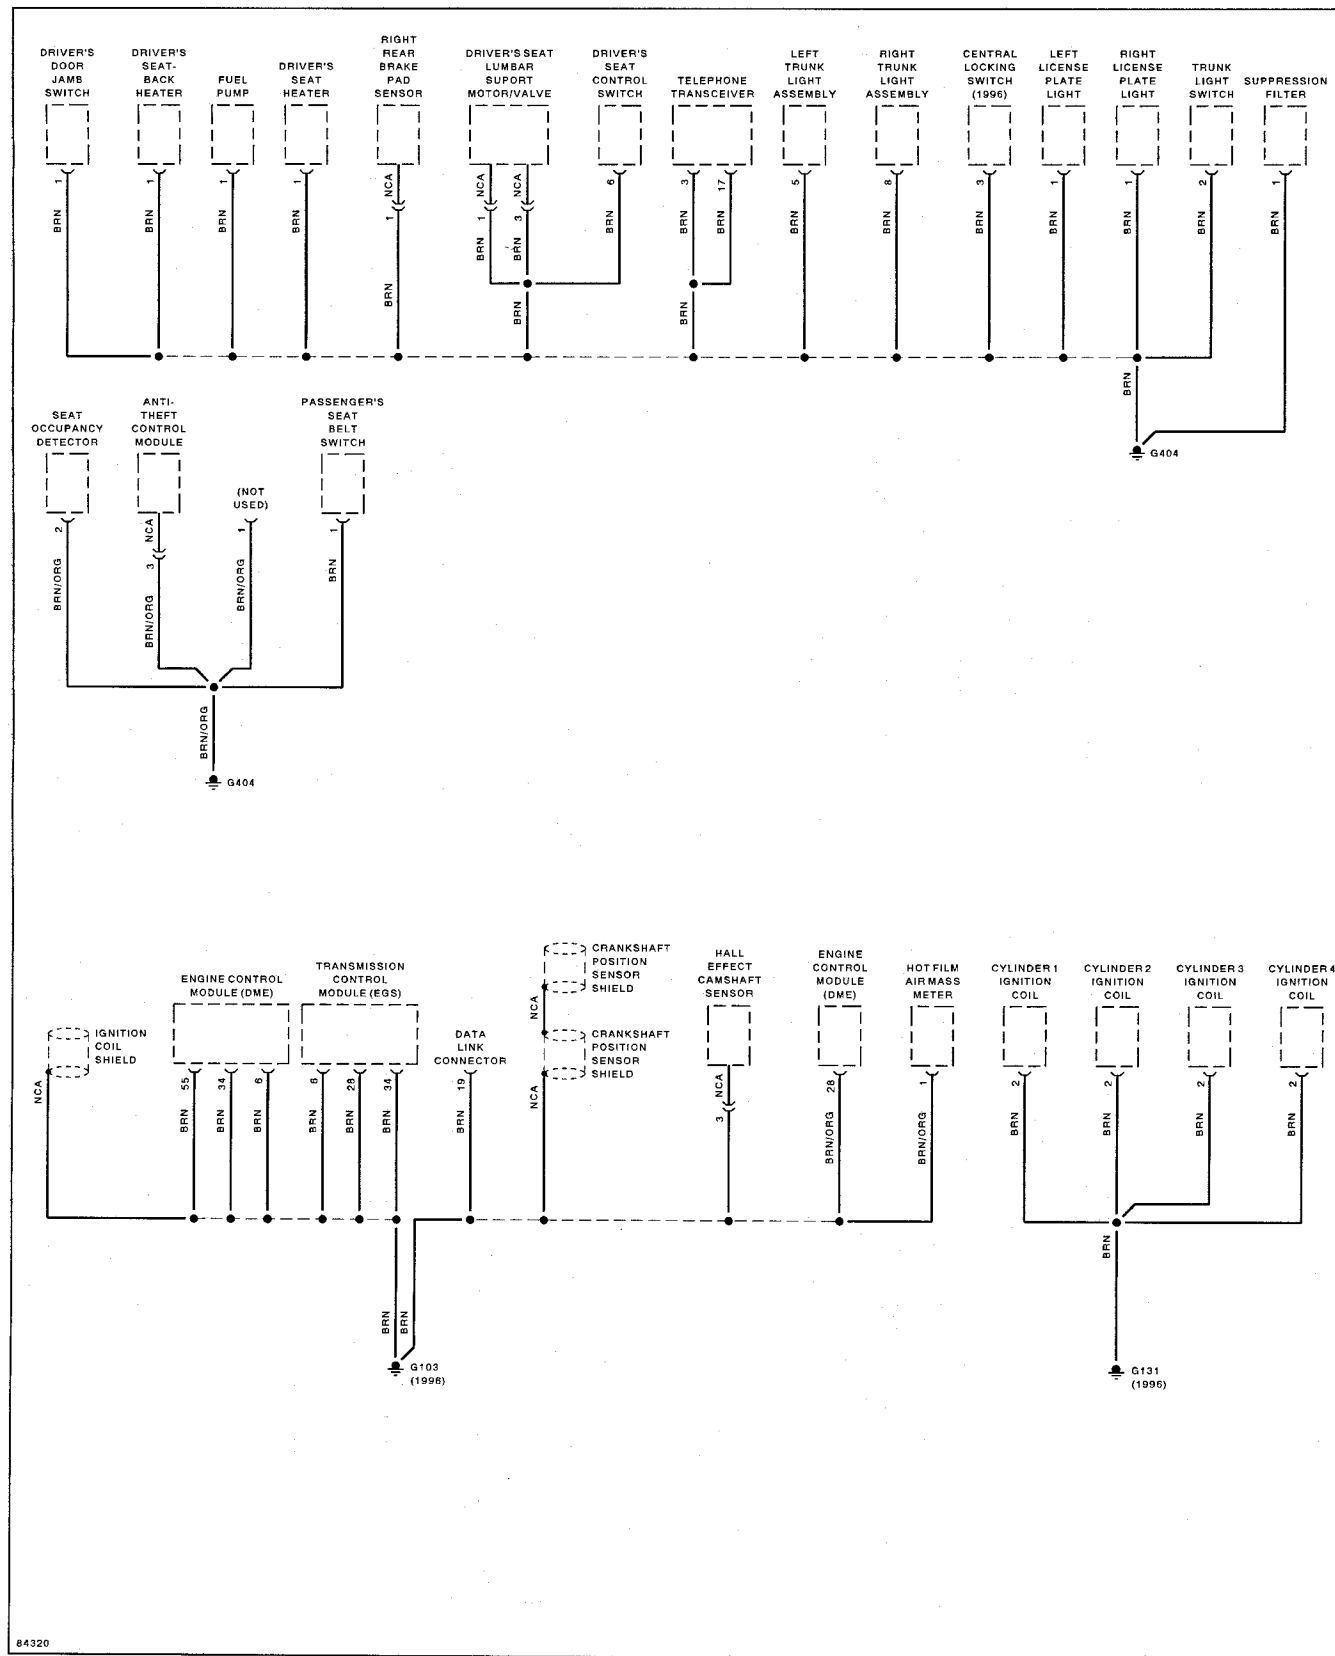


Ground Distribution

1997 318ti (1 of 3)

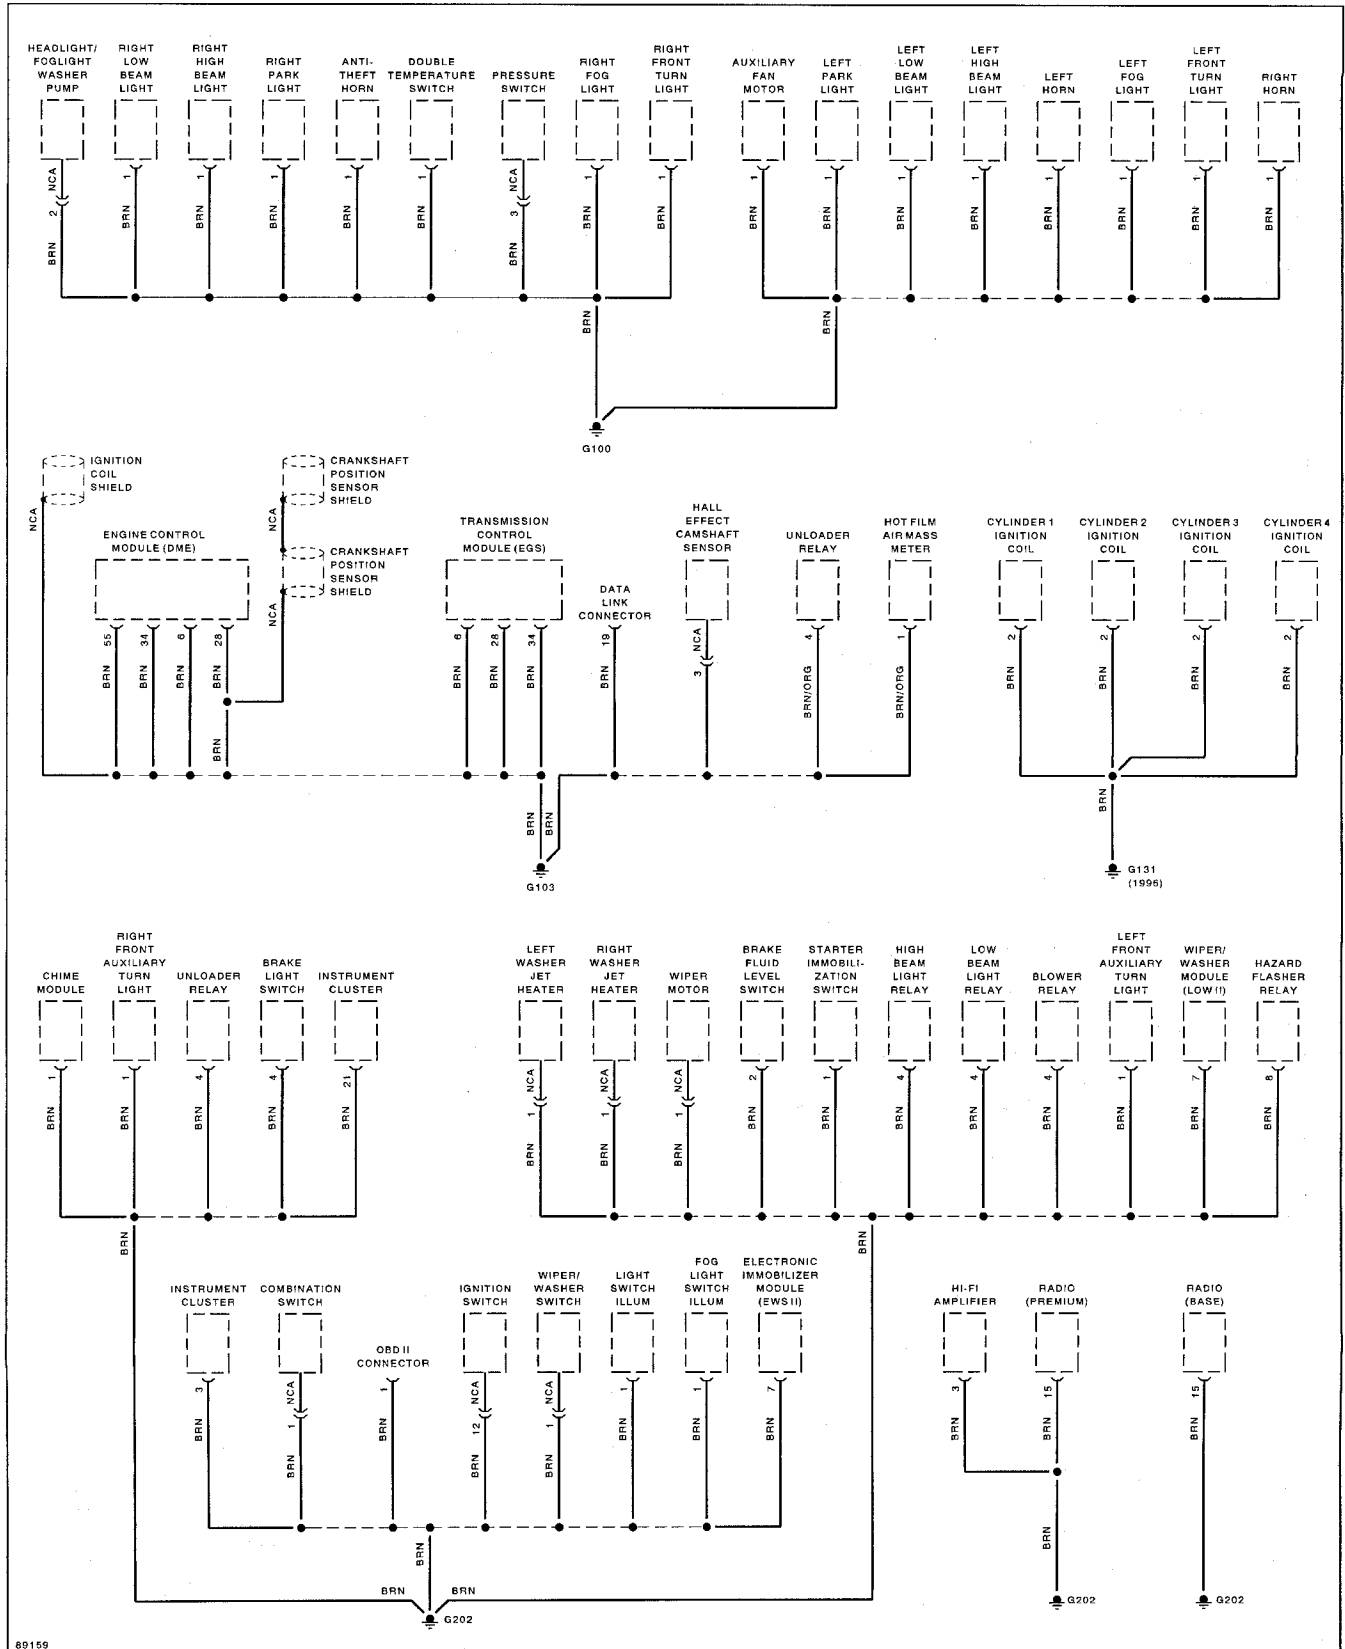


Ground Distribution

1997 318ti (2 of 3)

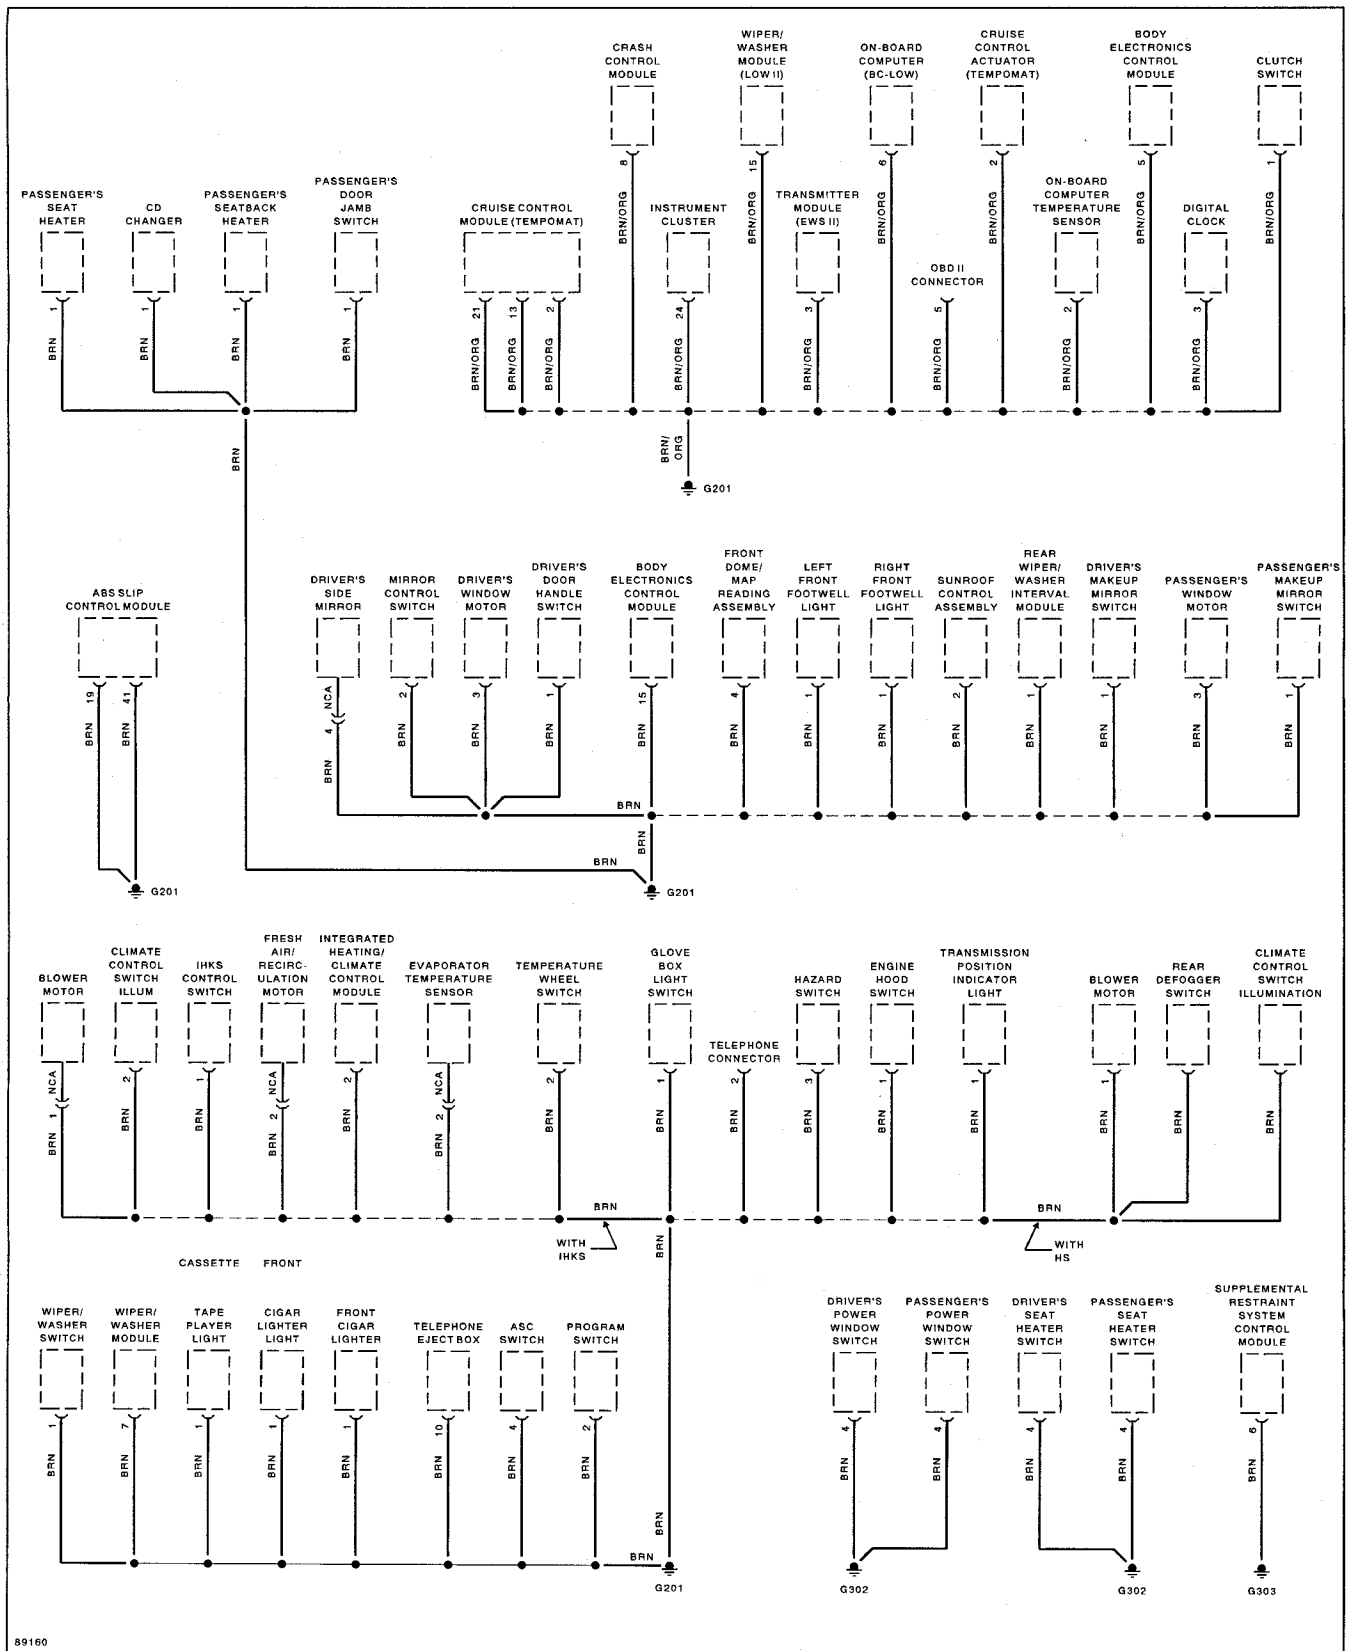


Ground Distribution

1997 318ti (3 of 3)

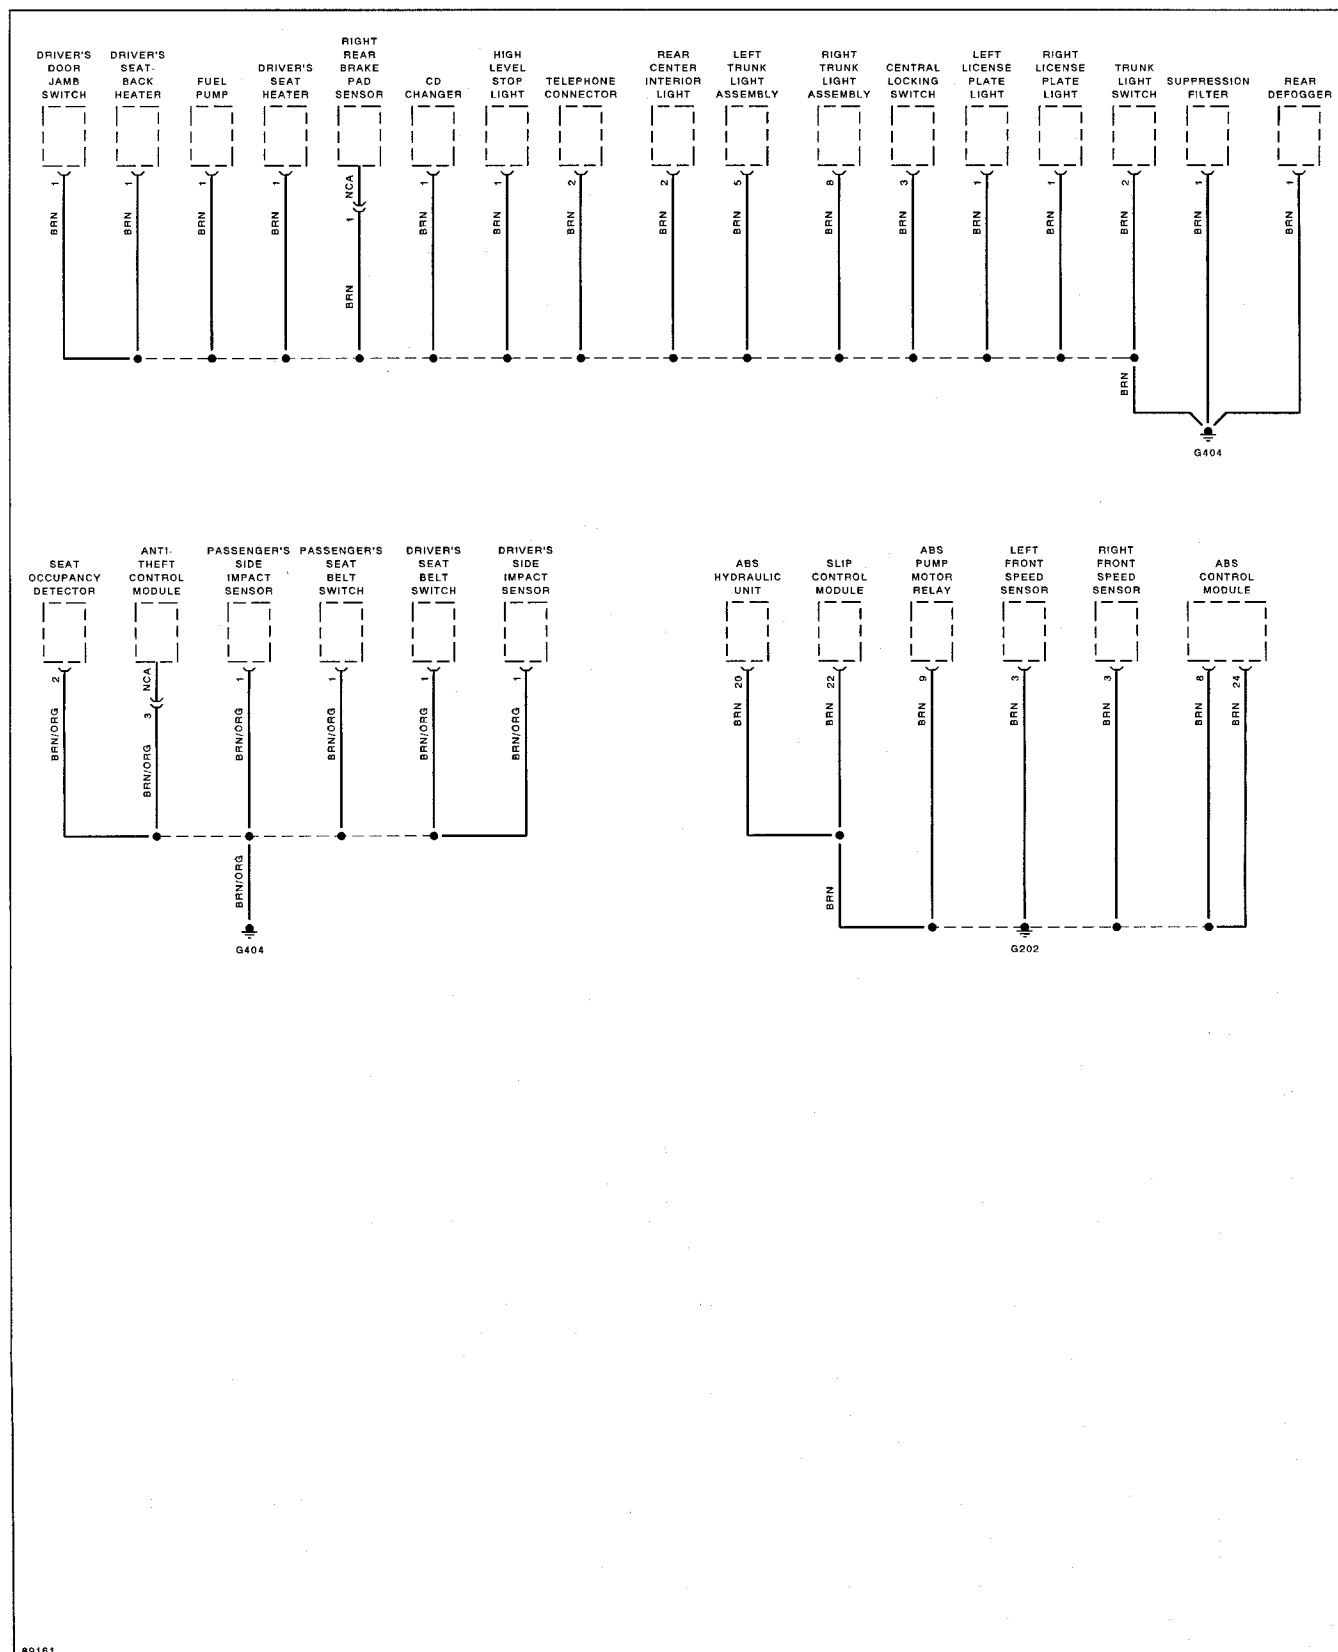


Ground Distribution

1998 318ti (1 of 3)

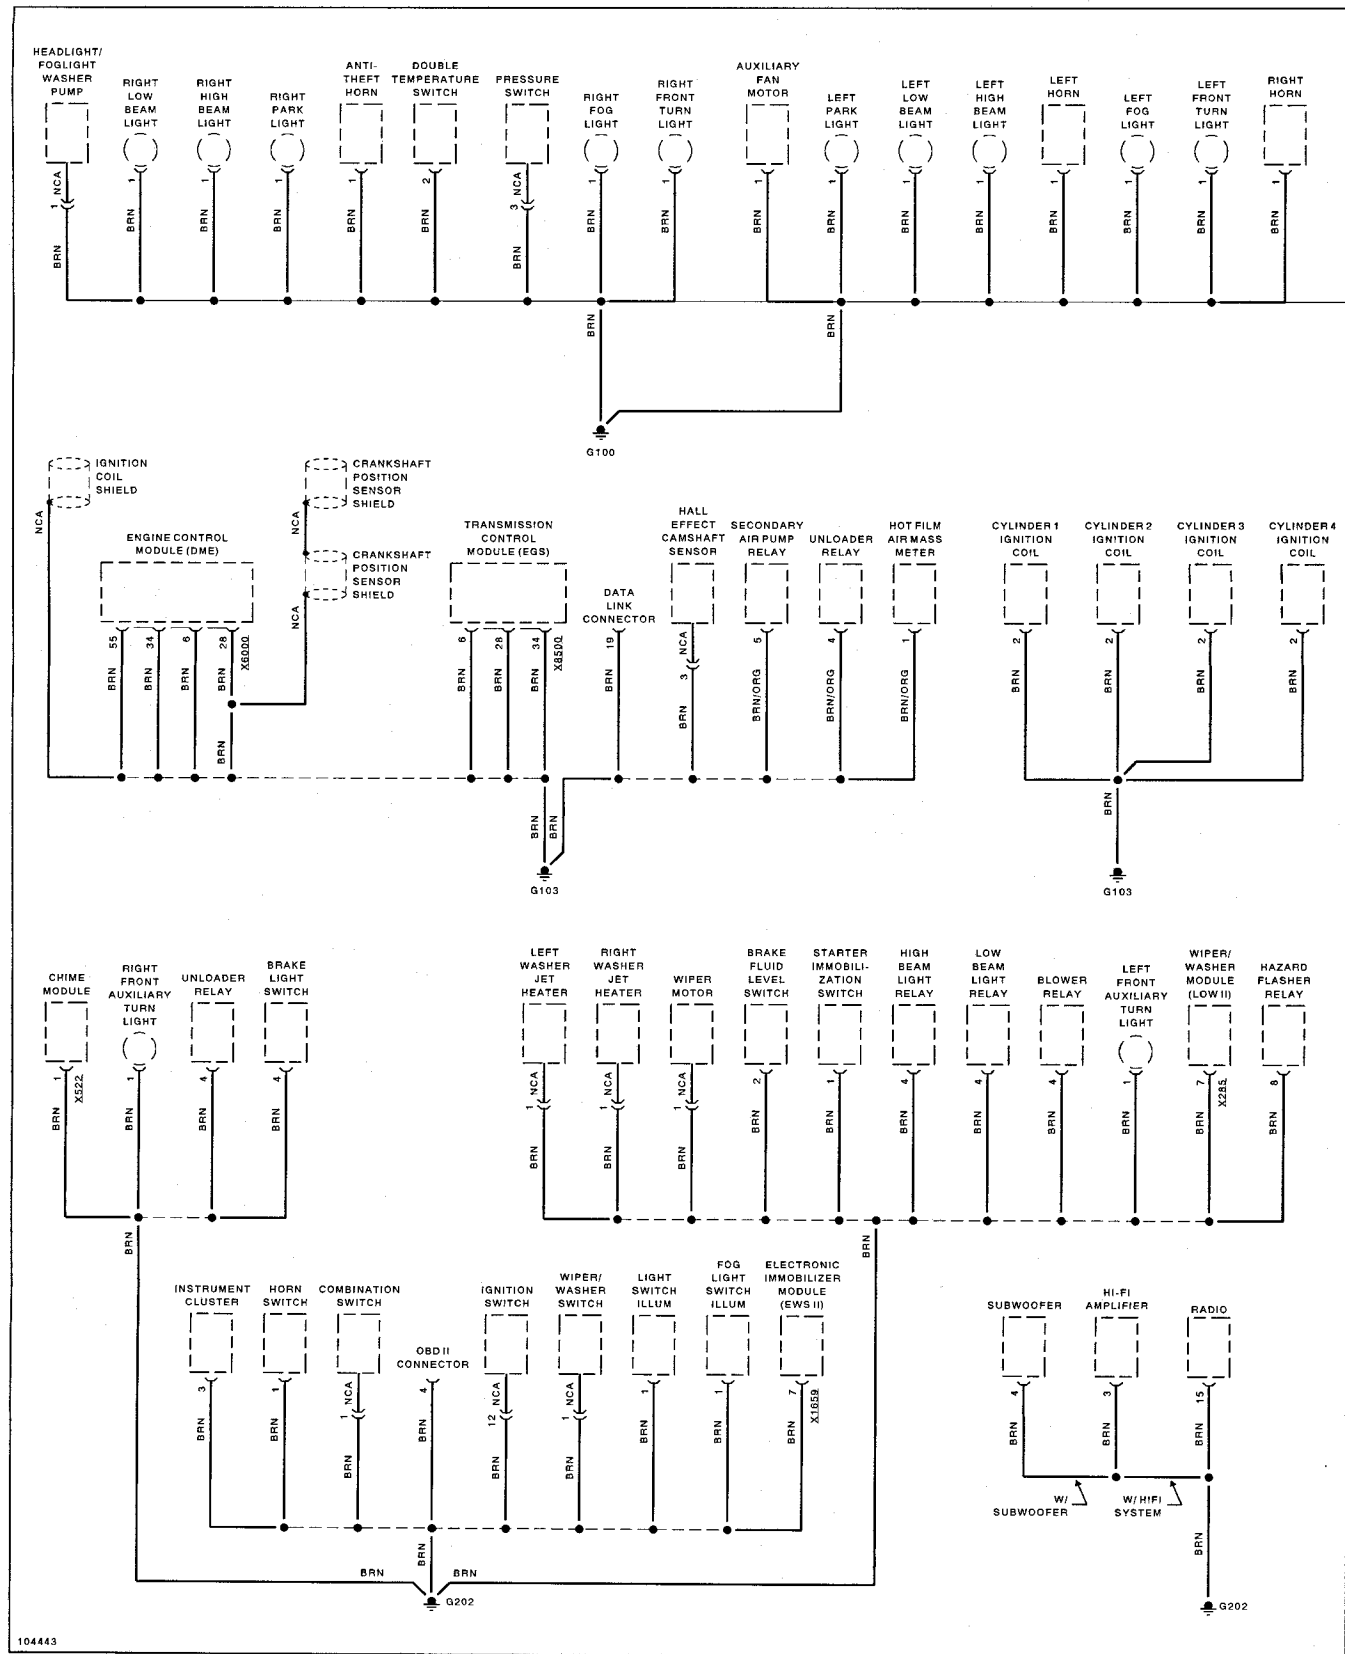


Ground Distribution

1998 318ti (2 of 3)

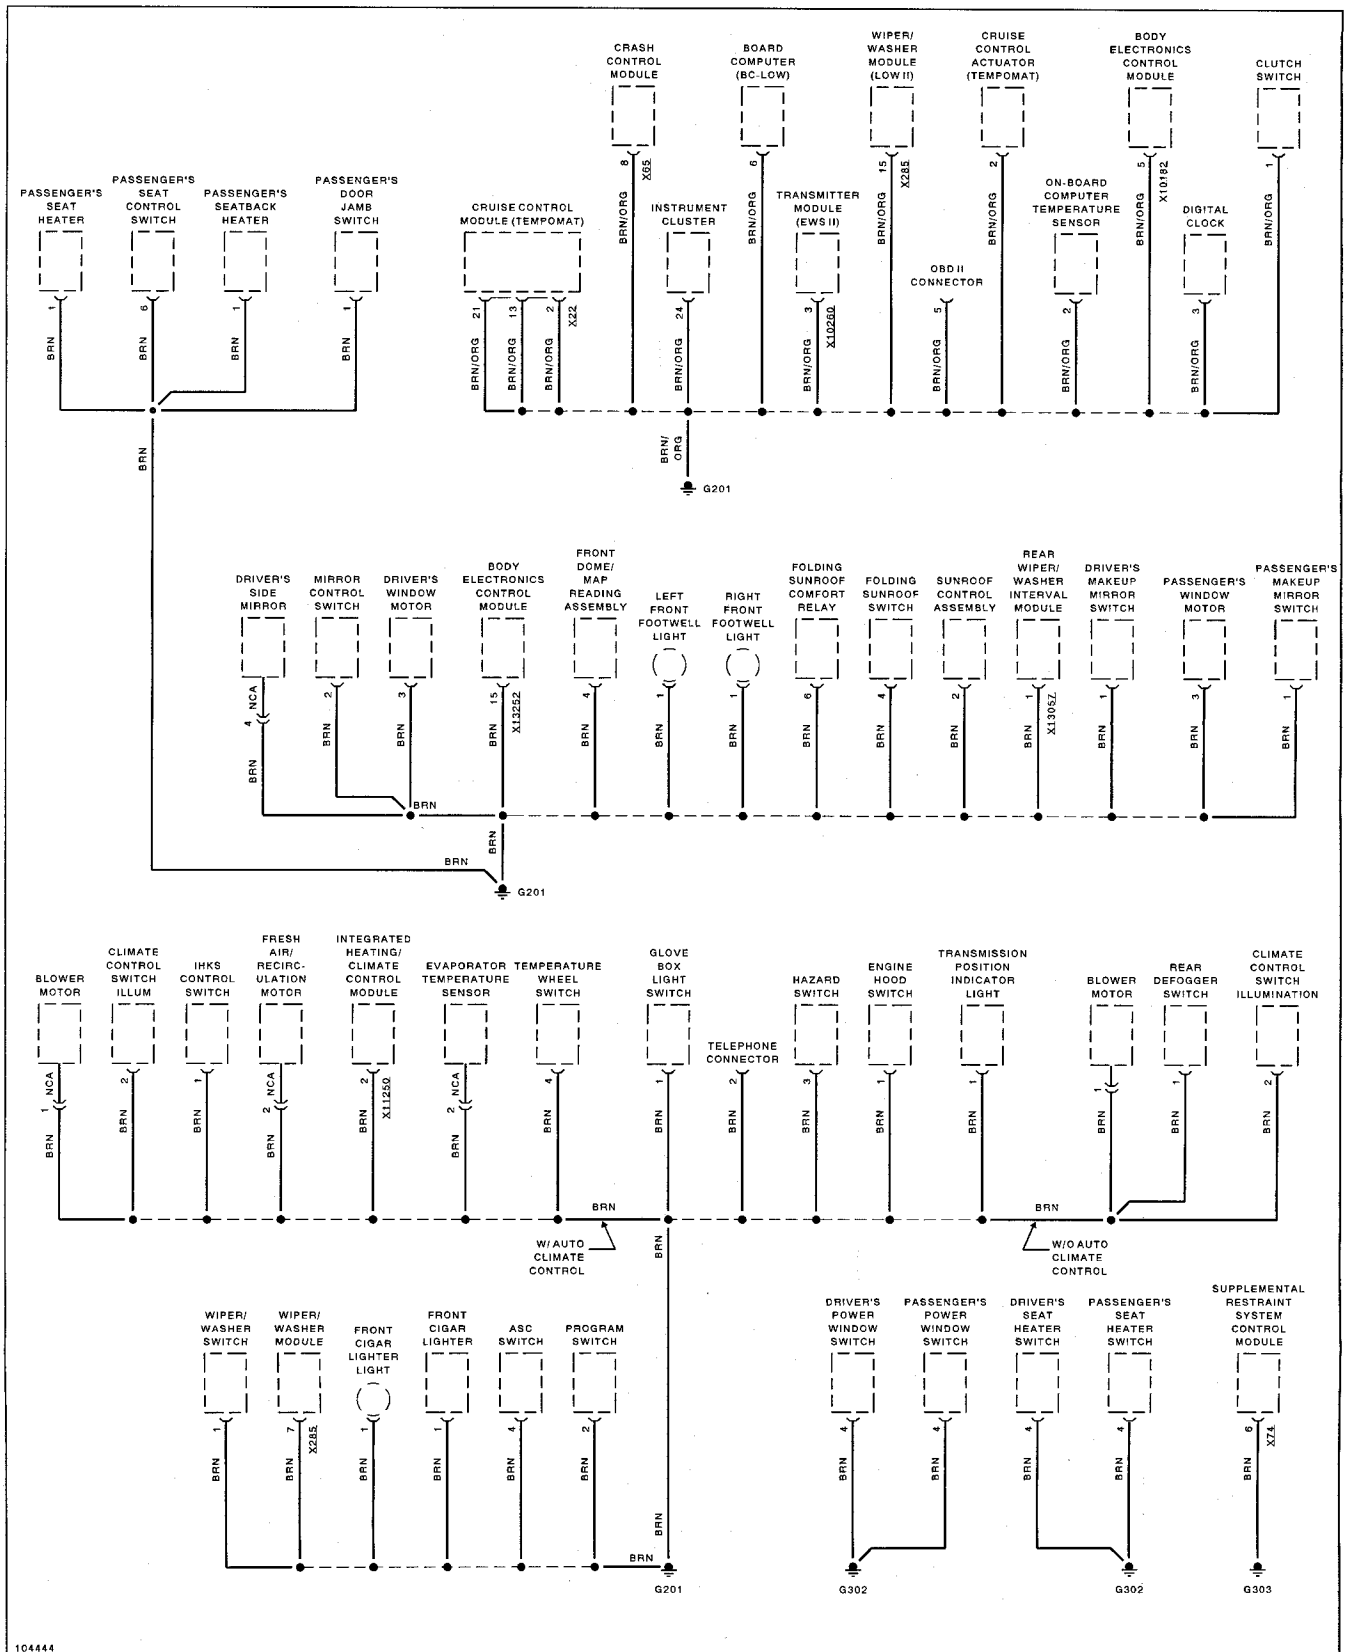


Ground Distribution


1998 318ti (3 of 3)

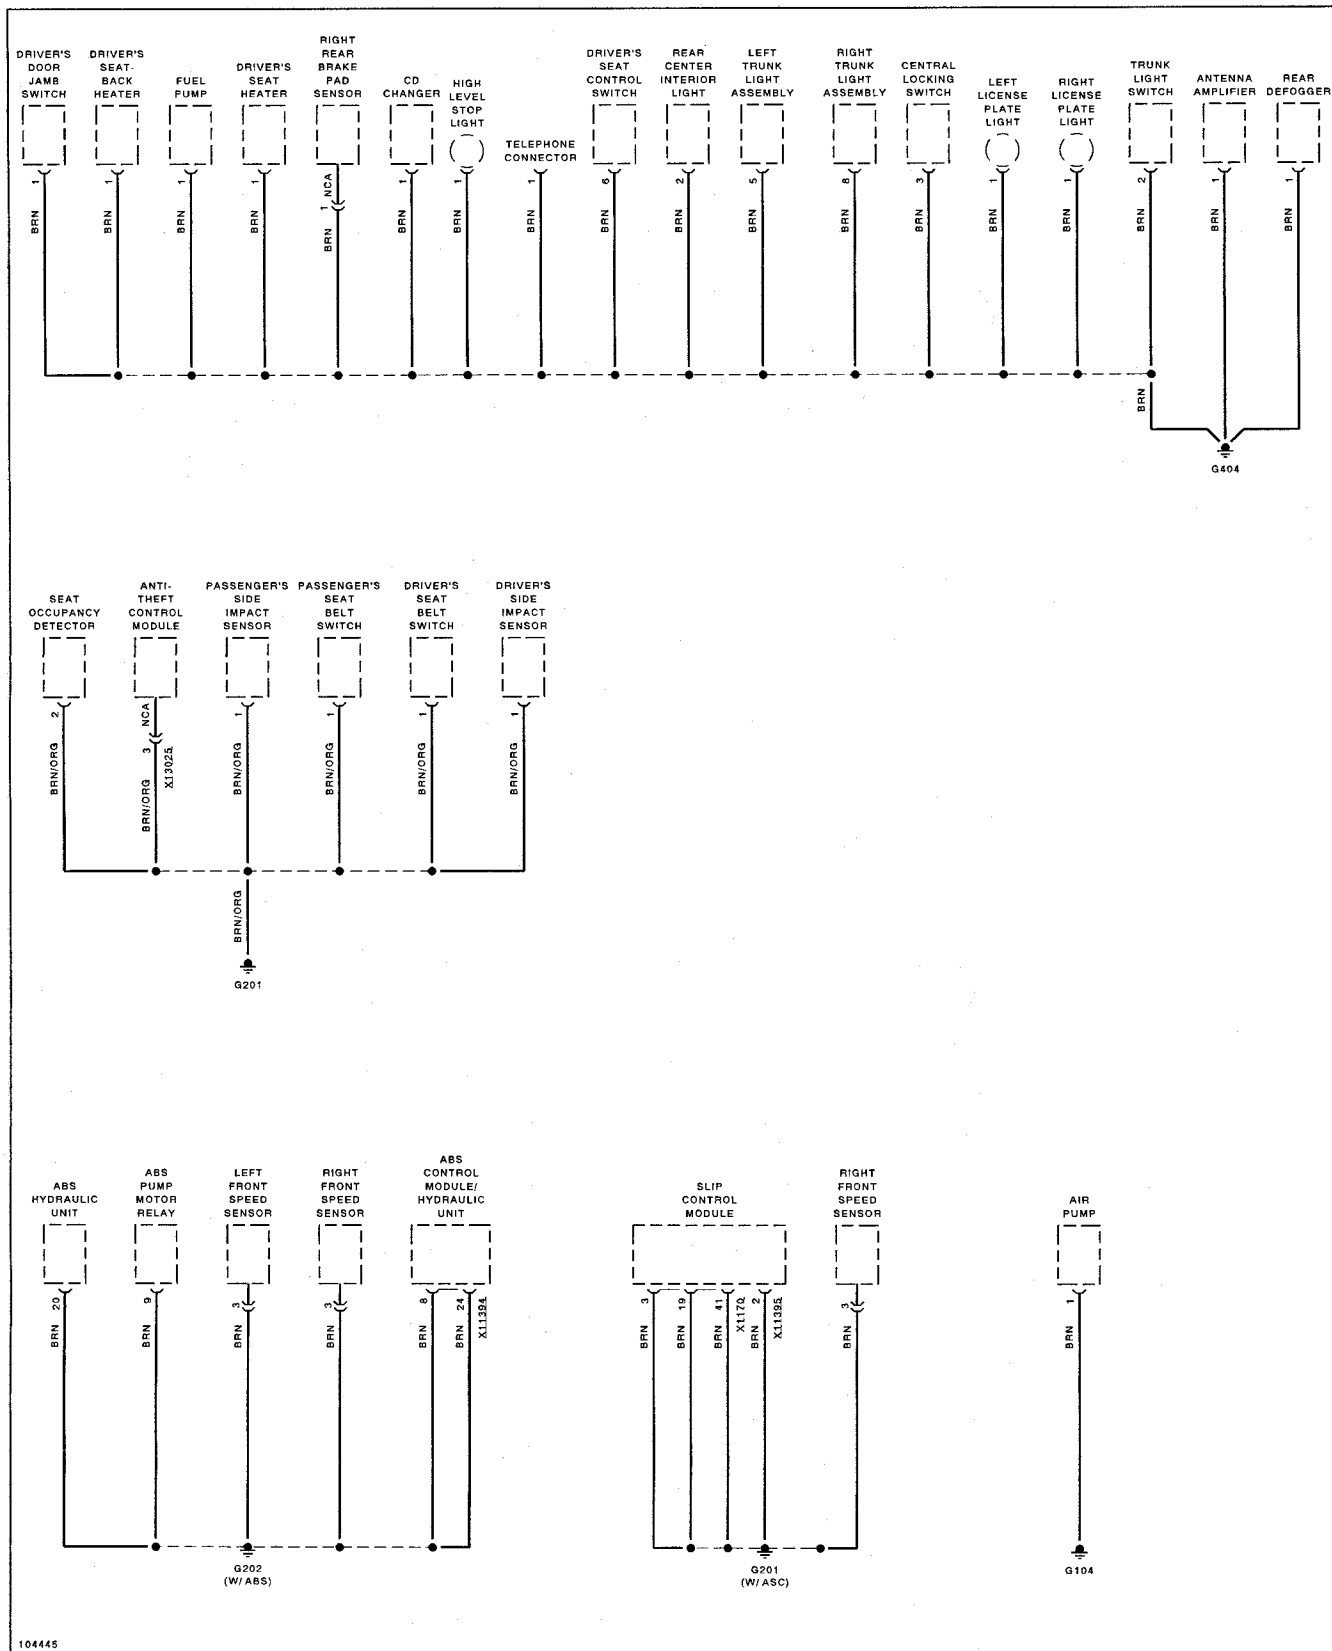

Starting

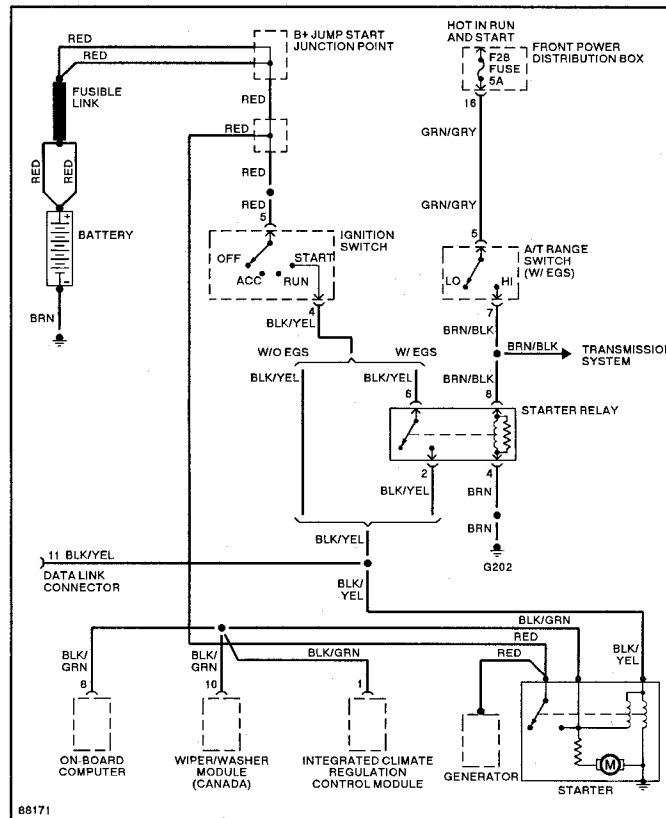


**1992
318i & 318is,
1992-93
325i & 325is**

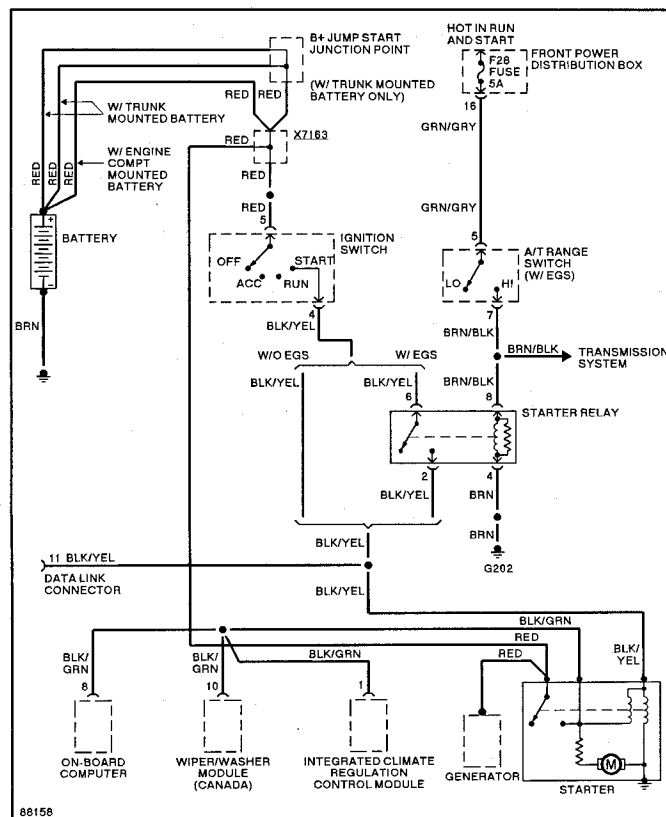


**1993
318i & 318is**

Starting

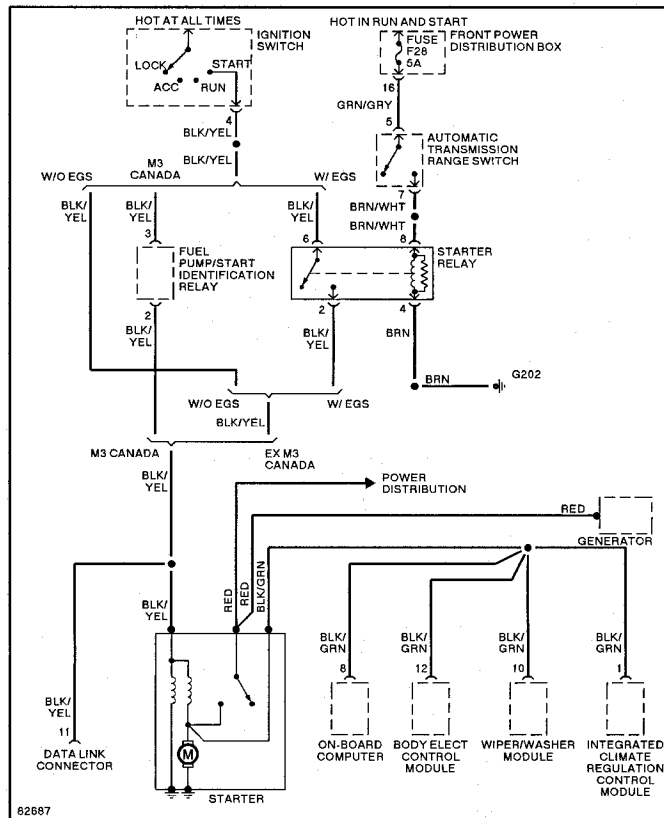


**1994 Early
Production
318i, 318iC, 318is,
325i, 325iC, 325is
& M3**

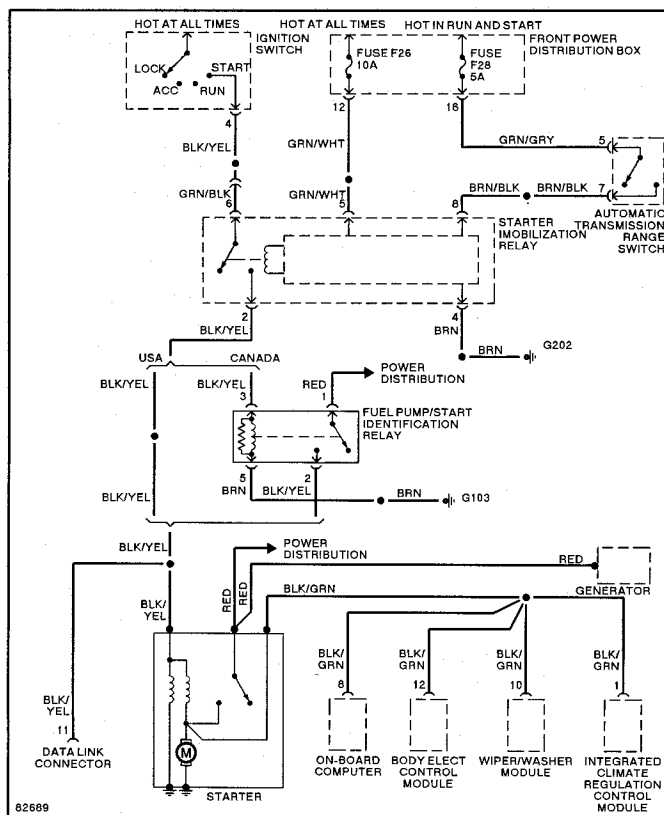


**1994 Late
Production
318i, 318iC, 318is,
325i, 325iC, 325is
& M3**

Starting


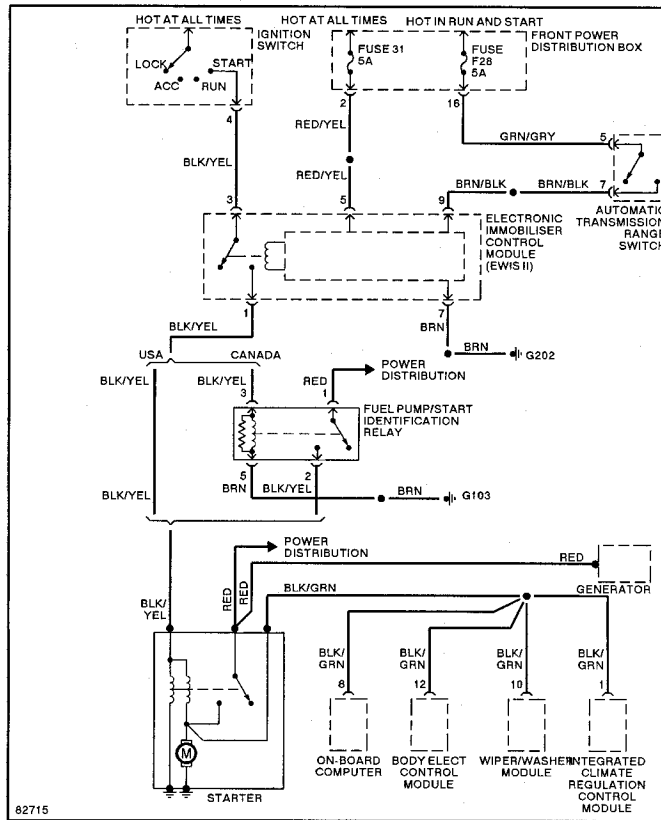


1995-96
318i, 318iC, 318is,
325i, 325iC, 325is,
328i, 328iC, 328is &
M3

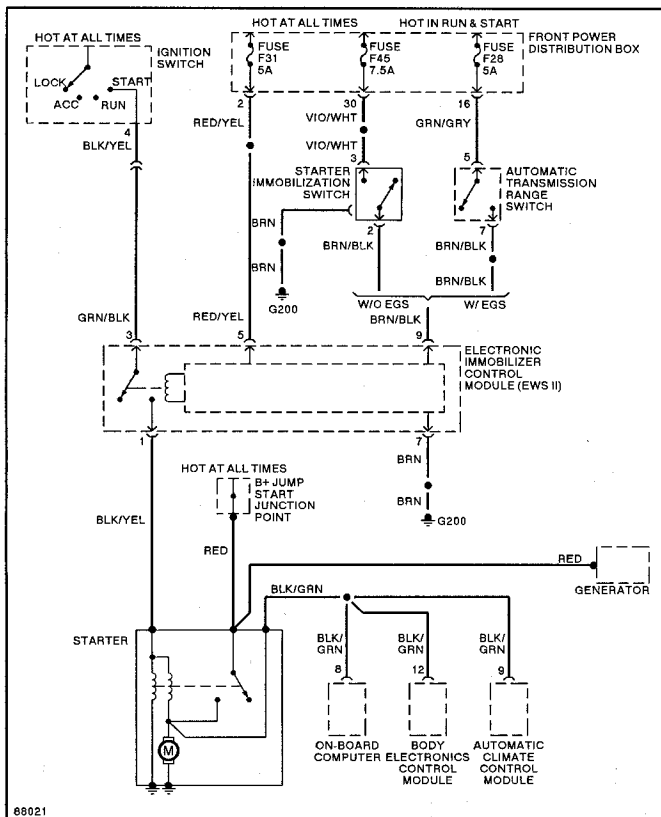


1997-98
318i, 318iC, 318is,
325i, 325iC, 325is,
328i, 328iC, 328is &
M3


Starting

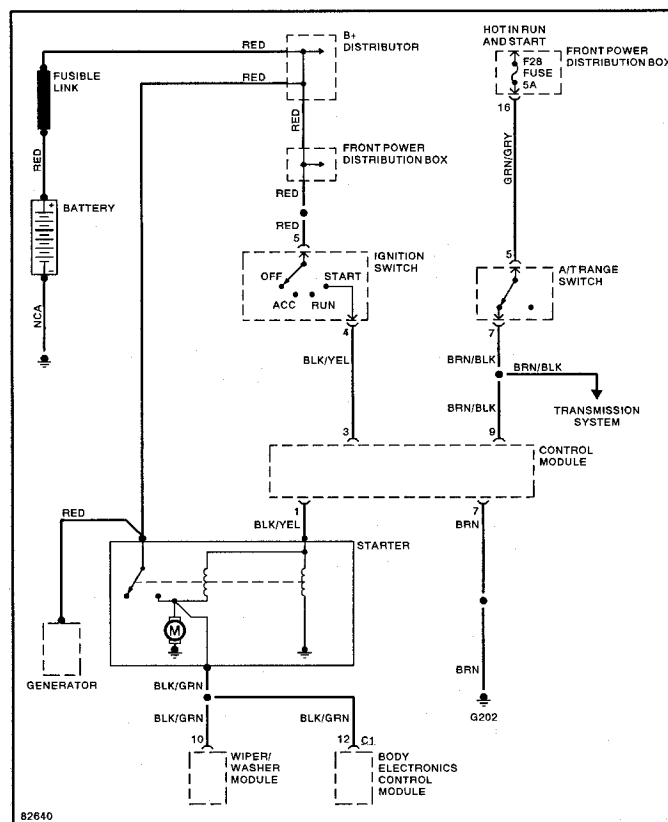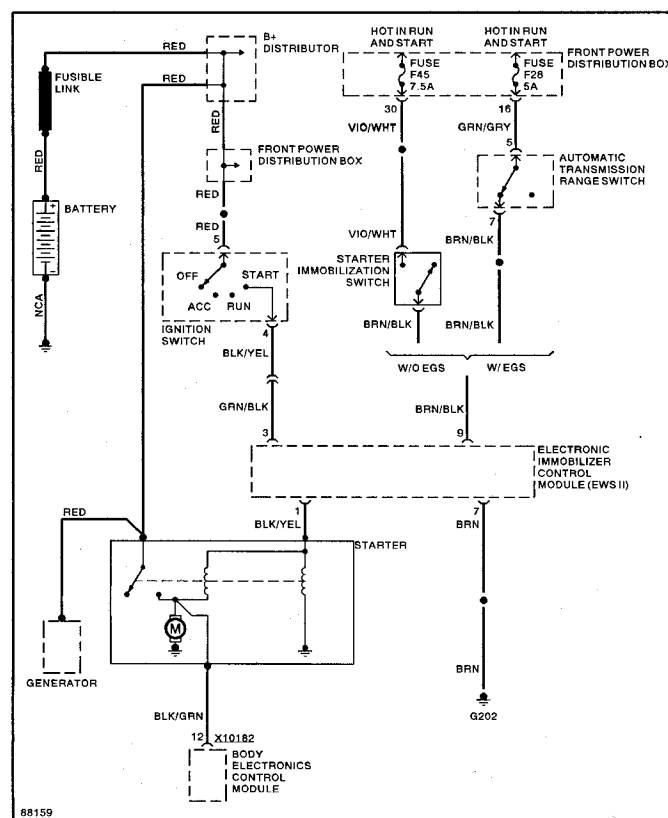1995-96
318ti1997-98
318ti

Charging System

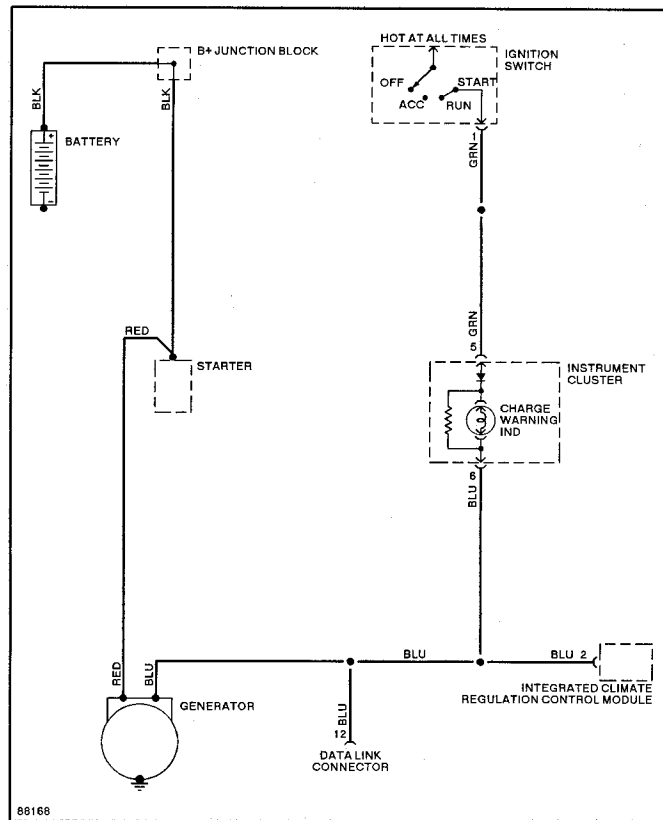


**1992-93
318i, 318is, 325i
& 325is**

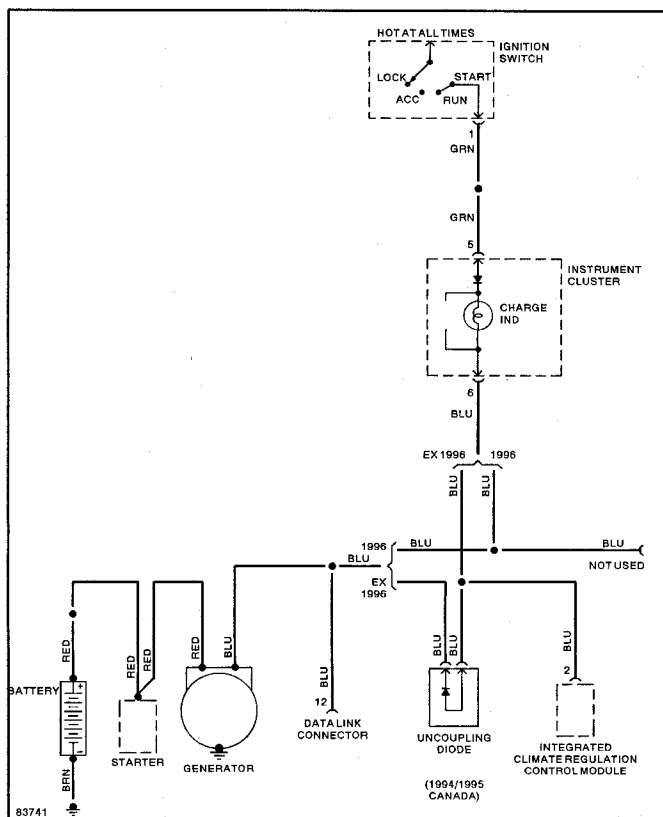


**1994-96
318i, 318iC, 318is,
325i, 325iC, 325is,
328i, 328iC, 328is
& M3**

Charging System

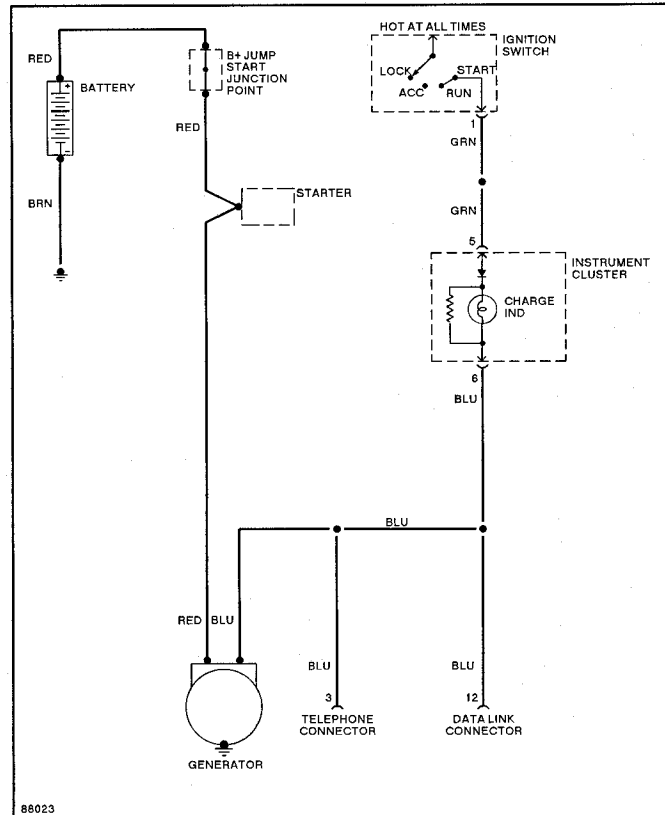


1997-98
318i, 318iC, 318is,
328i, 328iC, 328is
& M3

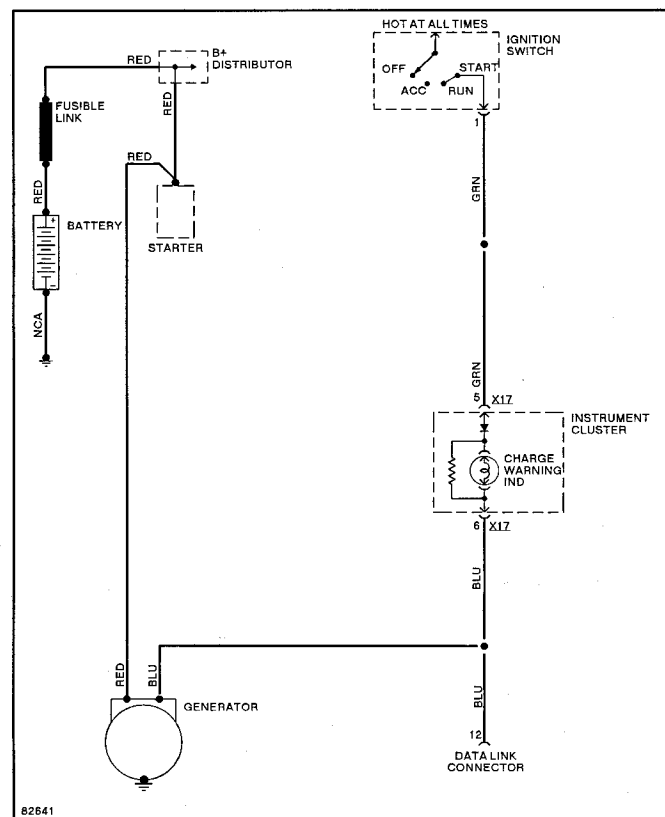

1995-96
318ti


Charging System

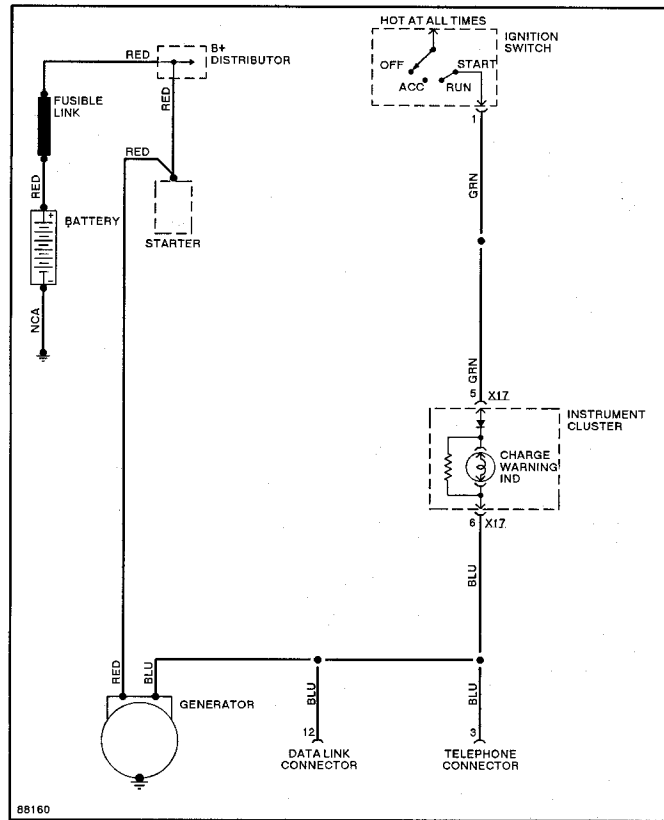

1997-98
318ti


Engine Management

1992 1.8L (1 of 2)

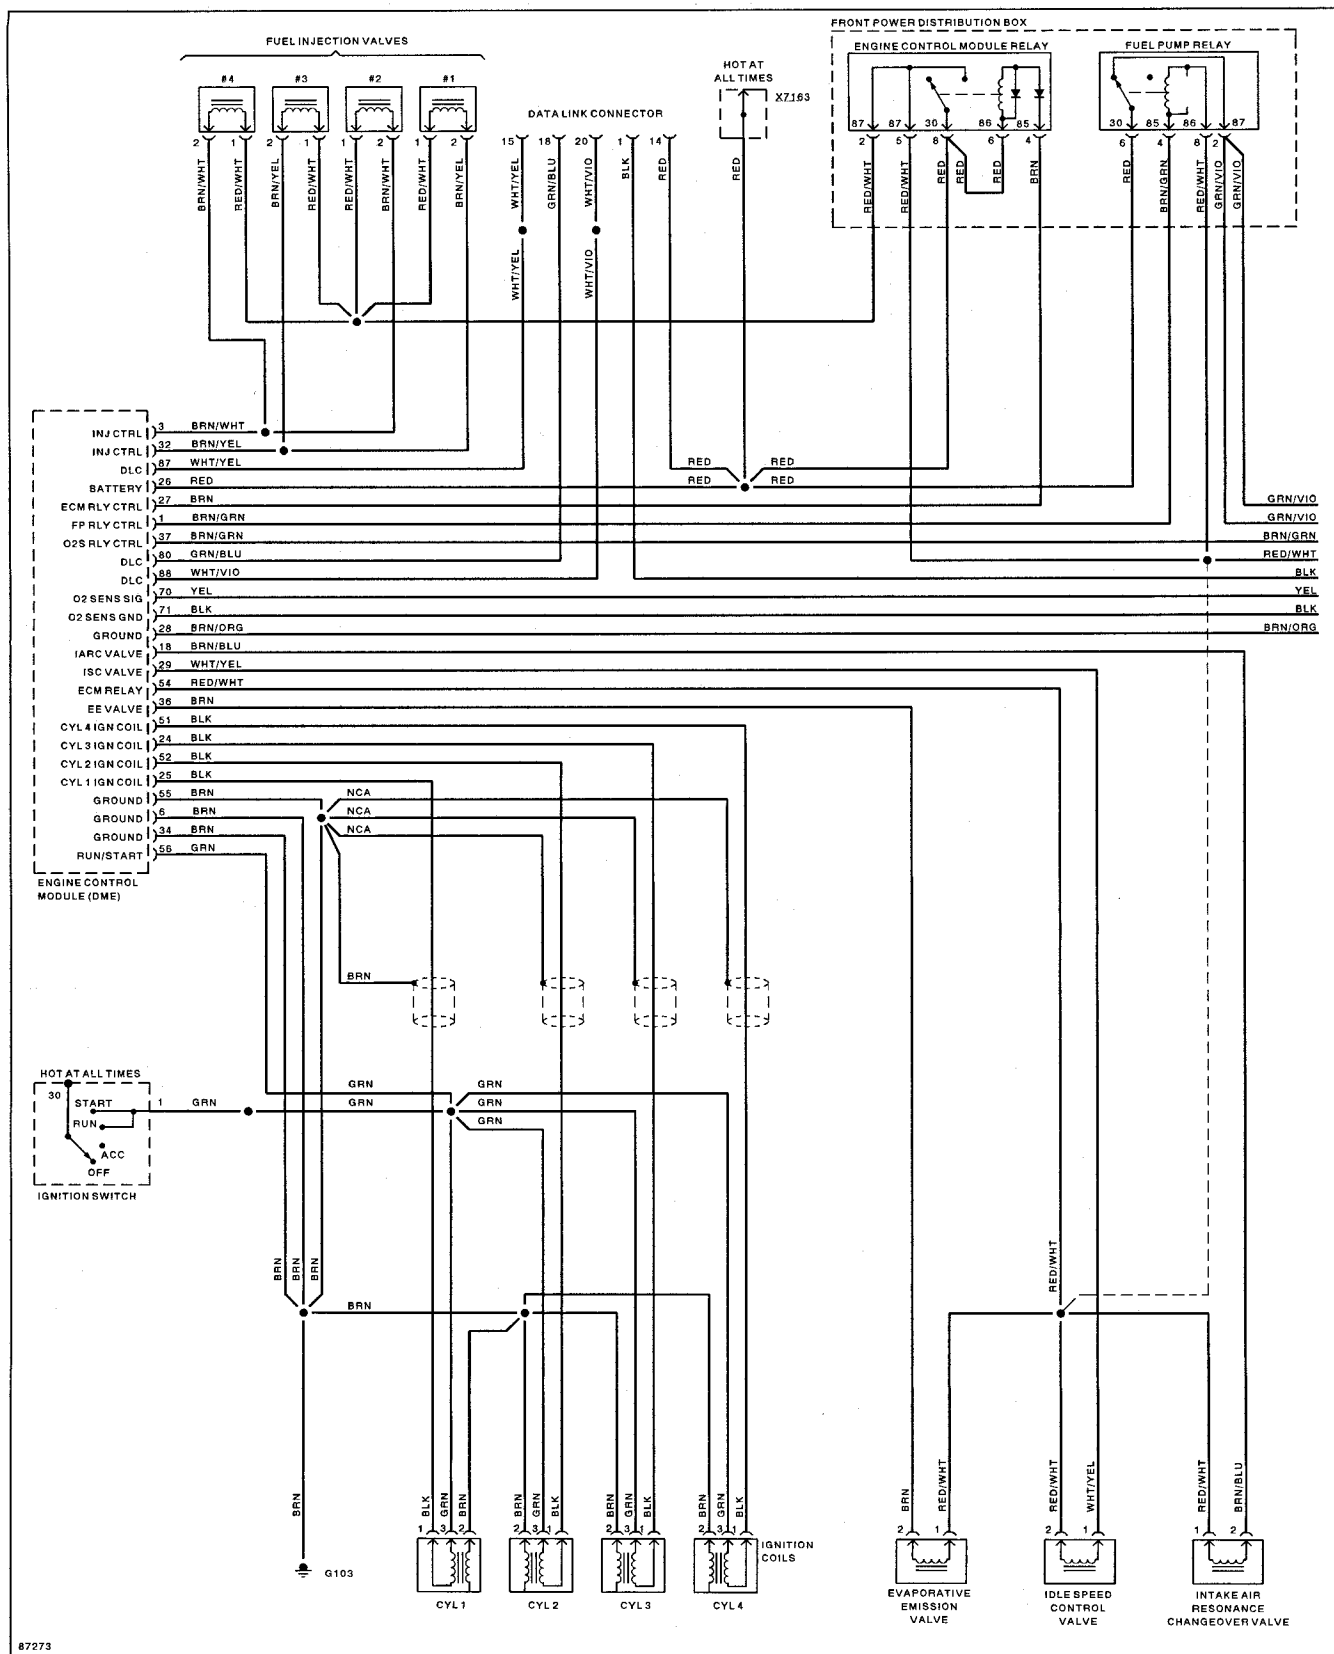


Engine Management

1992 1.8L (2 of 2)

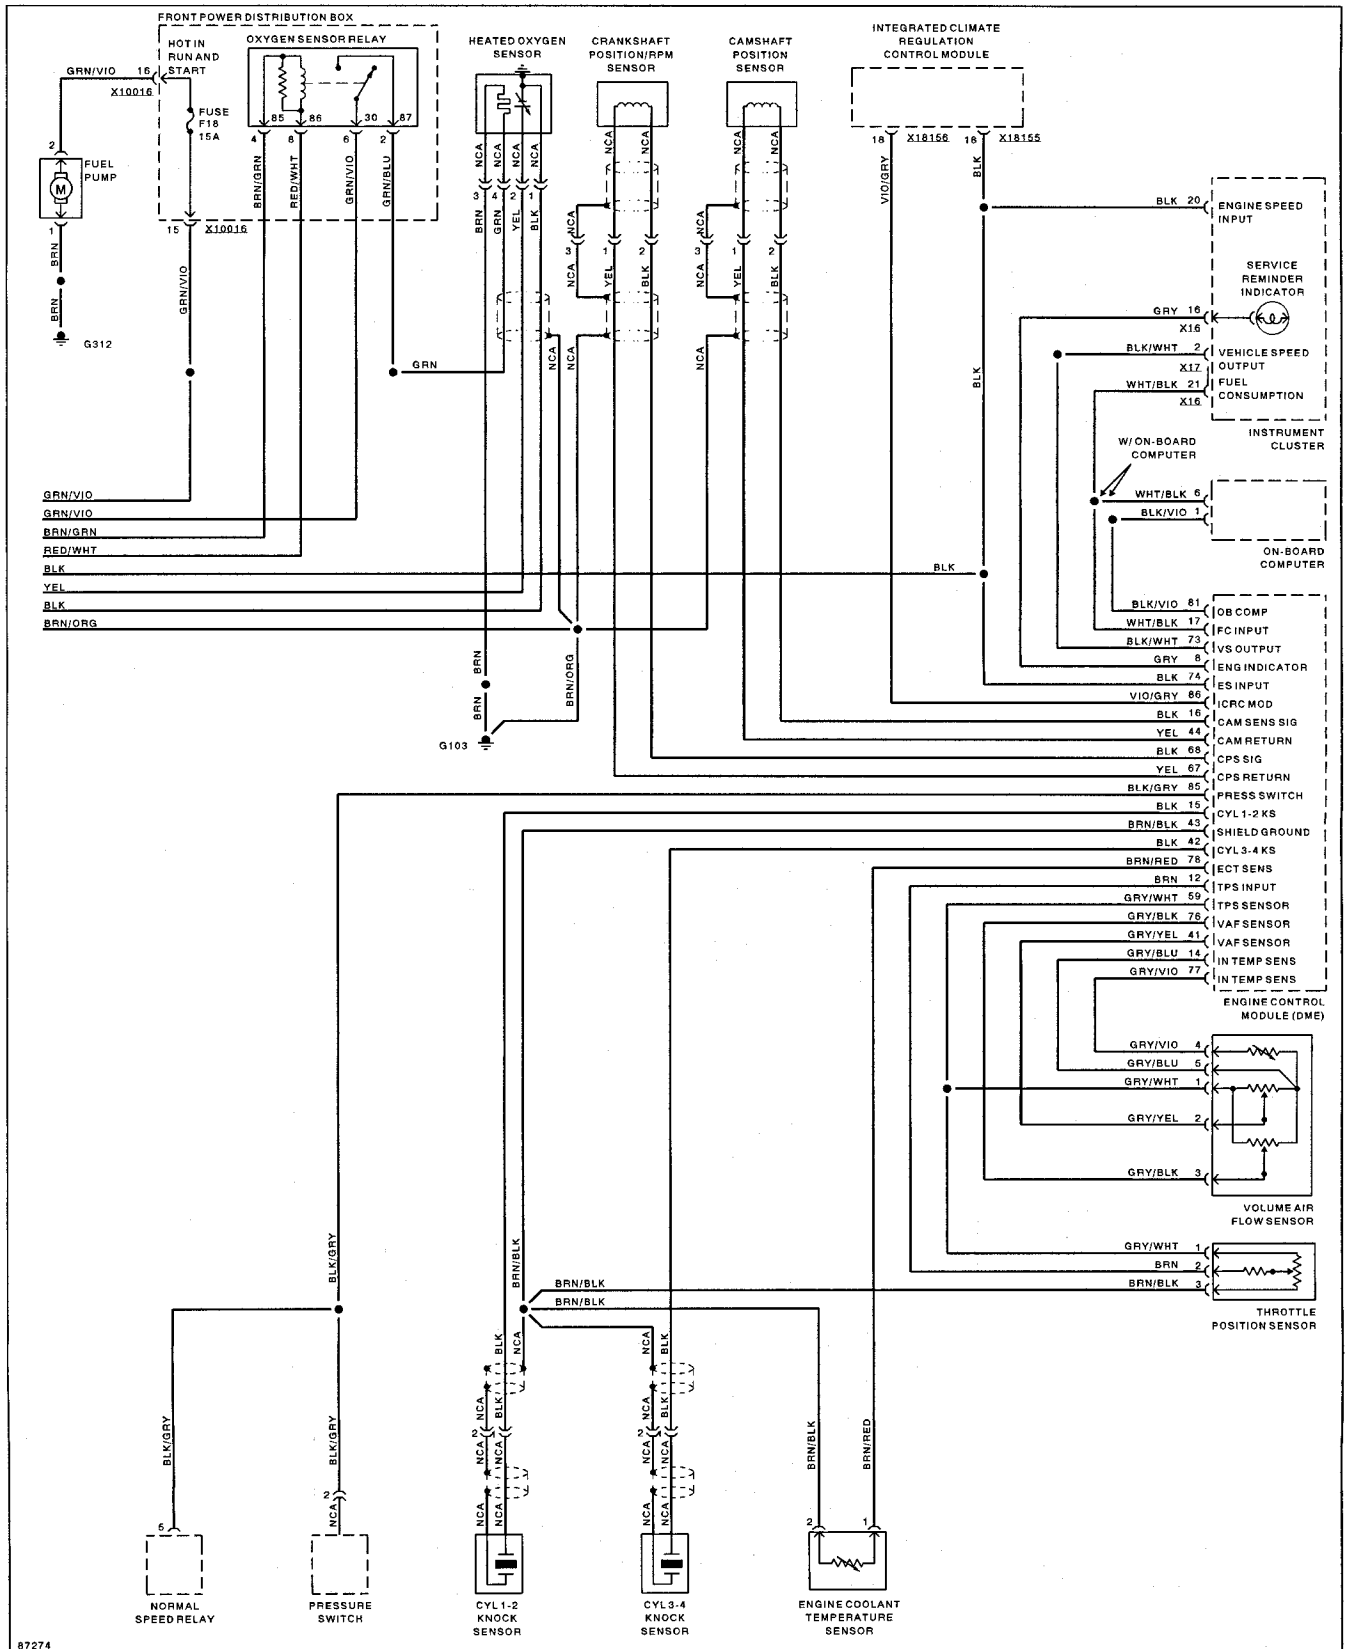


Engine Management

1992 2.5L (1 of 2)

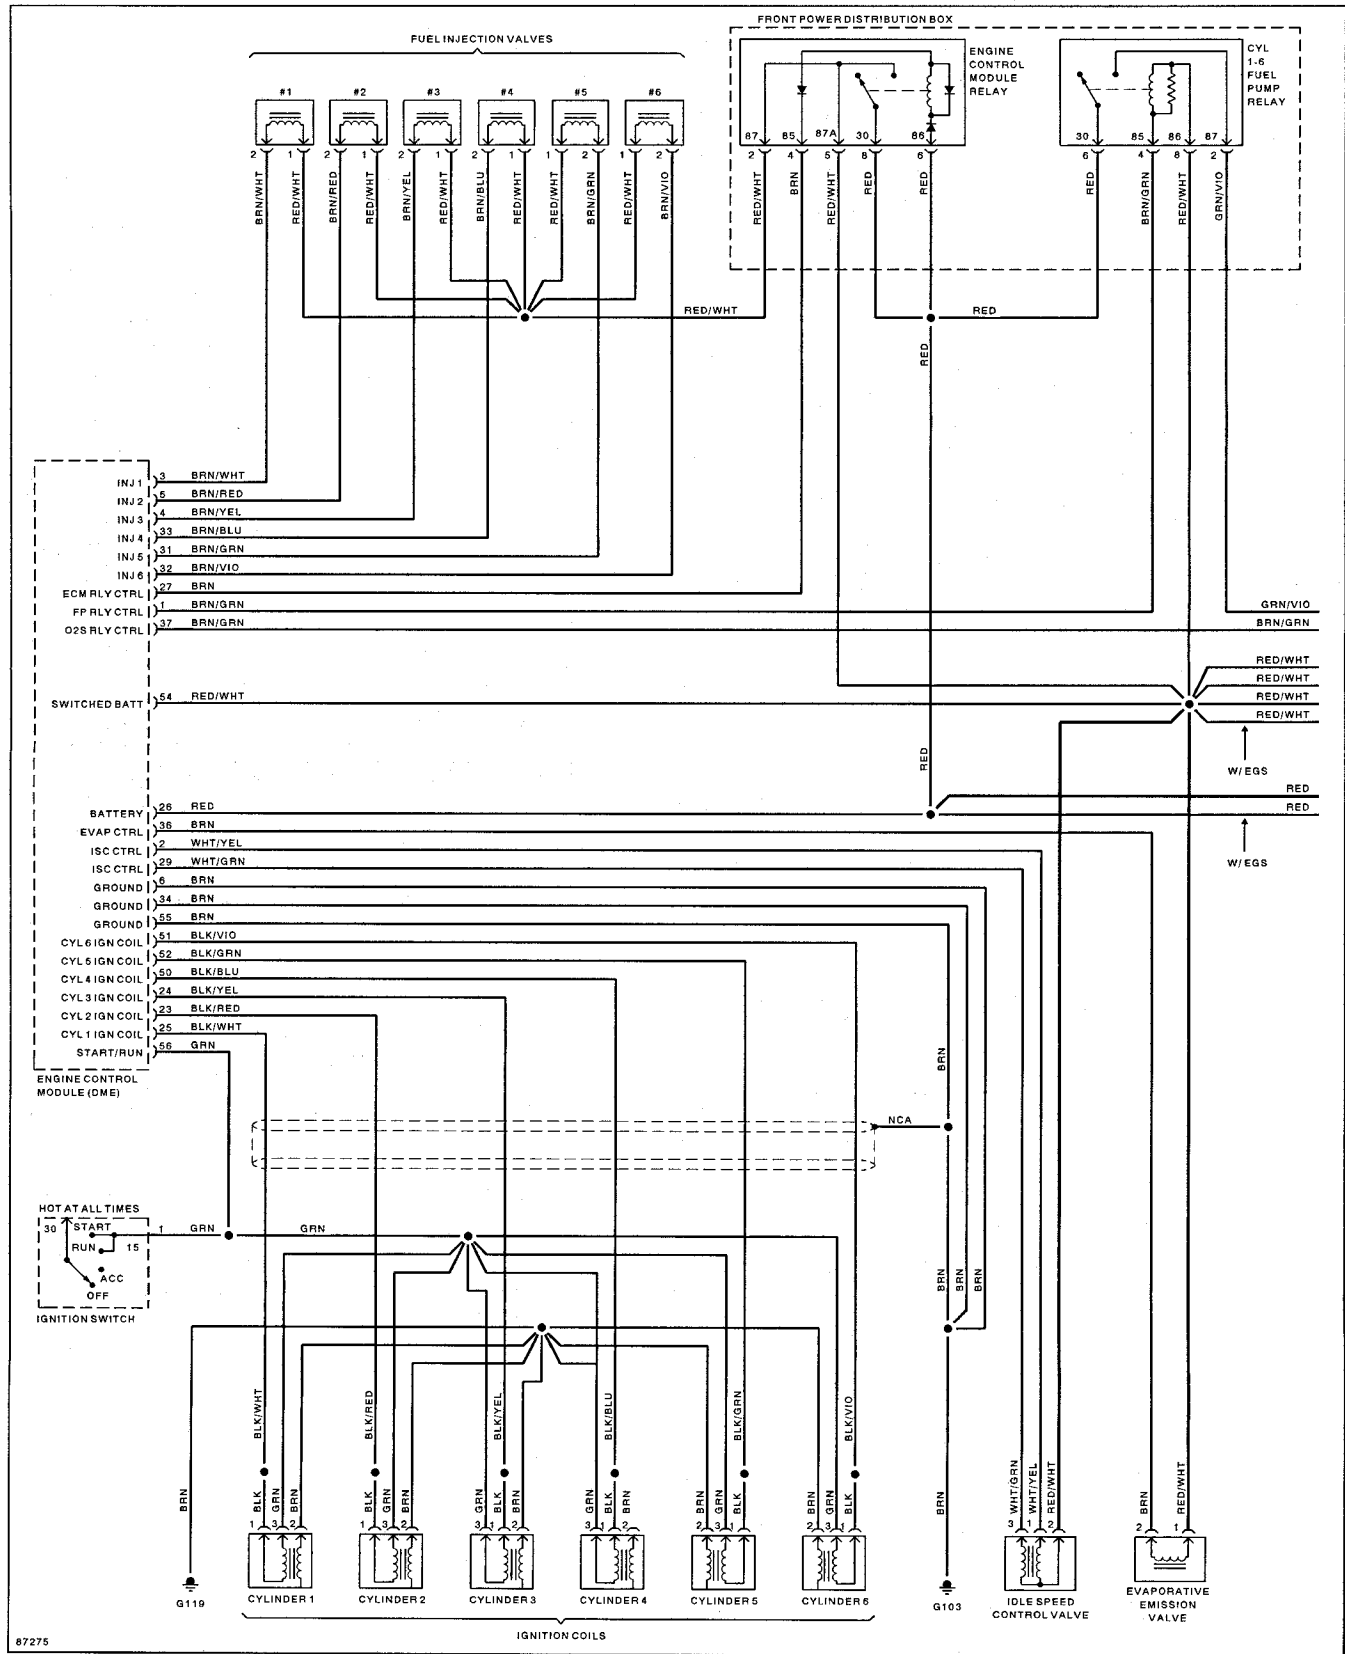


Engine Management

1992 2.5L (2 of 2)

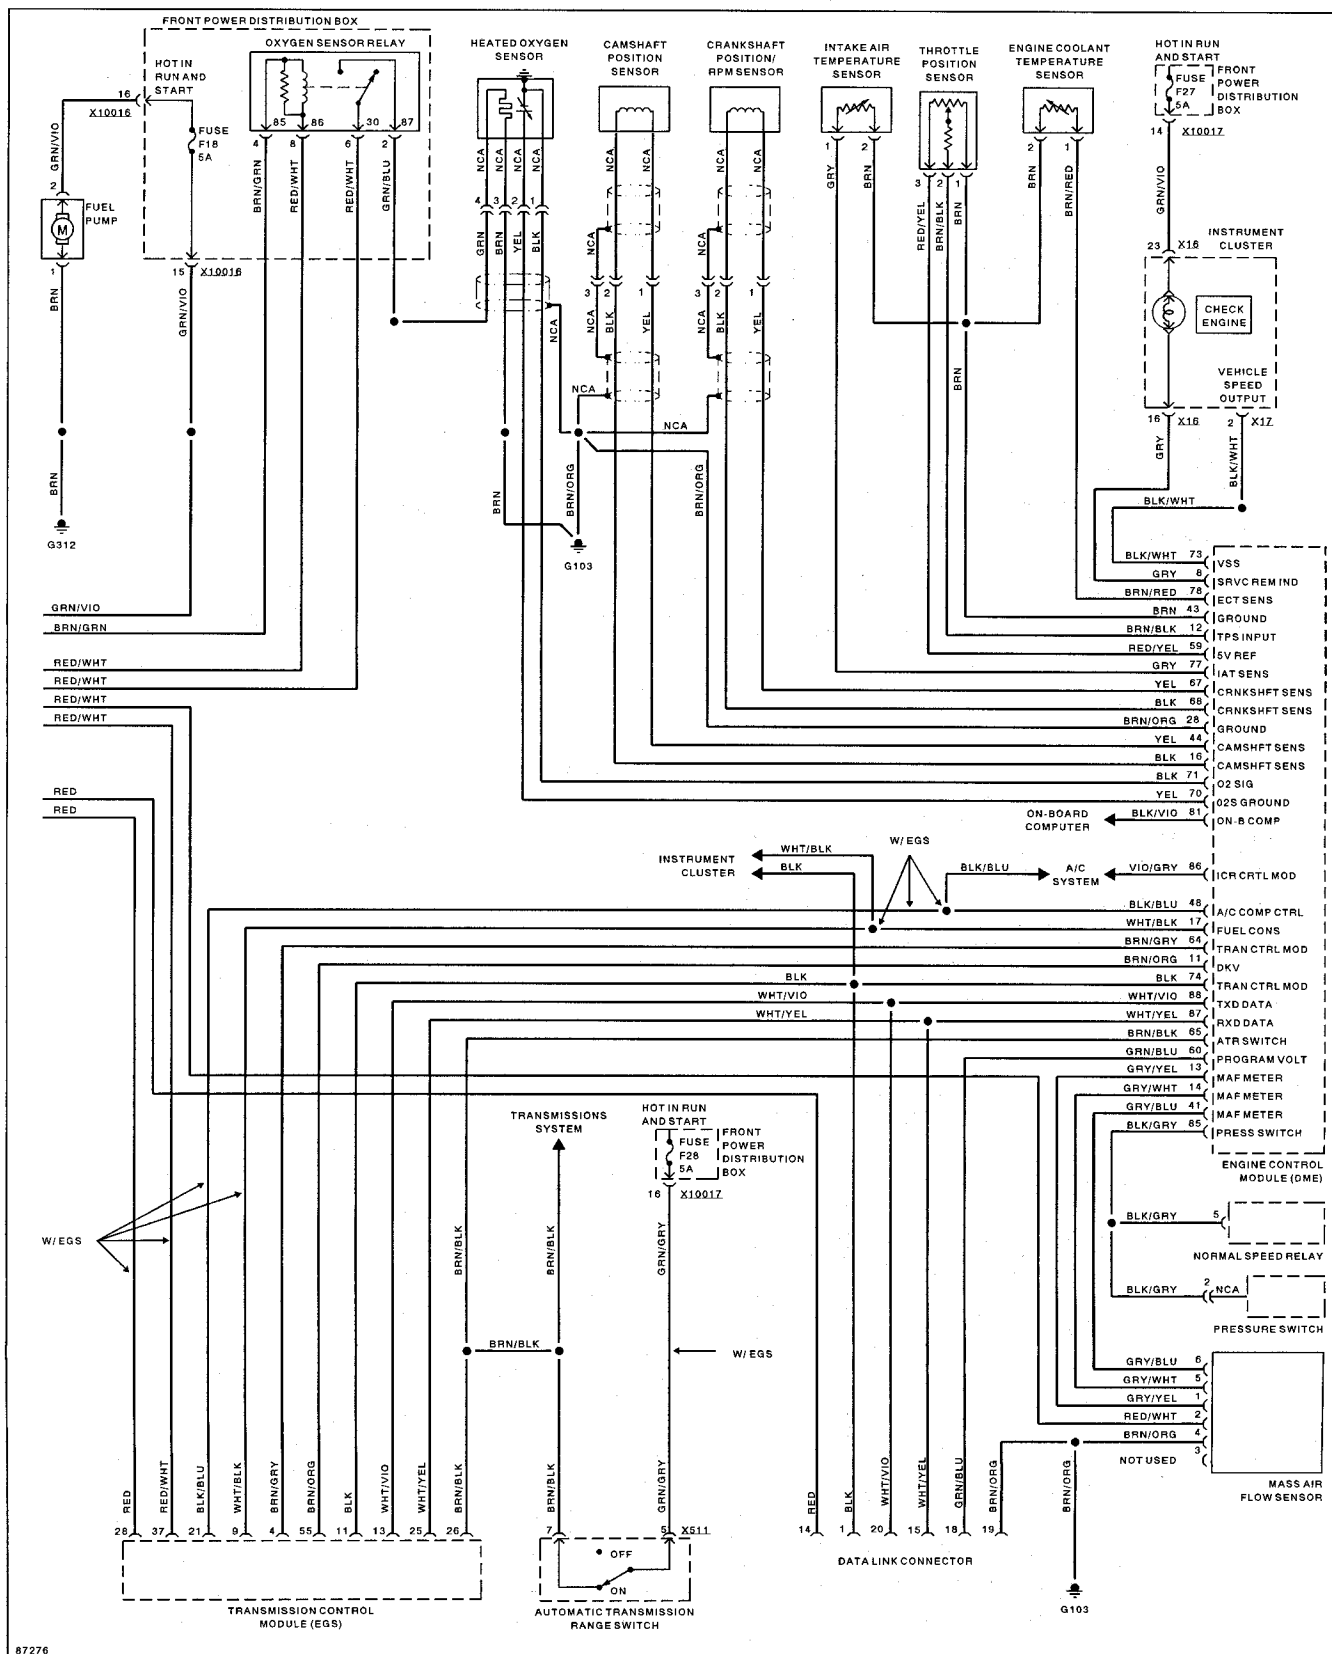

Engine Management

1993-95 1.8L (1 of 2)

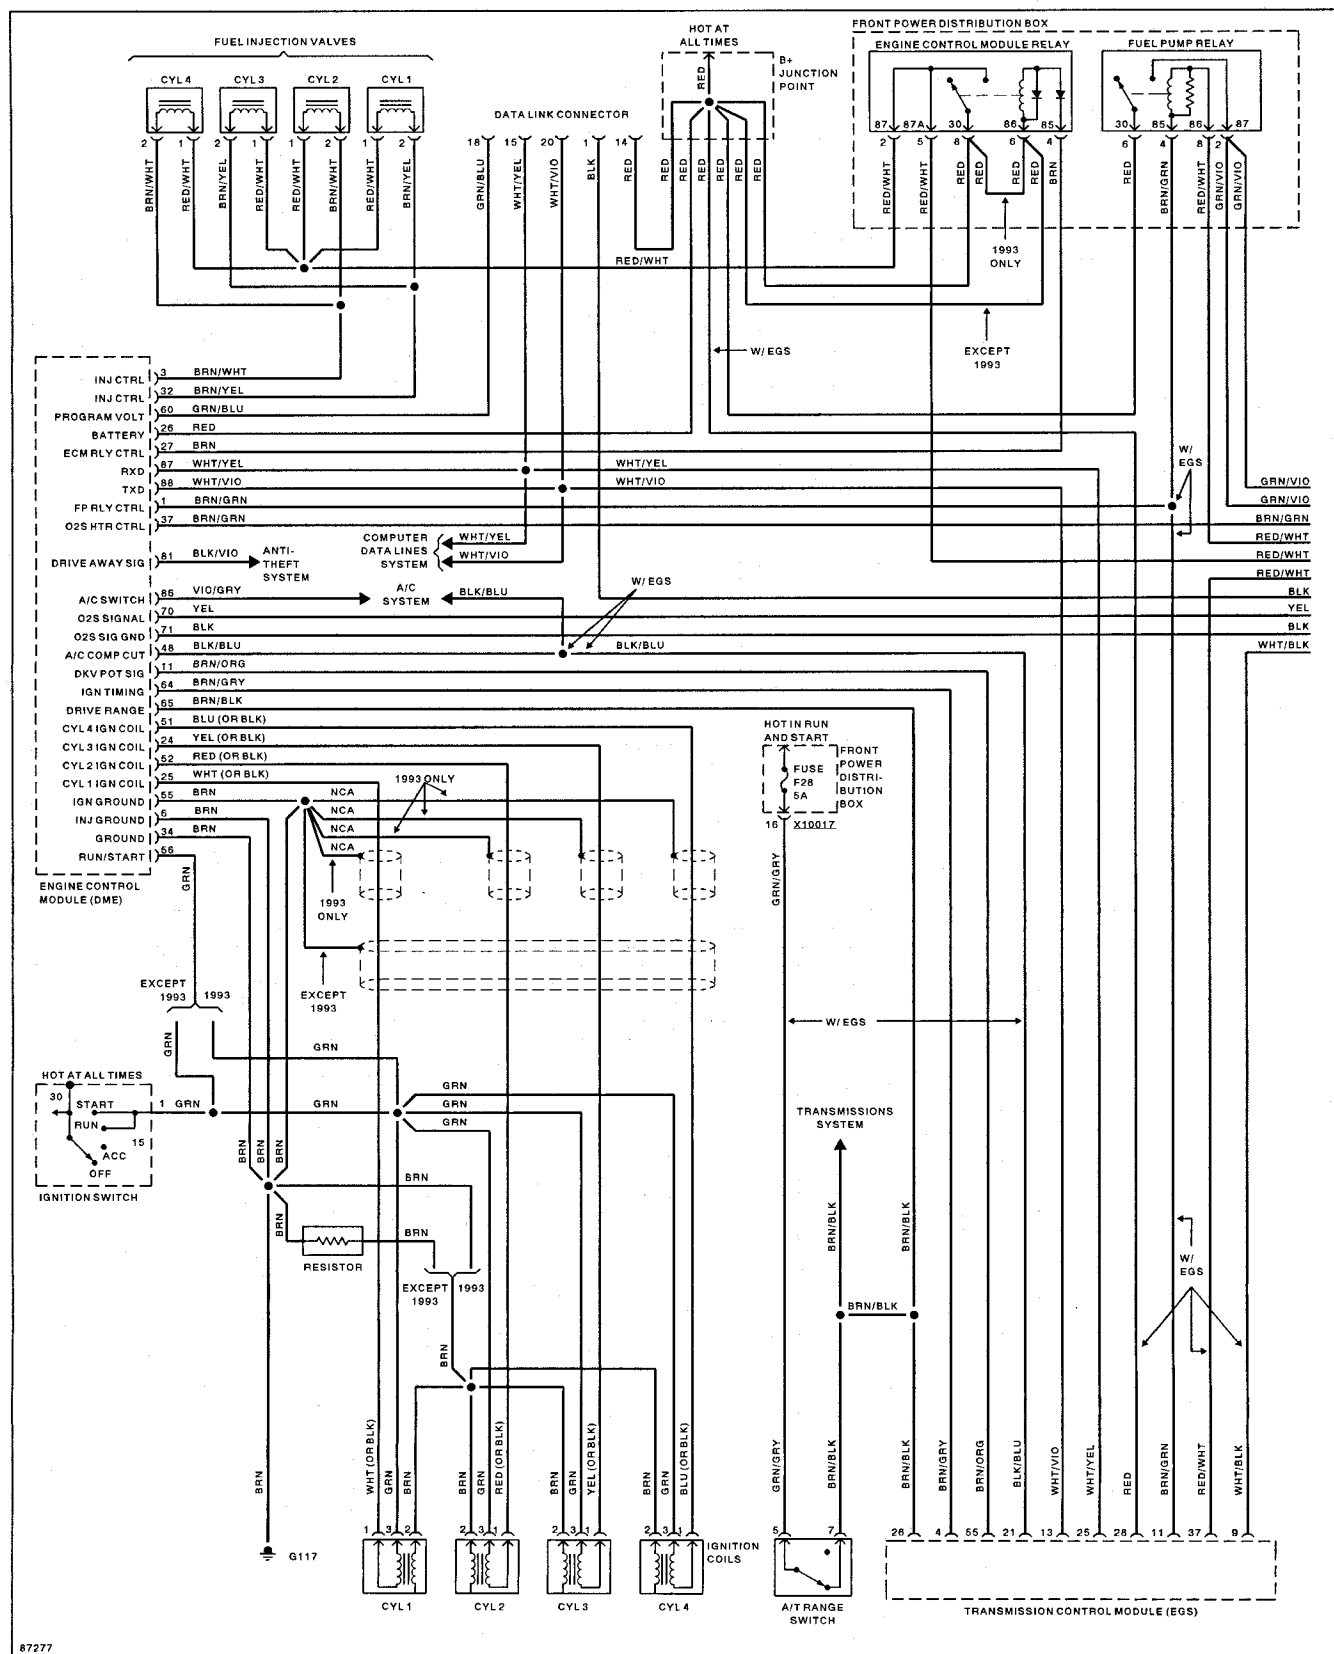


Engine Management

1993-95 1.8L (2 of 2)




Engine Management

1993-95 2.5L (1 of 2)

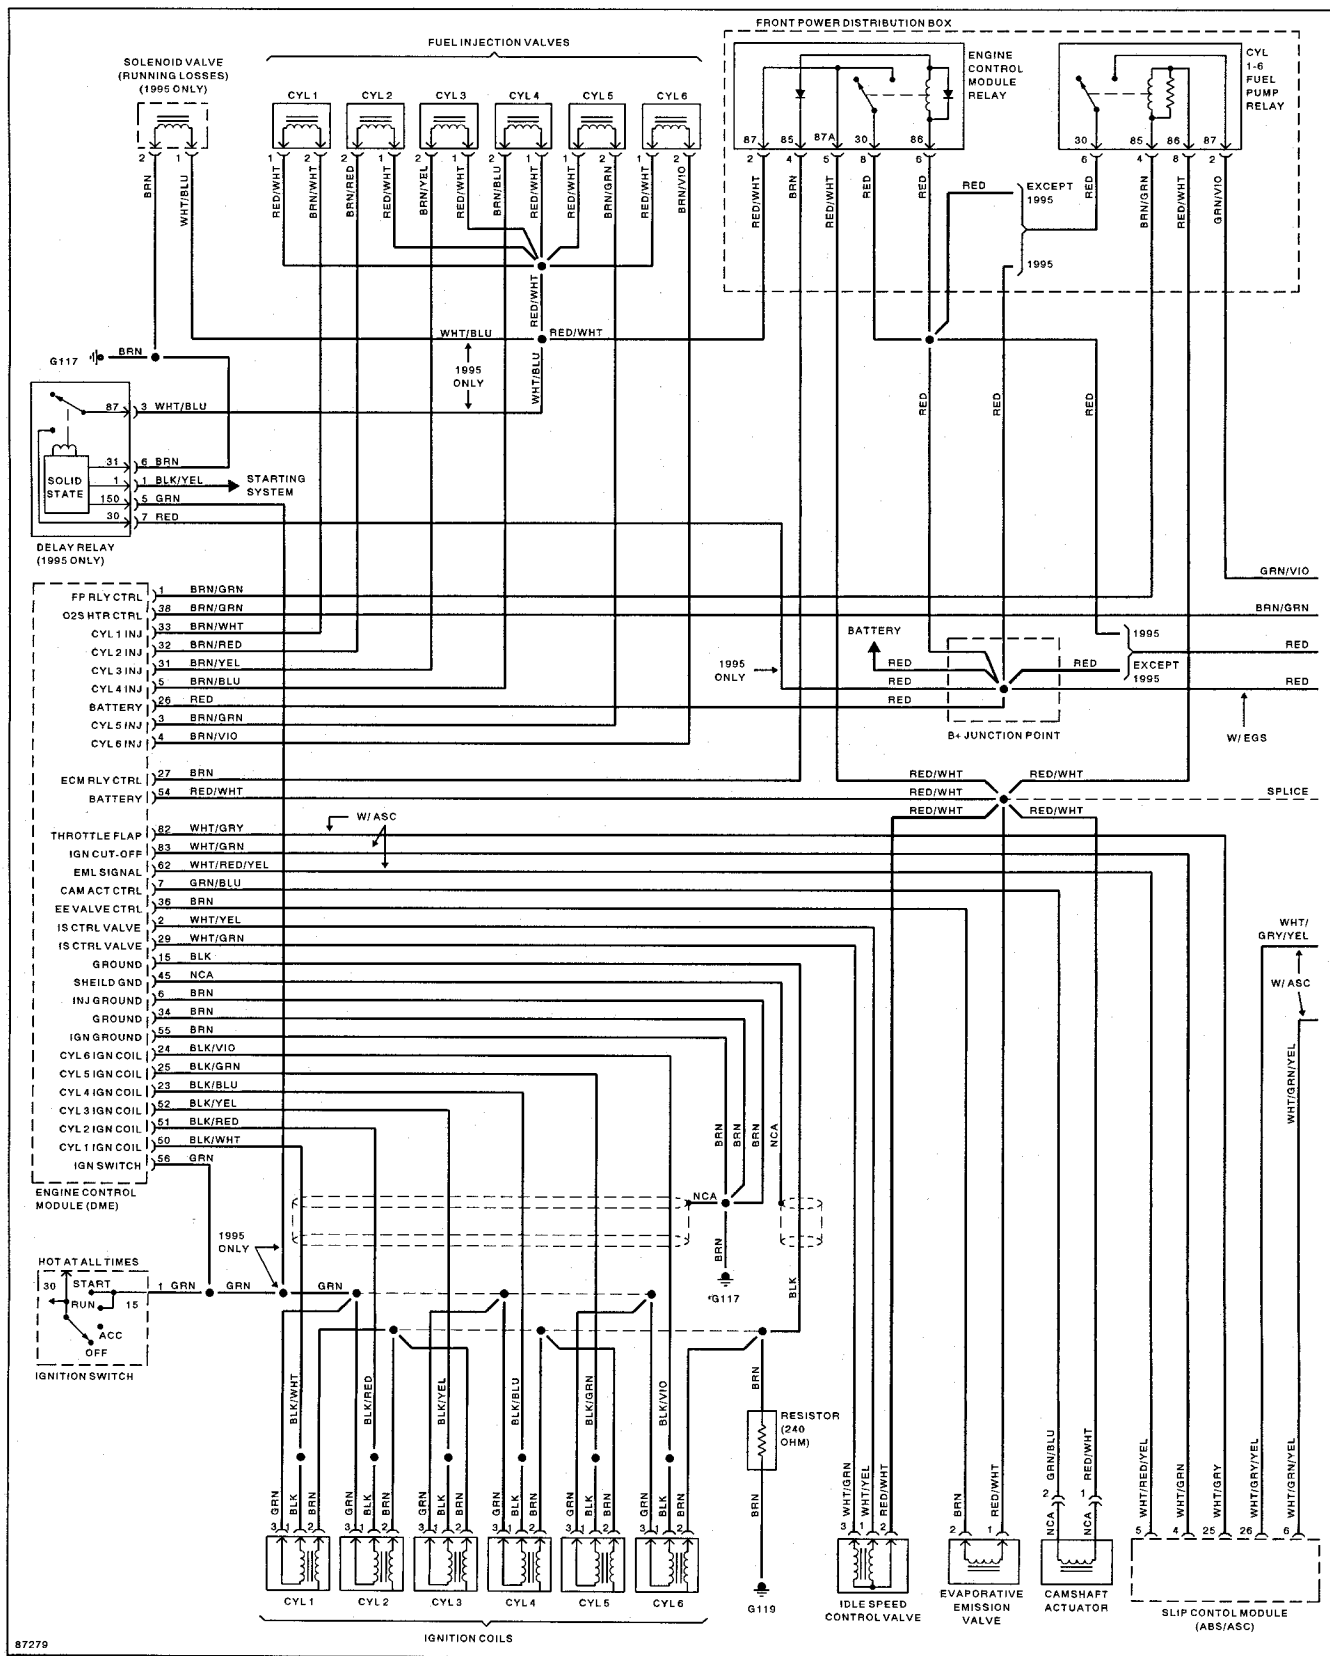


Engine Management

1993-95 2.5L (2 of 2)

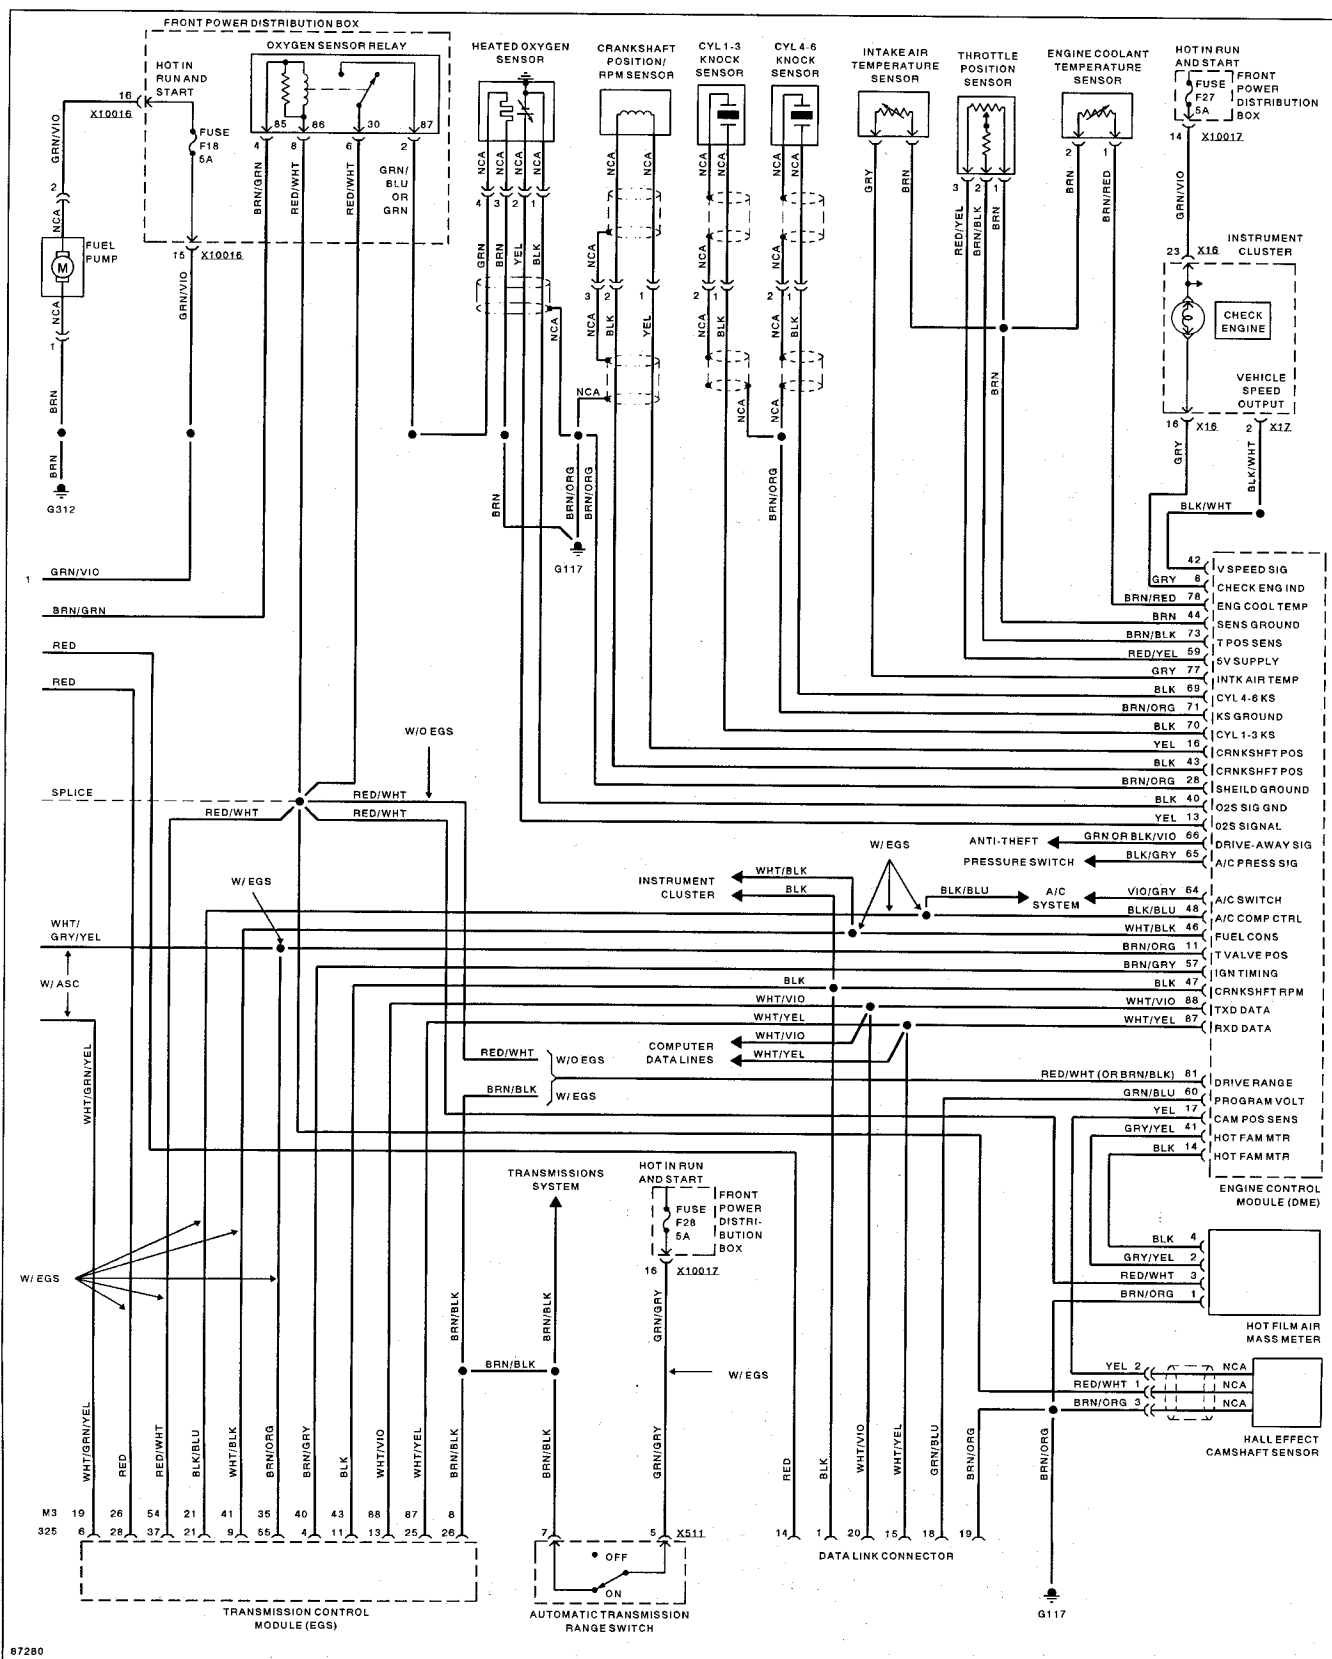


Engine Management

1996-97 1.9L (1 of 2)

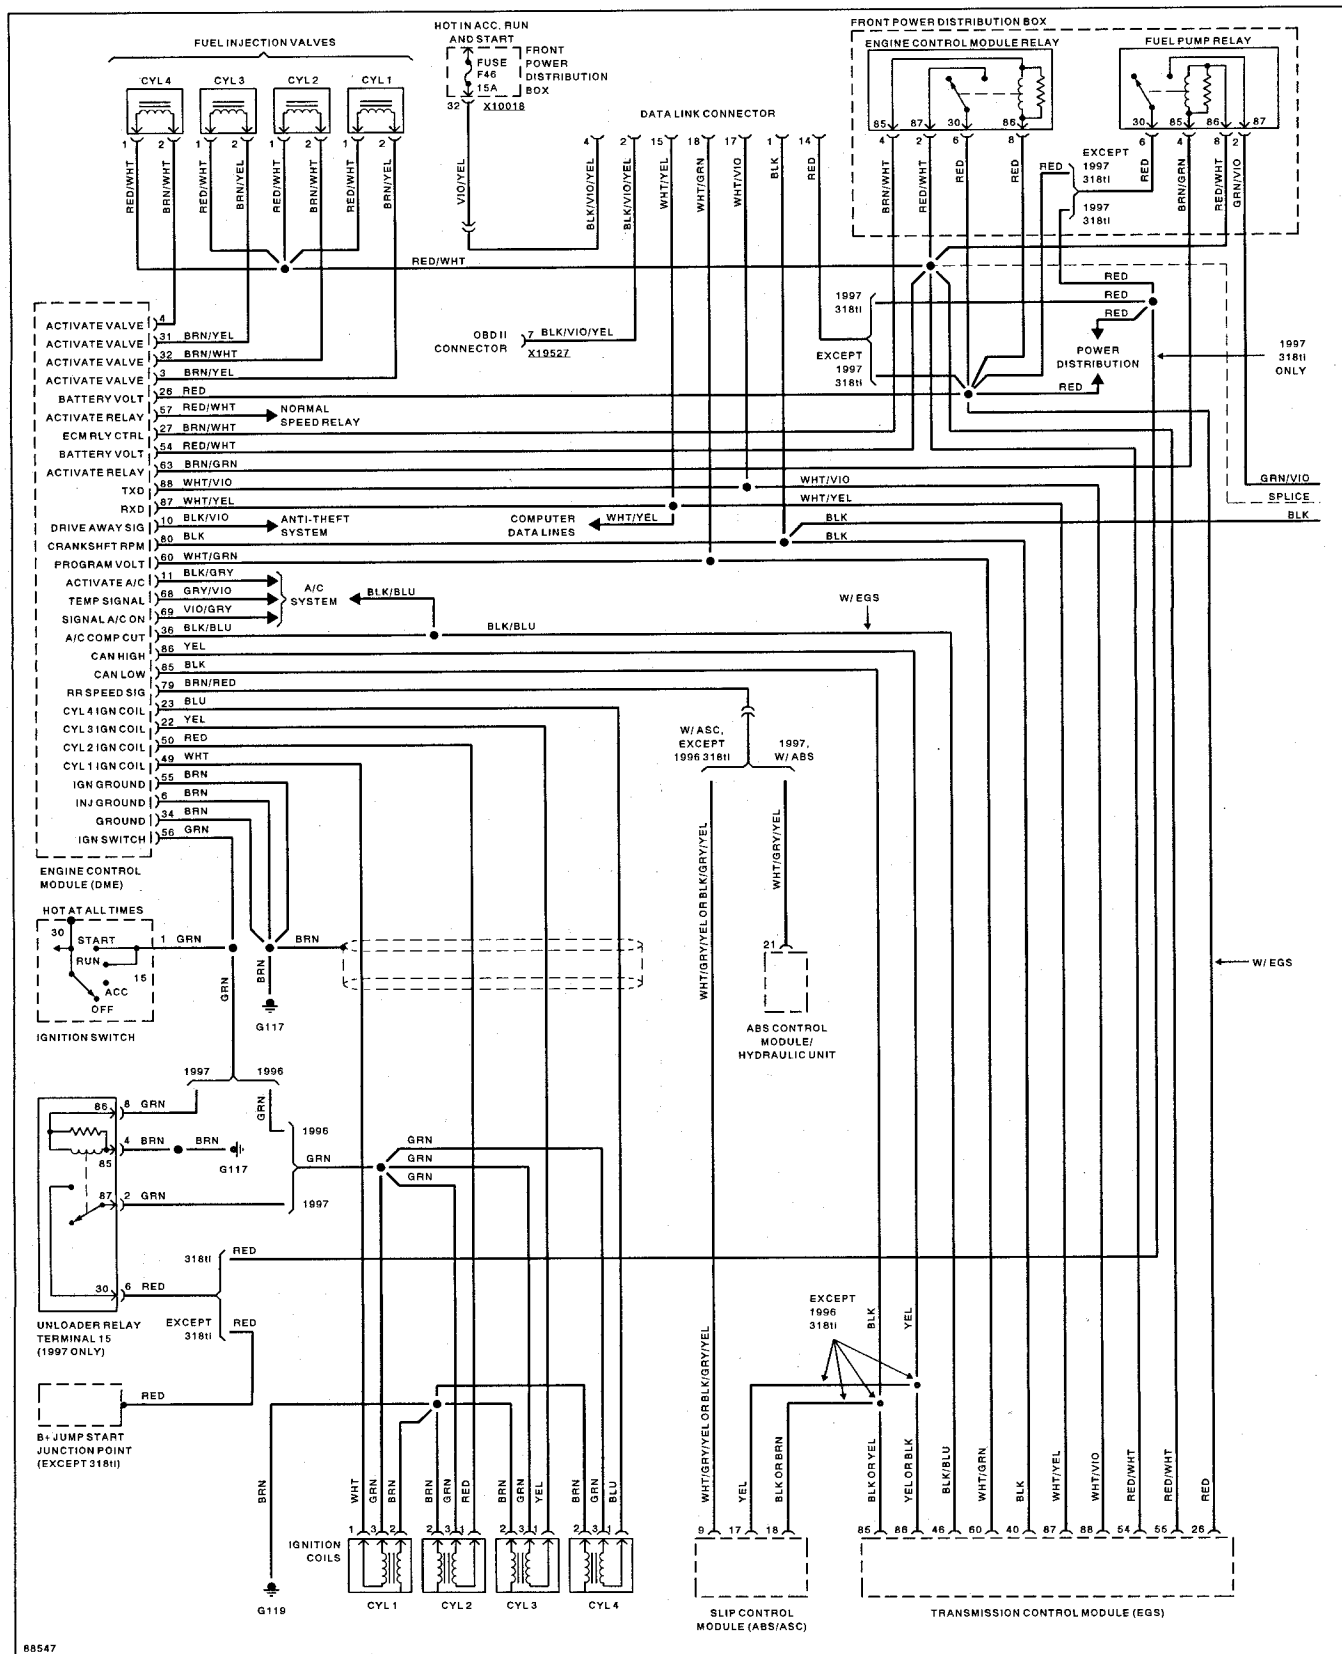


Engine Management


1996-97 1.9L (2 of 2)

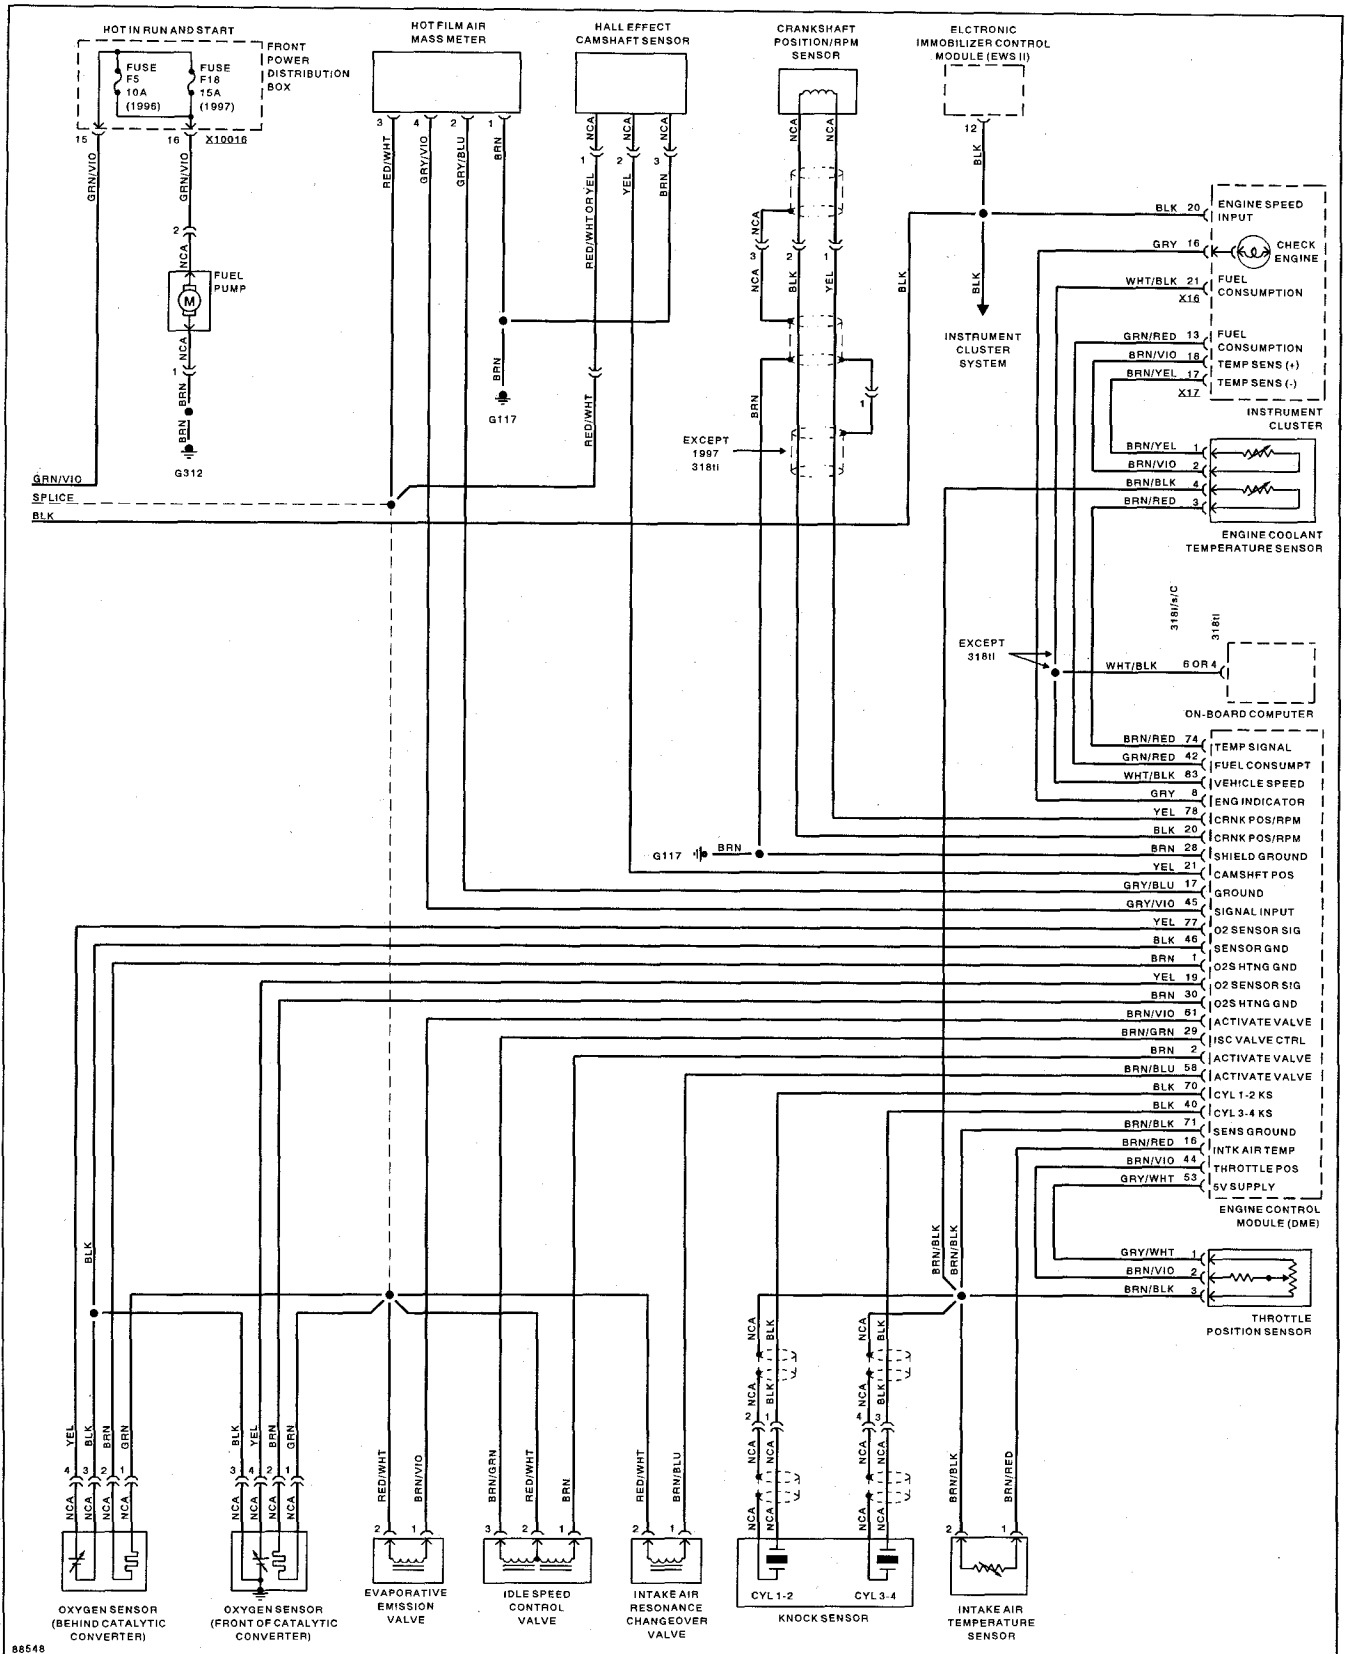

Engine Management


1996-97 2.8L (1 of 2)

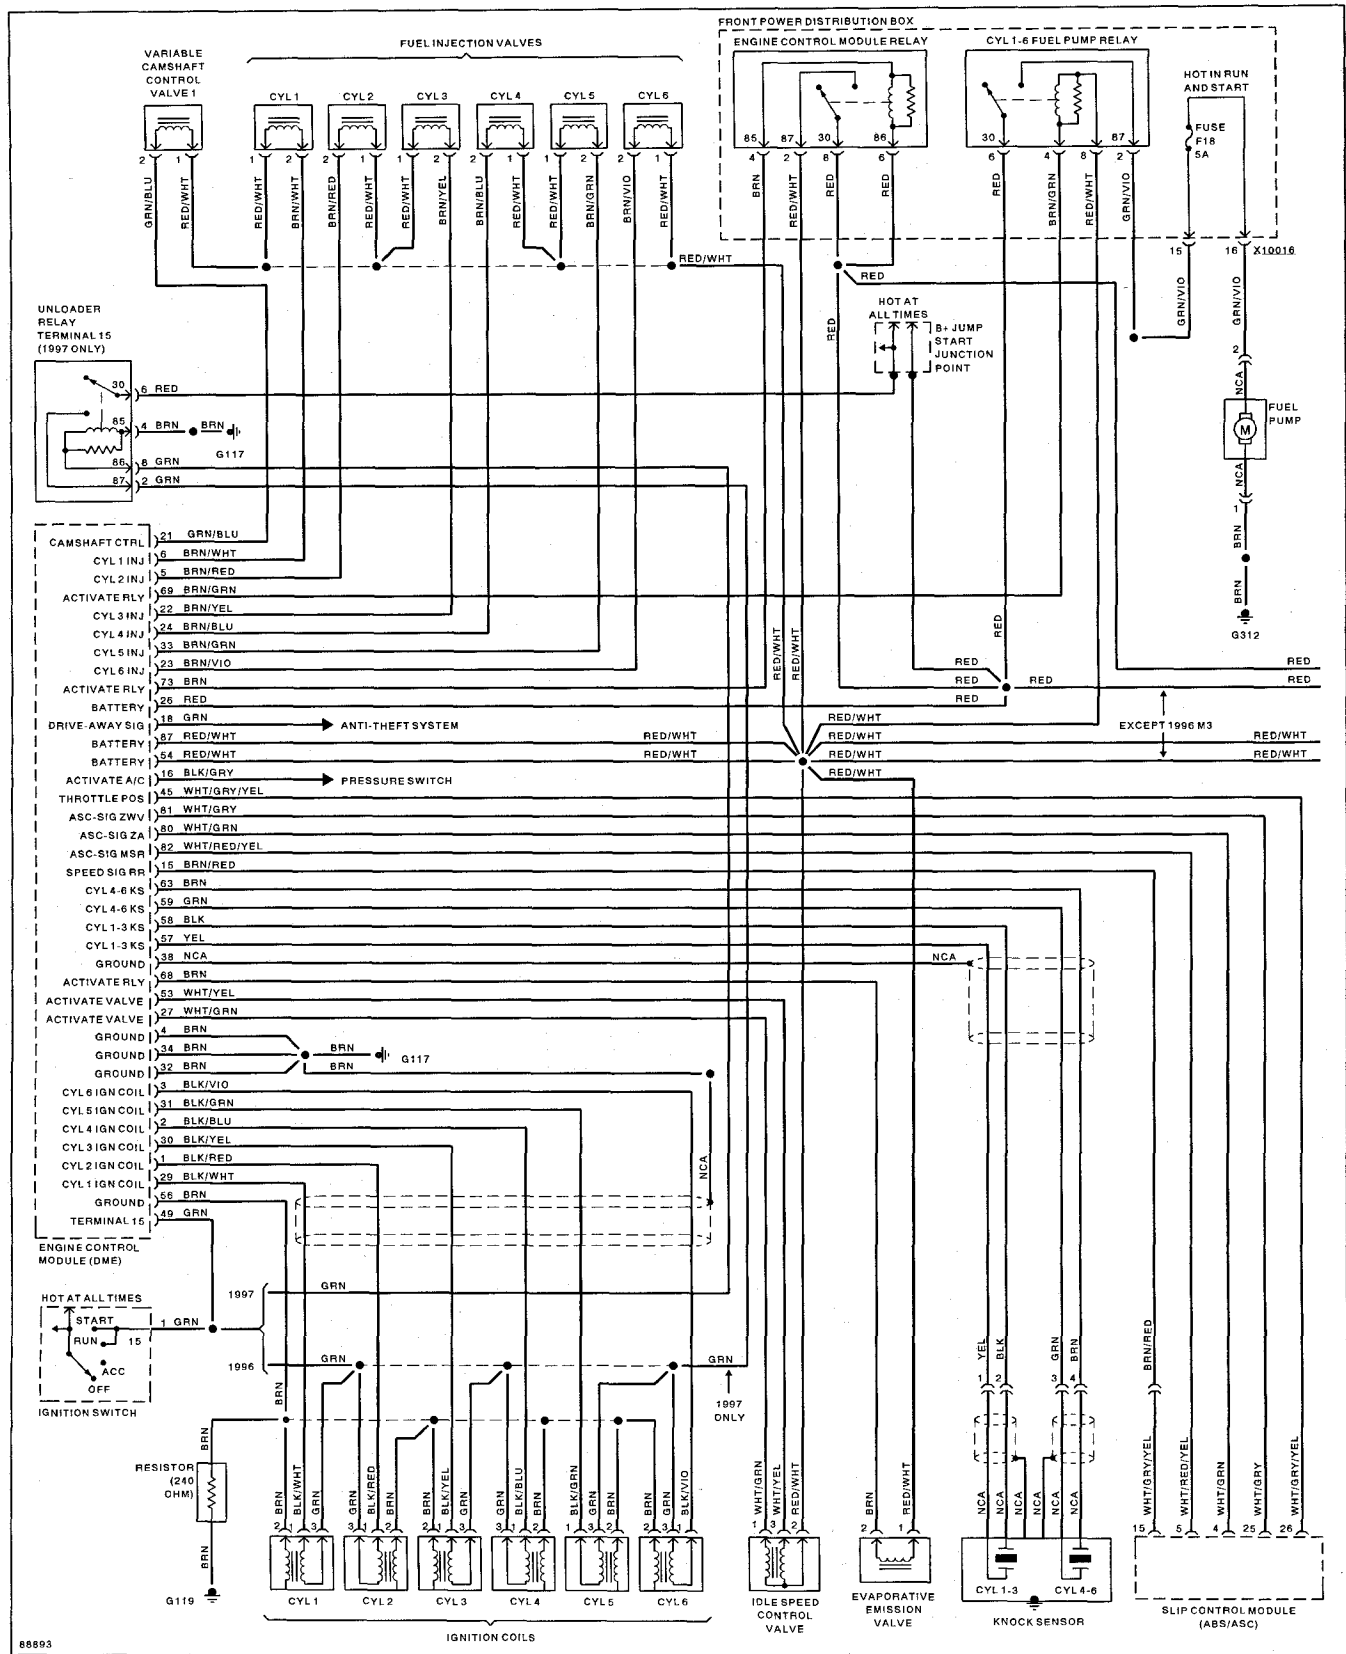

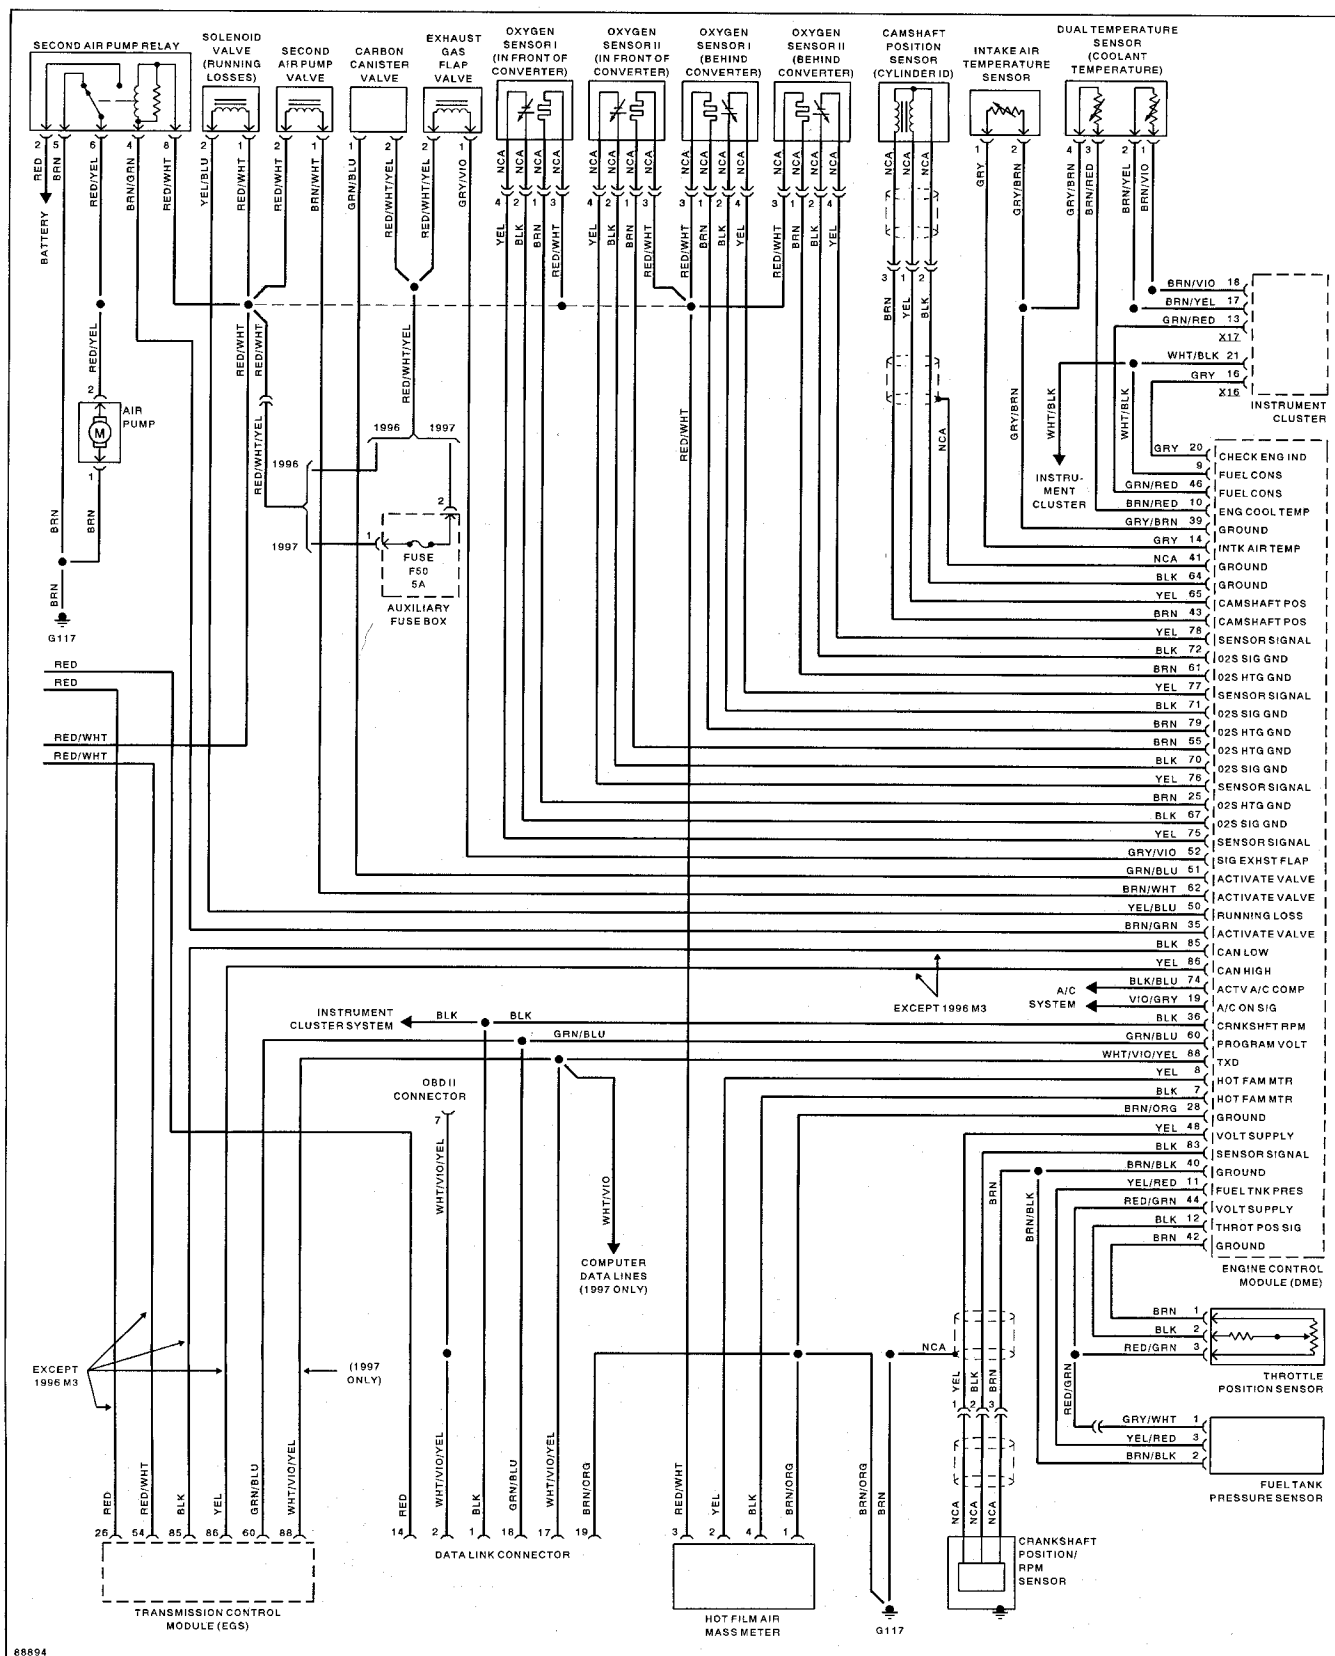


Engine Management

1998 1.9L (1 of 2)

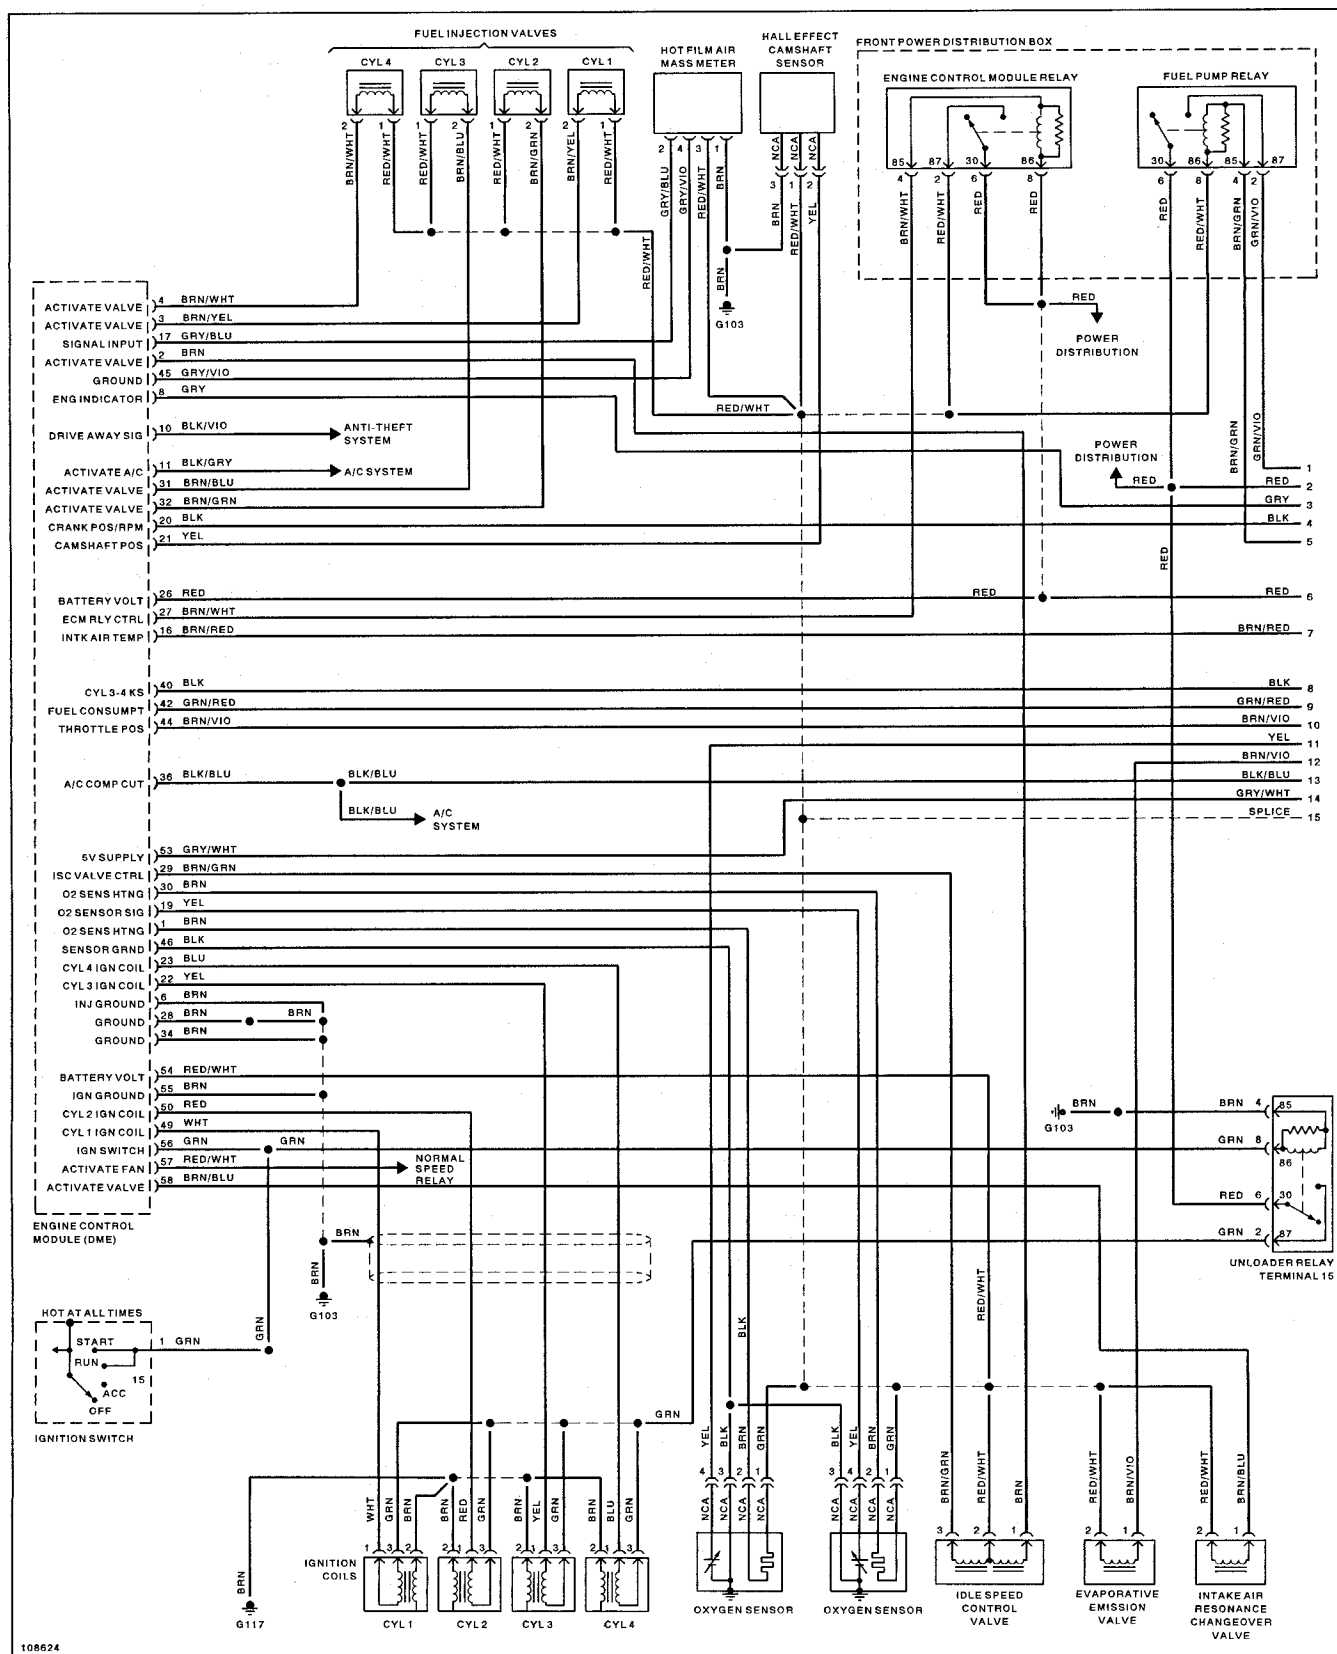


Engine Management

1998 1.9L (2 of 2)

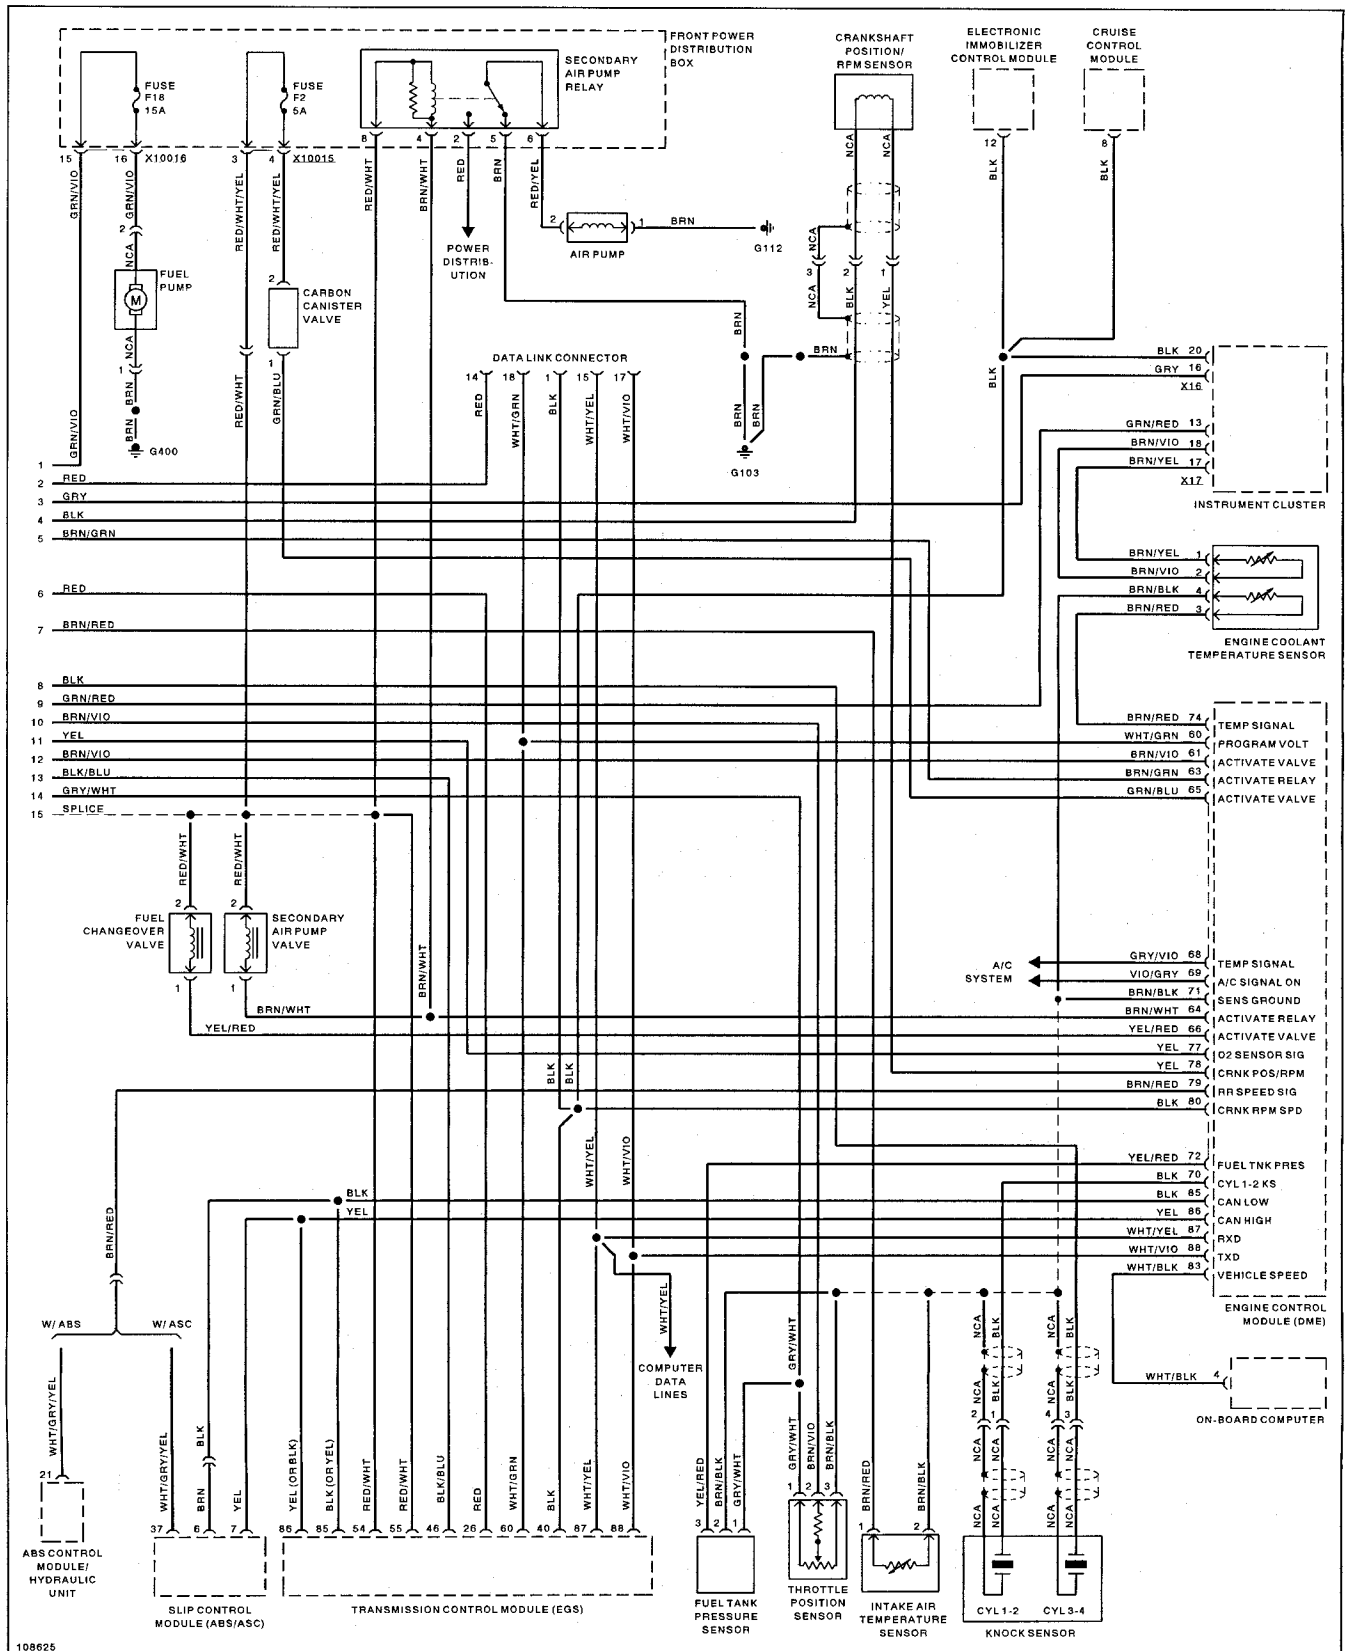


Engine Management

1998 2.5L (323i), 2.8L (328i), 3.2L (M3) (1 of 2)

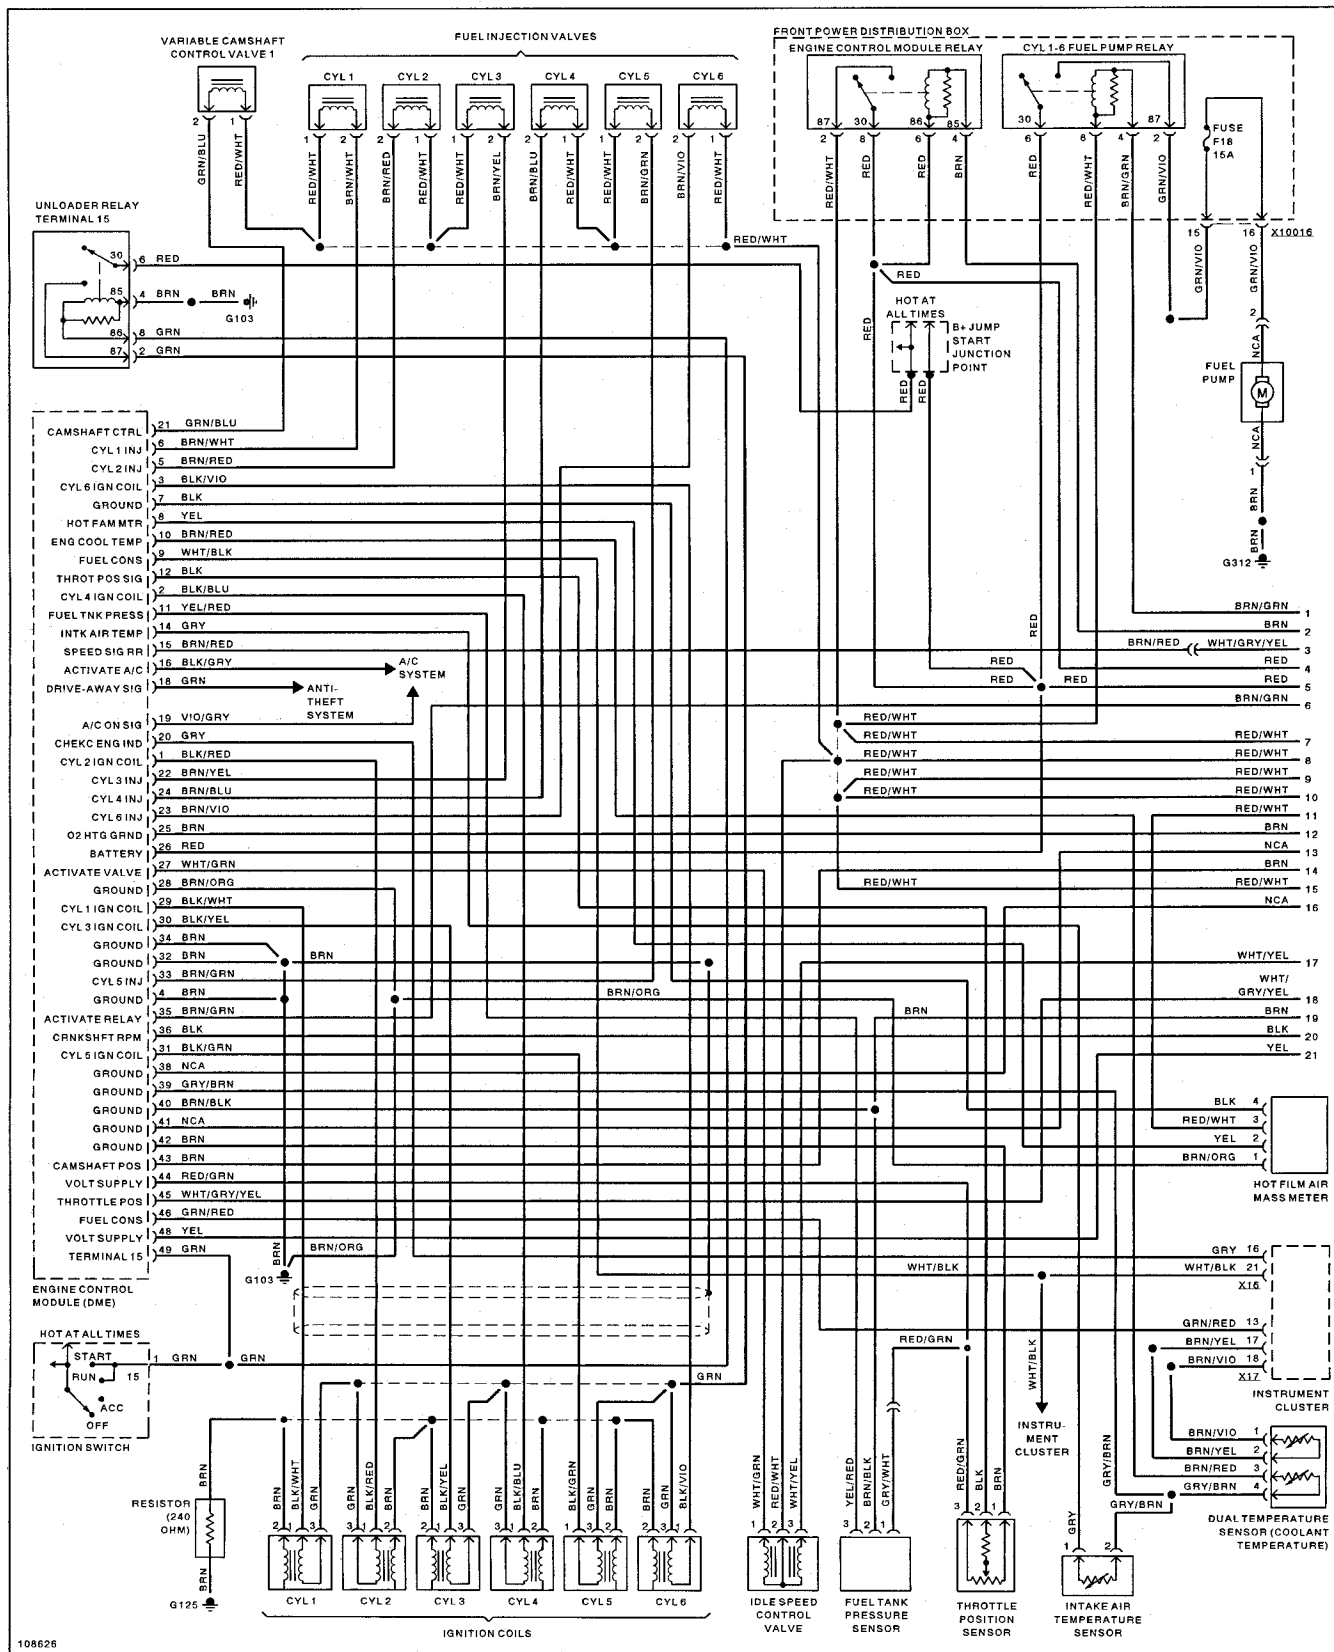


Engine Management

1998 2.5L (323i), 2.8L (328i), 3.2L (M3) (2 of 2)

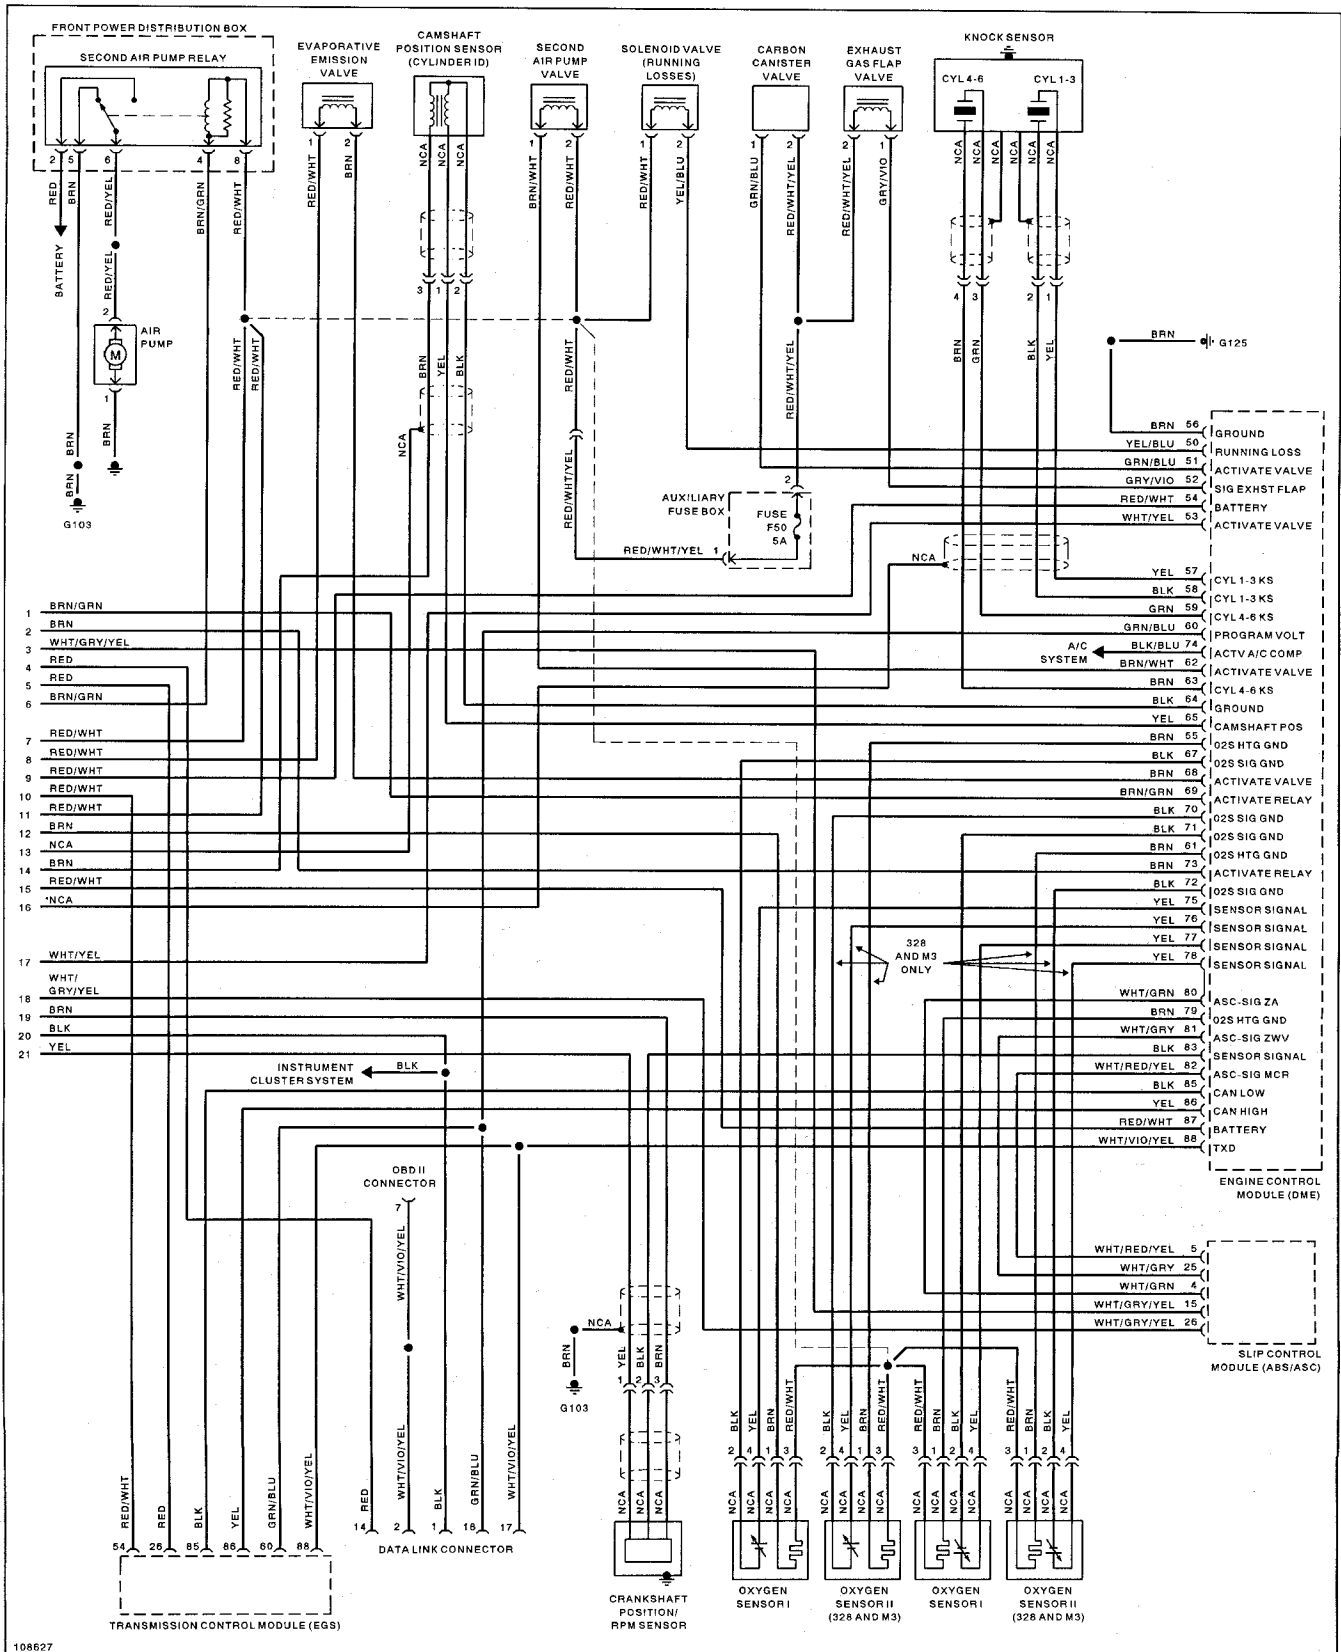


Data Link Connector

1992-93

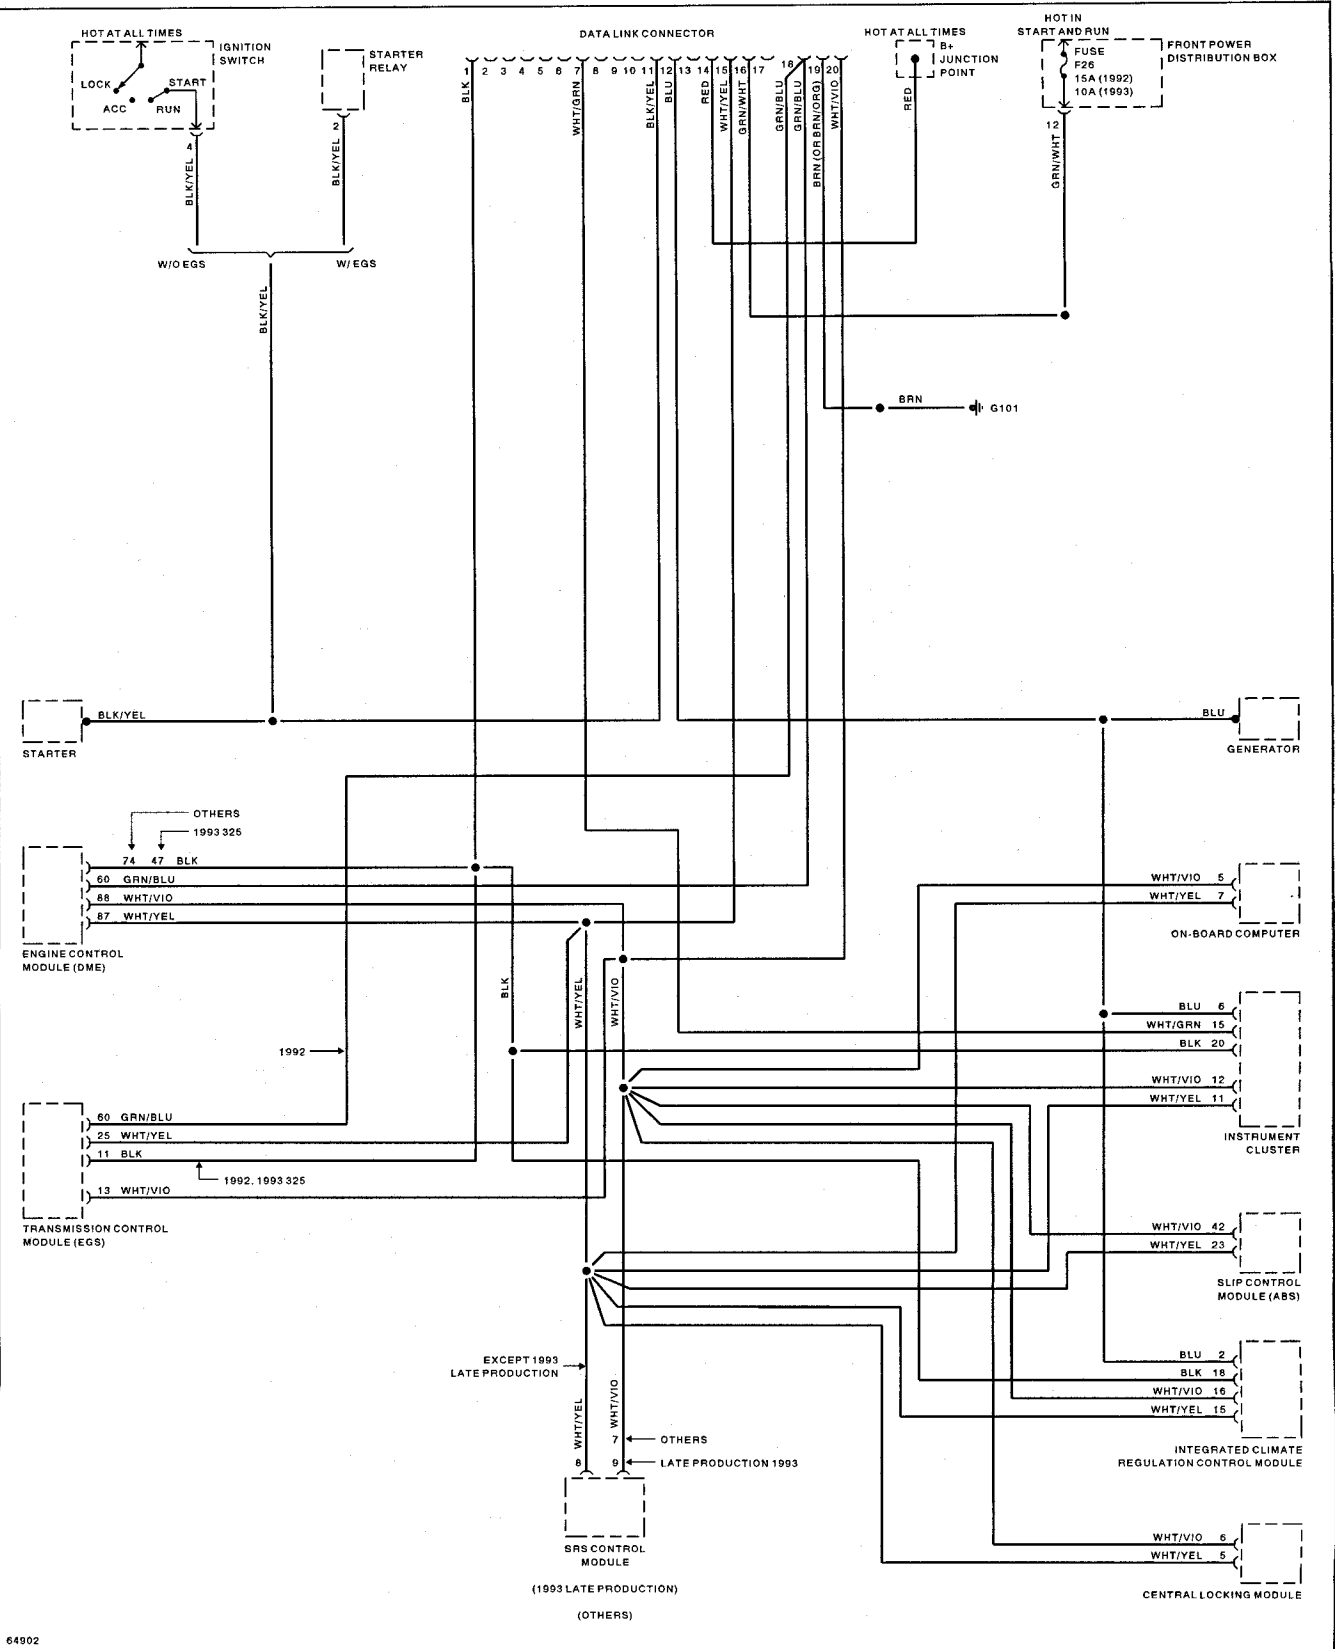


Data Link Connector

1994-95 Early Production Except 318ti

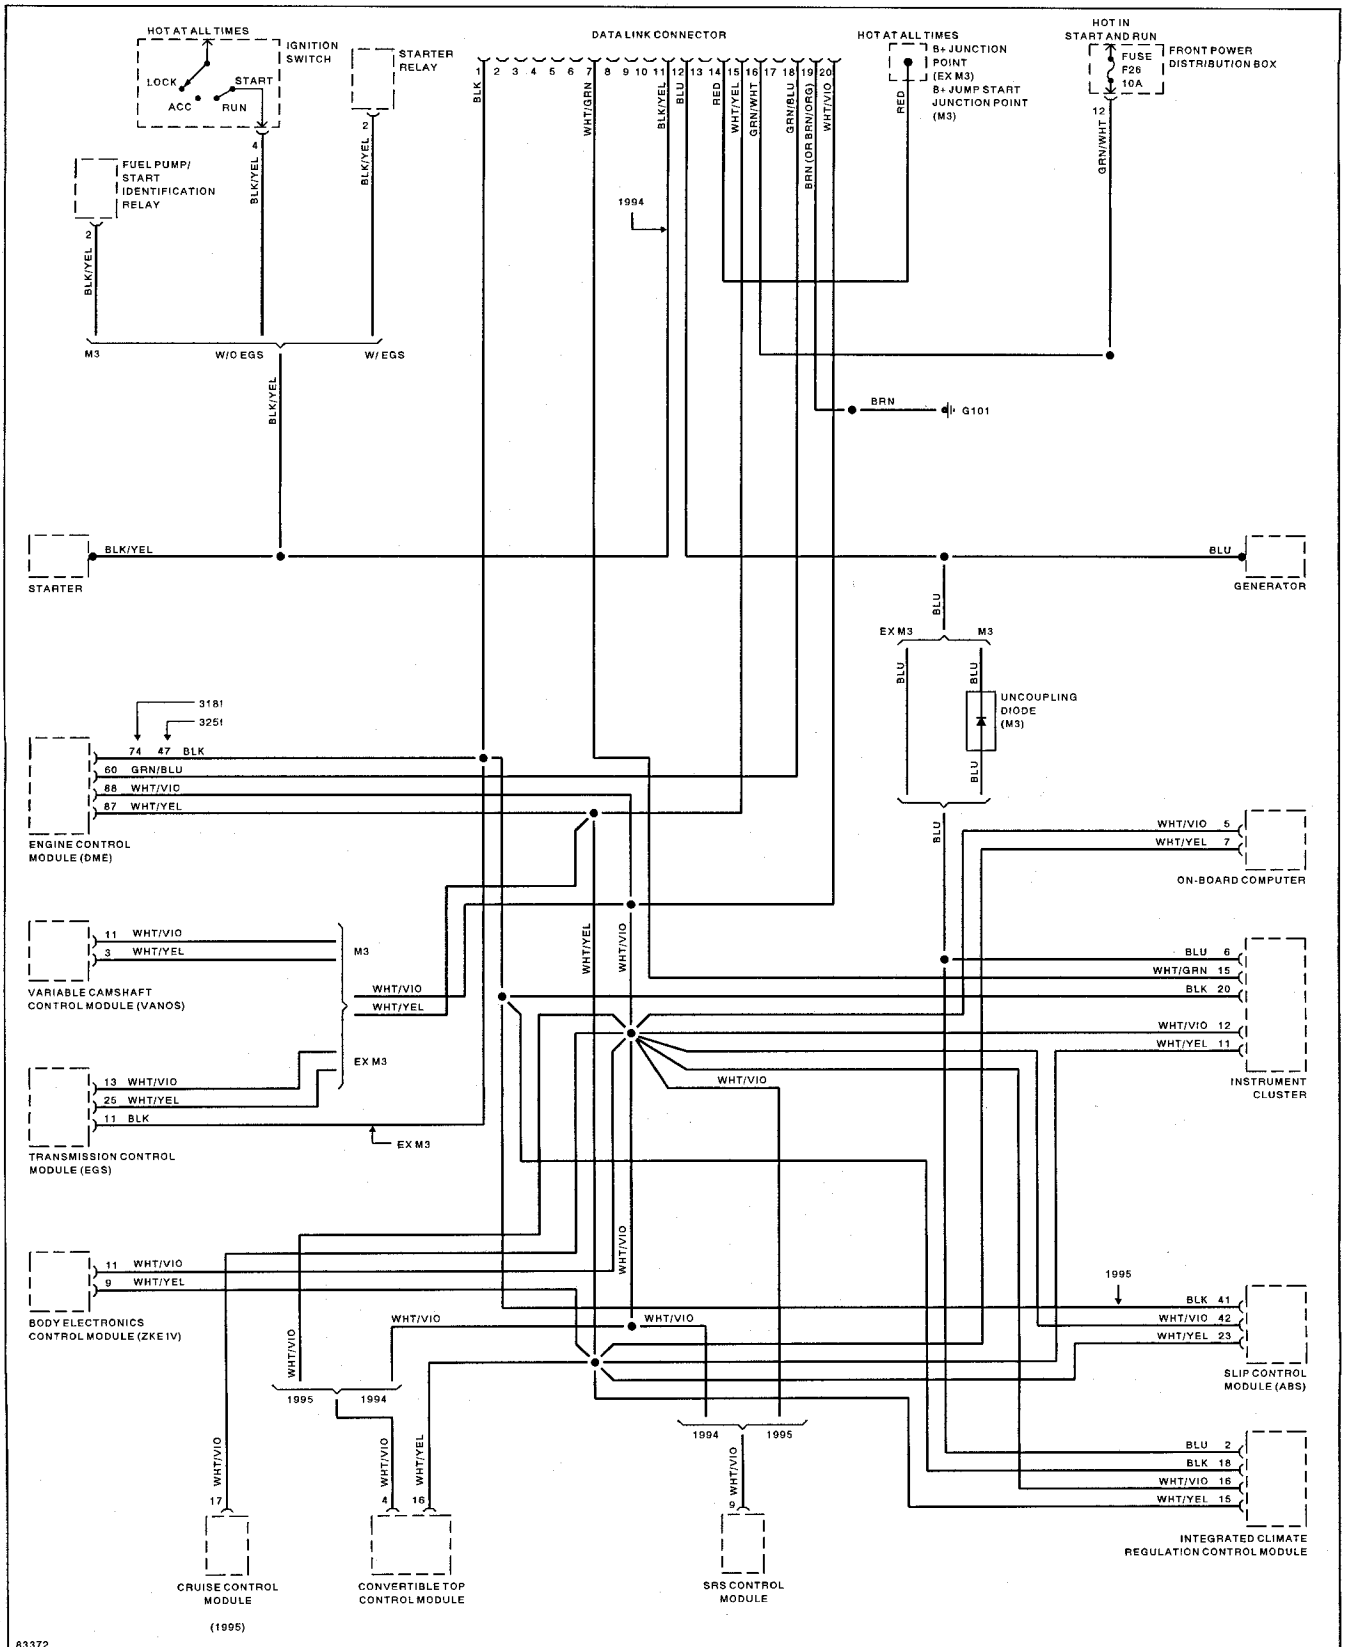


Data Link Connector

1995 Late Production Except 318ti

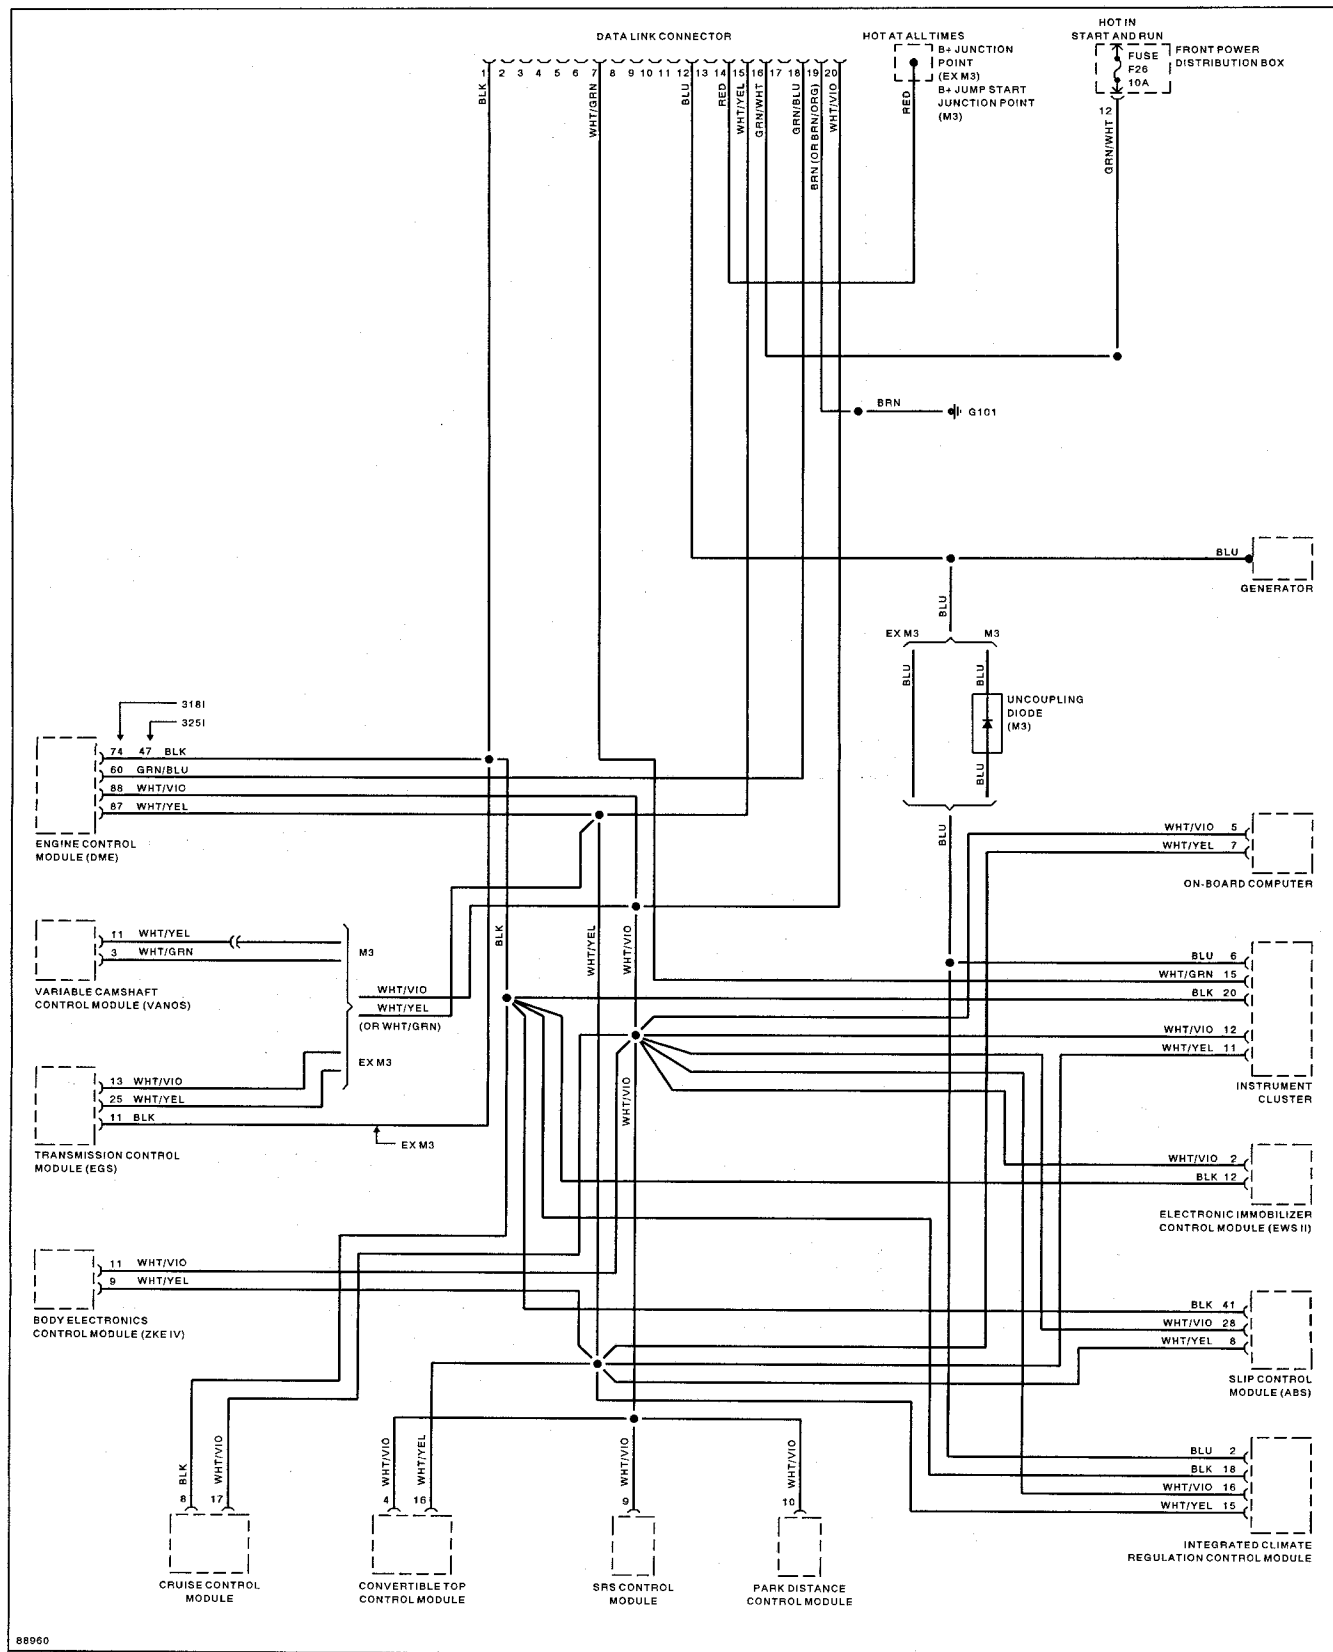


Data Link Connector

1996-97 Except 318ti

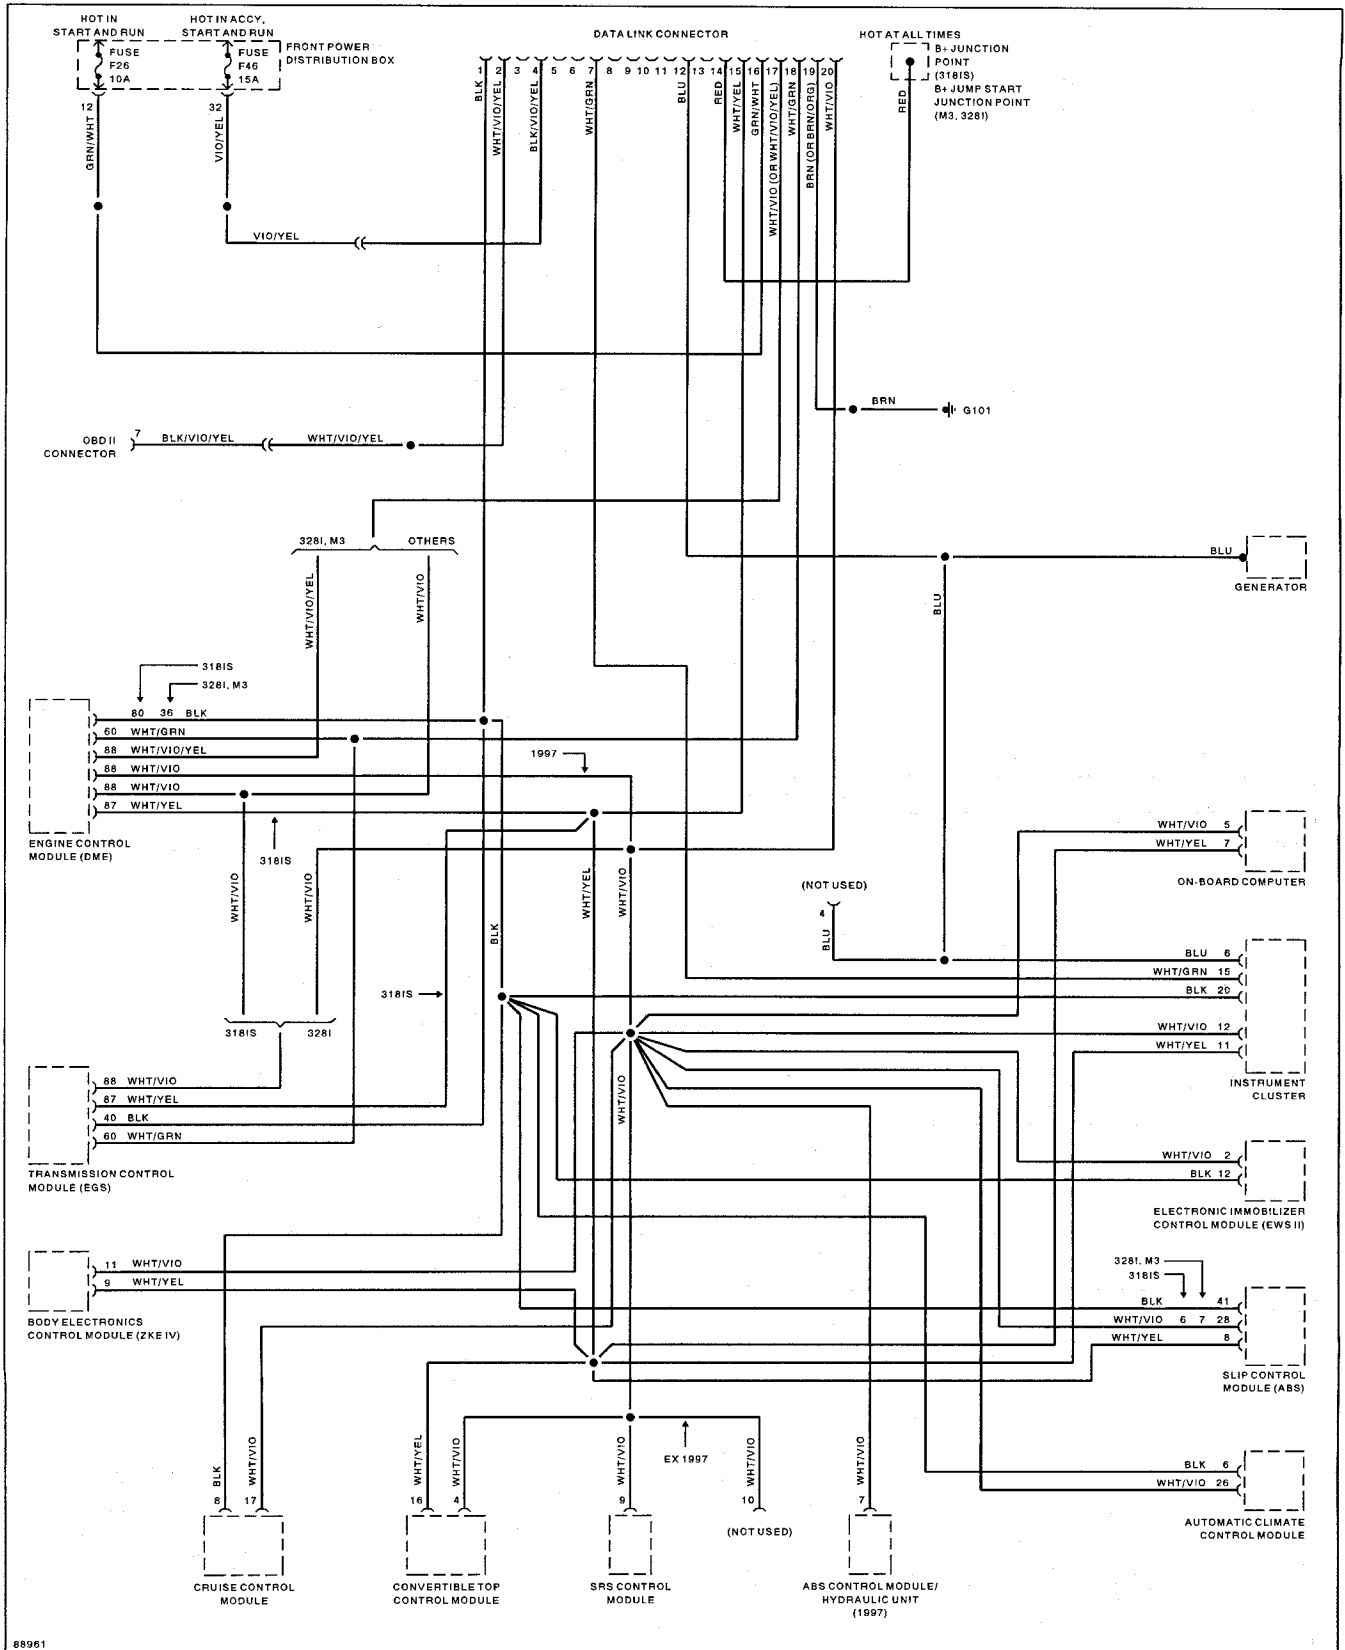


Data Link Connector

1998 Except 318ti

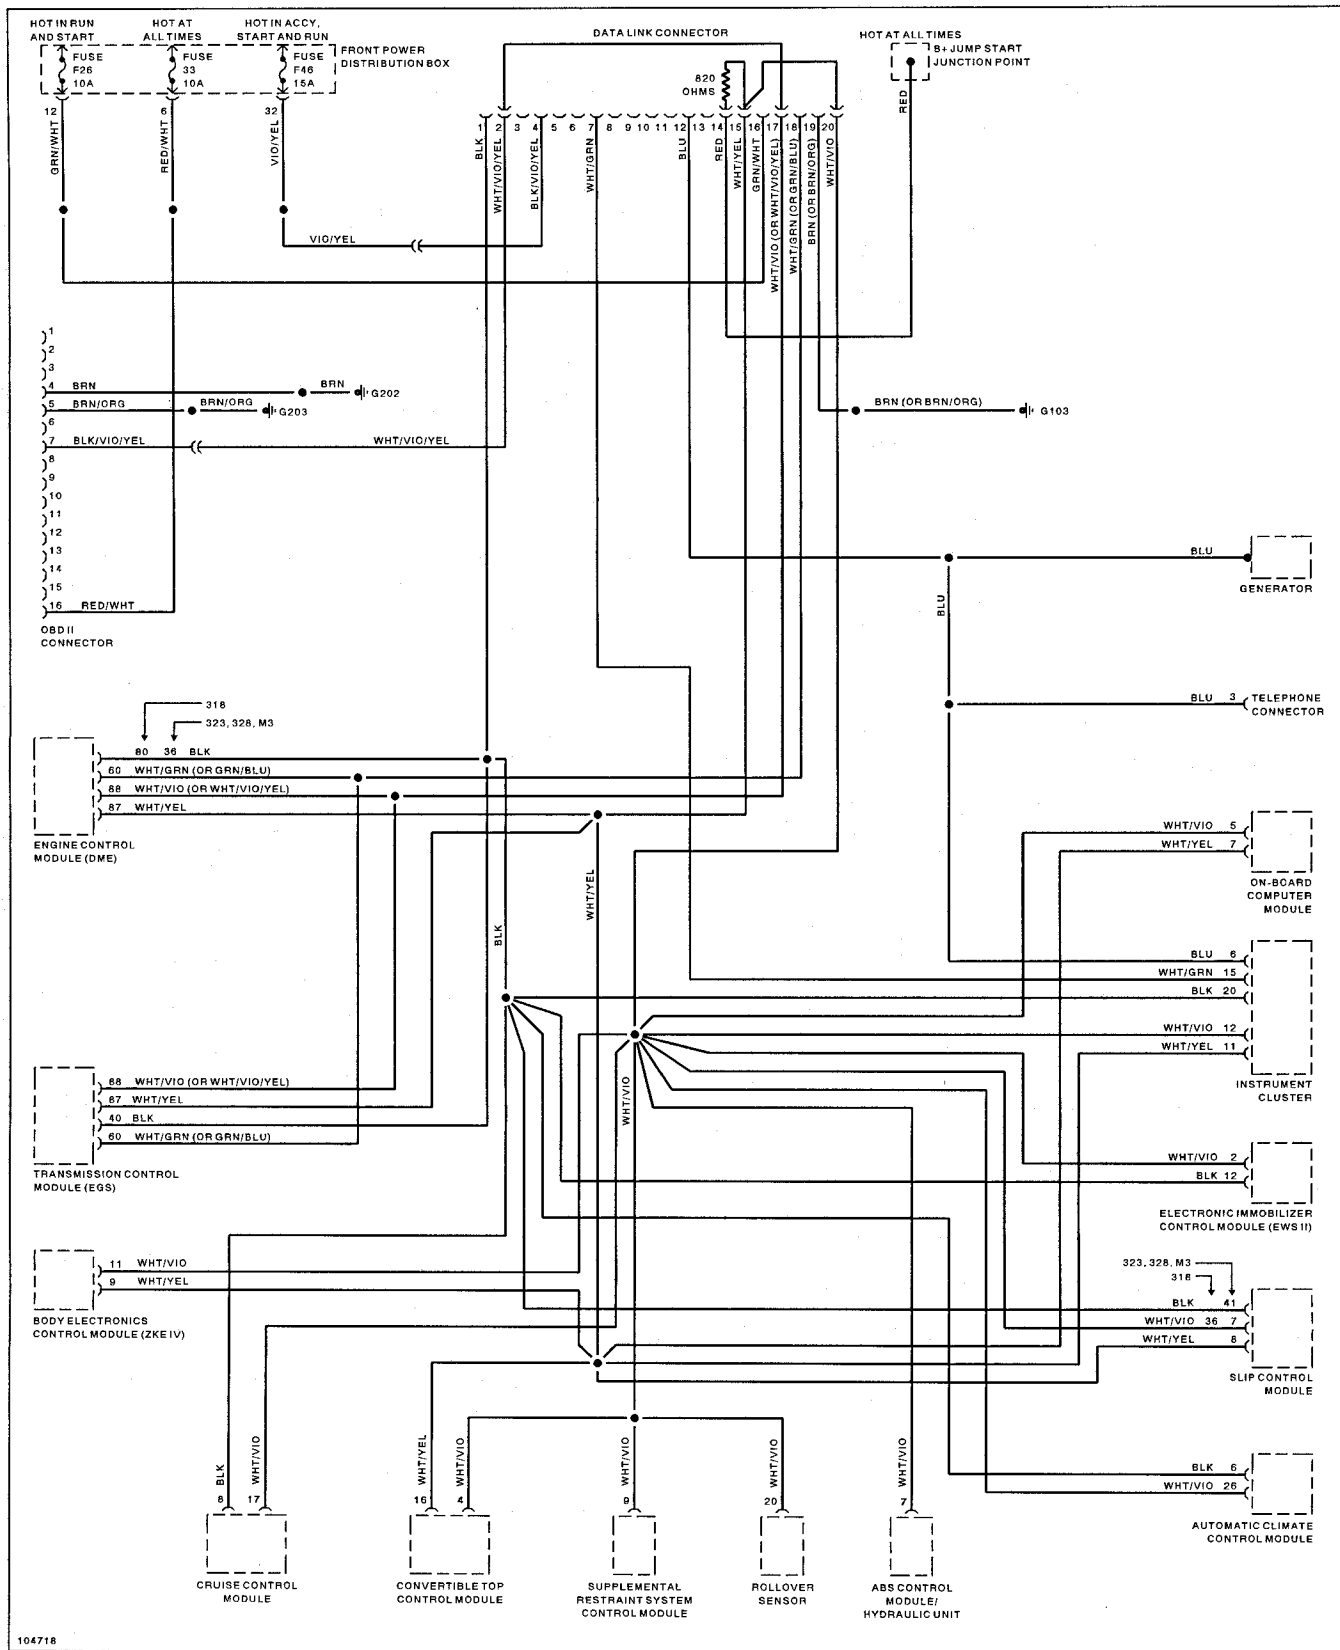


Data Link Connector

1995 318ti

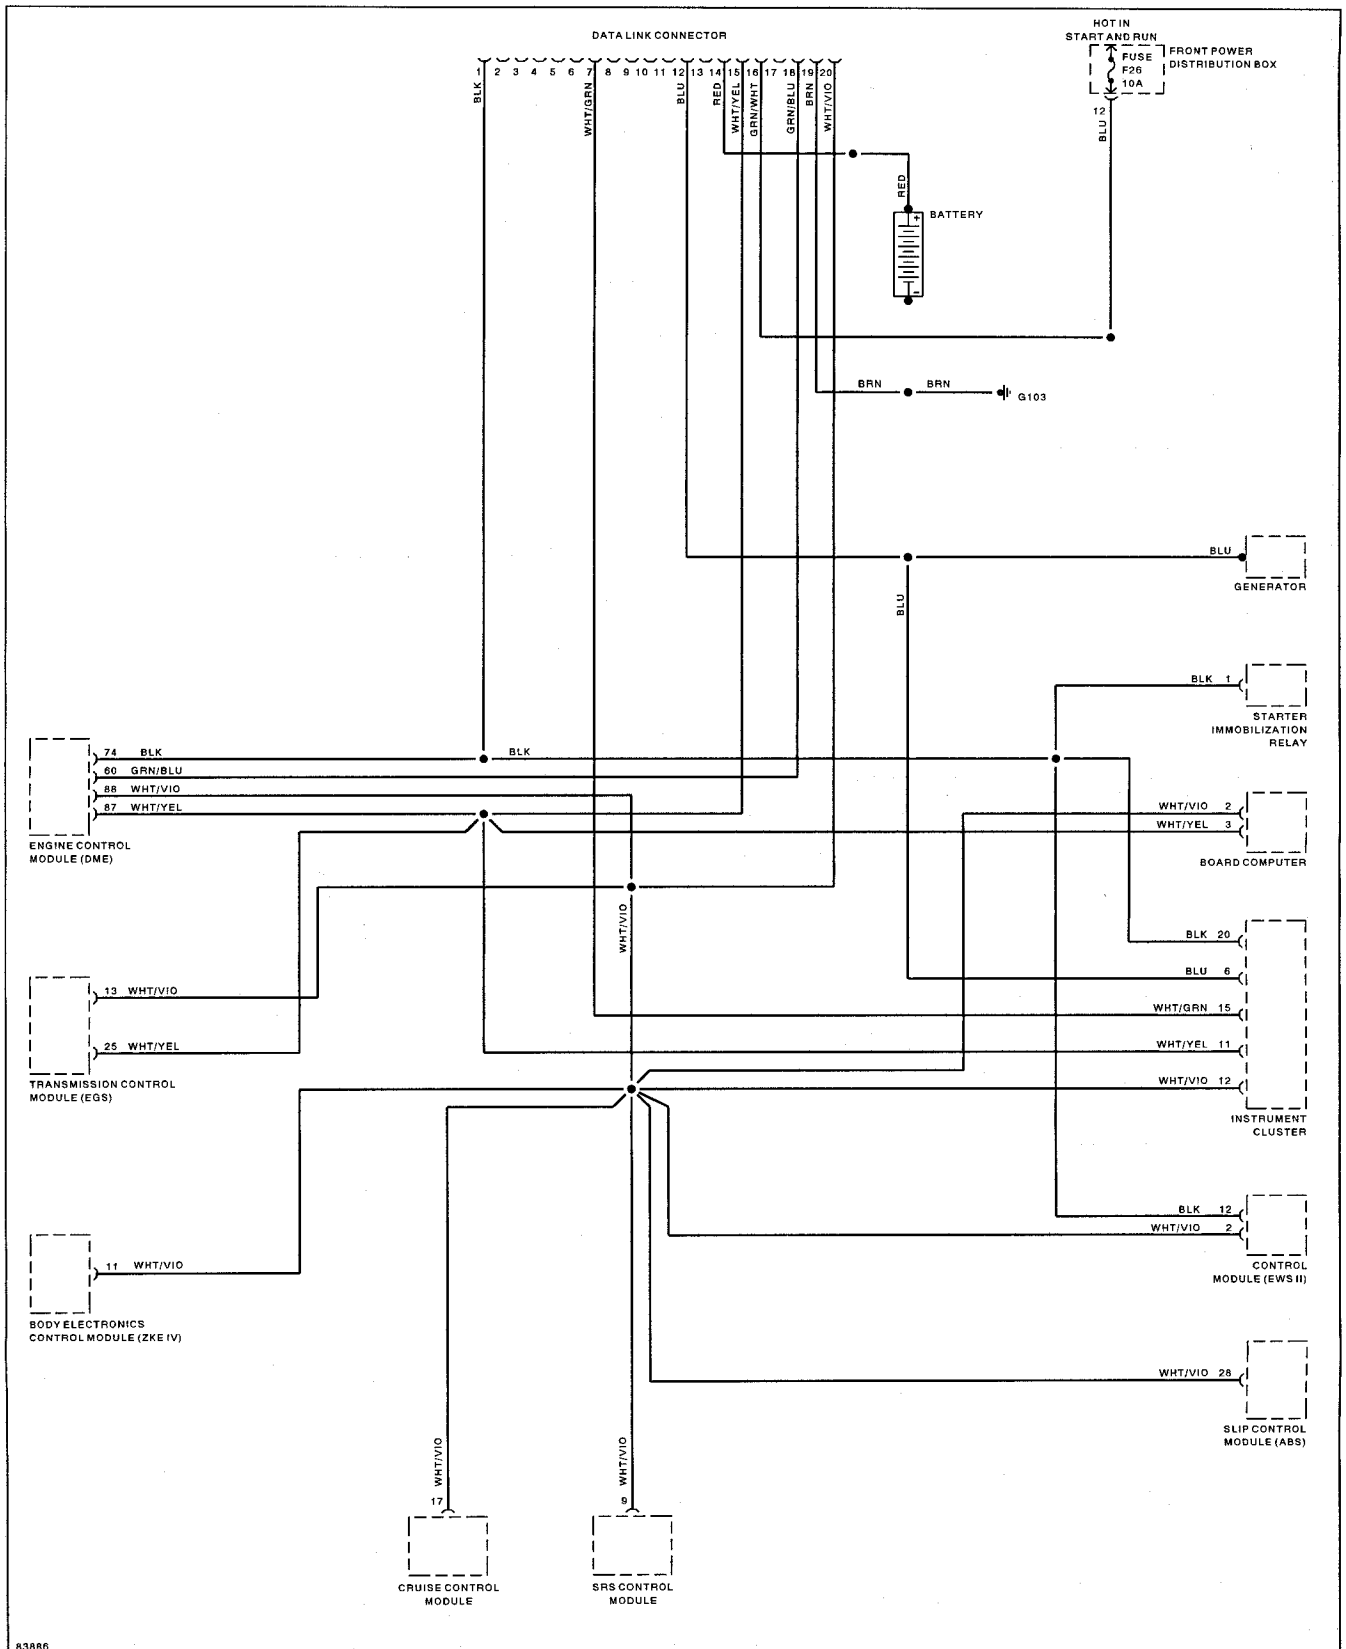


Data Link Connector

1996-97 318ti


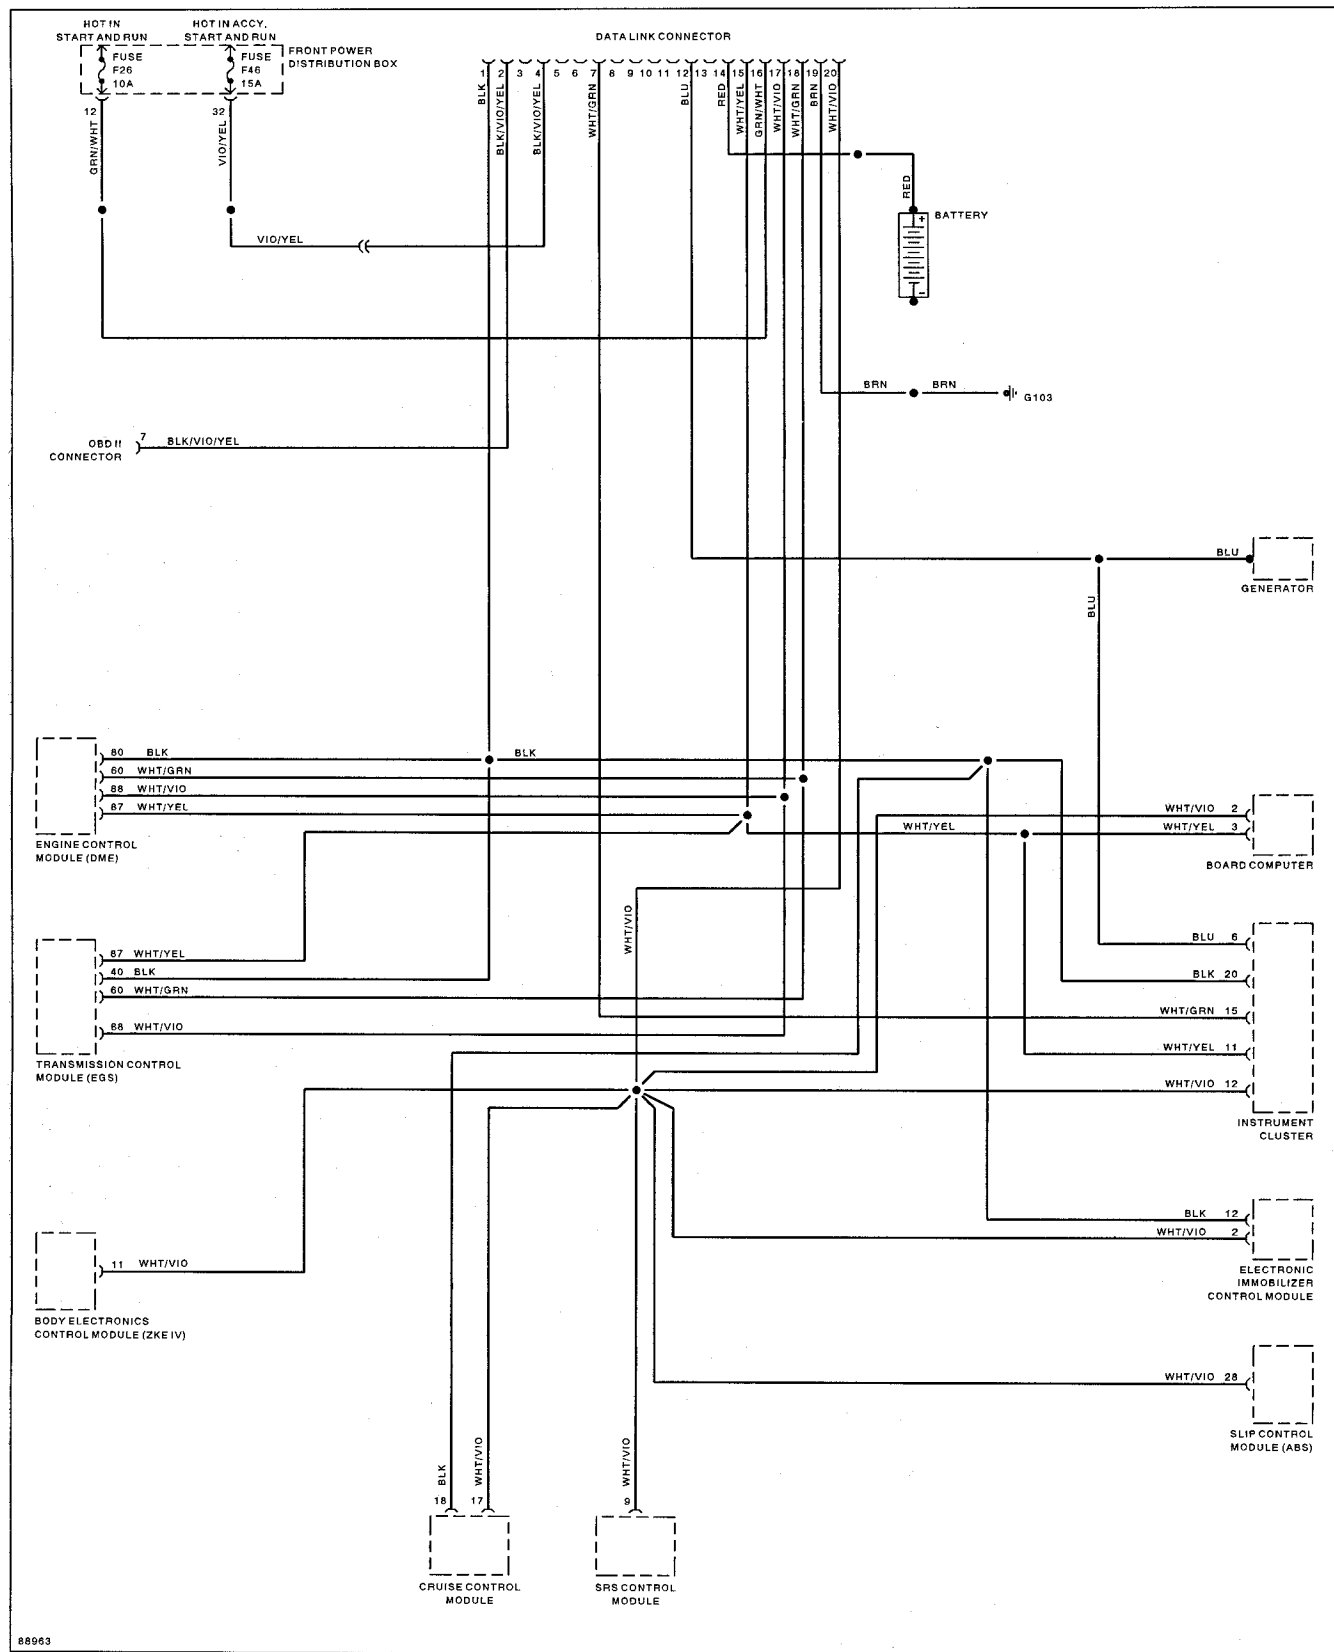


Data Link Connector



1998 318ti

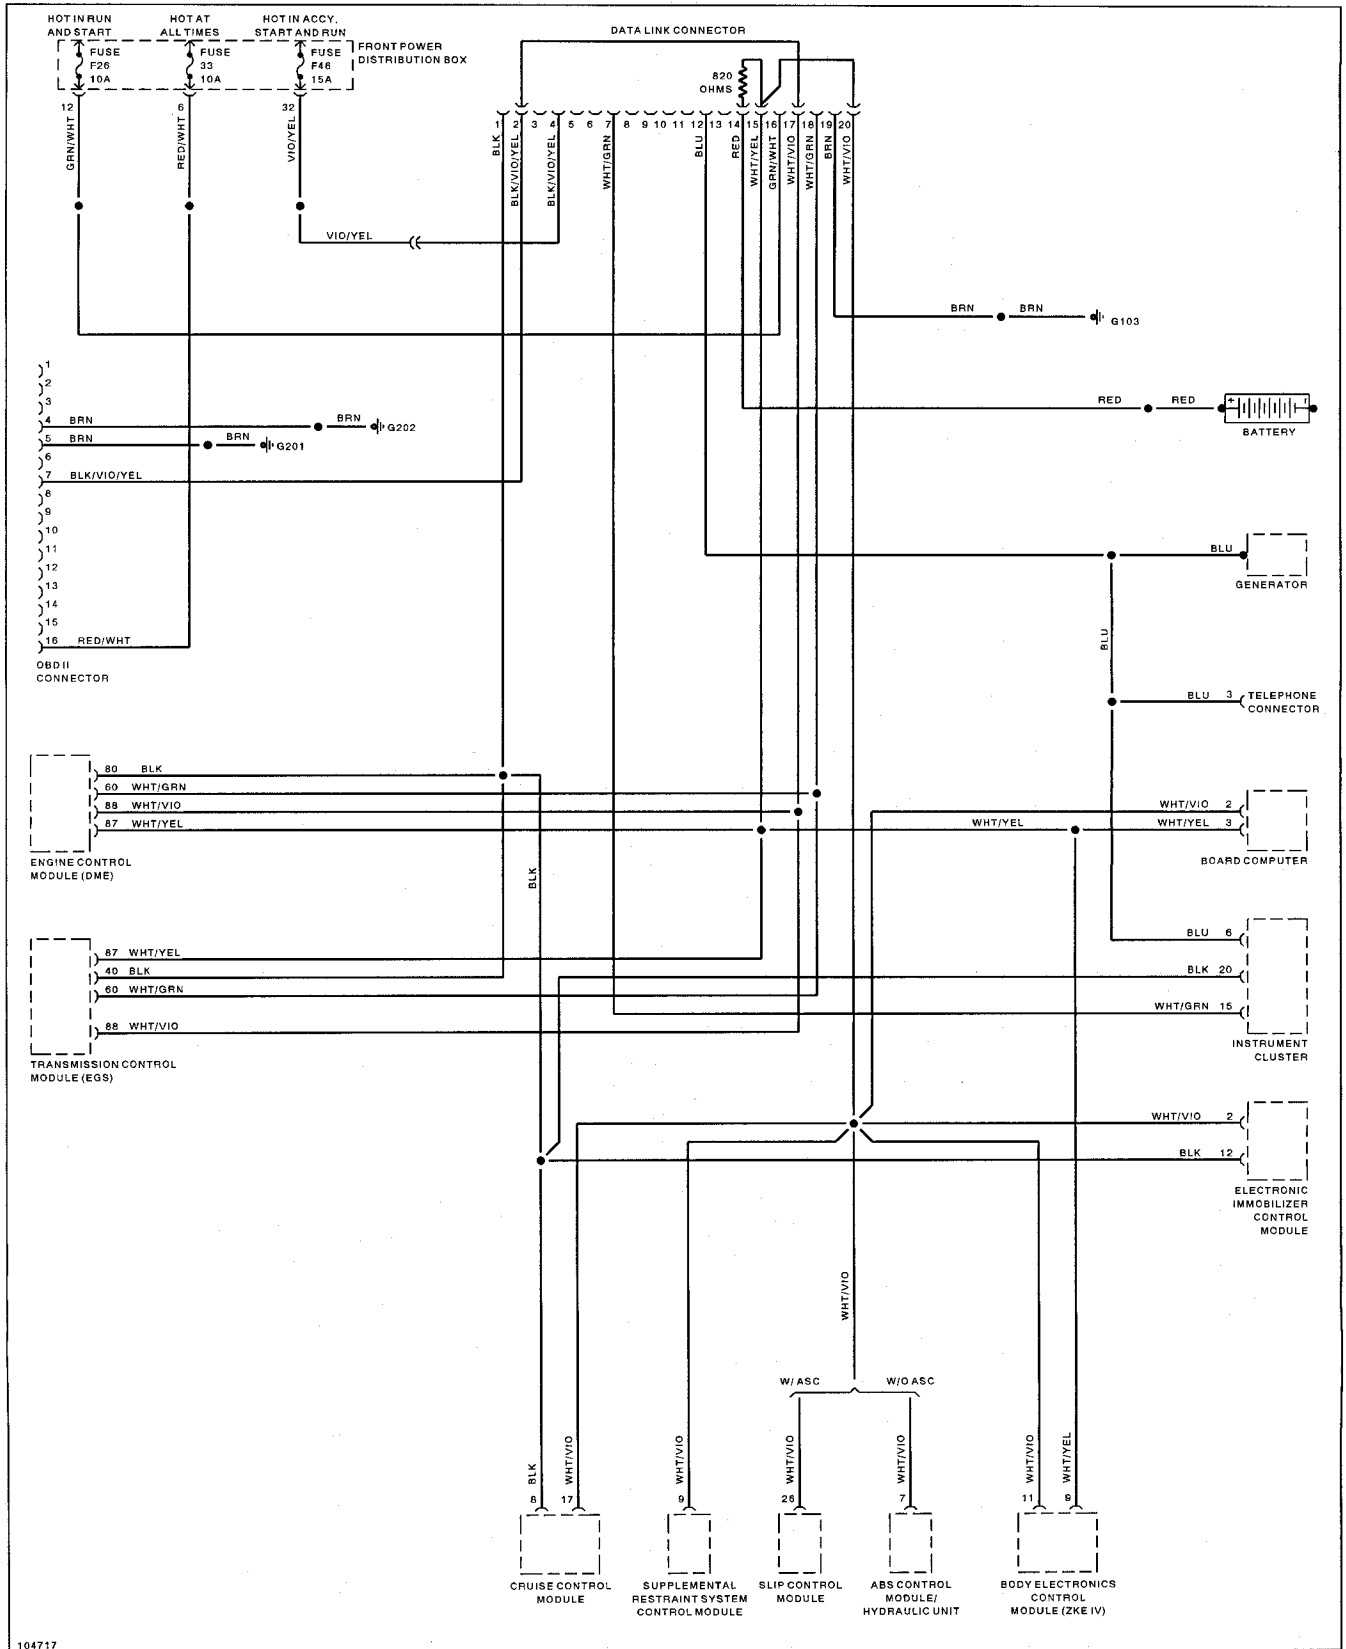

Engine Cooling

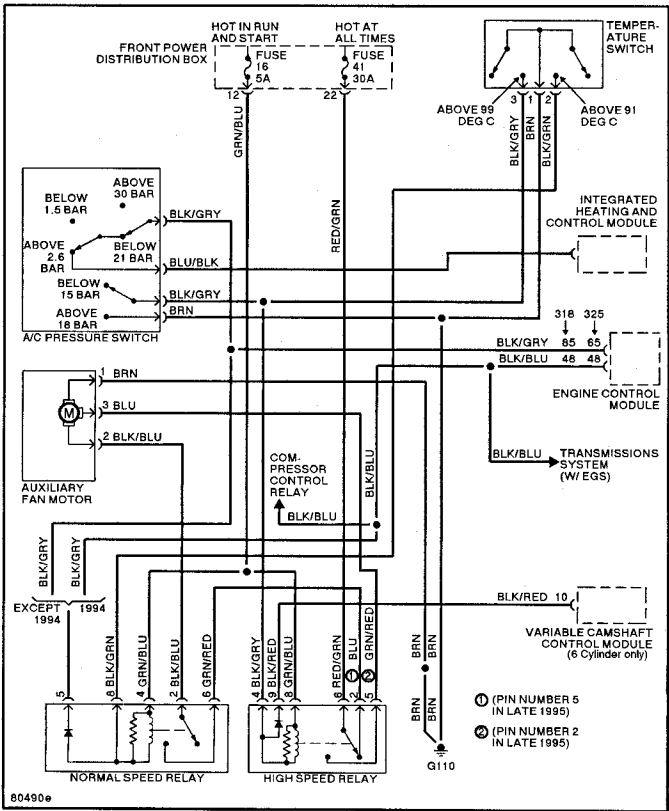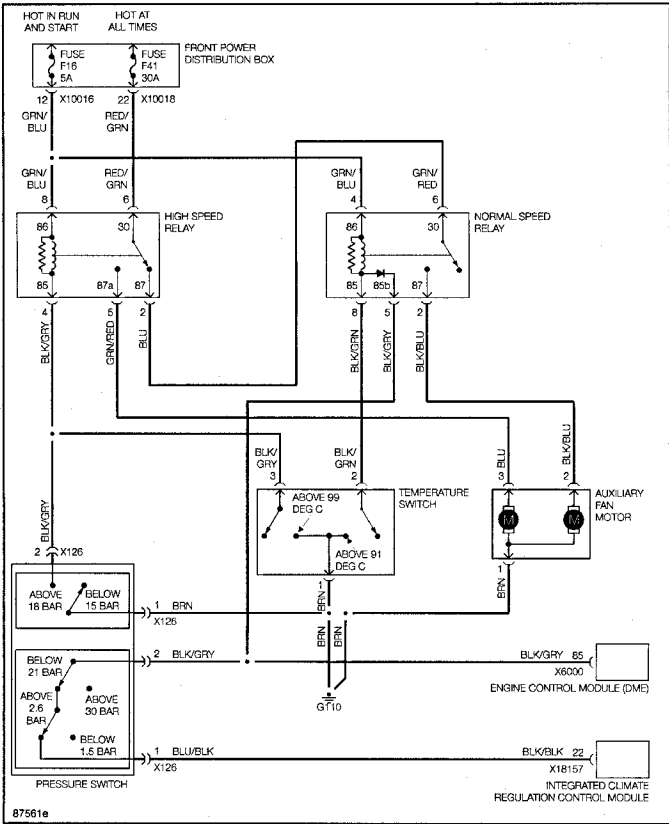


Engine Cooling

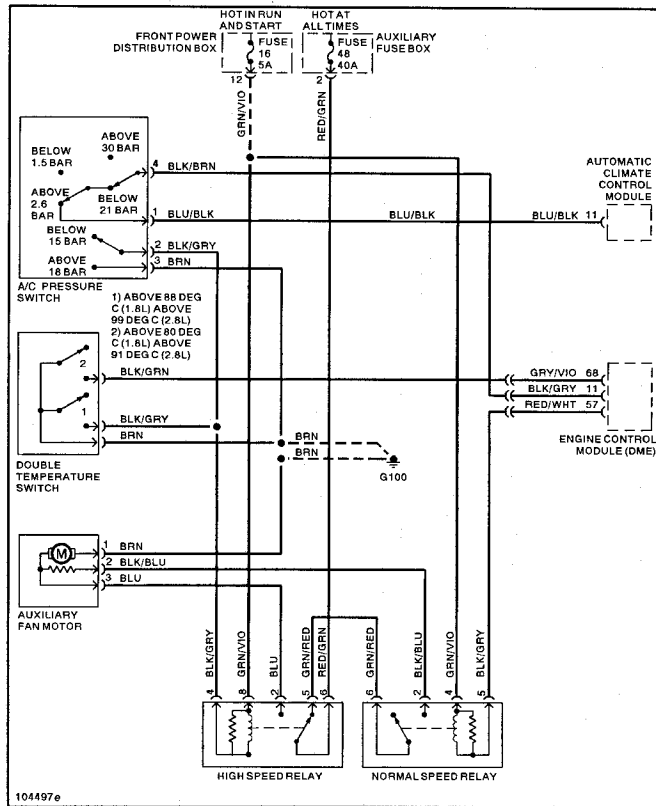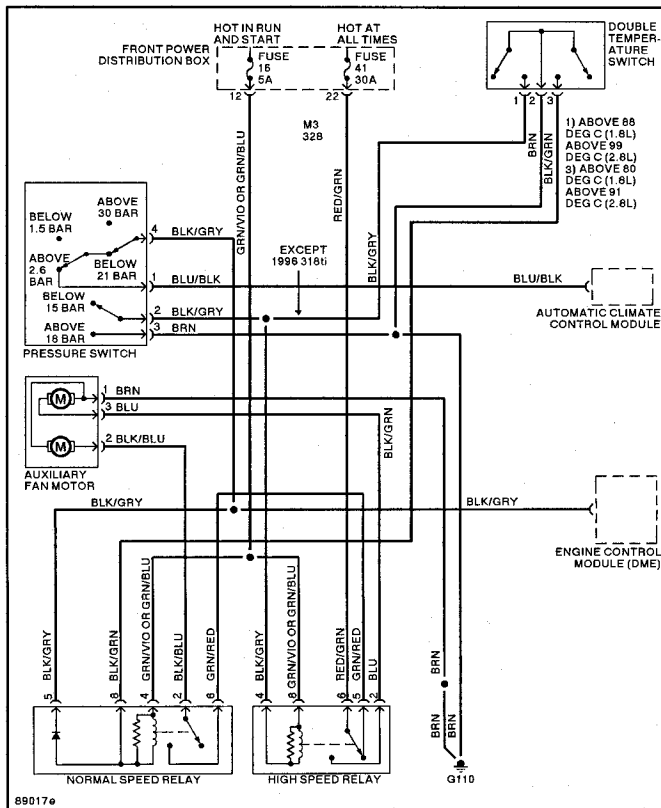
1996-98
4-cylinder1996-98
6-cylinder

Transmission Electronics

1992 318i, 318is, 325i & 325is

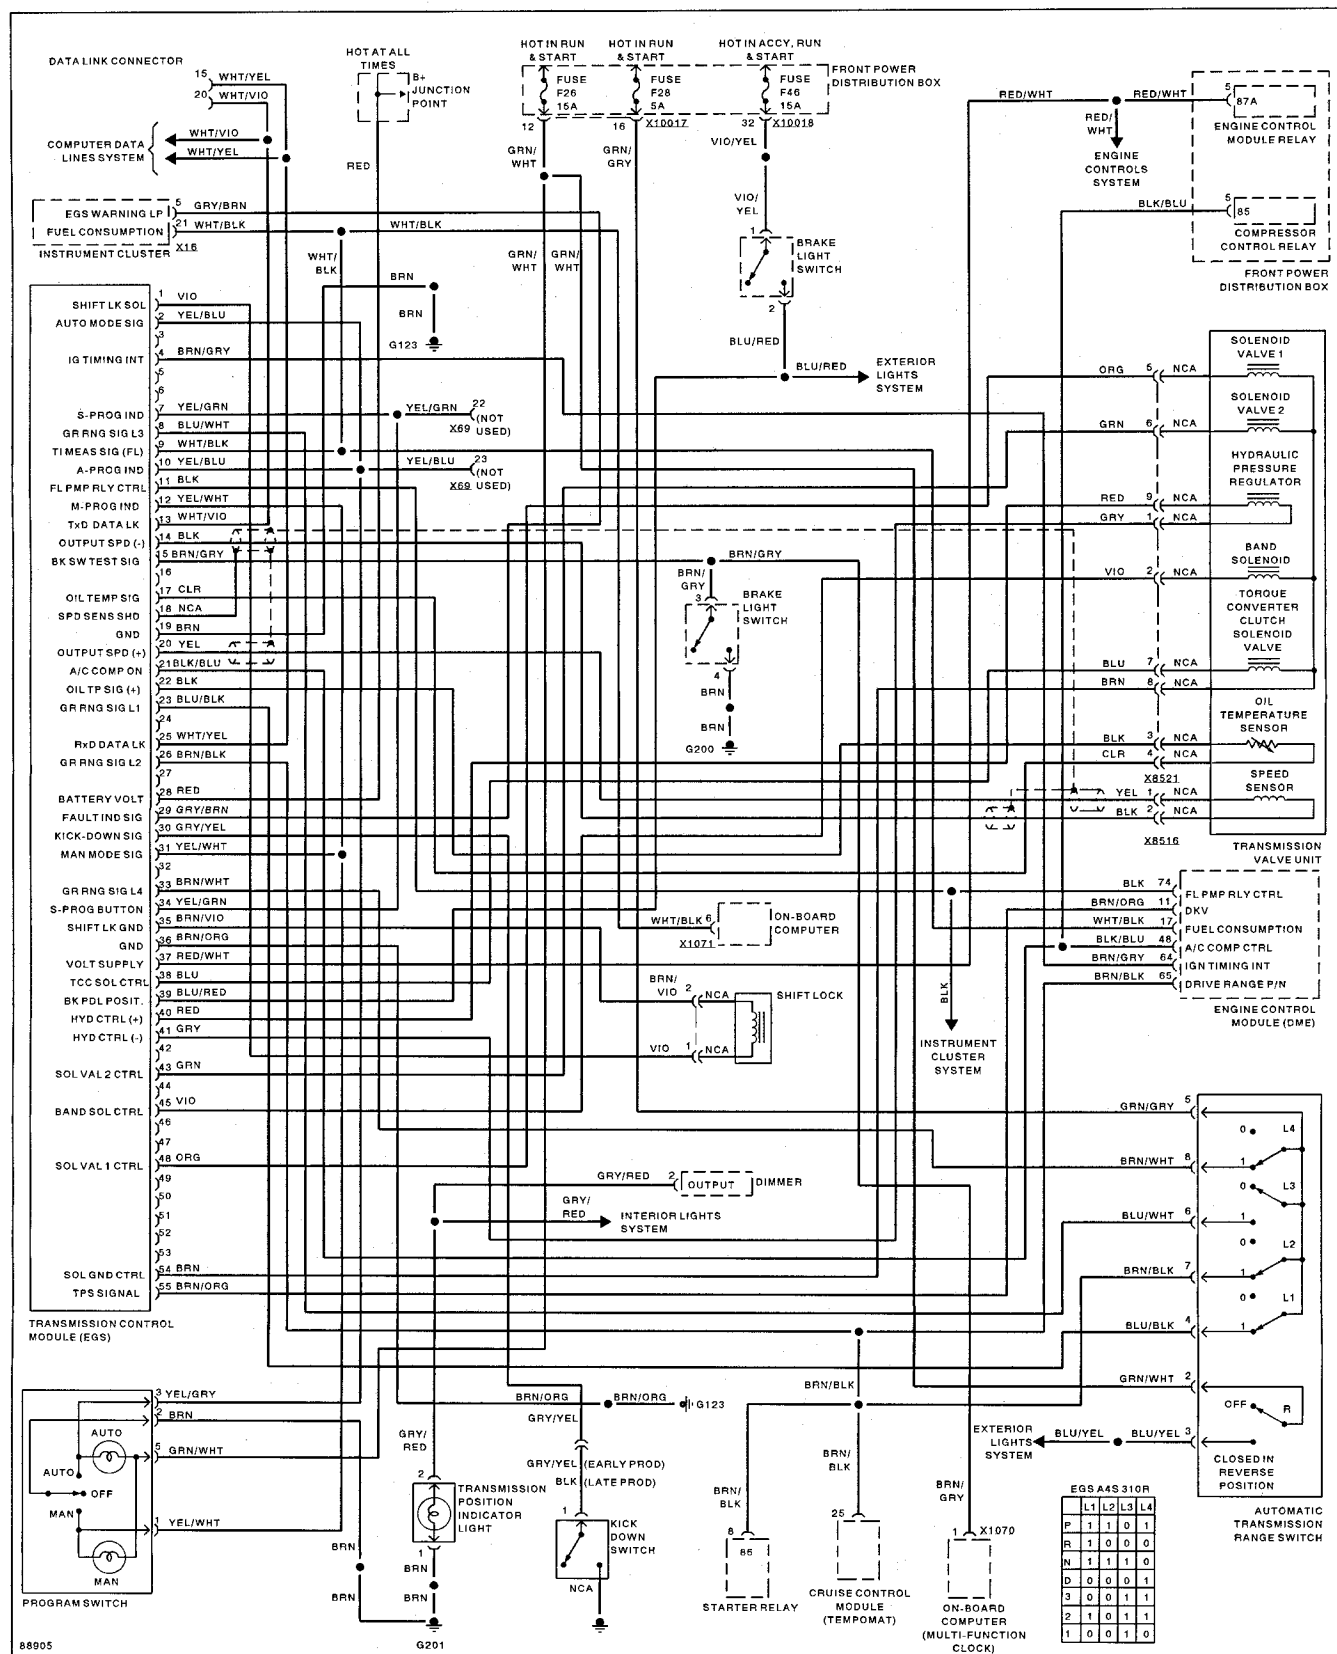


Transmission Electronics

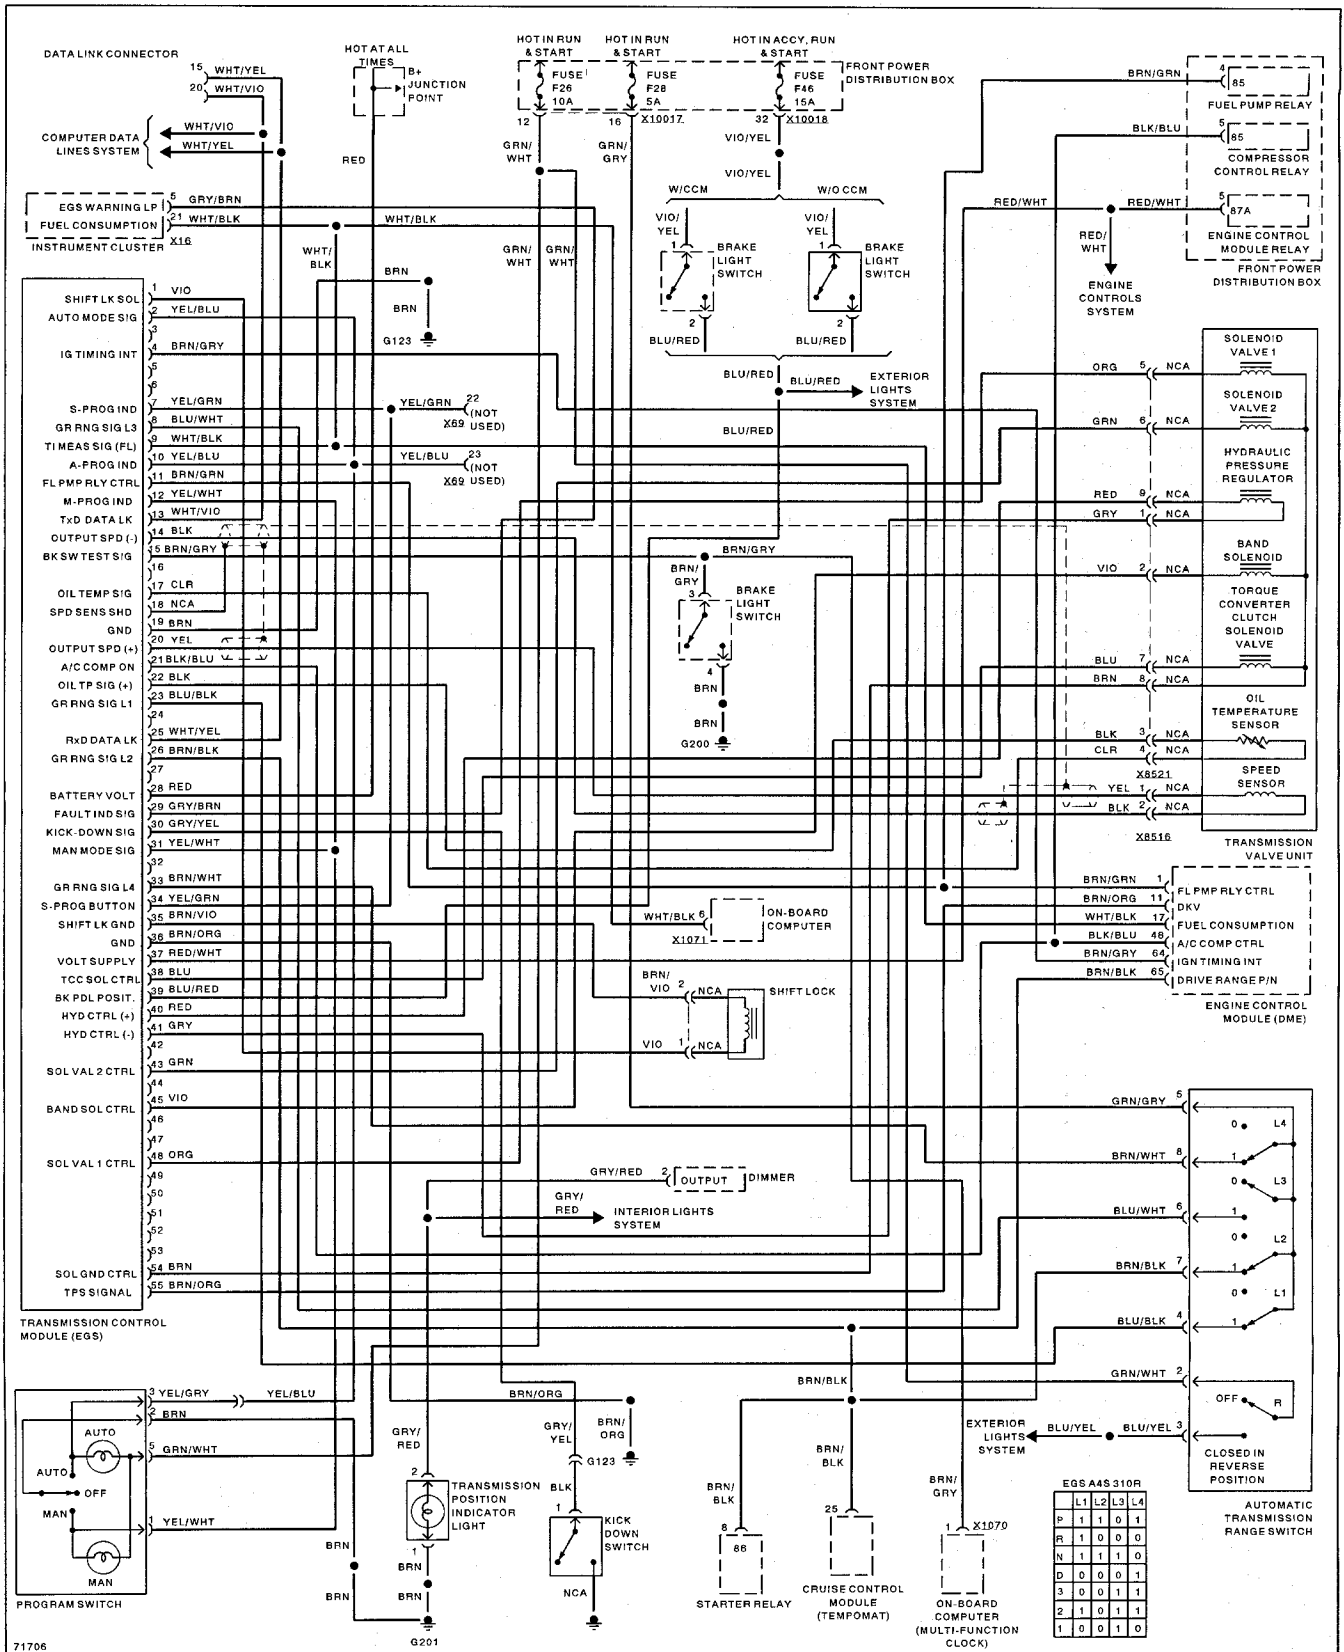


Transmission Electronics

1993-94 325i, 325iC & 325is

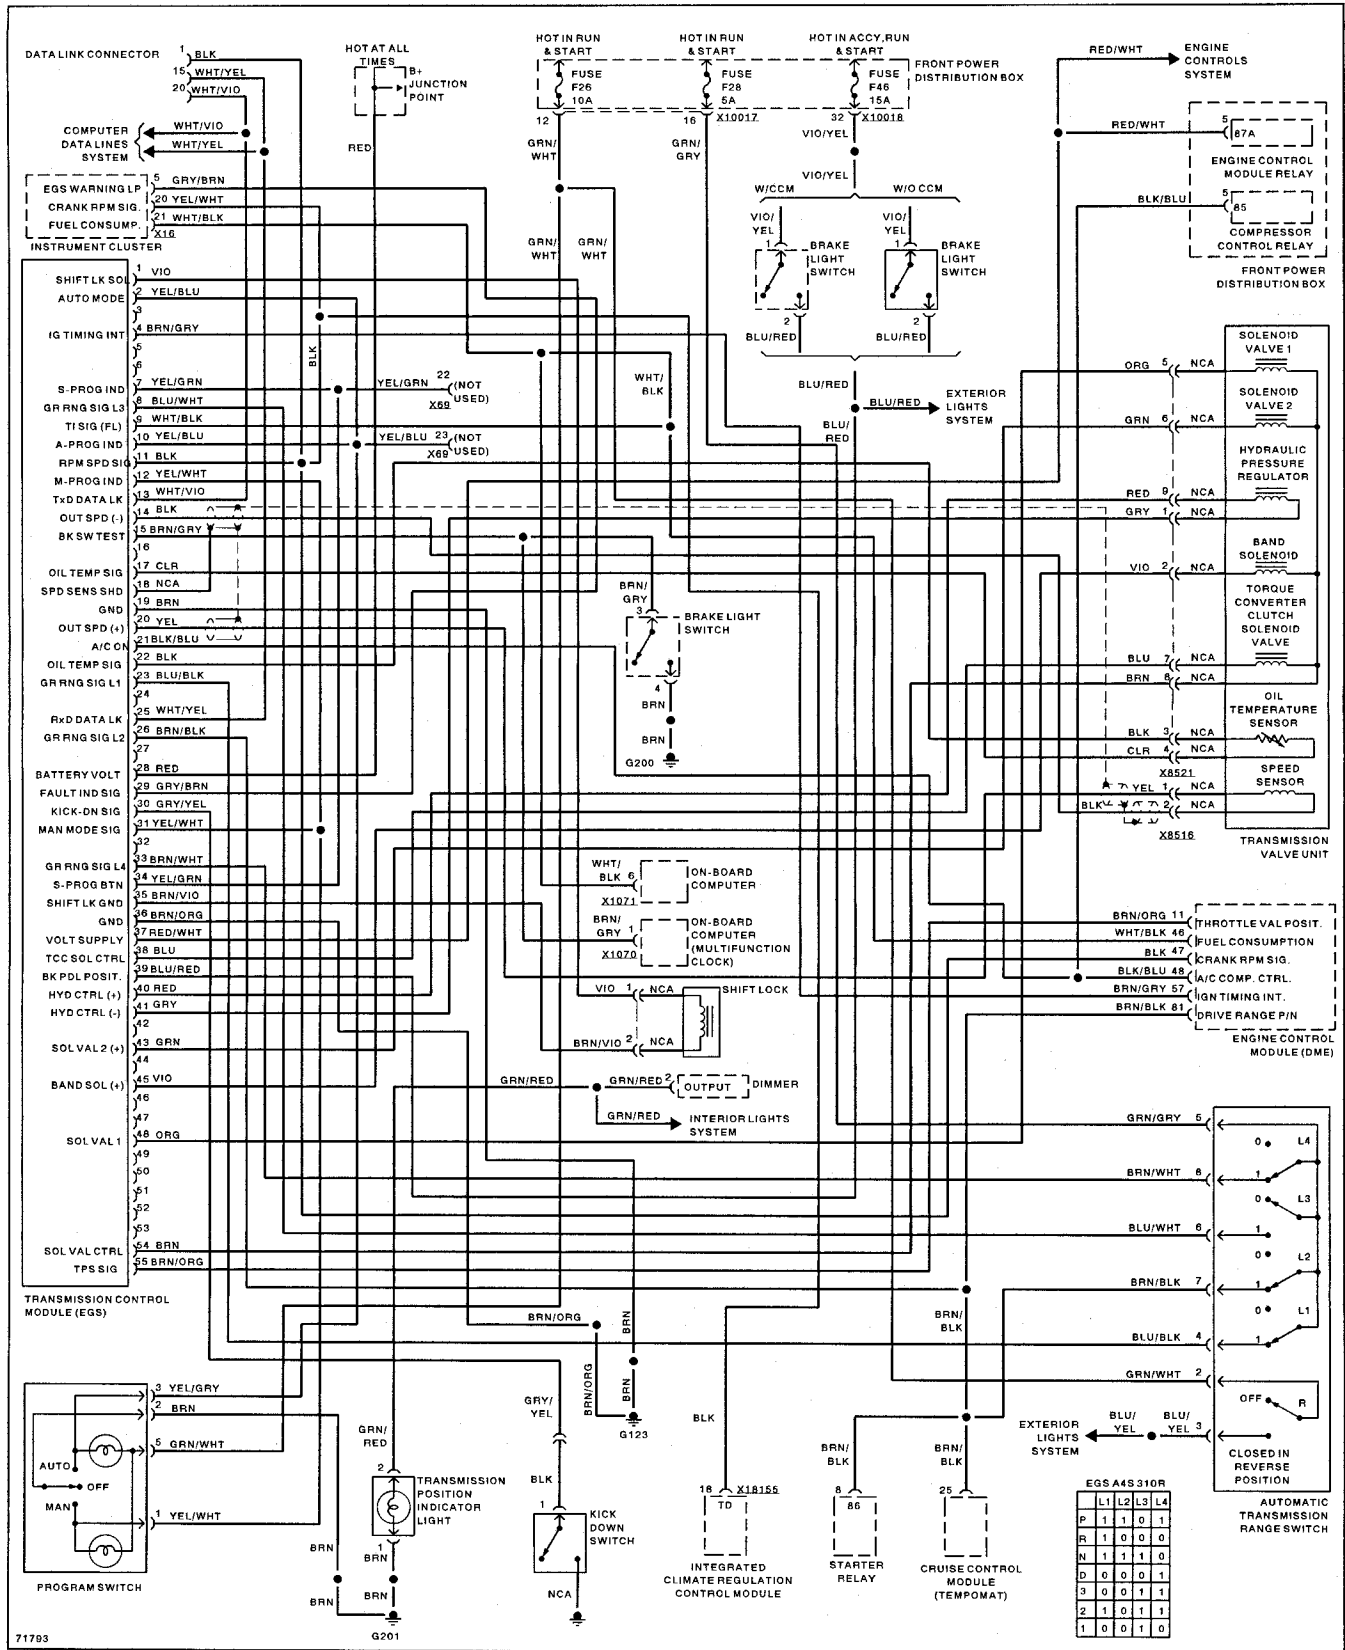


Transmission Electronics

1995 318i, 318iC & 318is

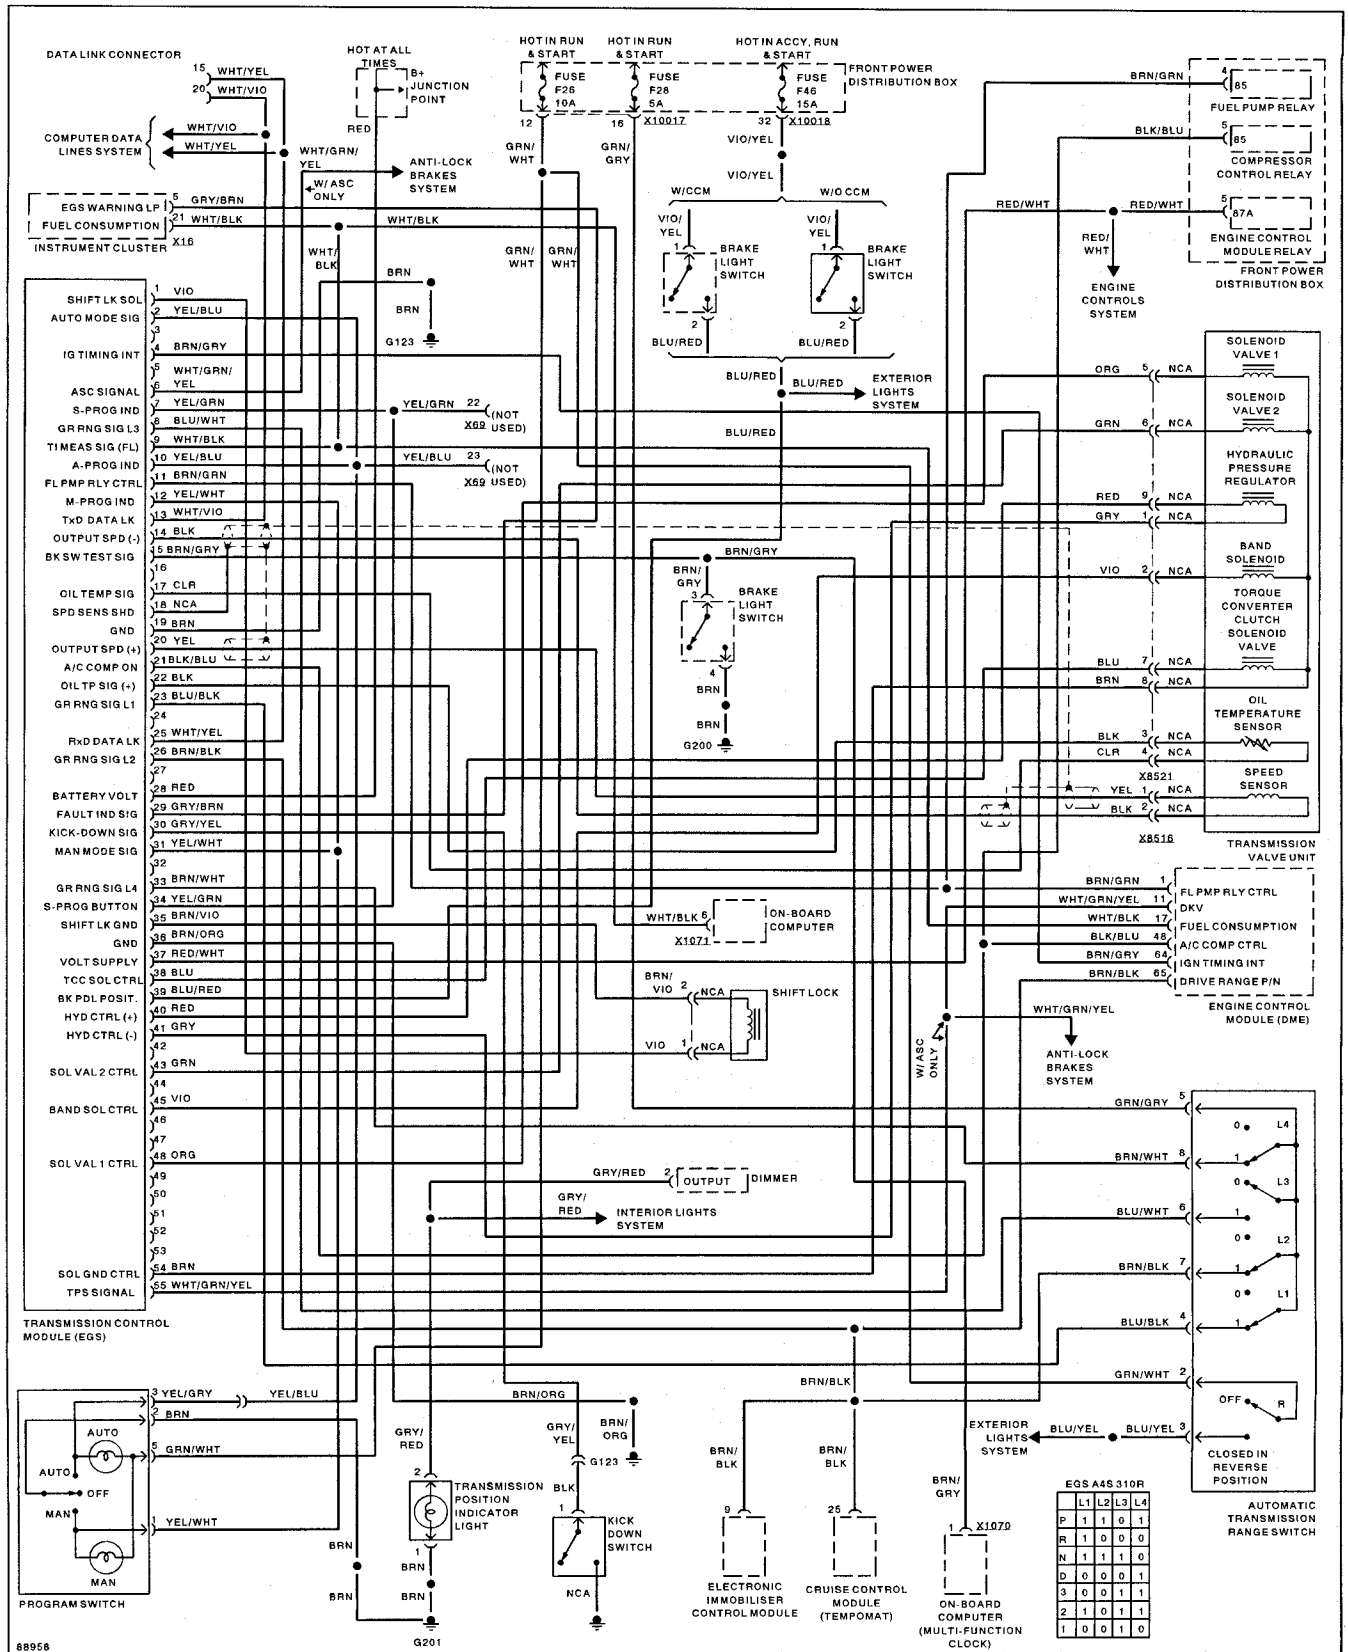


Transmission Electronics

1995 325i, 325iC & 325is

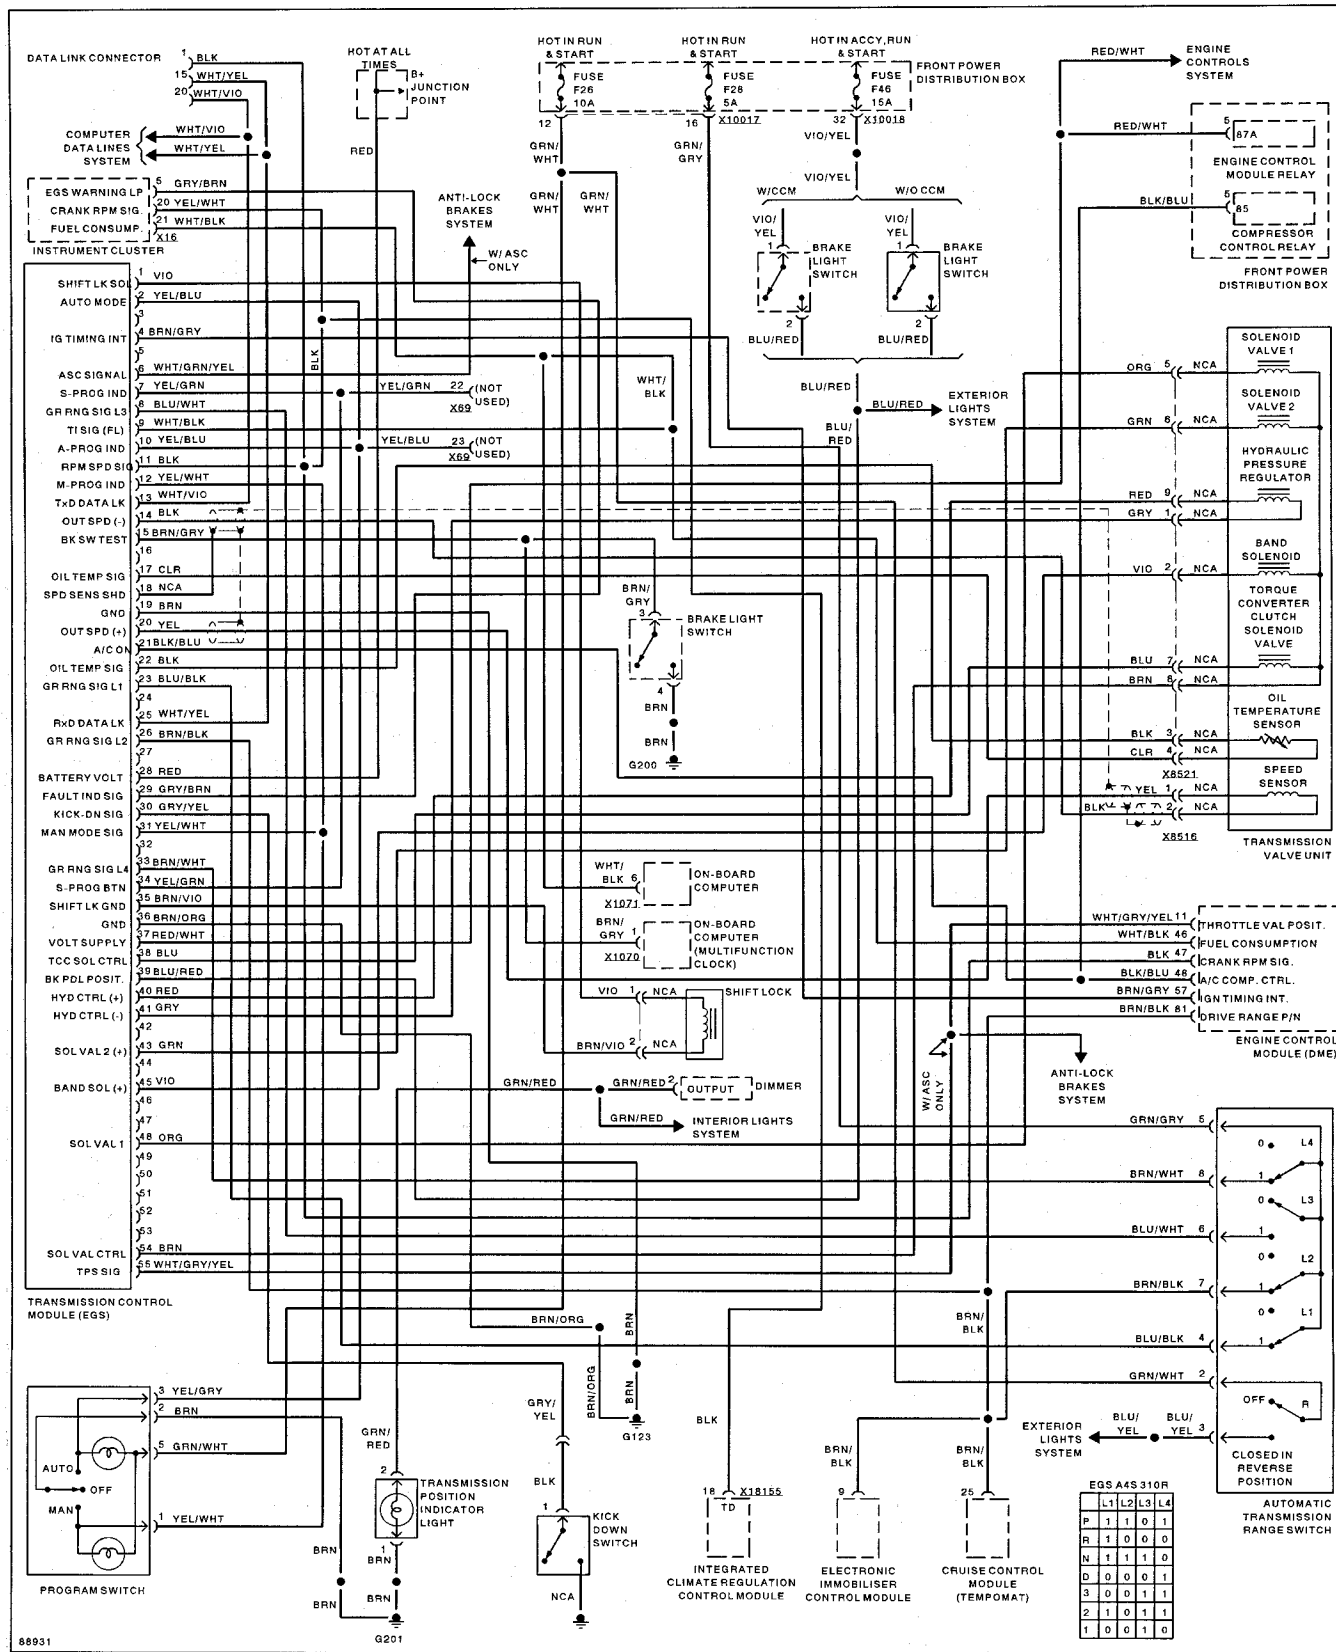


Transmission Electronics

1995 318ti

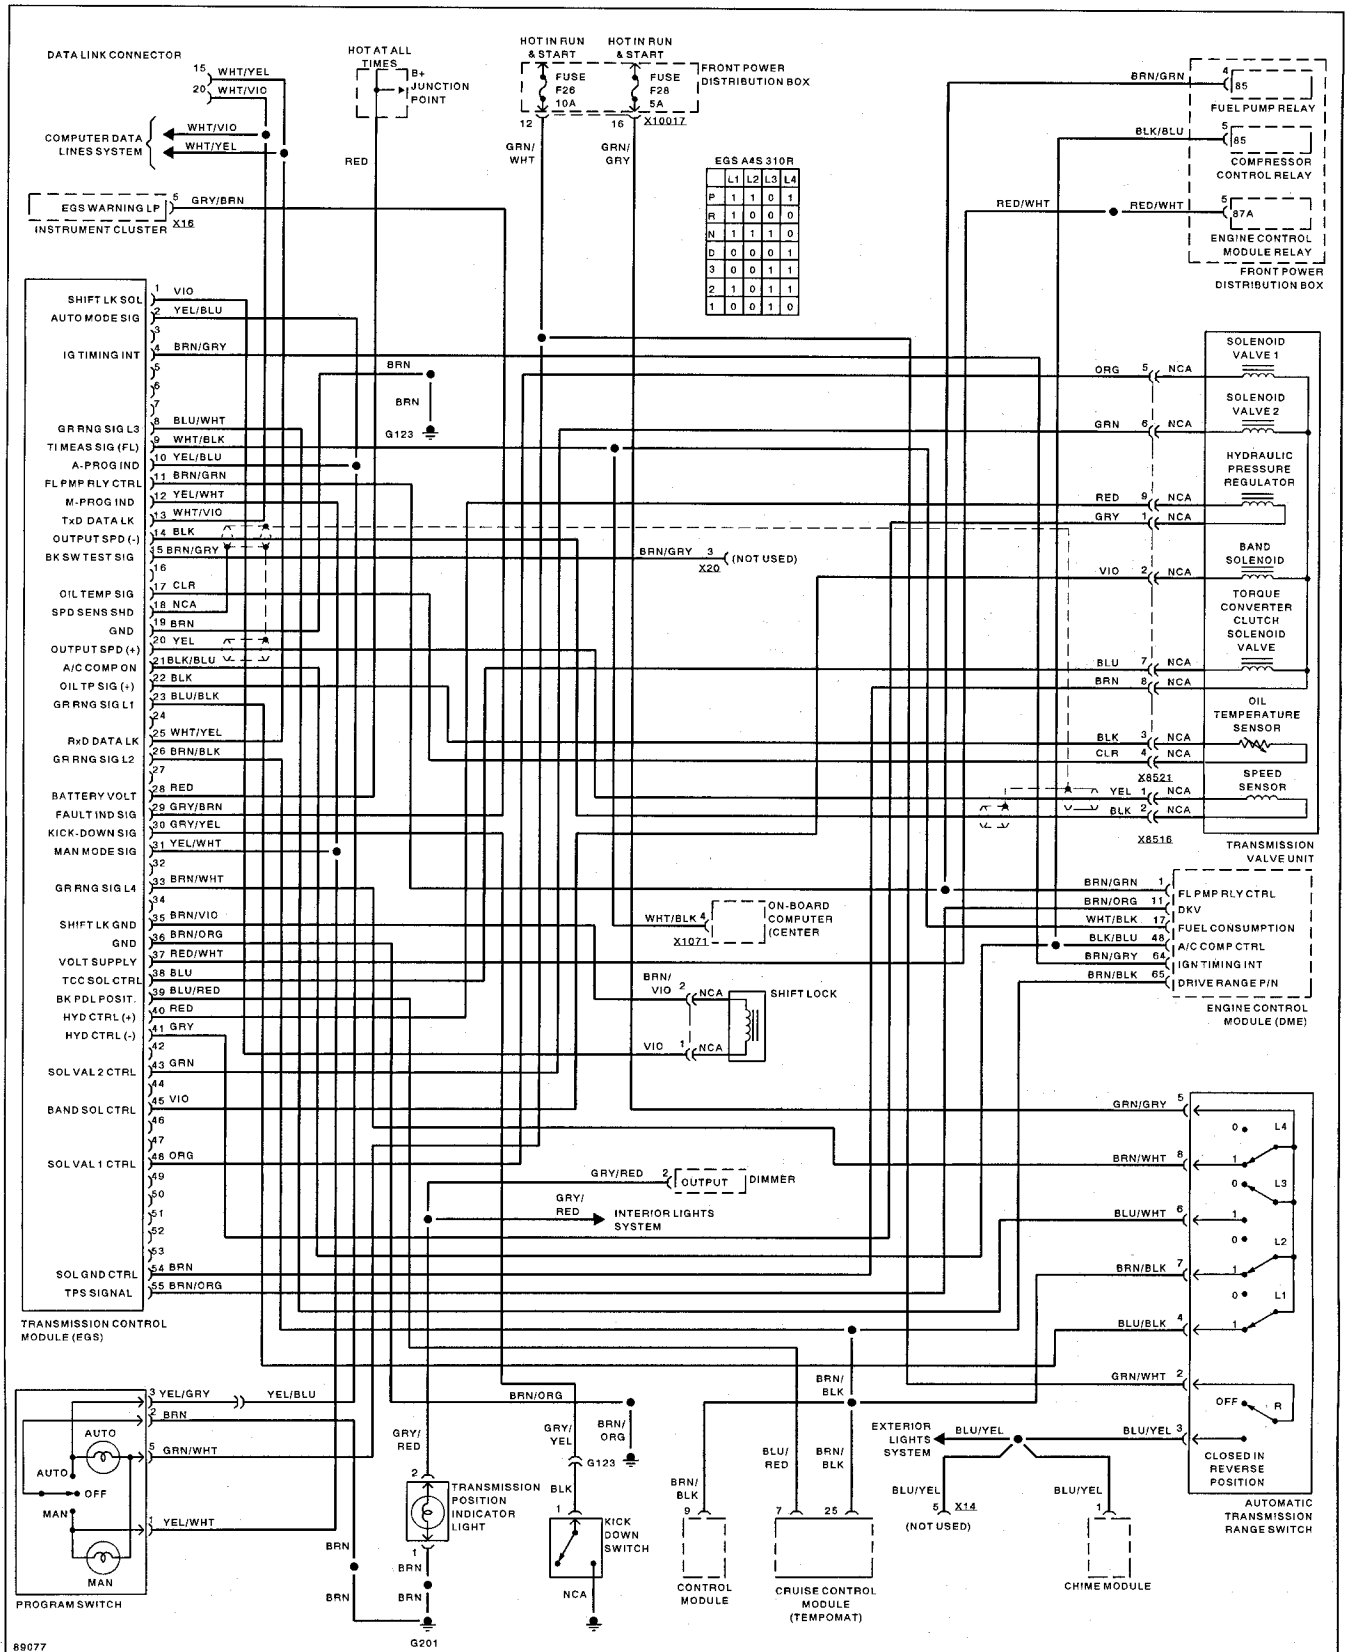


Transmission Electronics

1996-97 Except M3 (1 of 2)

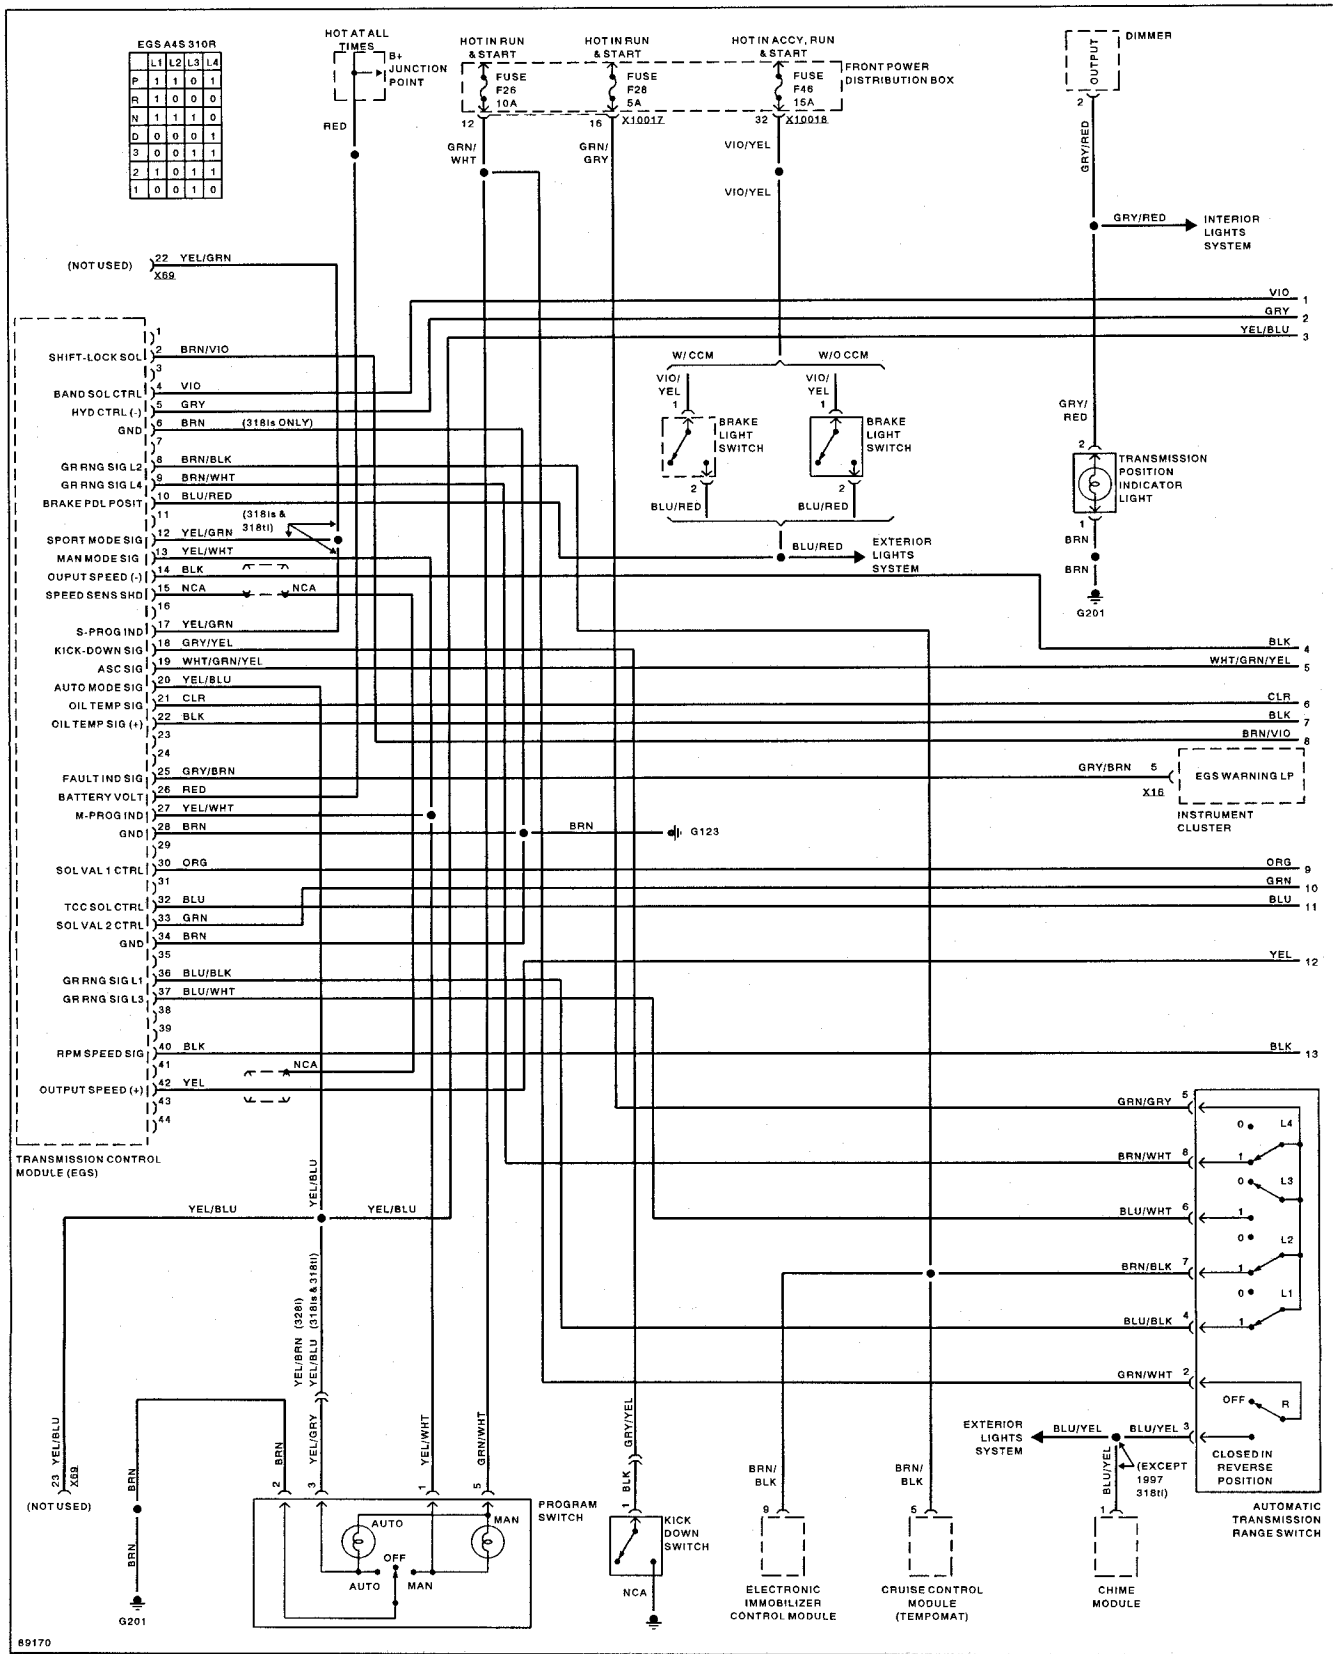


Transmission Electronics

1996-97 Except M3 (2 of 2)

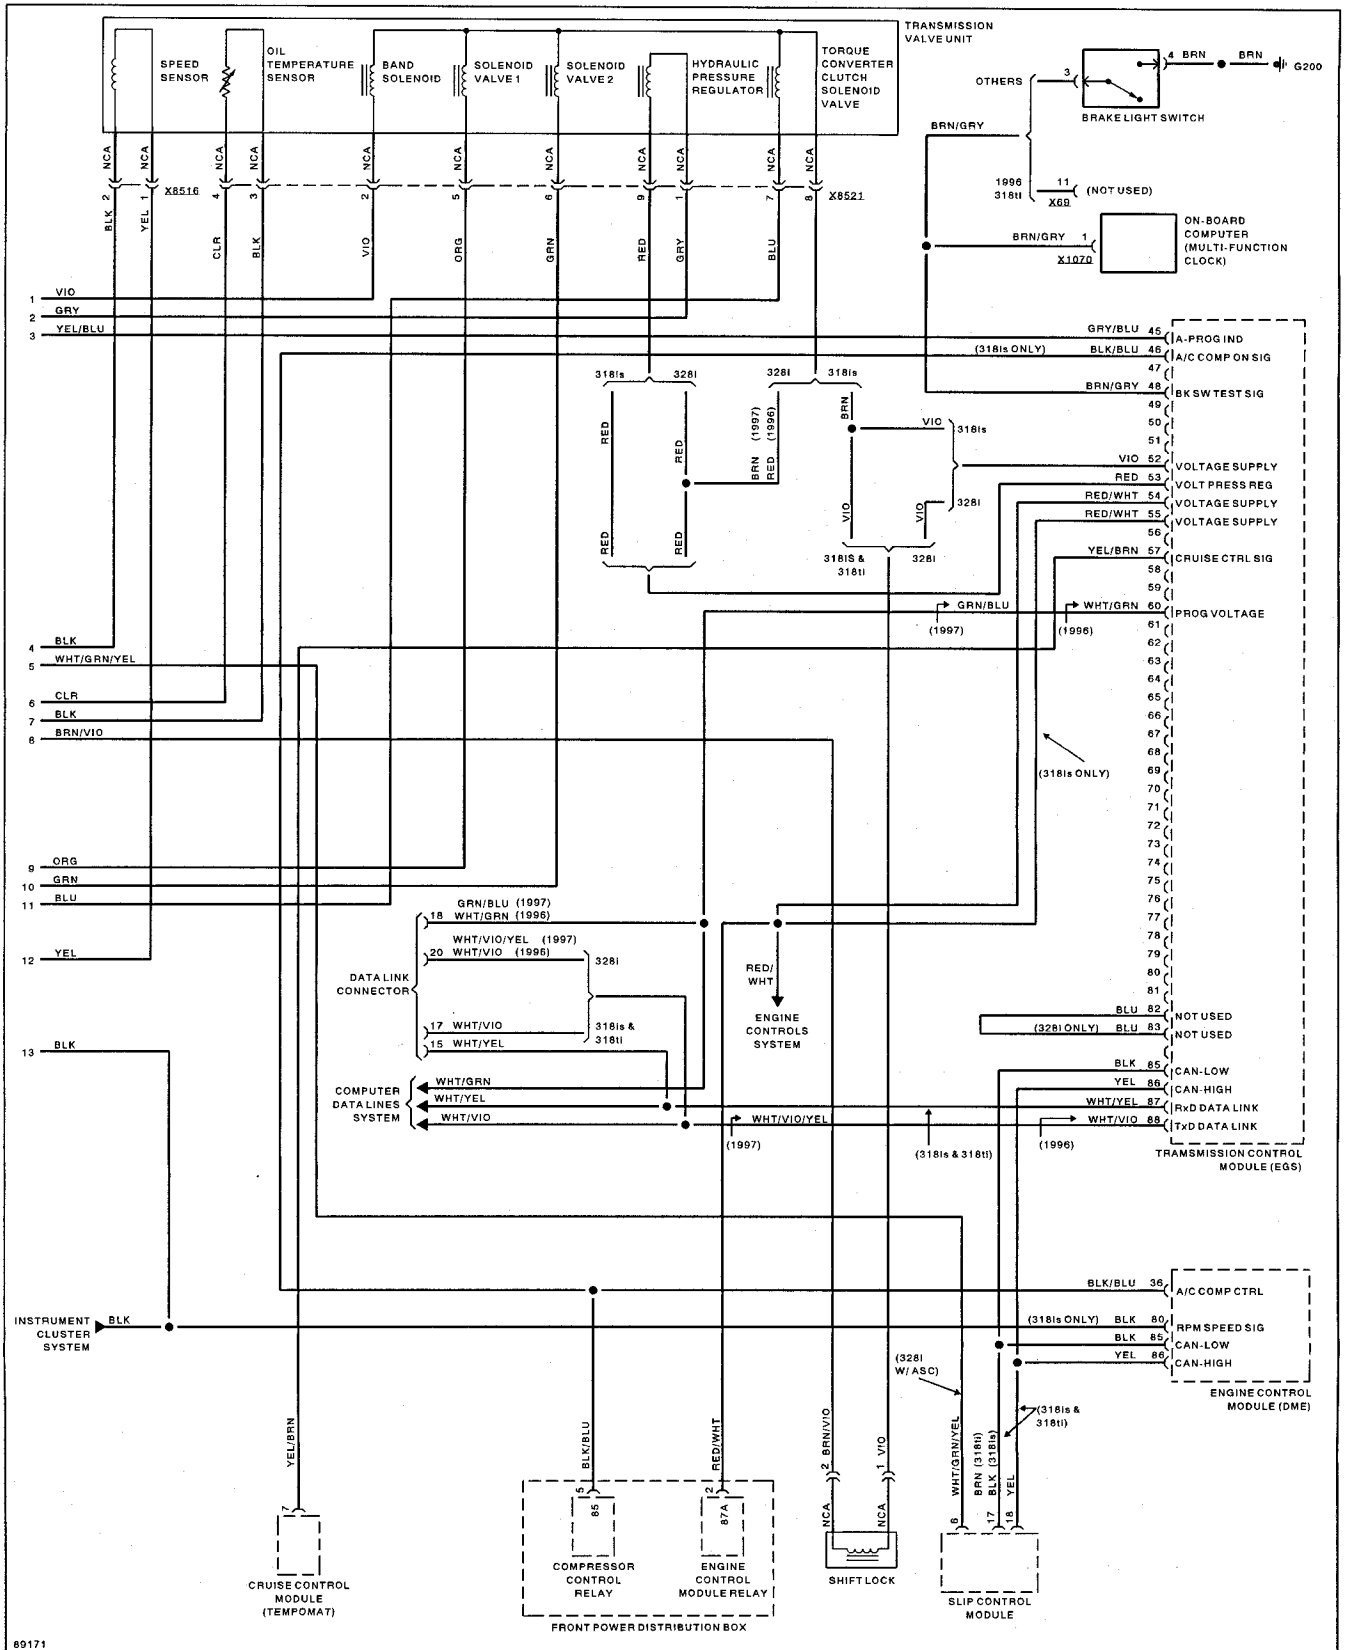


Transmission Electronics

1998 Except M3 (1 of 2)

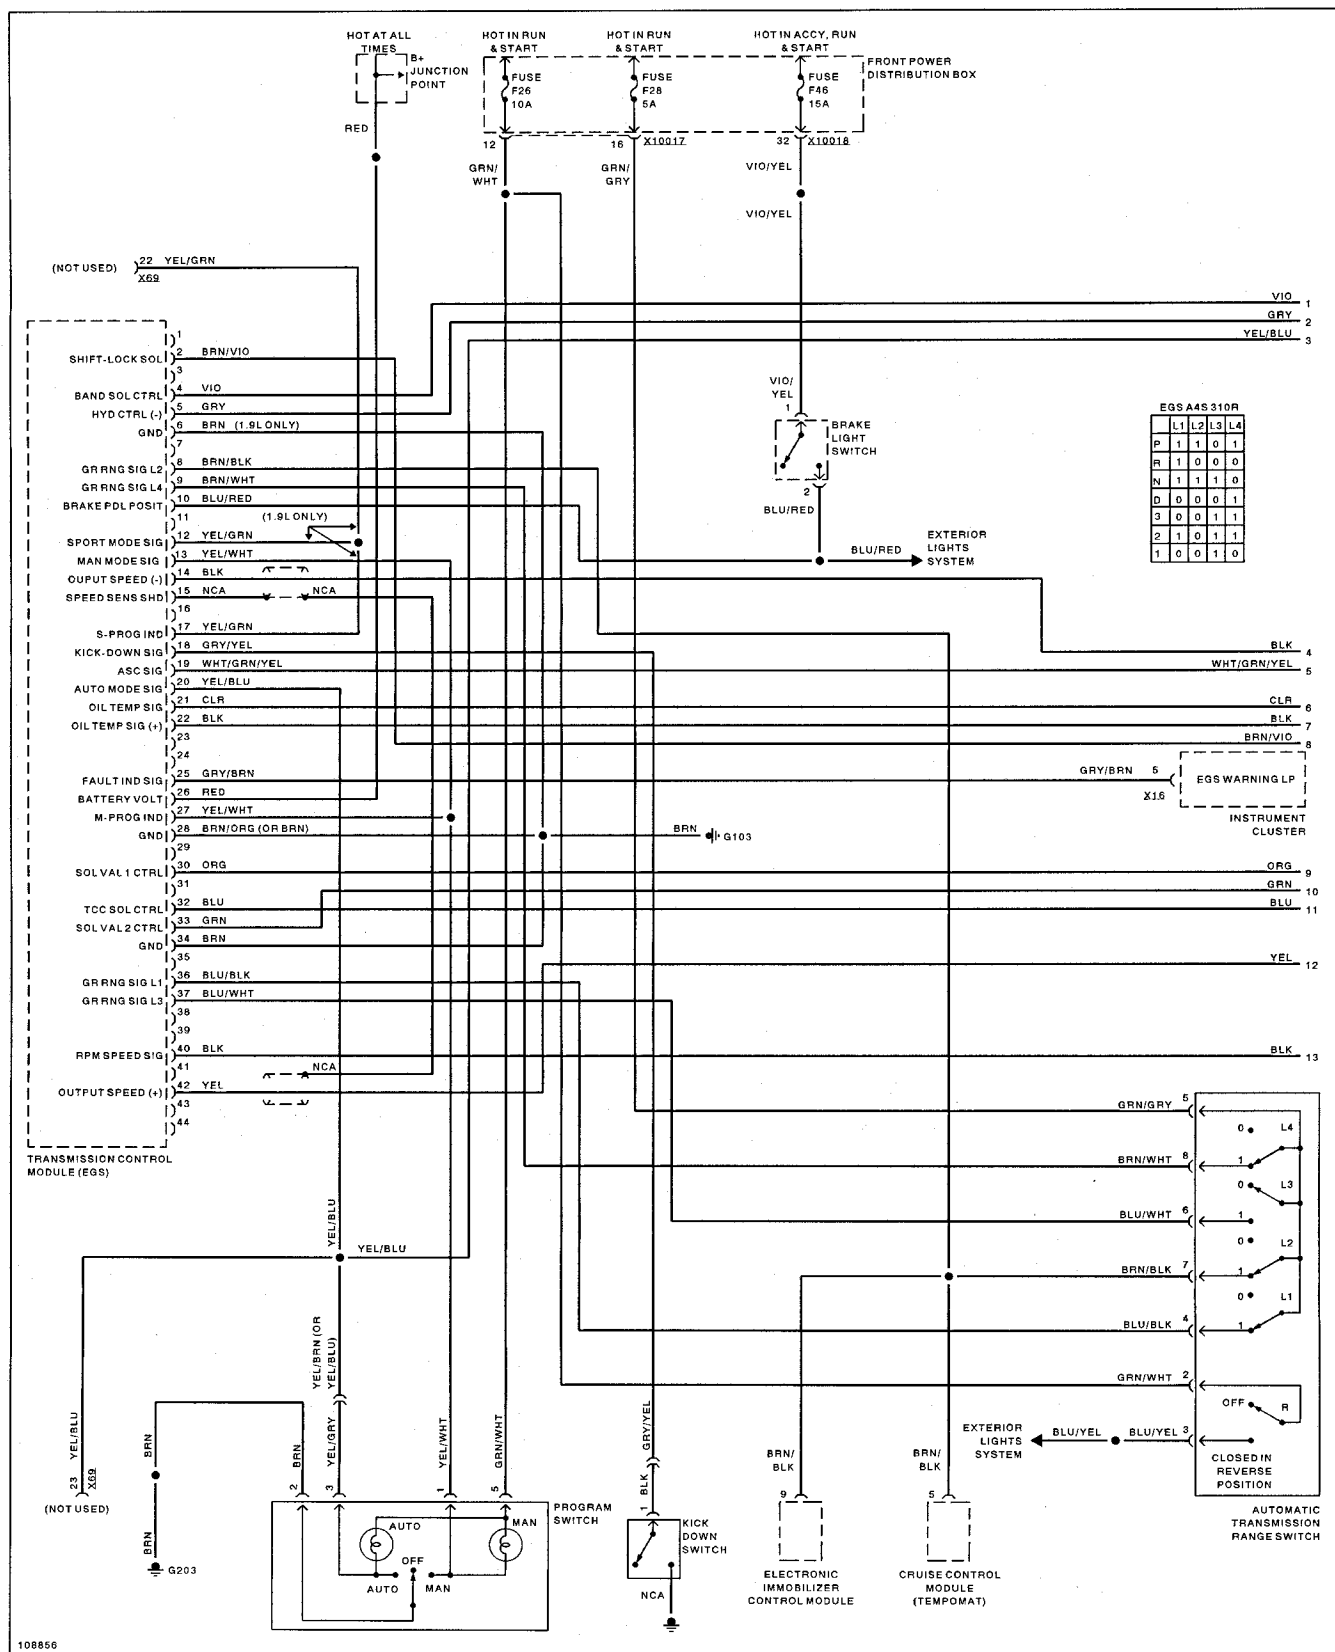


Transmission Electronics

1998 Except M3 (2 of 2)

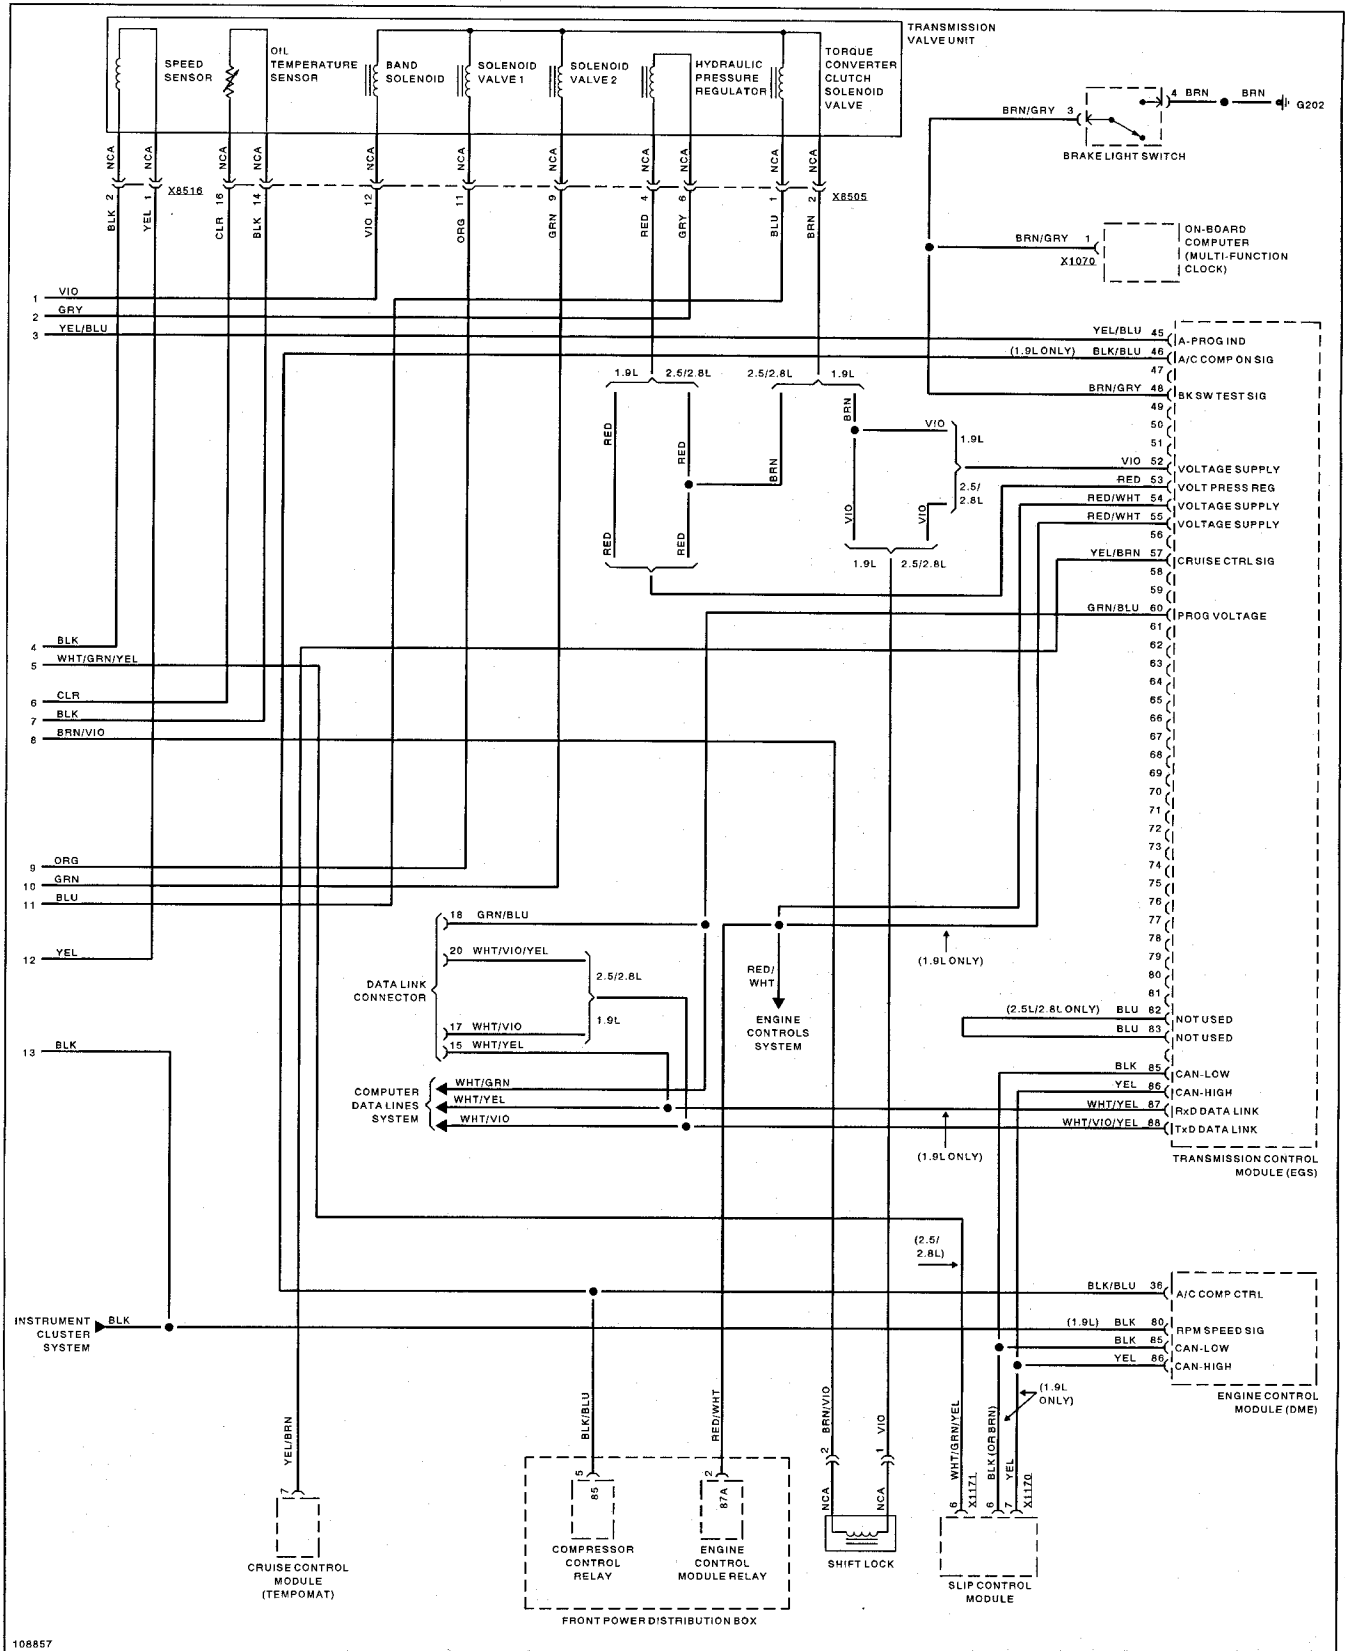


Transmission Electronics

1995-97 M3 (1 of 2)

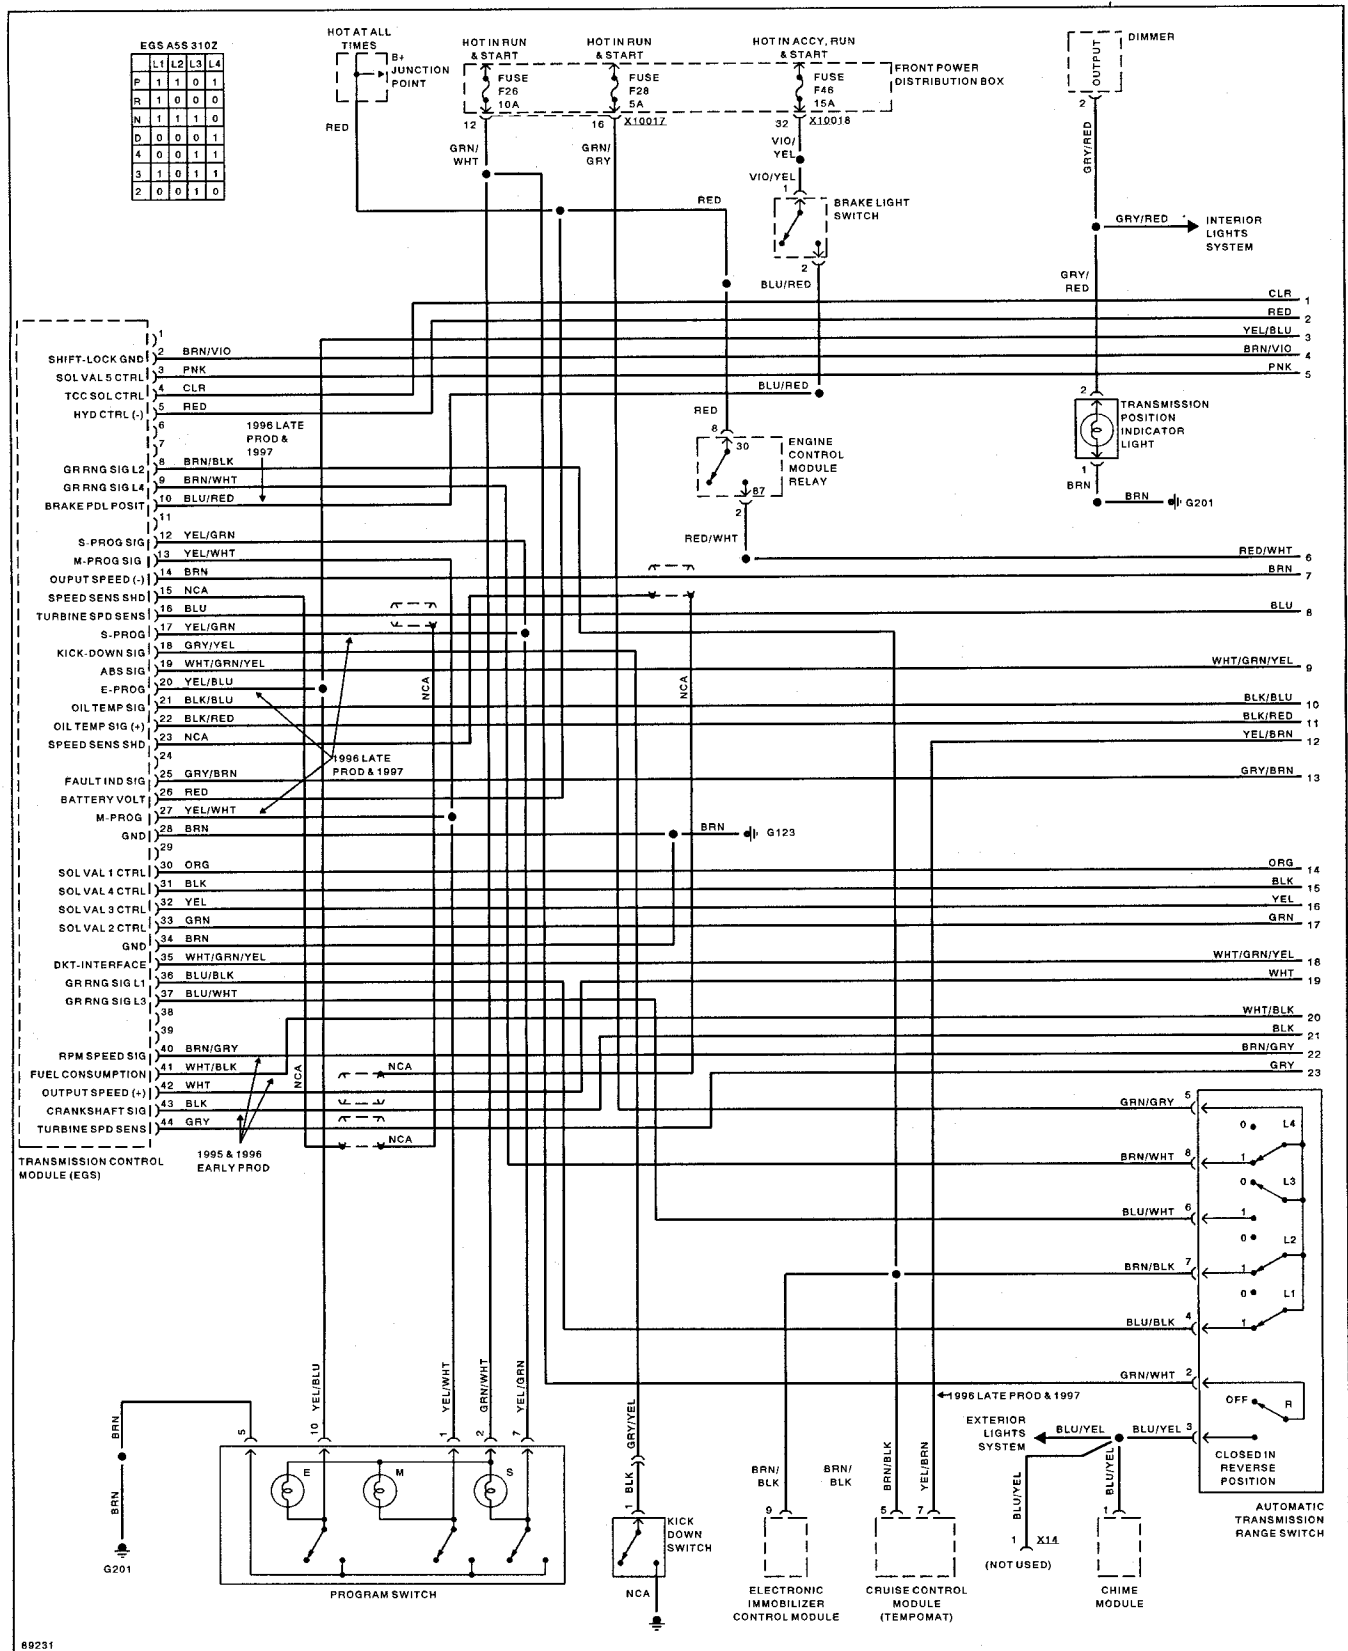


Transmission Electronics

1995-97 M3 (2 of 2)

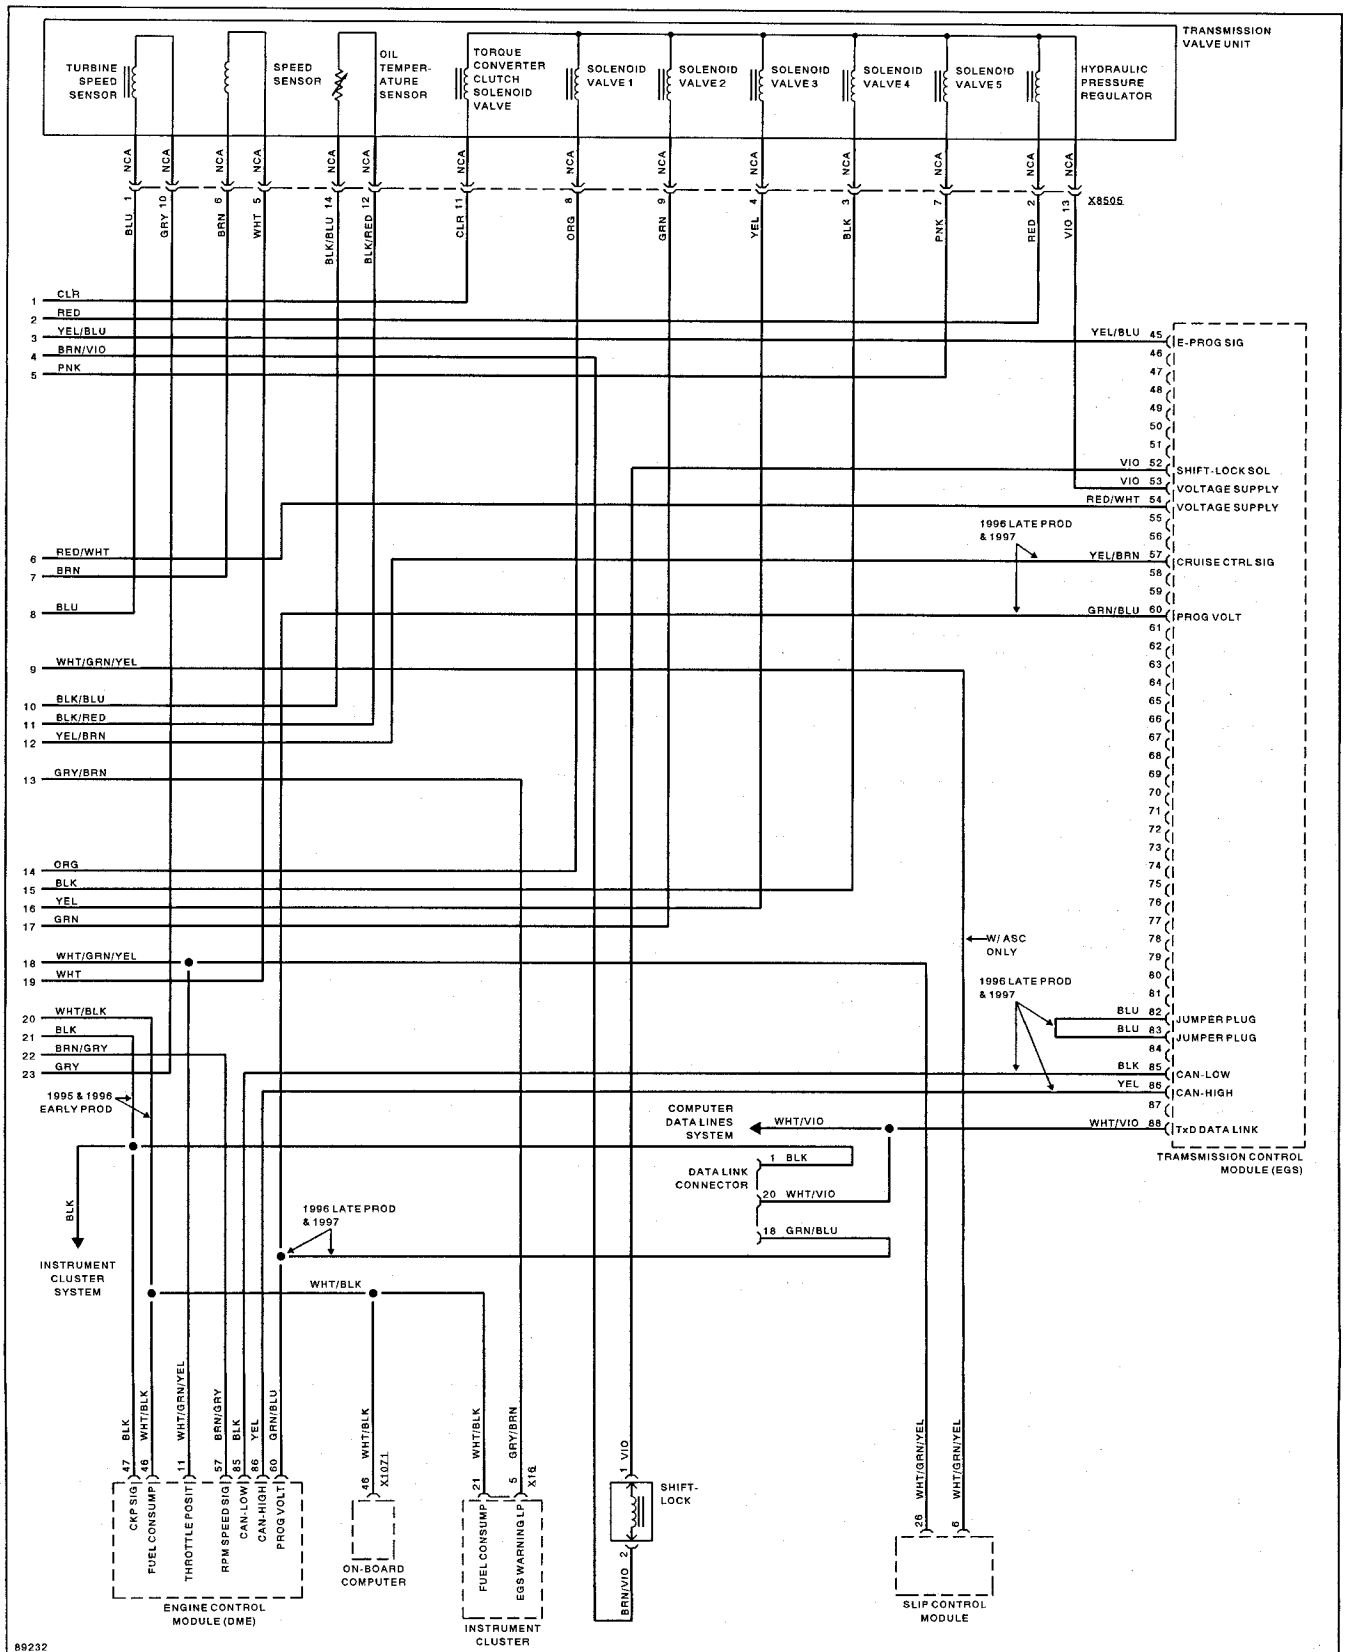


Transmission Electronics

1998 M3 (1 of 2)


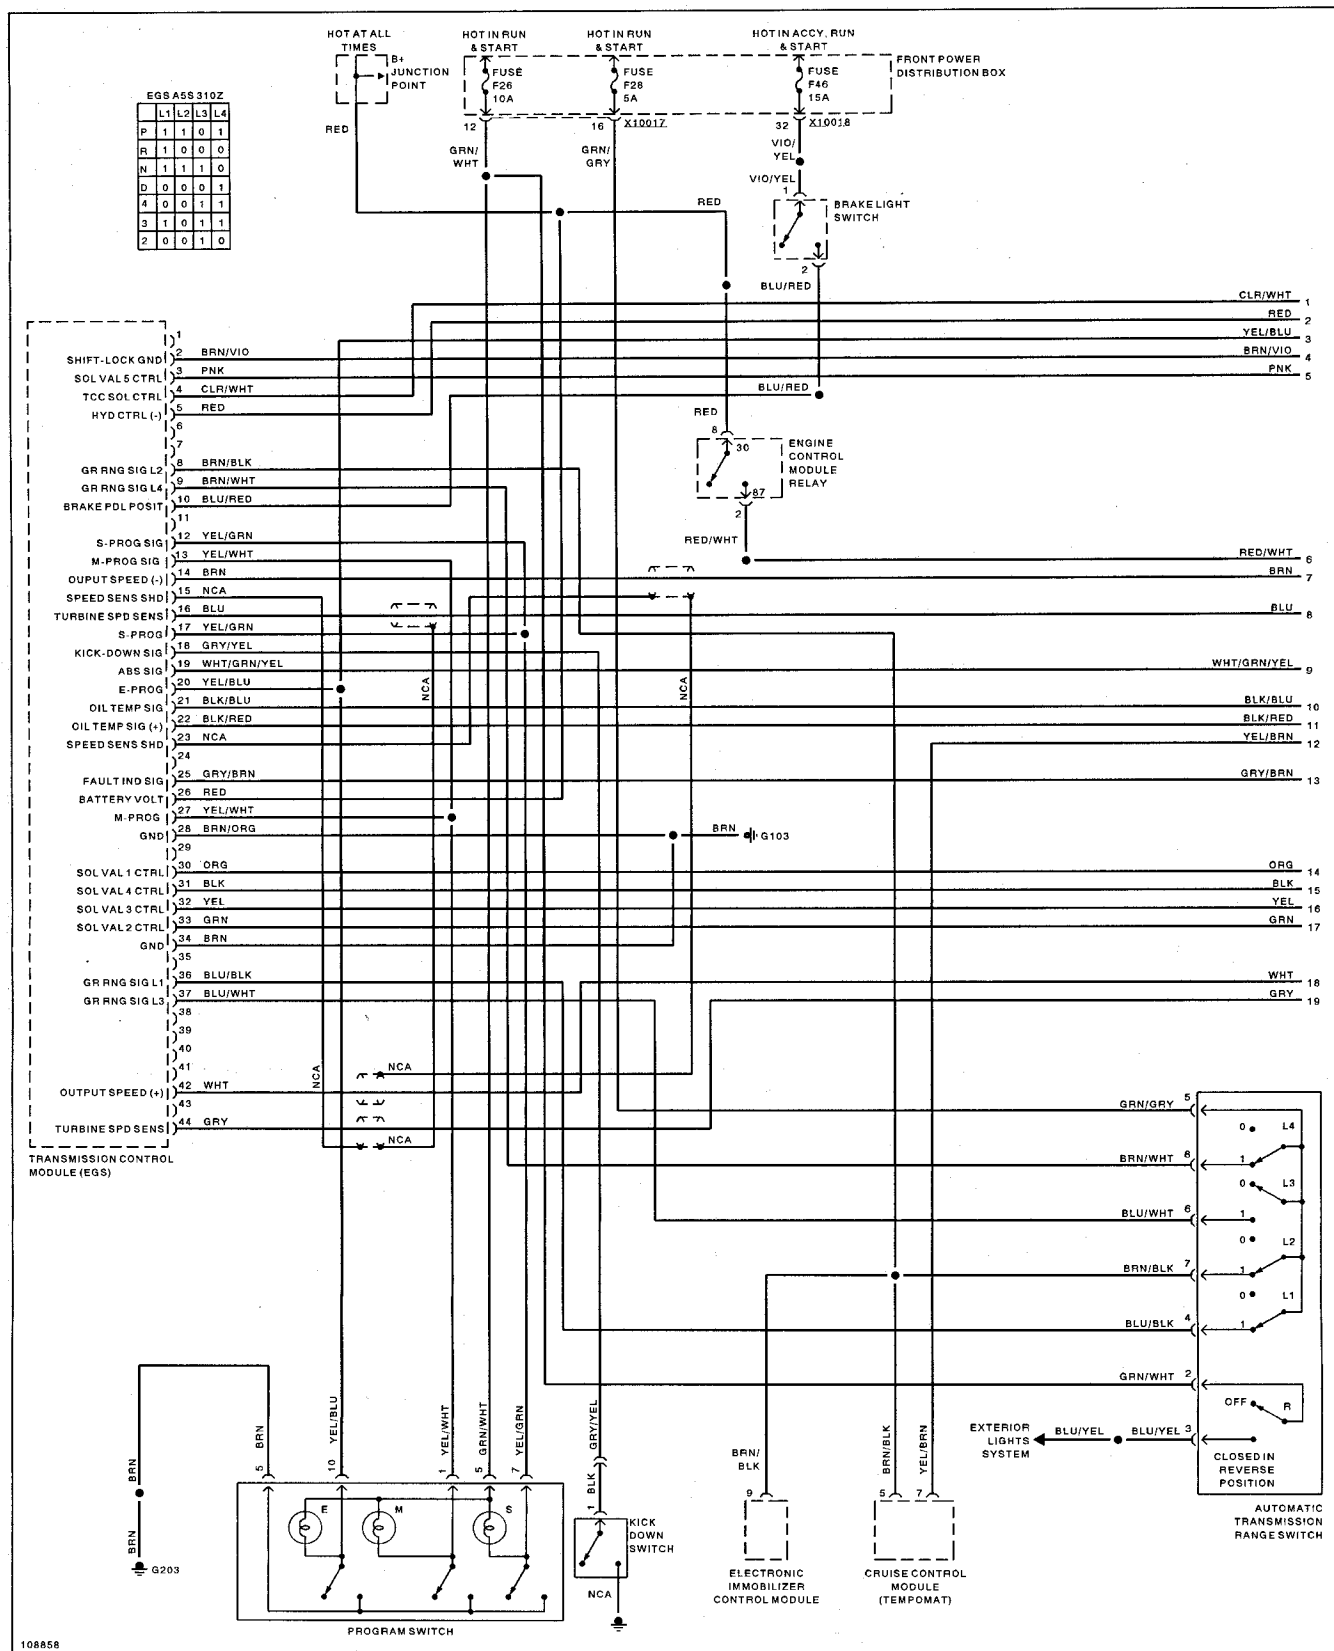


Transmission Electronics


1998 M3 (2 of 2)

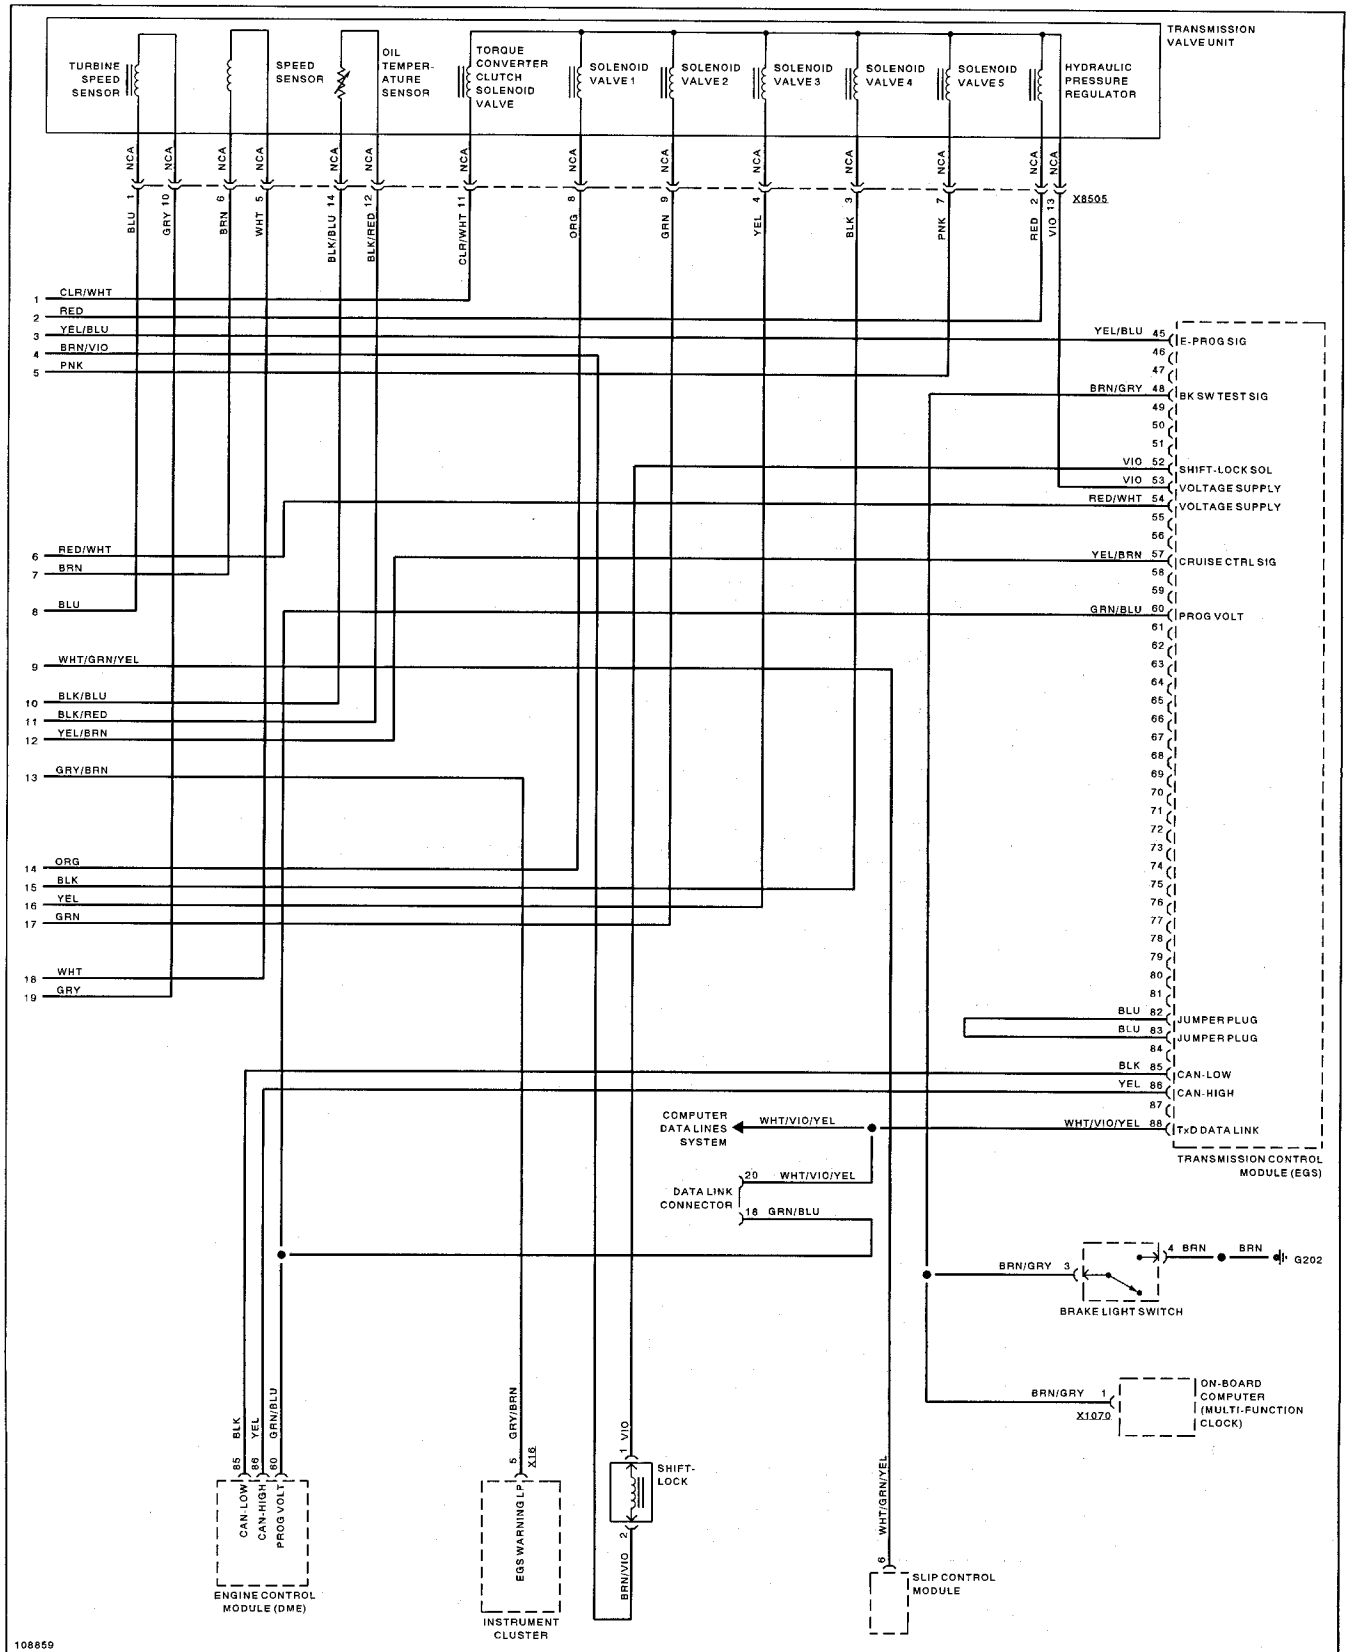


Shift Interlock

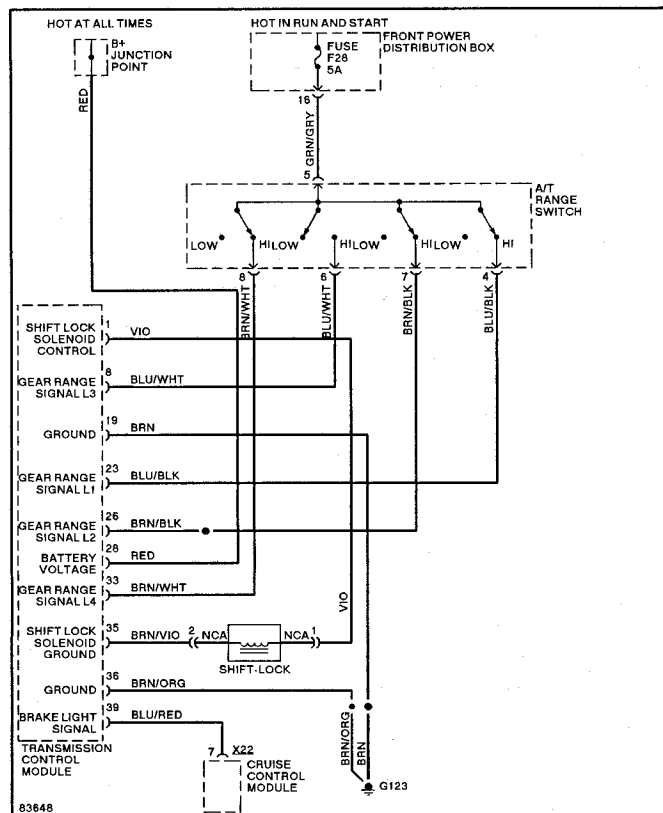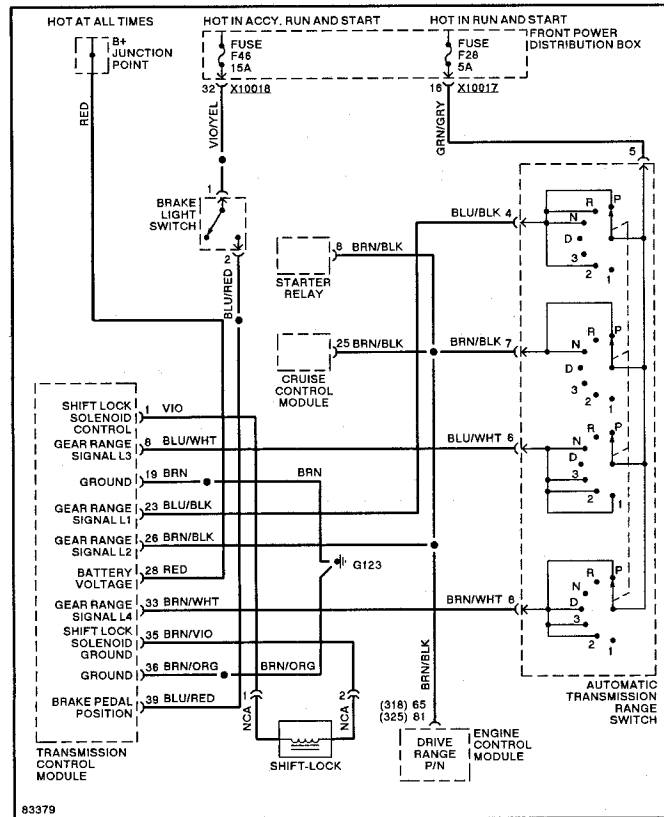

Shift Interlock

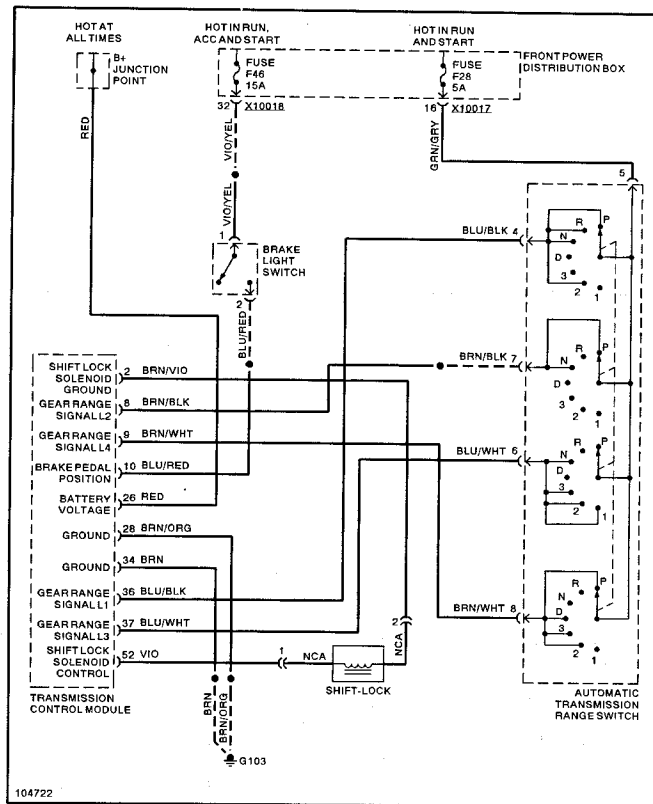


1998
Except 318i, 318ti

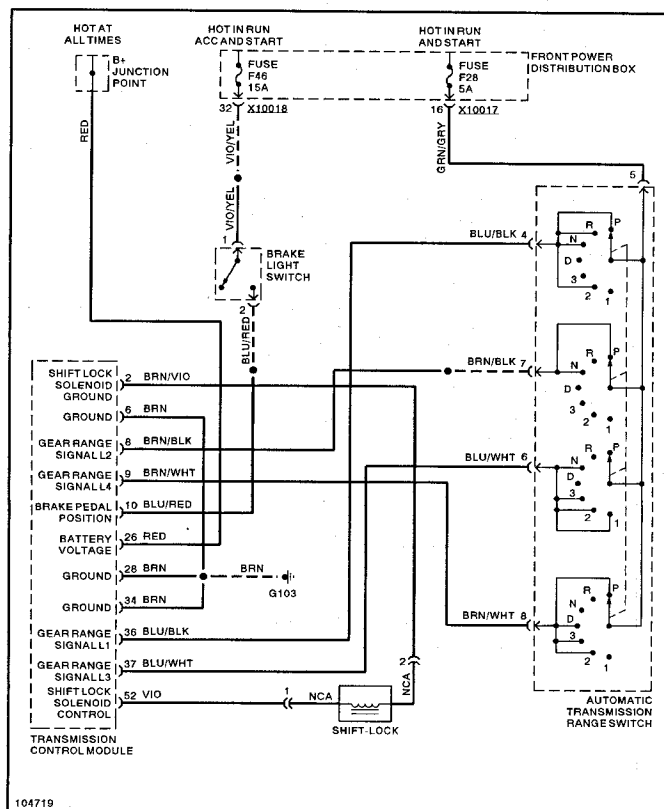

1998
318i, 318ti


Cruise Control

1992-93

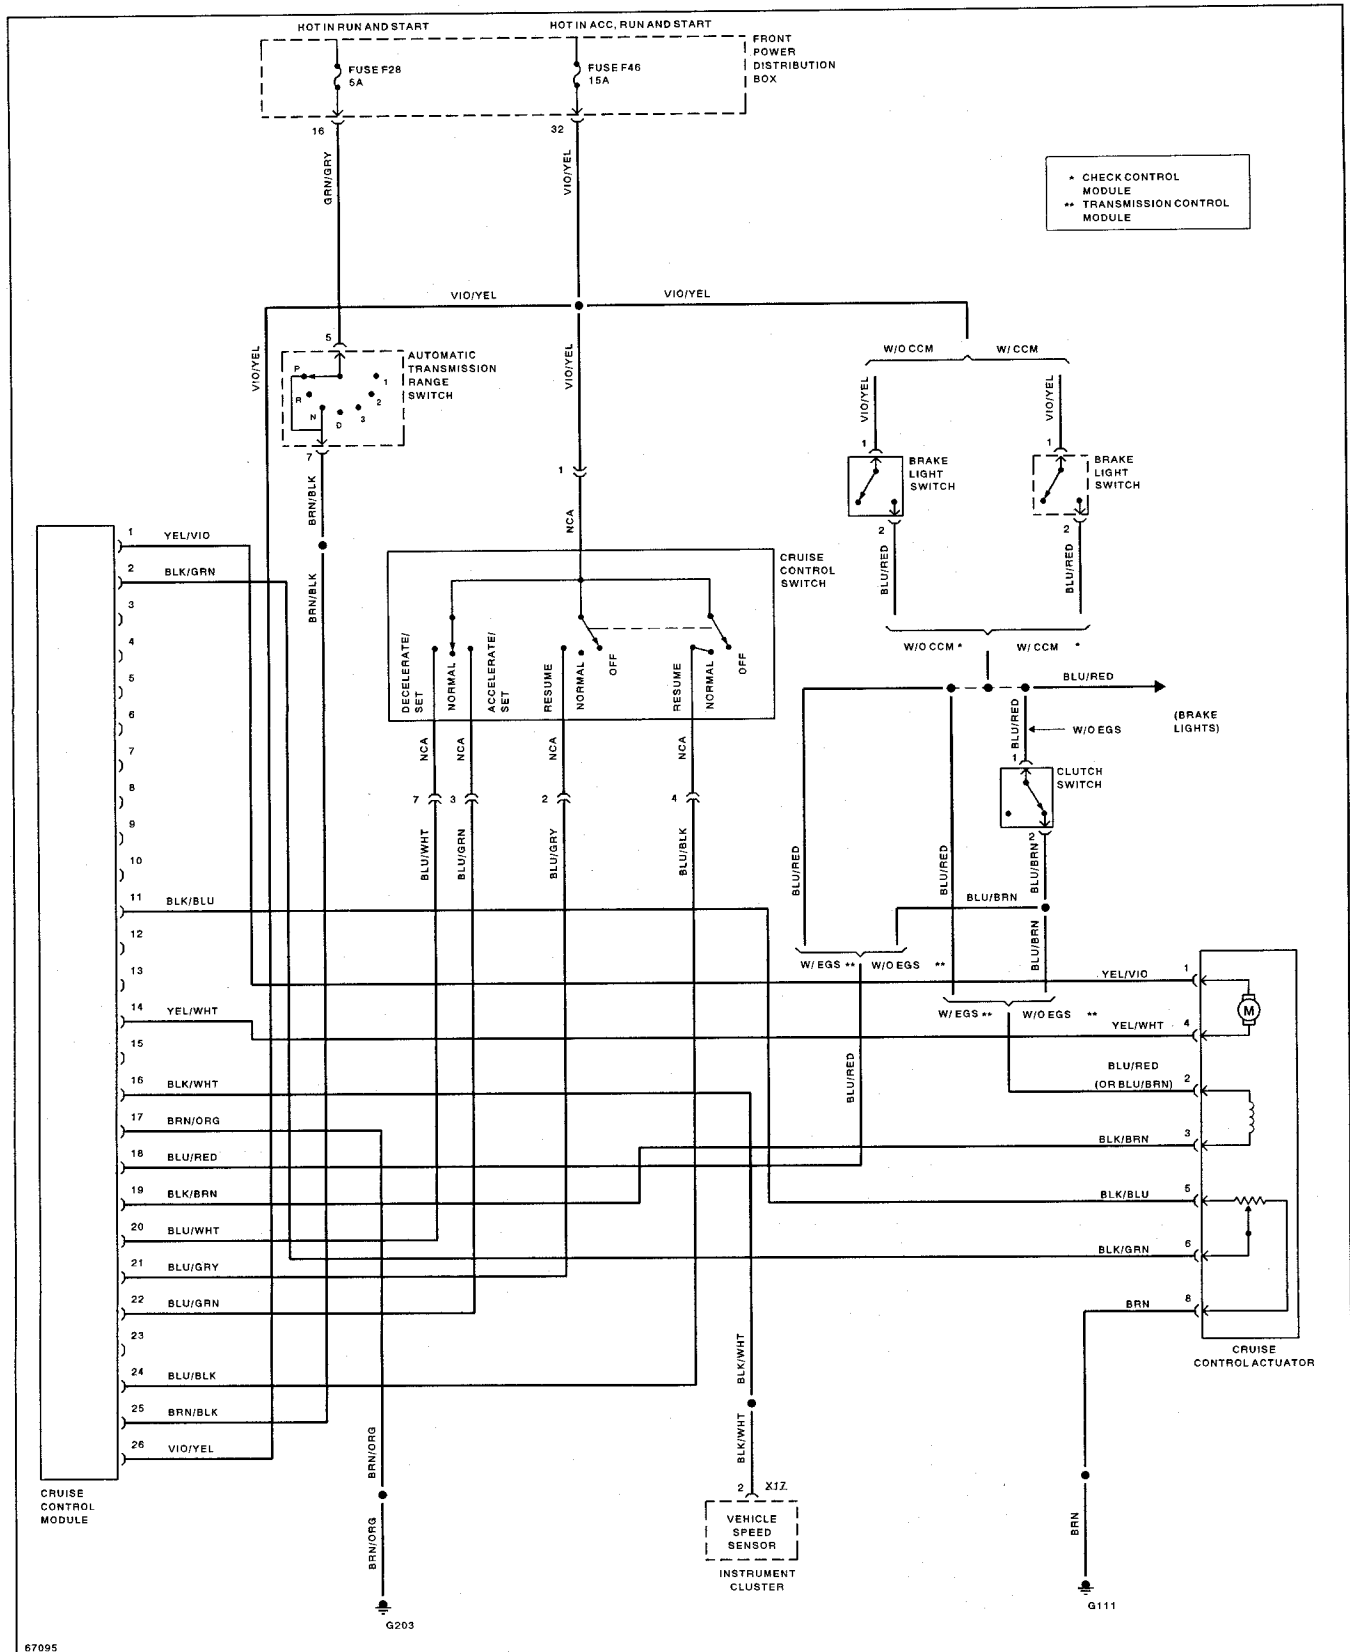


Cruise Control

1994 & 1995 Early Production Except 318ti

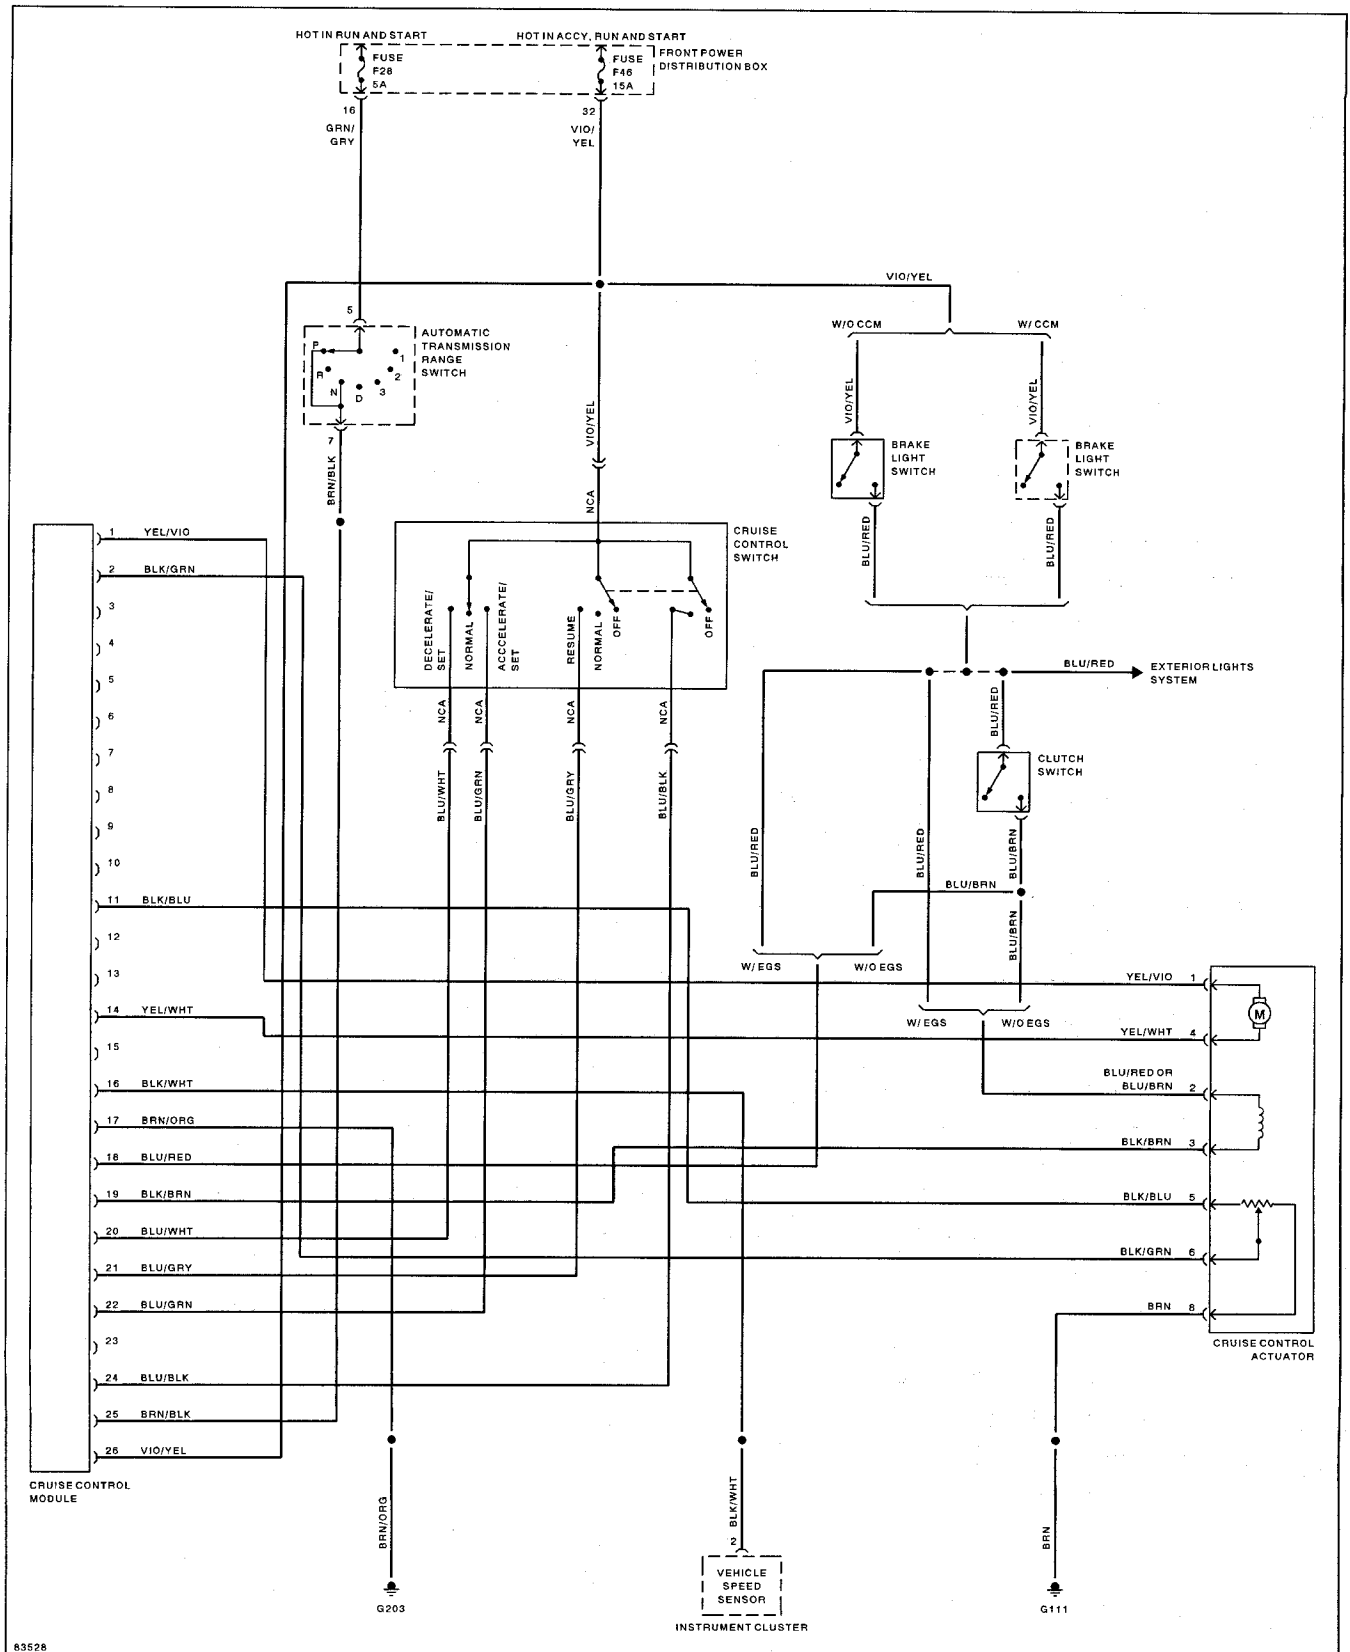


Cruise Control

1995 Late Production & 1996-97 Except 318ti

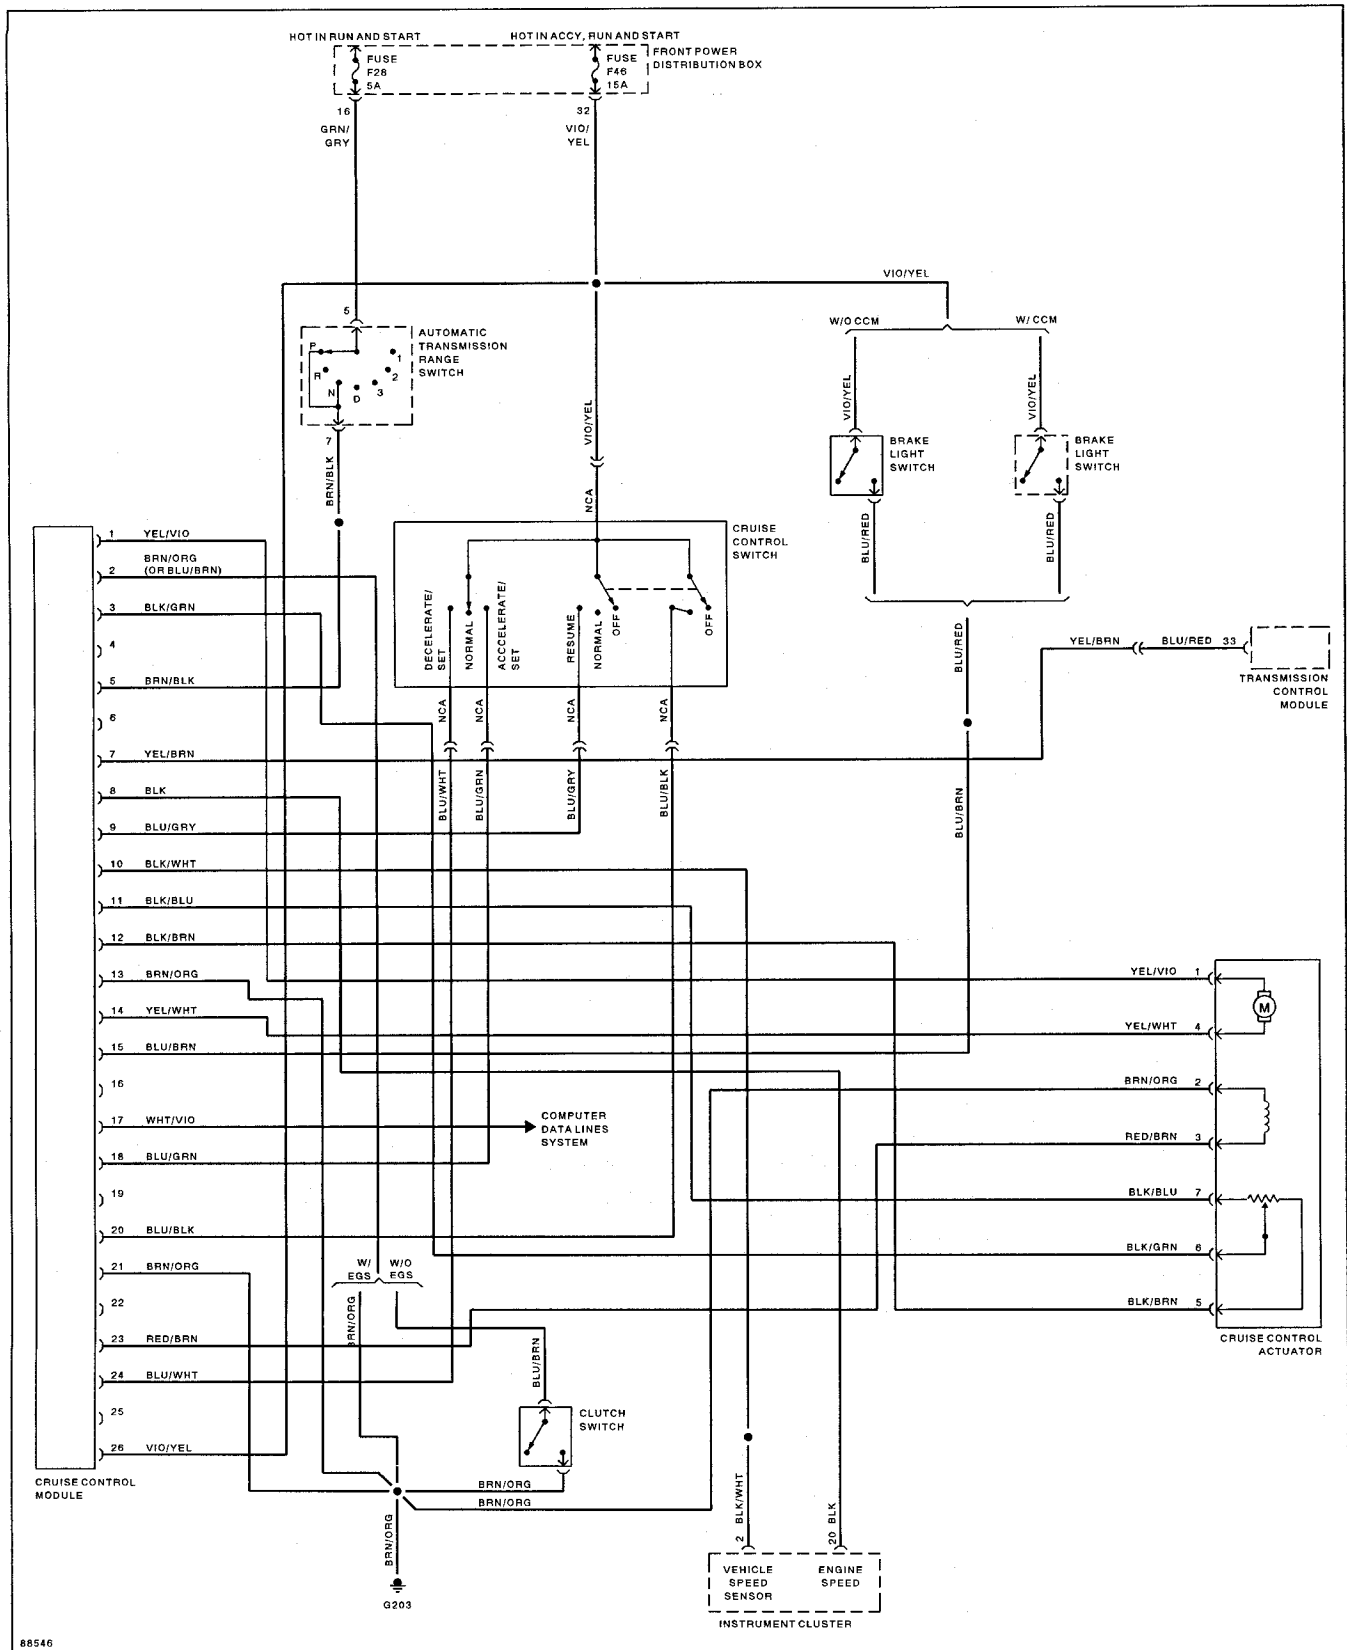


Cruise Control

1995-97 318ti

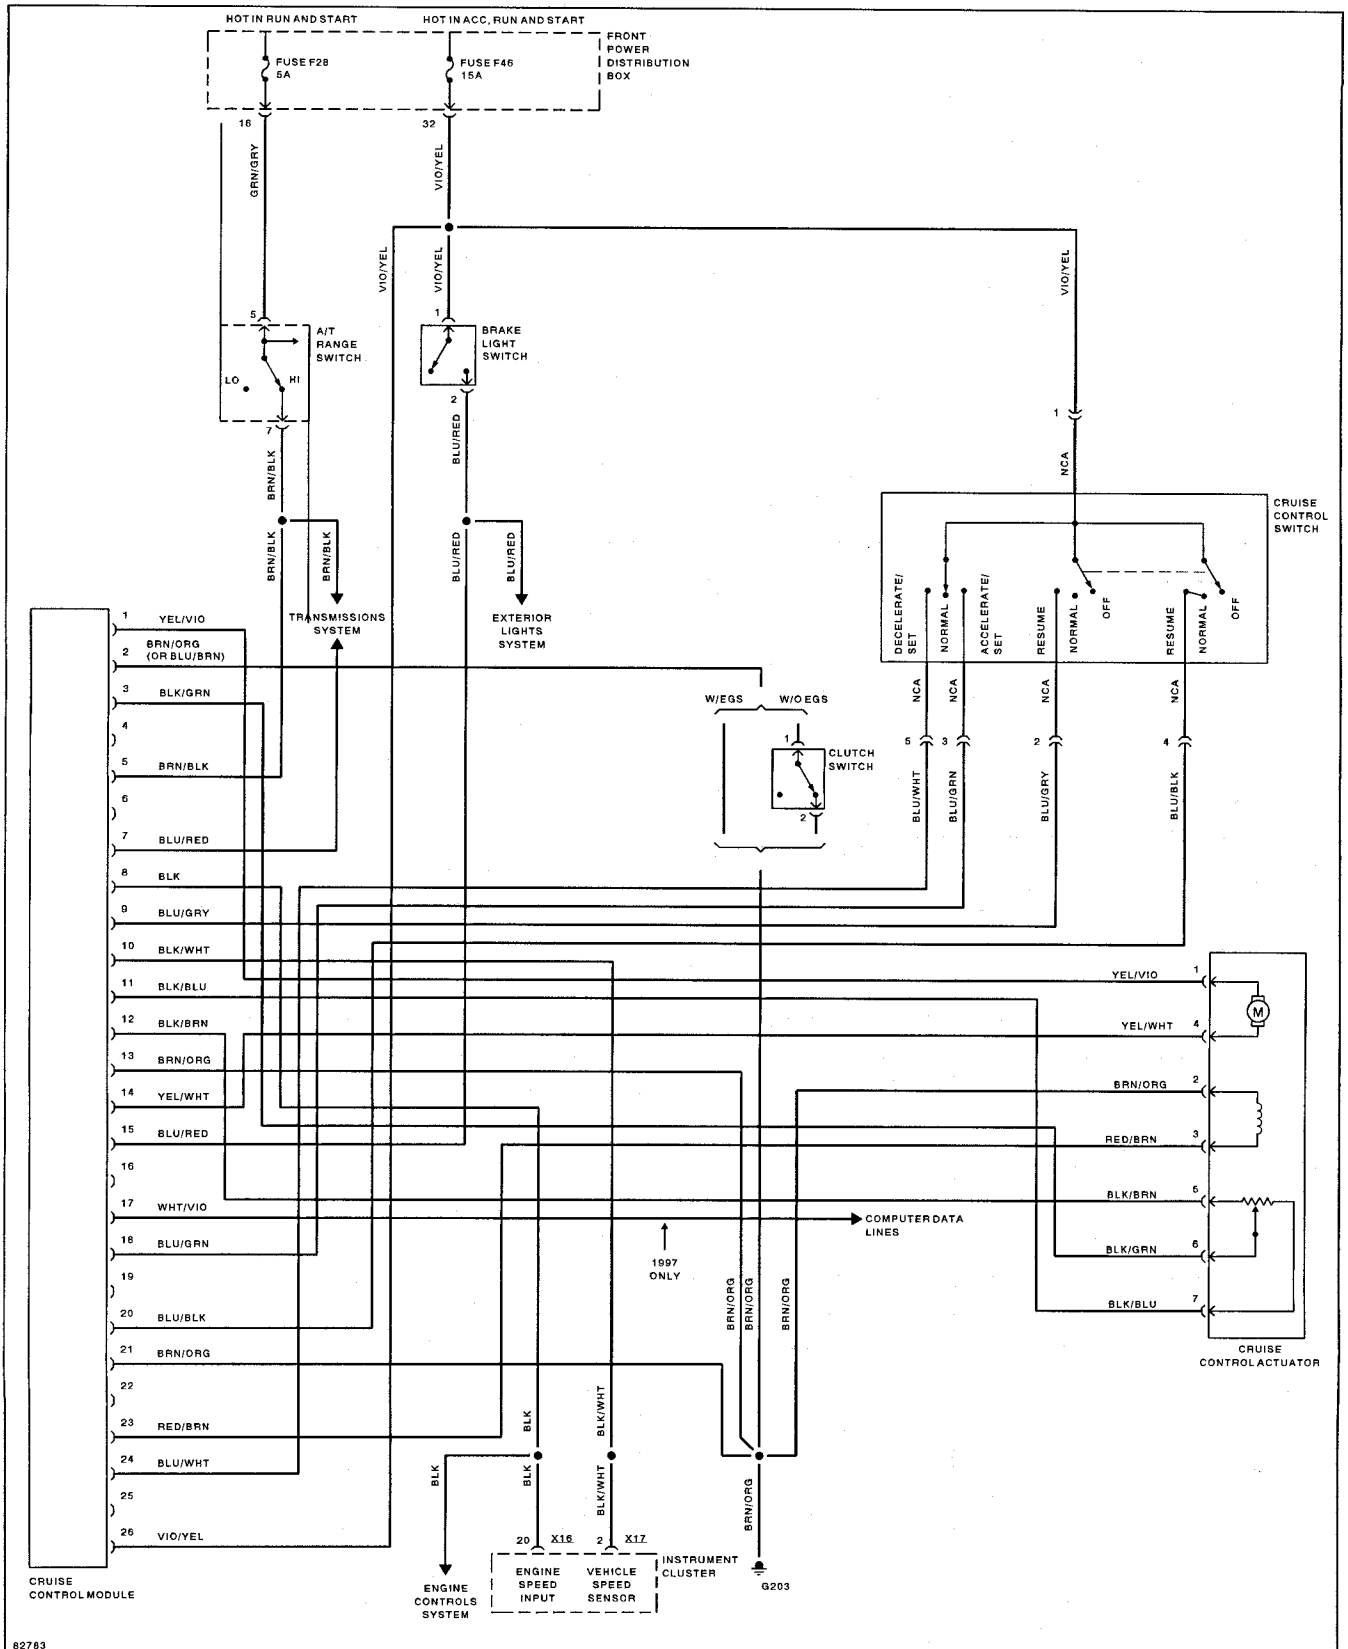


Cruise Control

1998

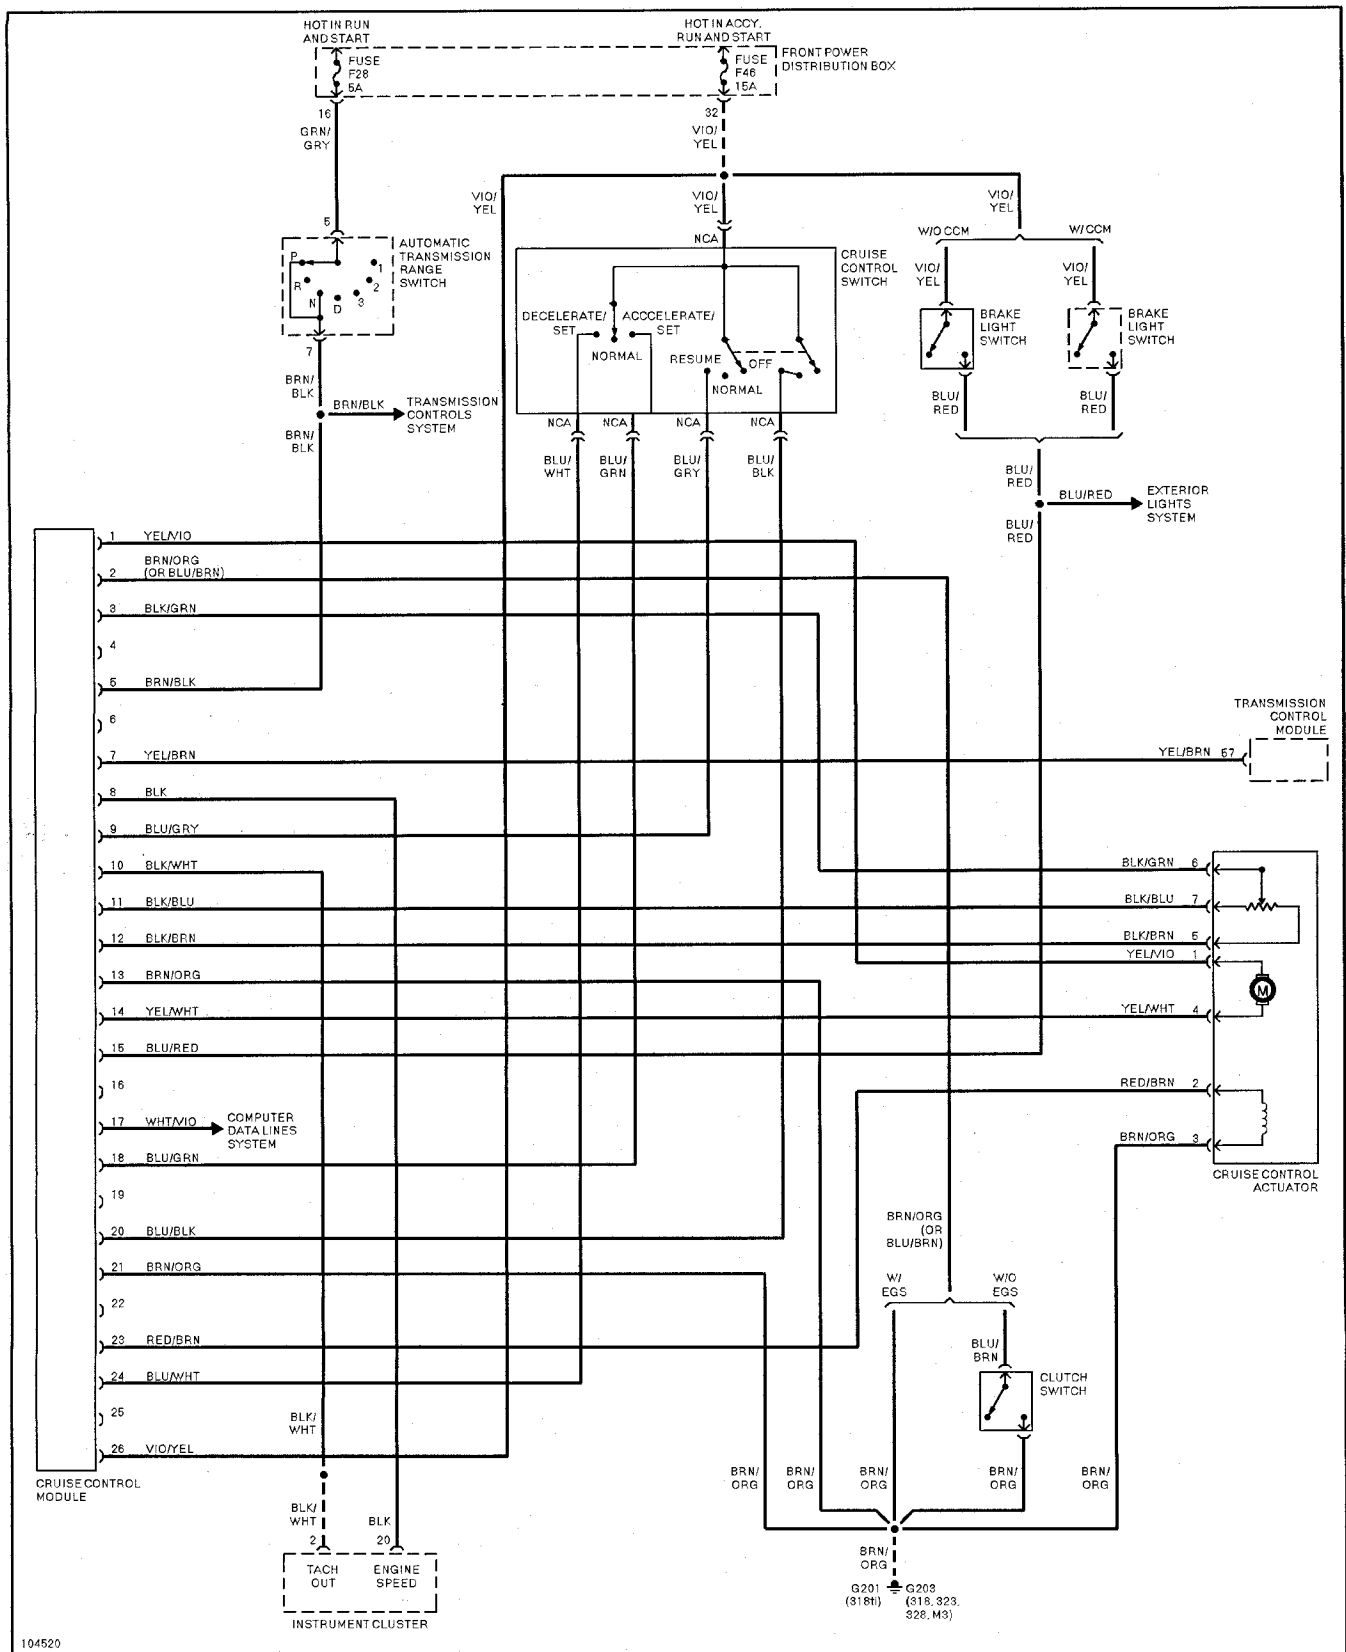


ABS


1992-94 w/o Traction Control

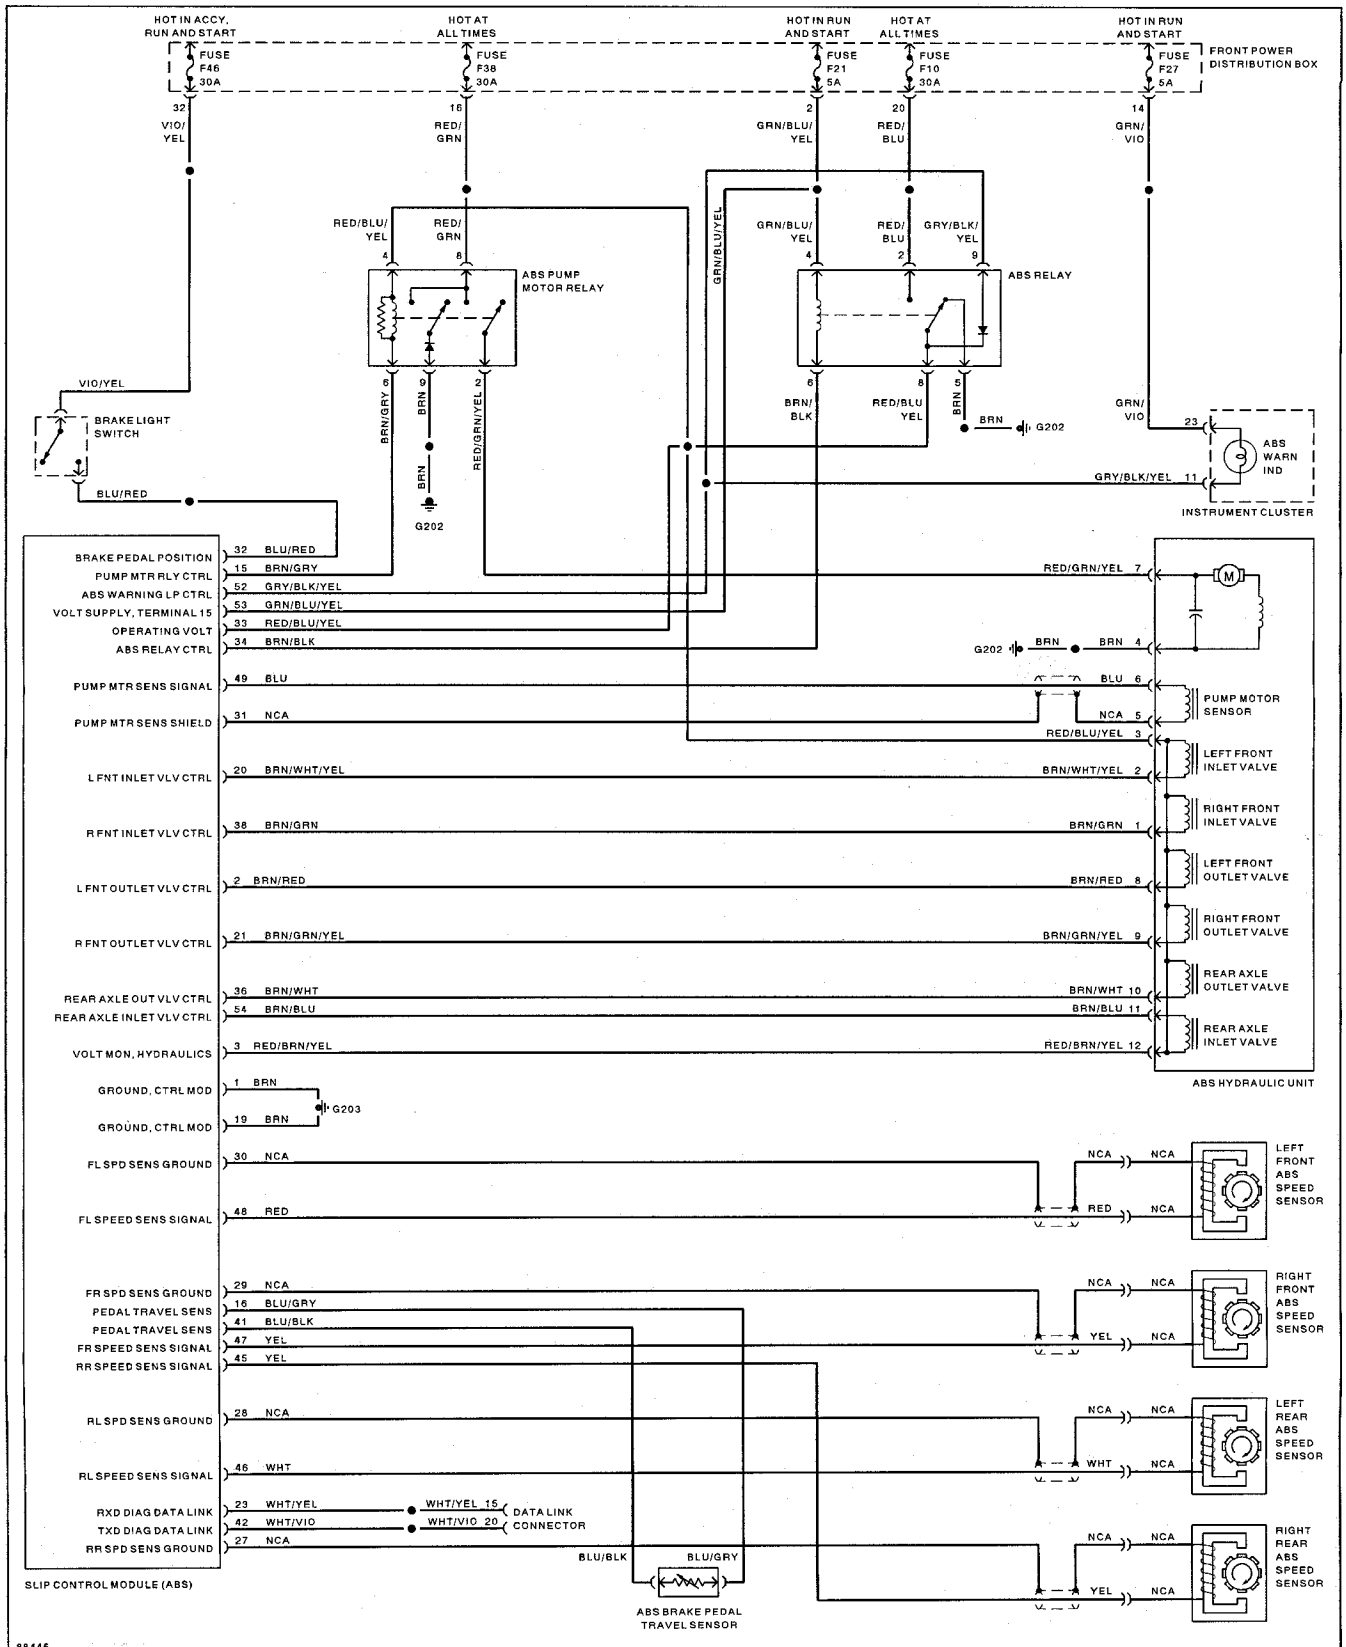

ABS/AST


1995-97 318ti & 1997 318i, 318iC & 318is w/Traction Control

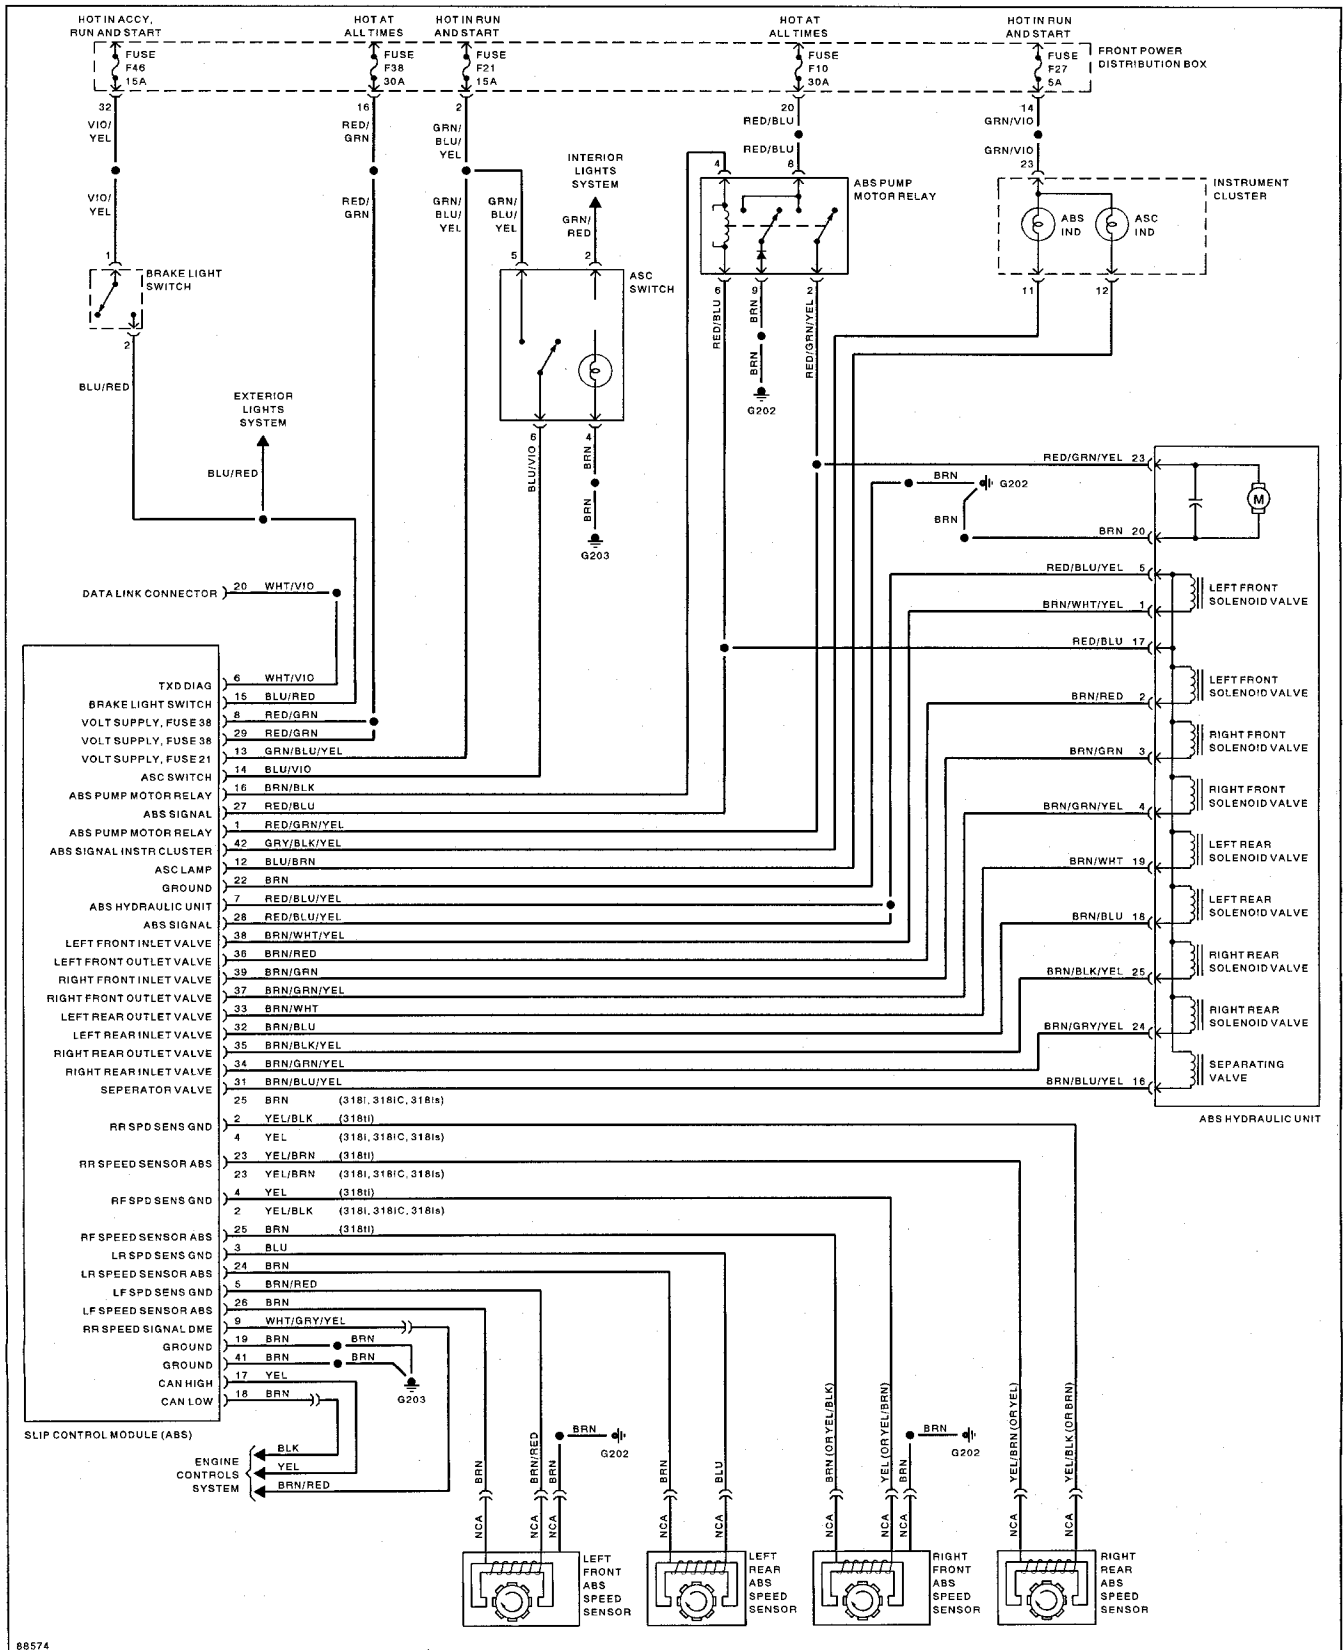

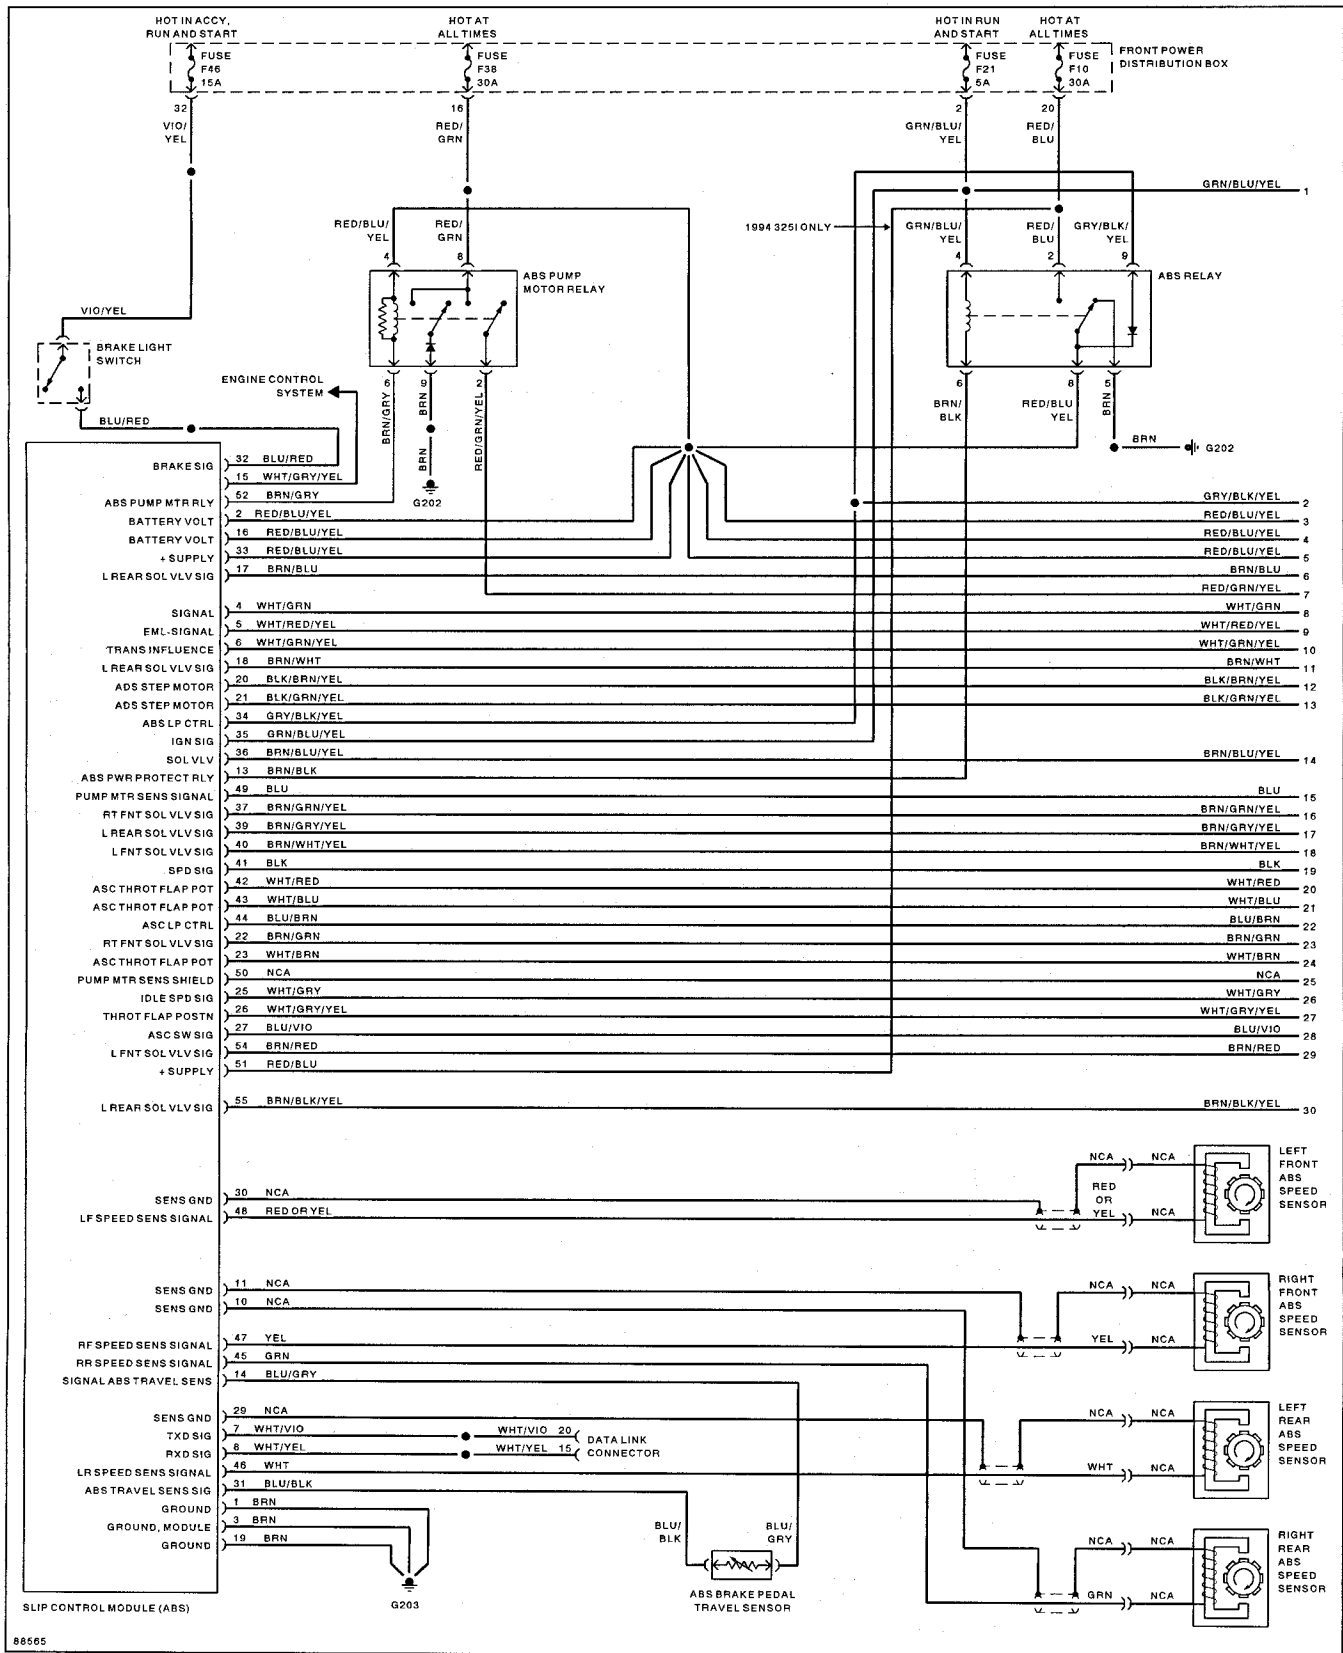ABS/AST**1994-95 325i, 325iC & 325is, 1996-97 328i, 328iC & 328is, 1995-97 M3
w/ Traction Control (1 of 2)**


ABS/AST

**1994-95 325i, 325iC & 325is, 1996-97 328i, 328iC & 328is, 1995-97 M3
w/ Traction Control (2 of 2)**

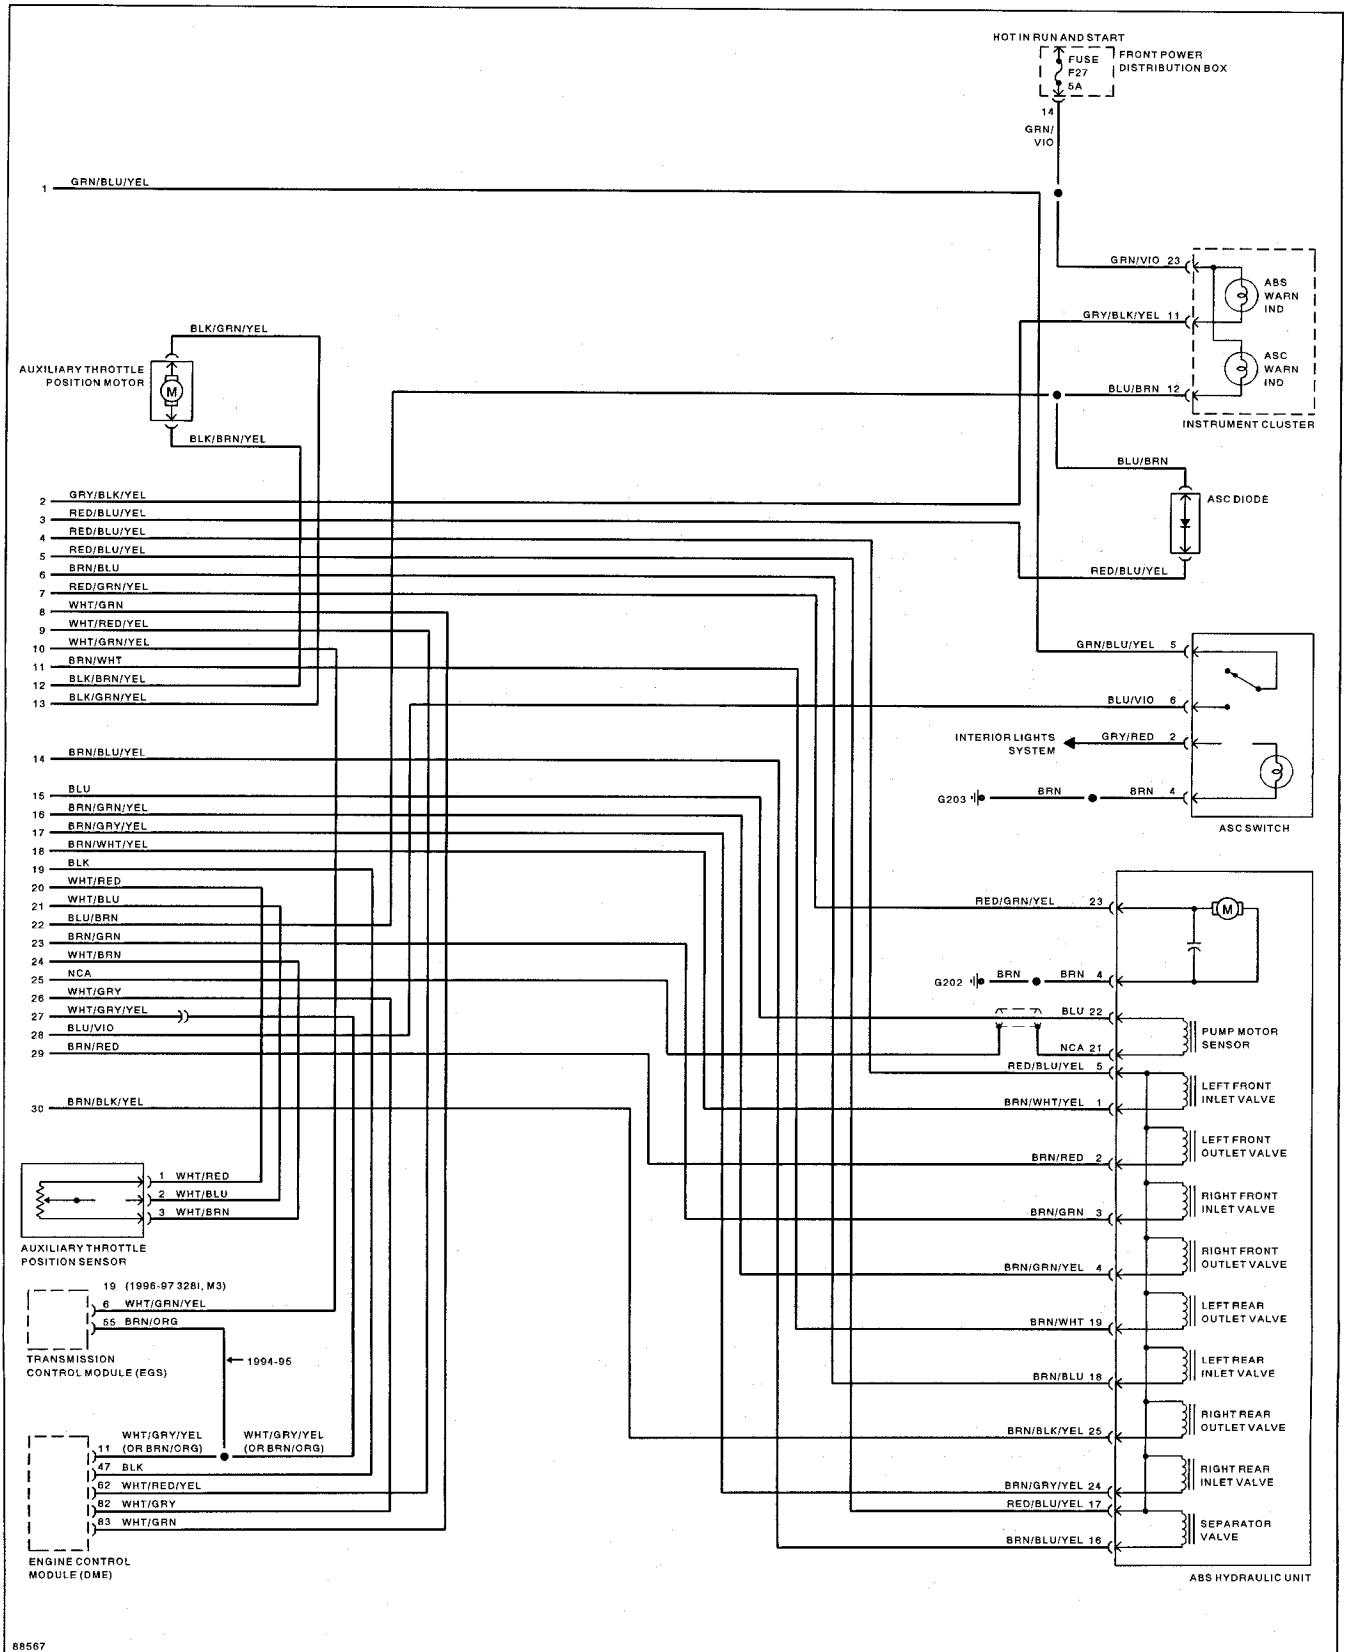


ABS/AST

1996 318i, 318iC & 318is w/Traction Control

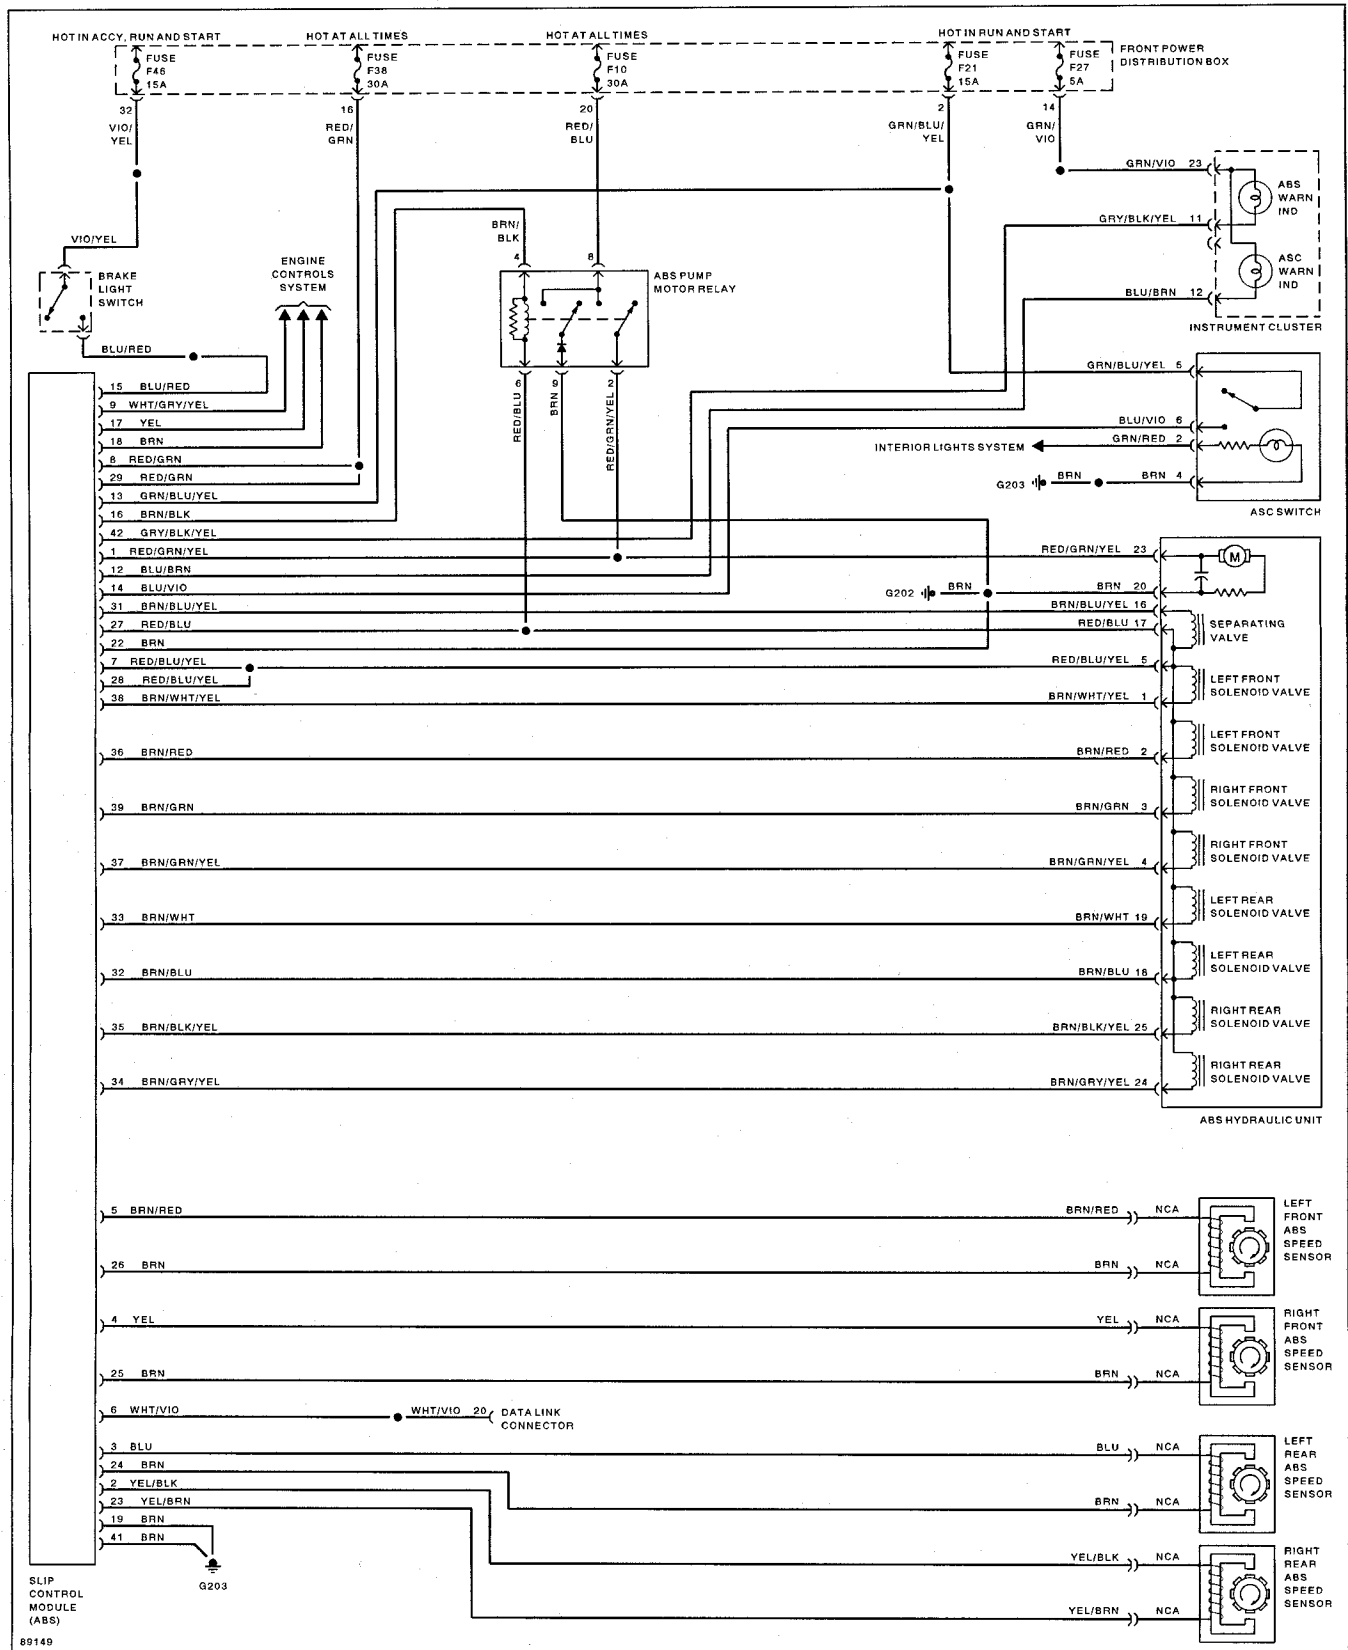


ABS/AST

1998 318i, 318ti w/Traction Control

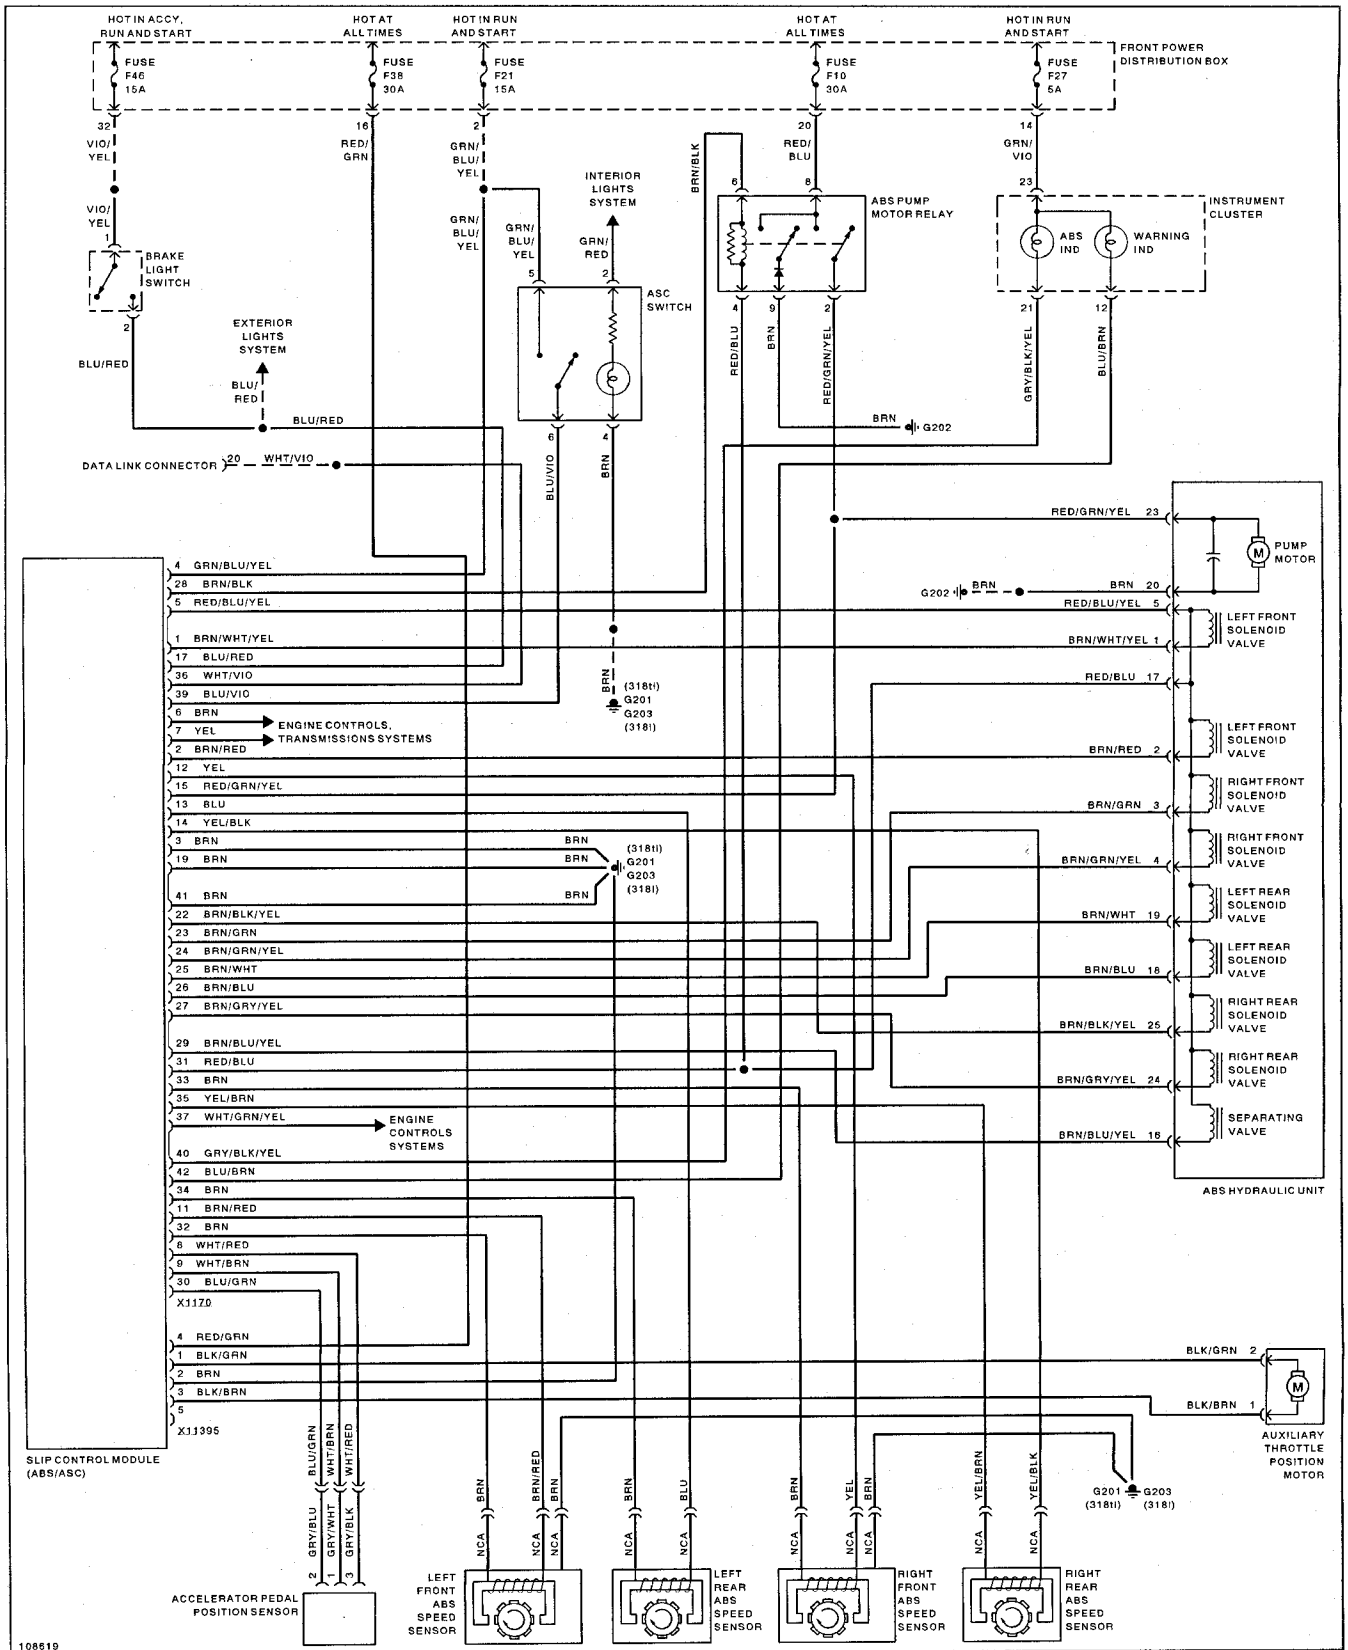


ABS/AST

1998 Except 318i, 318ti w/Traction Control (1 of 2)

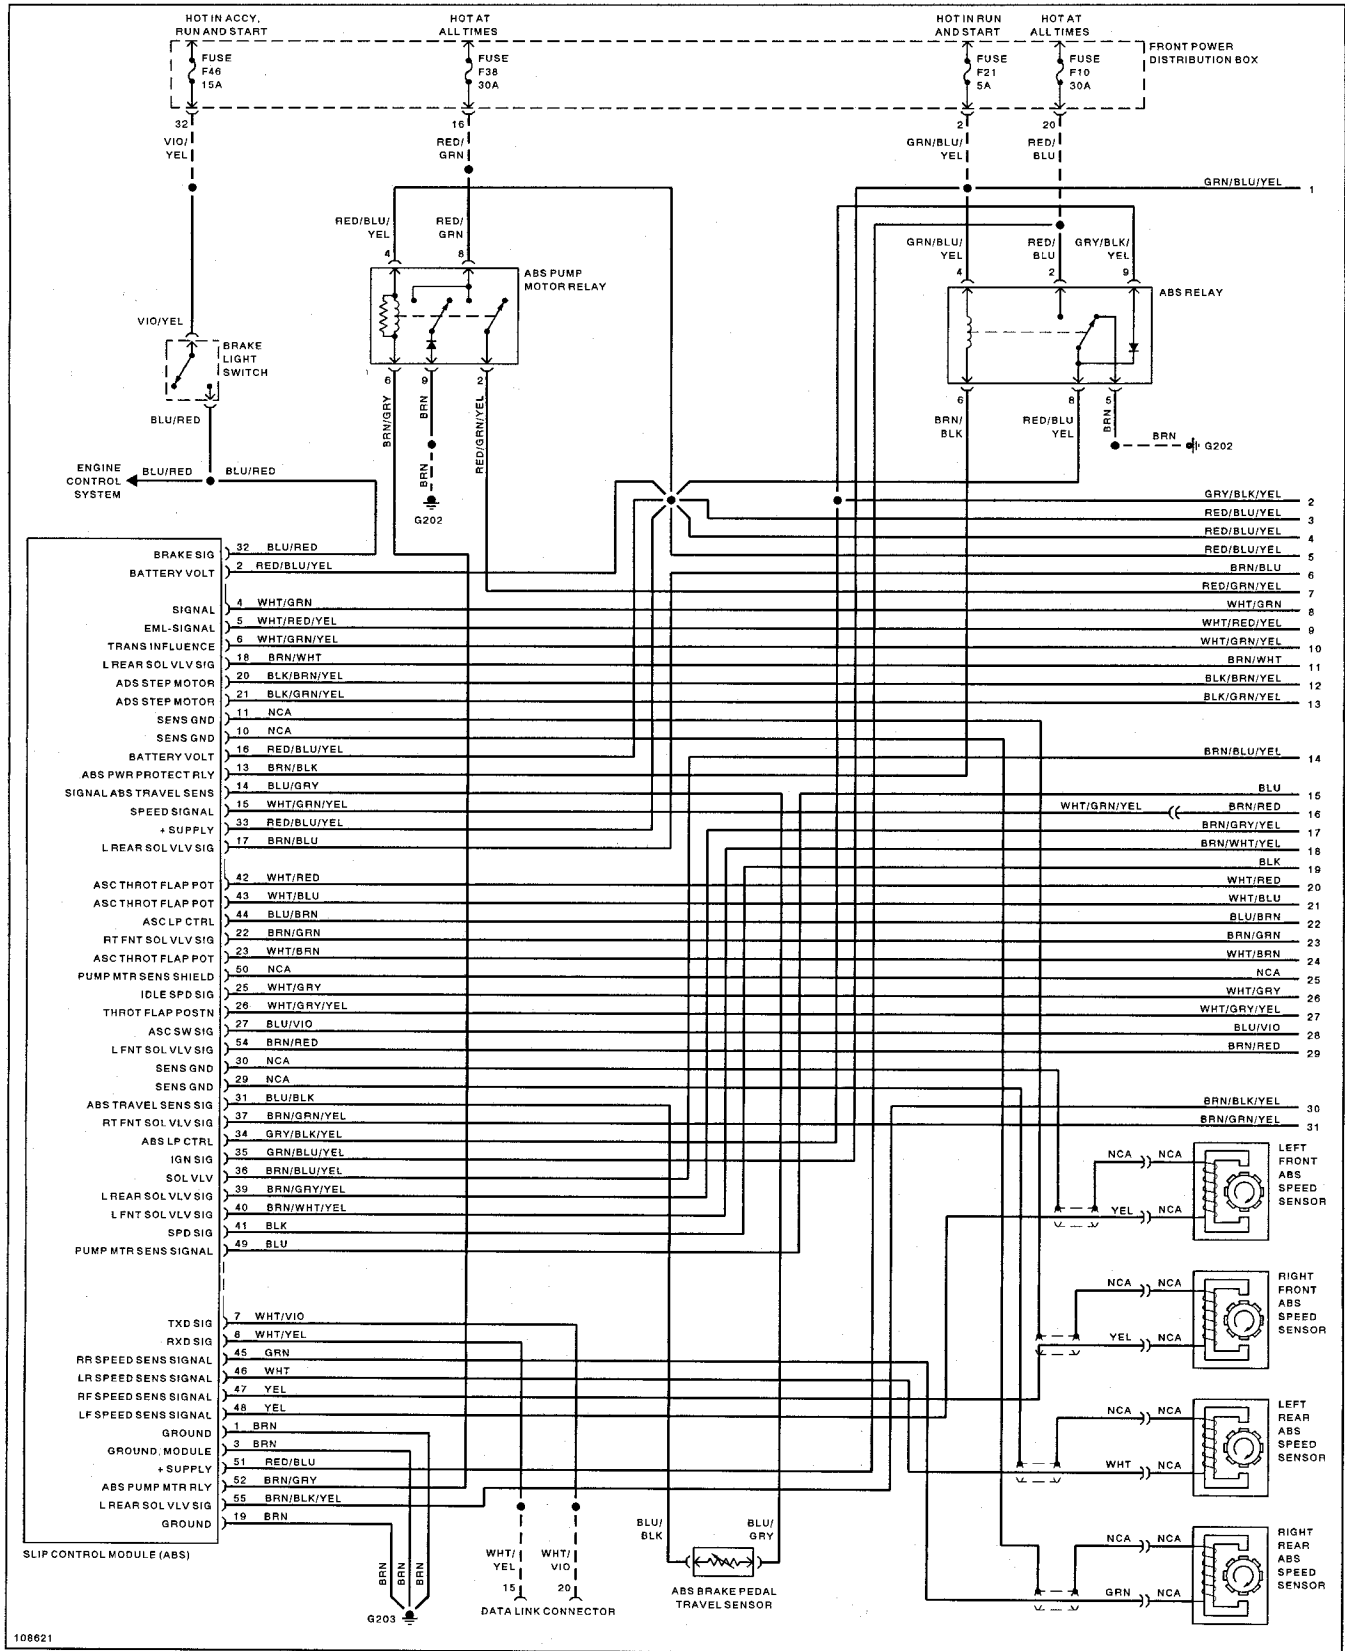


ABS/AST

1998 Except 318i, 318ti w/Traction Control (2 of 2)

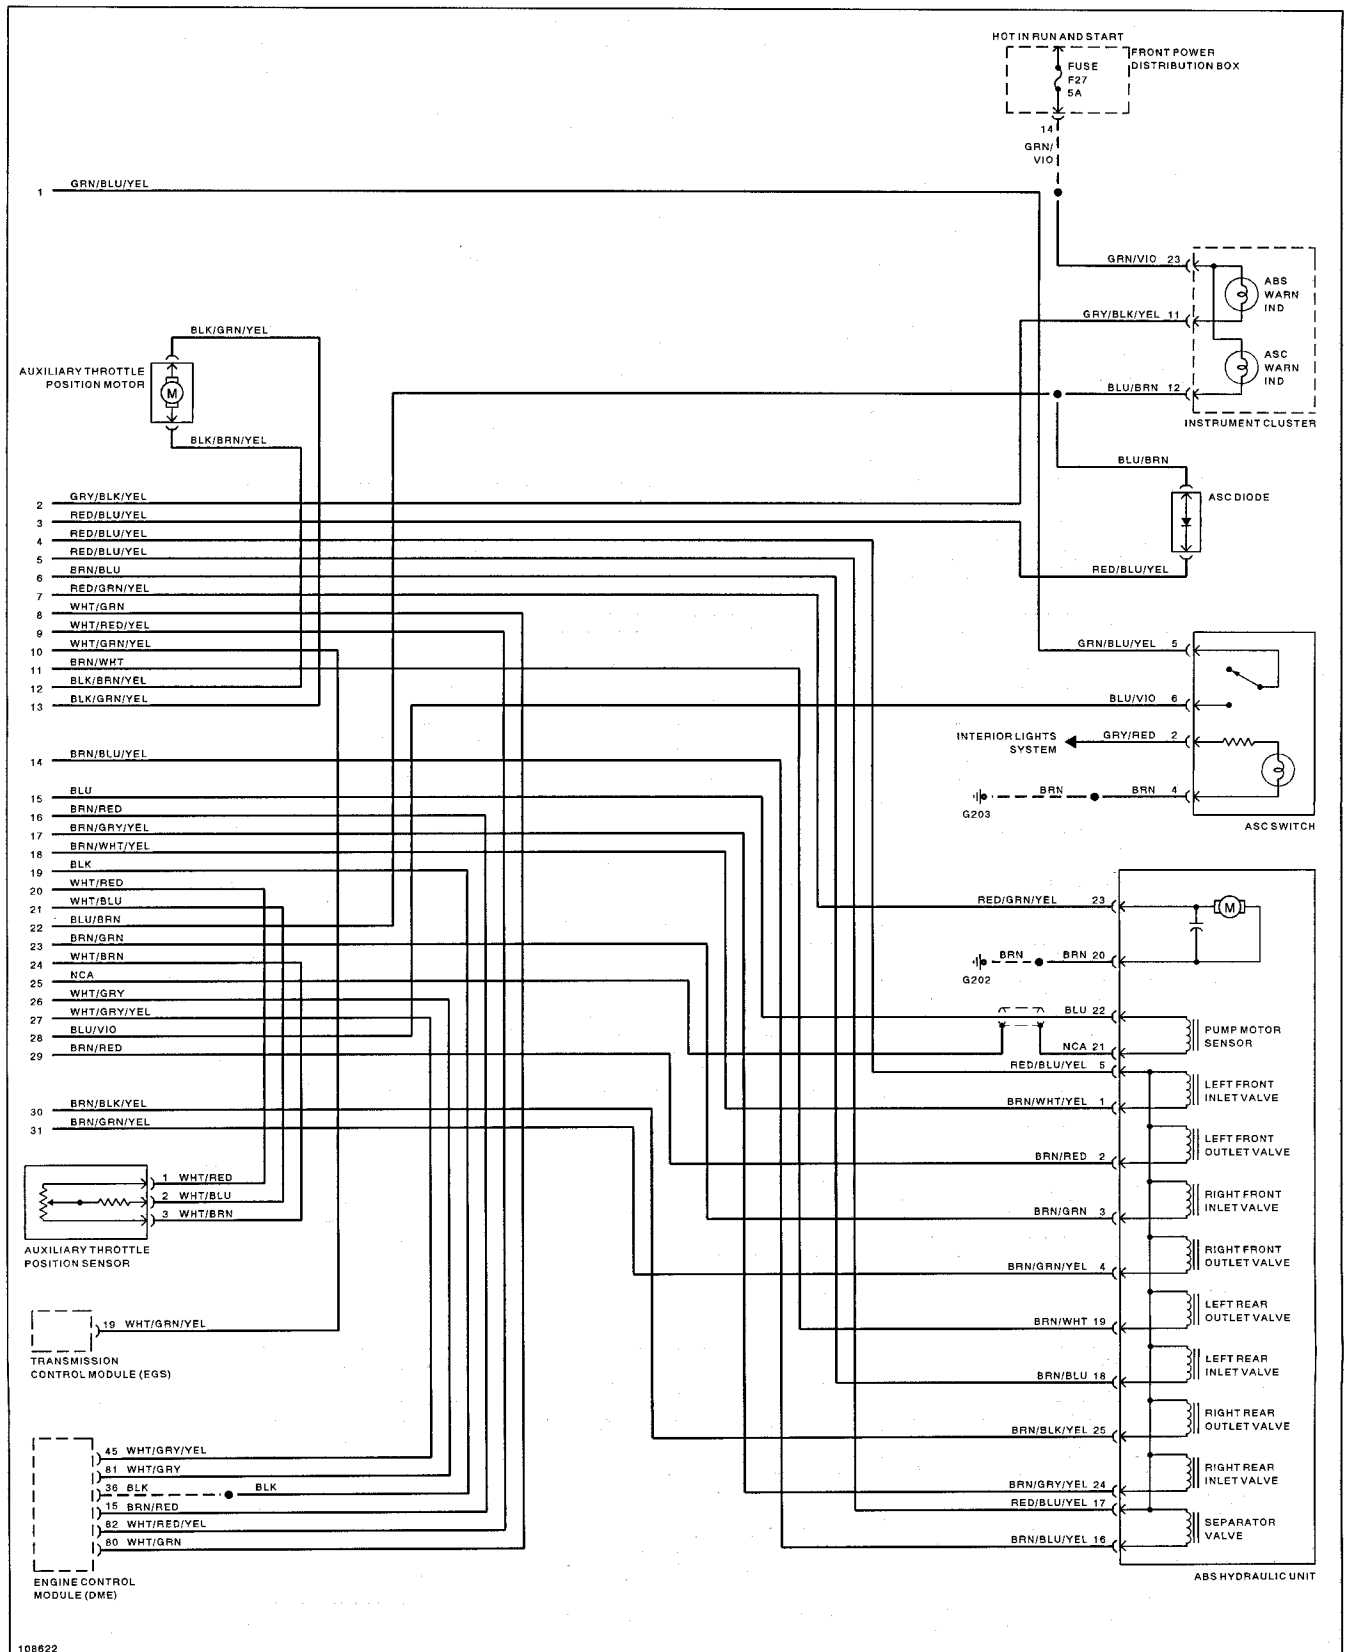


ABS

1995-96 318ti w/o Traction Control

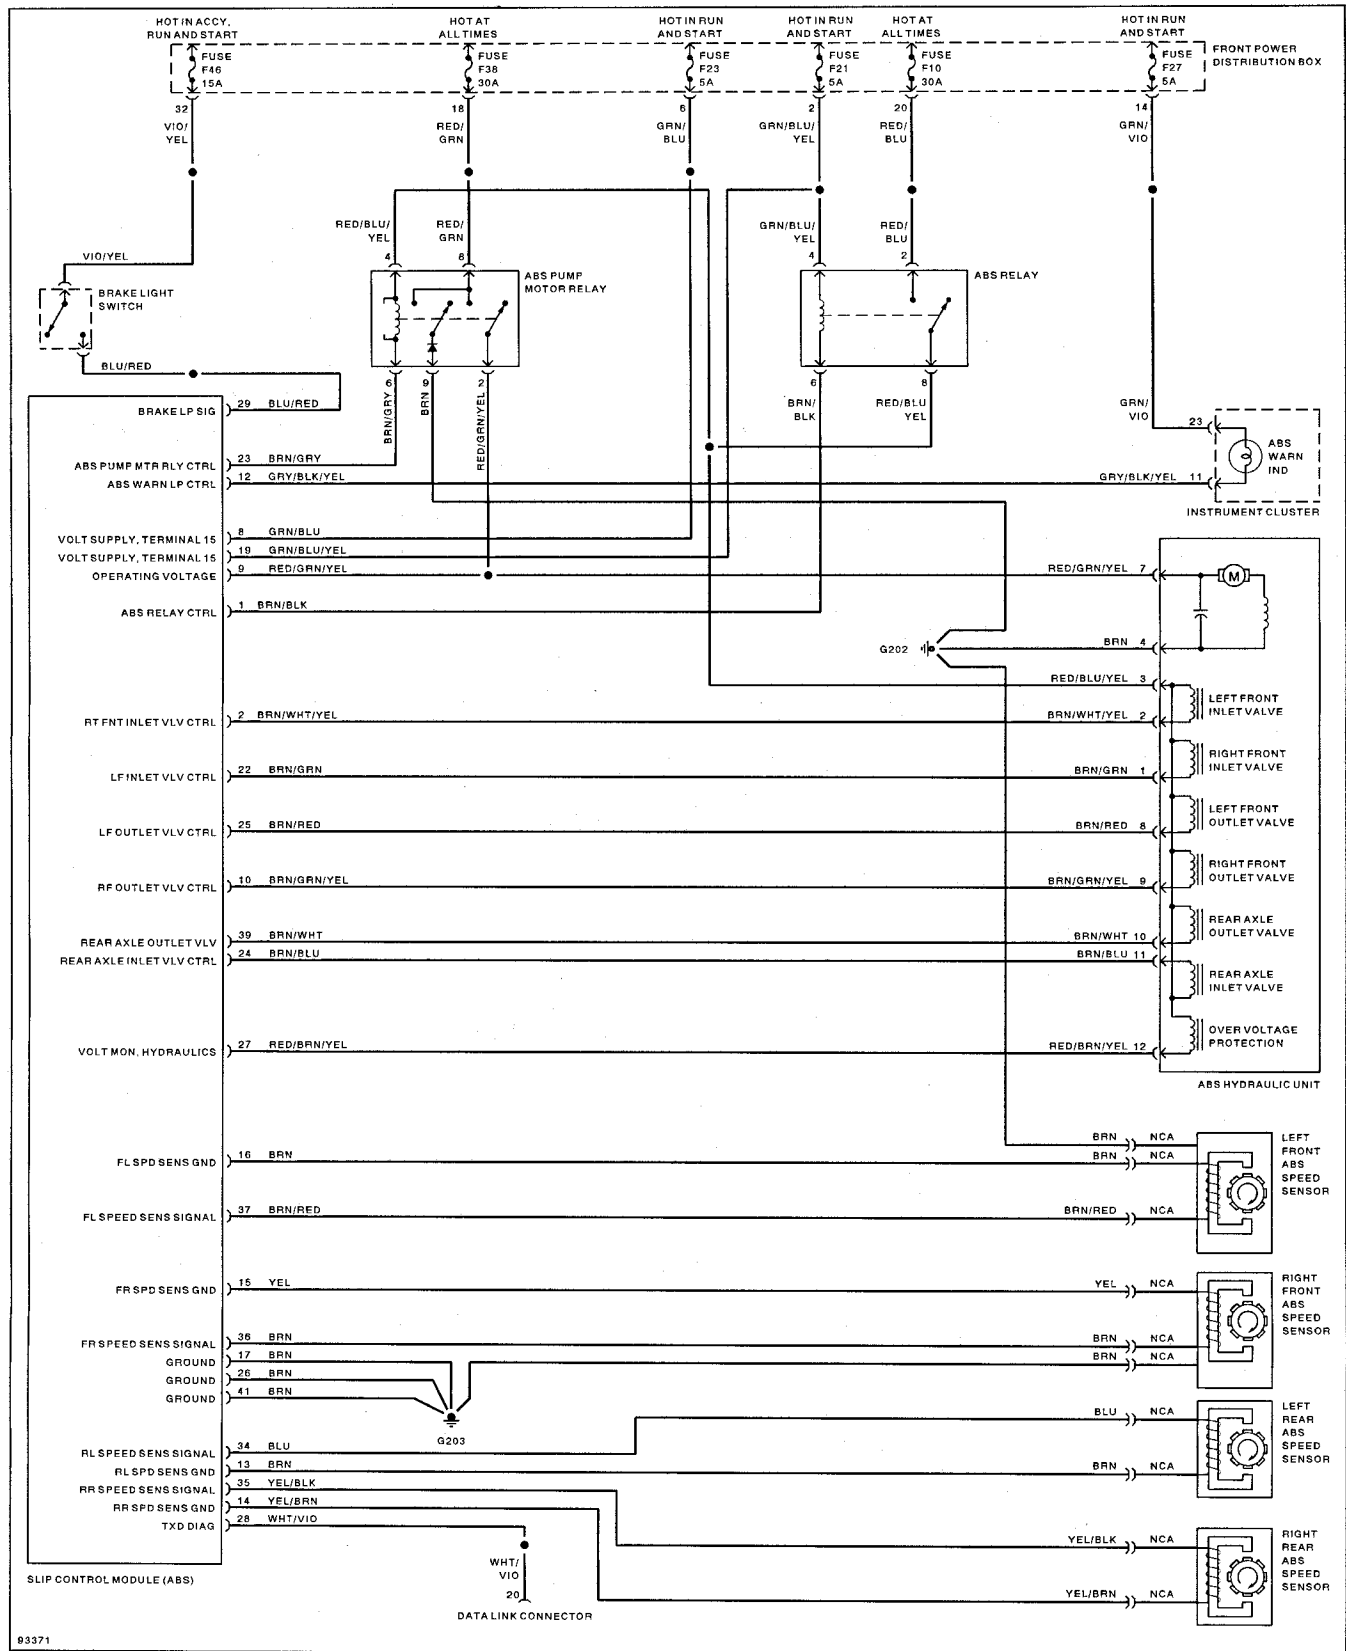


ABS/AST

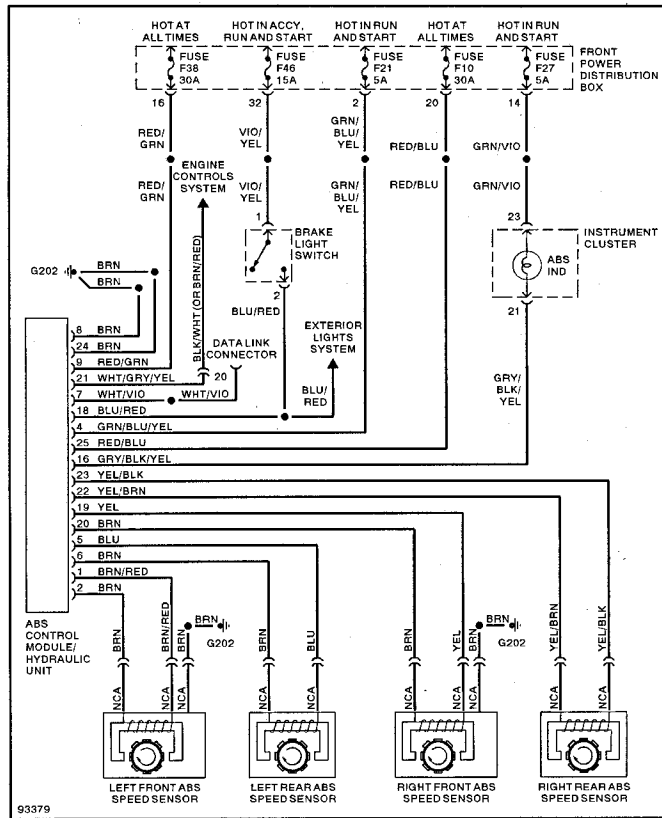


1997 w/
Traction Control

ABS/AST 1998 w/ Traction Control

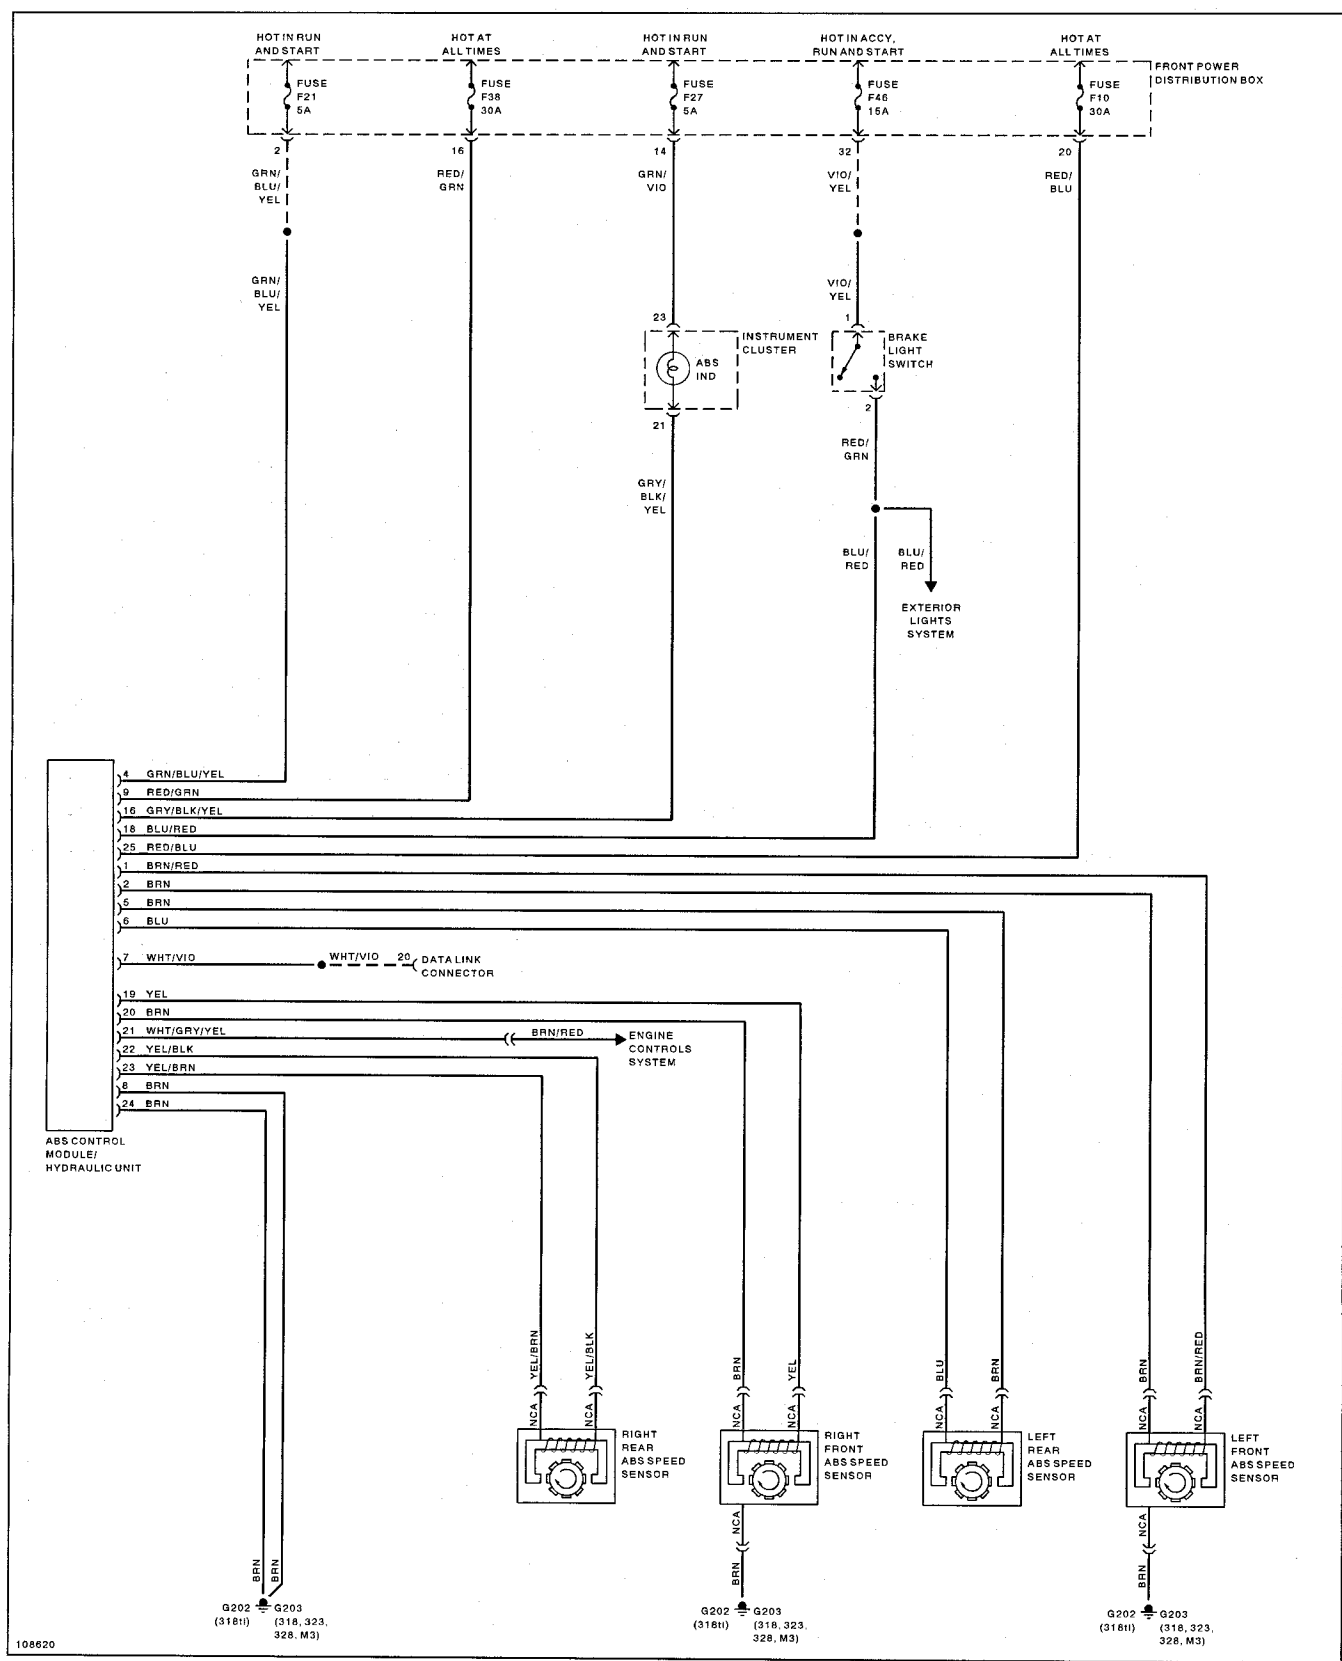


Air Conditioning & Heating

1992 (1 of 2)

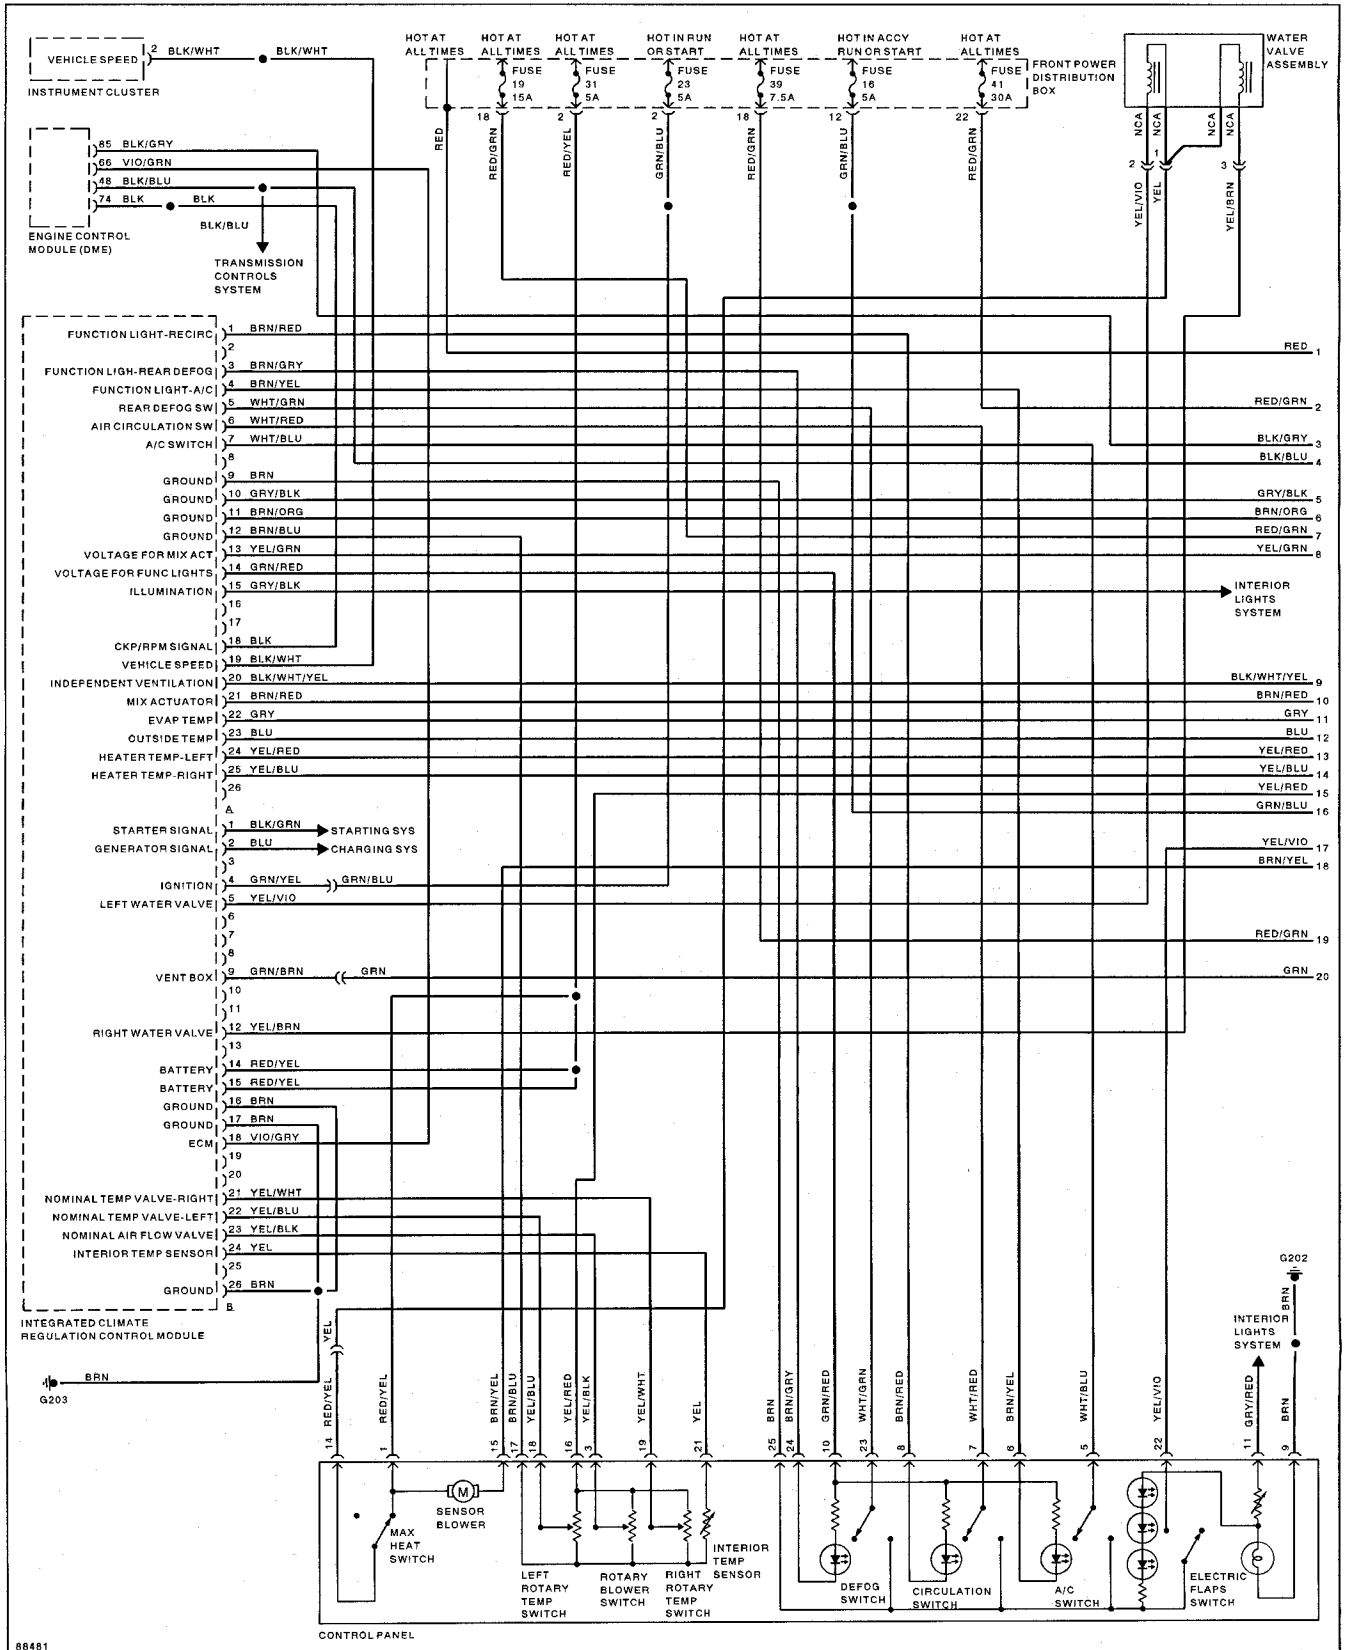

Air Conditioning & Heating

1992 (2 of 2)

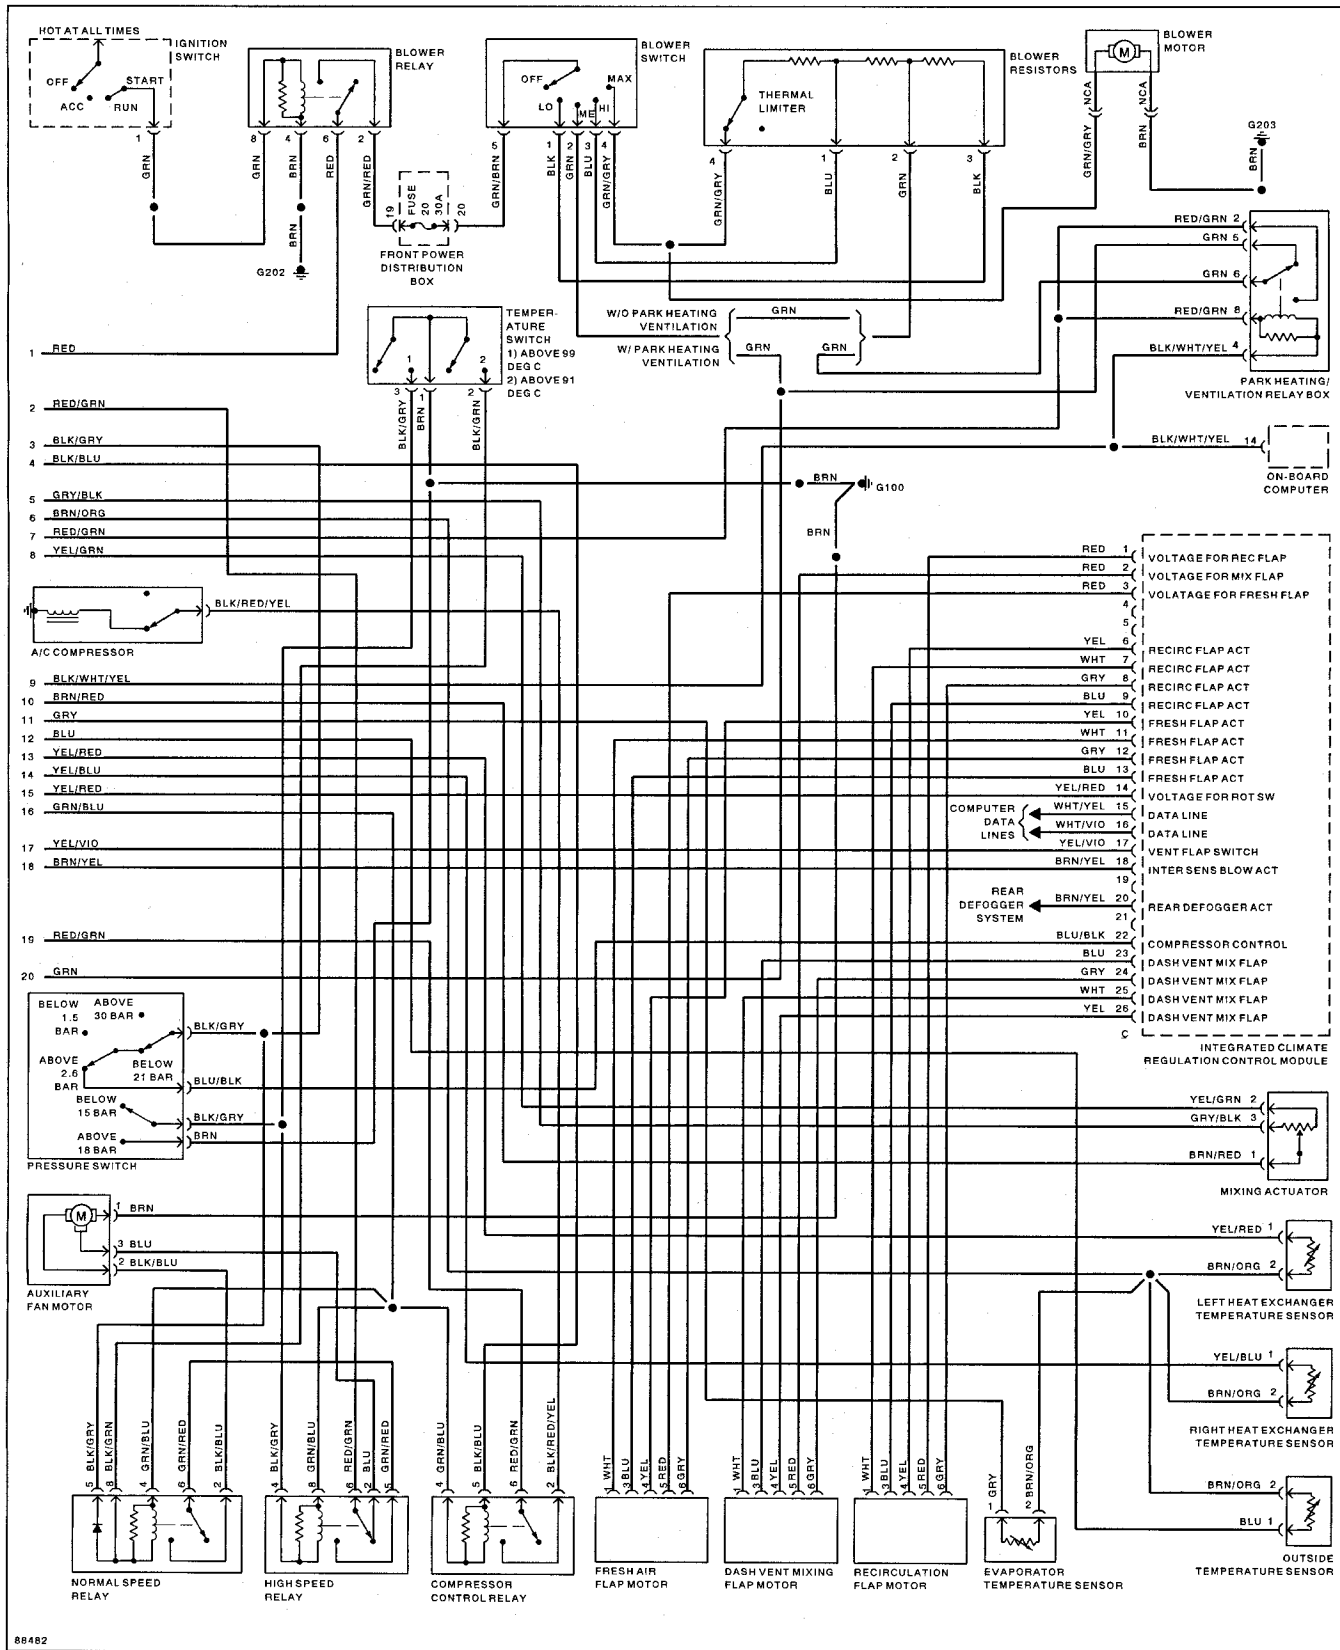


Air Conditioning & Heating

1993-95 Except 318ti (1 of 2)




Air Conditioning & Heating

1993-95 Except 318ti (2 of 2)

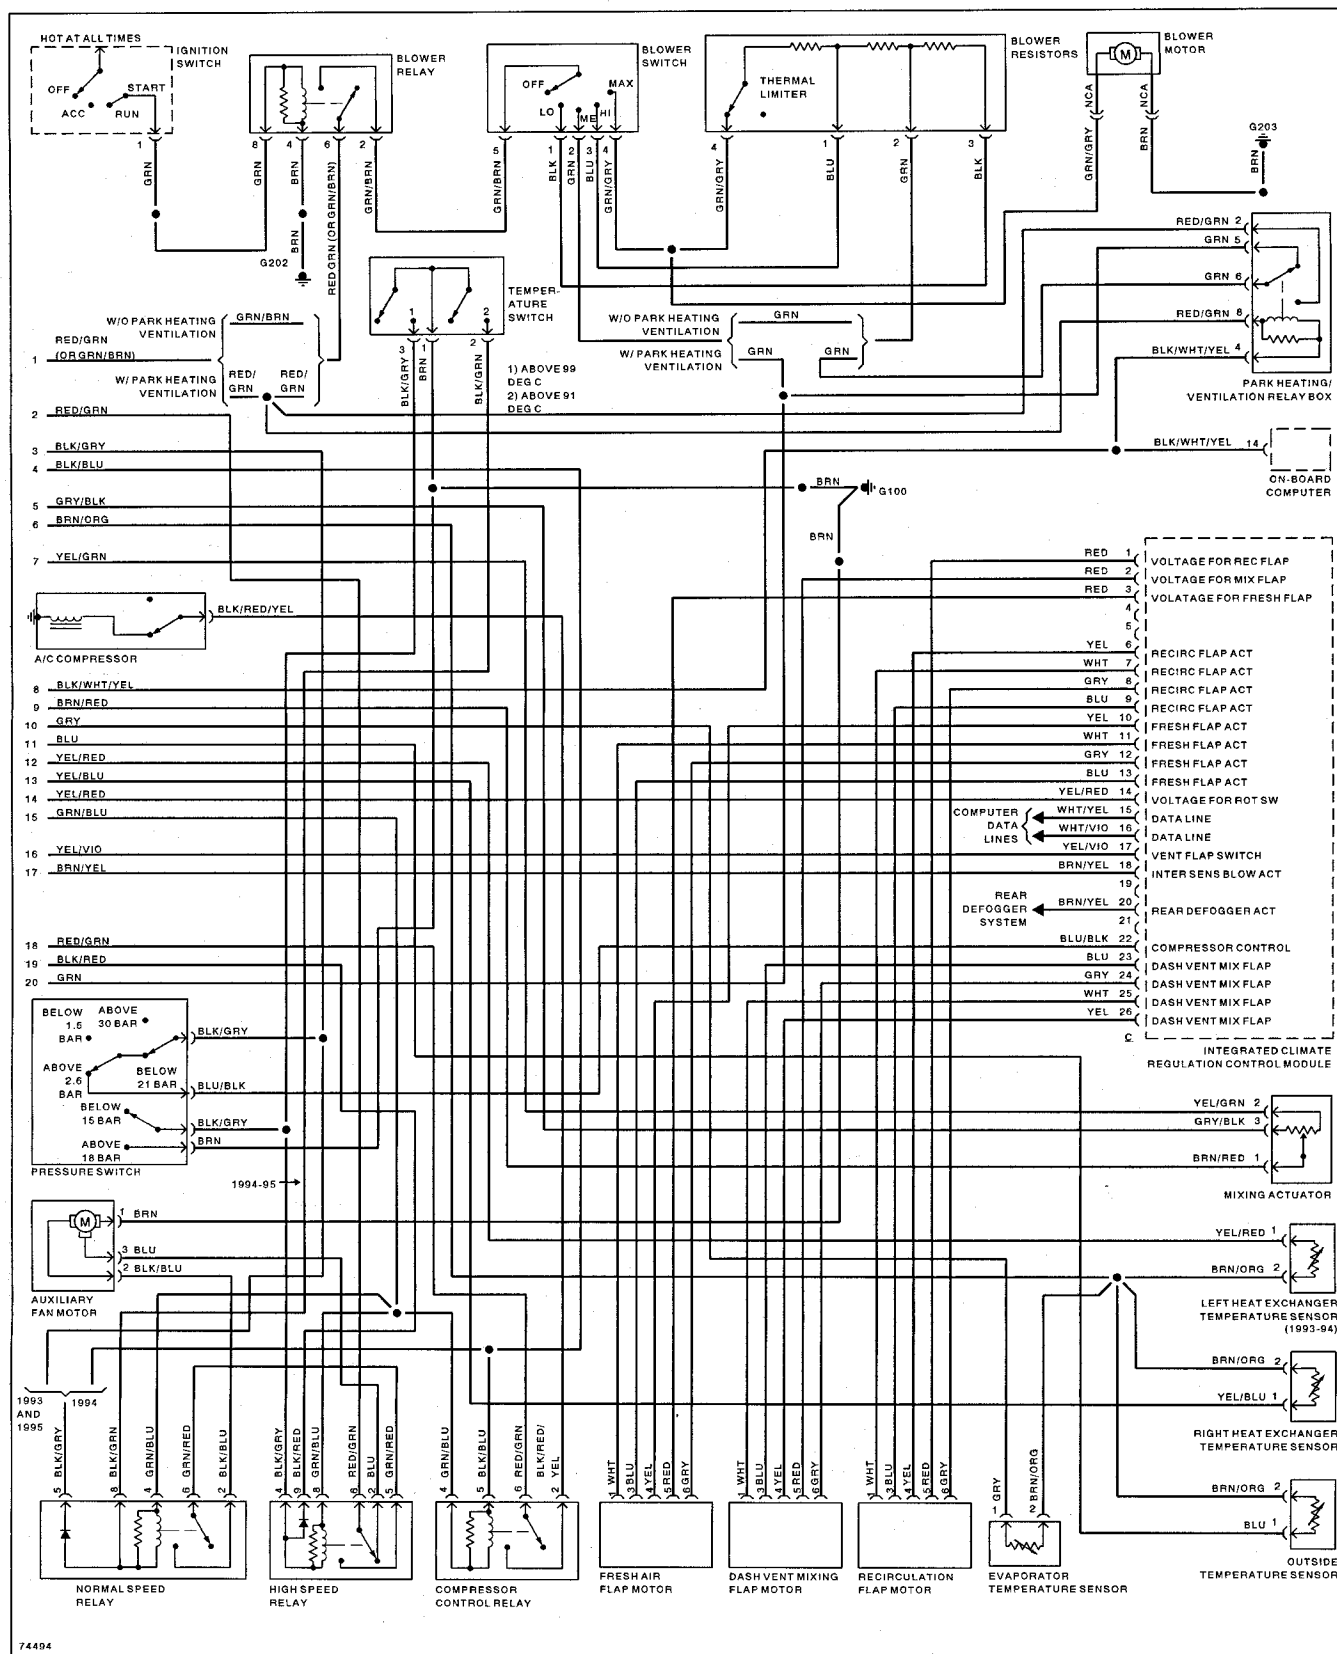


Air Conditioning & Heating

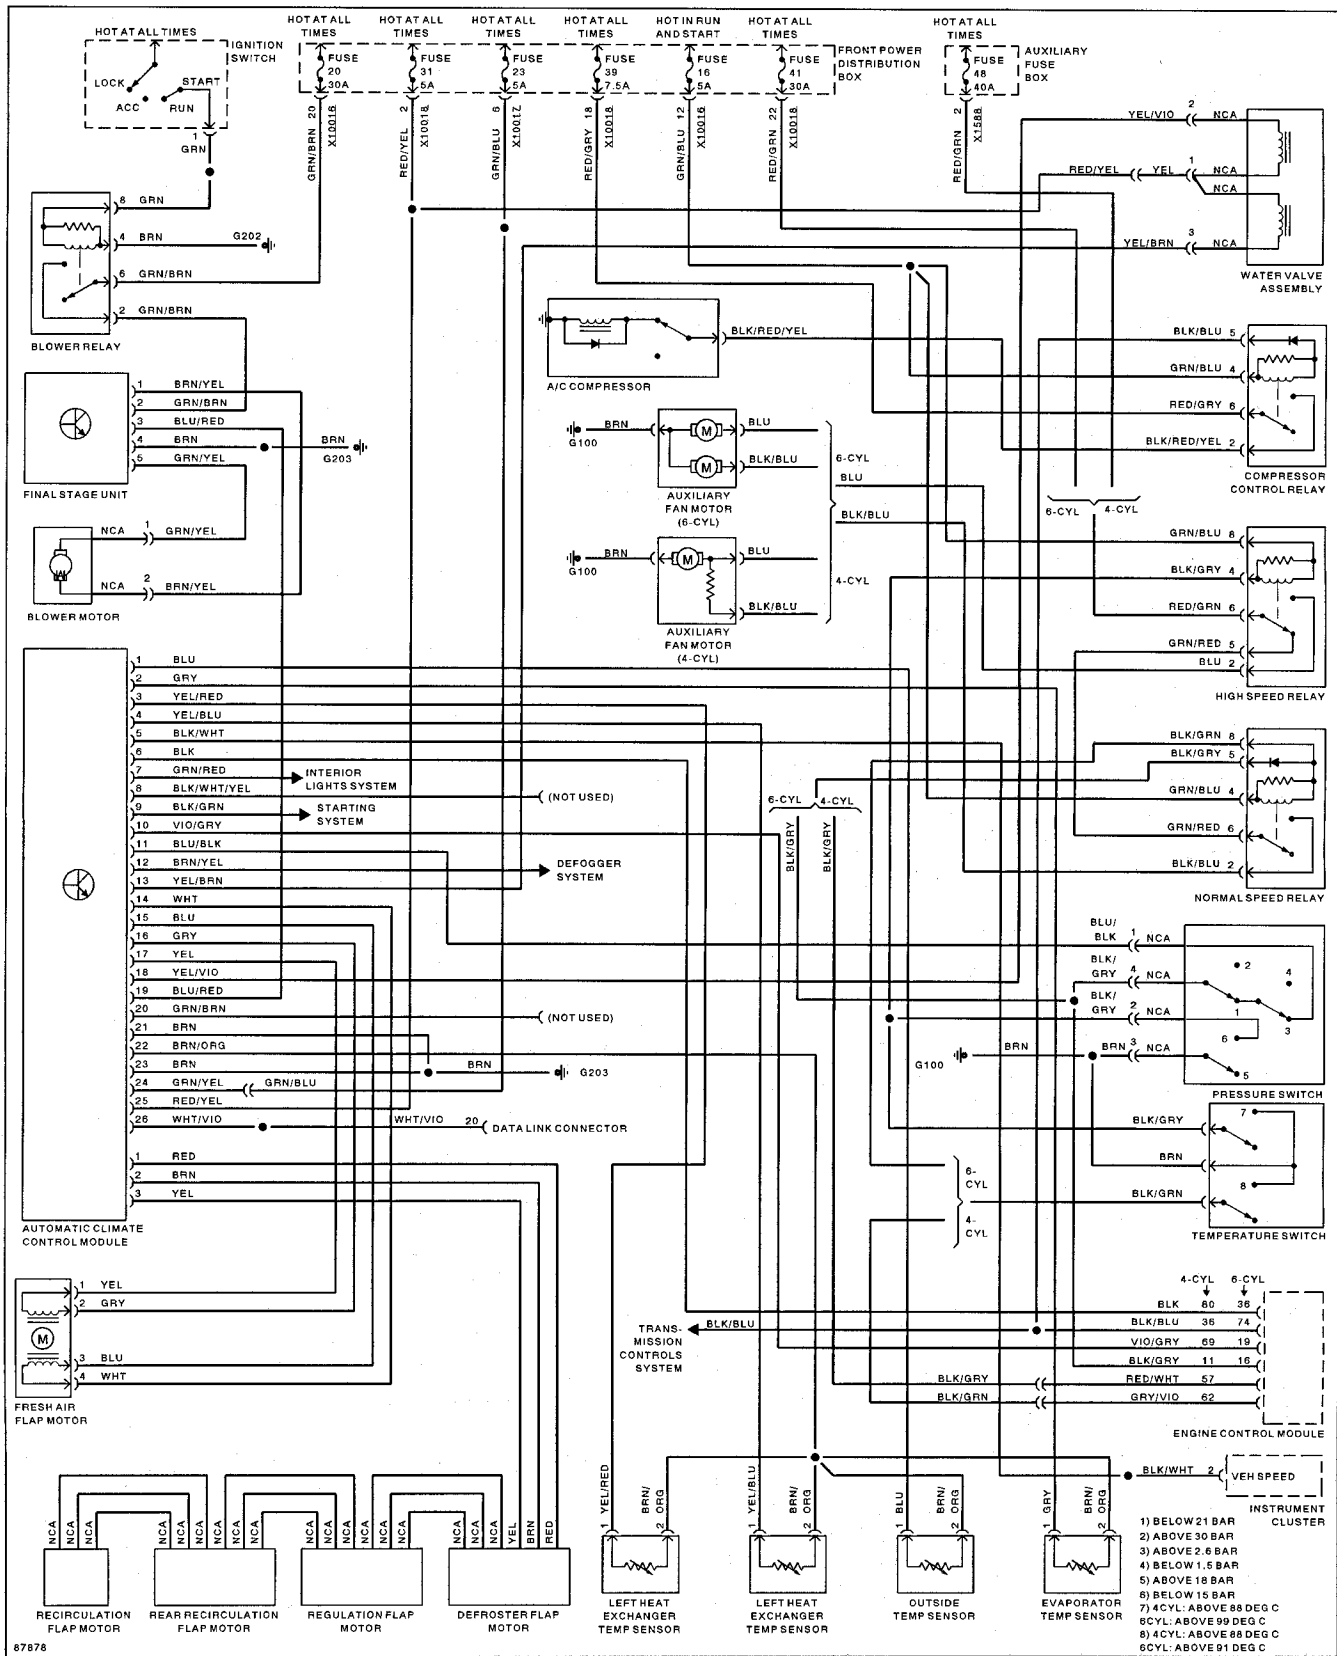


Air Conditioning & Heating

1998 Except 318ti

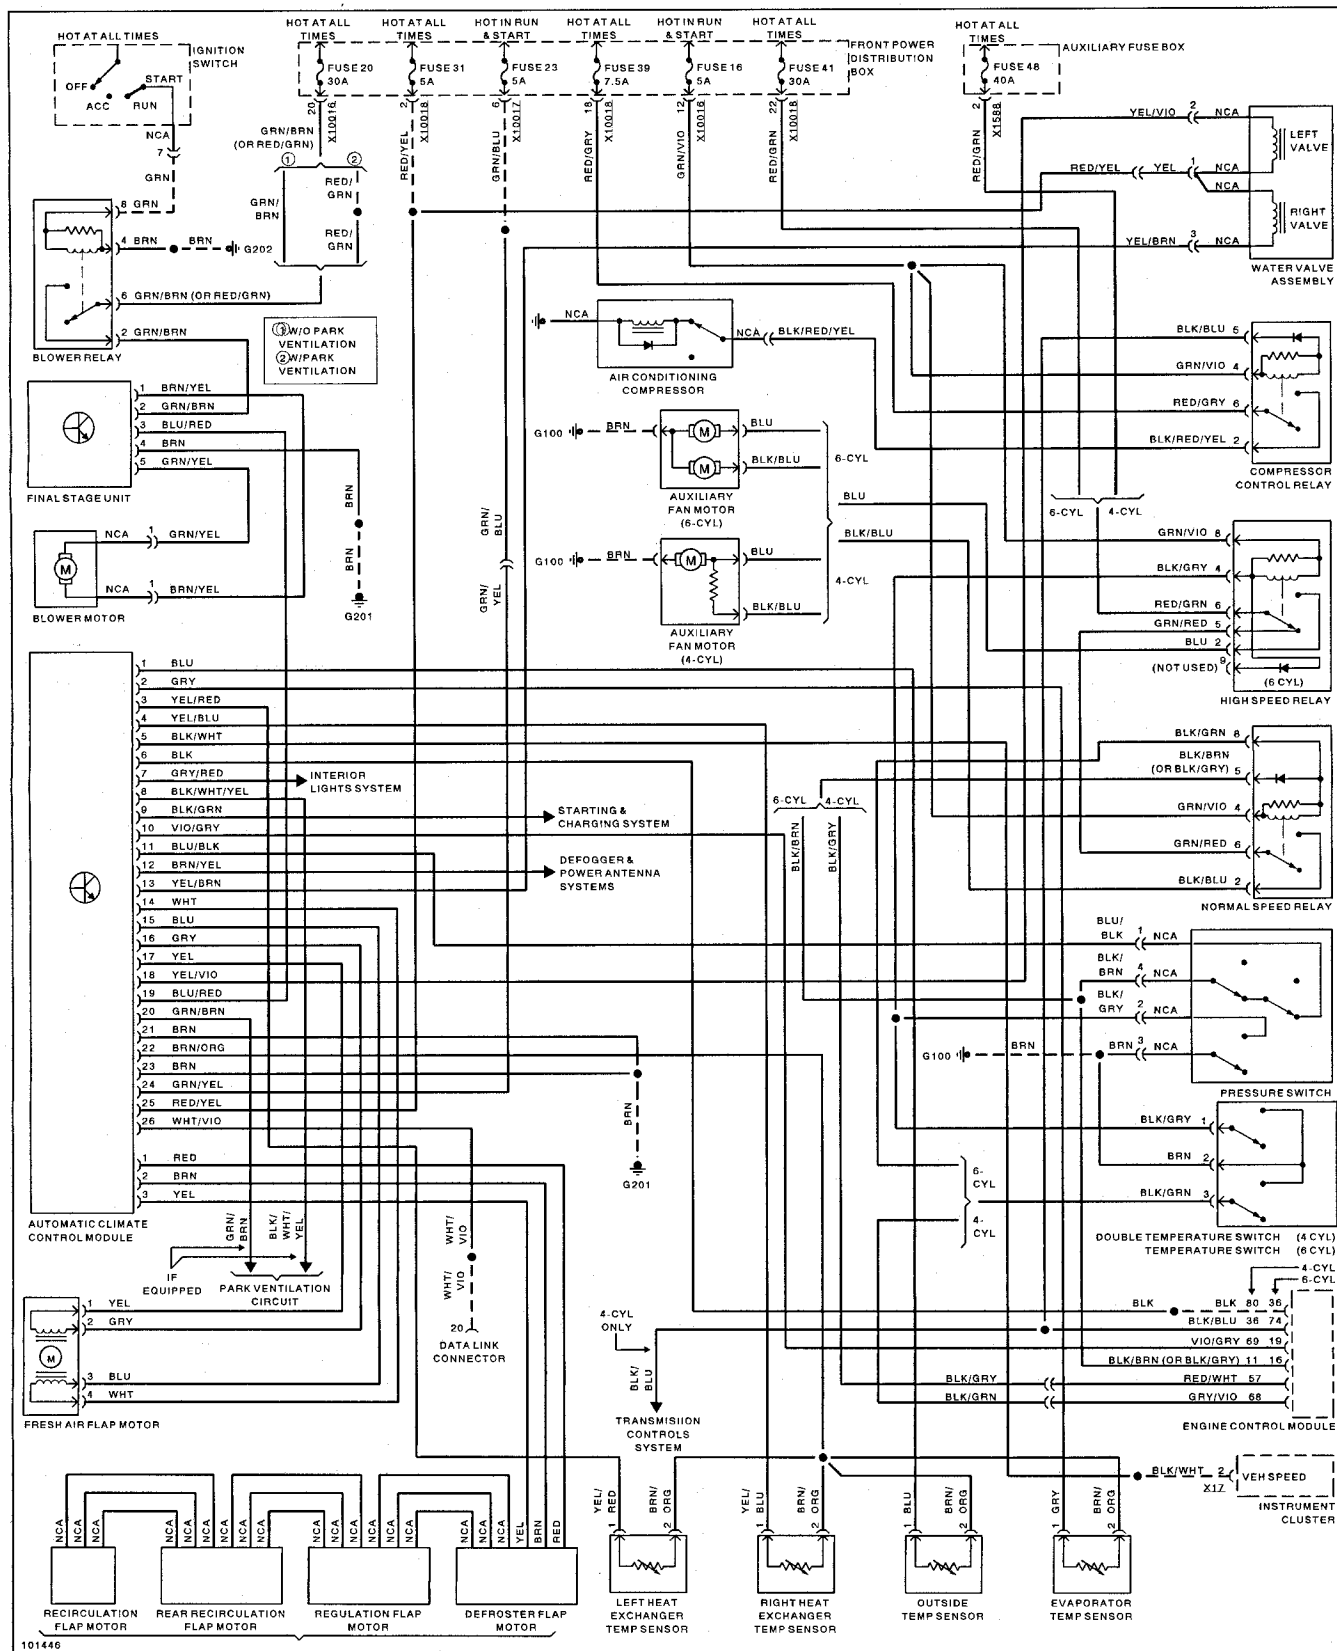


Air Conditioning & Heating

1995 318ti

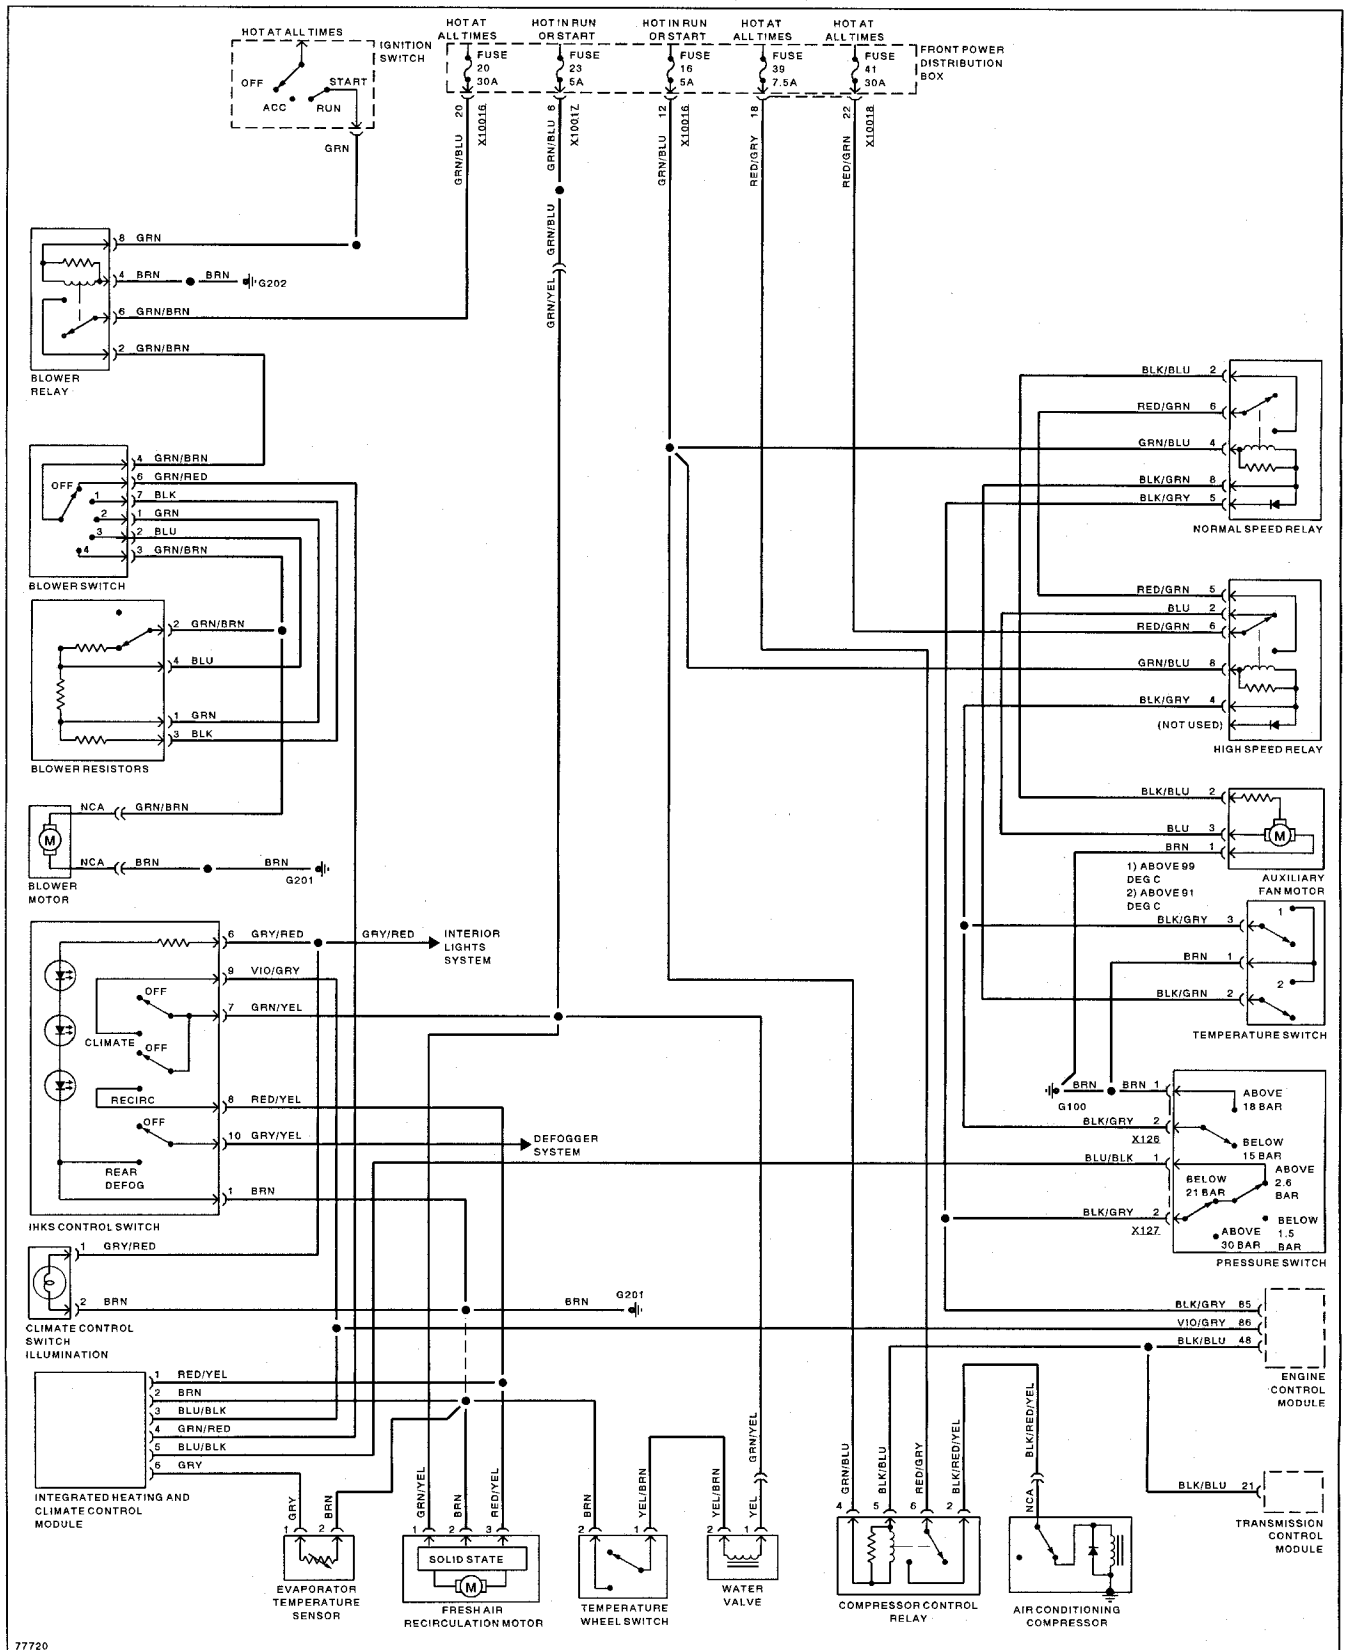


Air Conditioning & Heating

1996 318ti

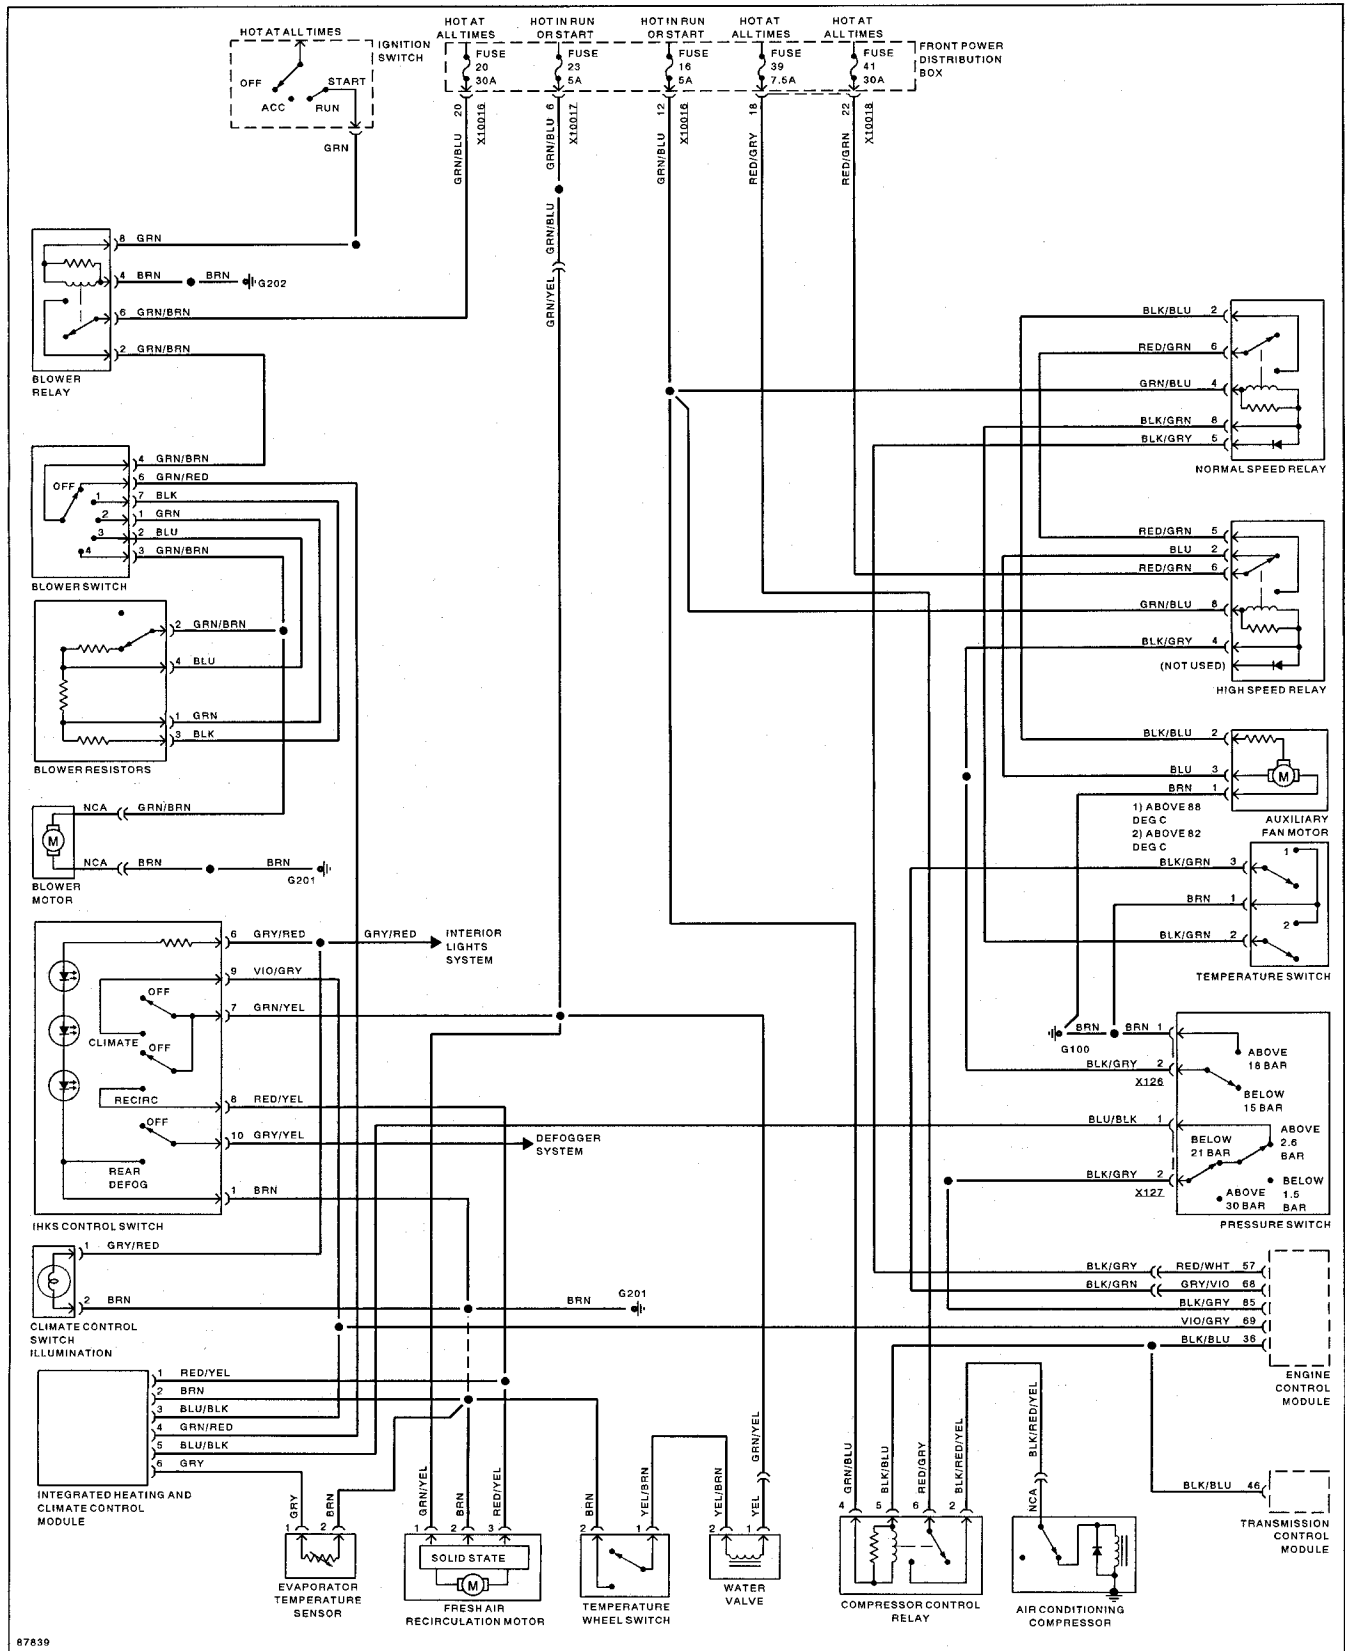


Air Conditioning & Heating

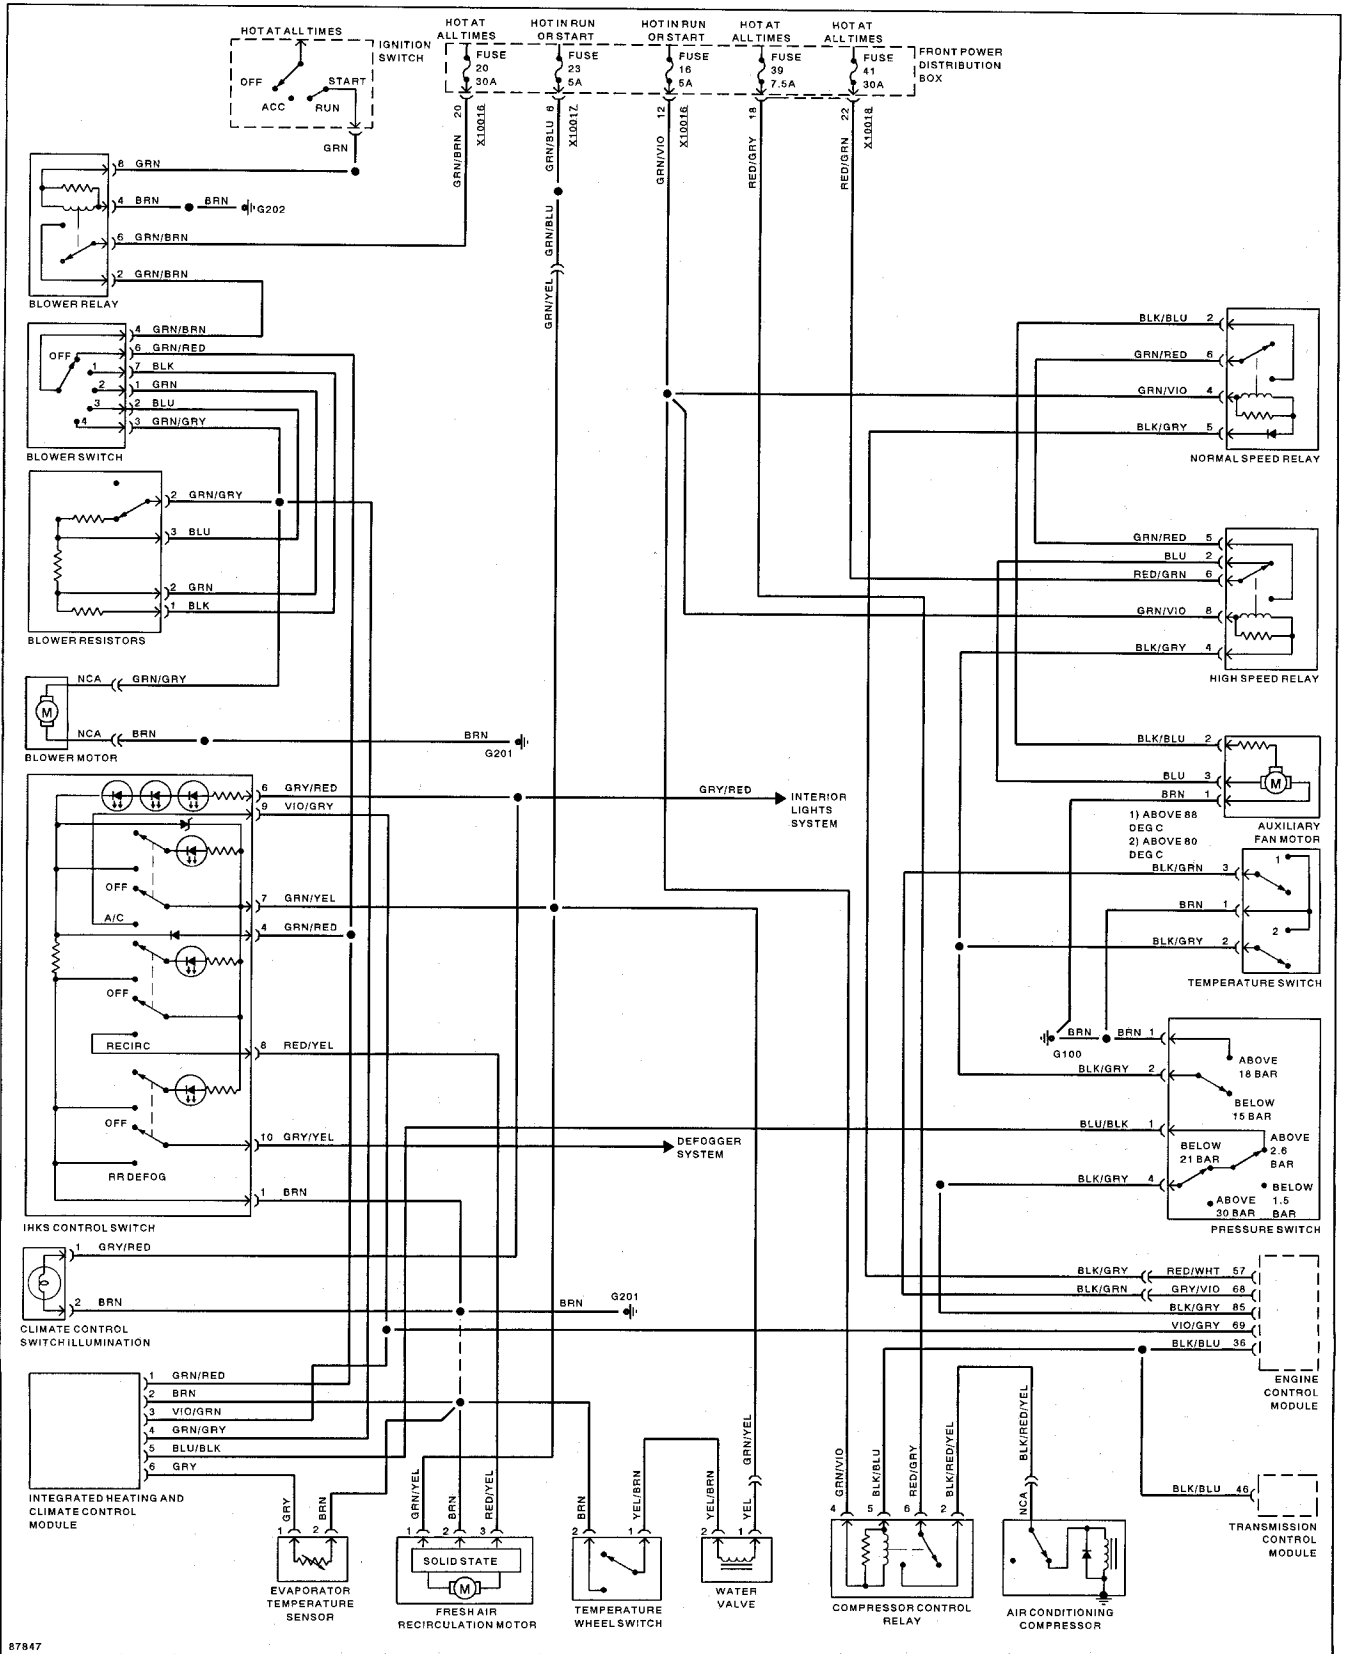


Air Conditioning & Heating

1998 318ti

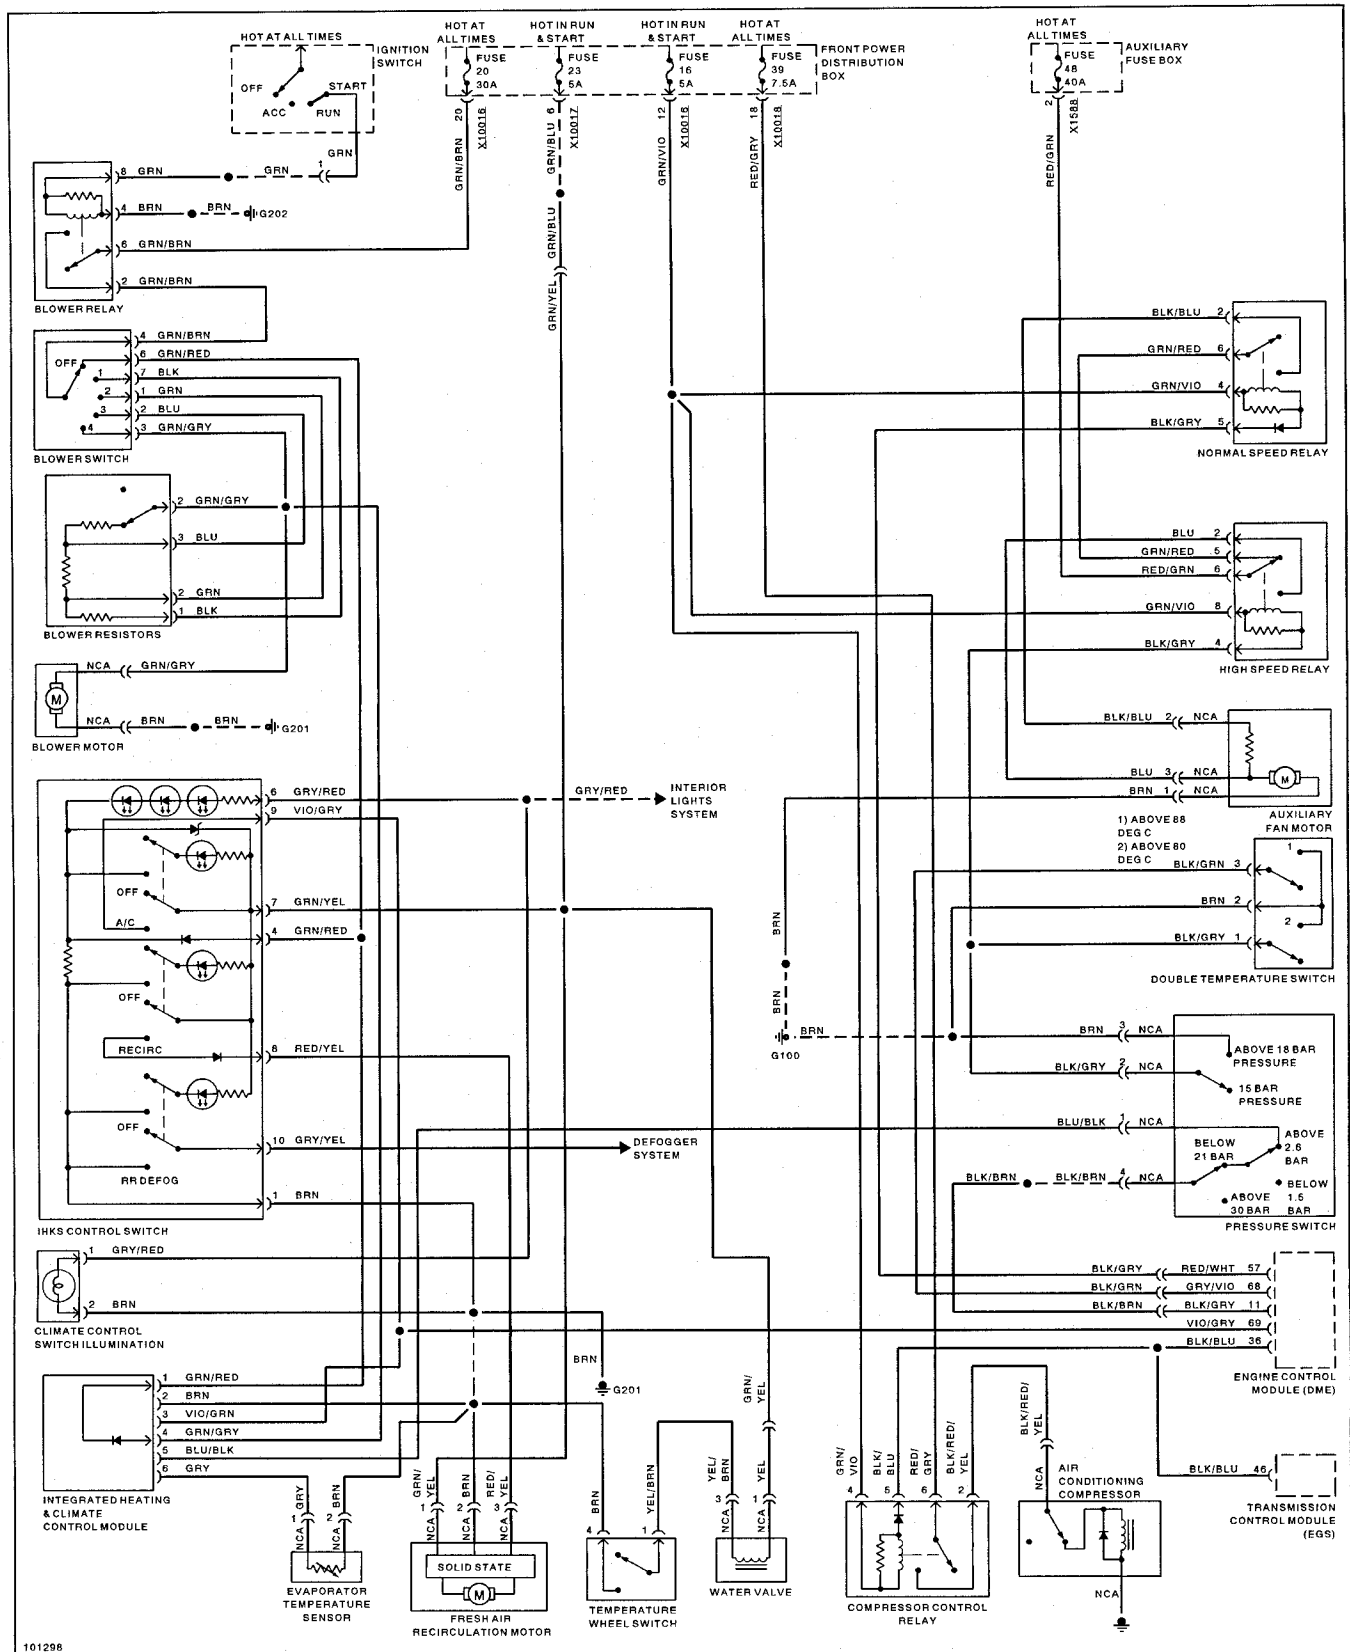


Park Ventilation


1998

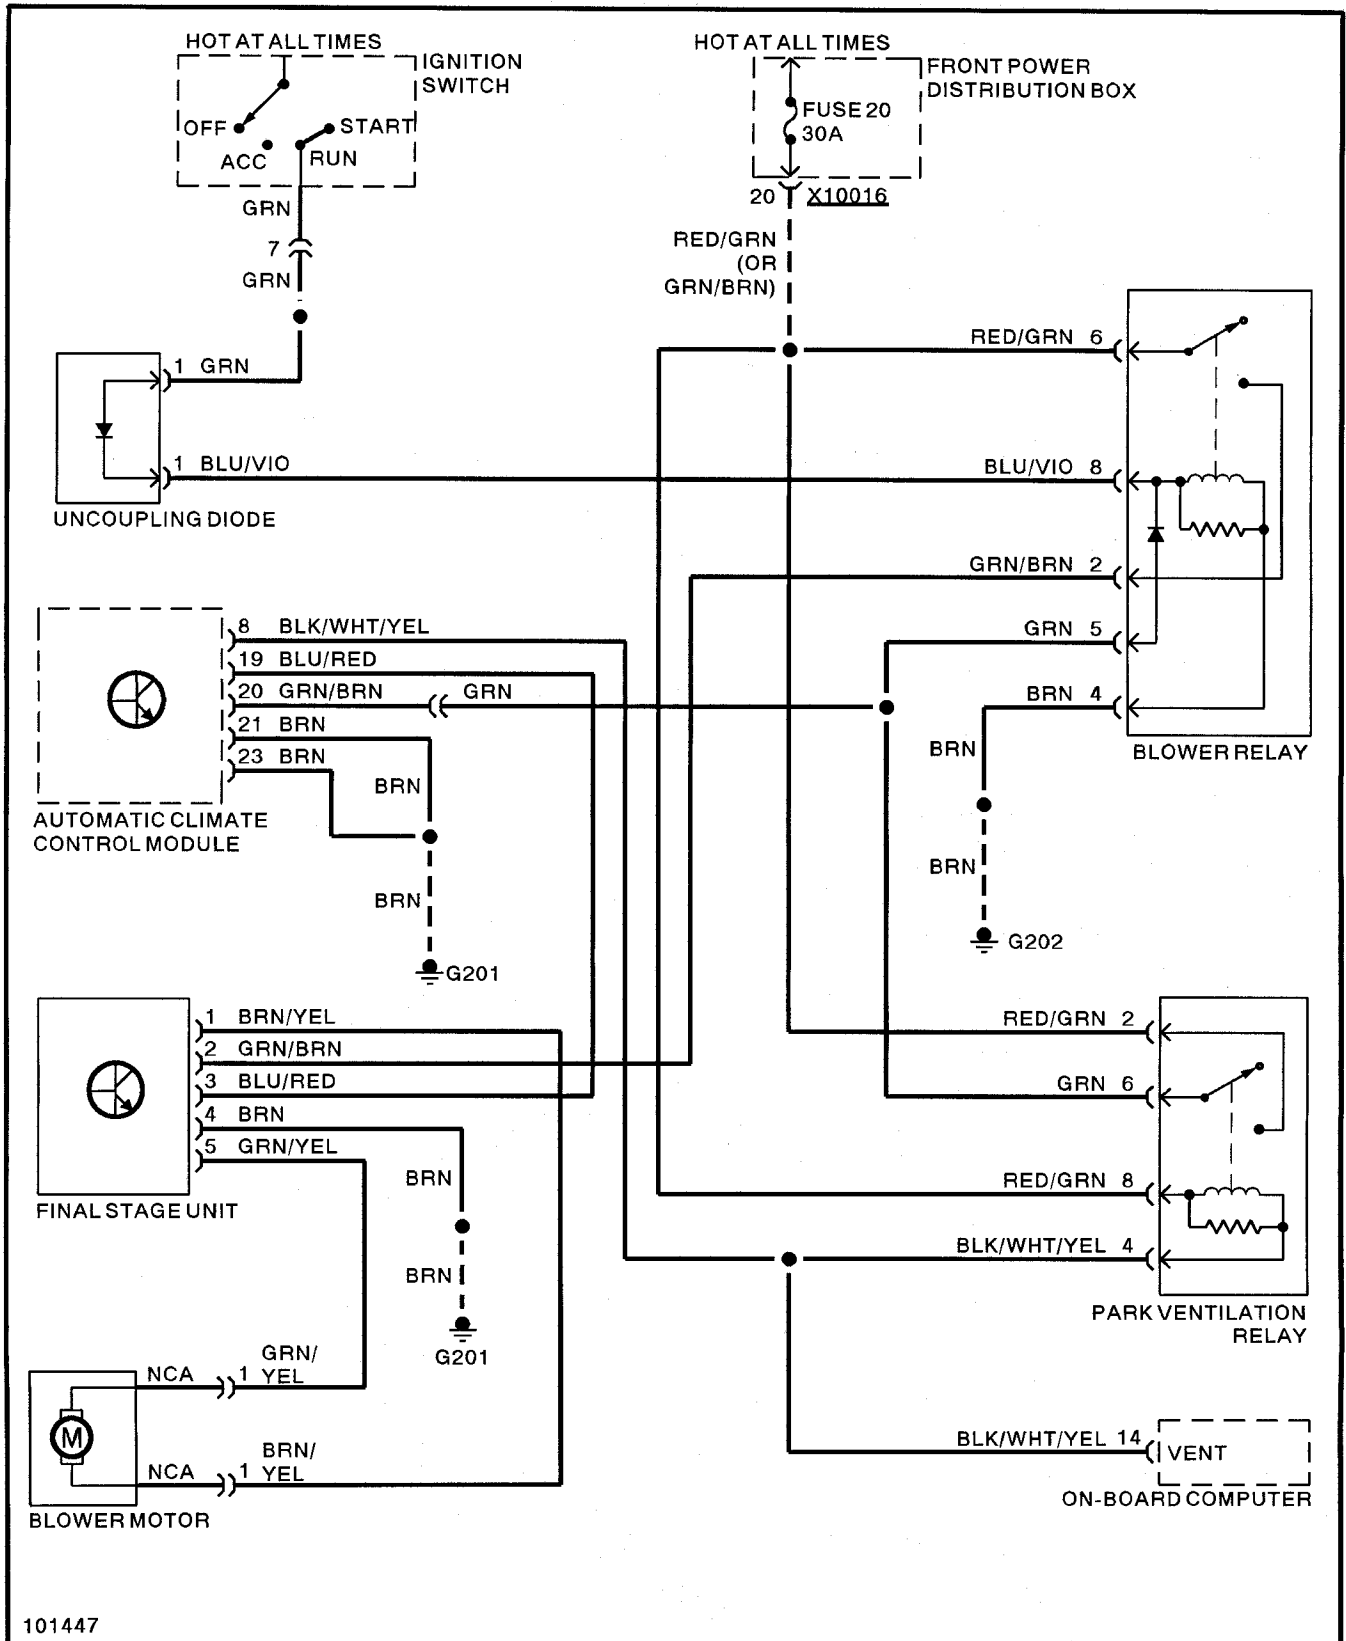

Airbag (Supplemental Restraint System)

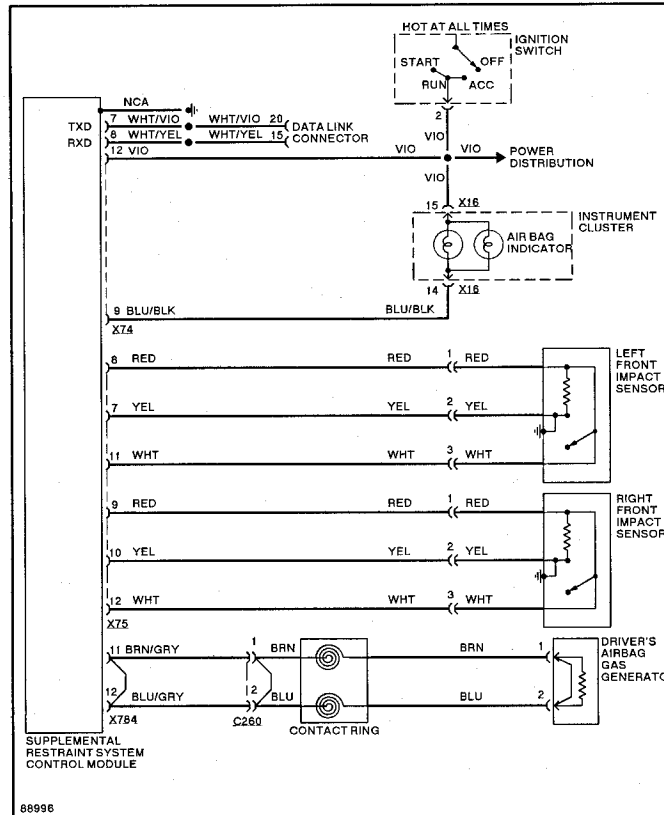


**1992-93
Early Production**

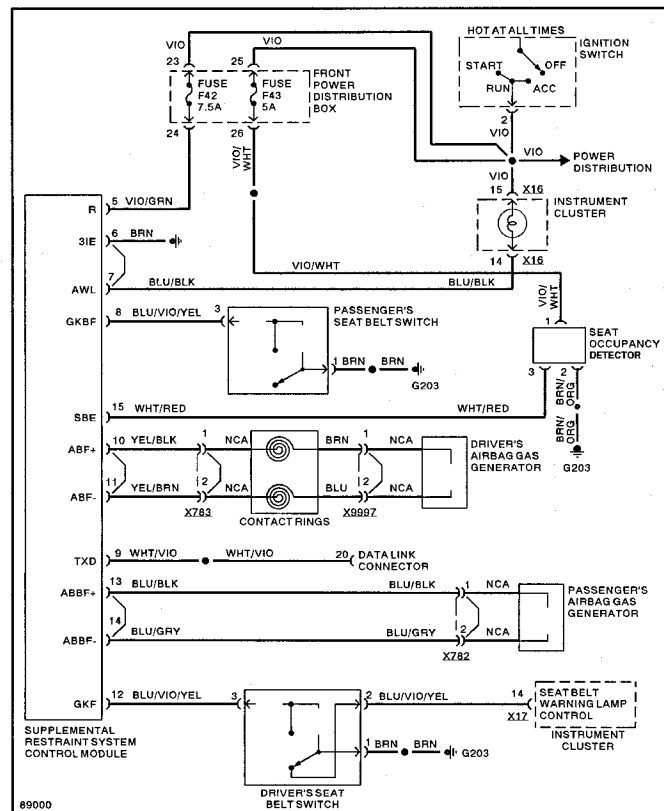


**1993
Late Production**

Airbag (Supplemental Restraint System)

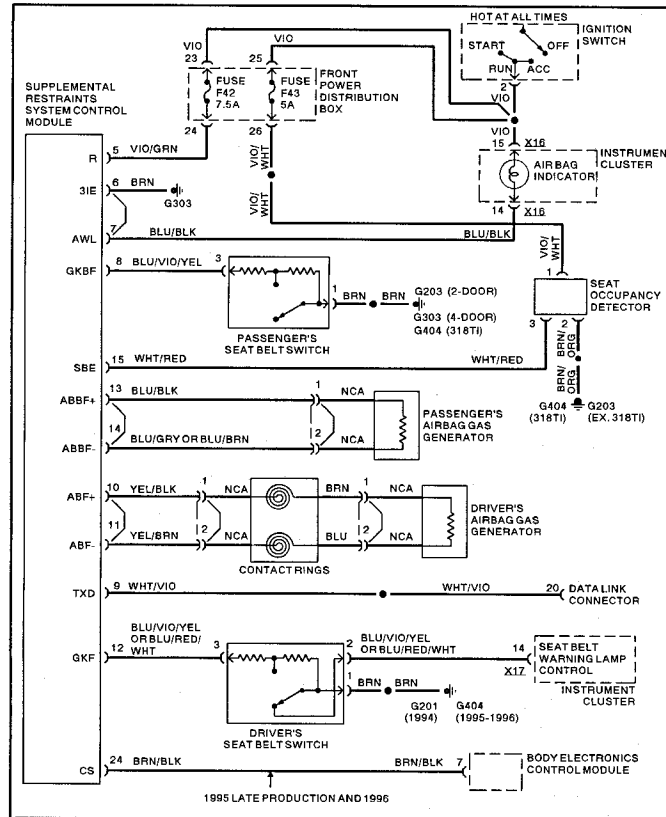


Airbag (Supplemental Restraint System) 1997

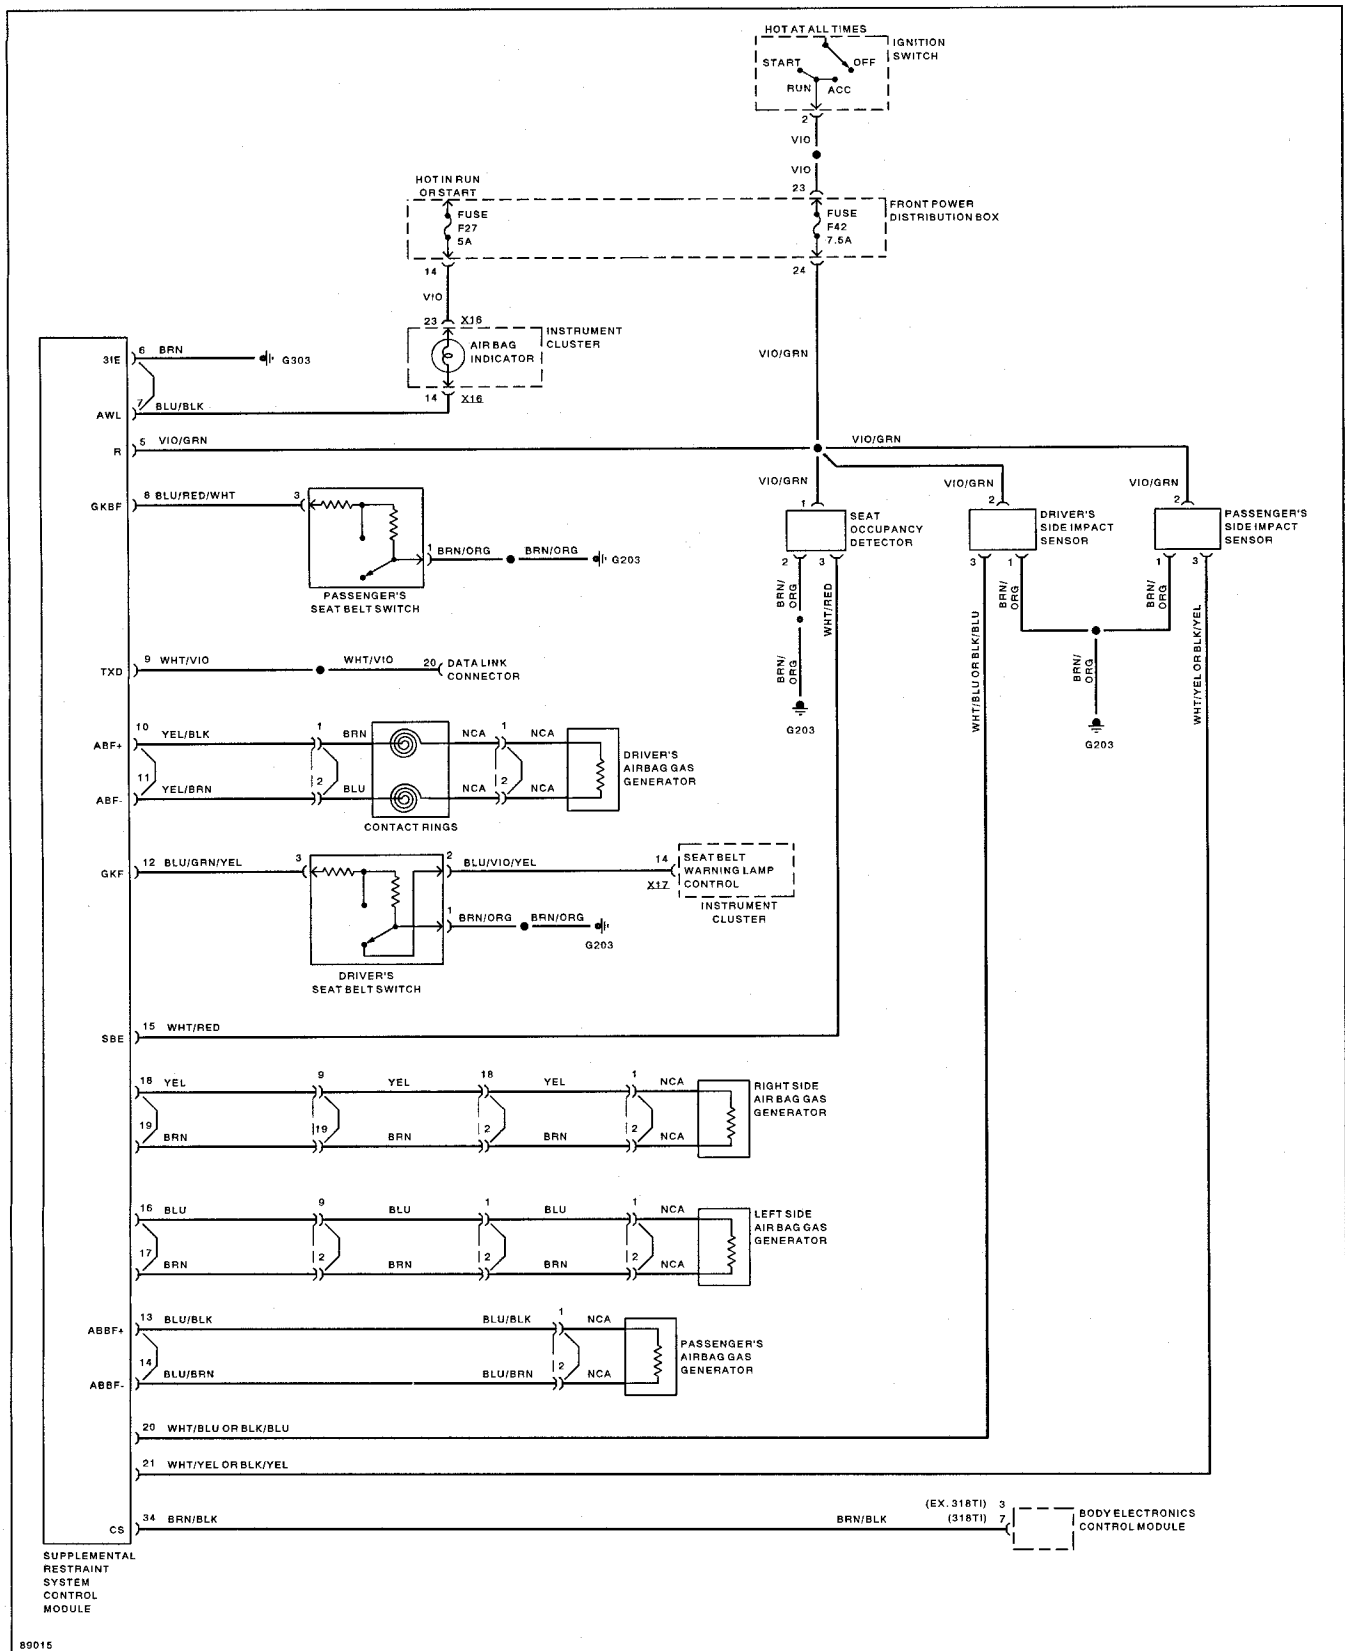


Airbag (Supplemental Restraint System)

1998

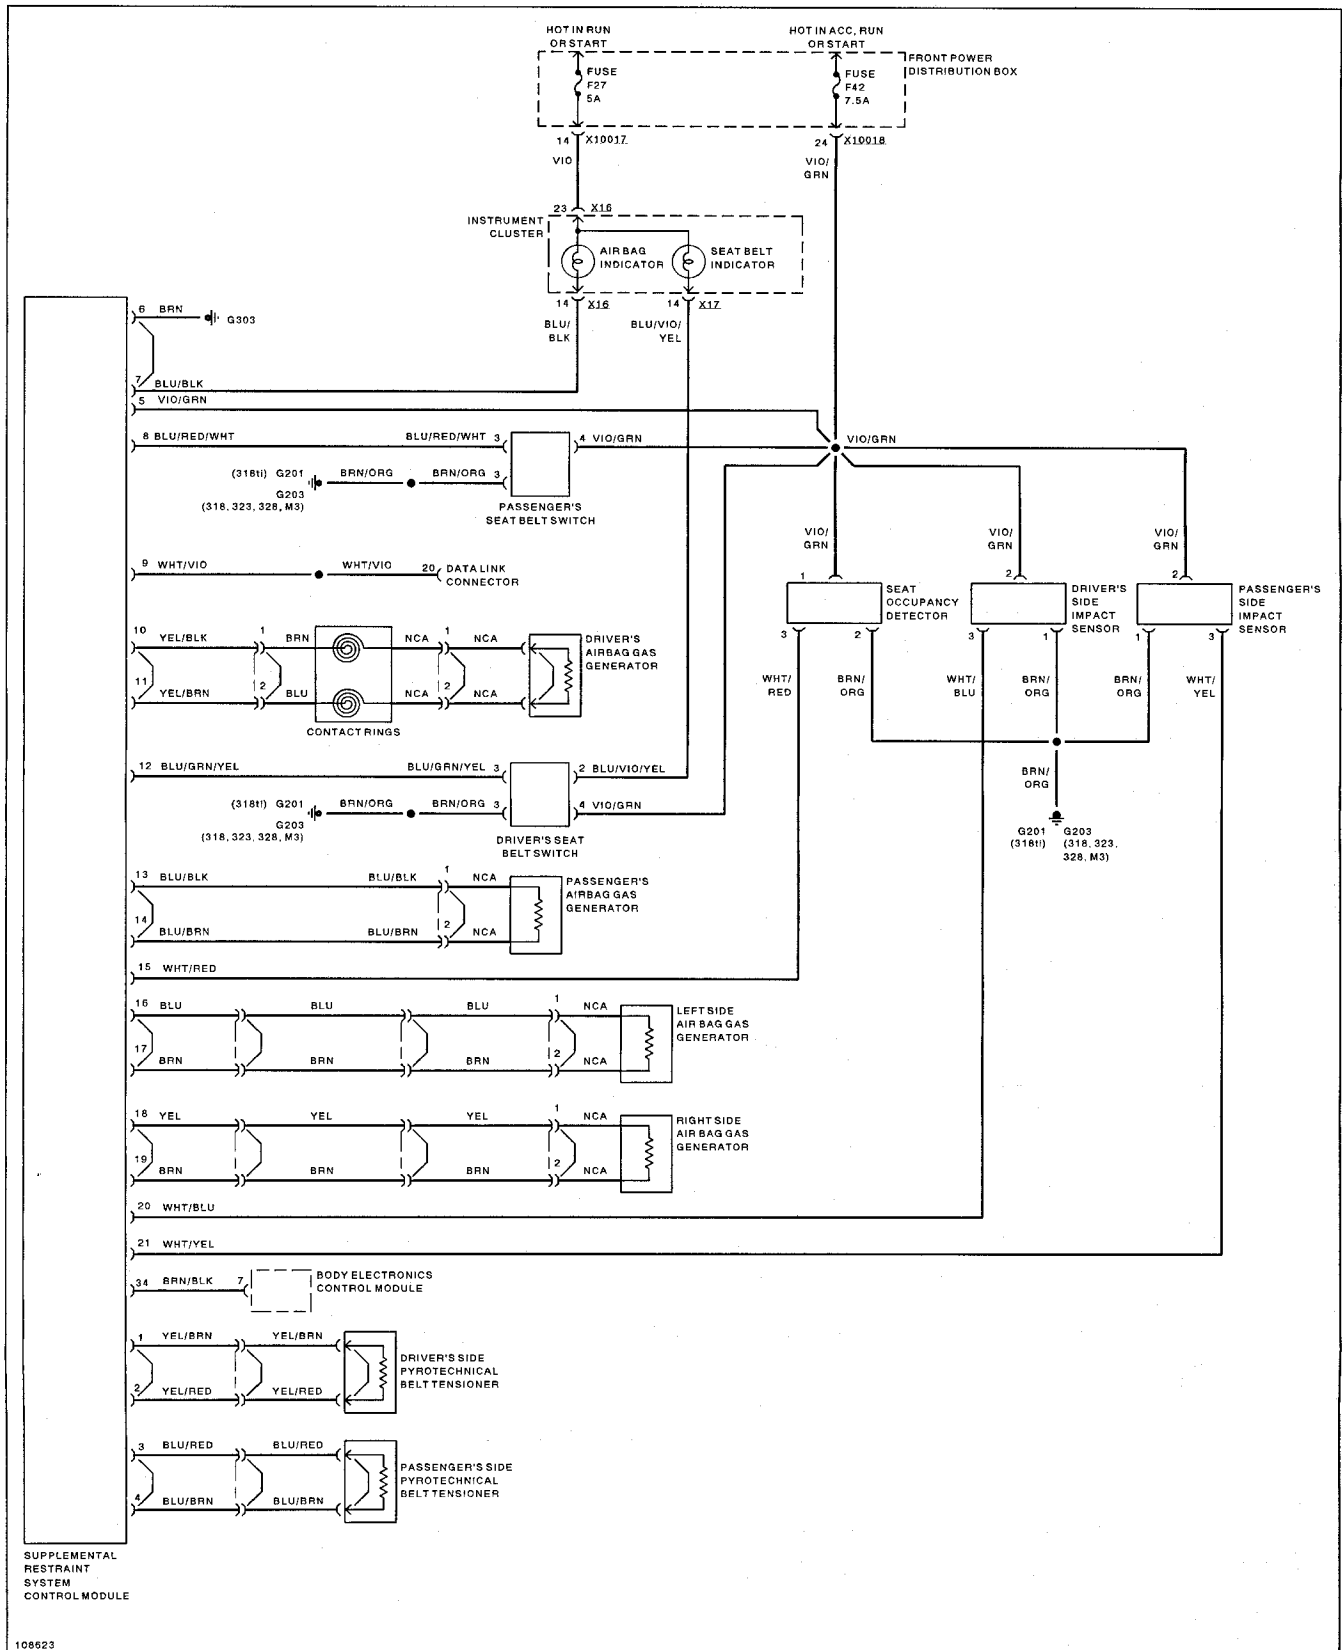


Anti-Theft **1992-93 318i & 325i** **Alpine System**

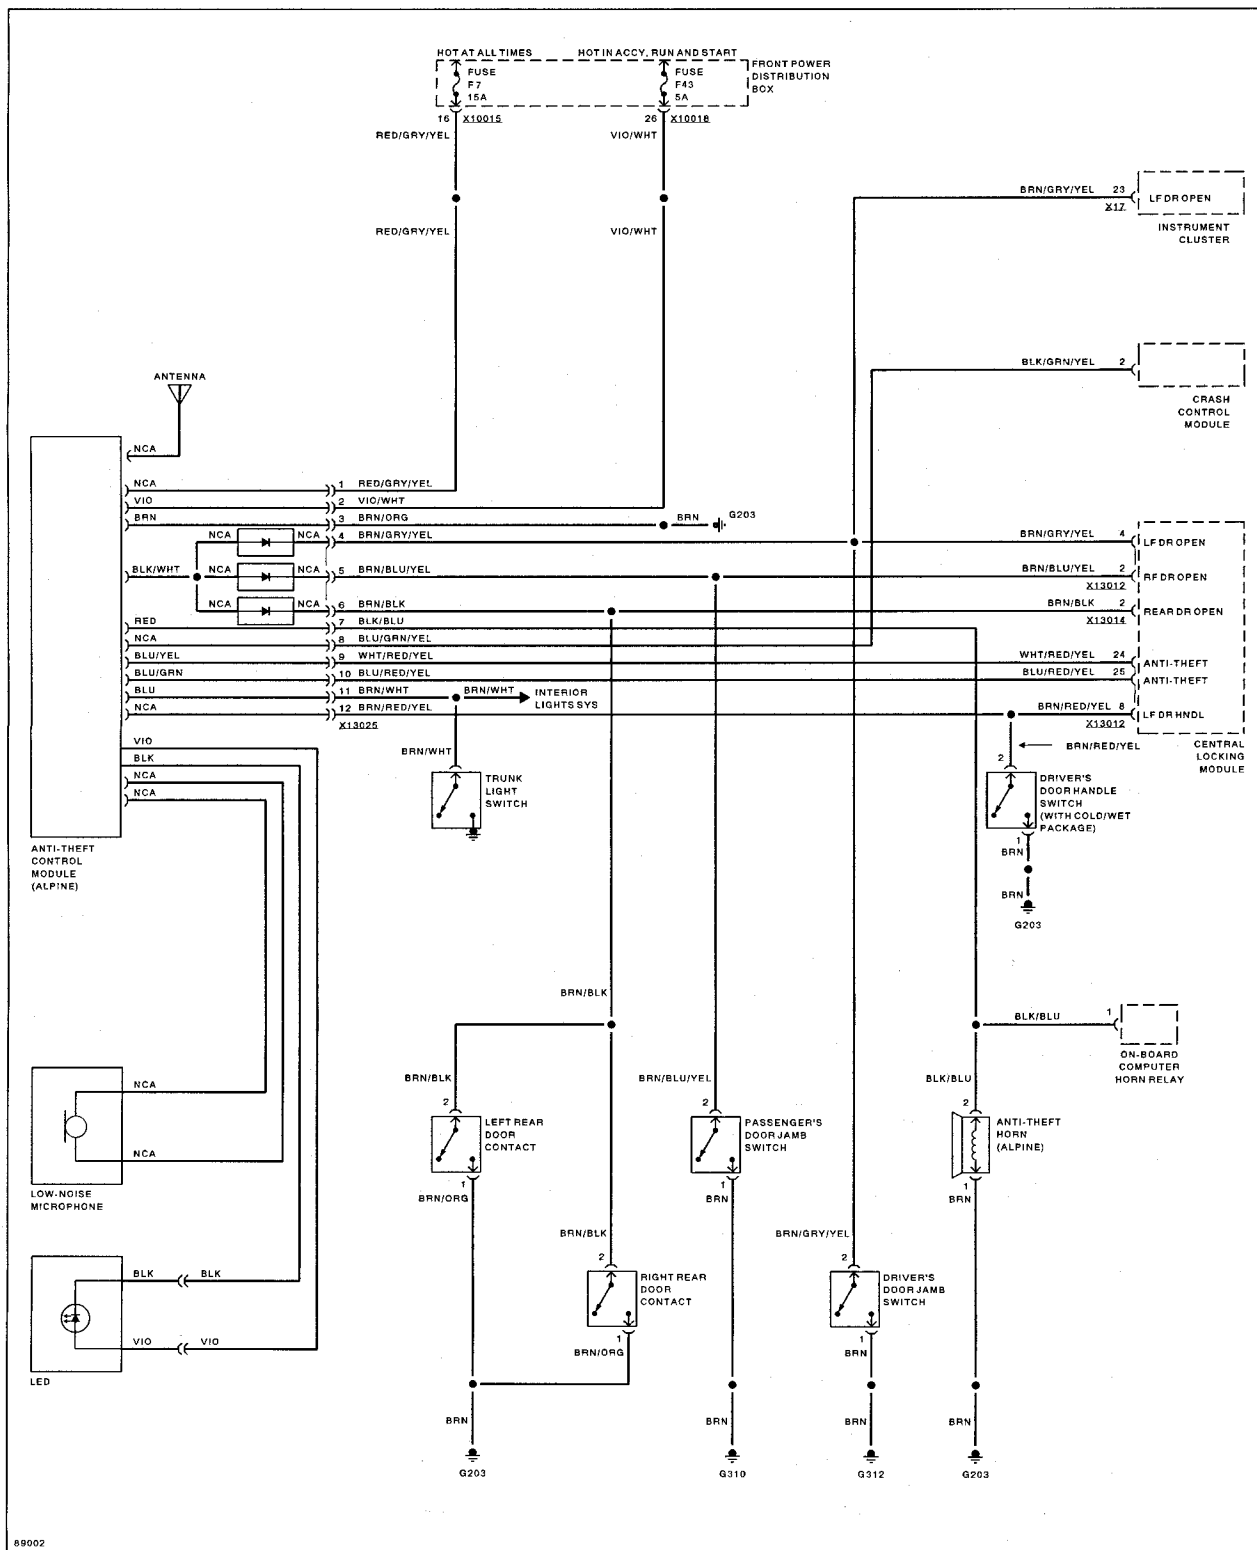


Anti-Theft

1992-93 318is & 325is


Alpine System

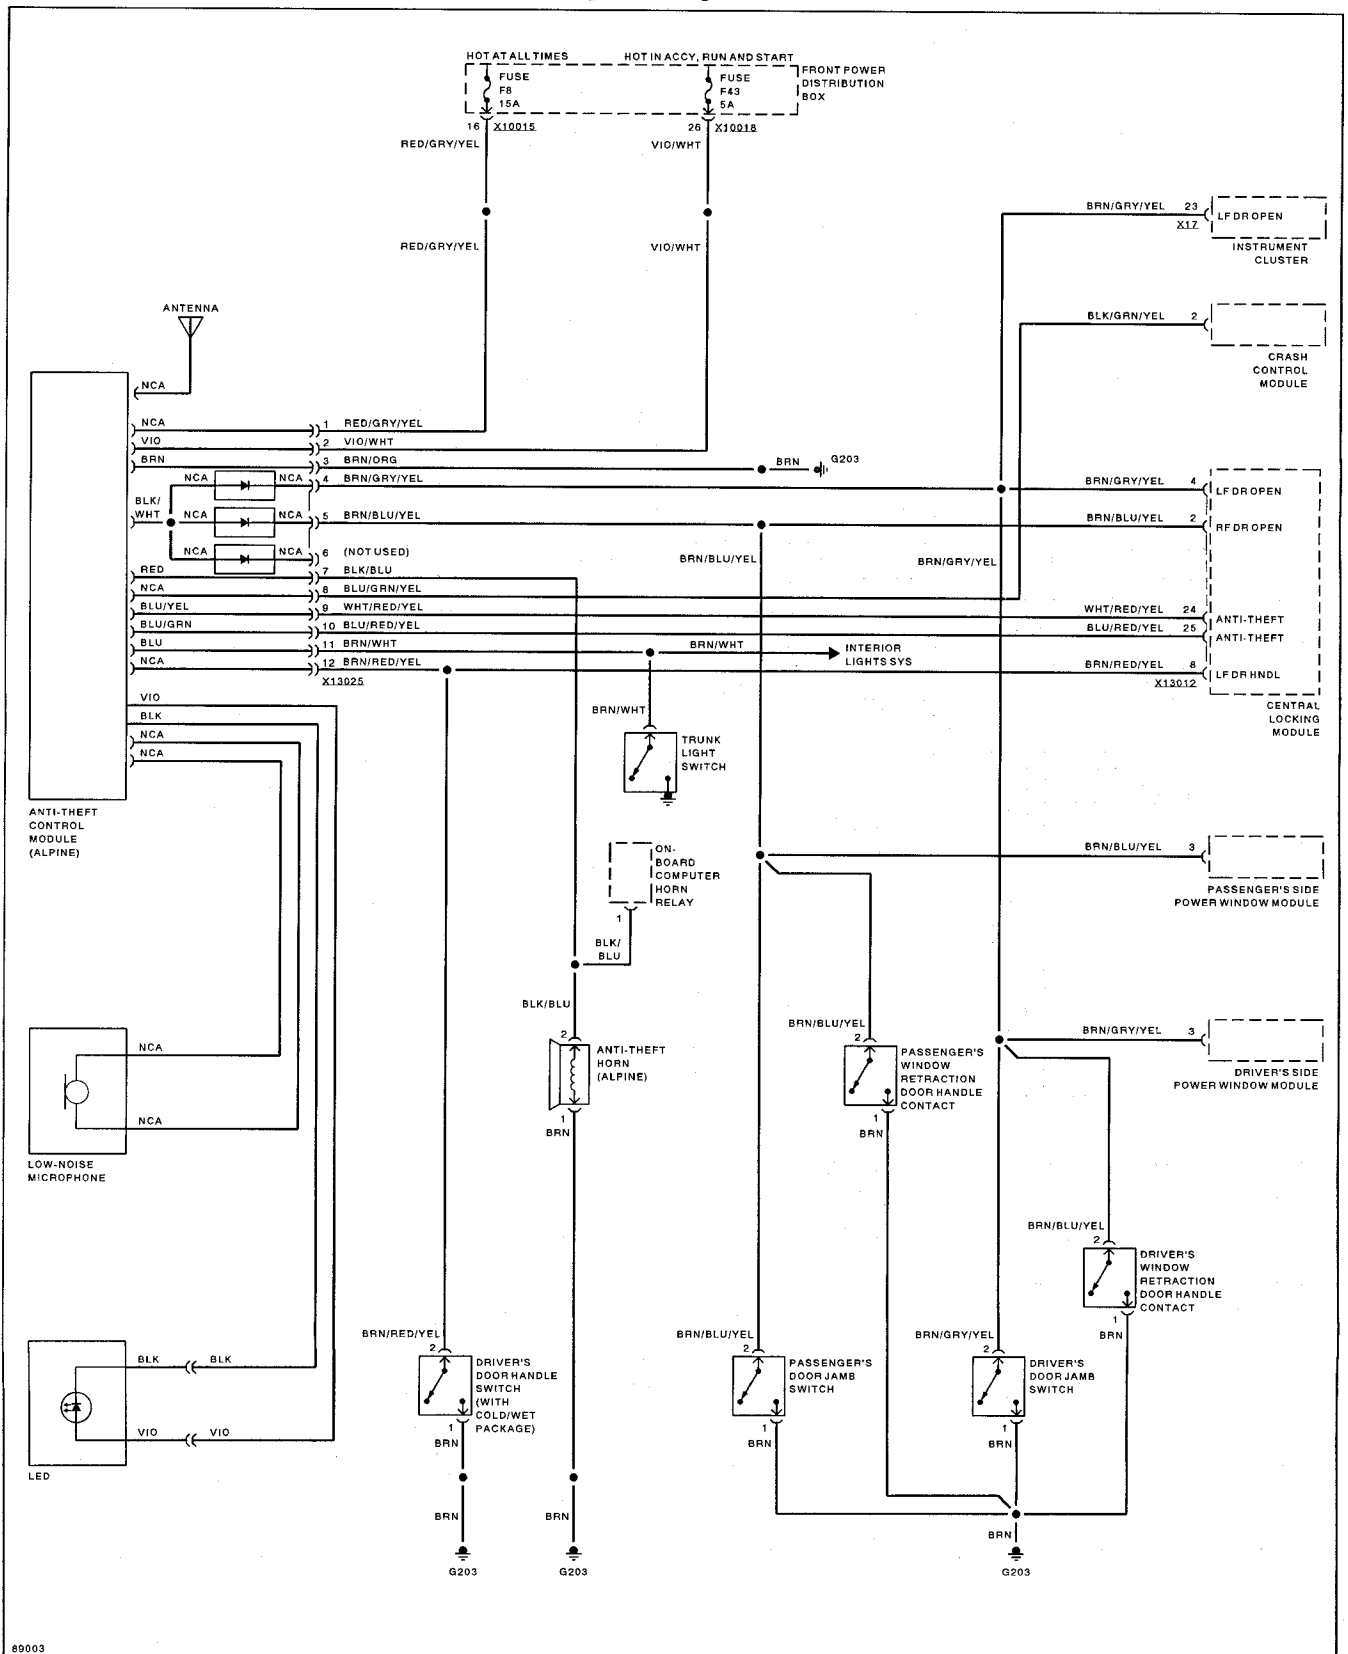

Anti-Theft **1994 Early Production** **Alpine System**

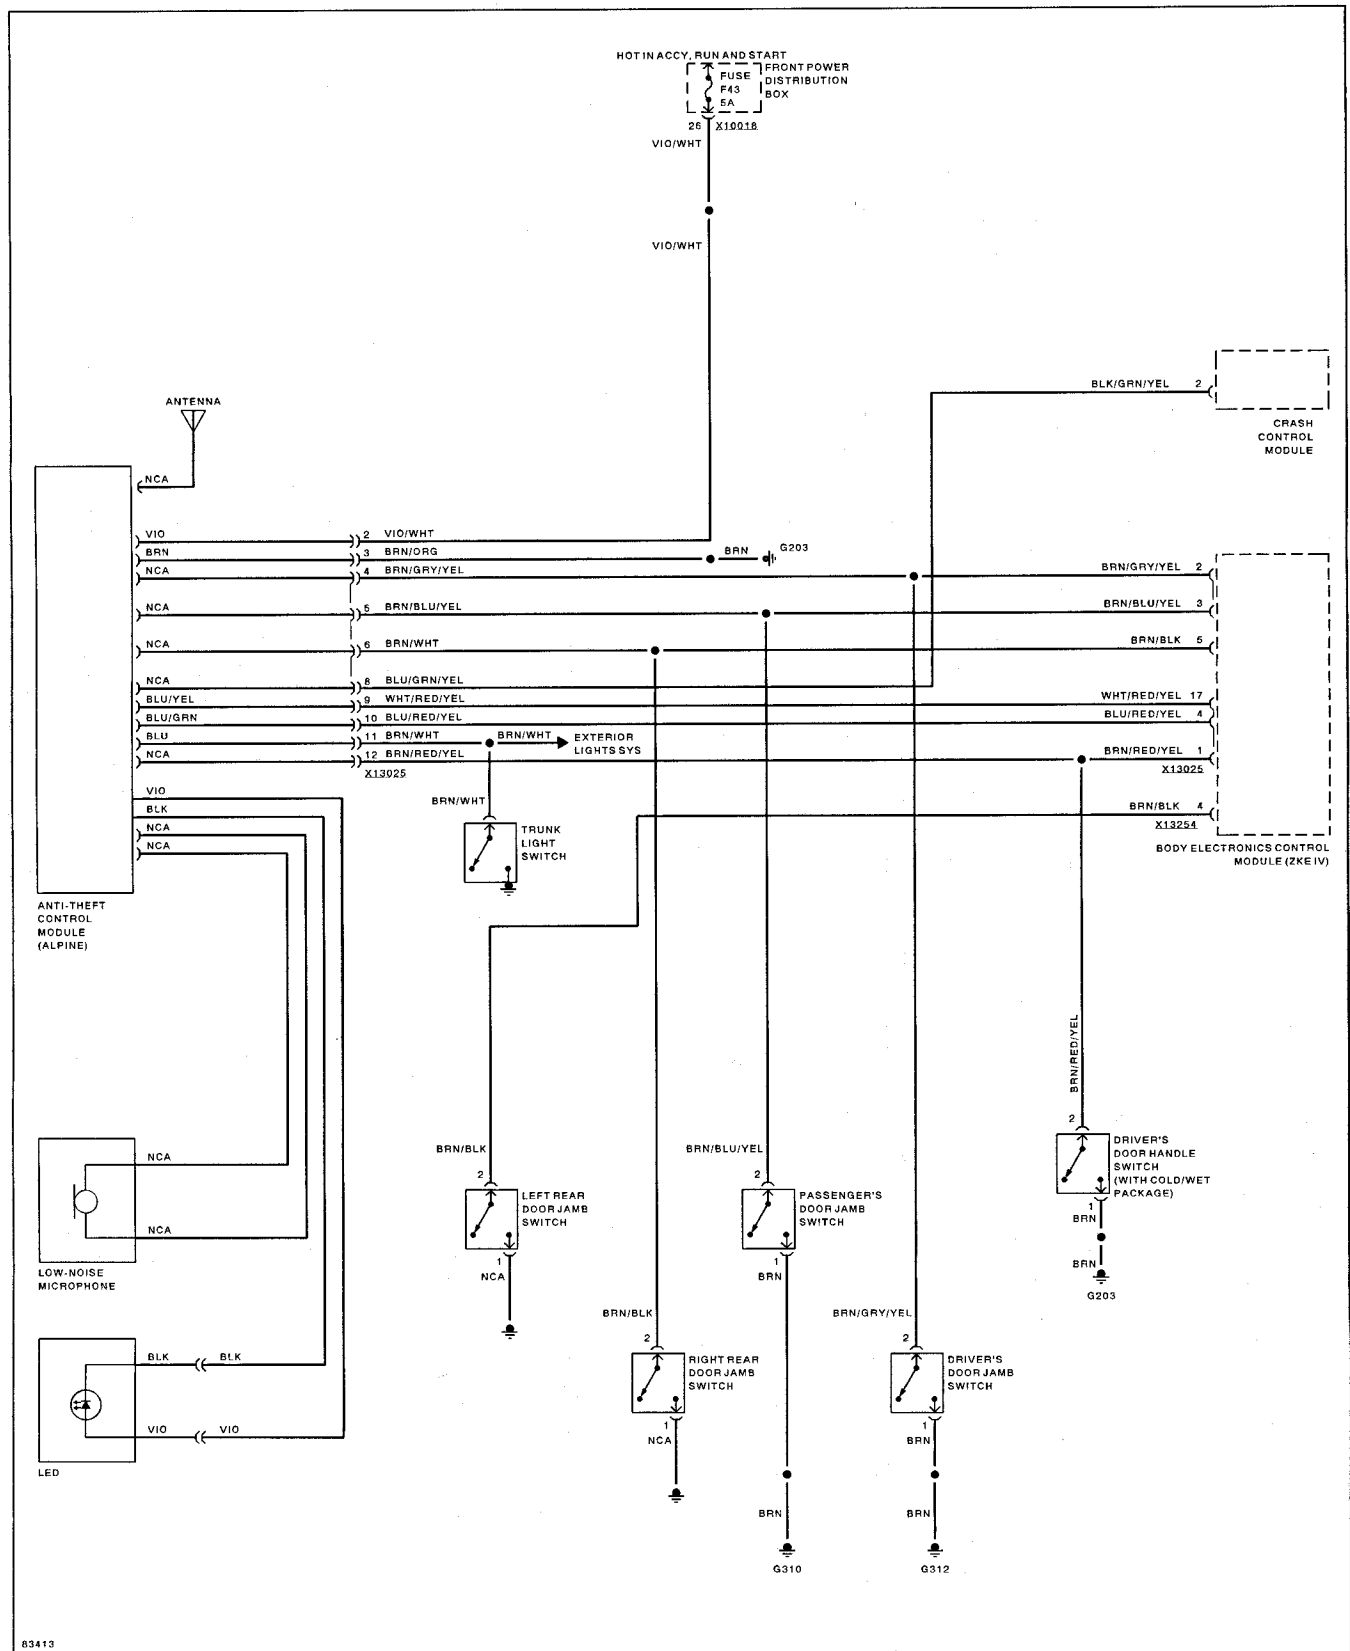


Anti-Theft 1994 Late Production Alpine System

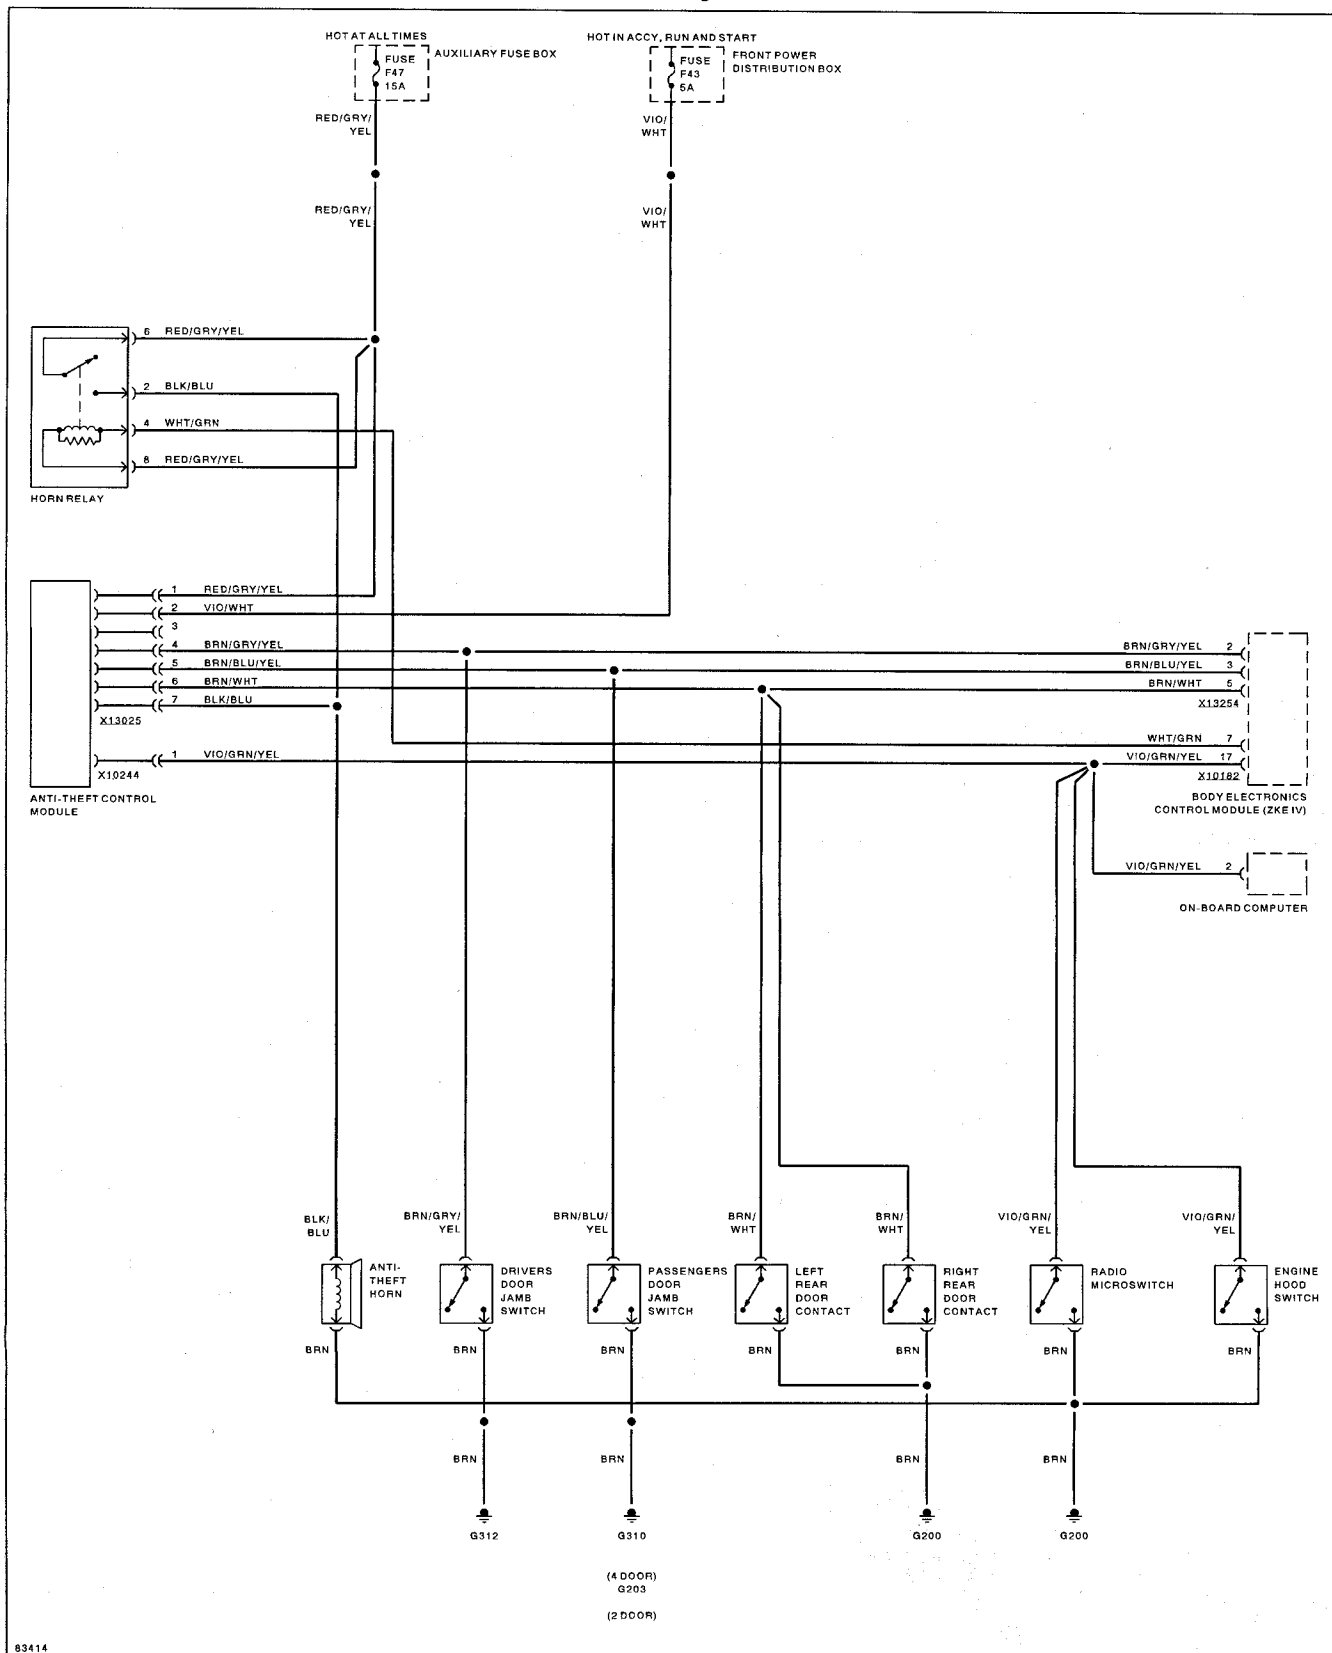

83414


Anti-Theft **1995-97 Except 318ti** **Alpine System**

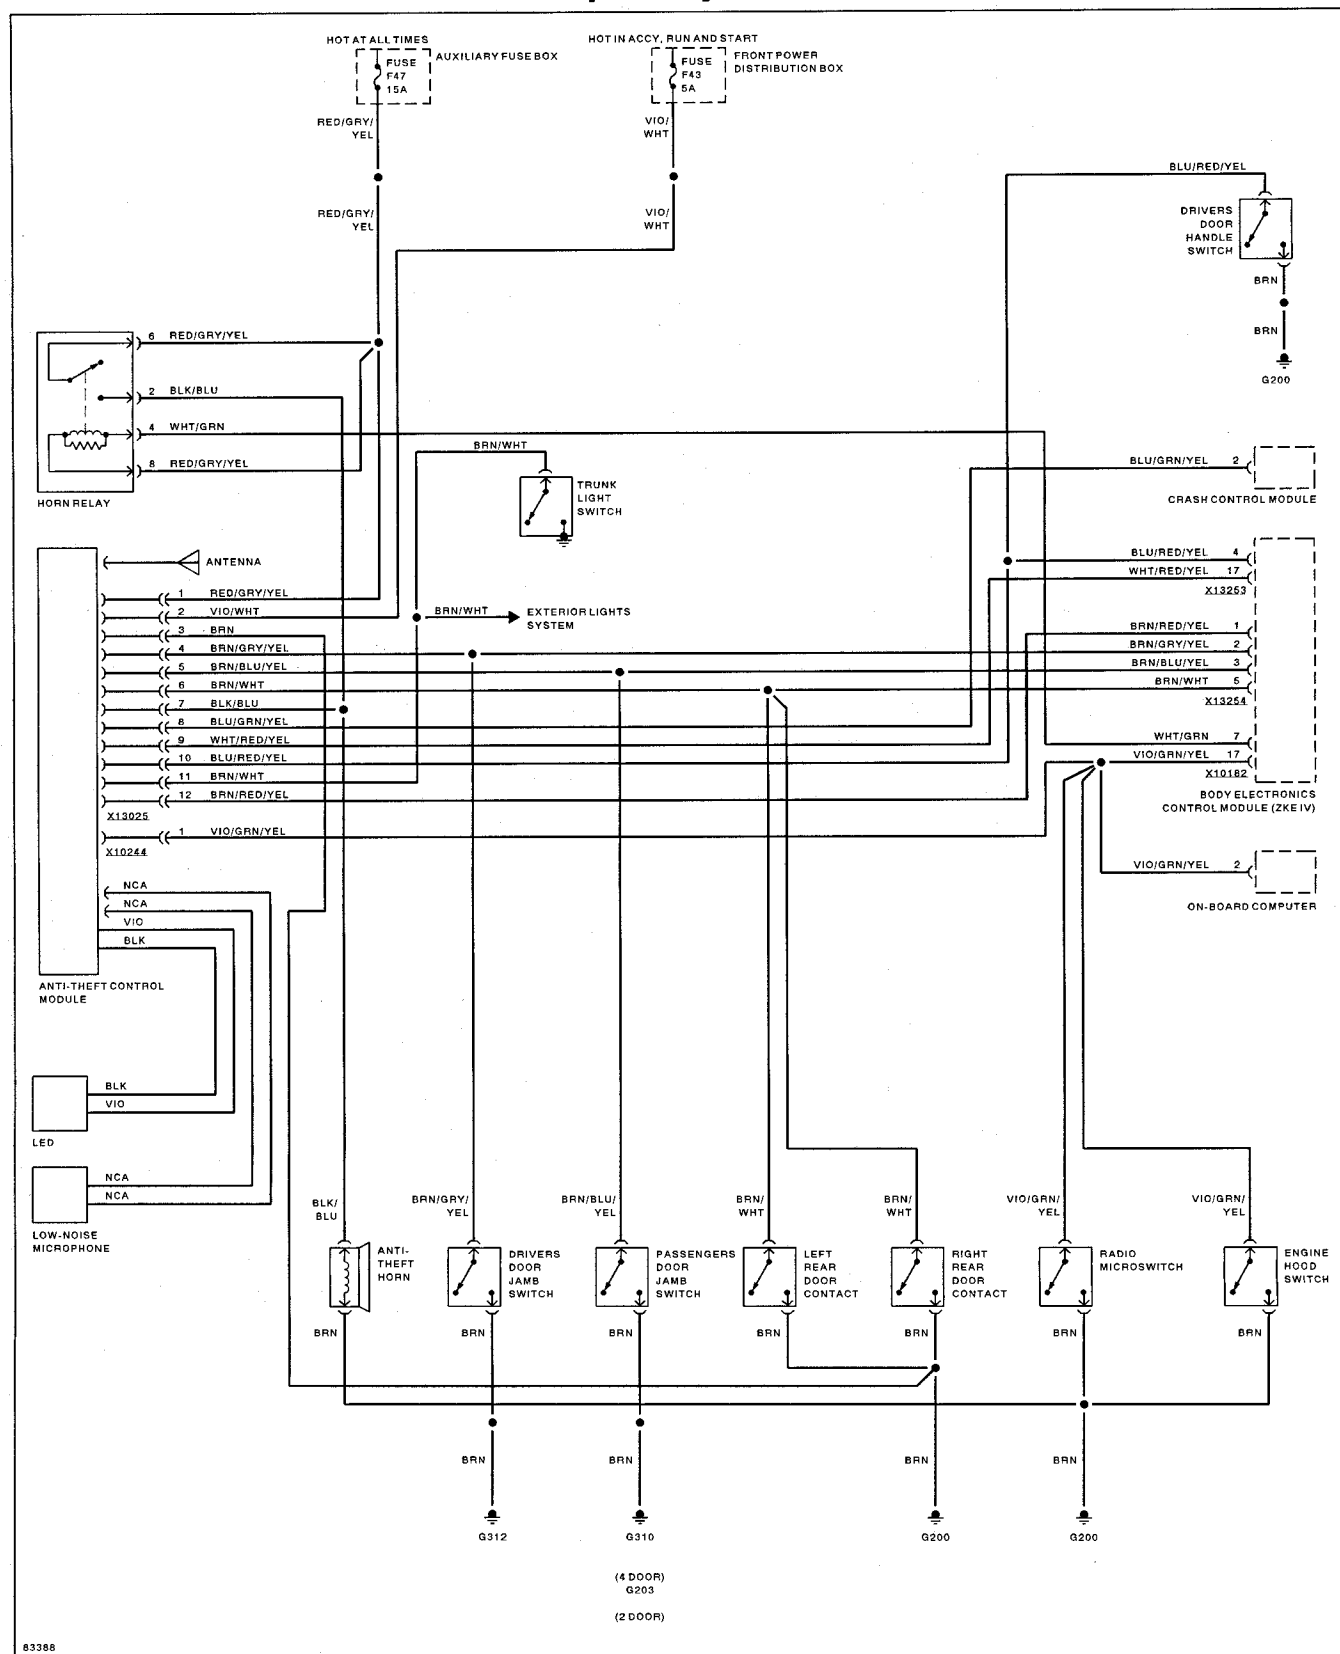

Anti-Theft

1995-97 318ti


Alpine System

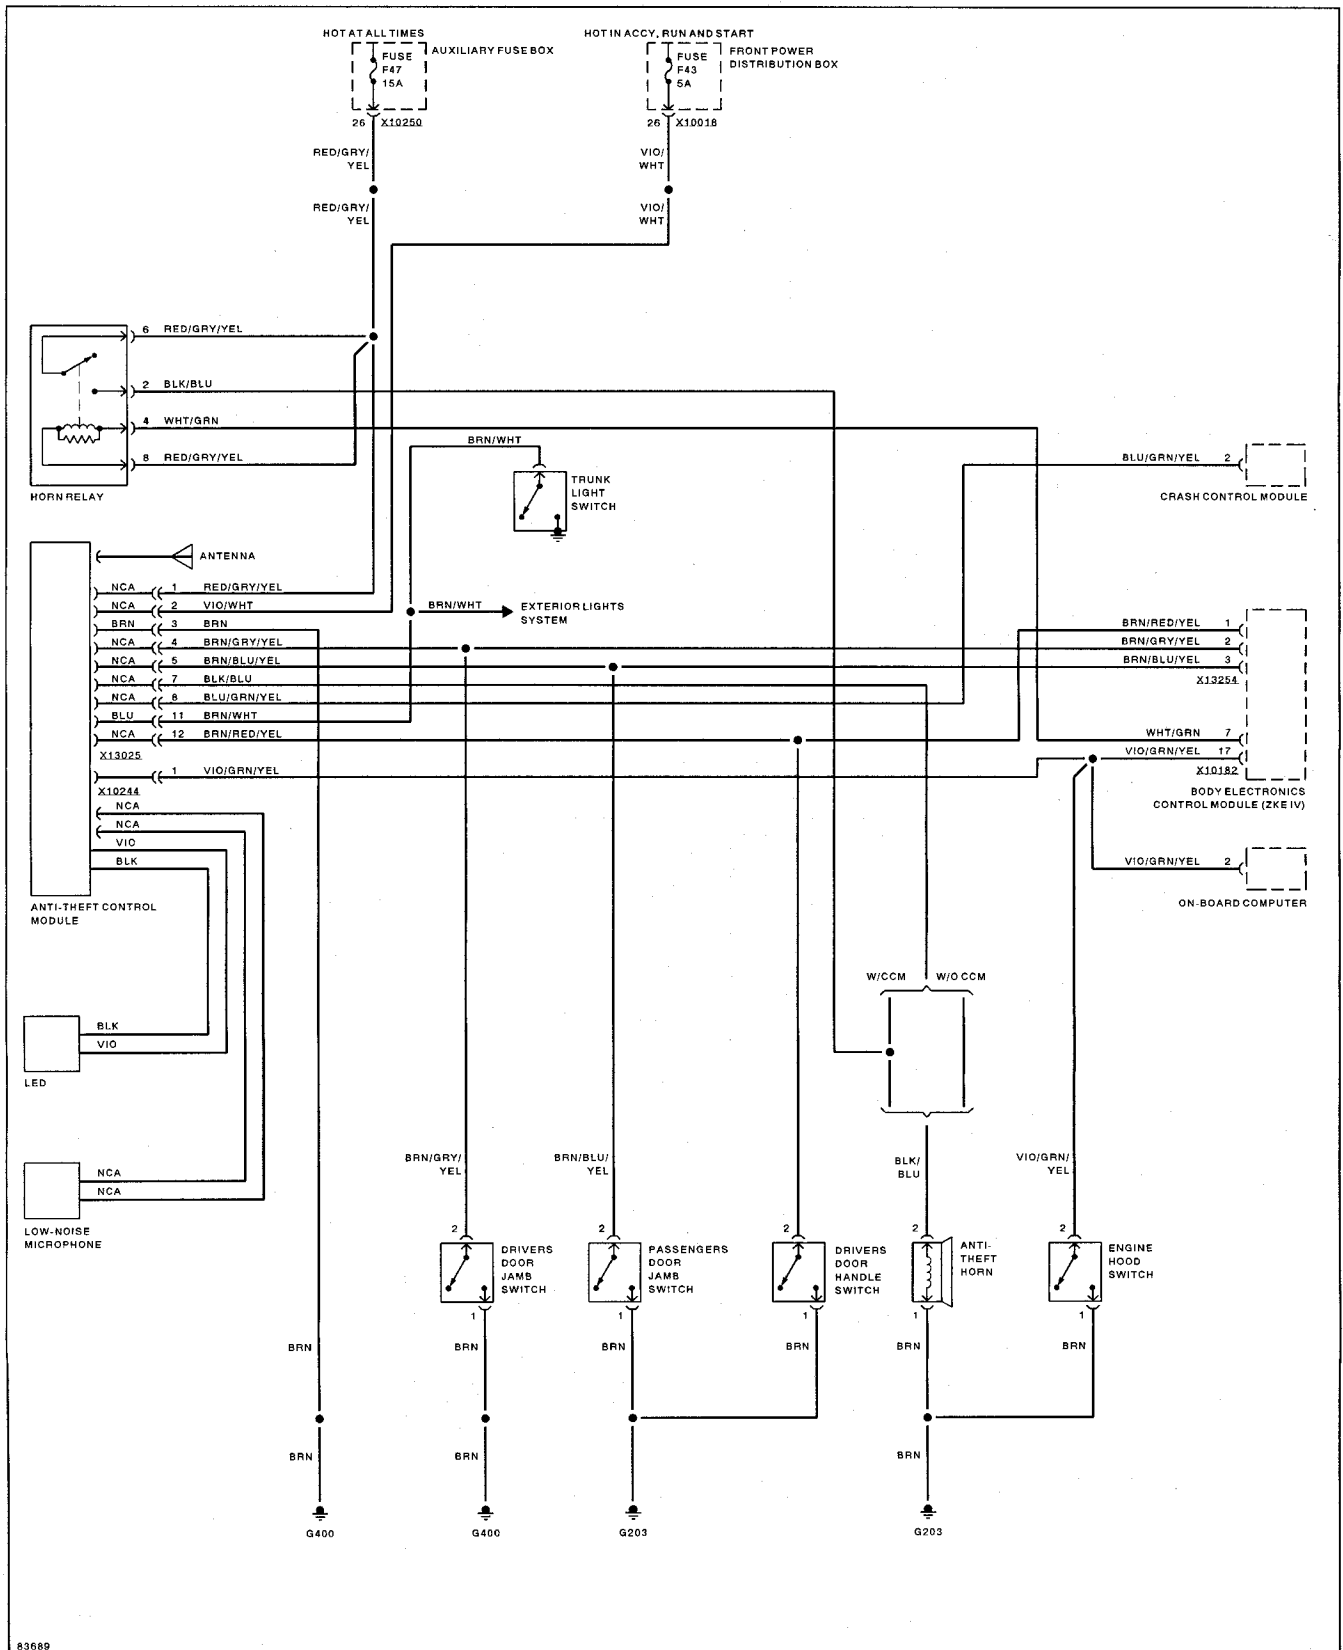


Anti-Theft

1995-98

EWS II

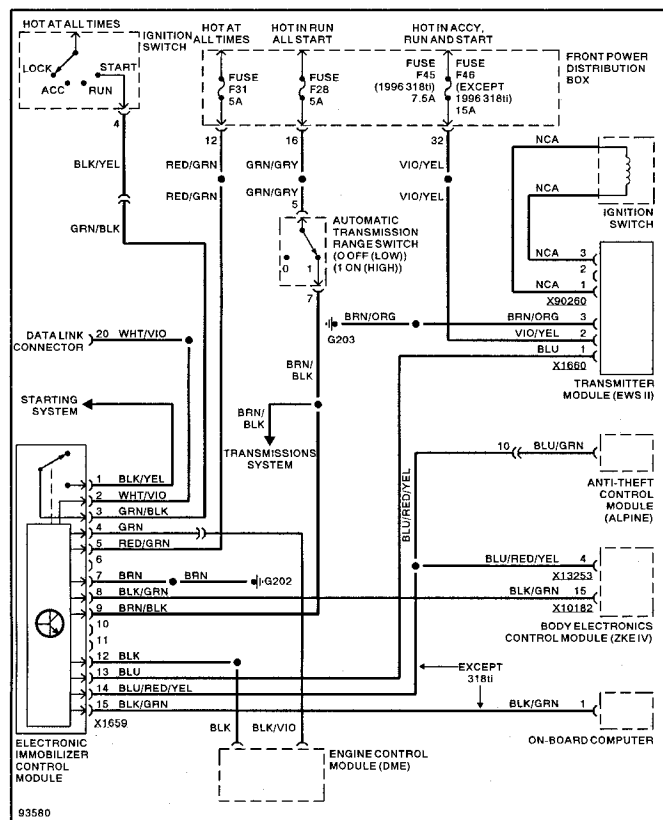


1995-96

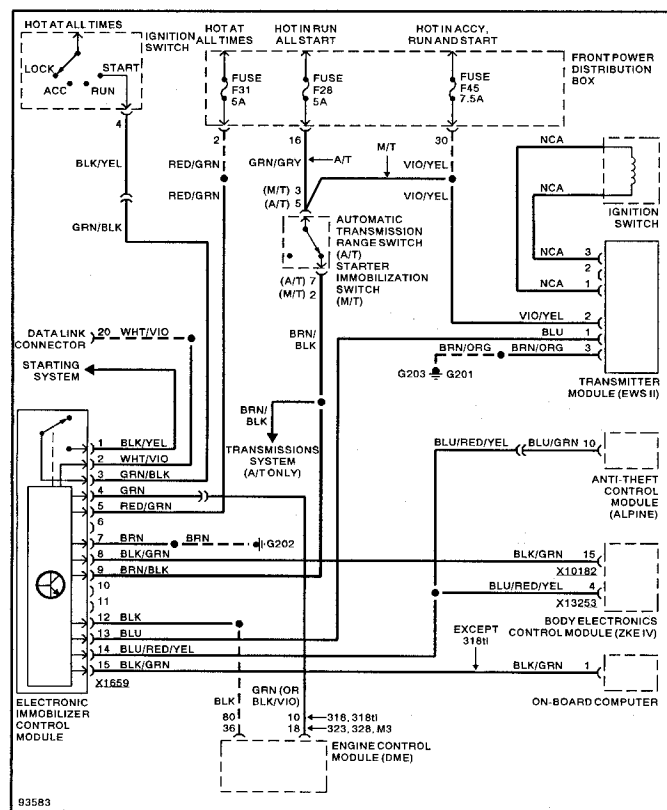

1997-98


Anti-Theft Forced Entry

1998 Except 318ti

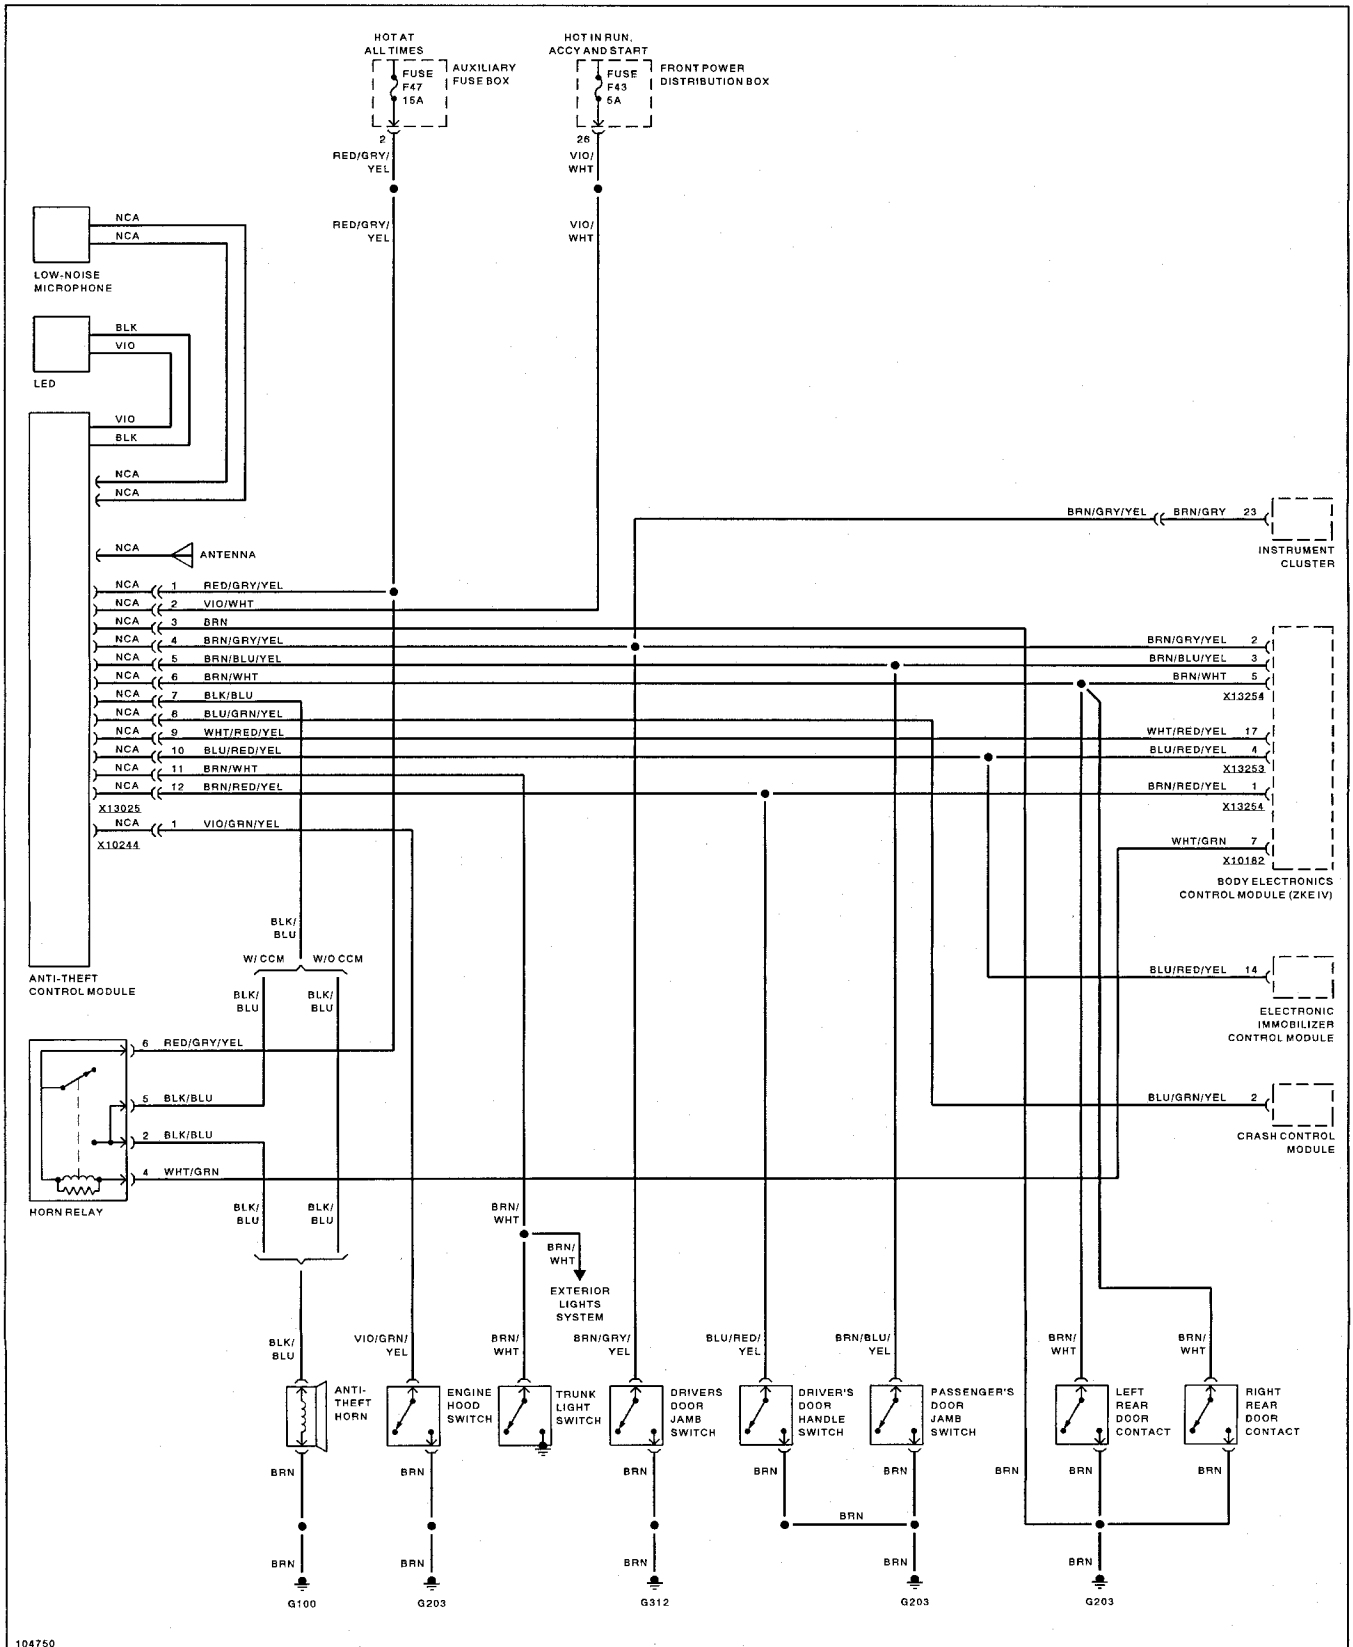


Anti-Theft Forced Entry


1998 318ti

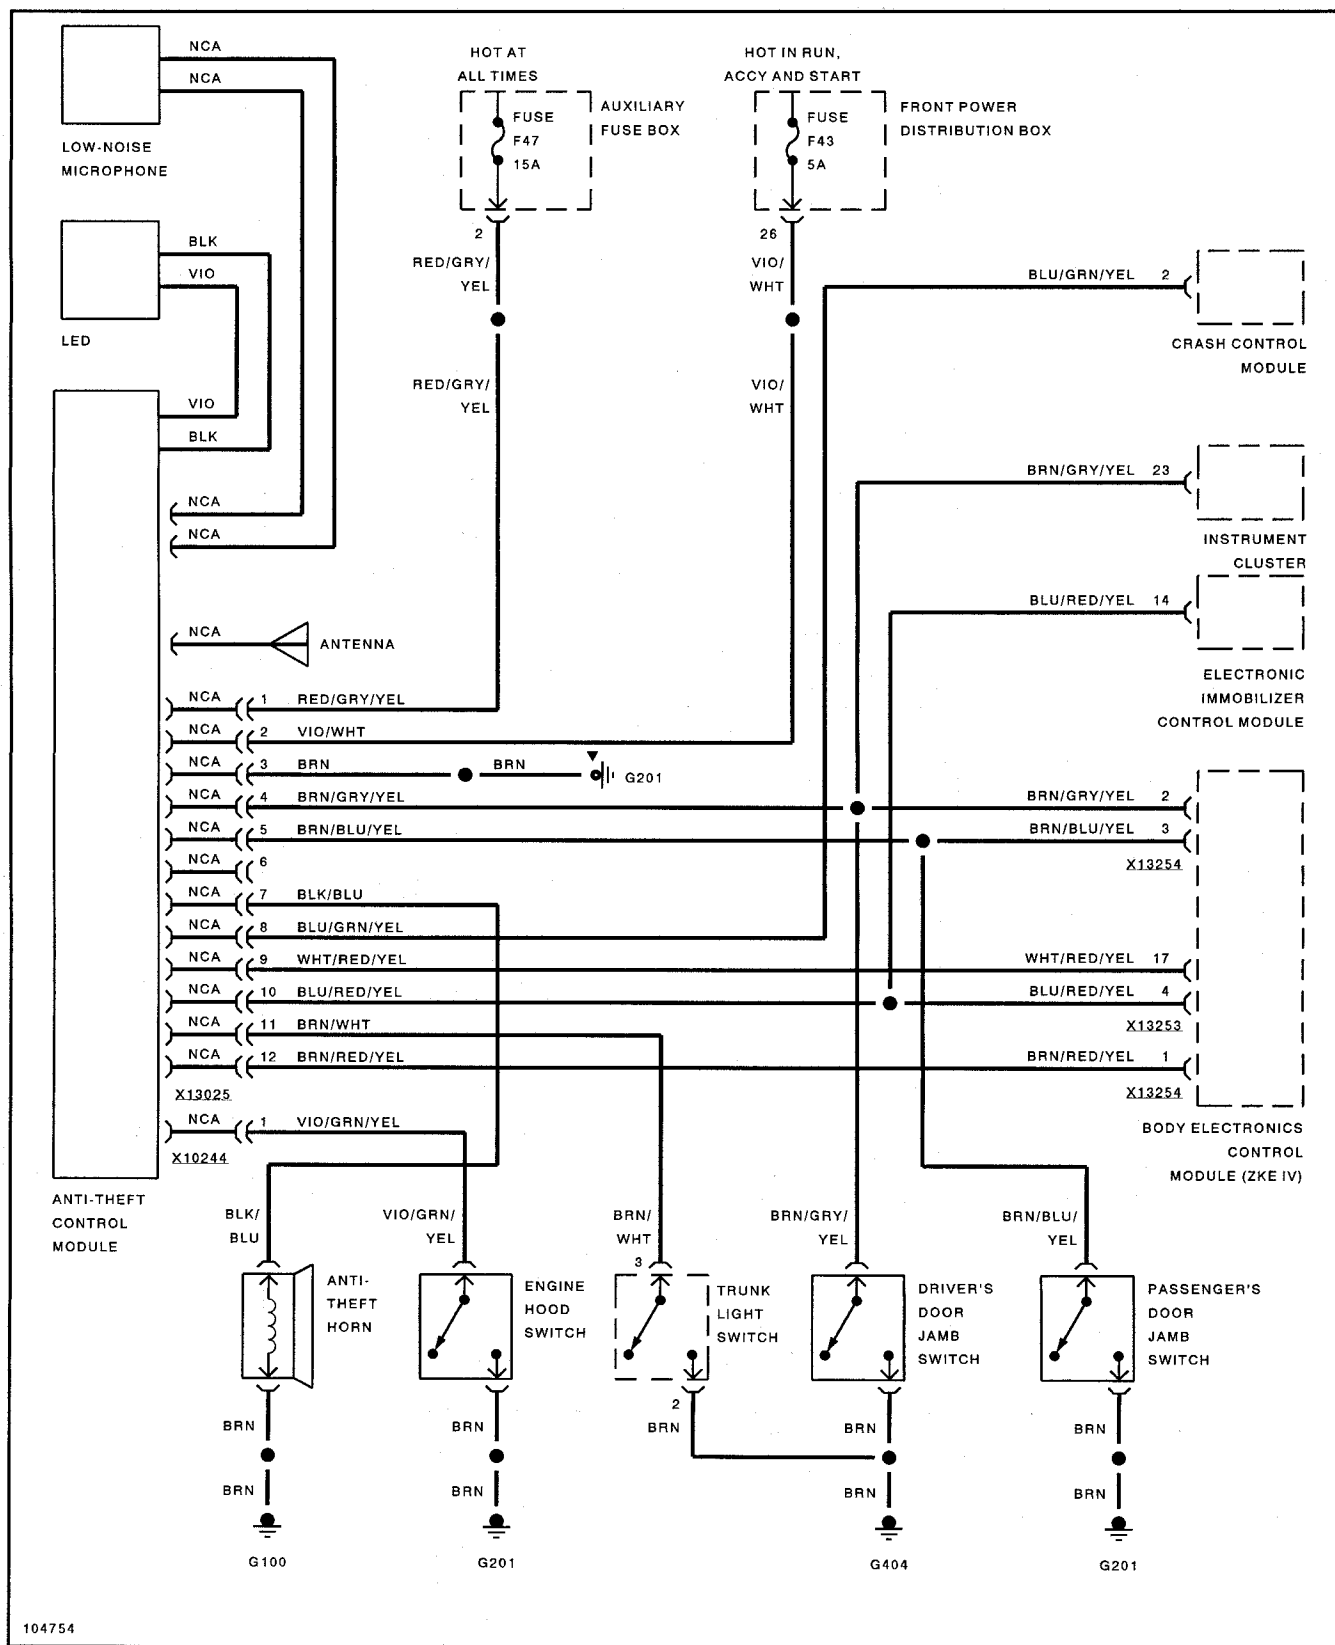

Horns

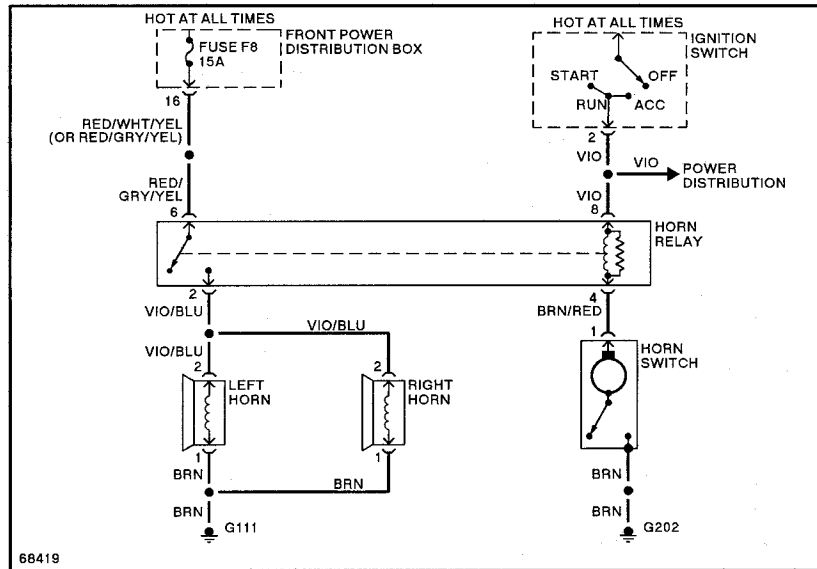


1992-93

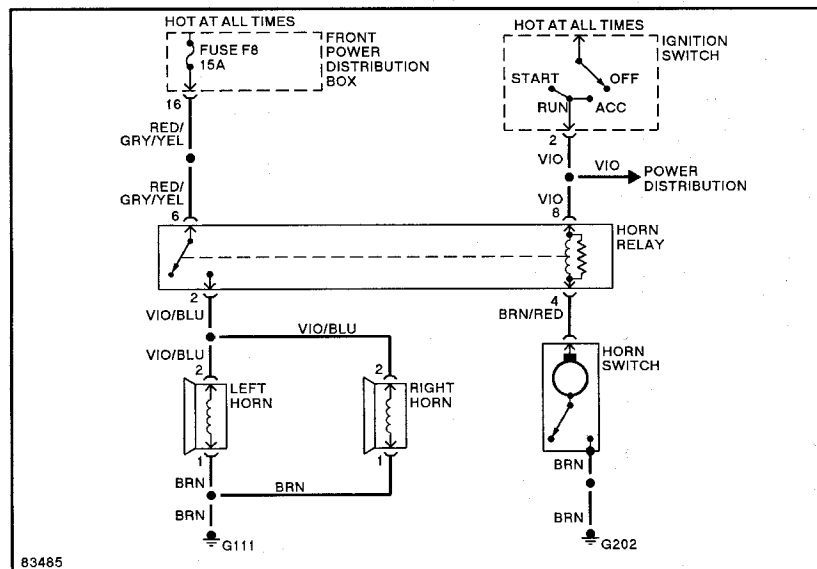


1994-96

Horns

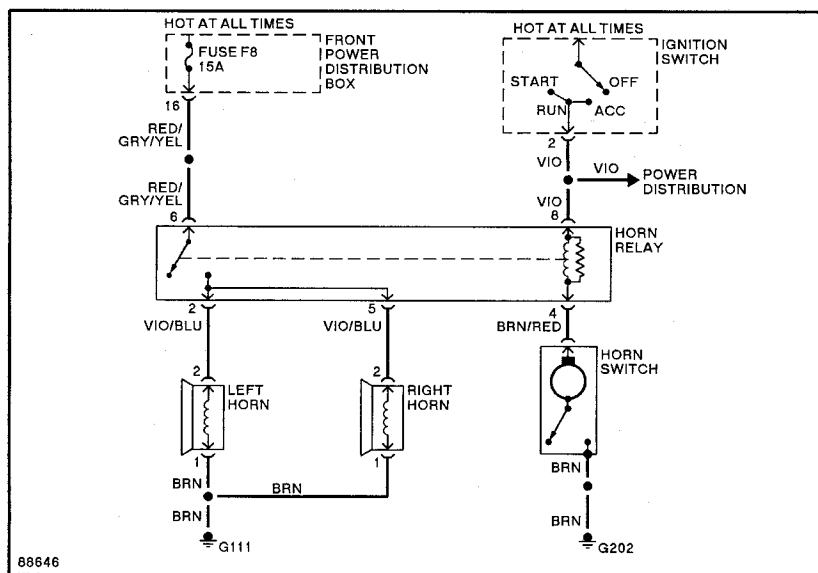


1997

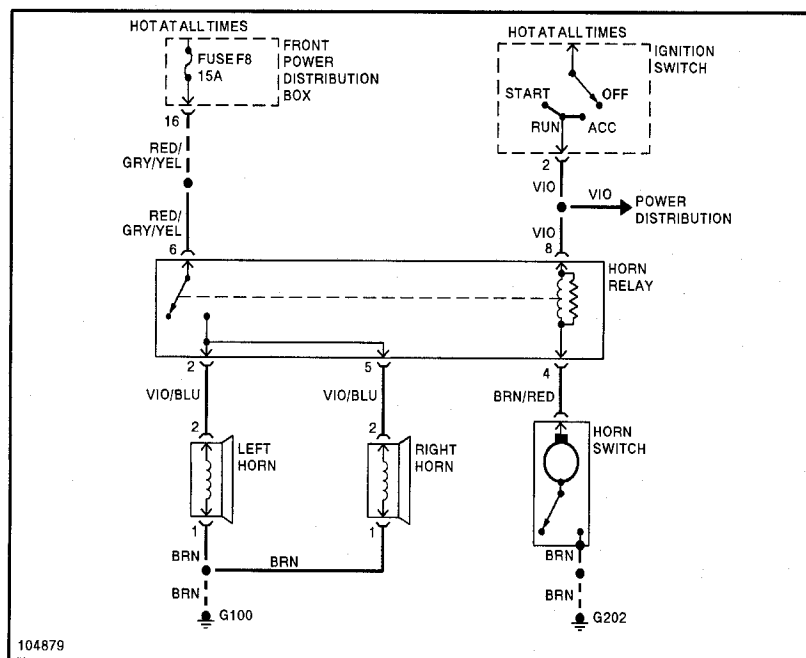


1998

Wiper/Washer

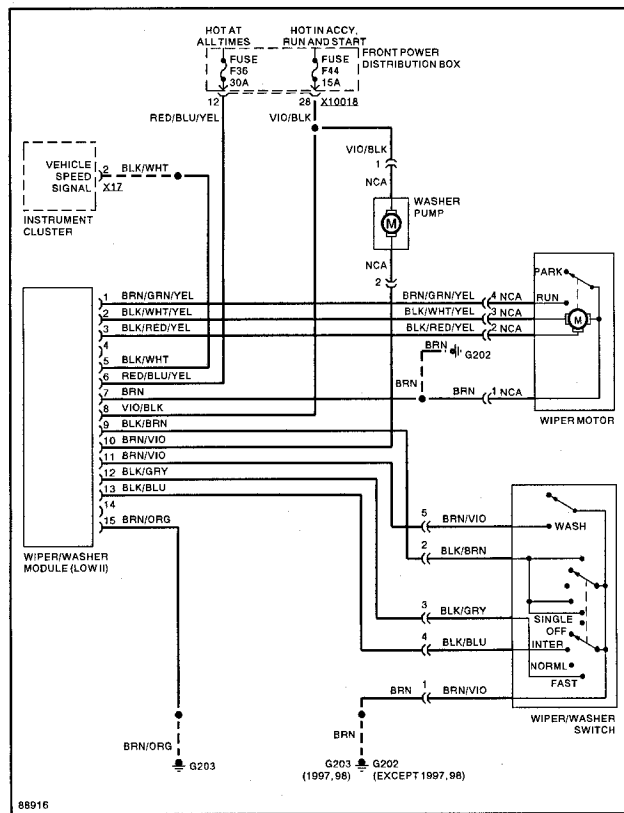


**1992-98 USA
Except 318ti**

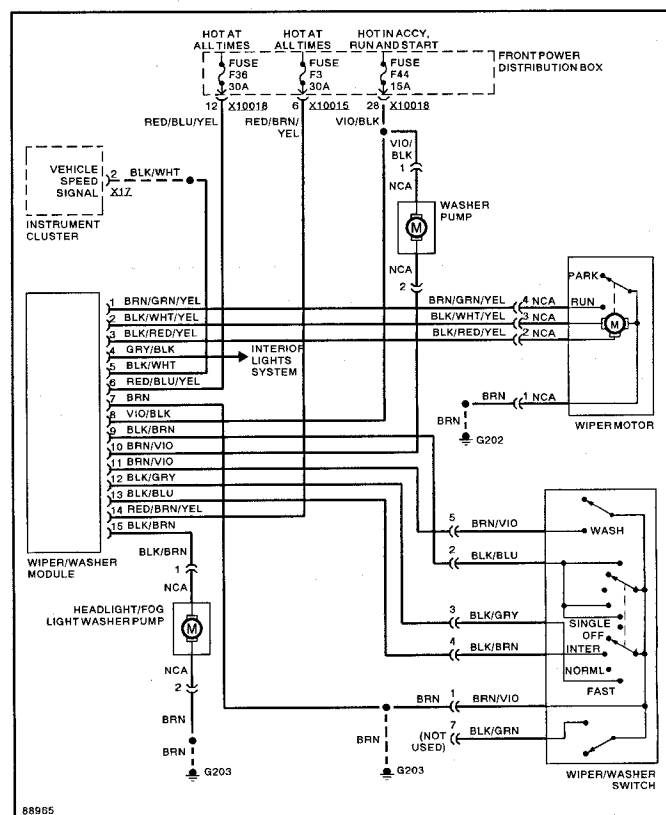



**1998 Canada
Except 318ti**

Wiper/Washer


1992-96 Canada Except 318ti

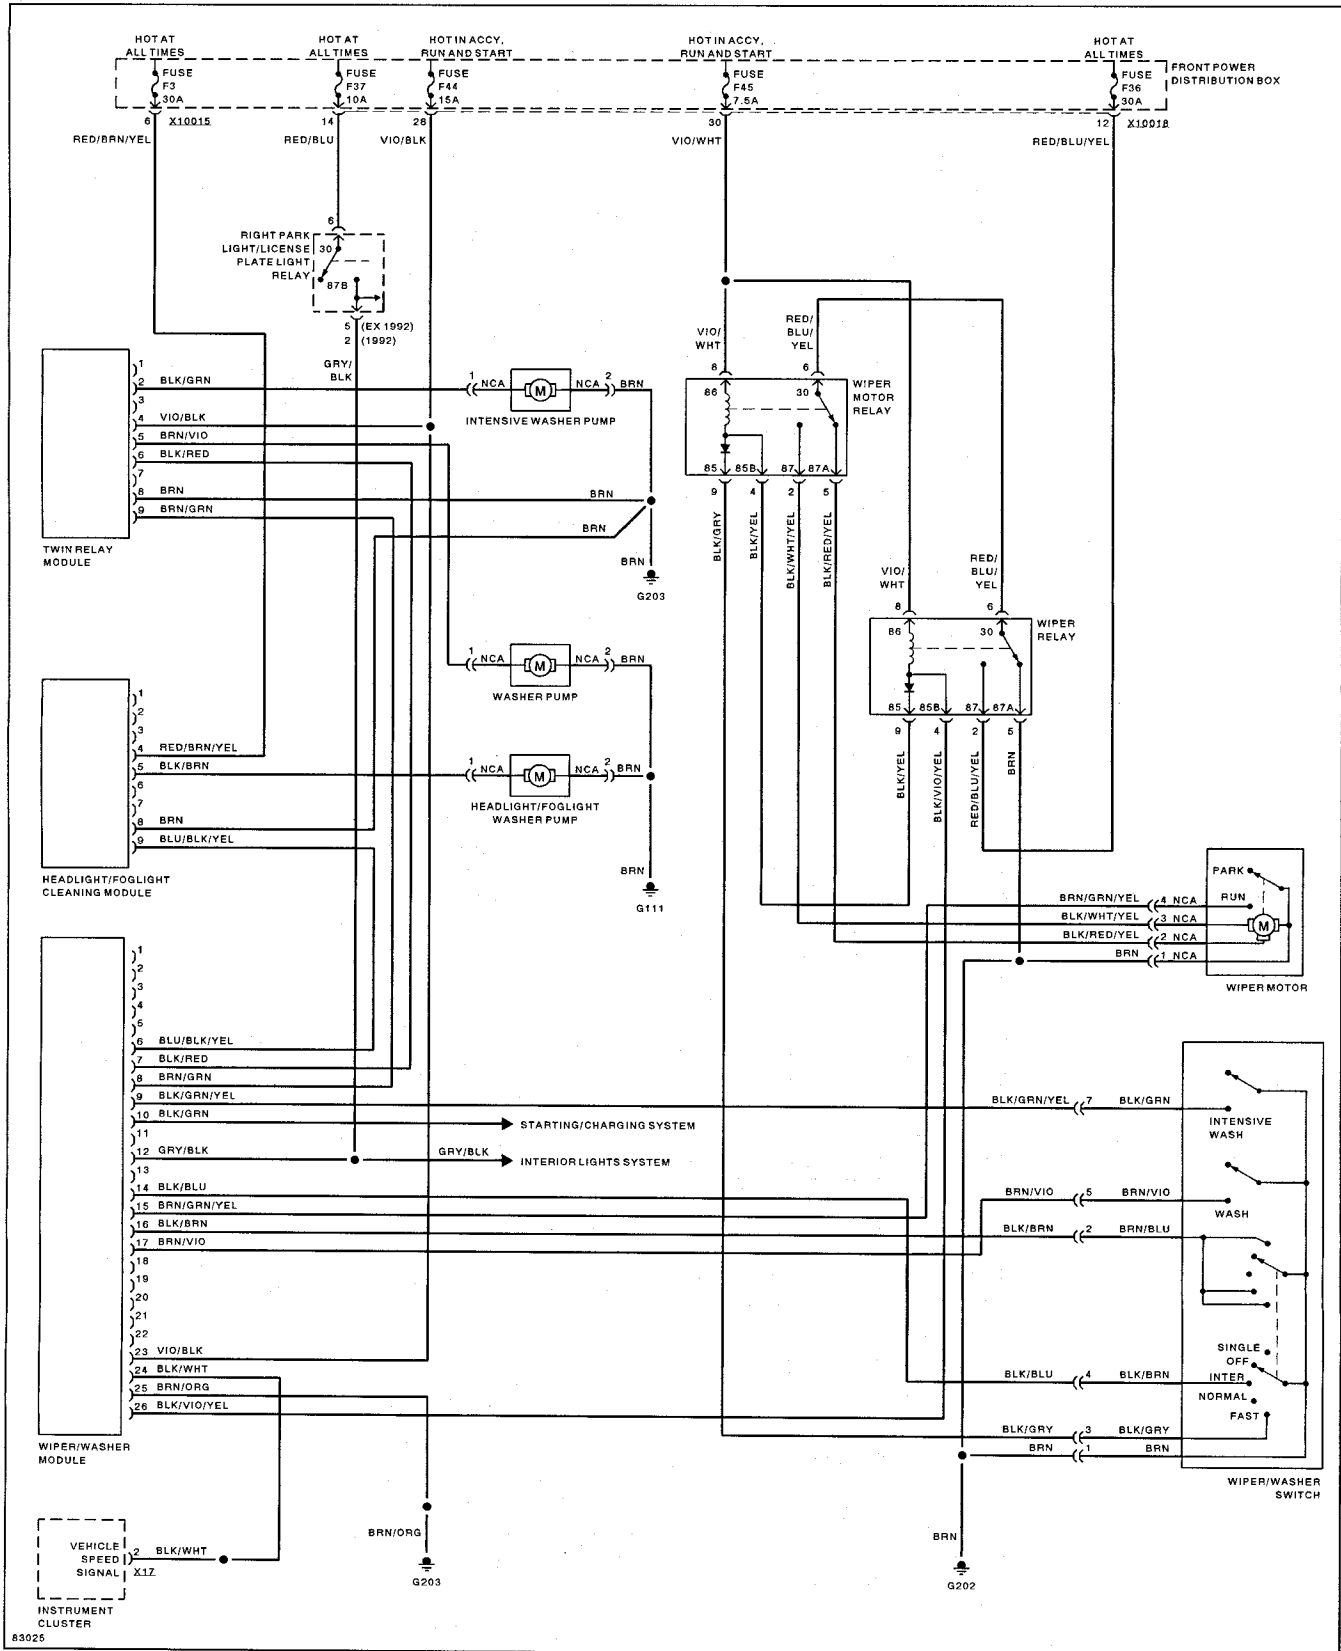


Wiper/Washer

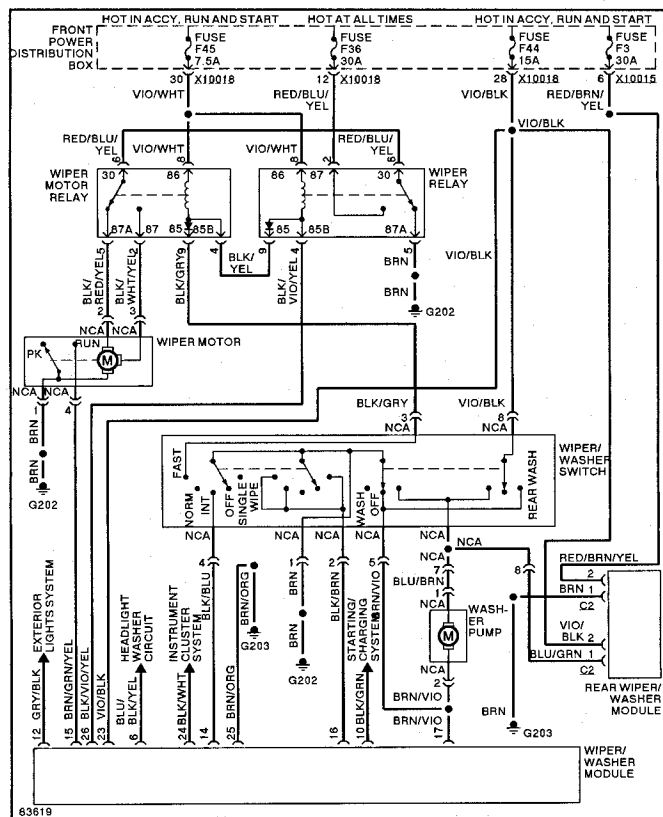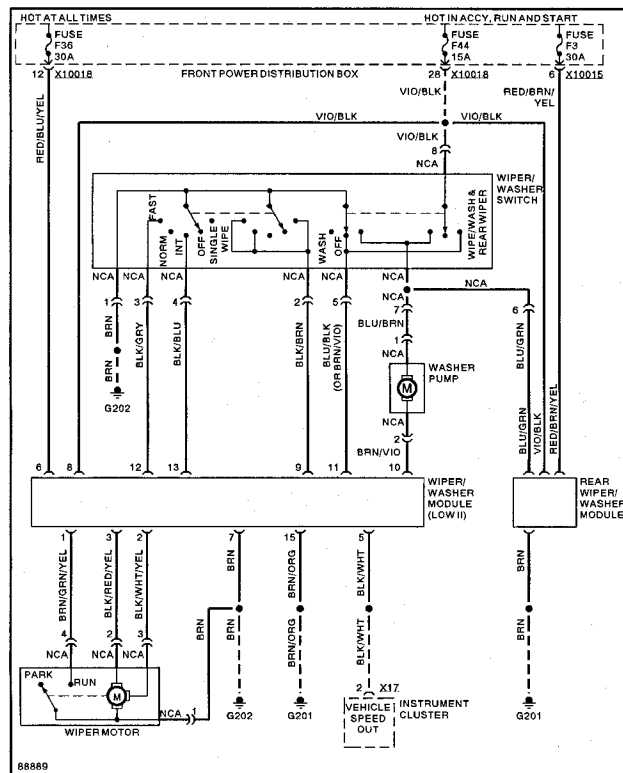

Wiper/Washer

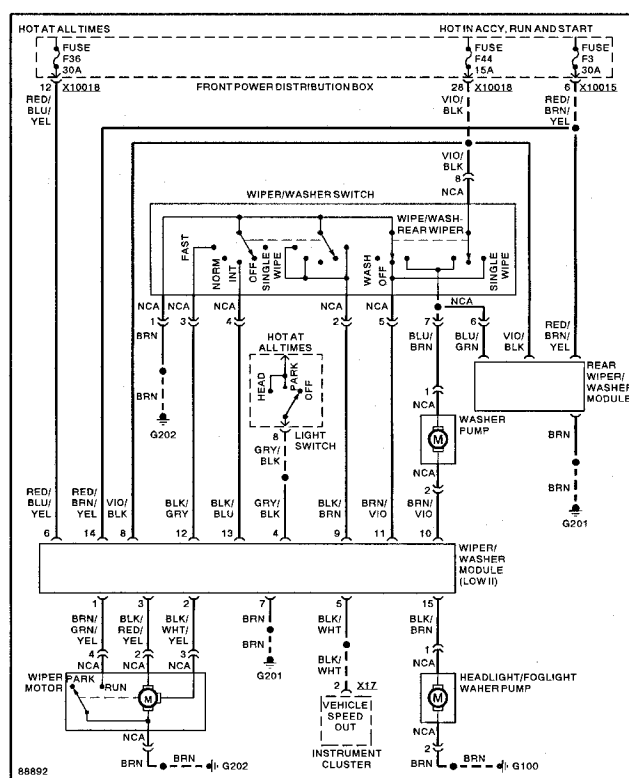


**1998
Canada
318ti**

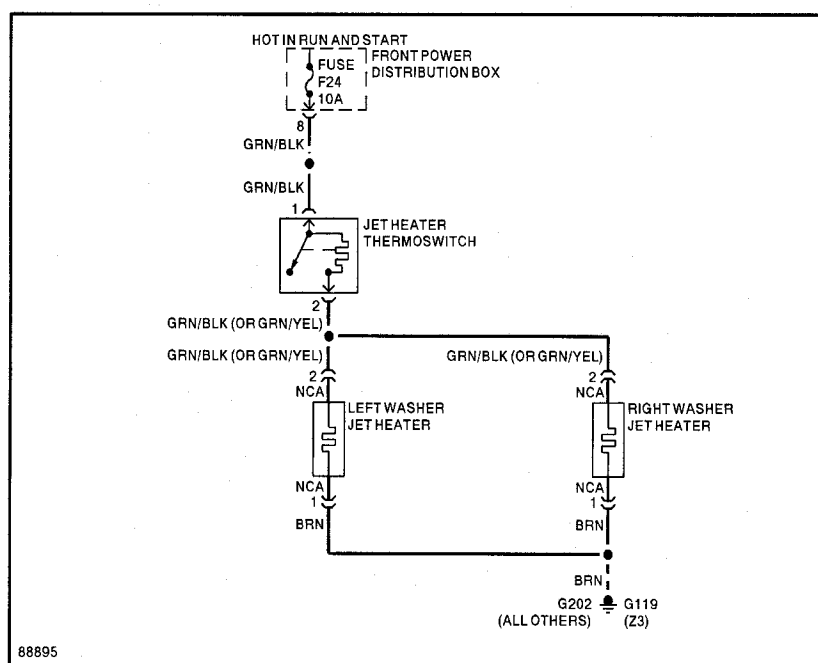



**1993-98
Washer
Jet Heater**

Wiper/Washer

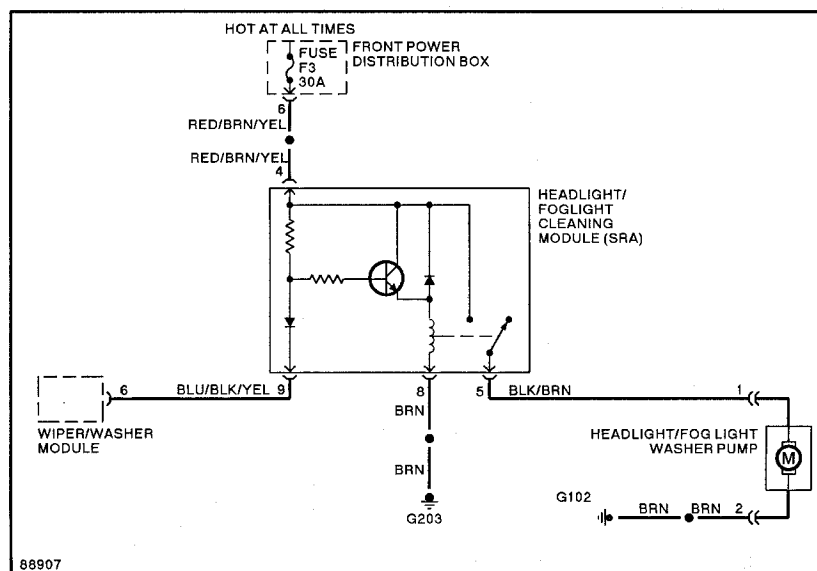


1995-96 Headlight Washer


Rear Window Defogger

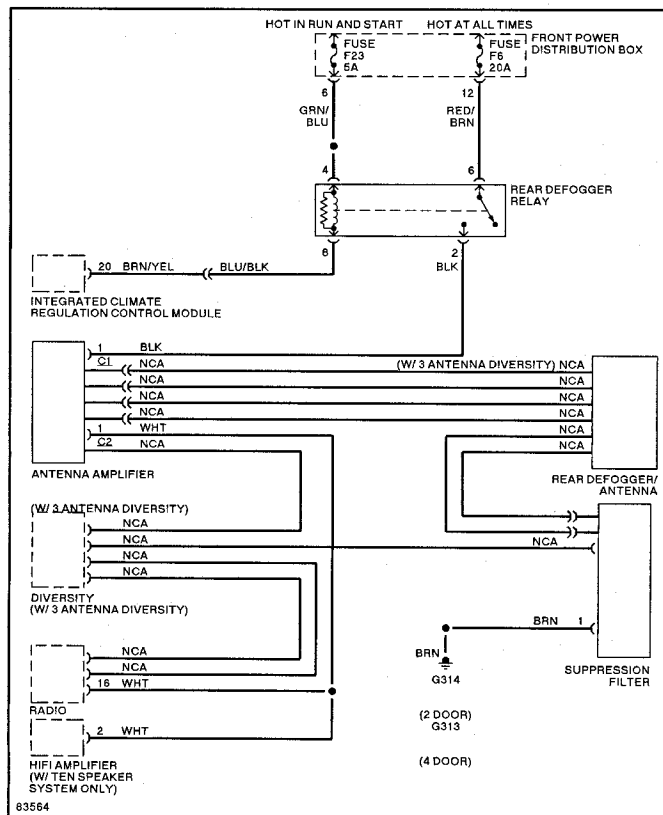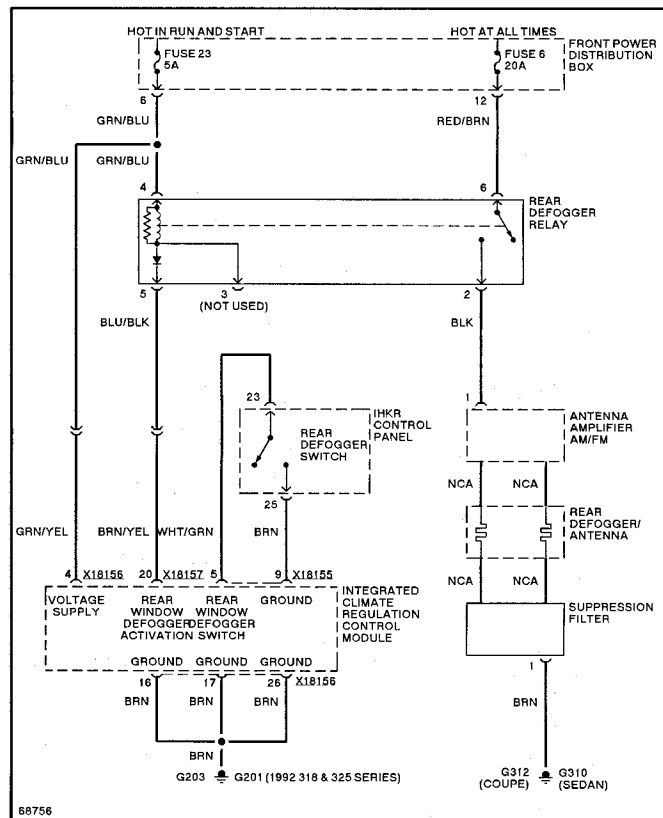

Rear Window Defogger


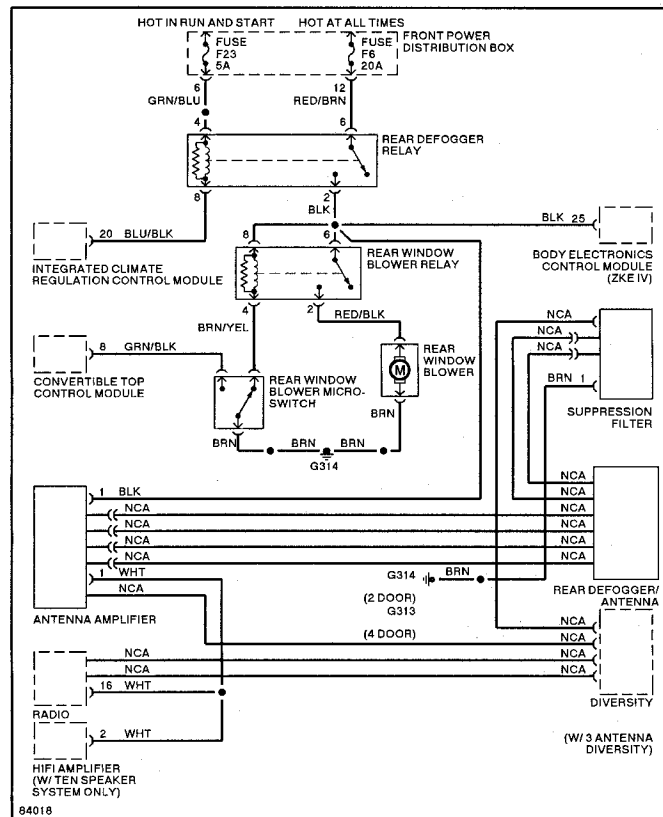


**1994-96
Convertible**

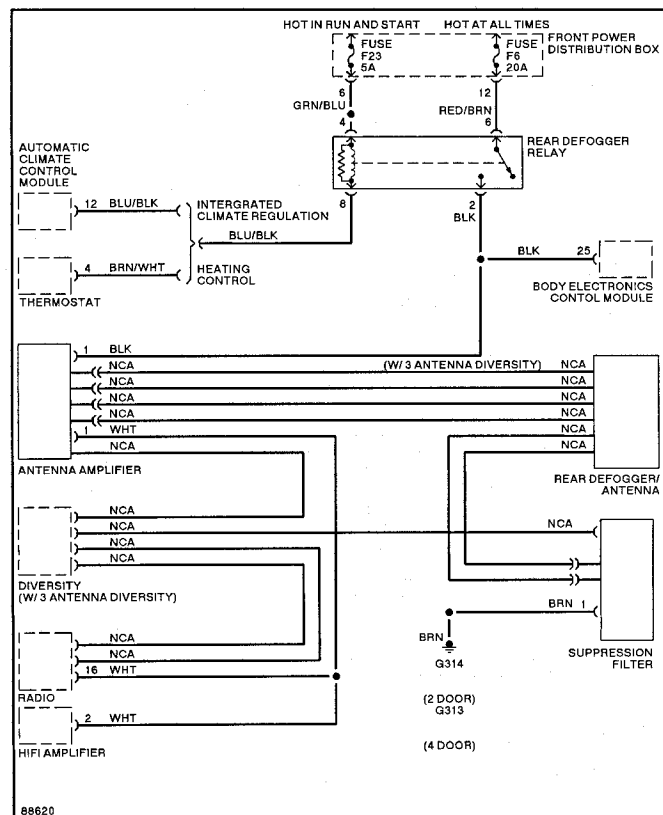


**1997
Except 318ti**


Rear Window Defogger

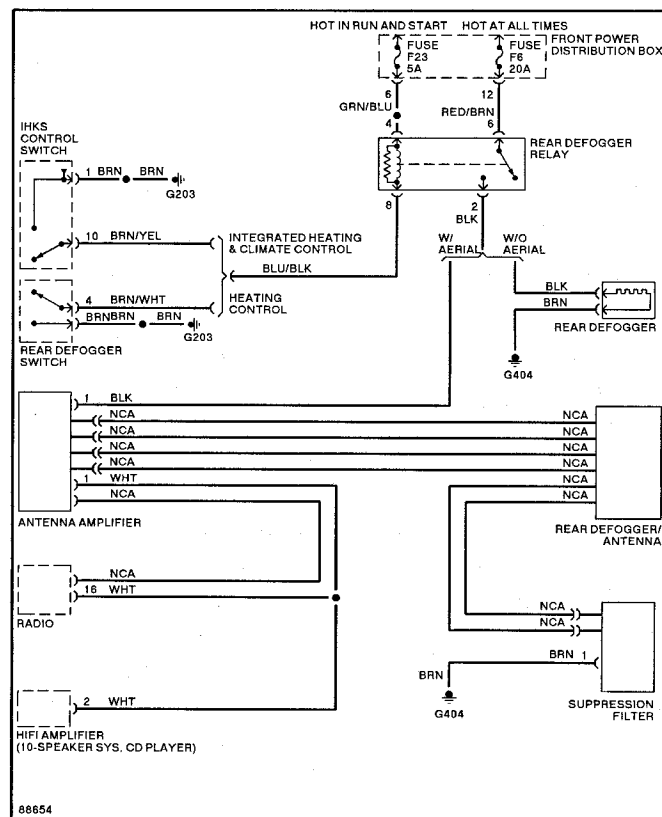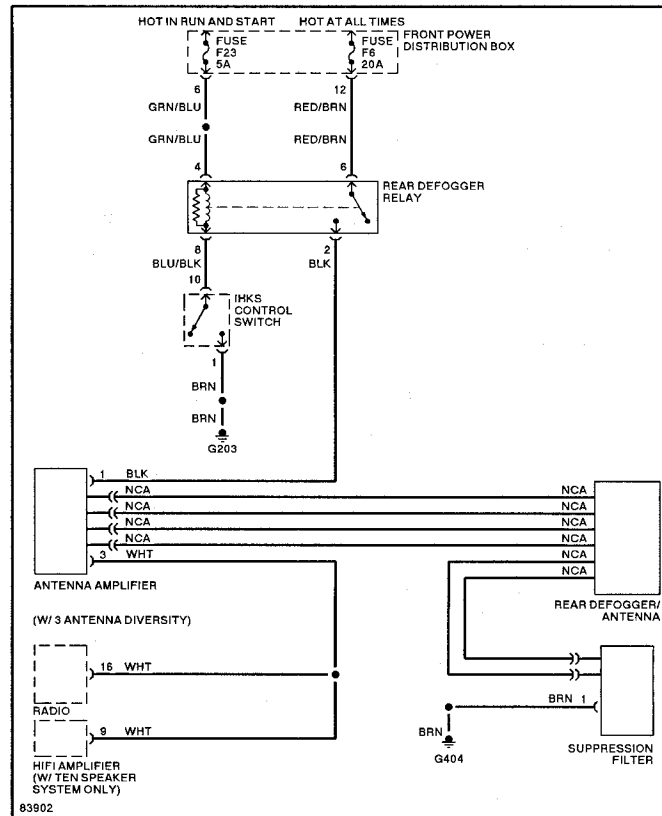

Rear Window Defogger

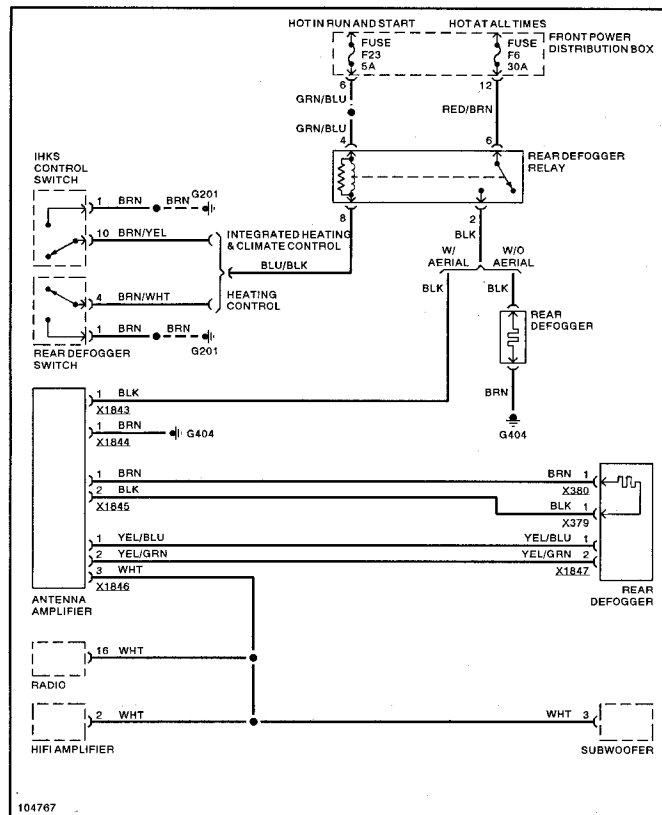


**1998
318ti**

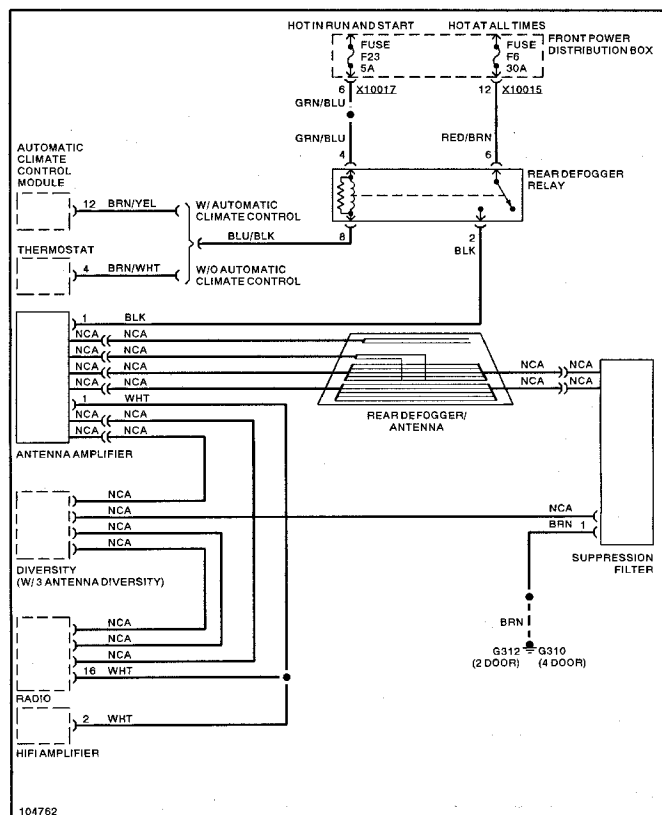

**1998
Except 318ti &
Convertible**


Rear Window Defogger 1998 Convertible

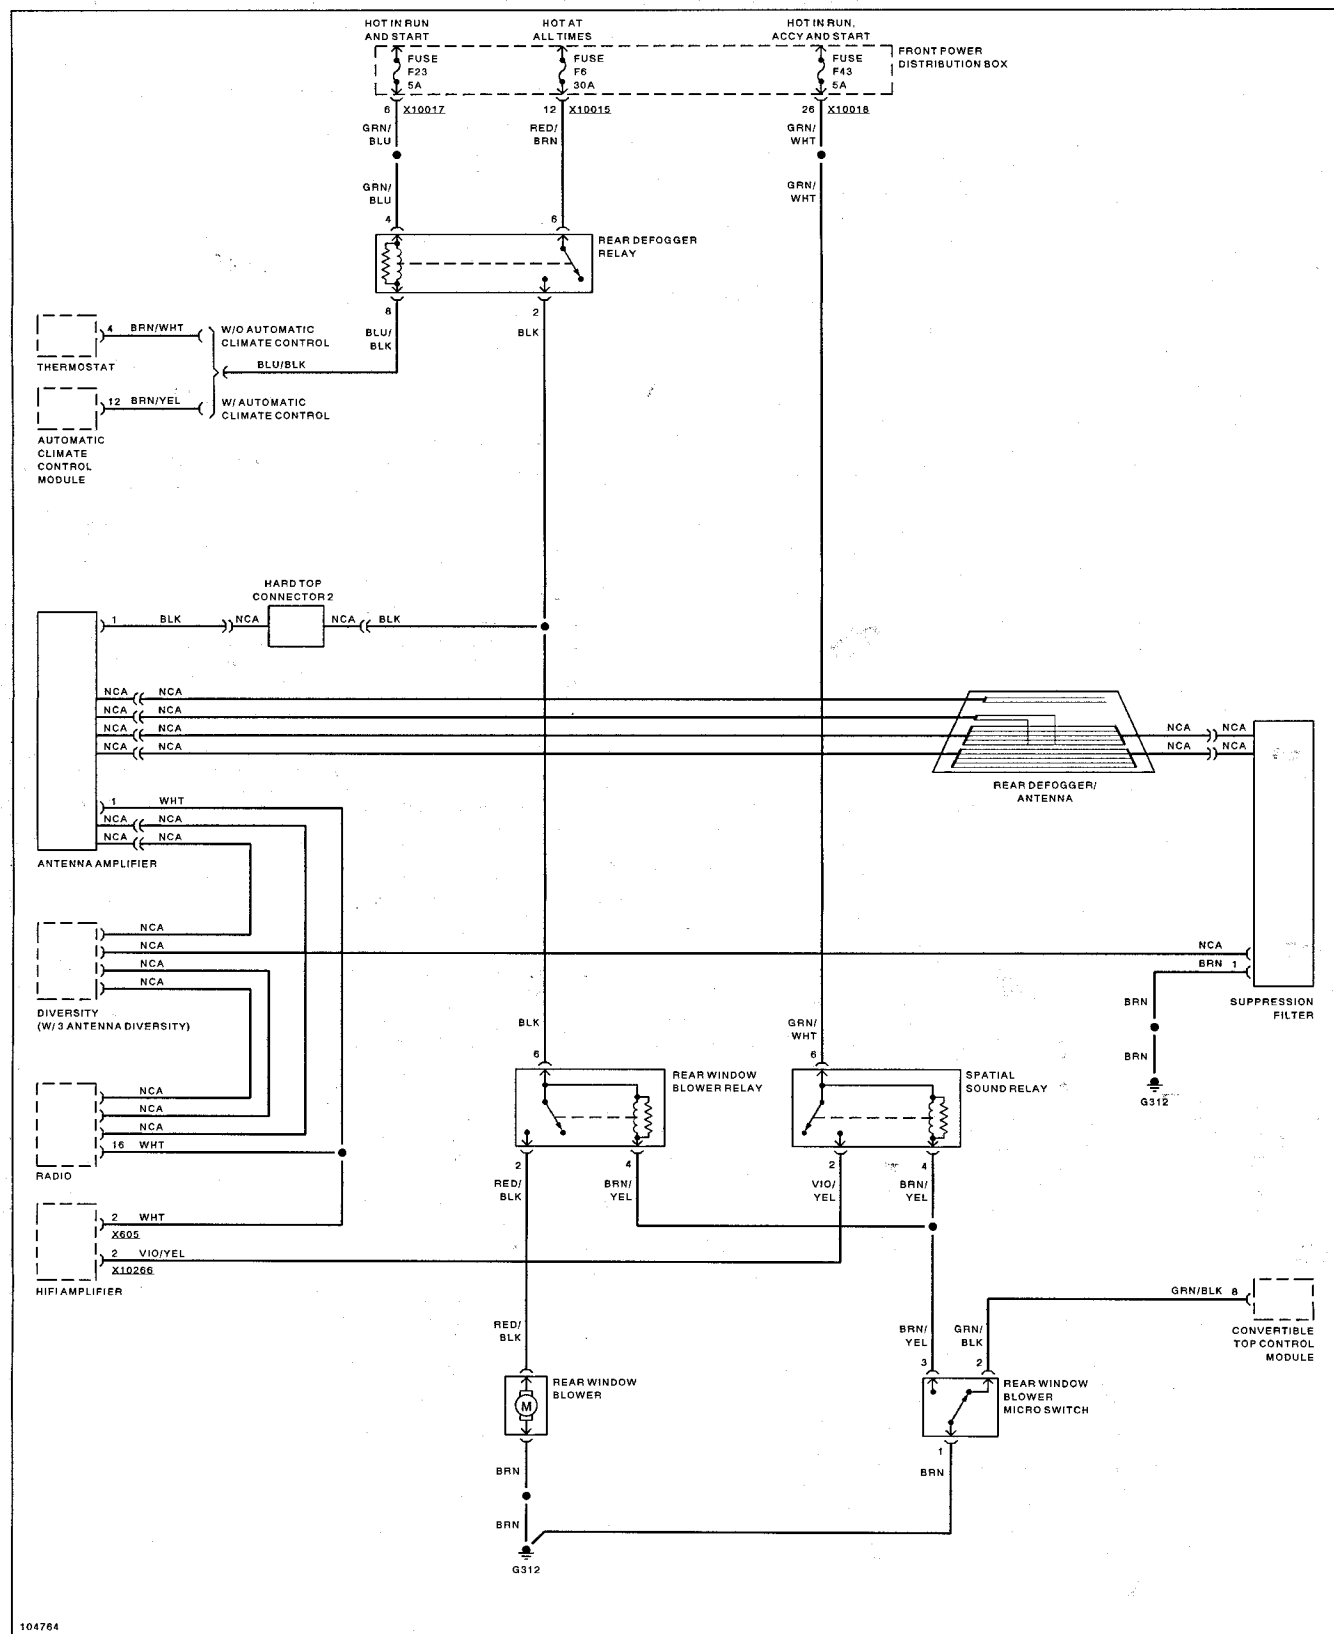

Instrument Panel


1992-97 Except 318ti (1 of 2)



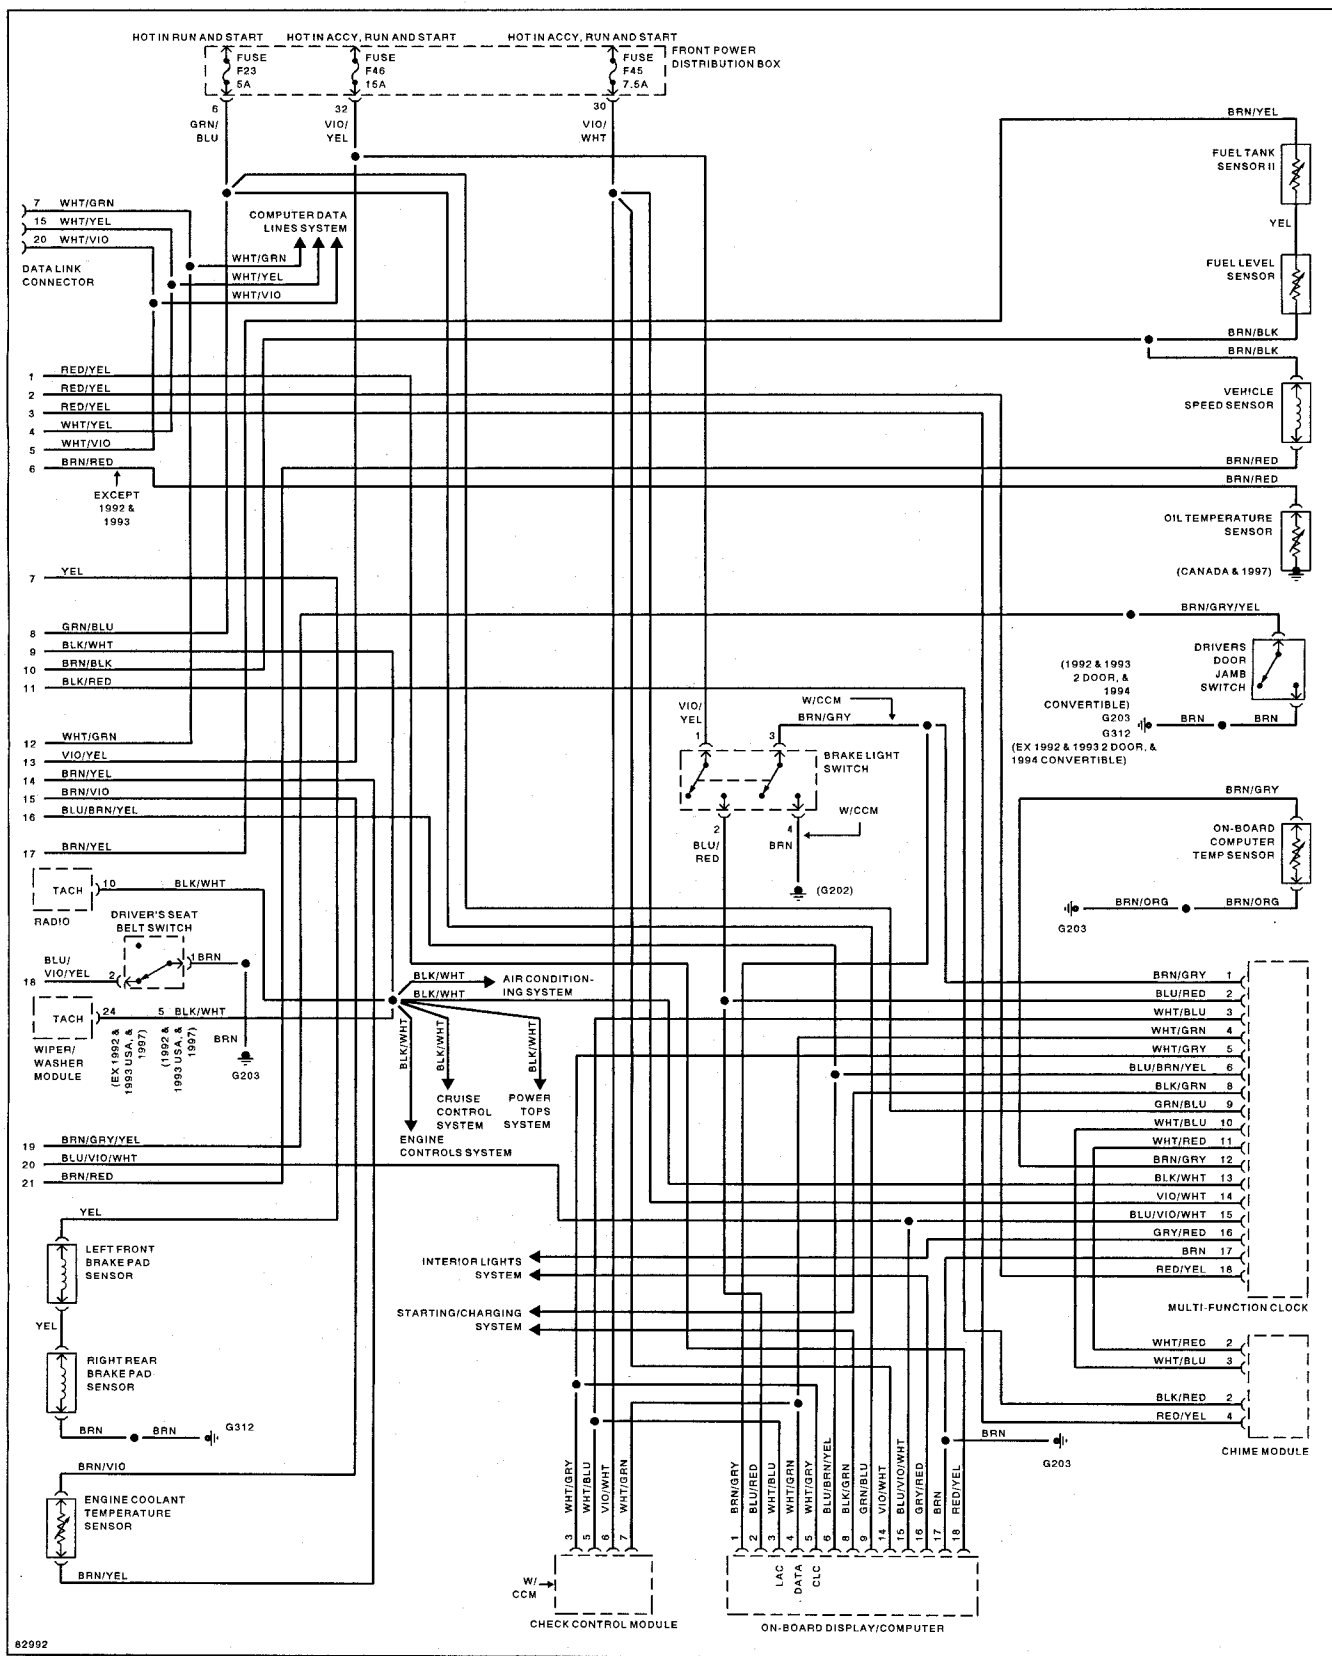


Instrument Panel

1998 Except 318ti (1 of 2)

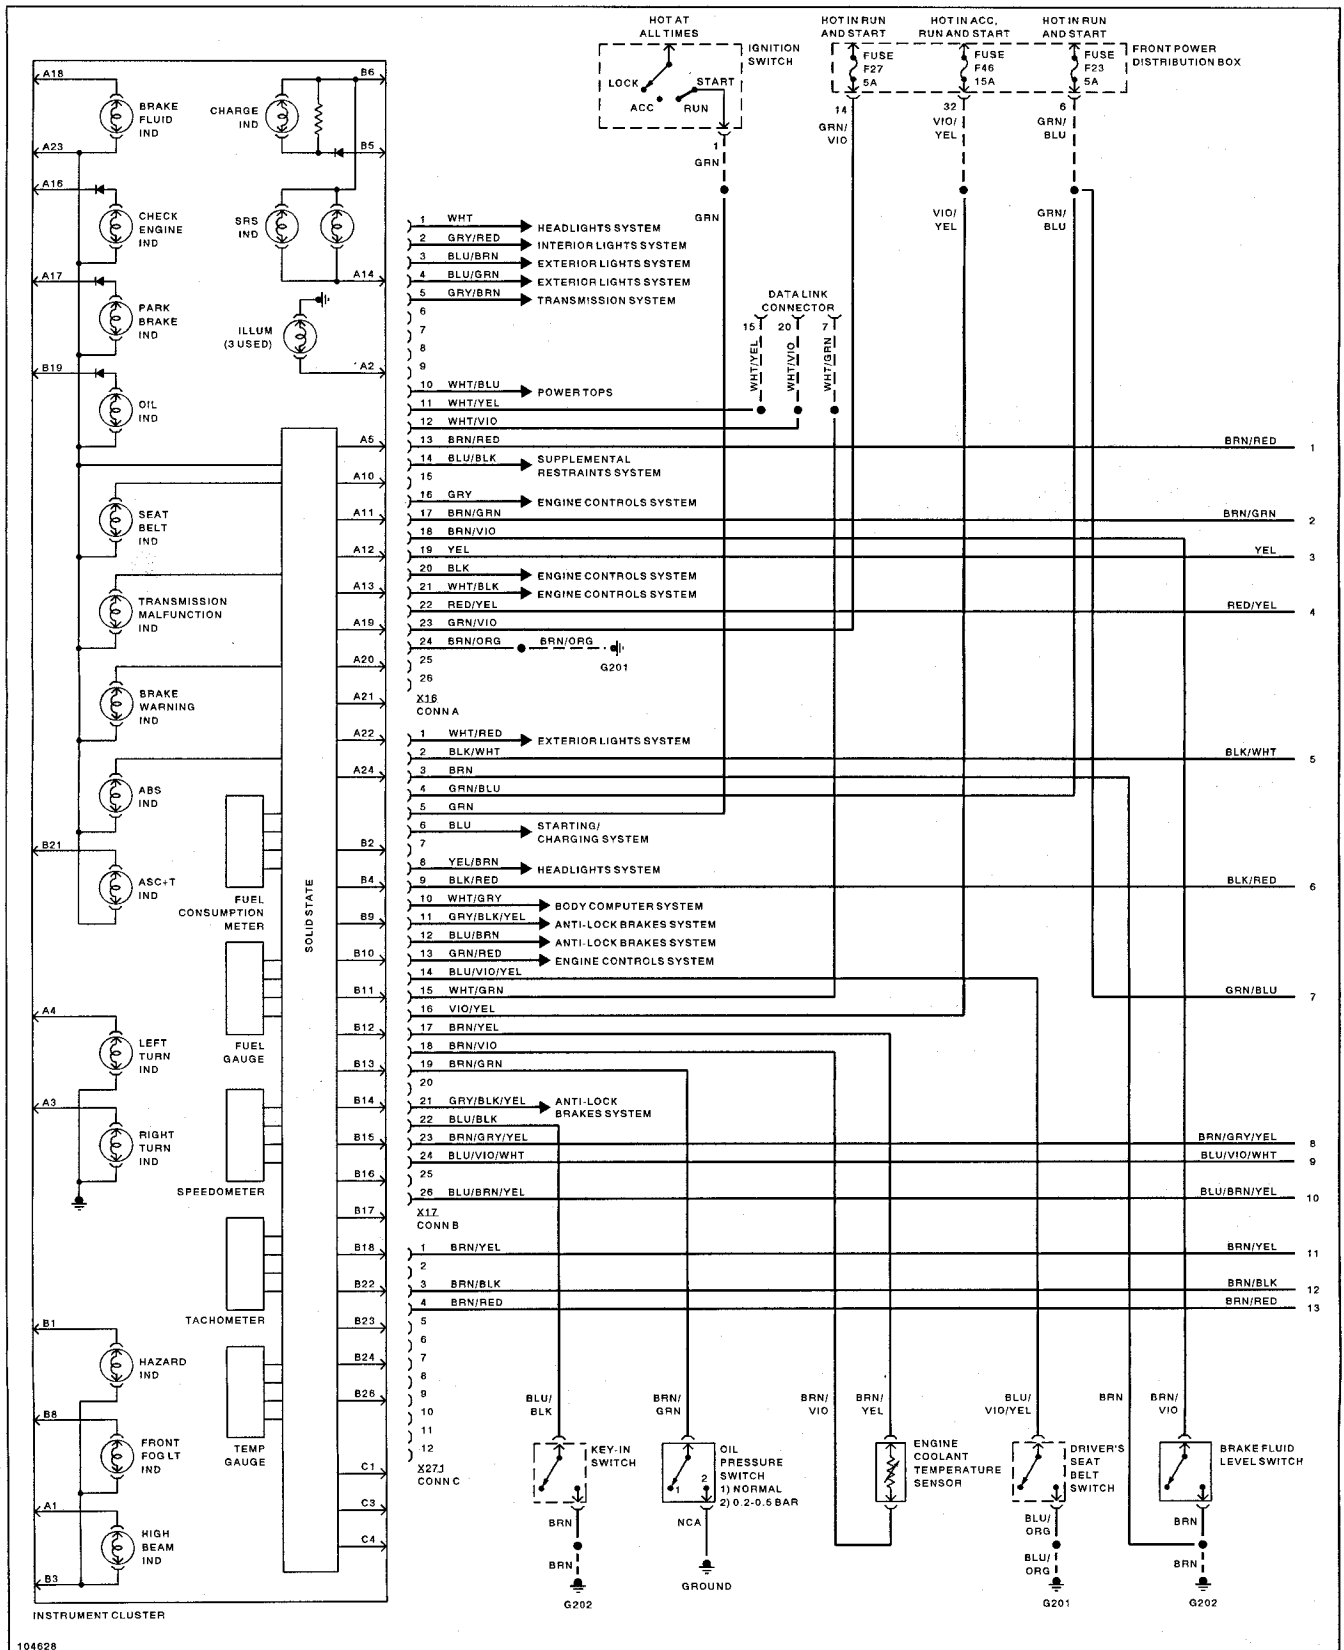


Instrument Panel

1998 Except 318ti (2 of 2)

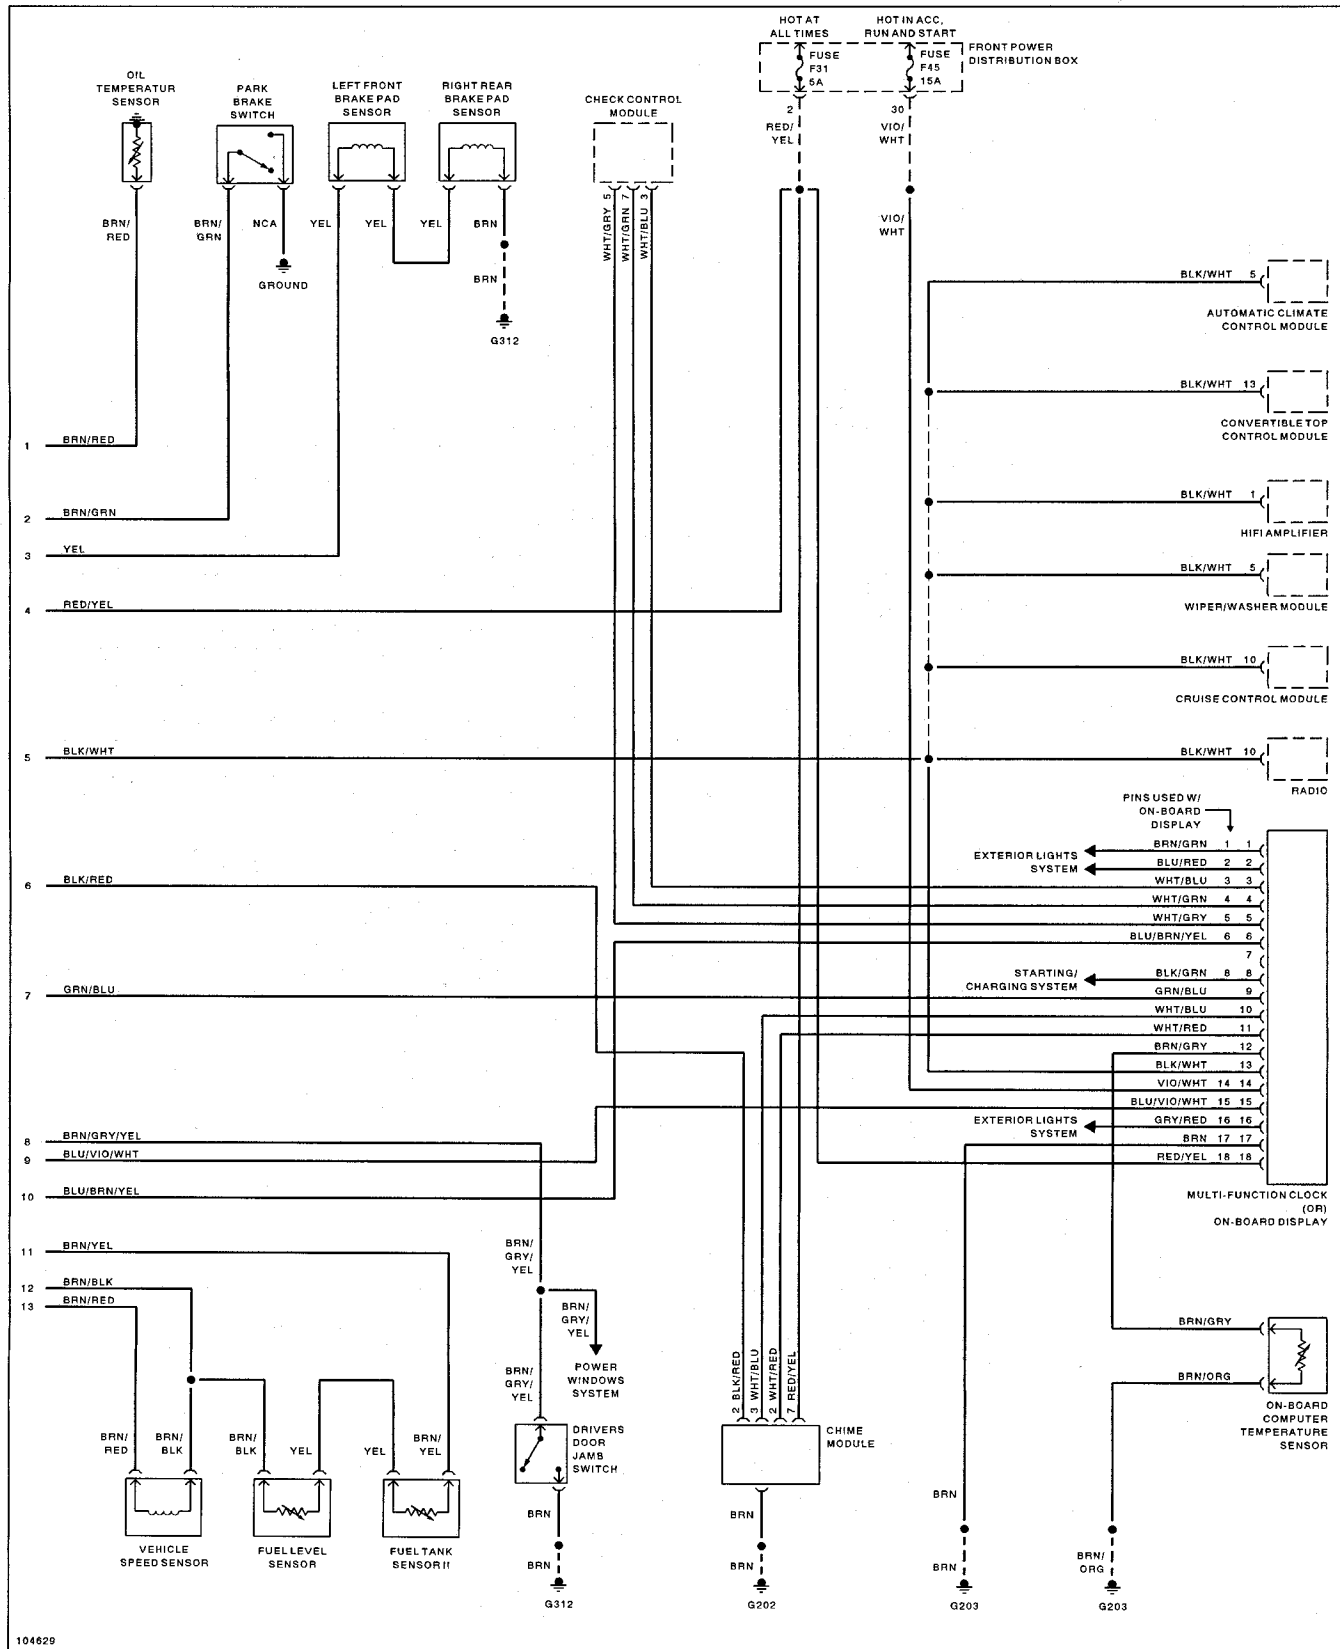


Instrument Panel

1995-97 318ti (1 of 2)

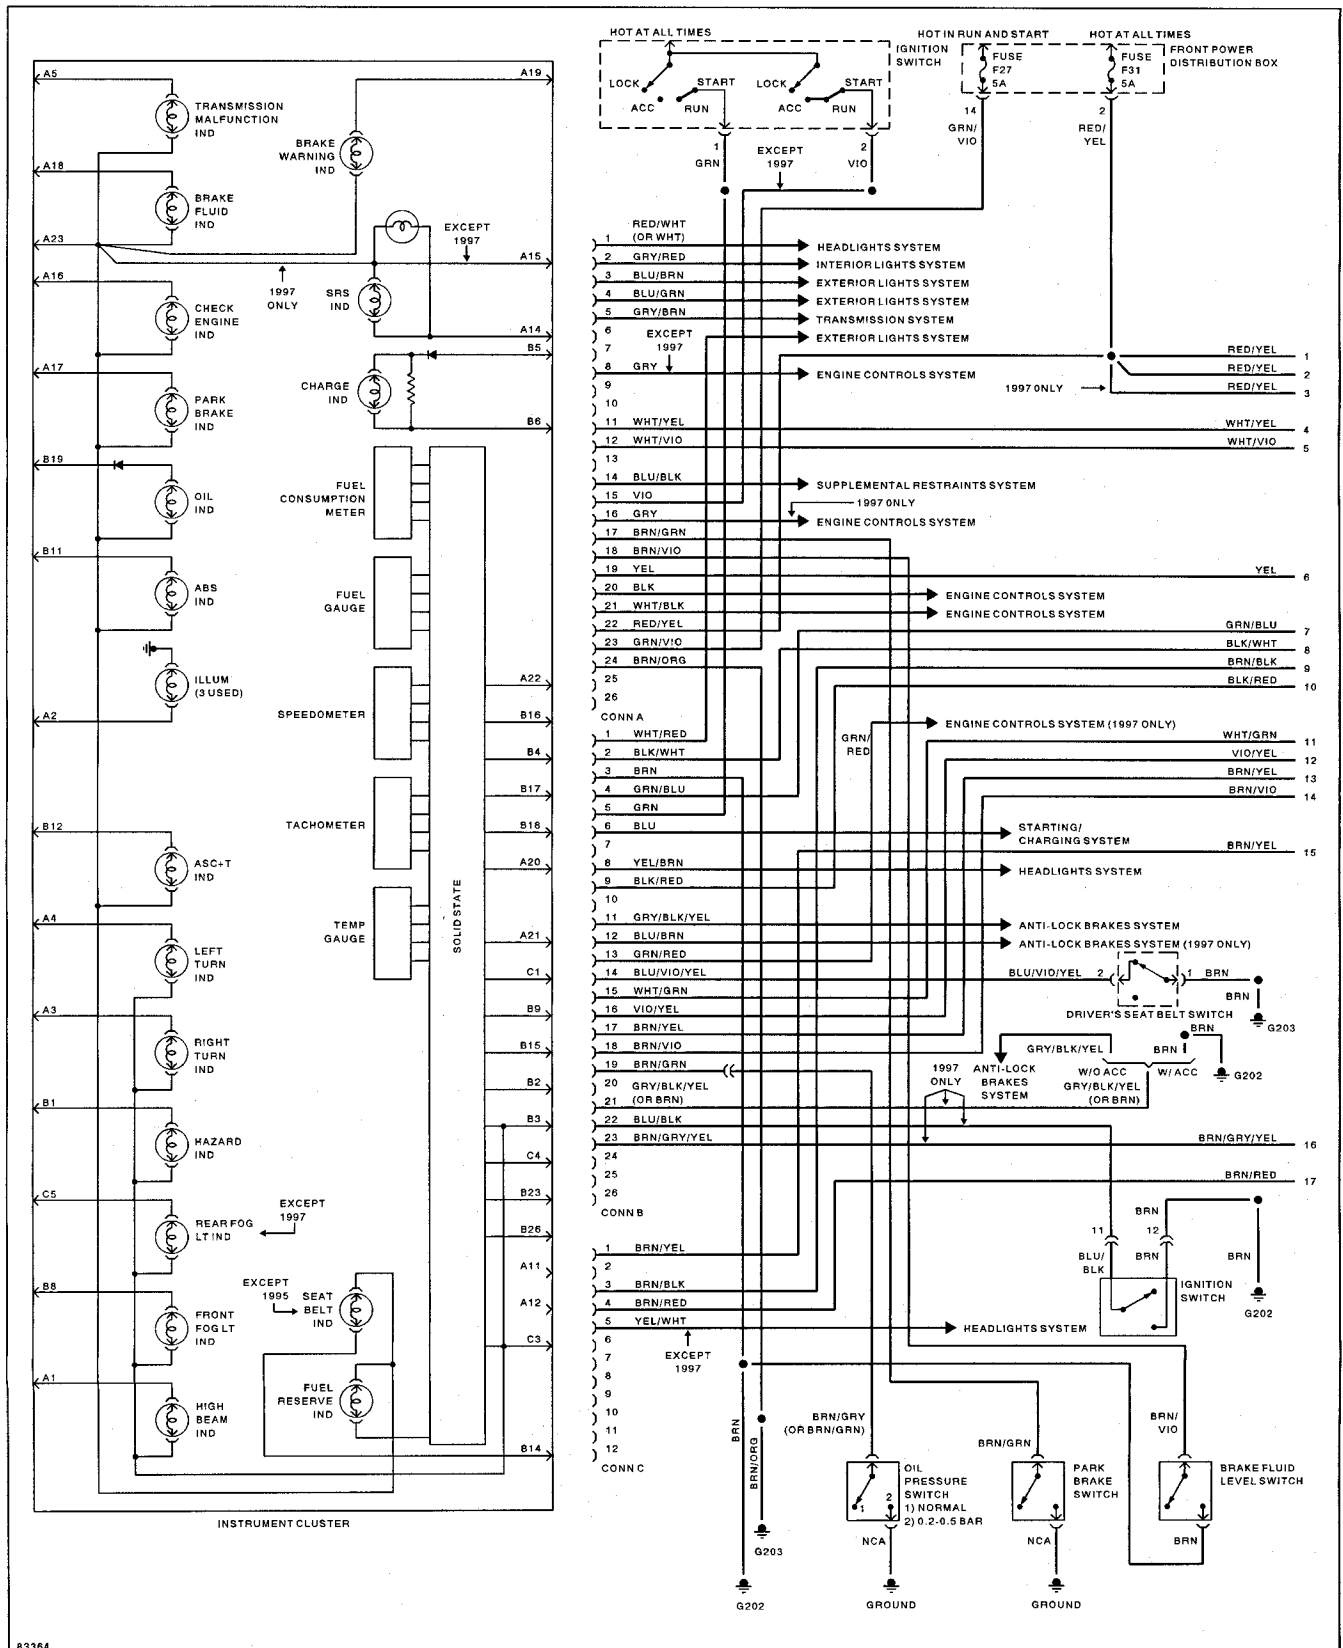


Instrument Panel

1995-97 318ti (2 of 2)

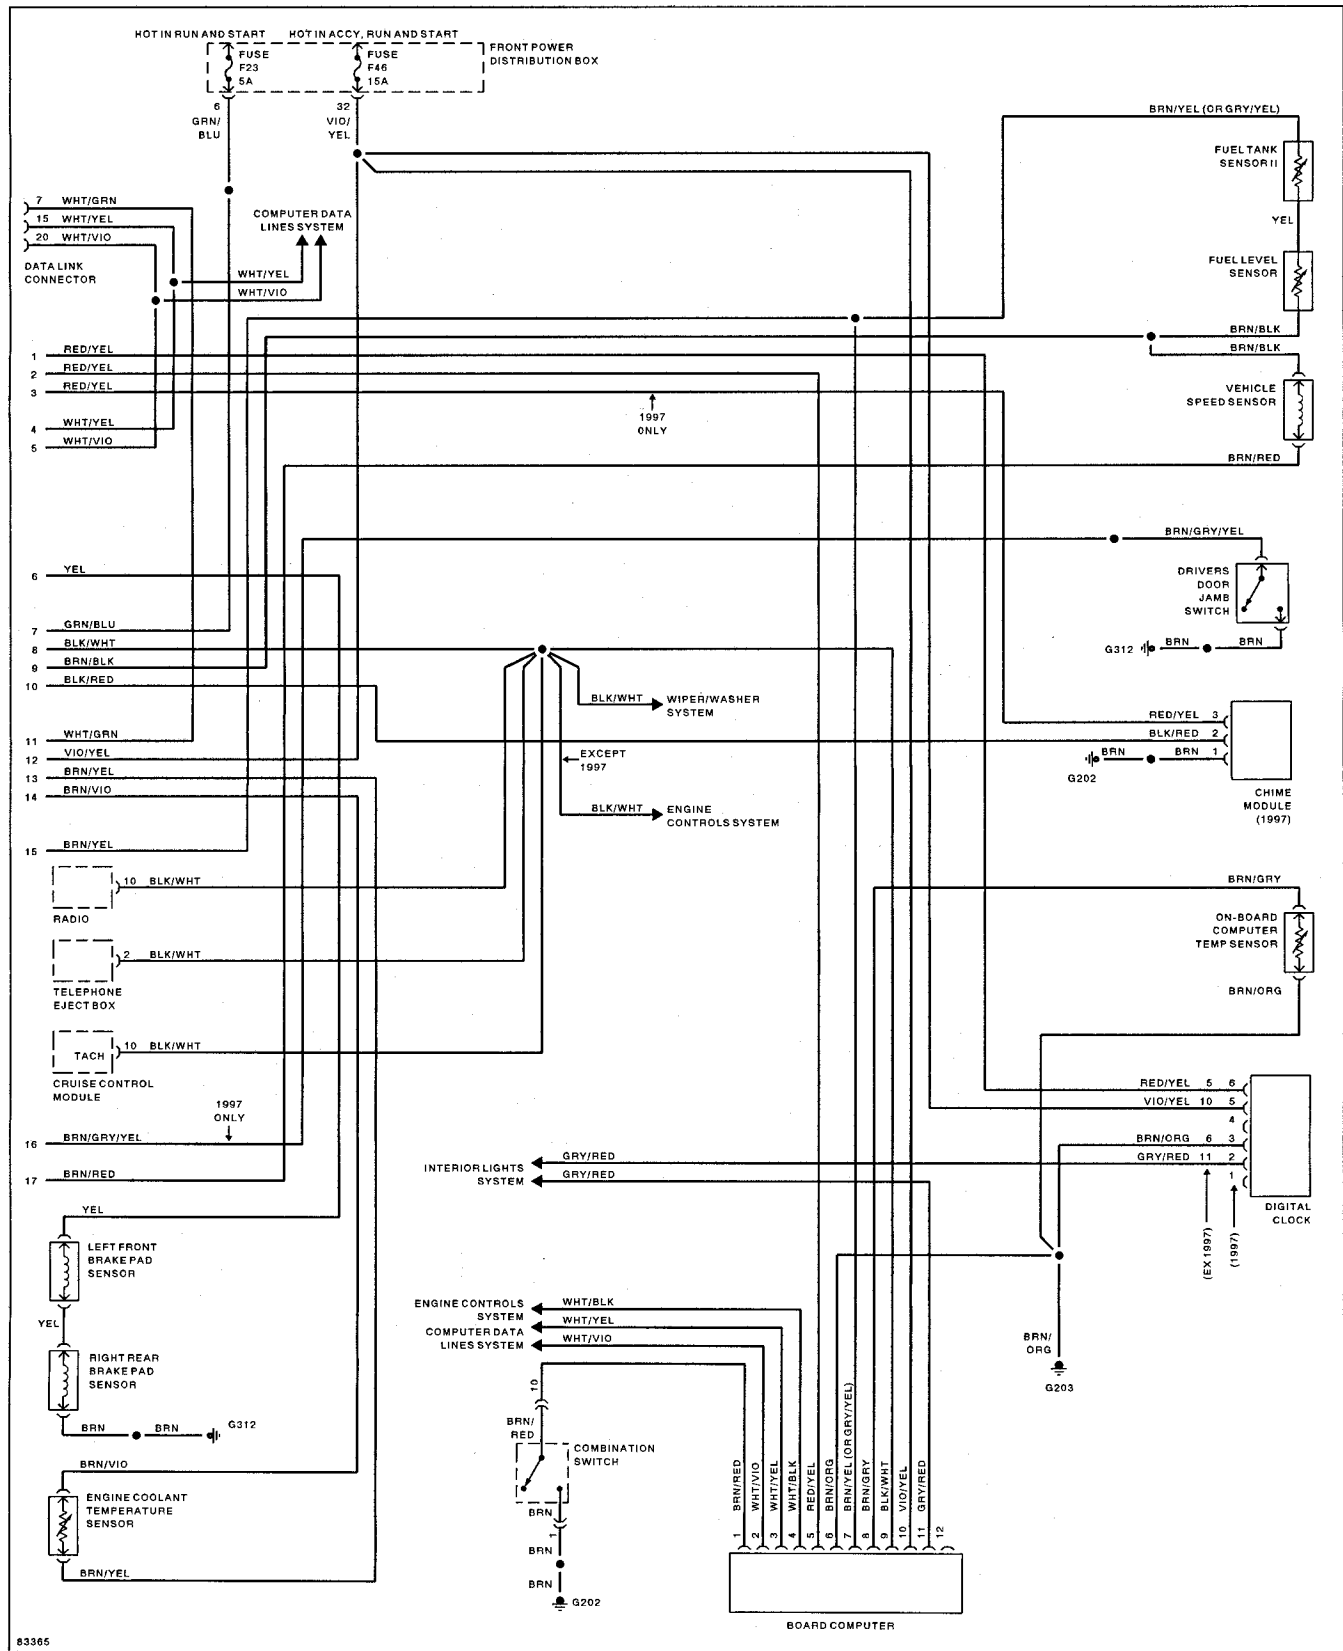


Instrument Panel

1998 318ti (1 of 2)

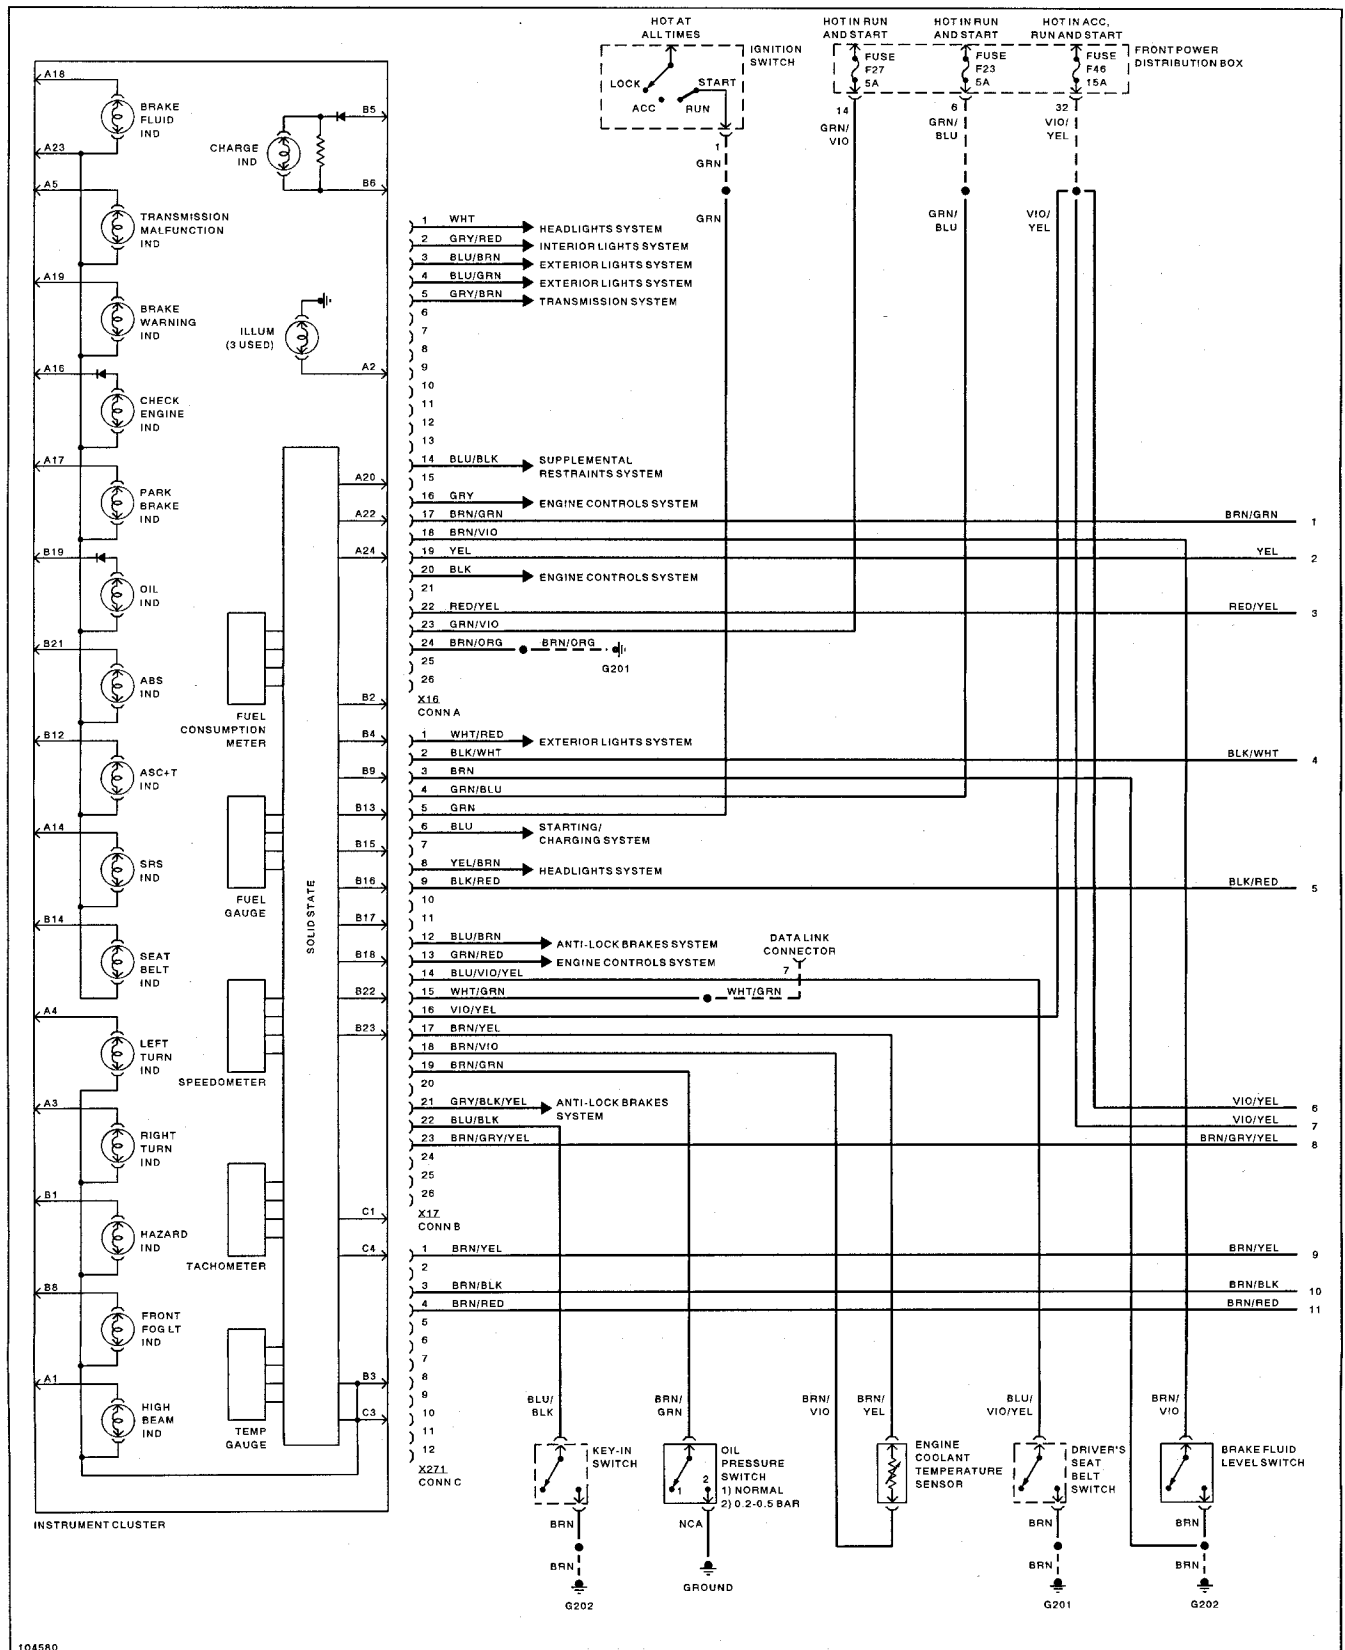


Instrument Panel
1998 318ti (2 of 2)

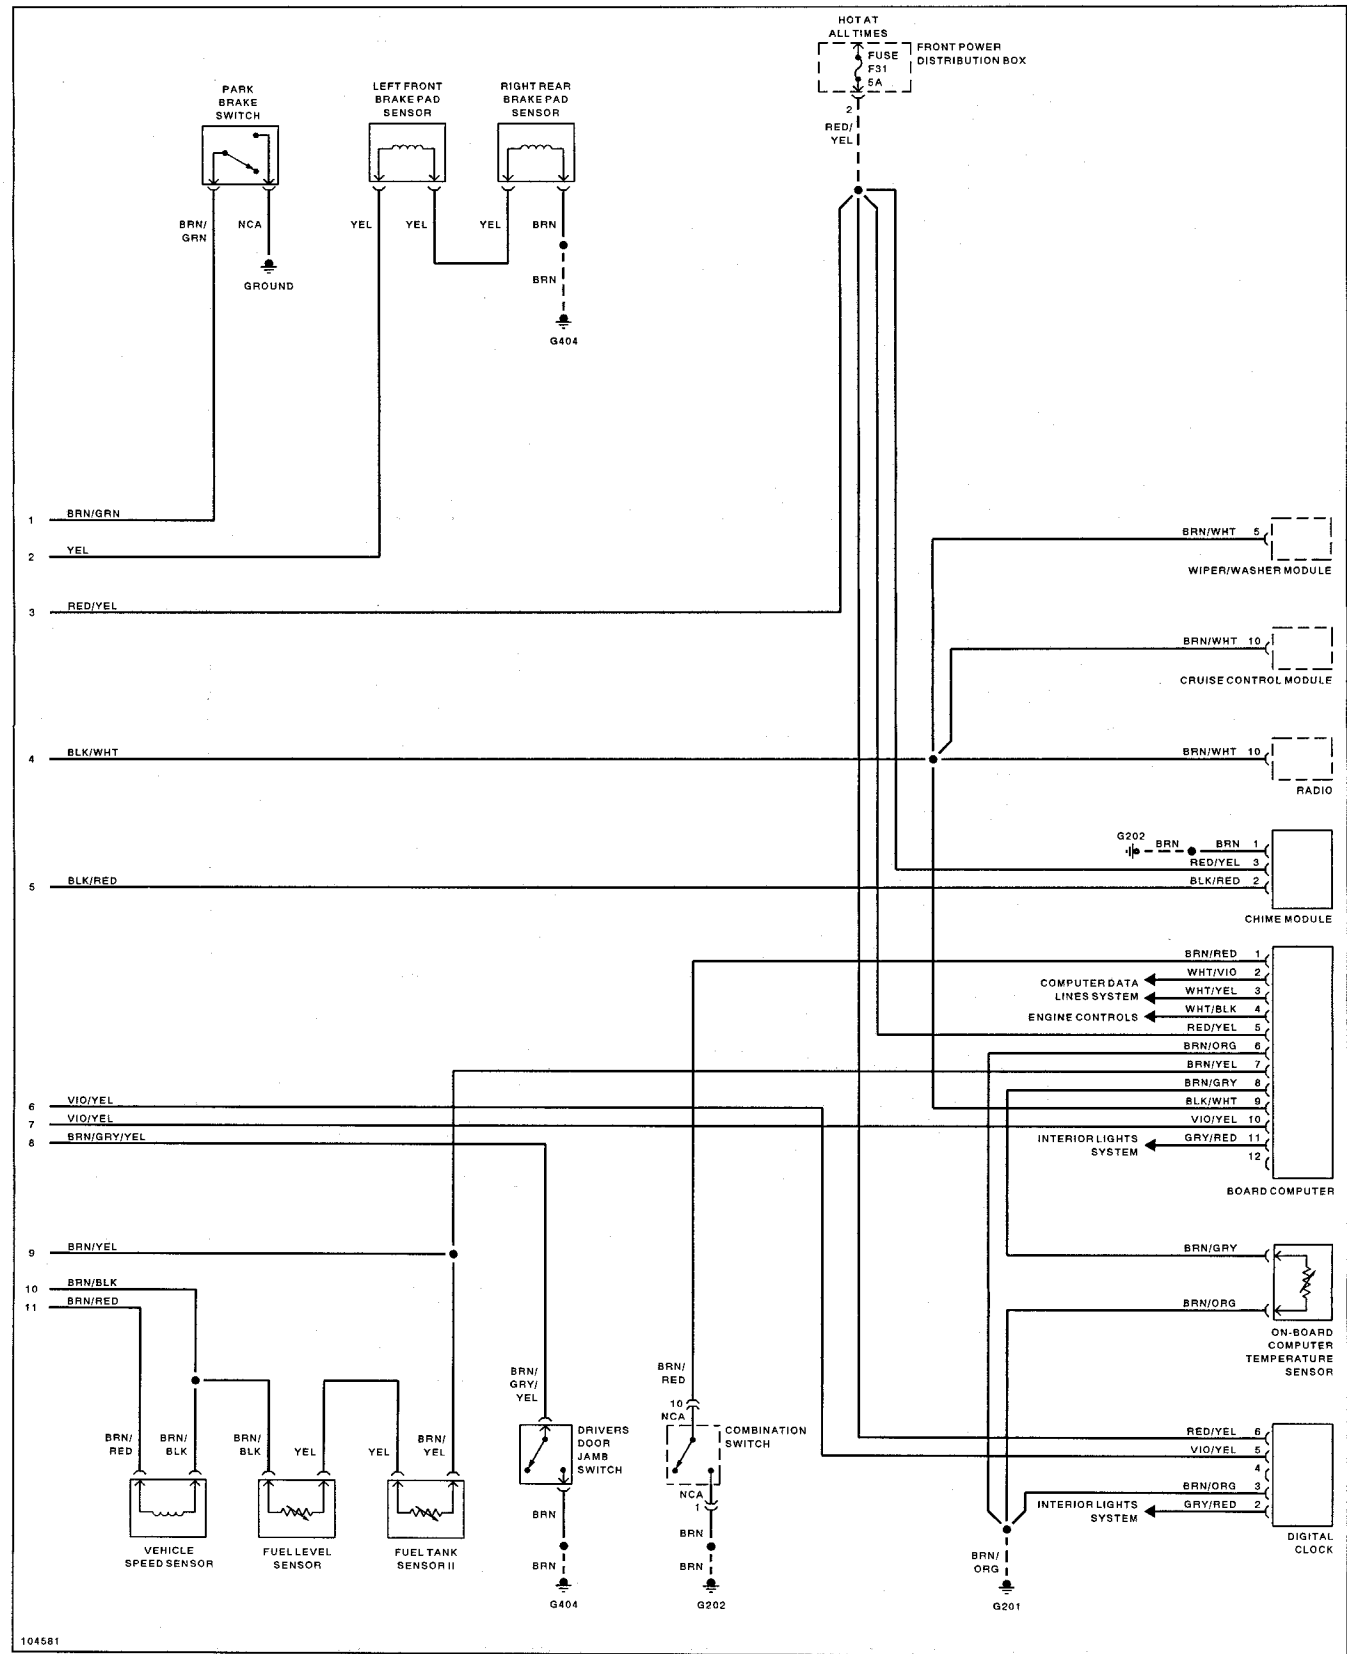


On-Board Computer

1995-98 318ti

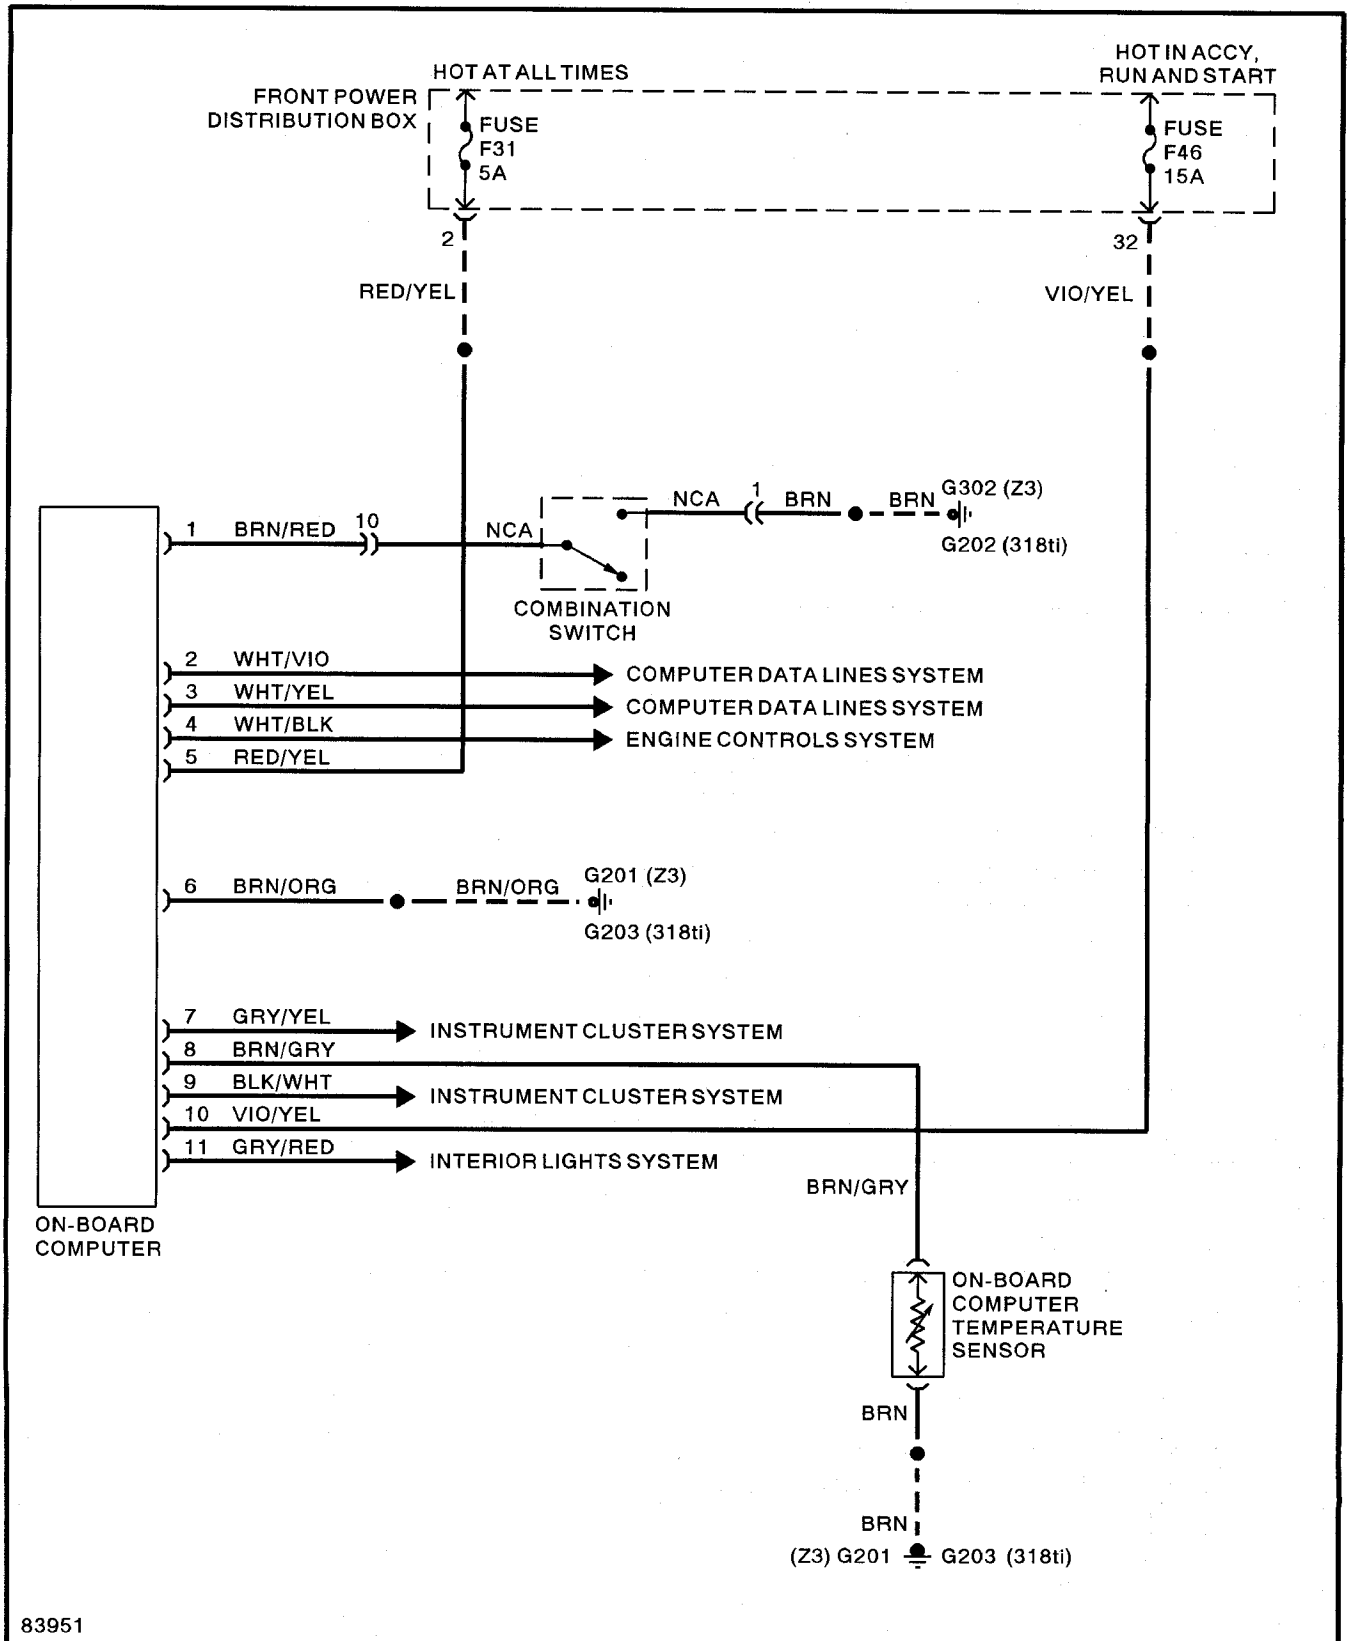


On-Board Computer 1992-97 Except 318ti

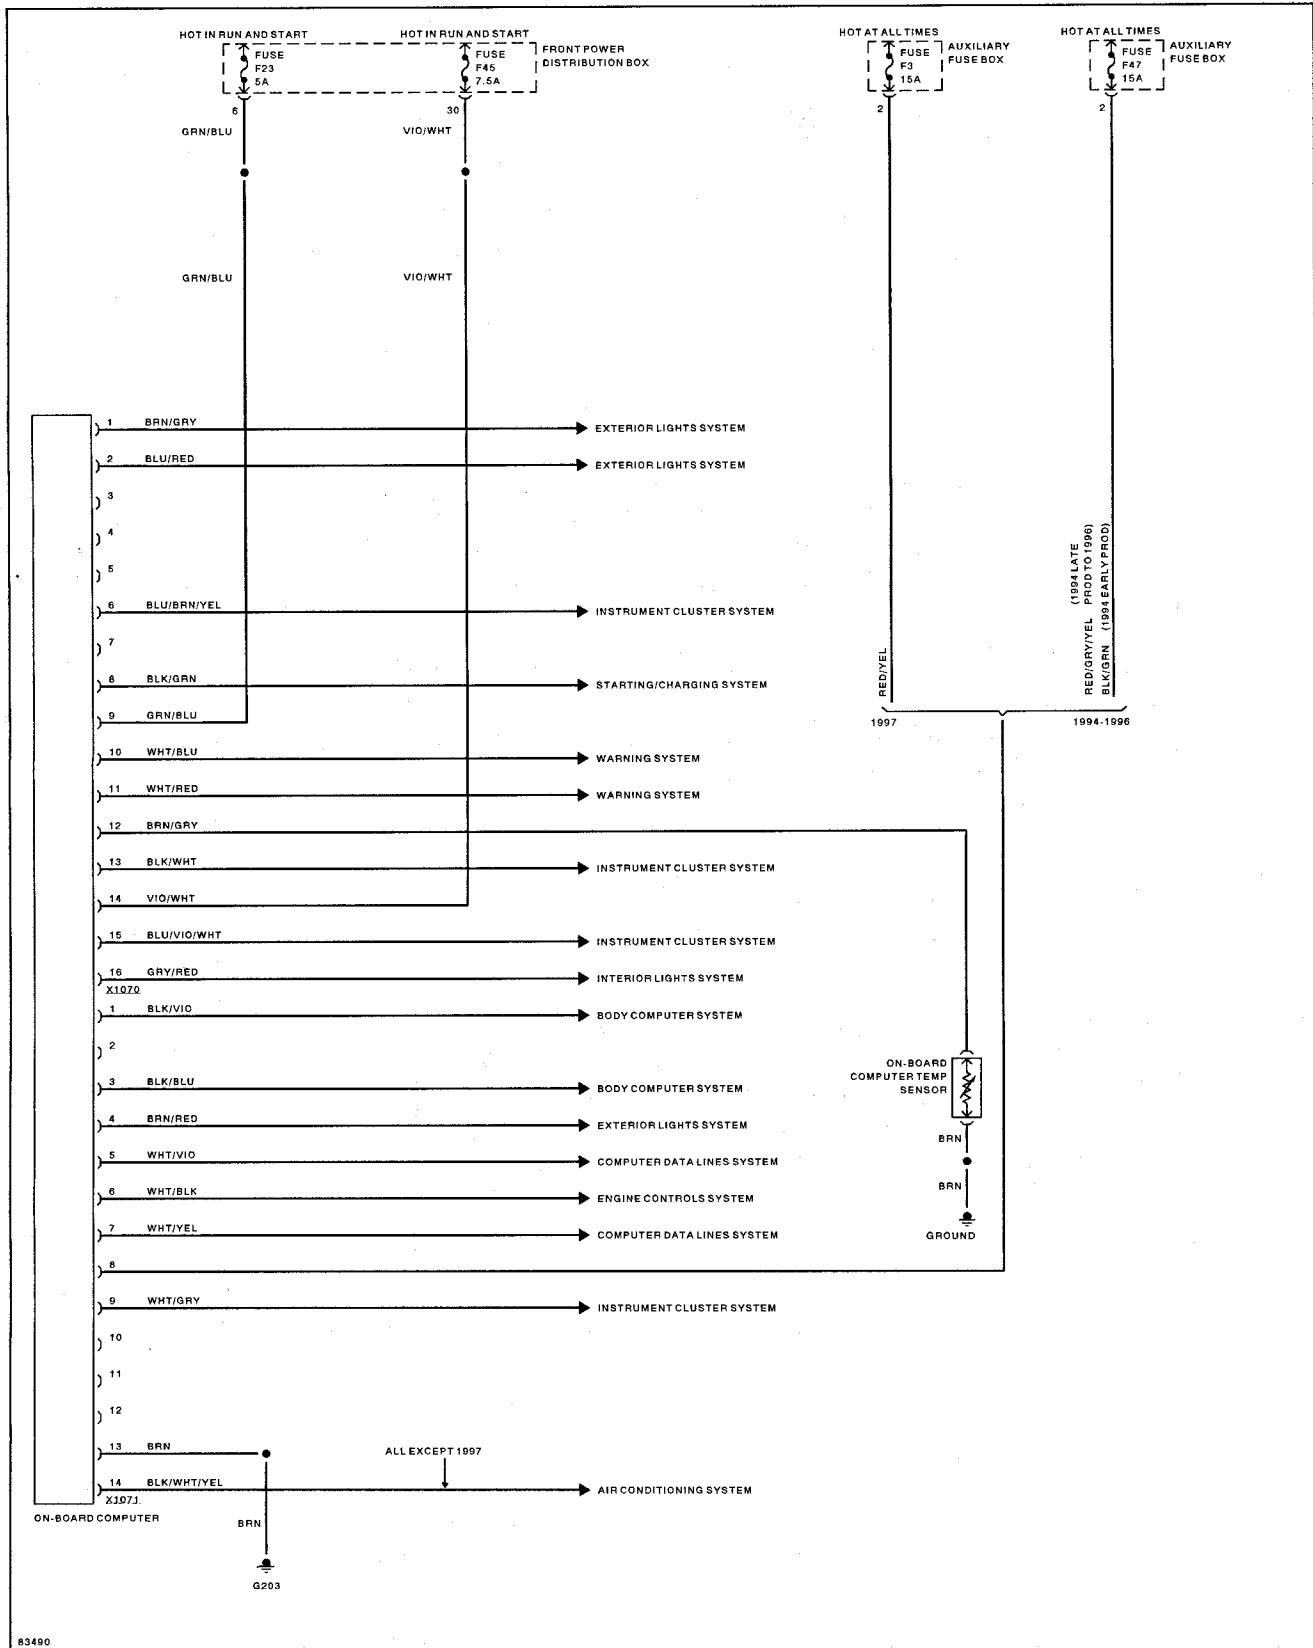


On-Board Computer

1998 Except 318ti

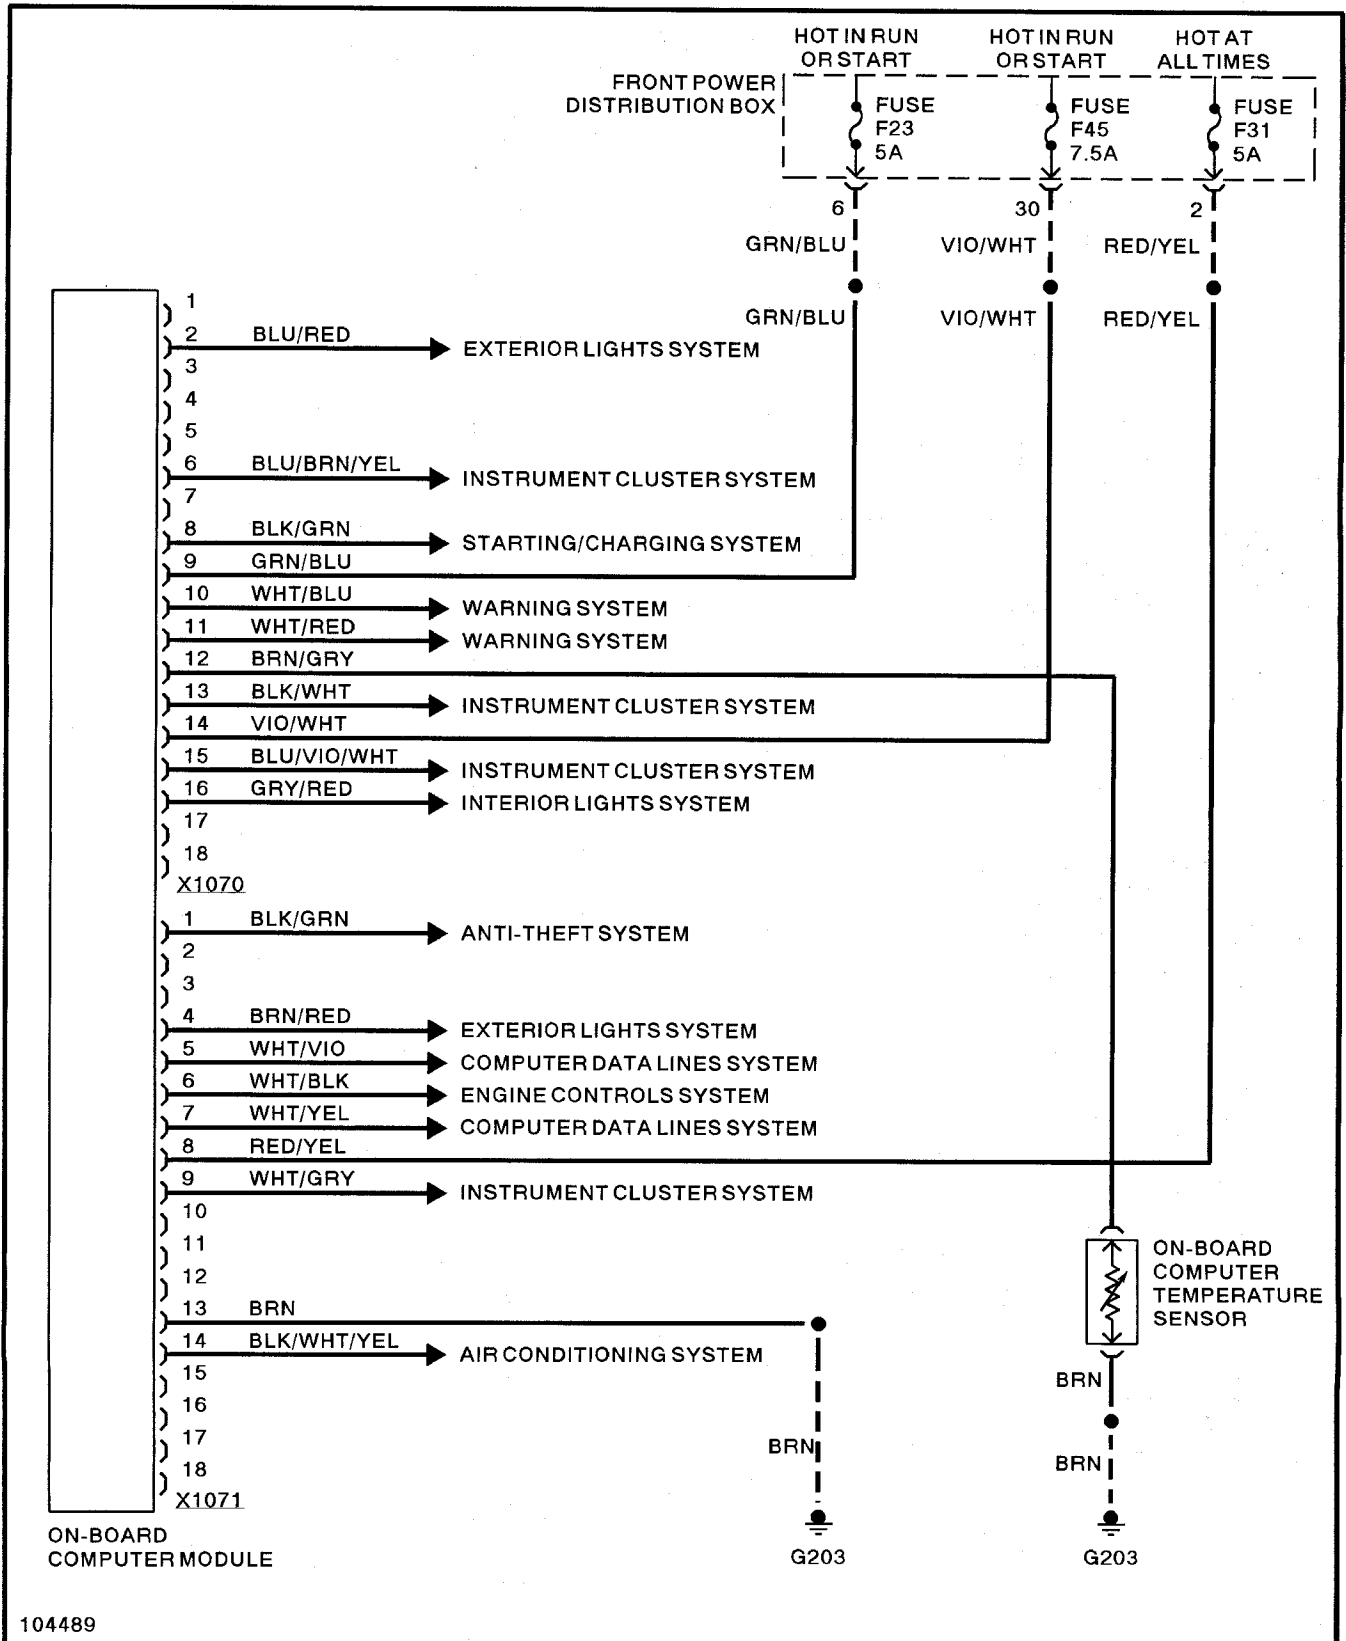


Body Computer Module

1996-98 318ti

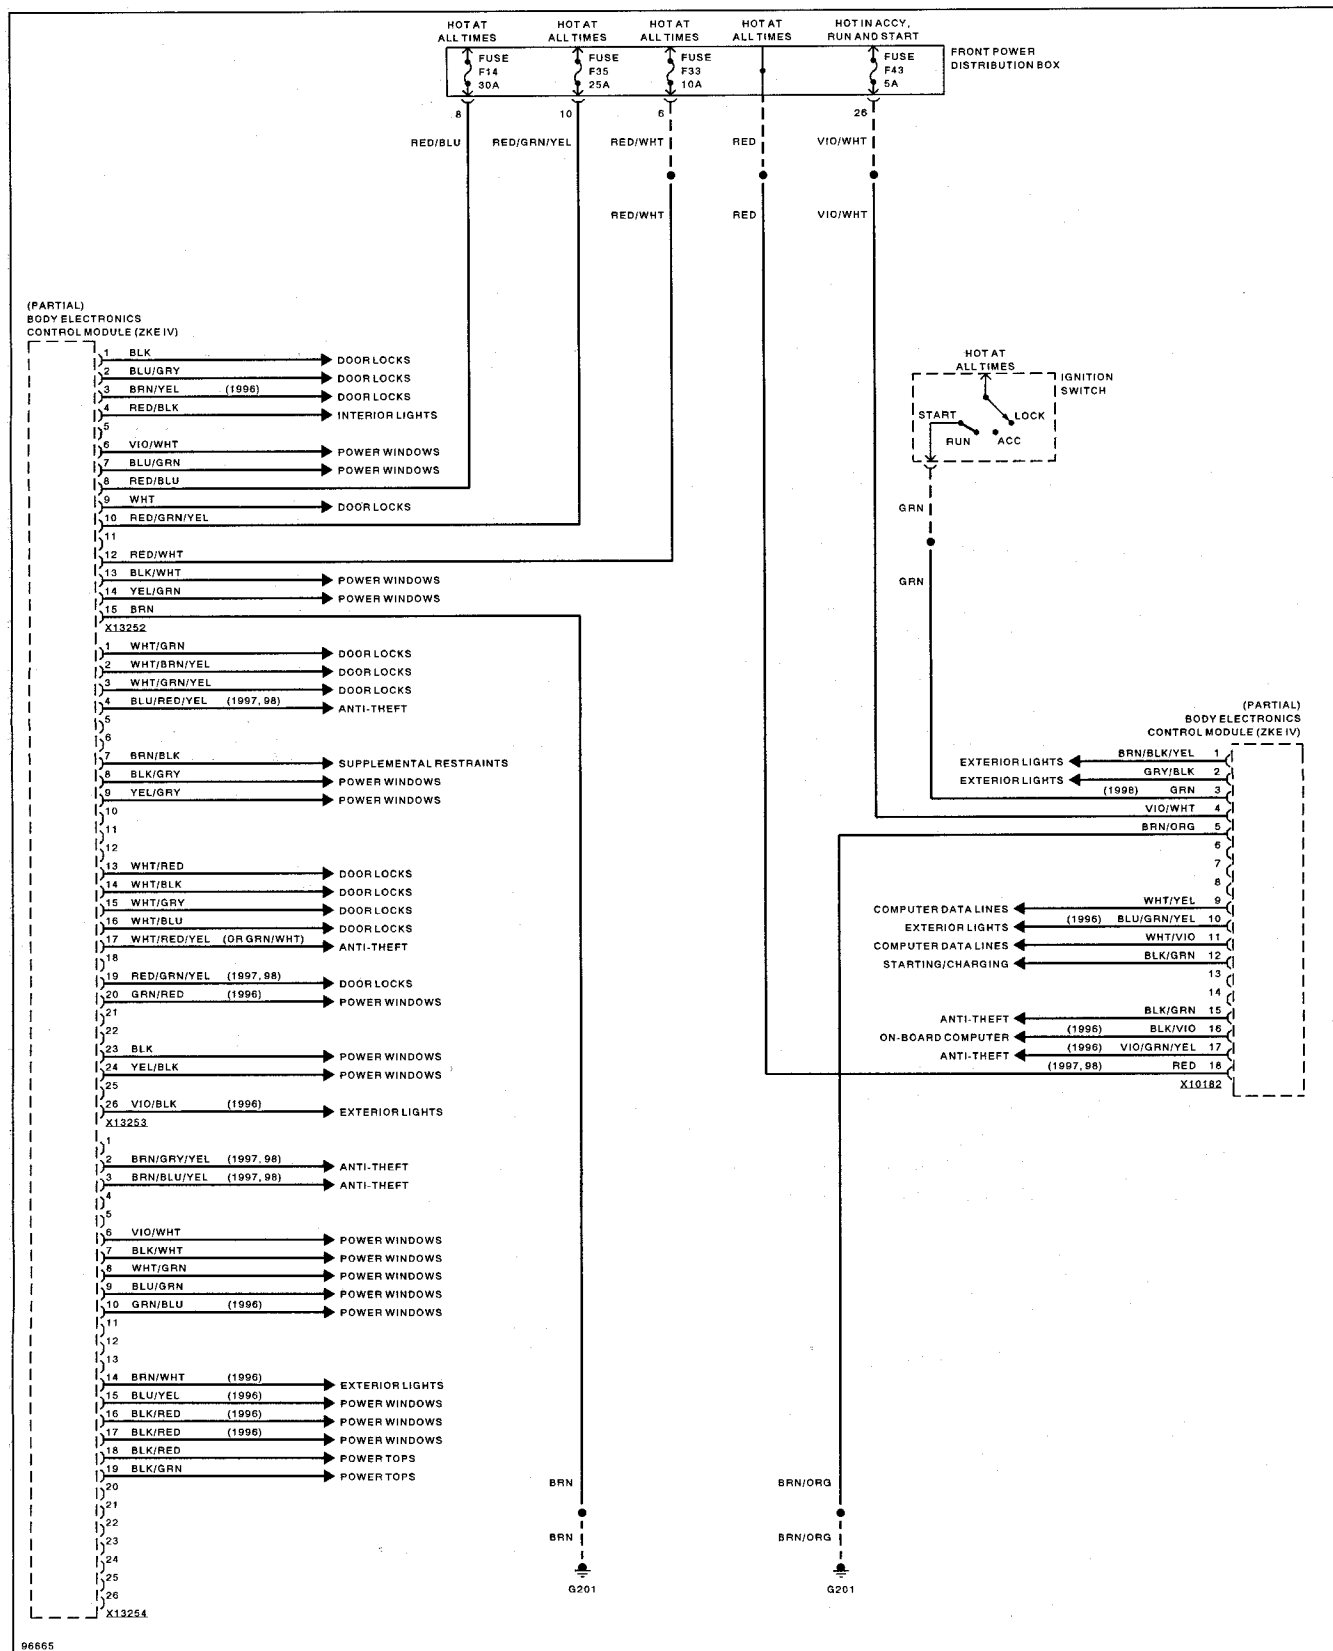


Body Computer Module


1996-98 Except 318ti

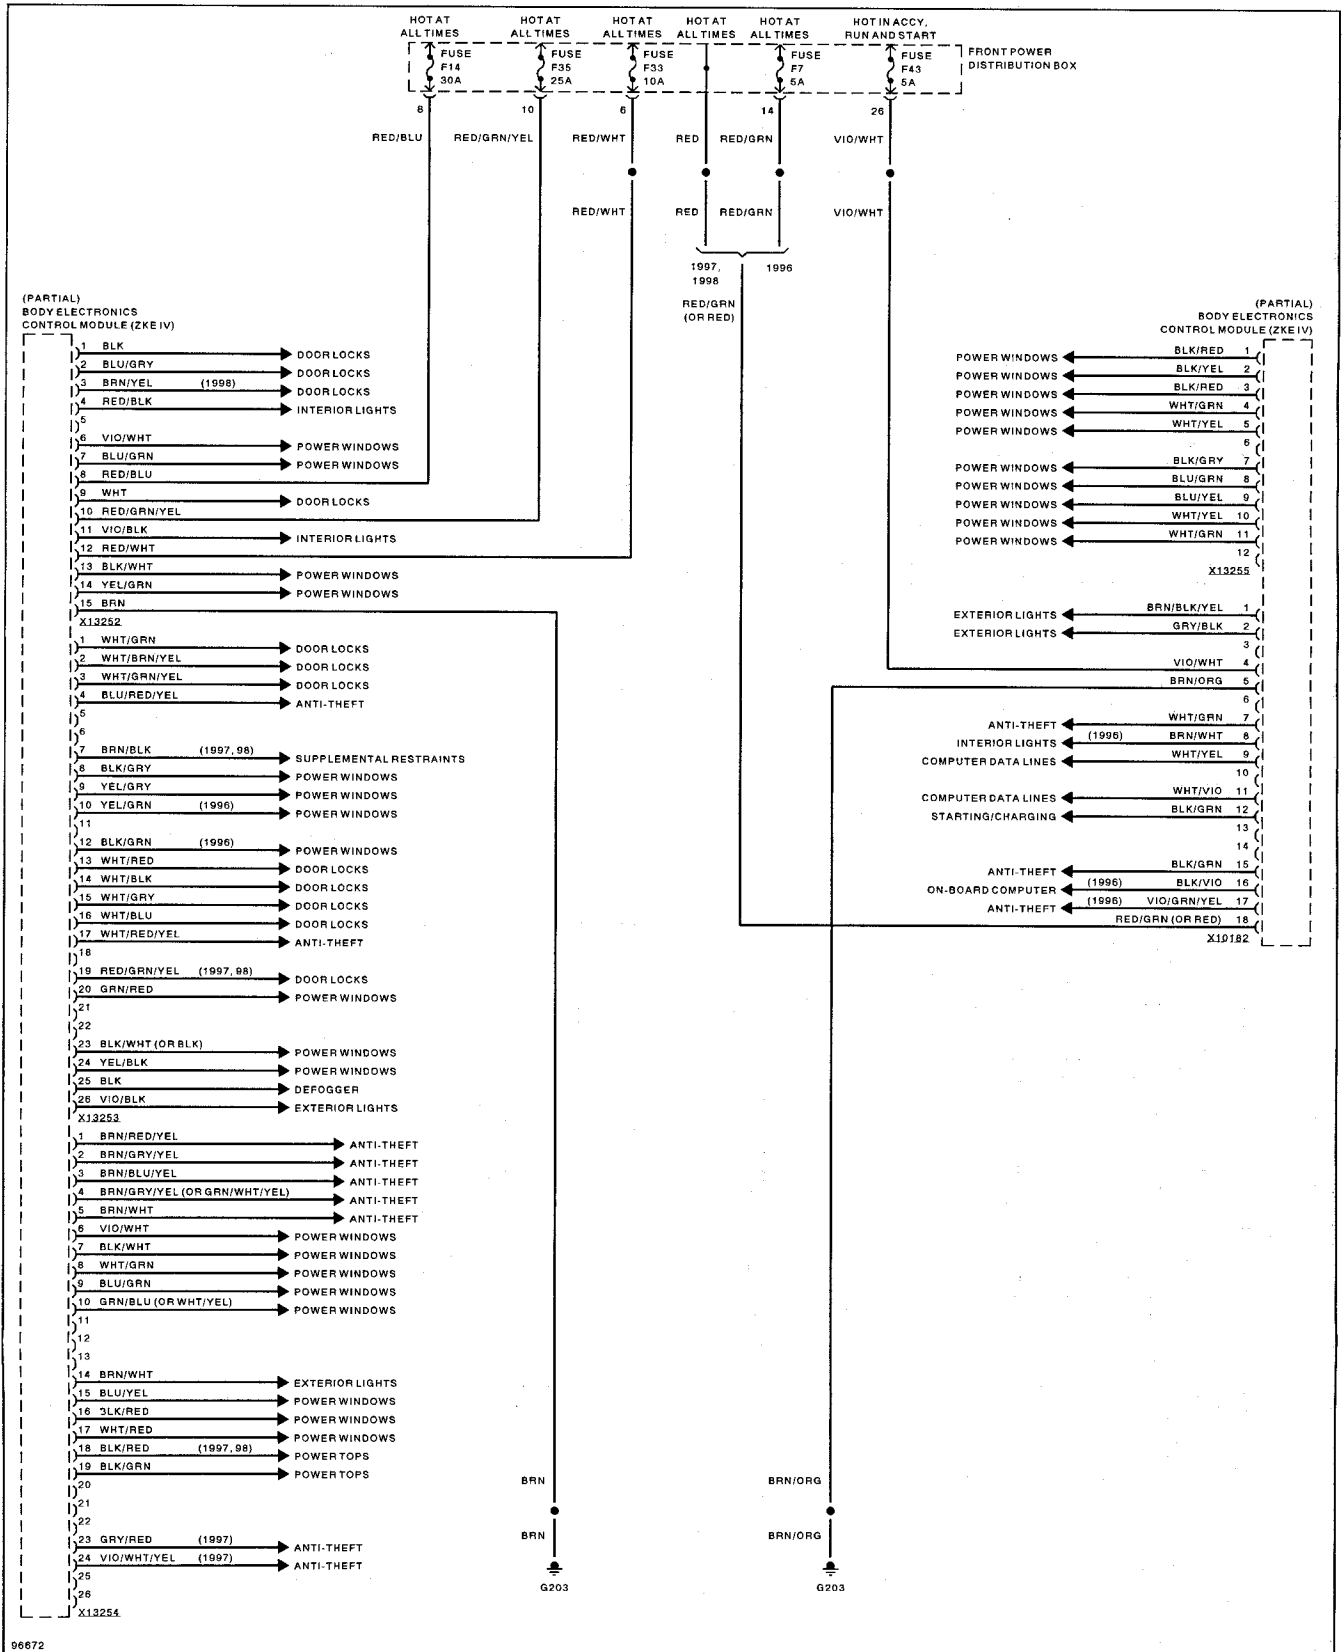

Warning System: Chimes

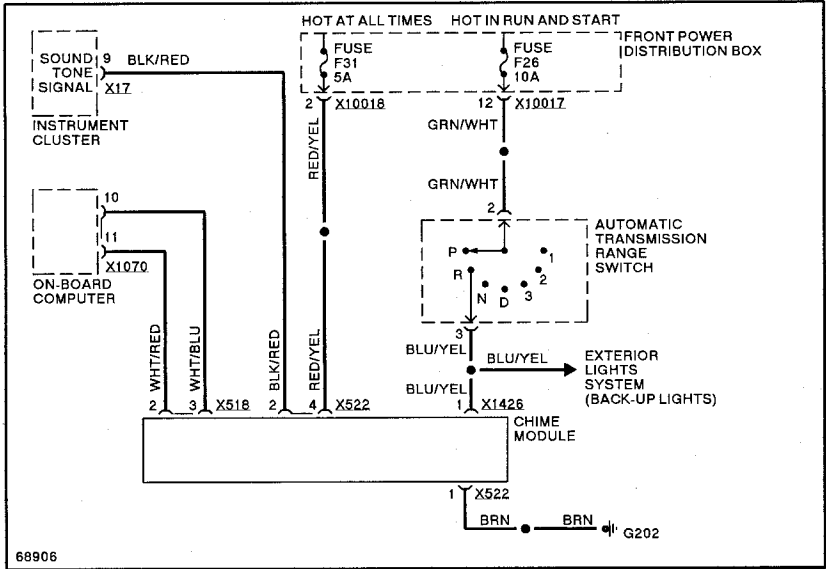


1992-97

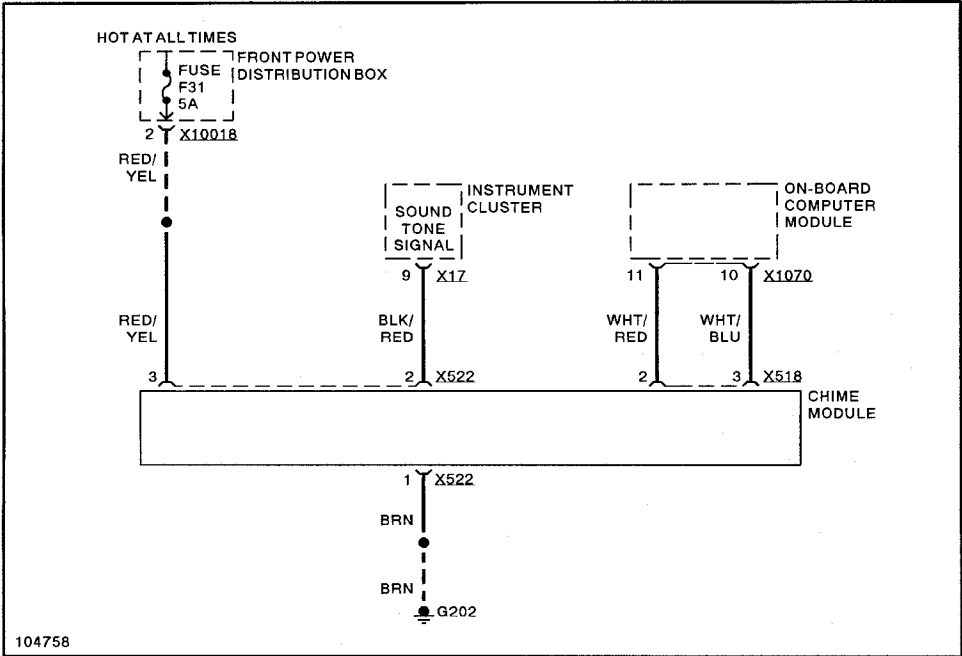

1998

Warning System: Chimes

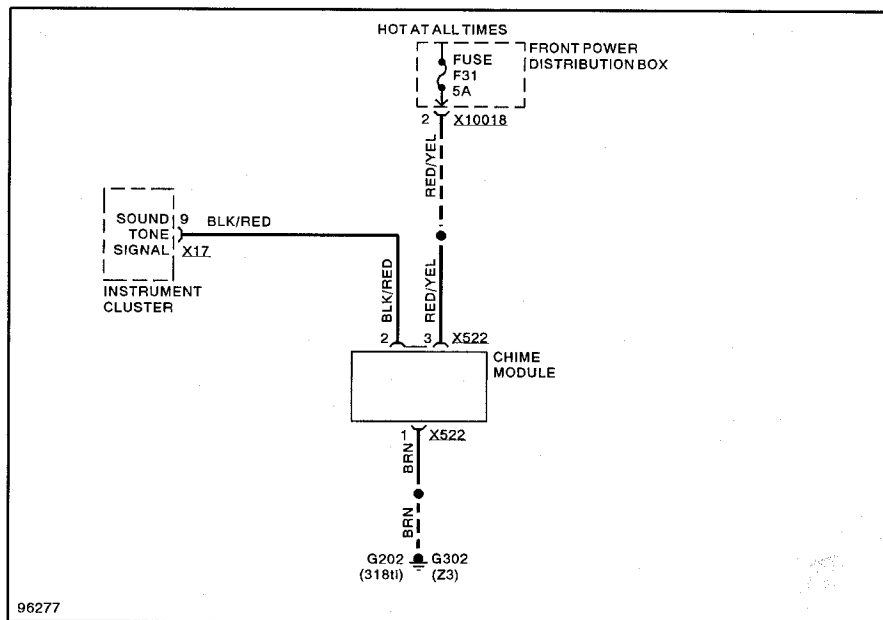

**1997-98
318ti**


Headlights/Foglights

1992-94 (Canada) (1 of 2)




Headlights/Foglights

1992-94 (Canada) (2 of 2)

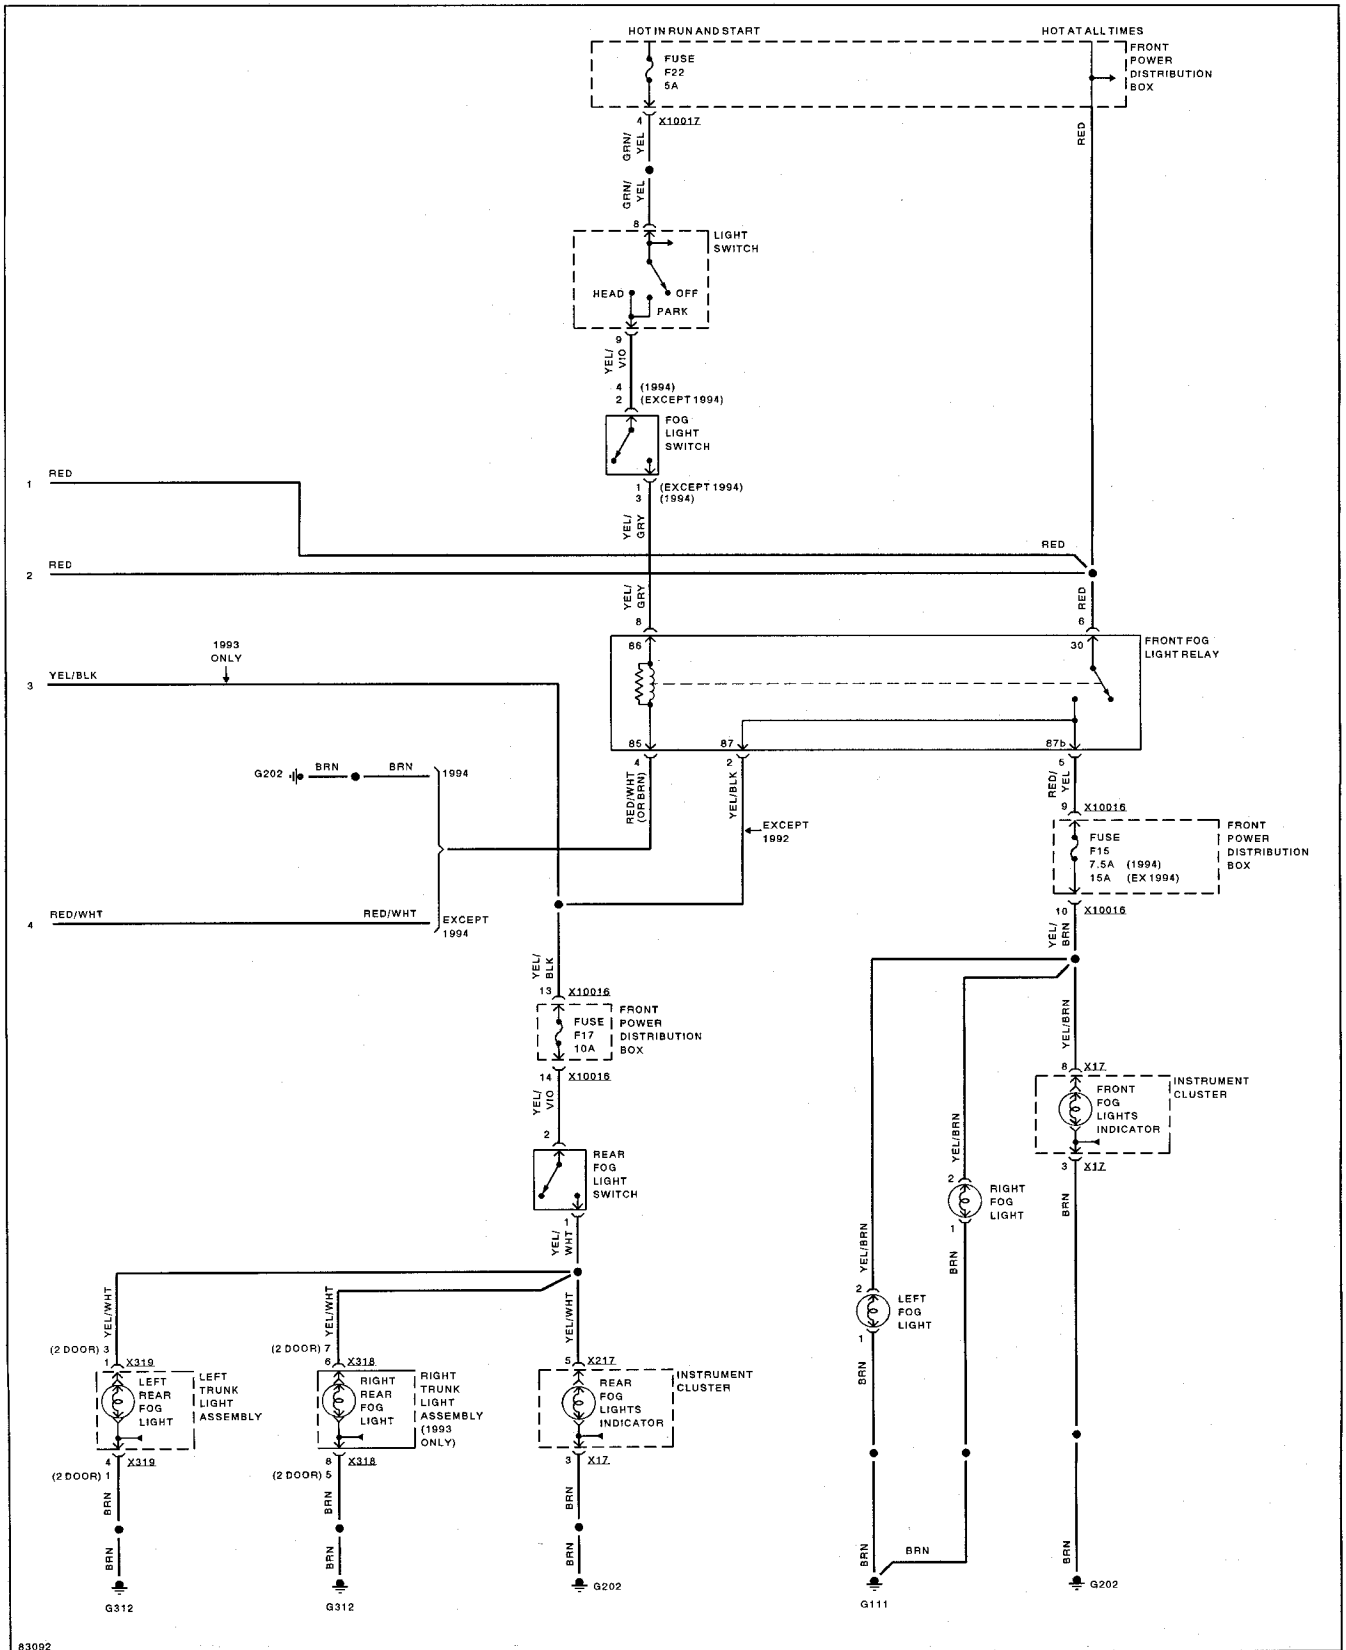


83093

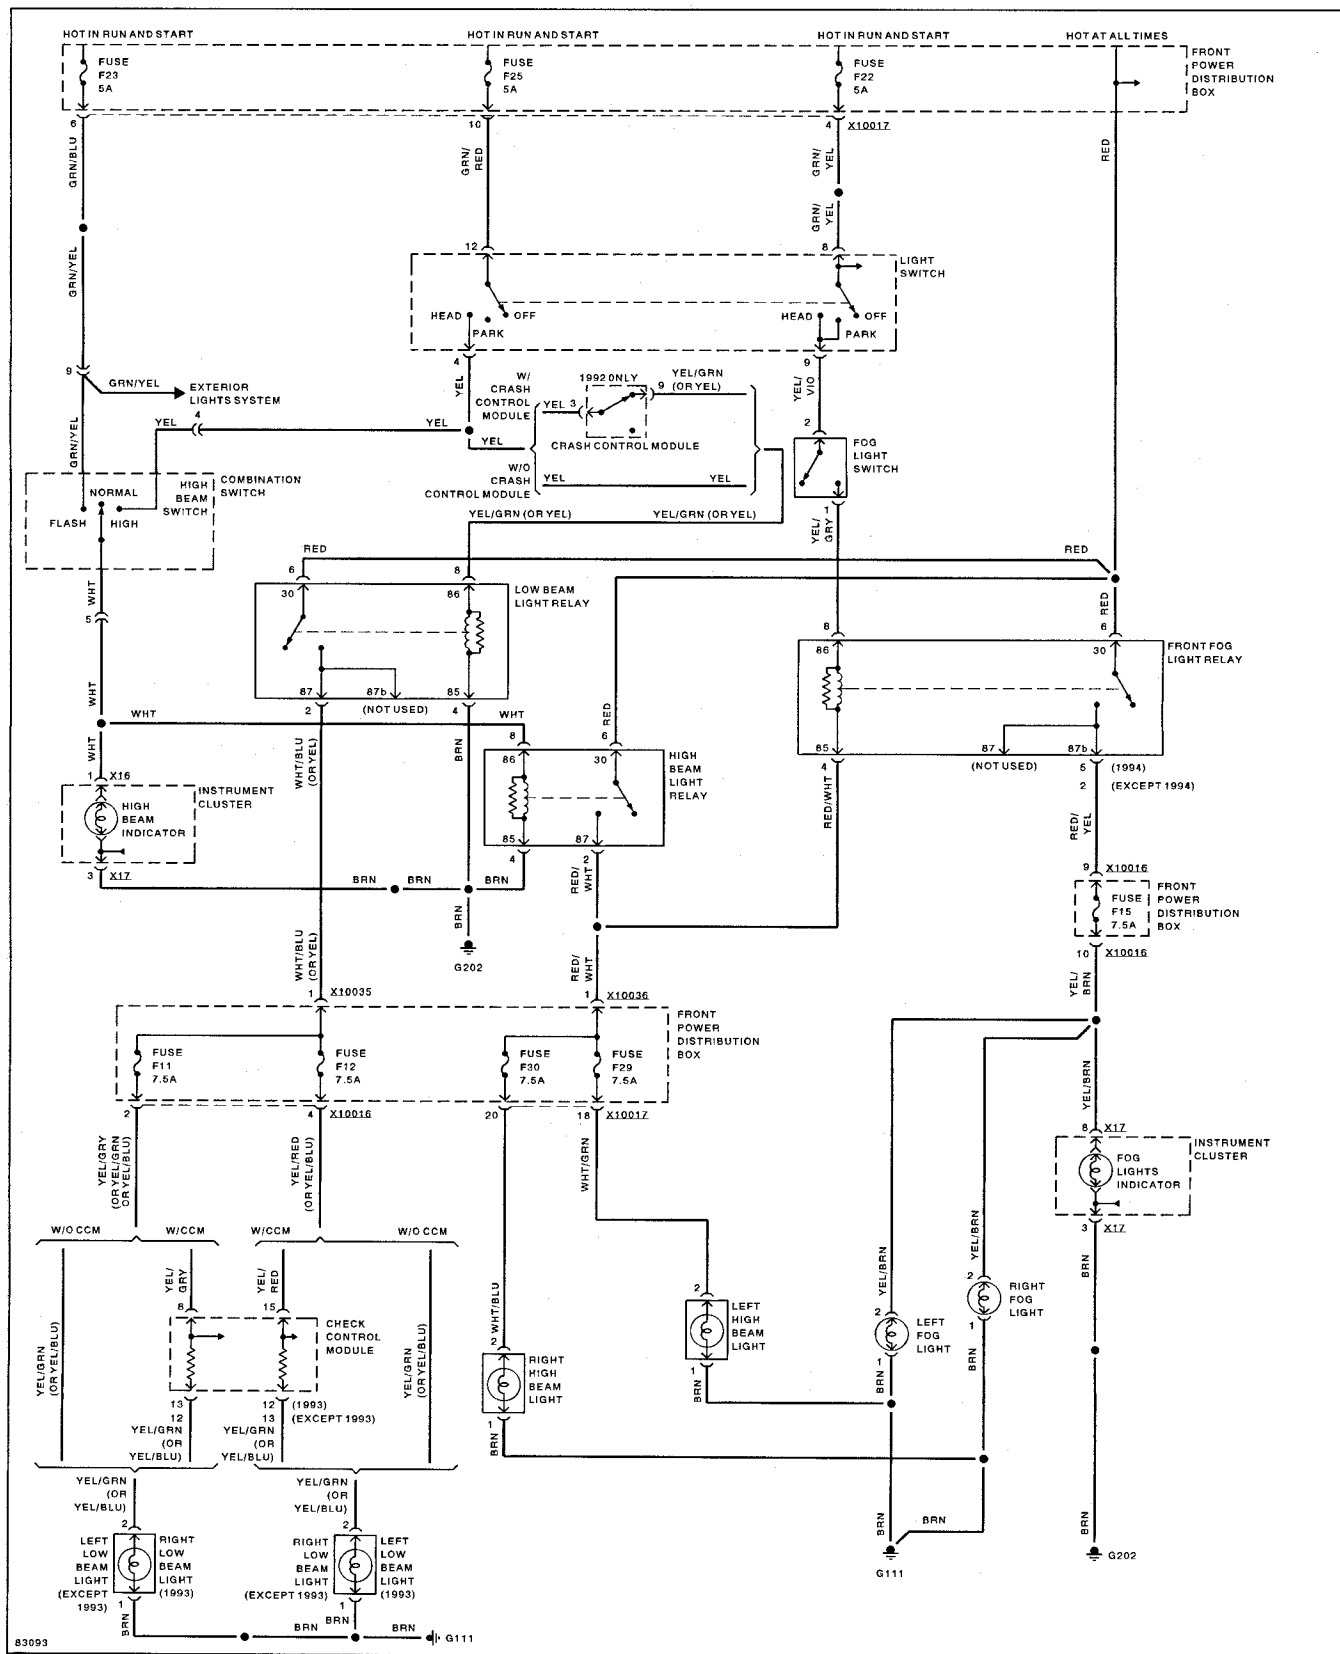


Headlights/Foglights

1995 Except 318ti (1 of 2)

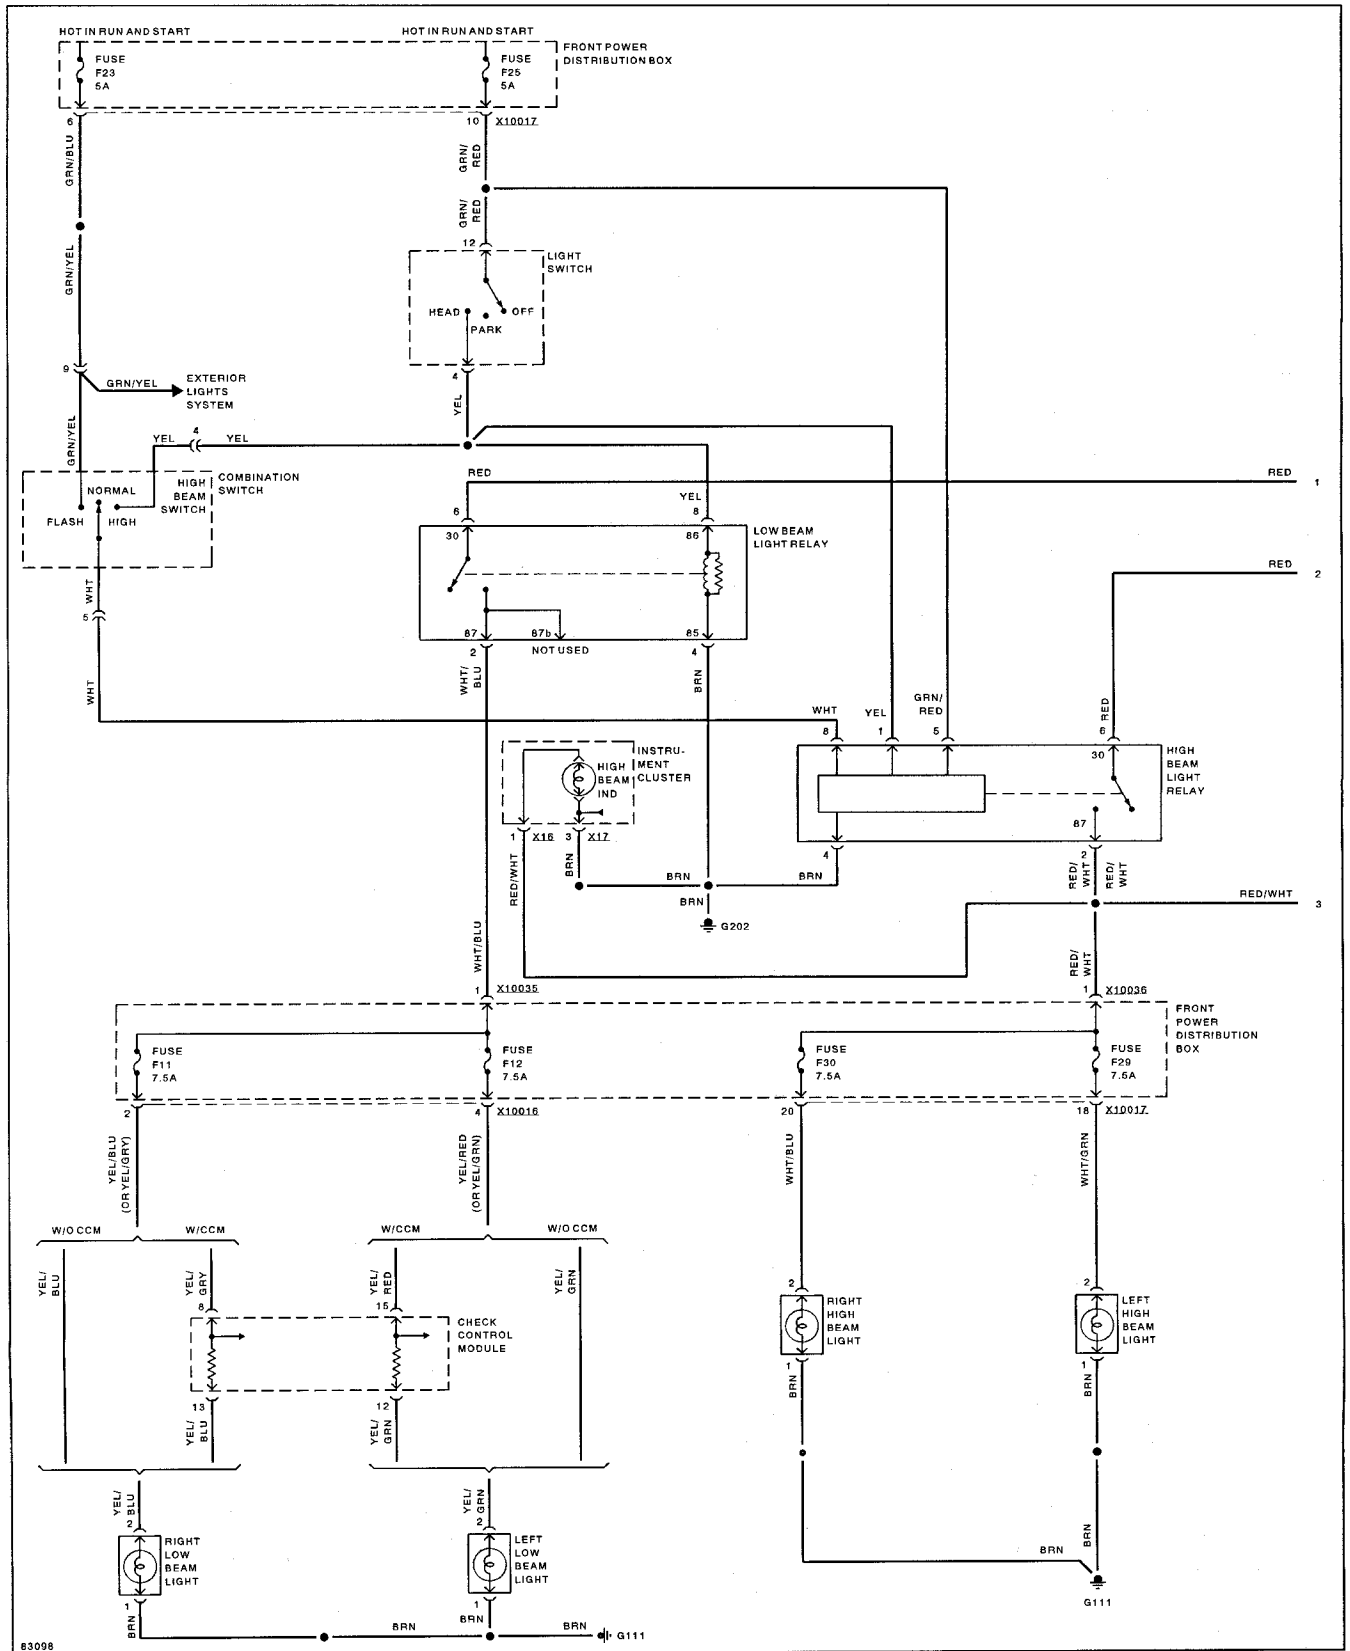


Headlights/Foglights

1995 Except 318ti (2 of 2)

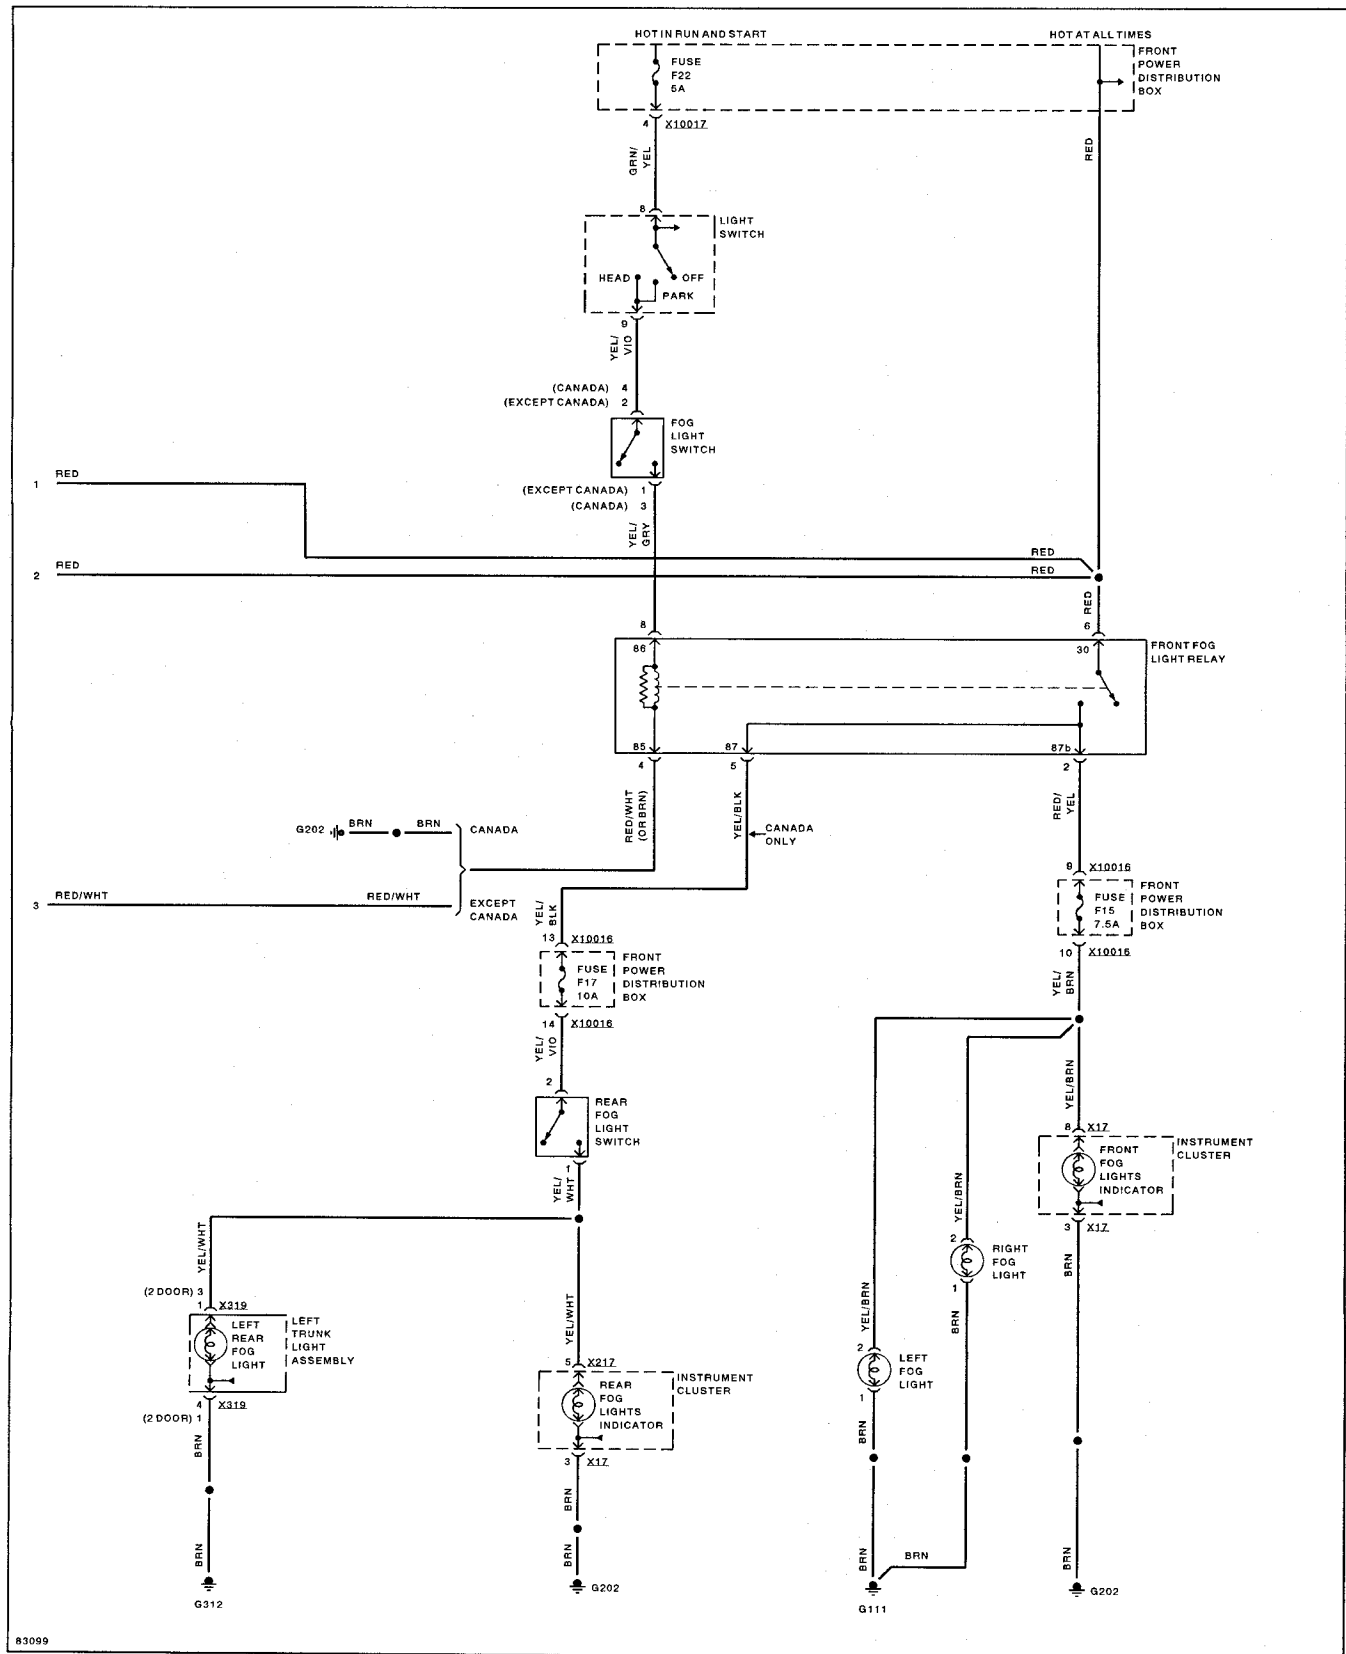


Headlights/Foglights

1996-97 Except 318ti (1 of 2)

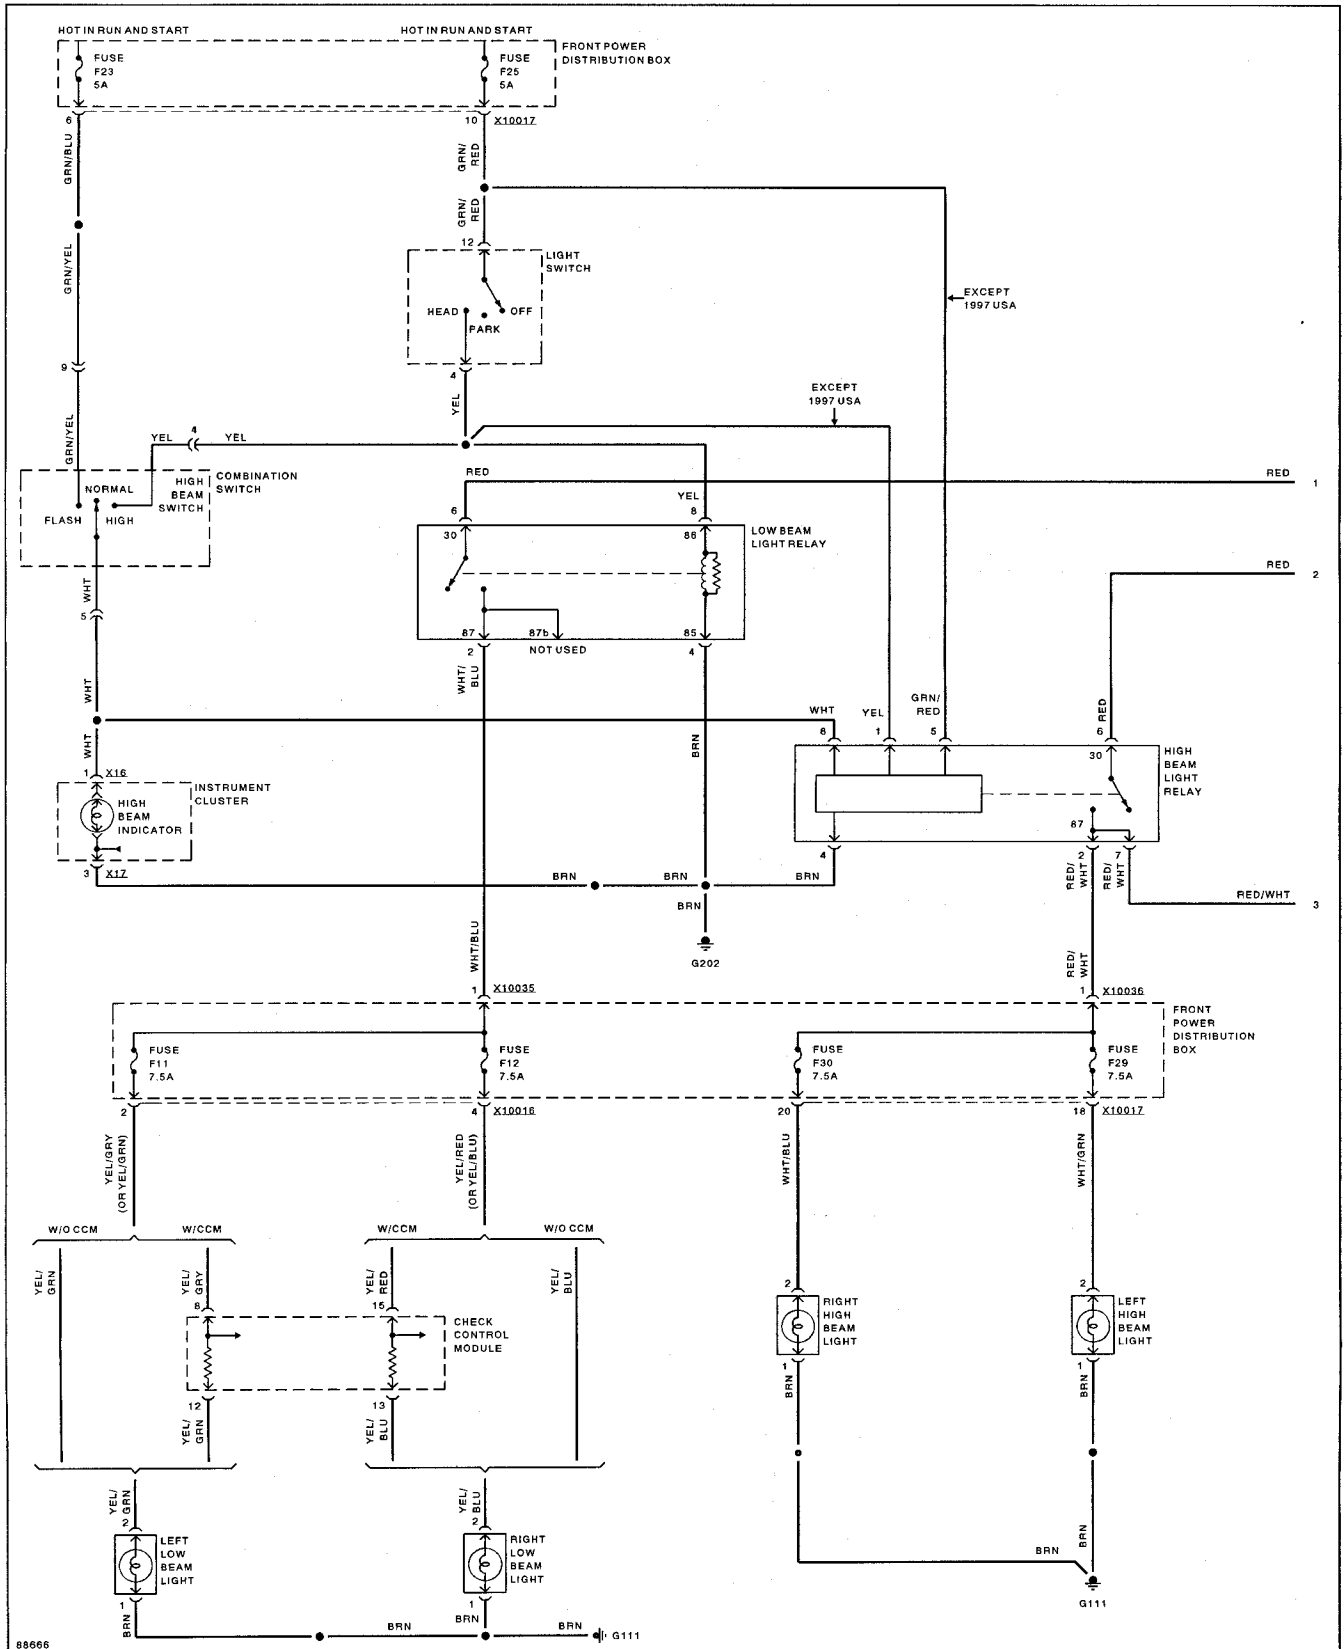


Headlights/Foglights

1996-97 Except 318ti (2 of 2)

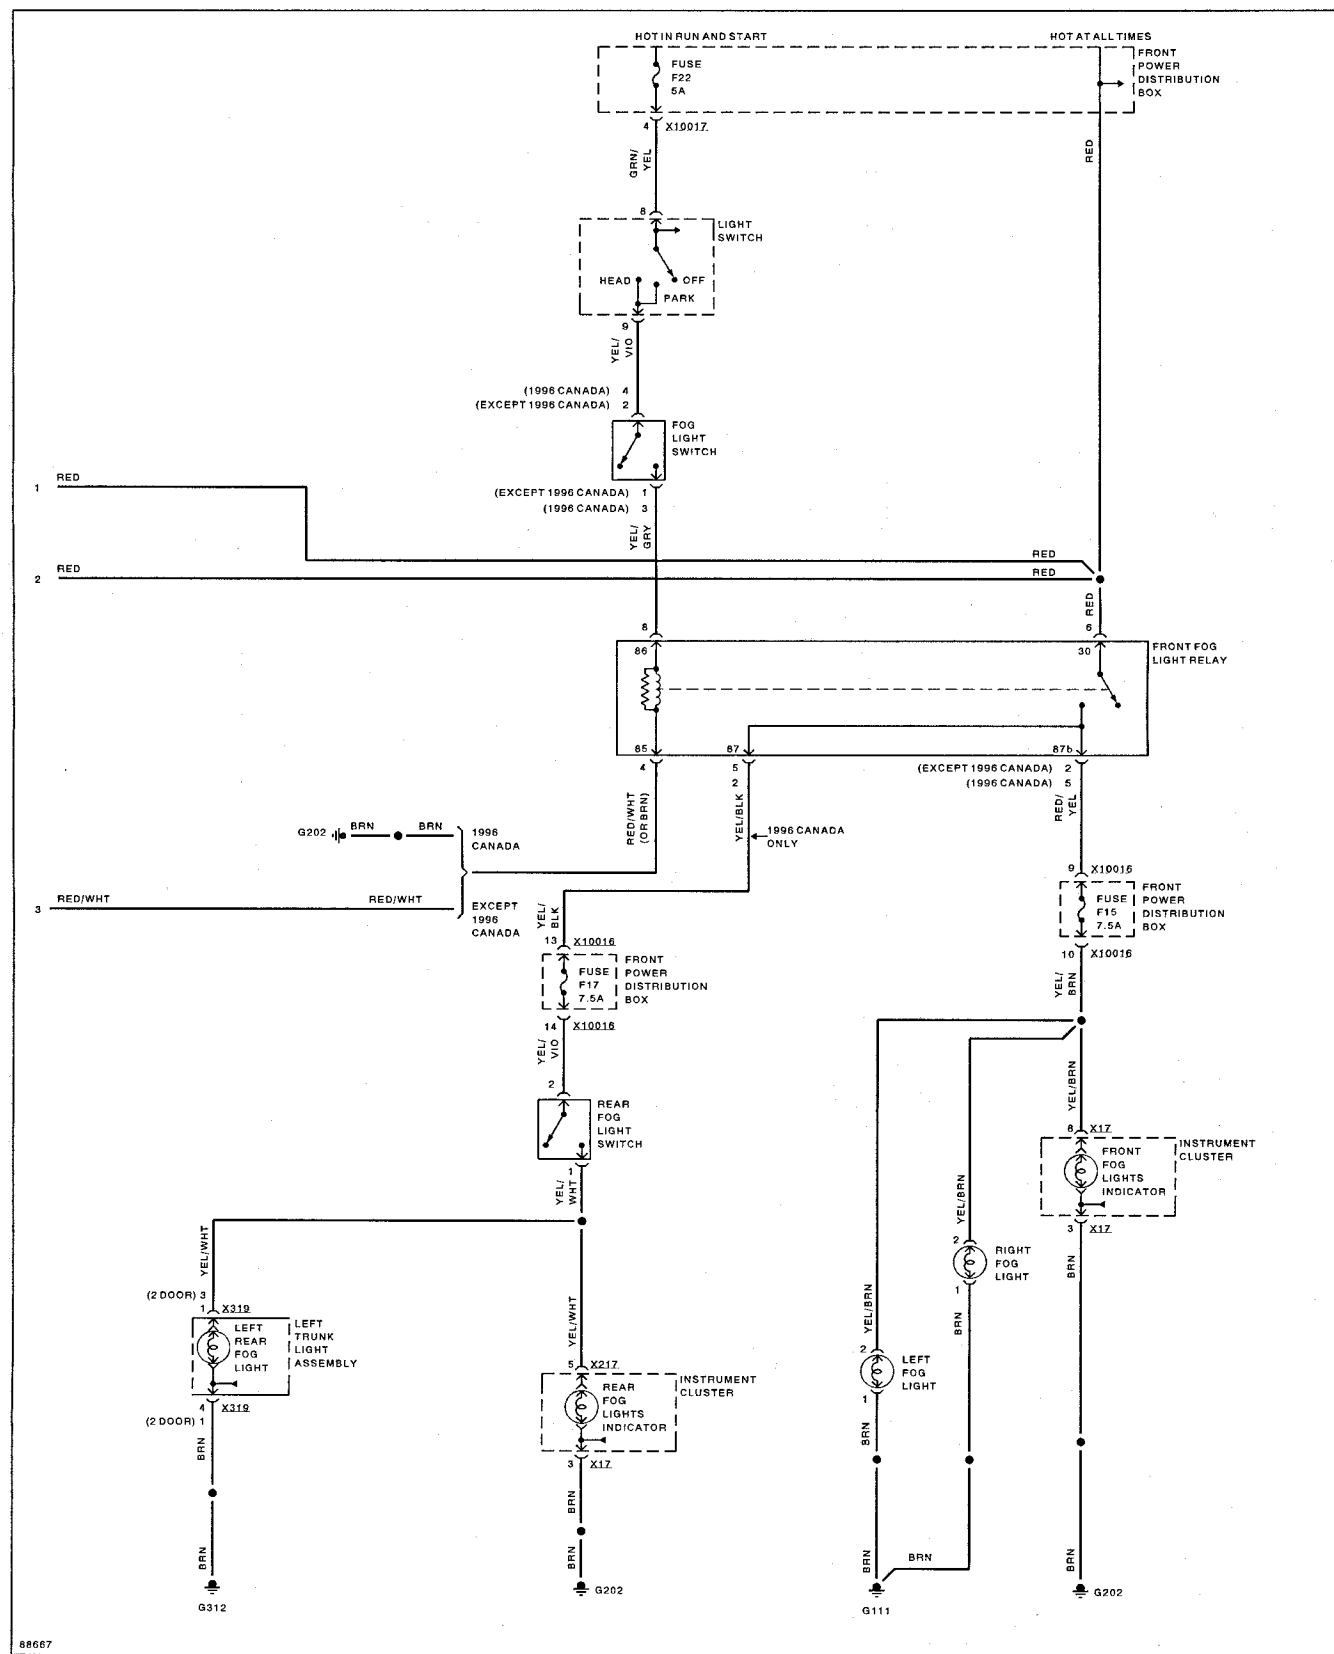


Headlights/Foglights

1998 Except 318ti

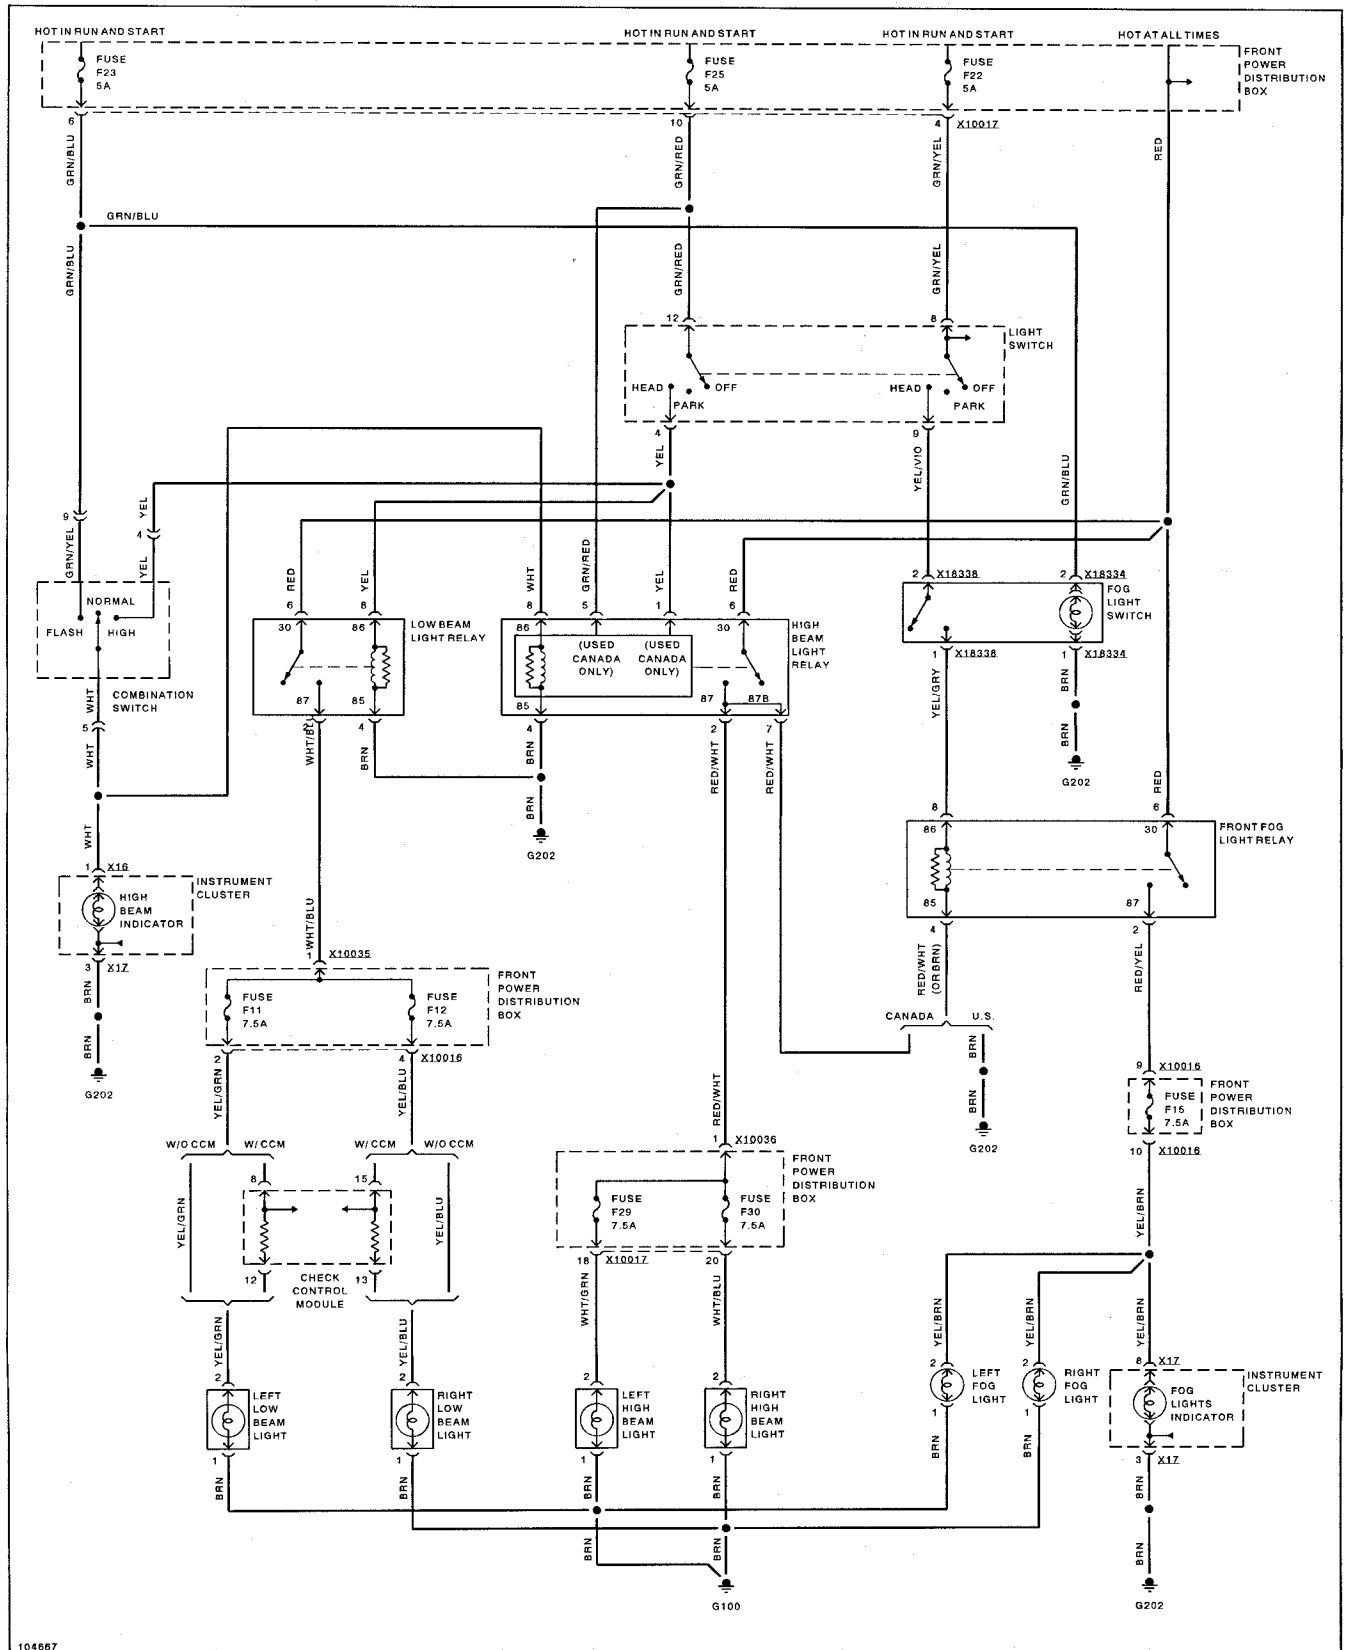


Headlights/Foglights

1995-96 318ti (Canada) (1 of 2)

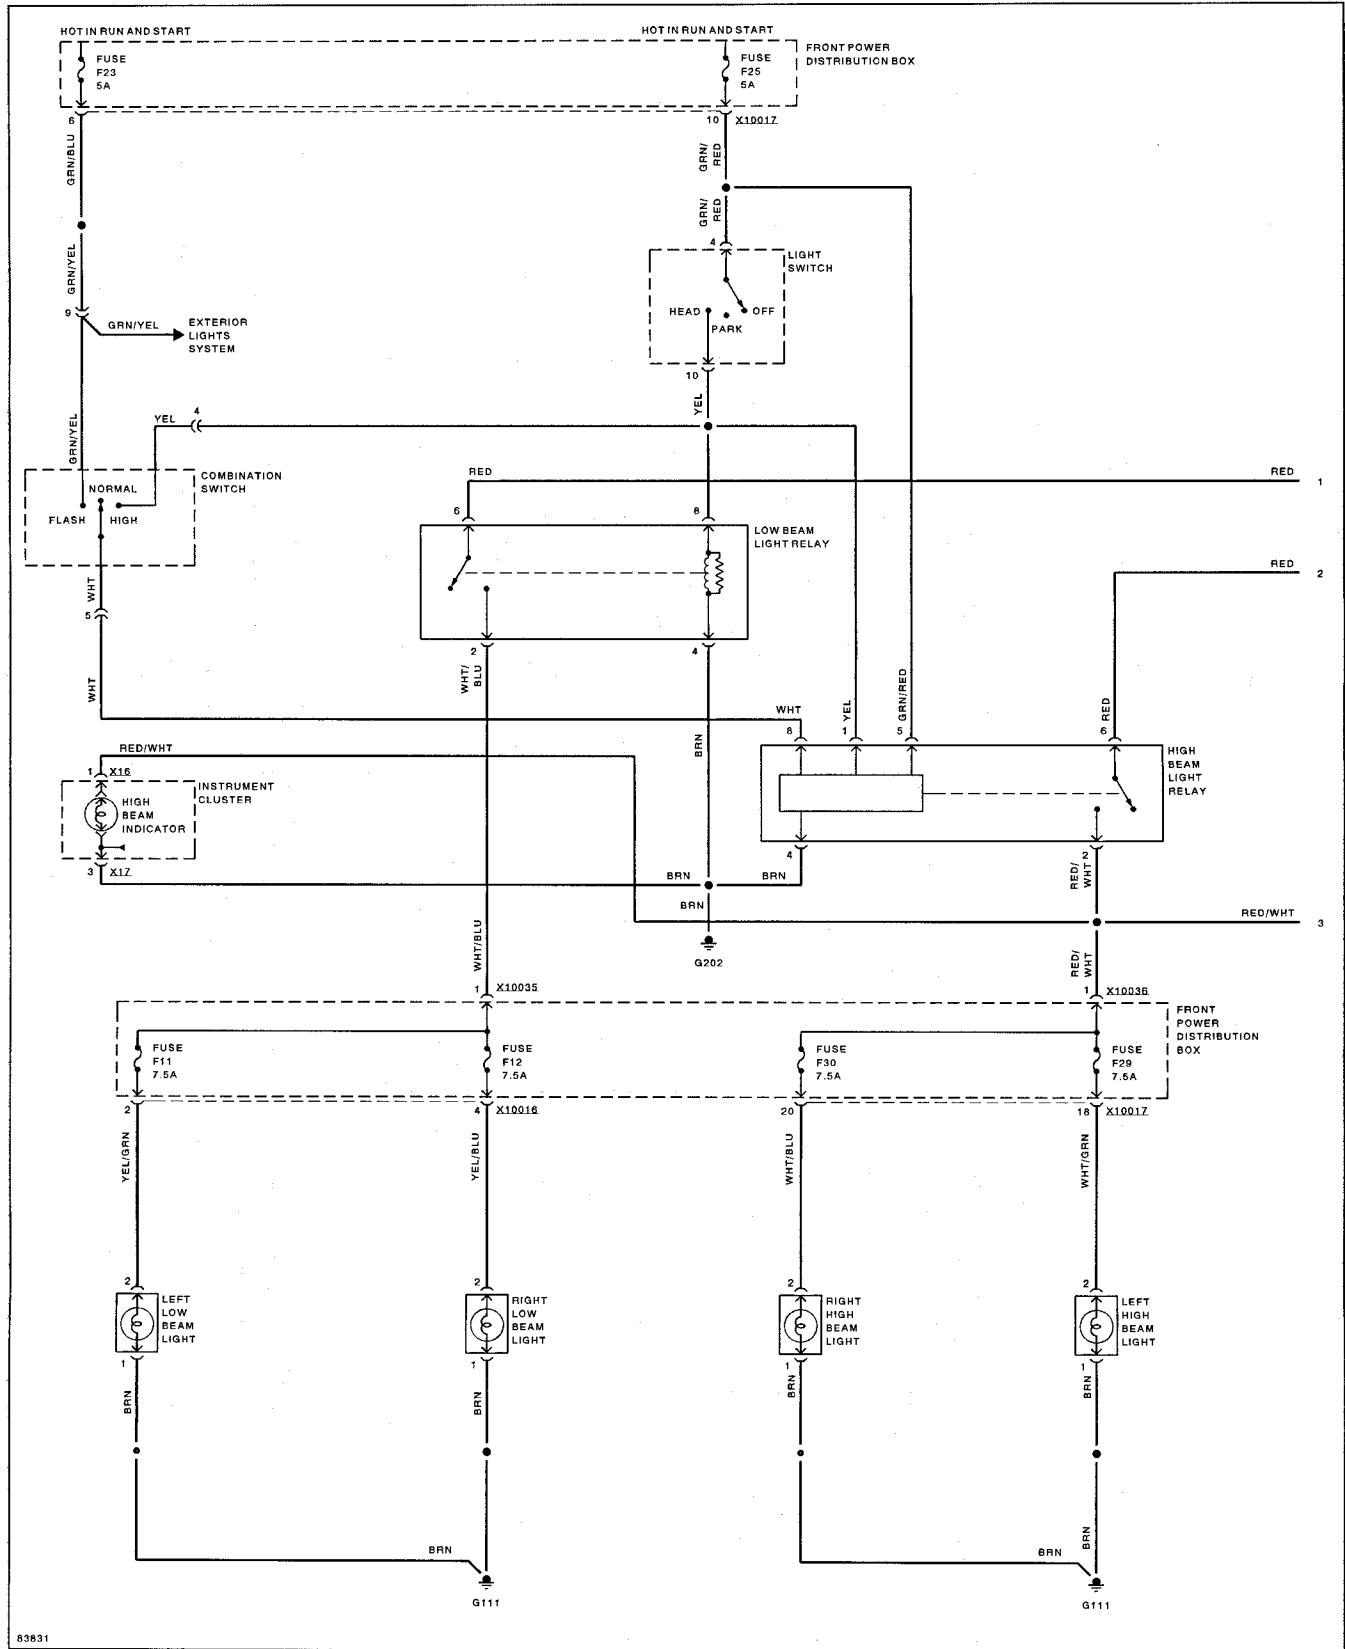

Headlights/Foglights


1995-96 318ti (Canada) (2 of 2)

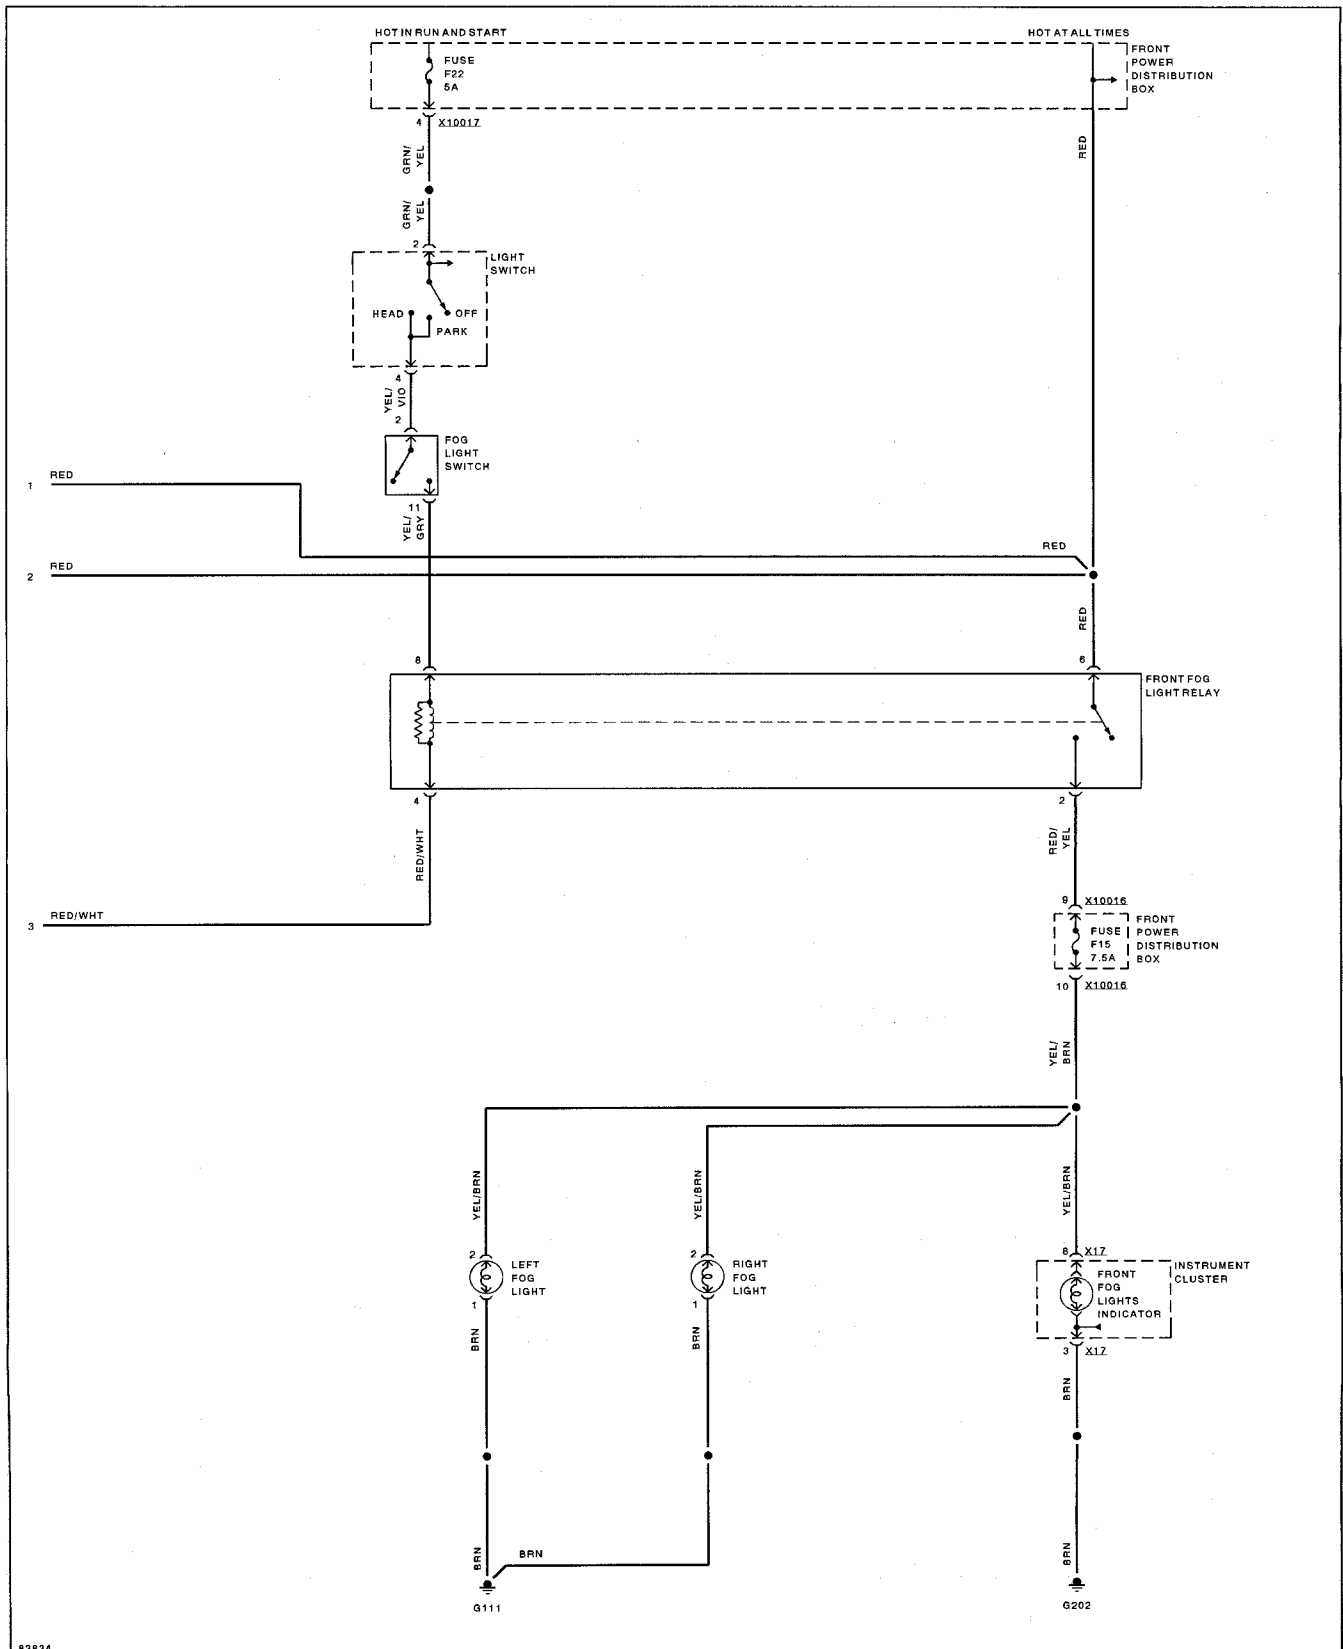

83834


Headlights/Foglights

1995-96 318ti (USA)

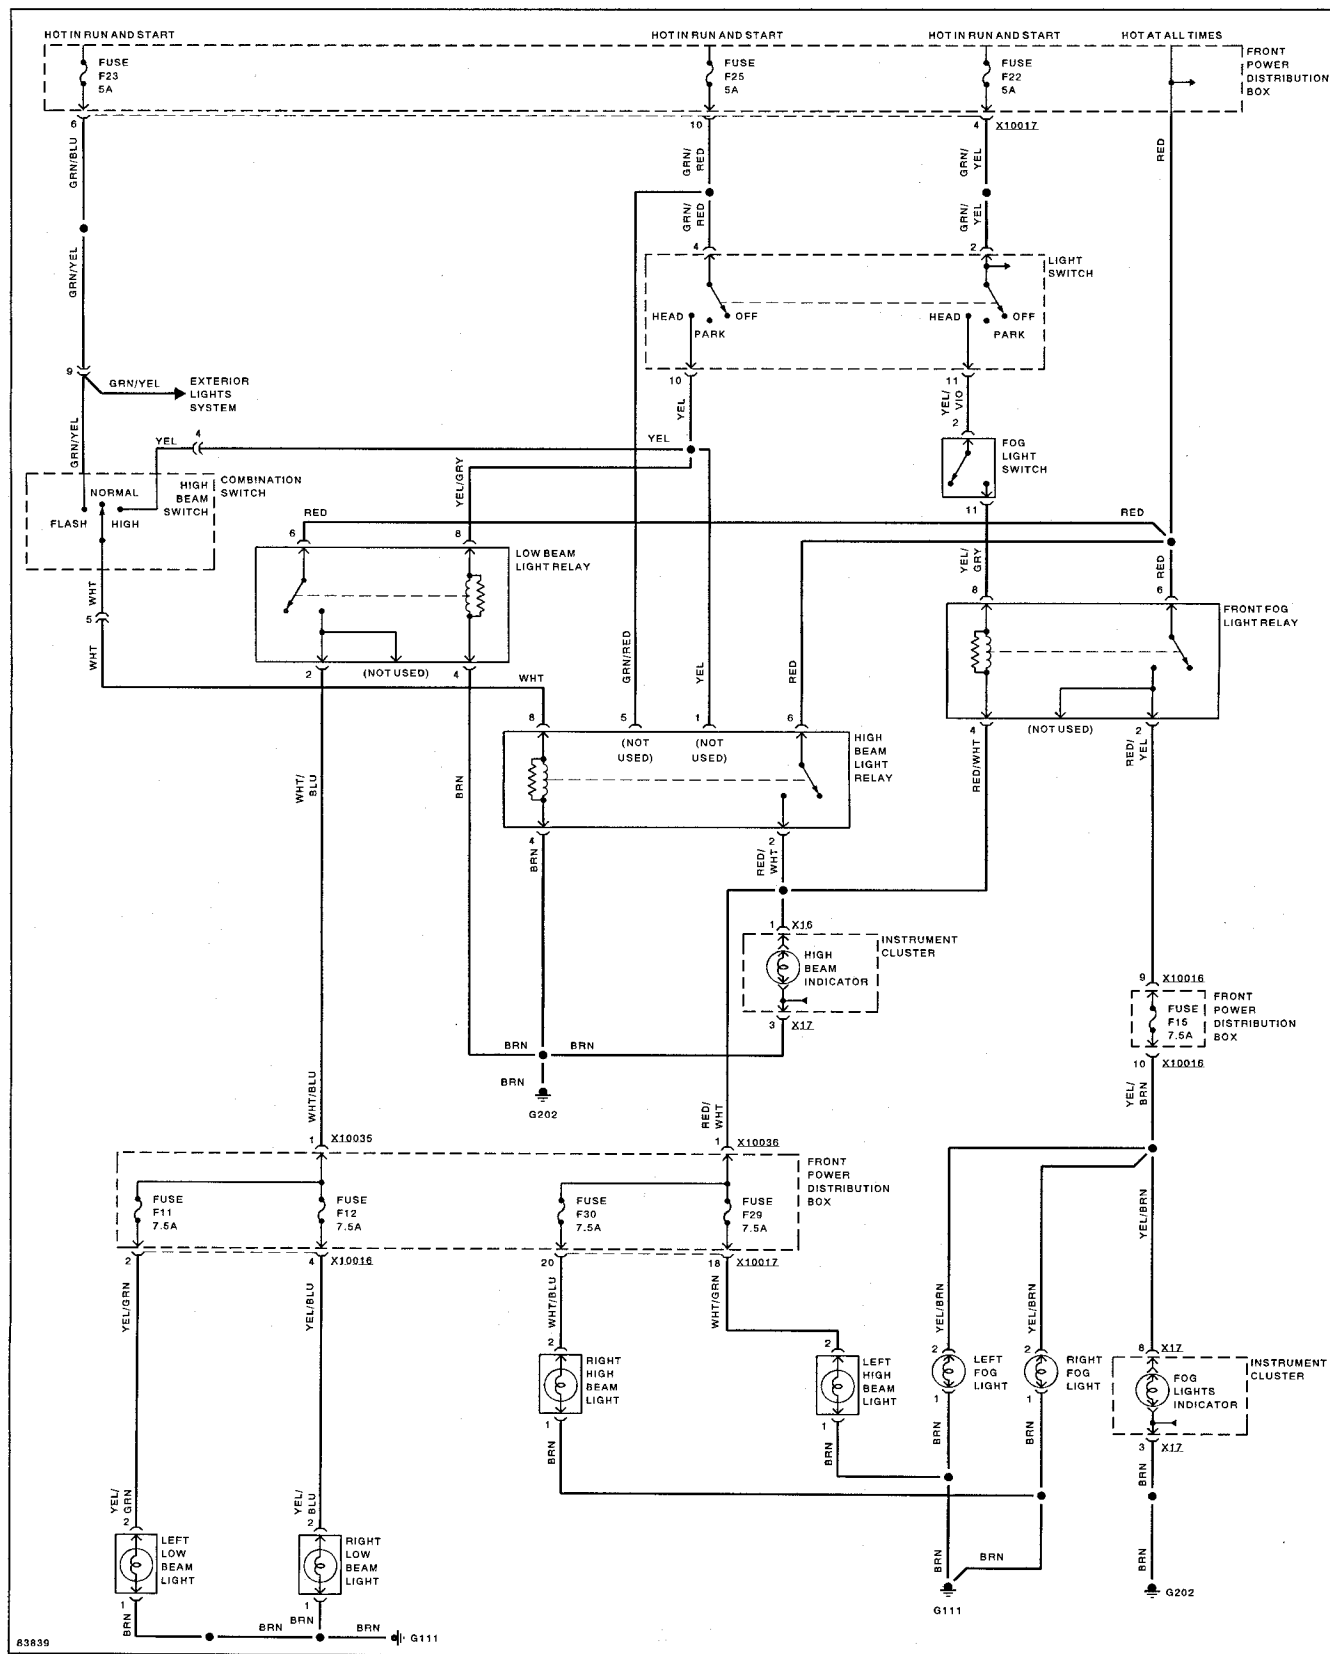


Headlights/Foglights

1997 318ti (Canada) (1 of 2)

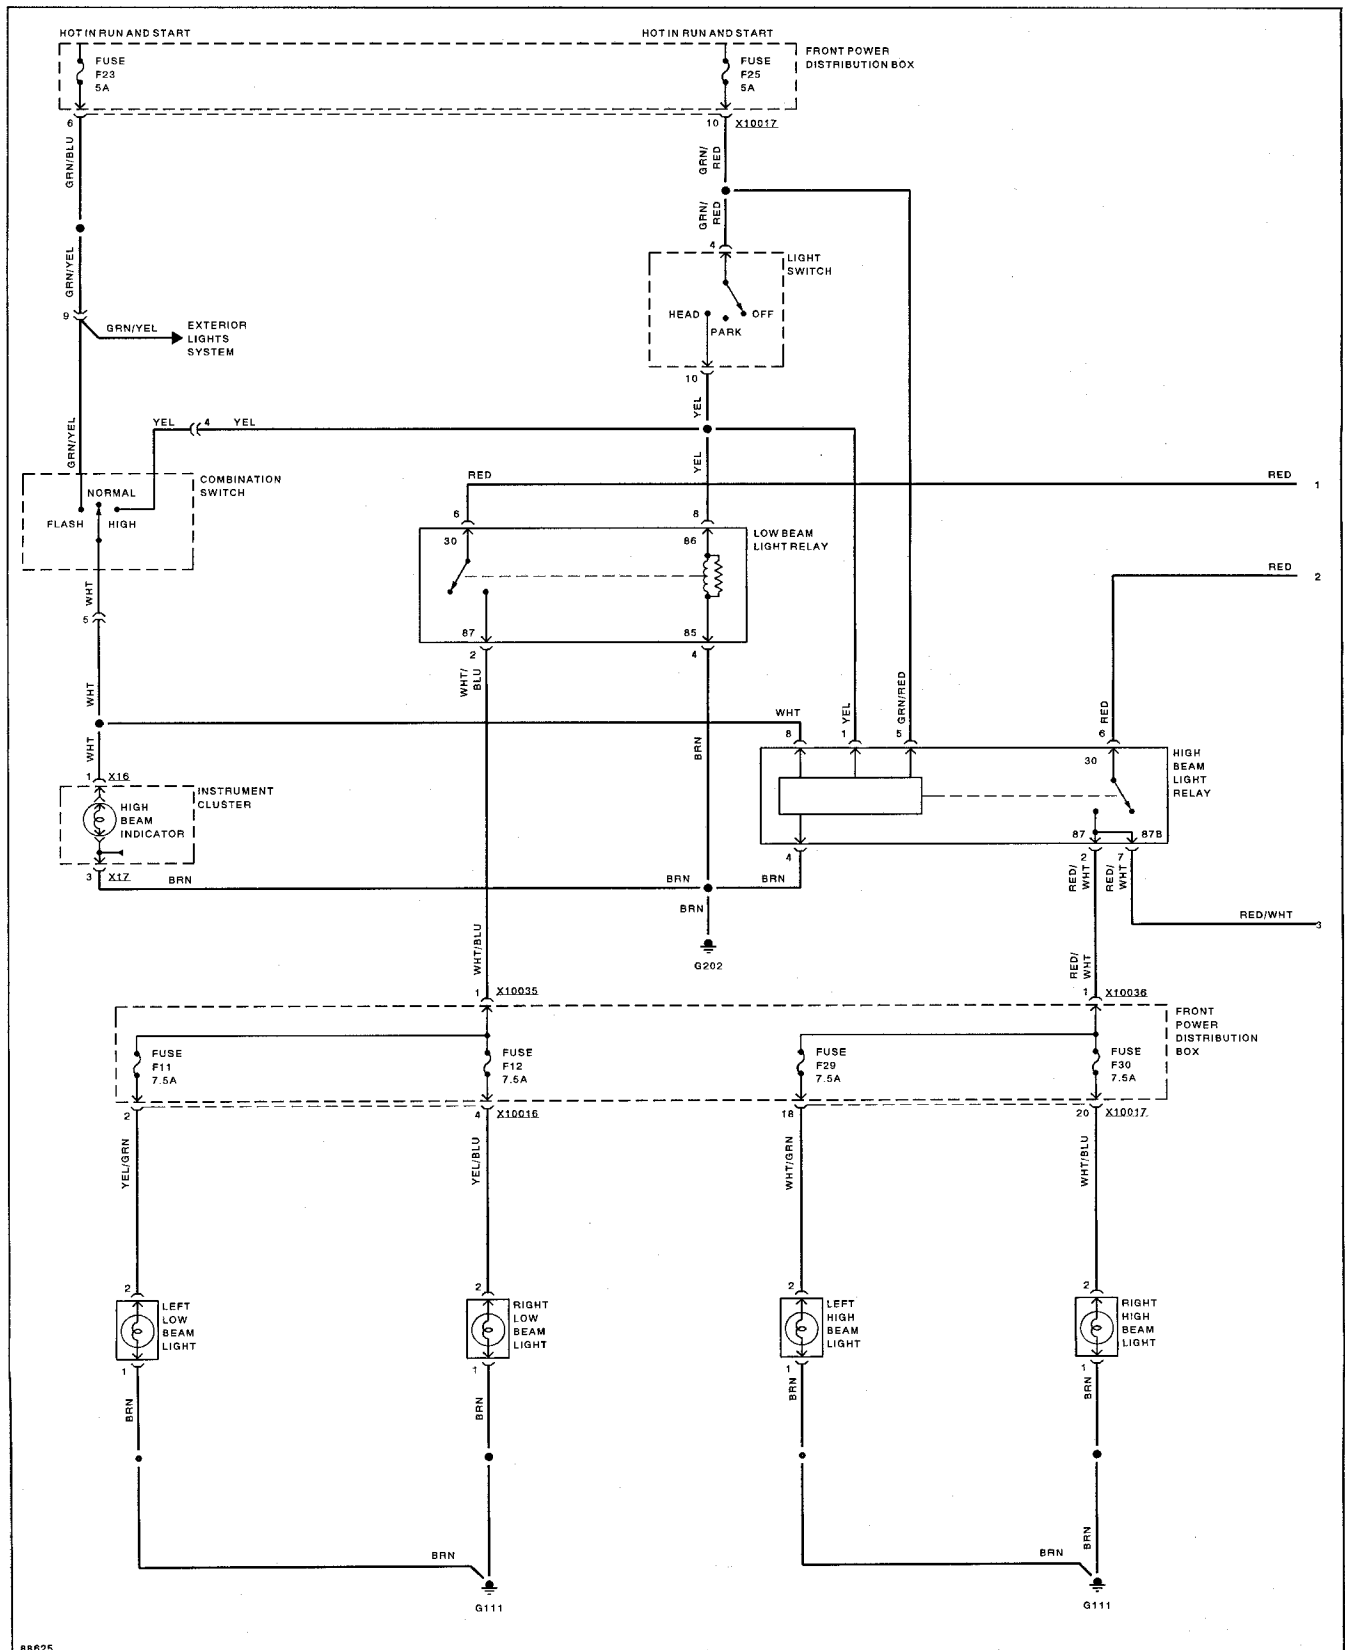


Headlights/Foglights

1997 318ti (Canada) (2 of 2)

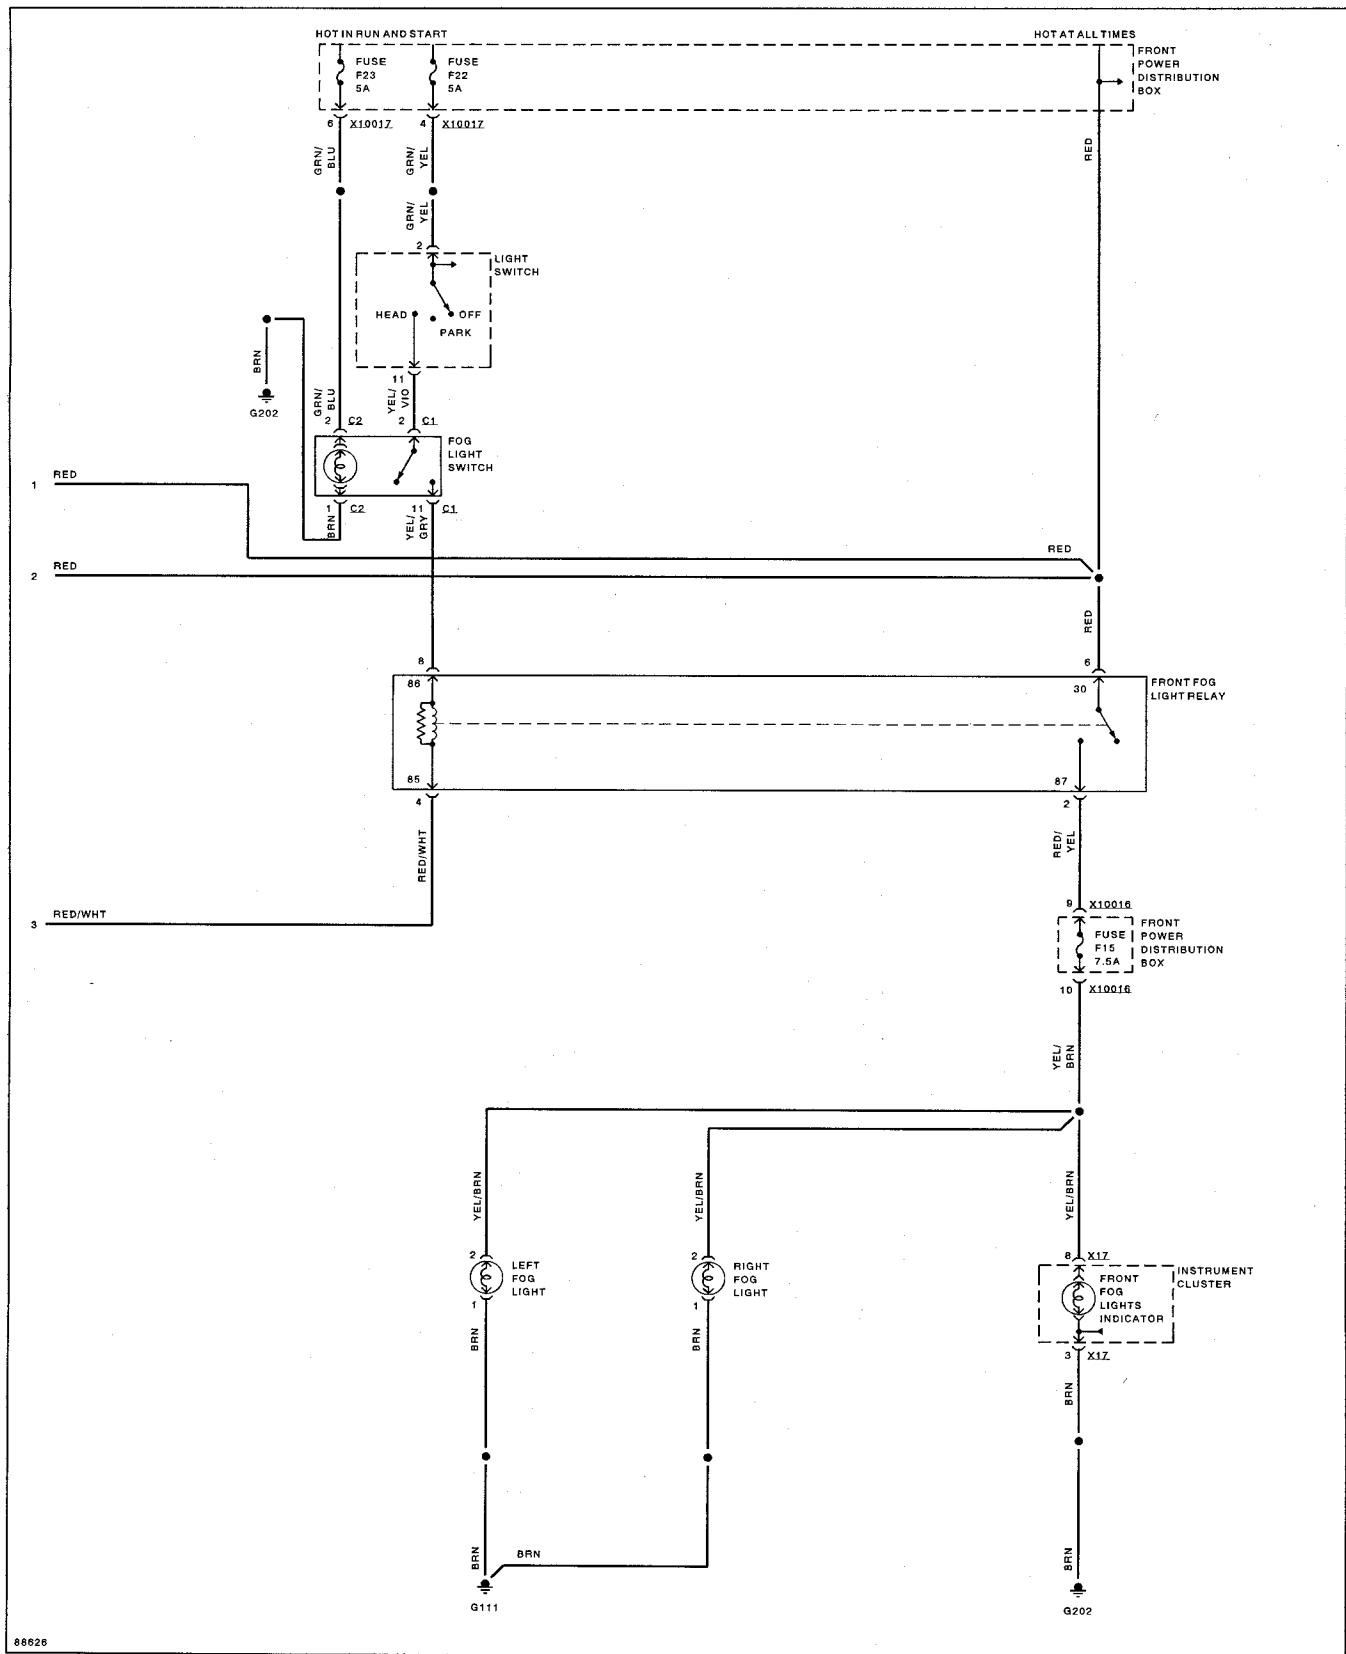


Headlights/Foglights

1997 318ti (USA)

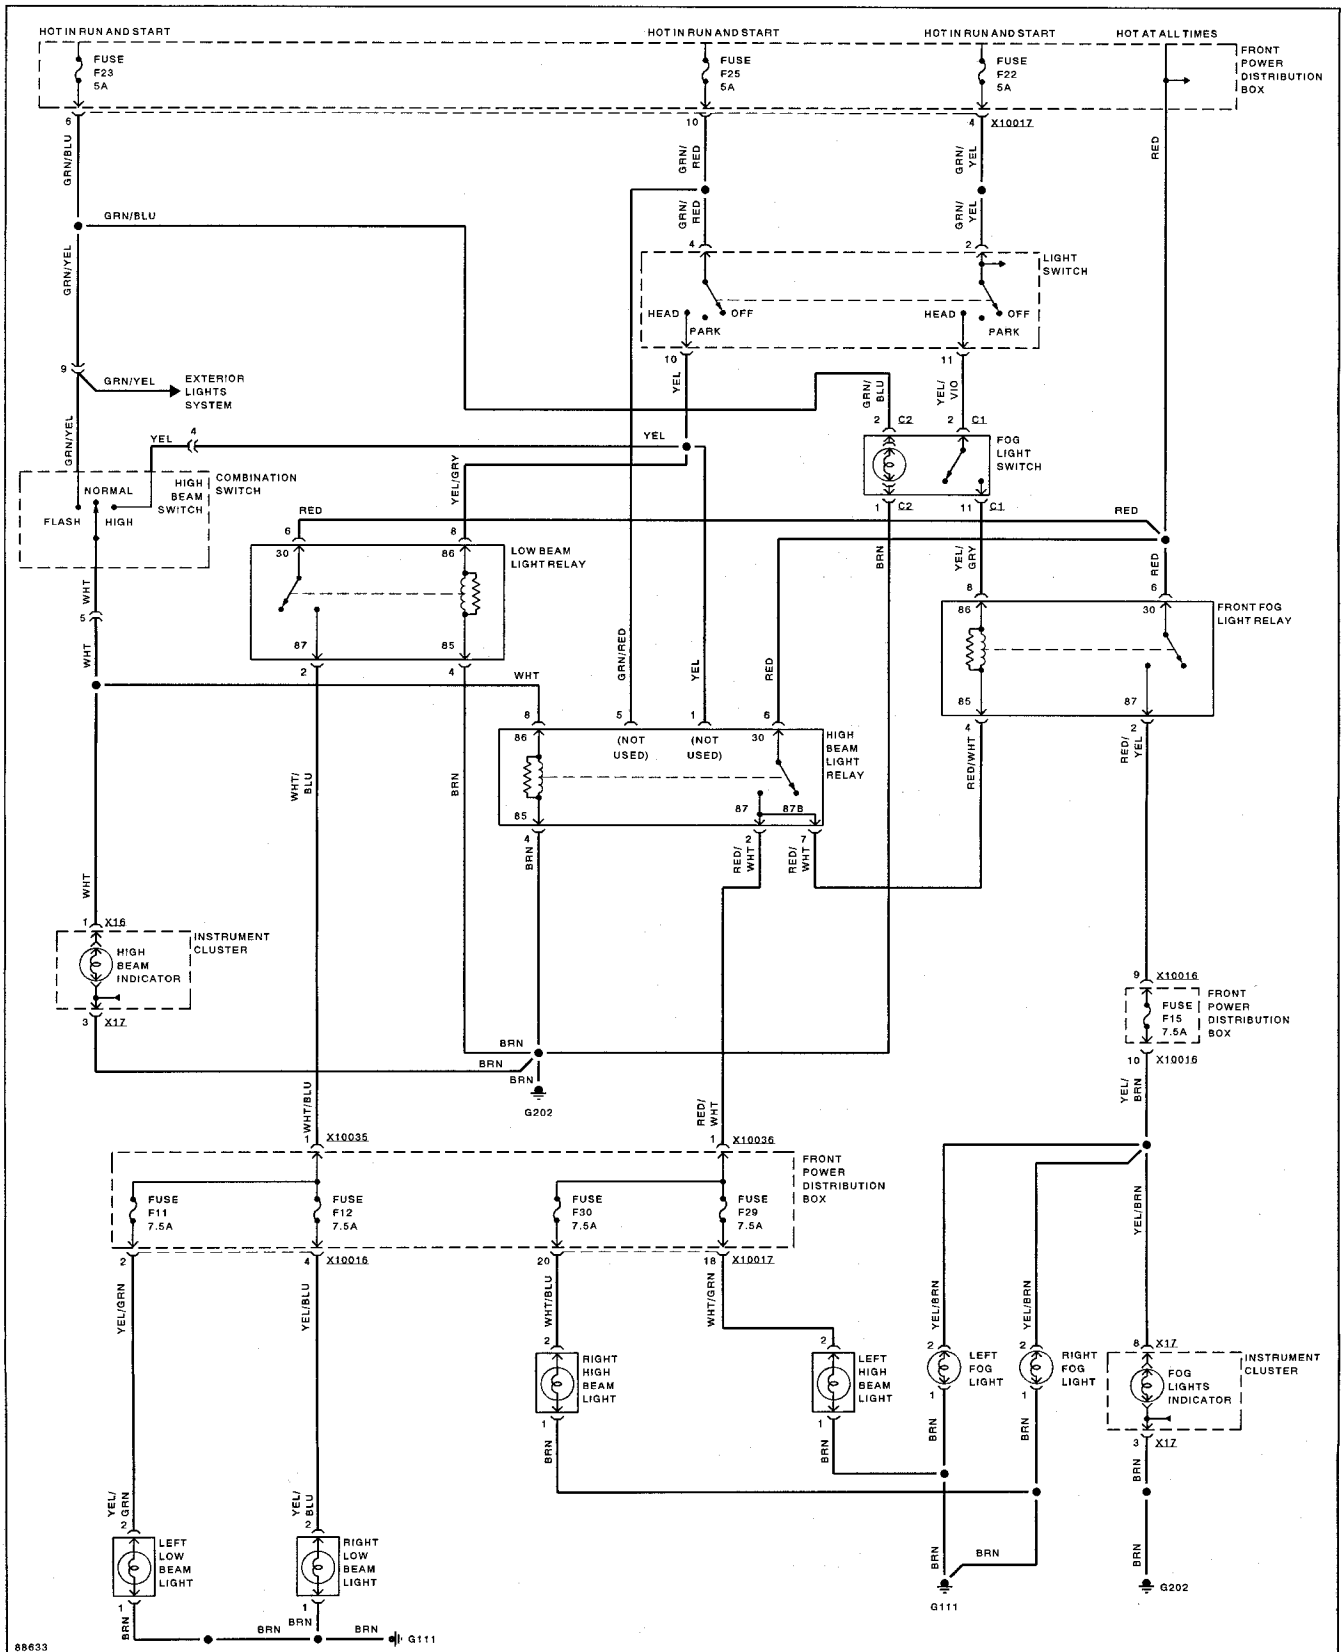


Exterior Lights

1992-93 (Canada) (1 of 3)

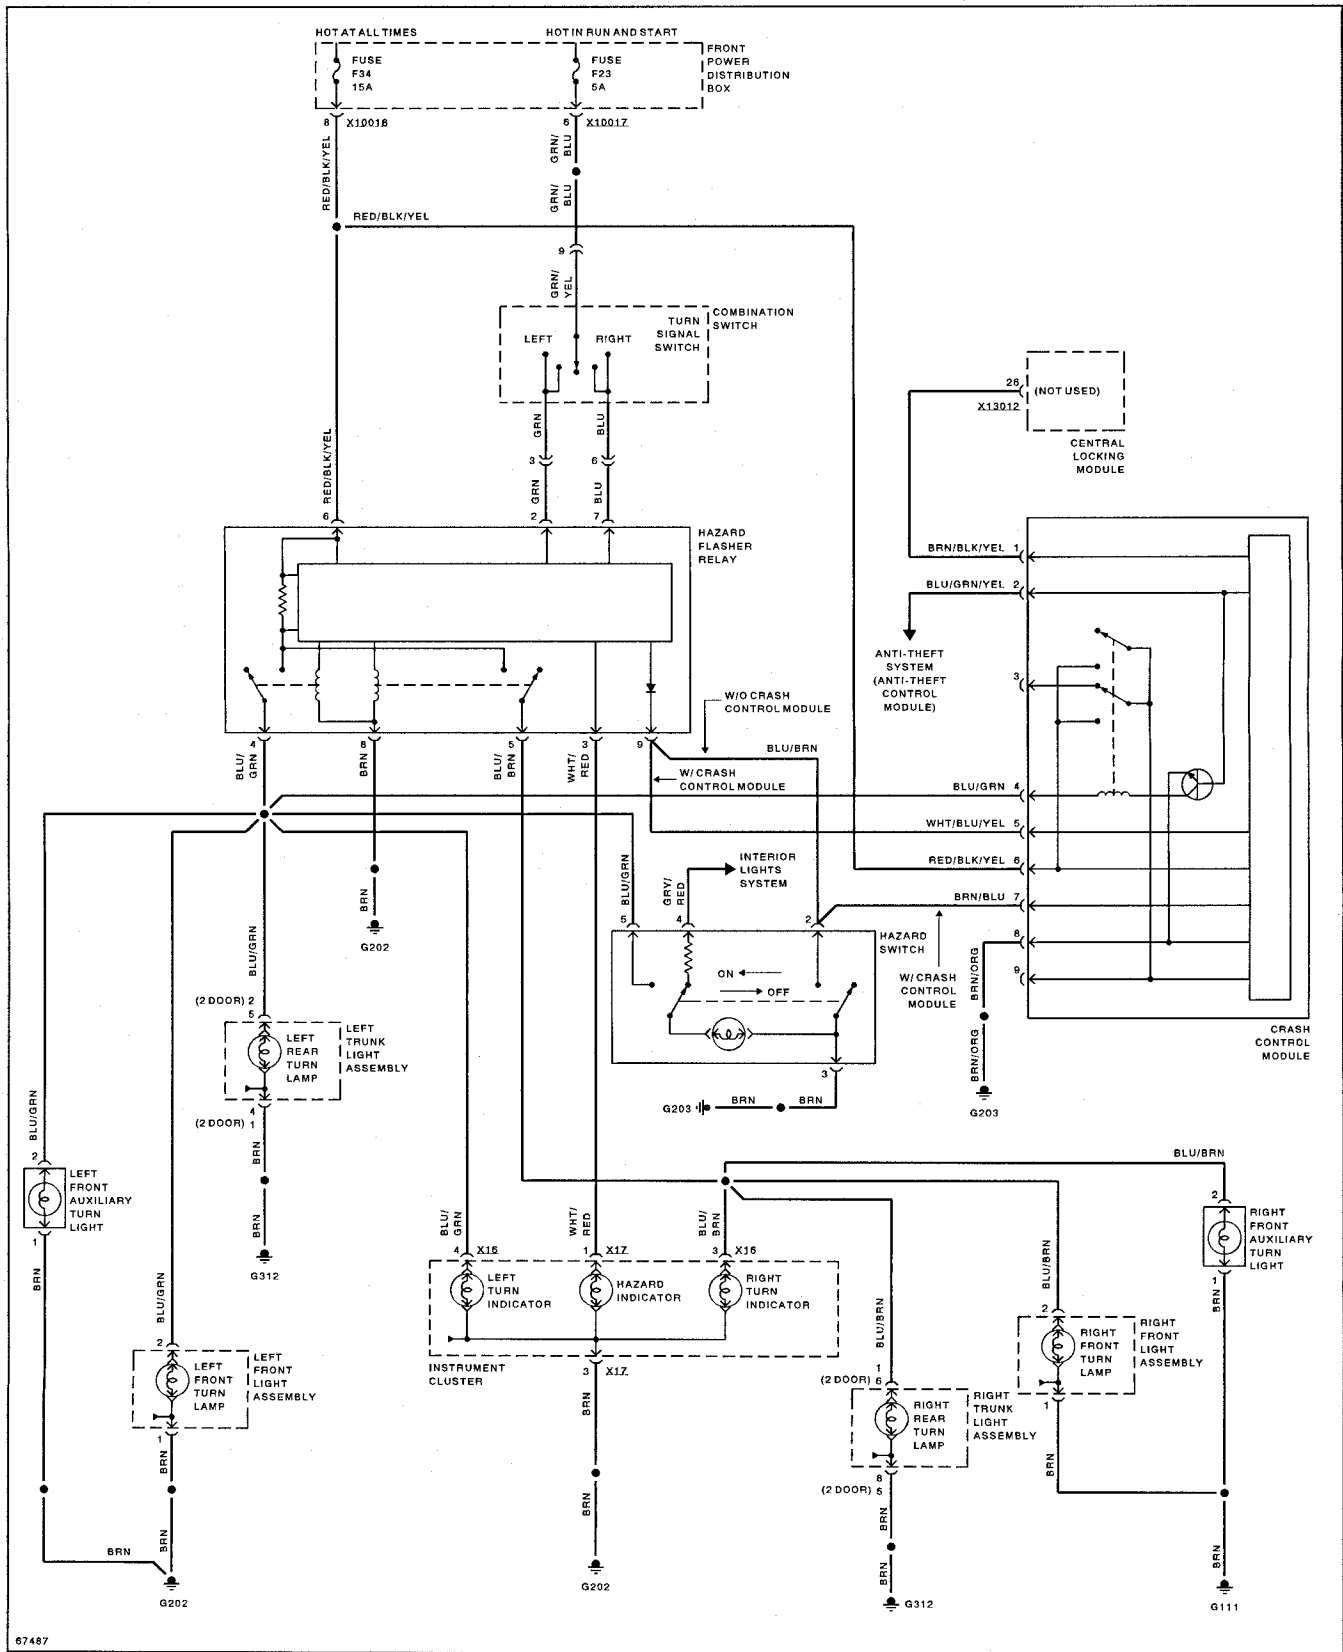


Exterior Lights

1992-93 (Canada) (2 of 3)

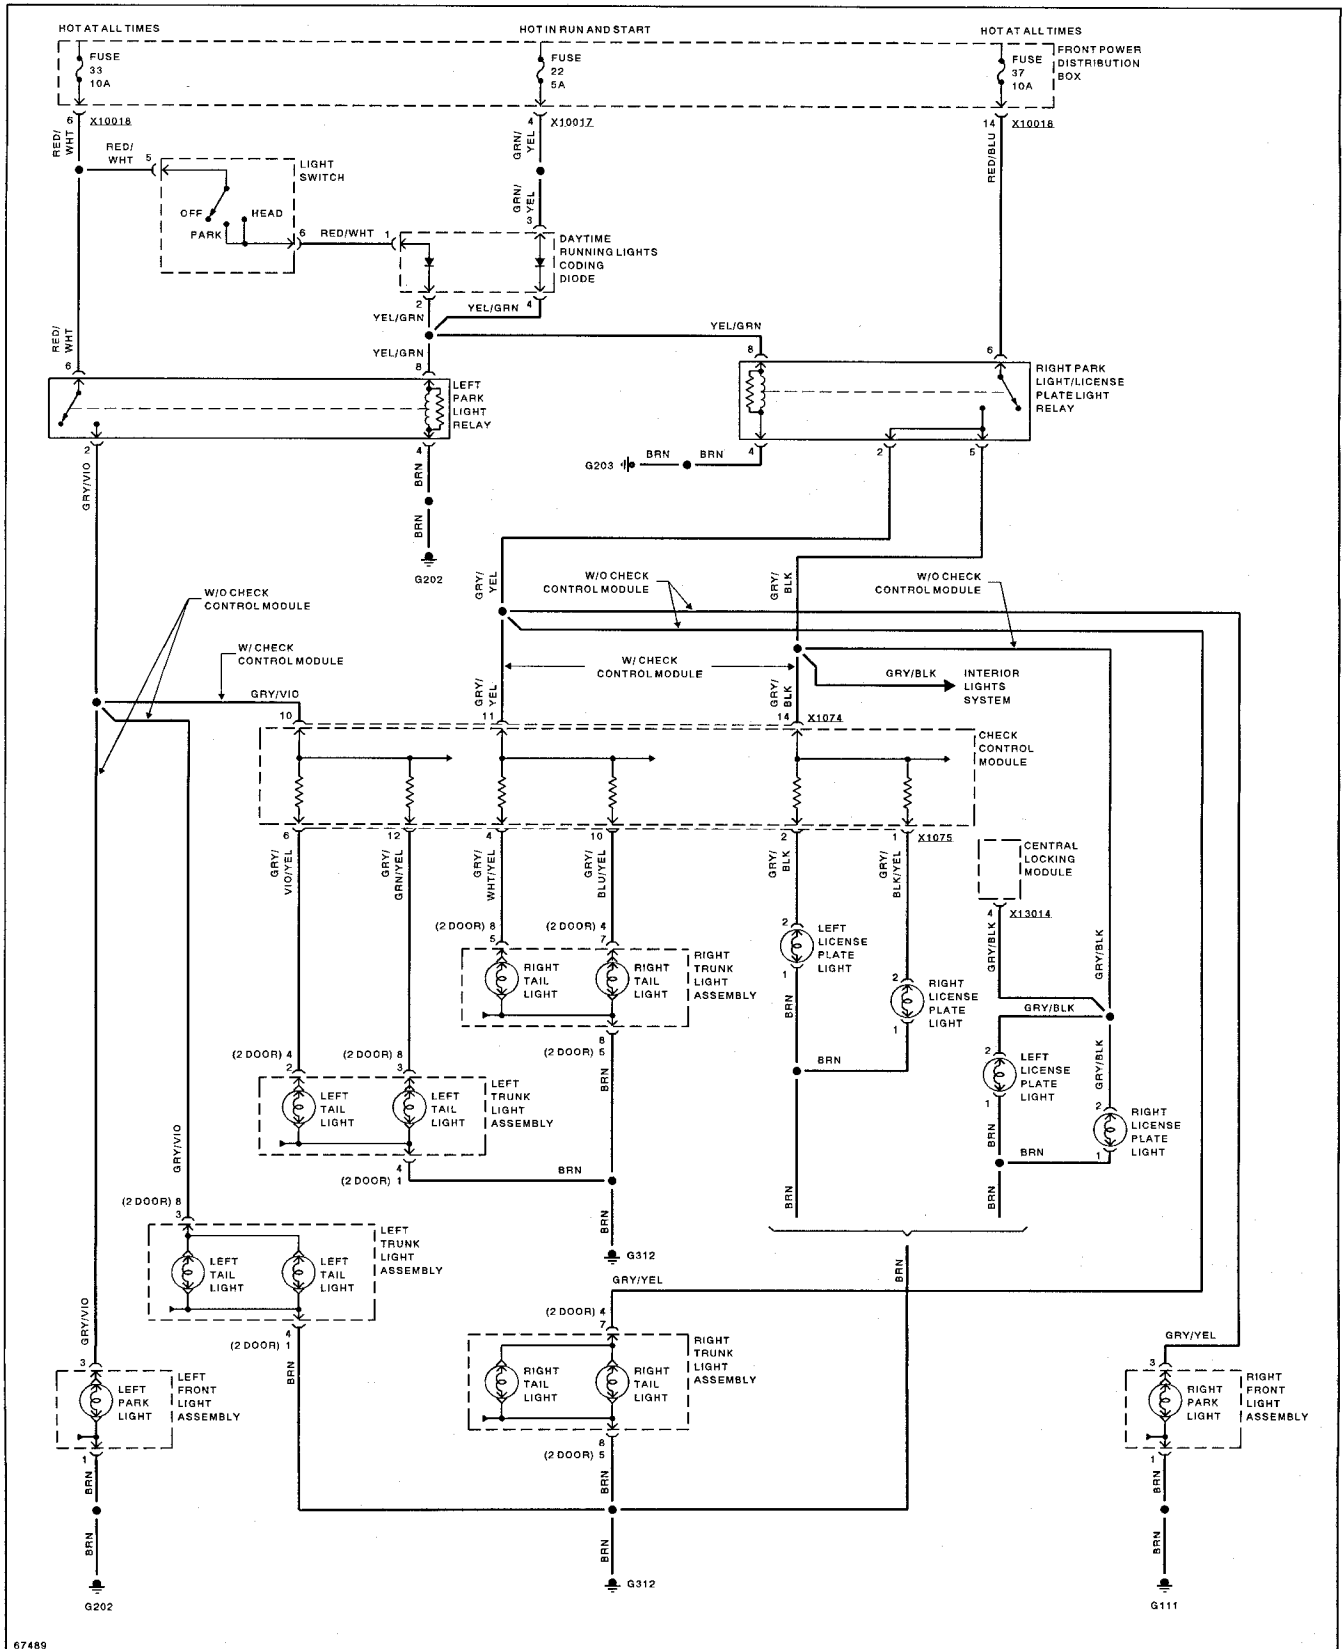


Exterior Lights

1992-93 (Canada) (3 of 3)

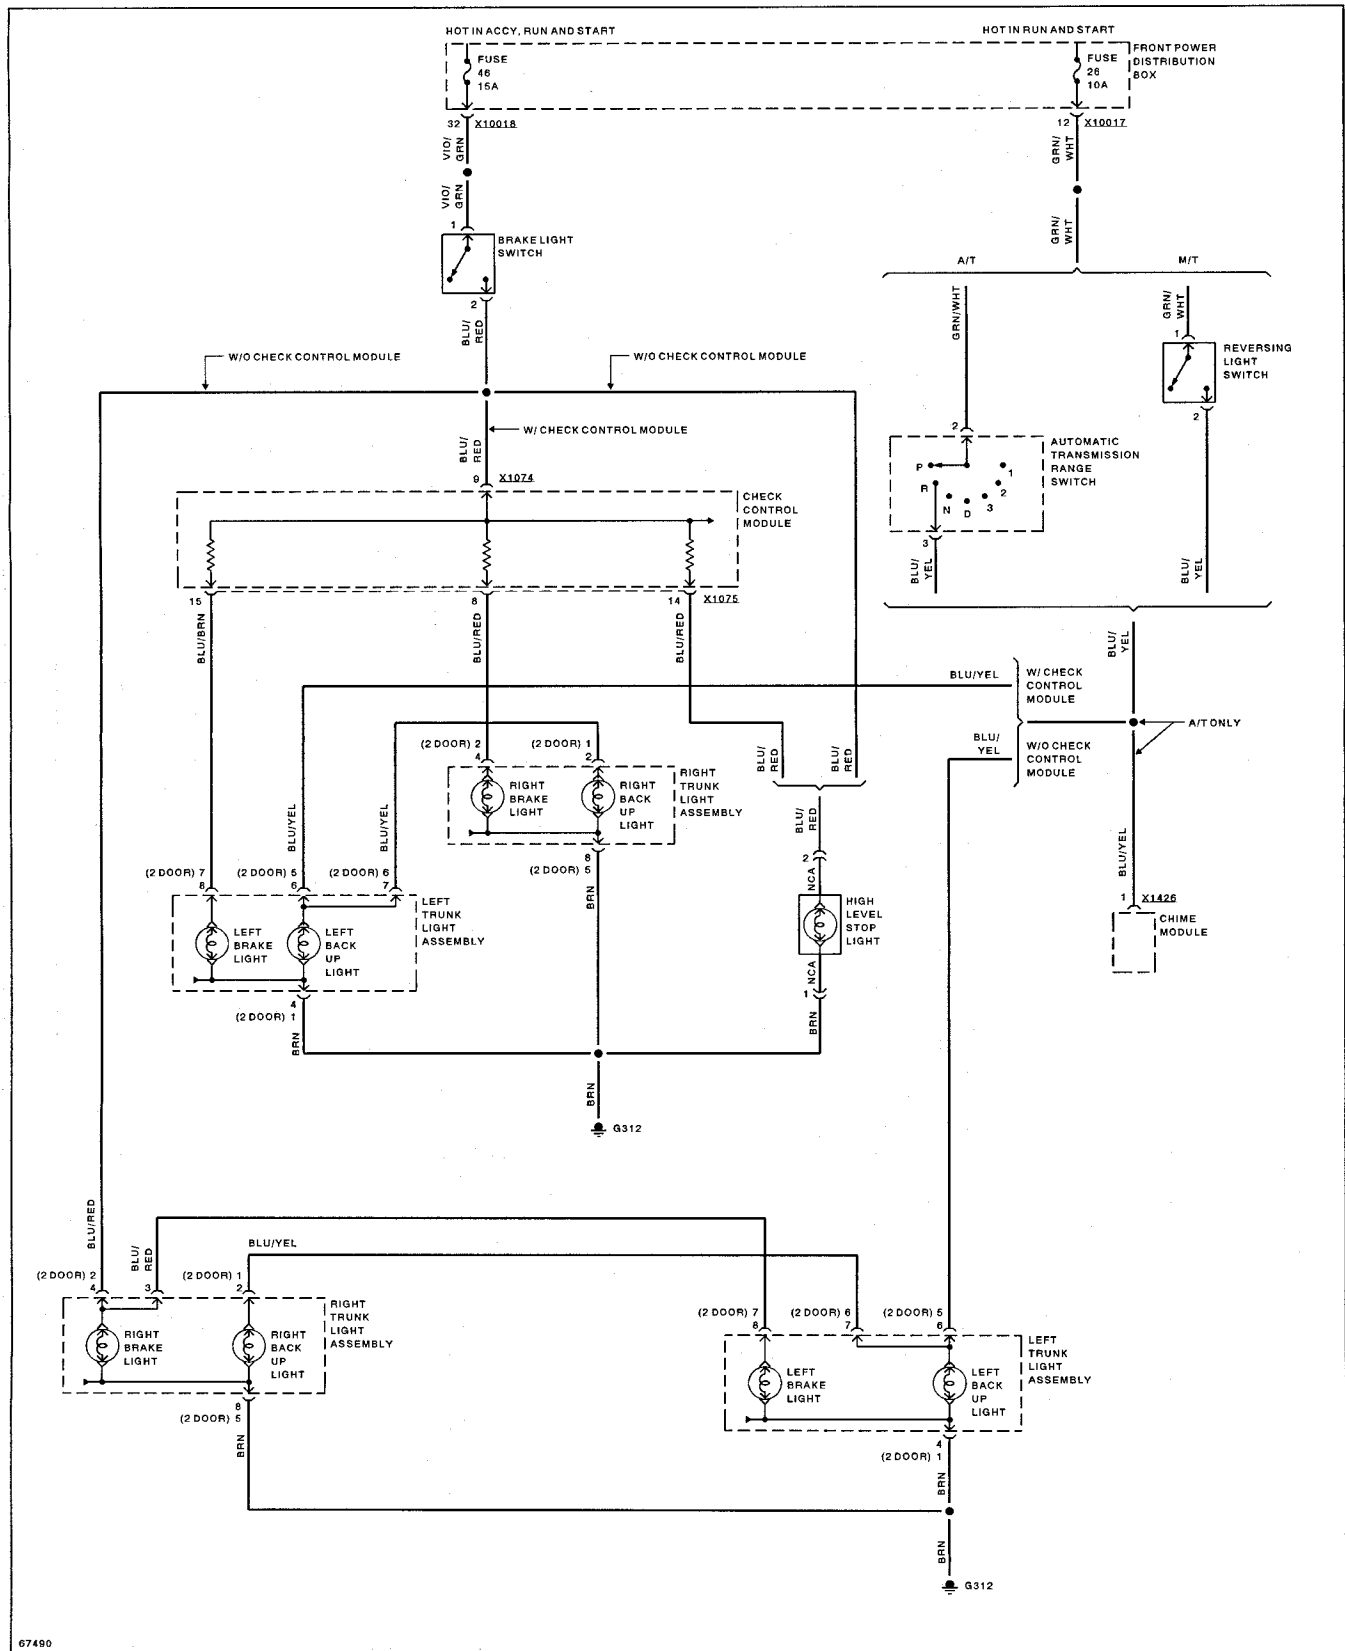


Exterior Lights

1992-93 (USA) (1 of 3)

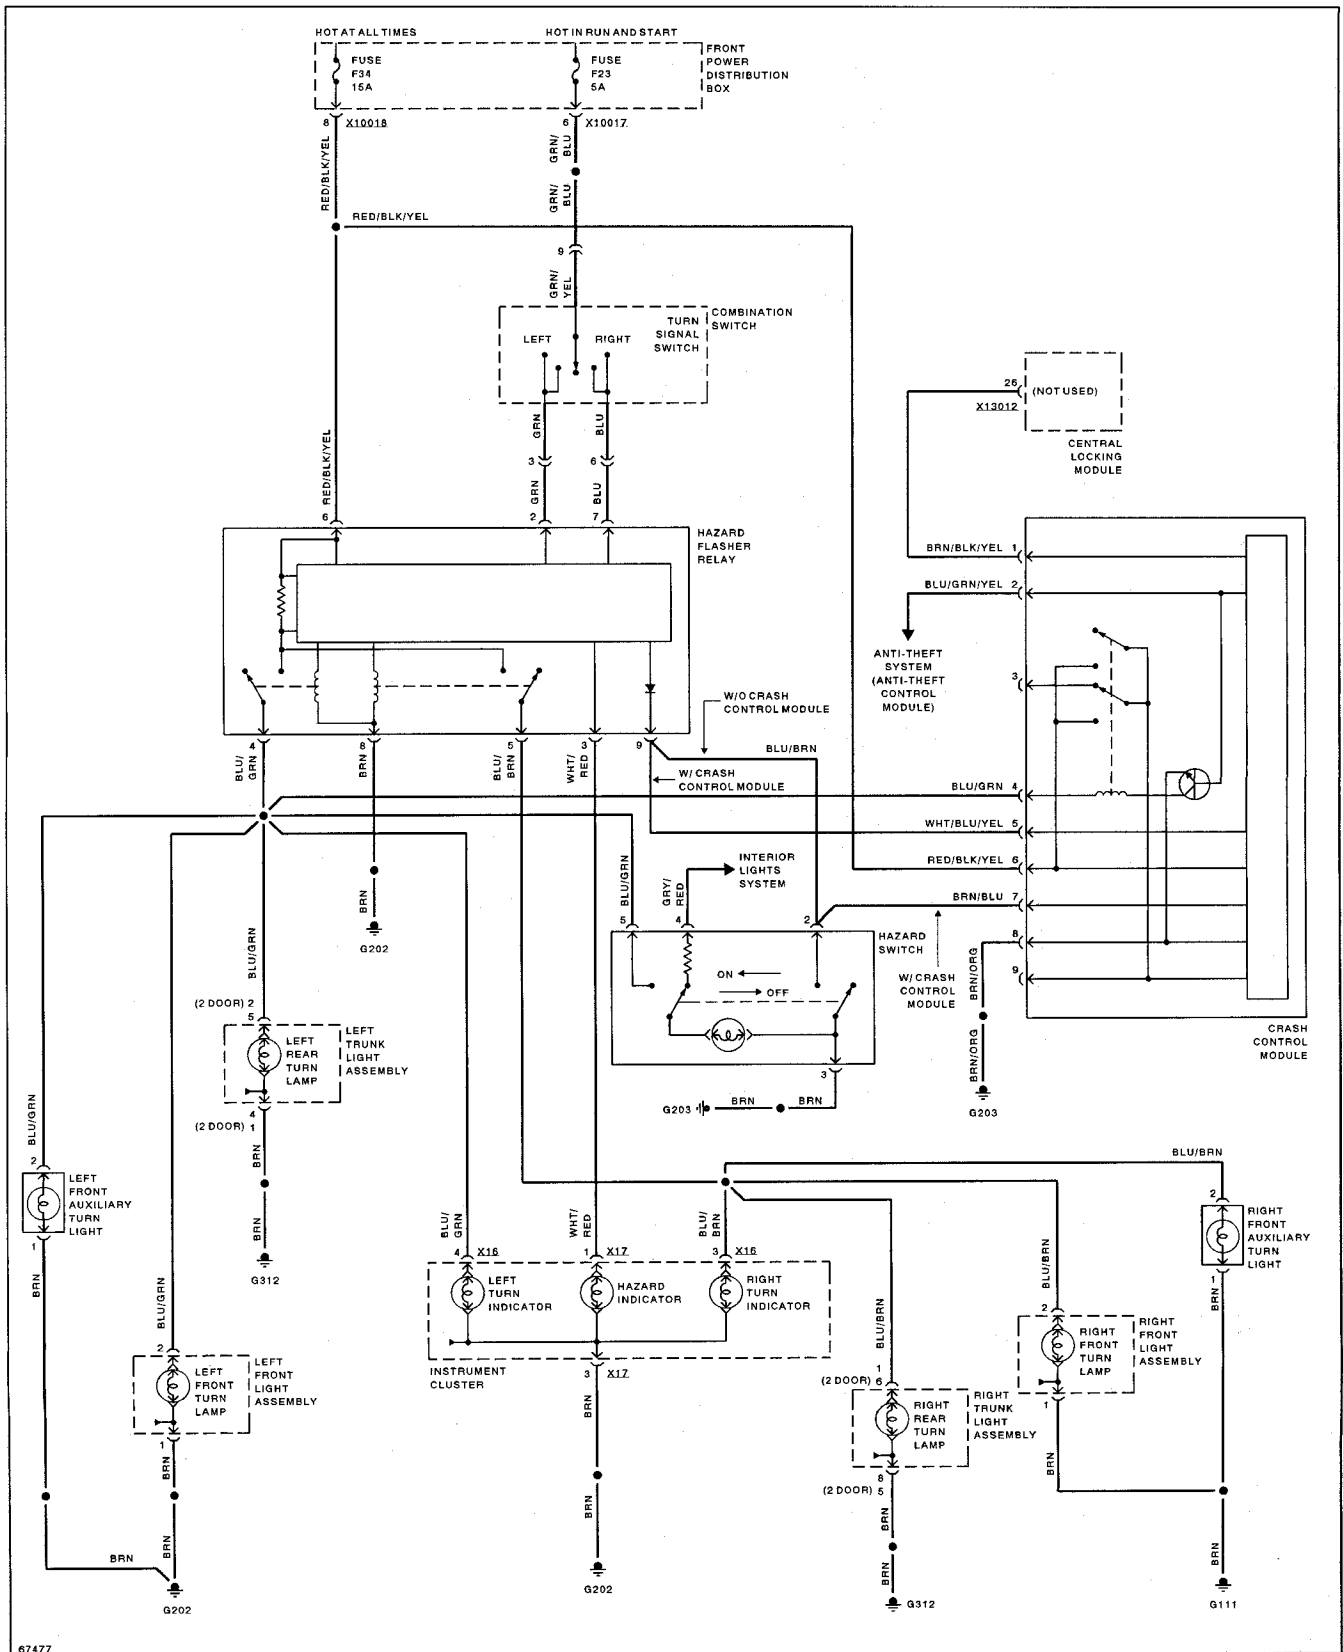

Exterior Lights

1992-93 (USA) (2 of 3)

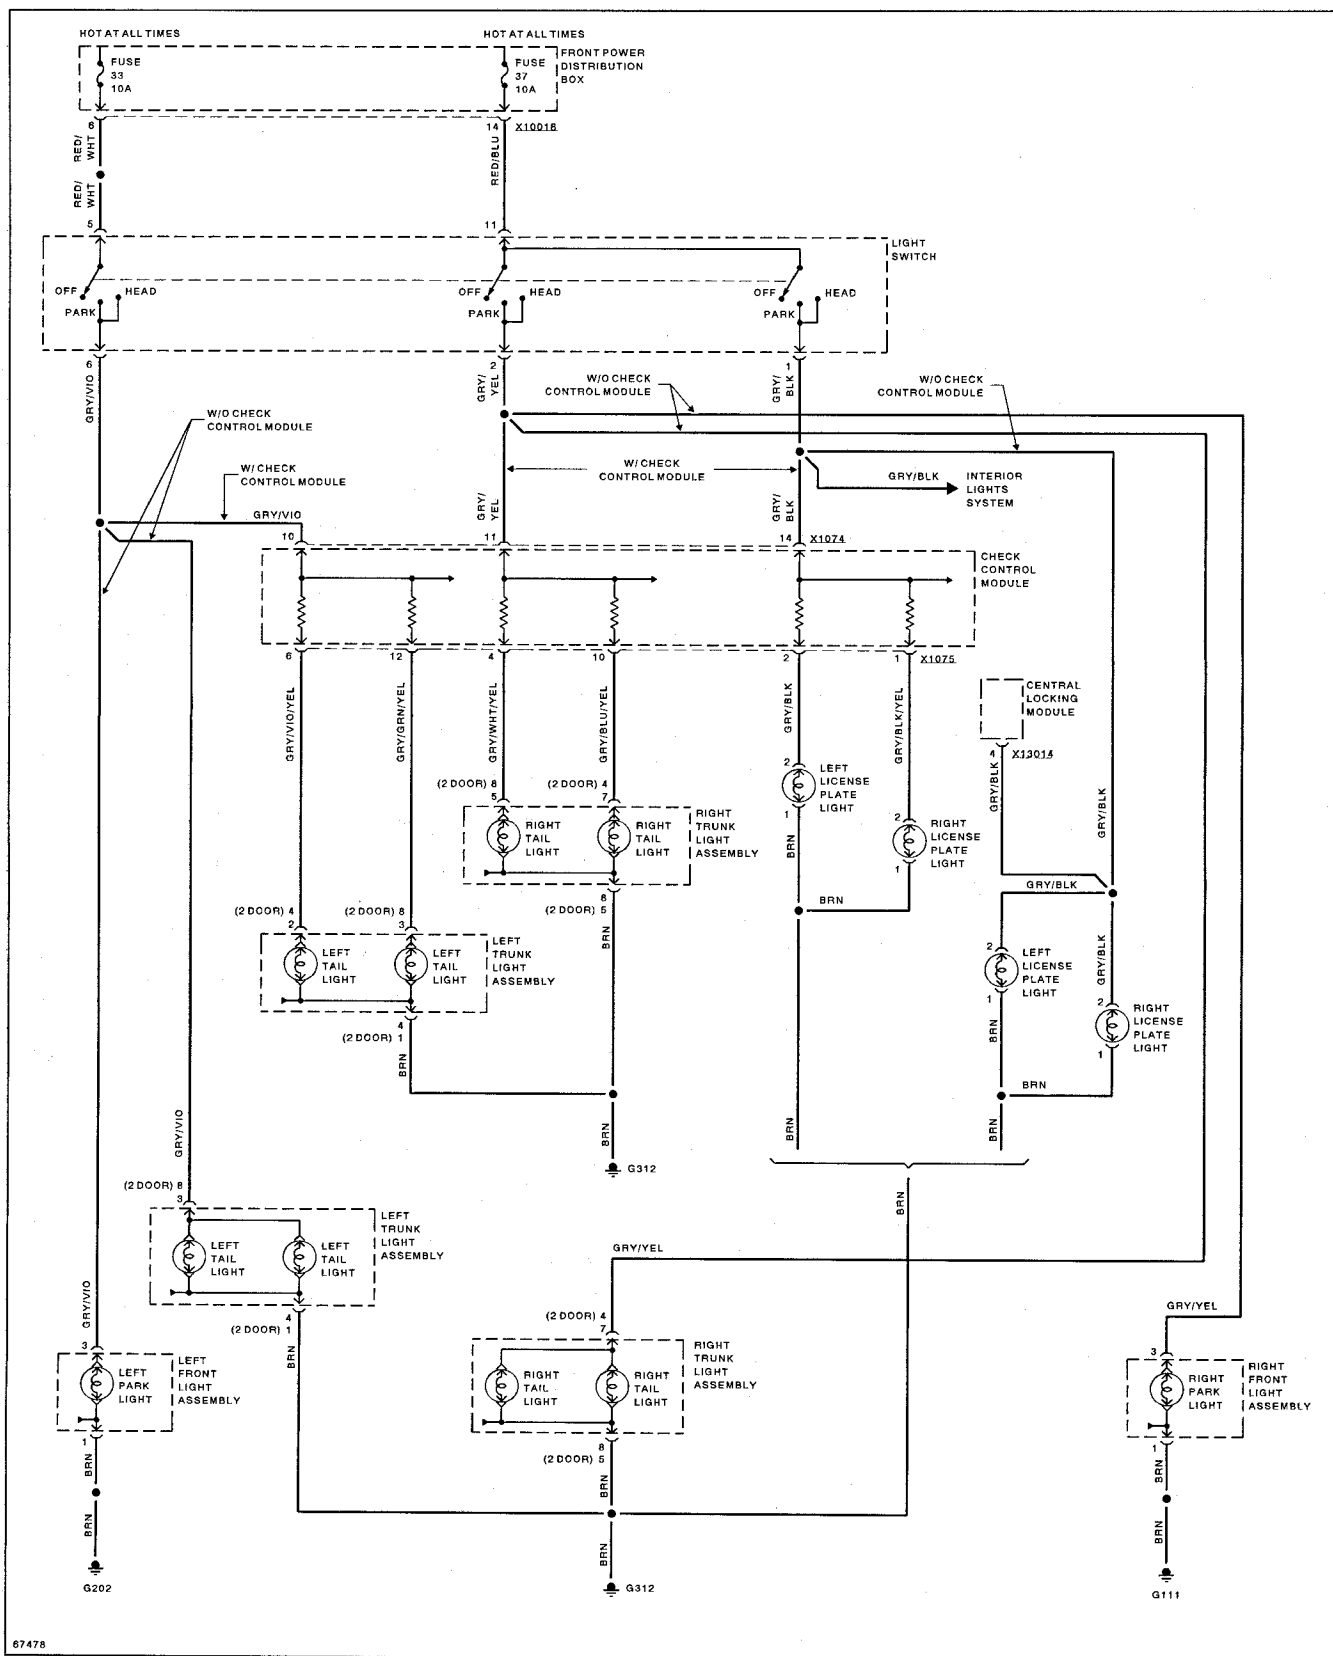


Exterior Lights

1992-93 (USA) (3 of 3)




Exterior Lights

1994-96 Except 318ti (Canada) (1 of 3)

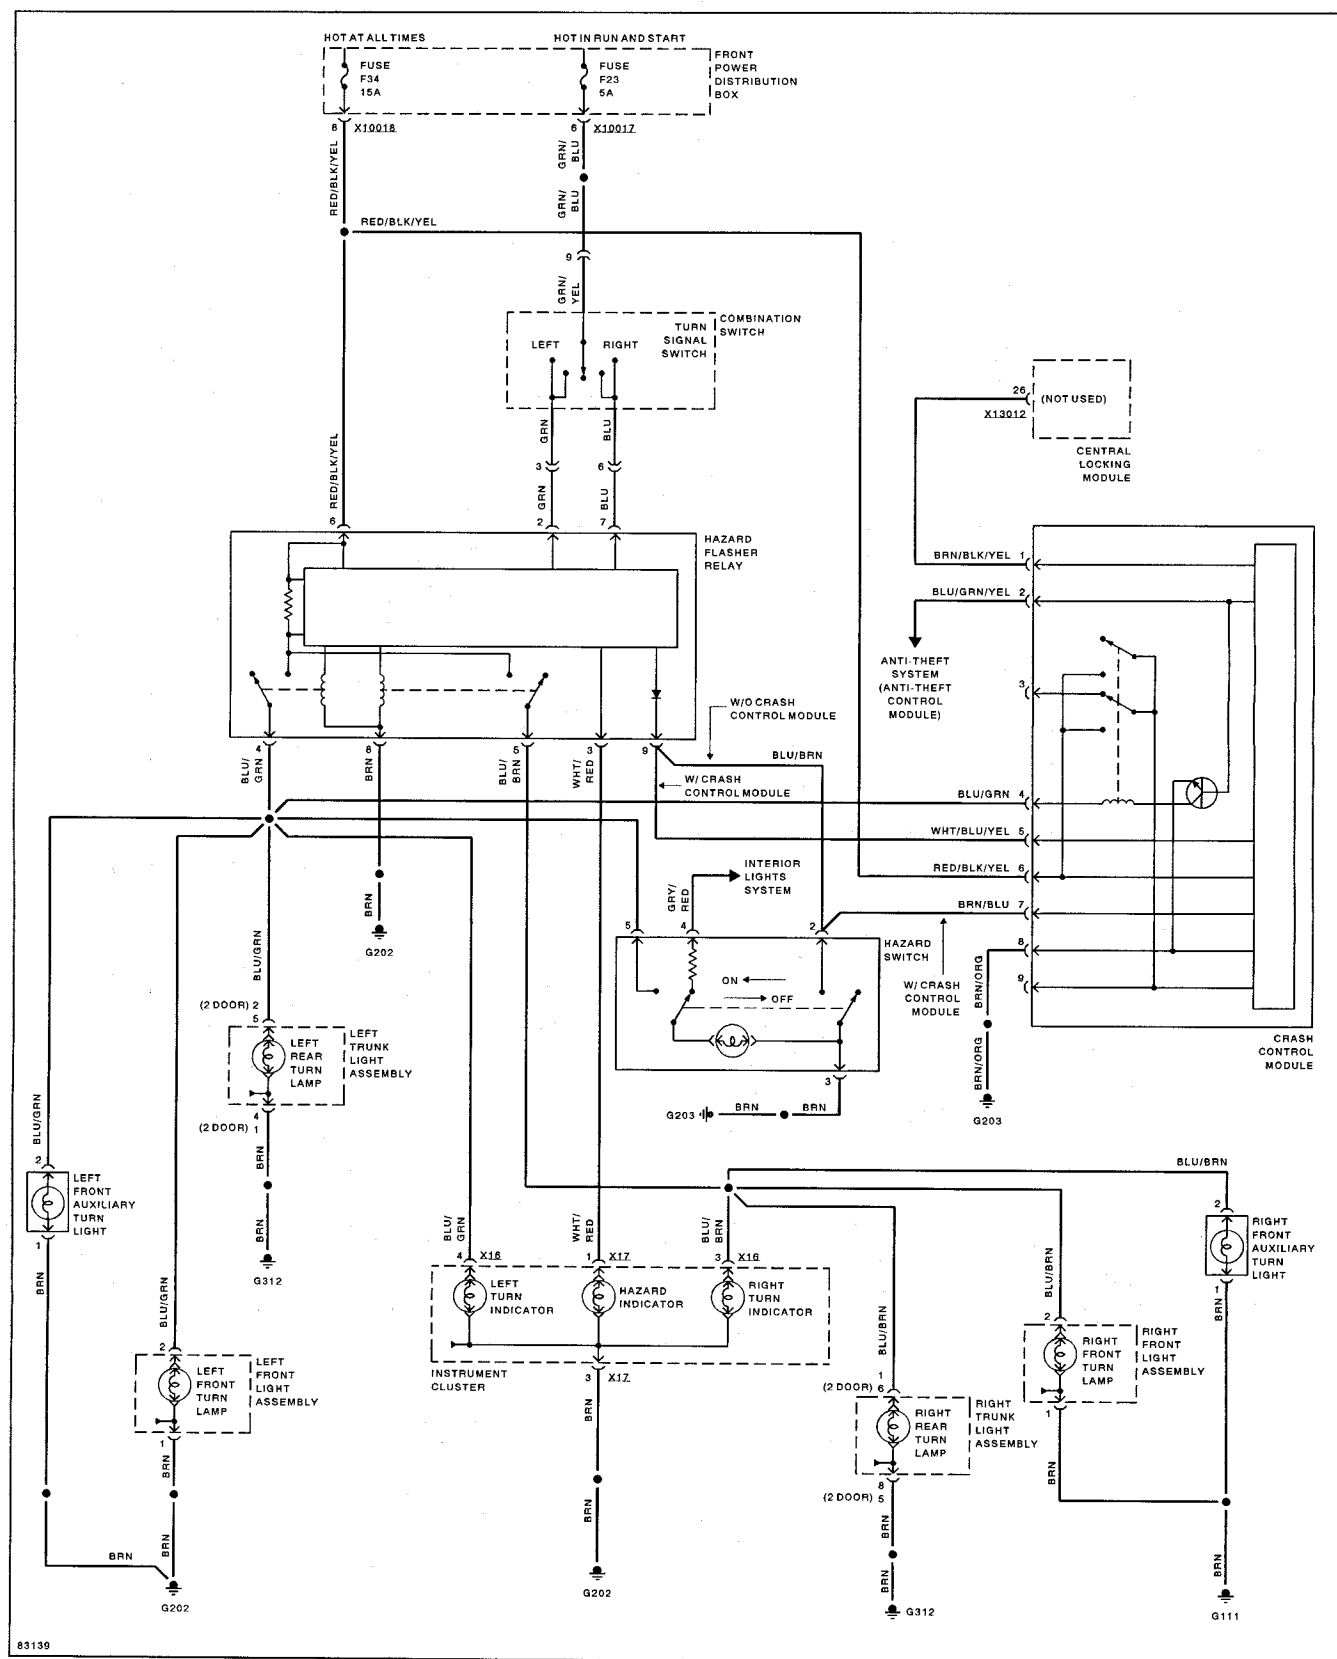


Exterior Lights

1994-96 Except 318ti (Canada) (2 of 3)

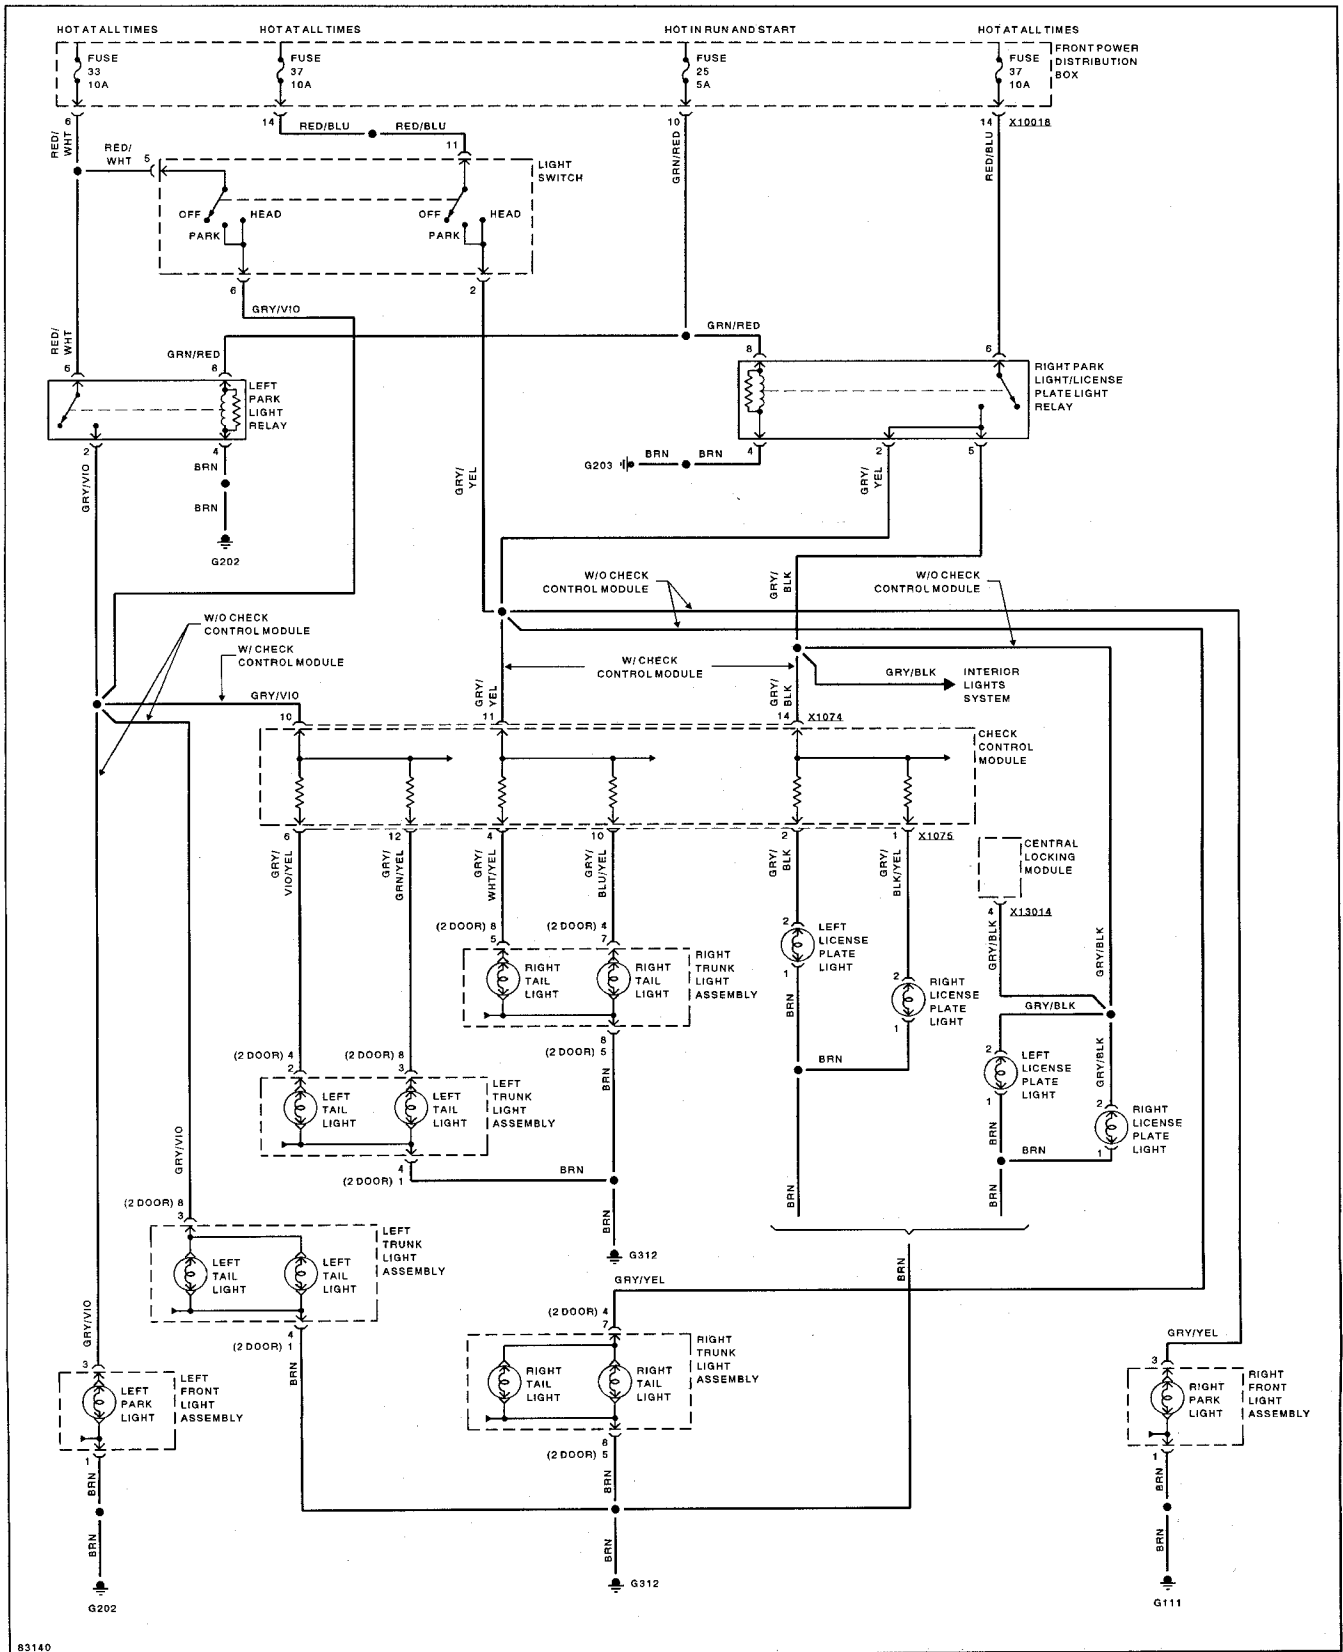


Exterior Lights

1994-96 Except 318ti (Canada) (3 of 3)

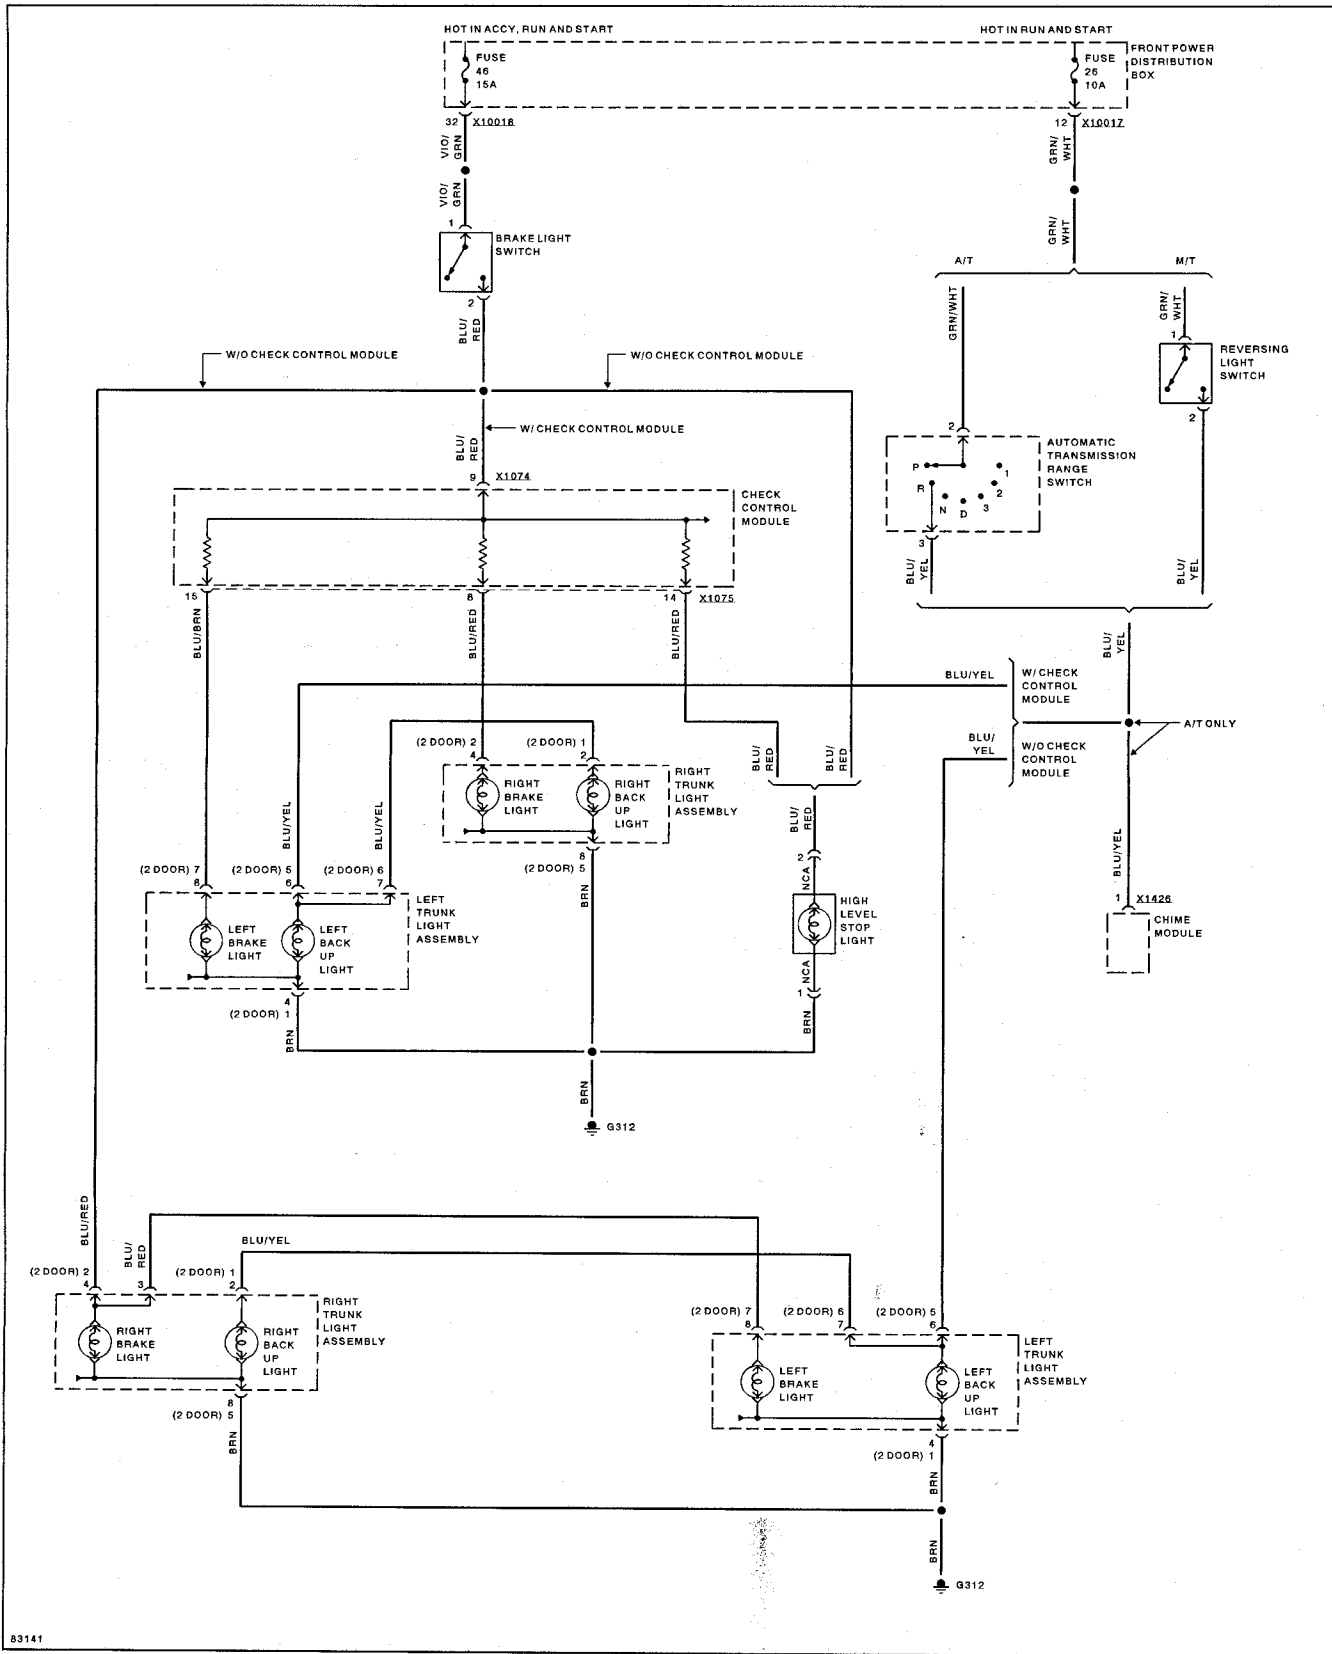


Exterior Lights

1994-96 (USA) & 1997 Except 318ti (1 of 3)

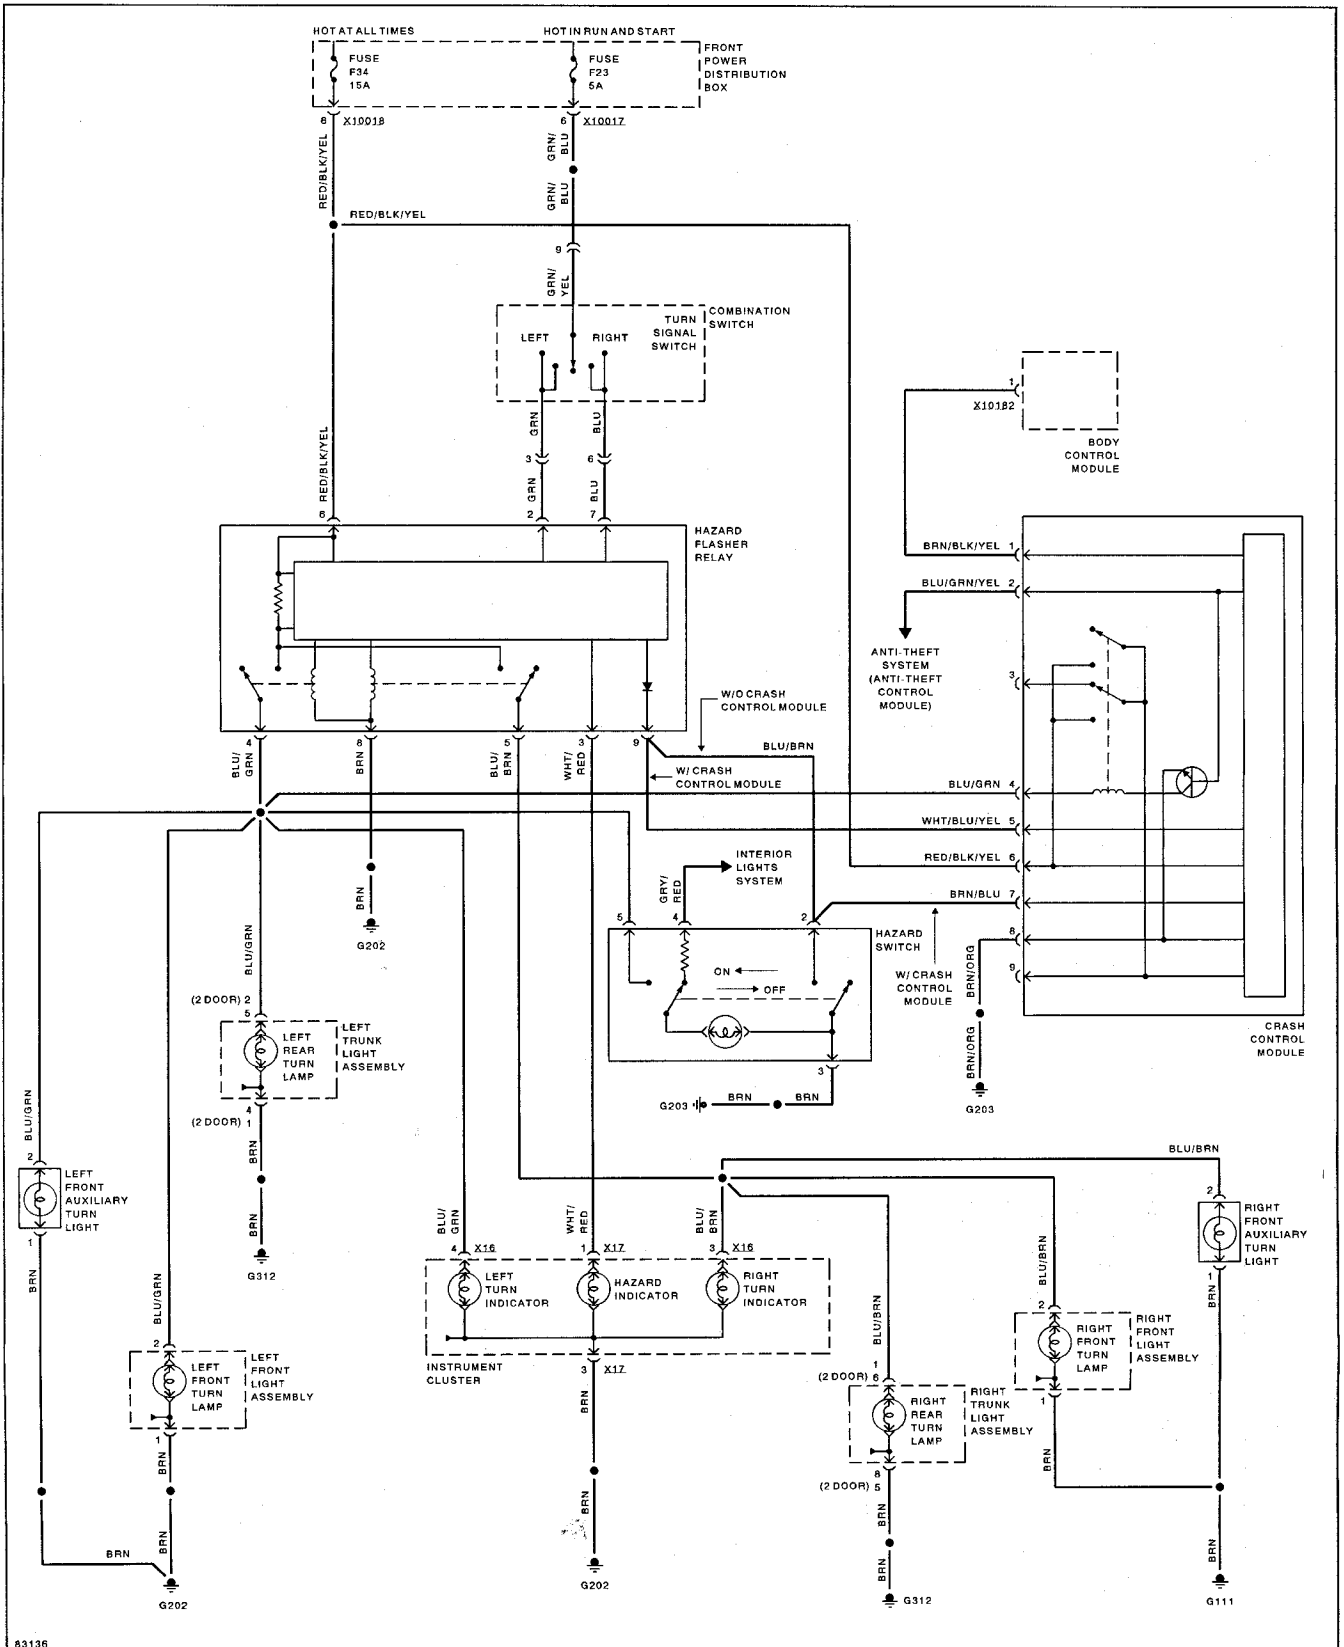


Exterior Lights

1994-96 (USA) & 1997 Except 318ti (2 of 3)

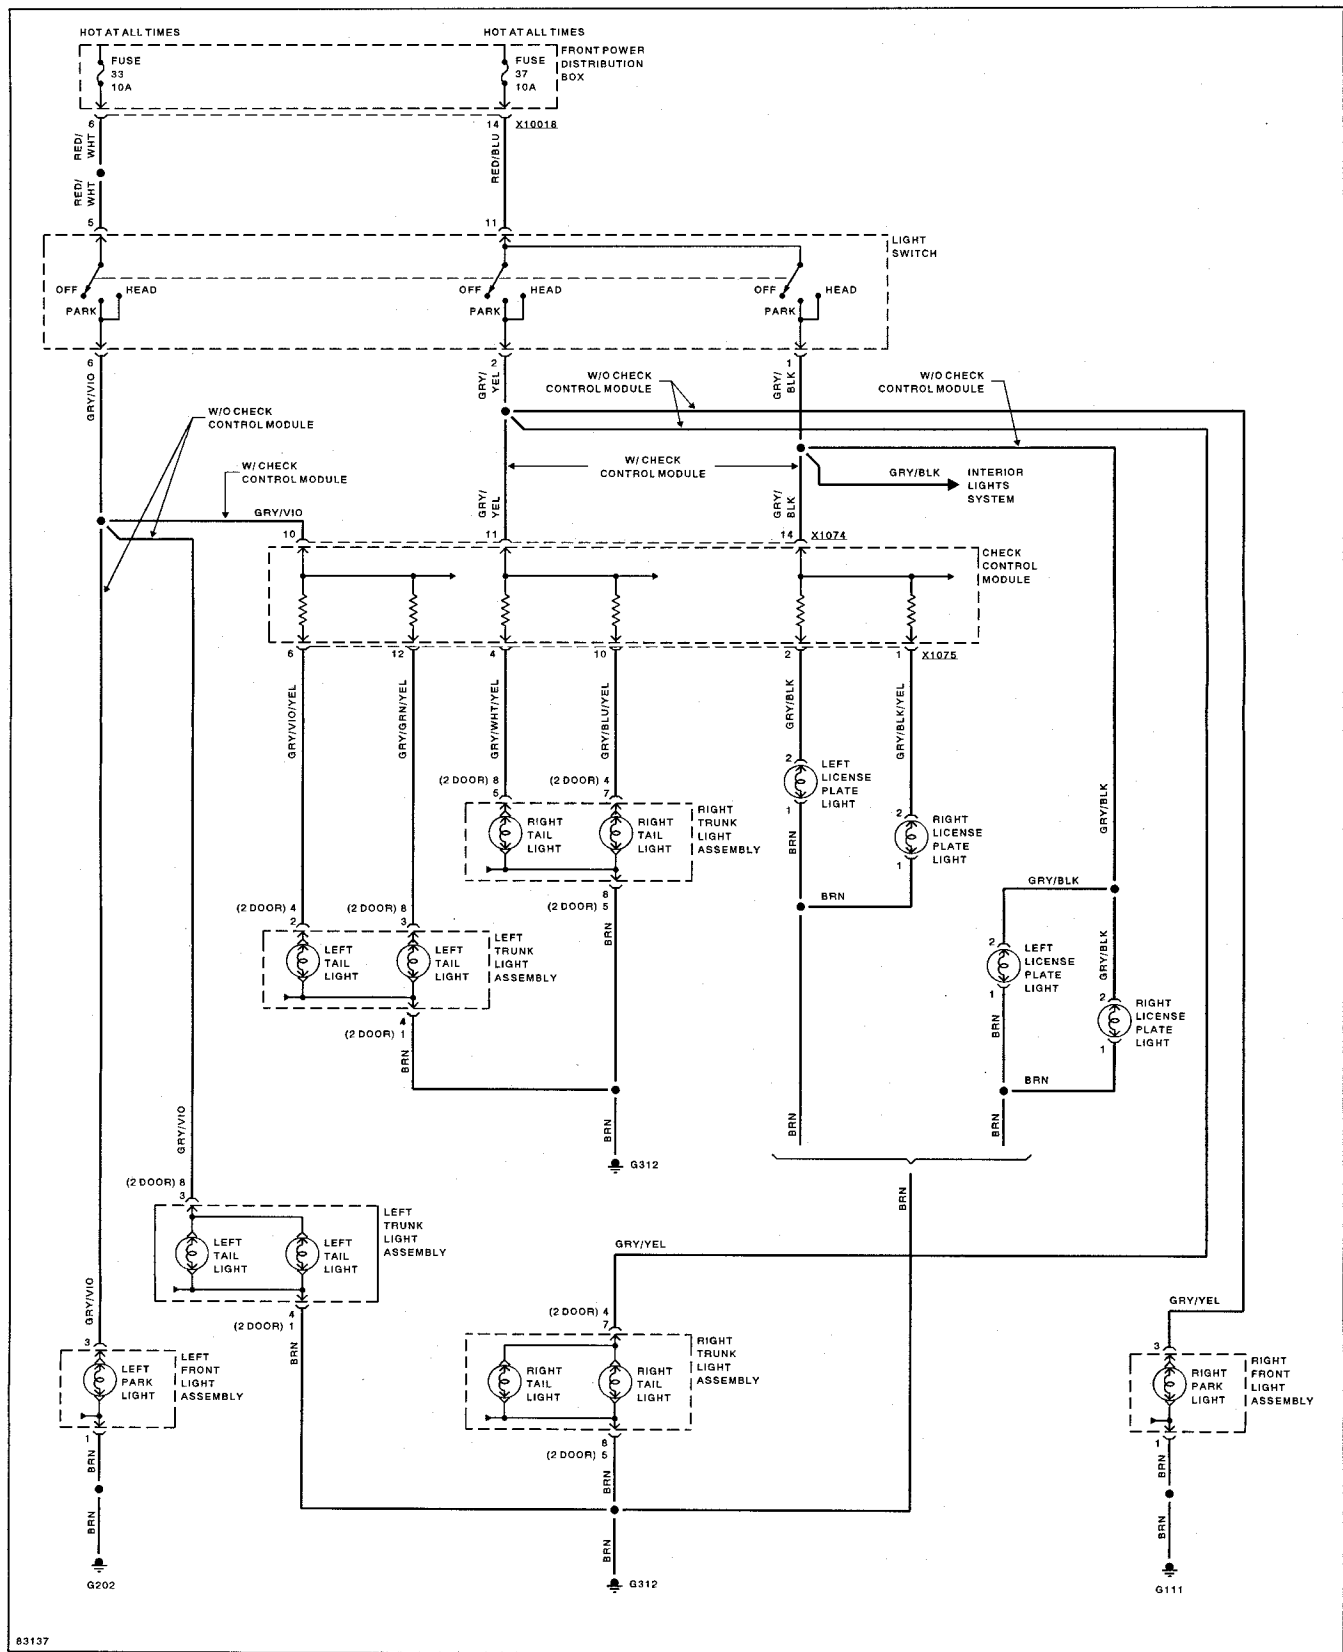


Exterior Lights

1994-96 (USA) & 1997 Except 318ti (3 of 3)

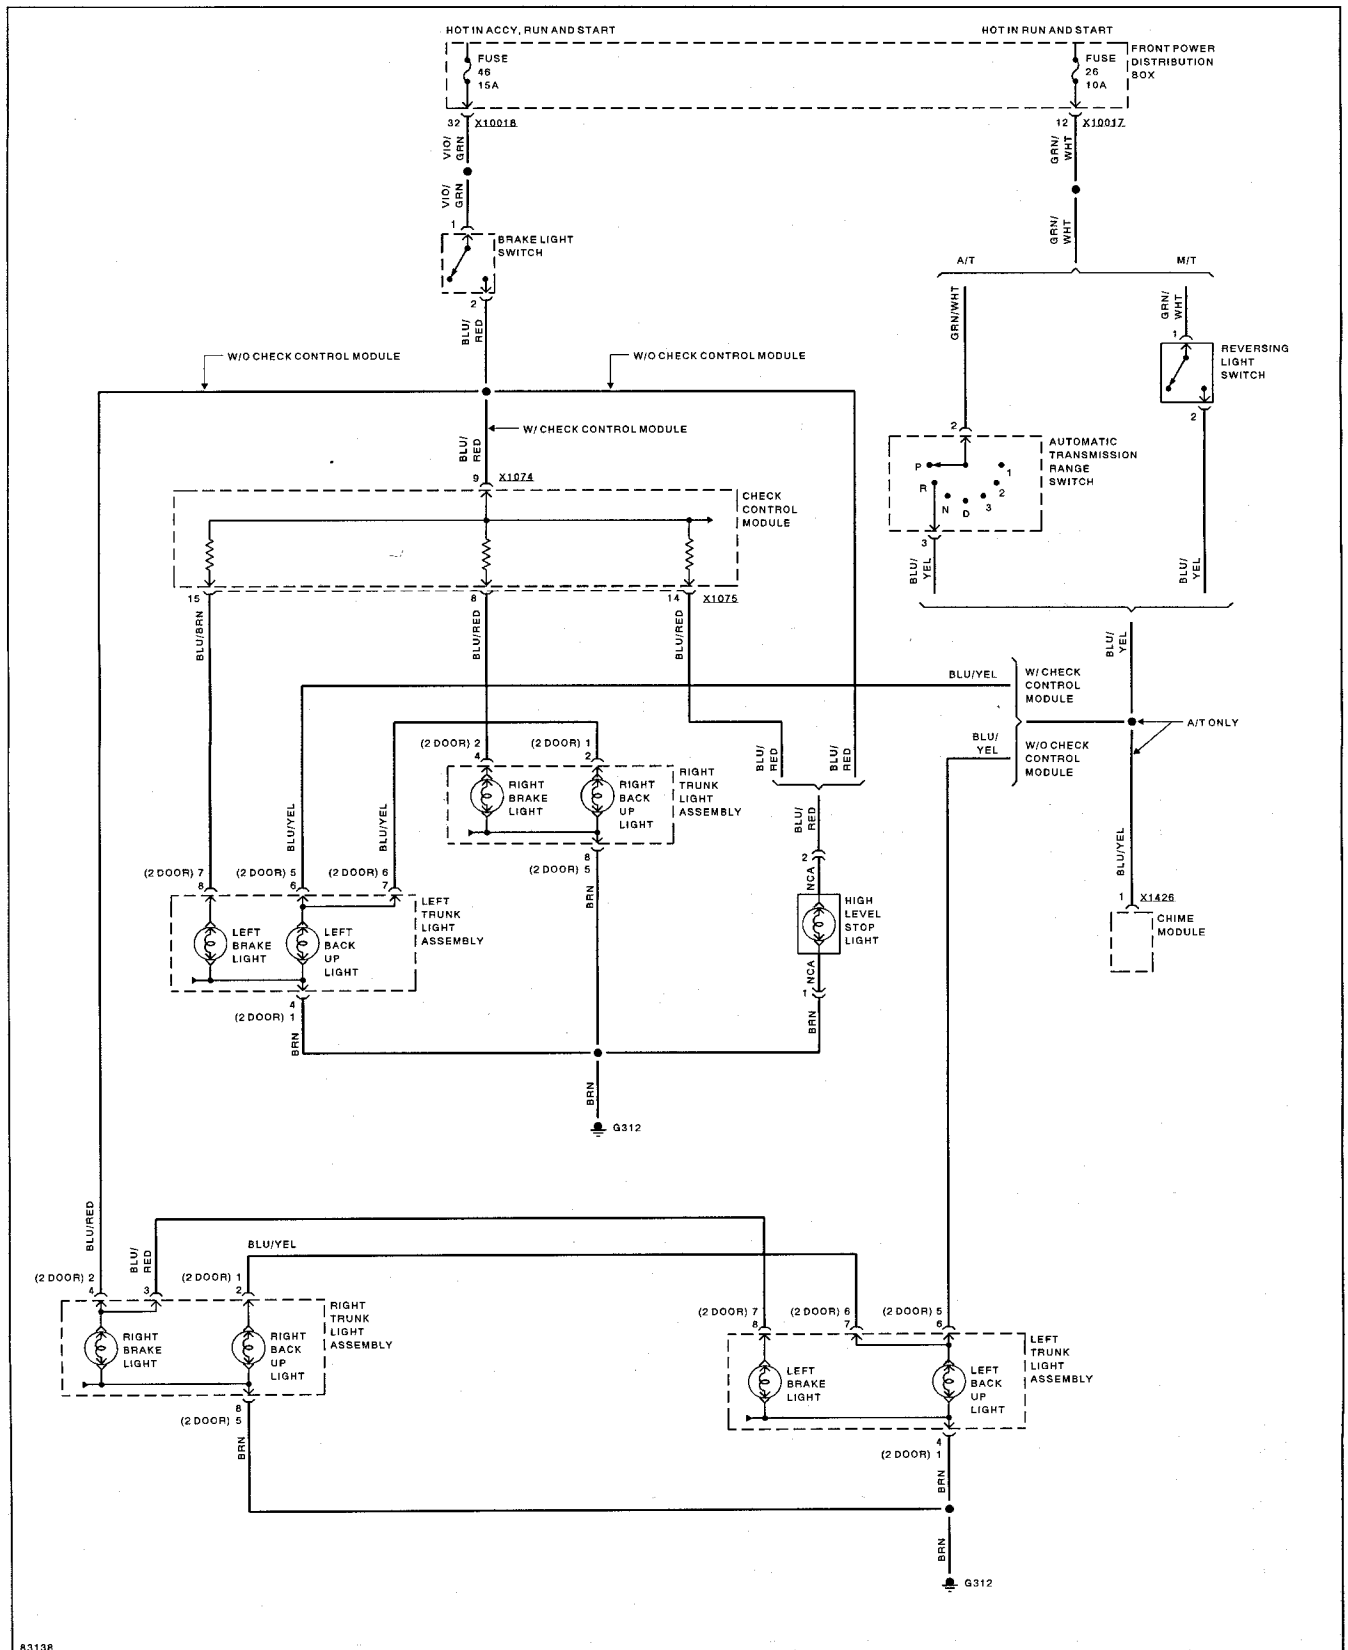

Exterior Lights

1998 Except 318ti (1 of 3)

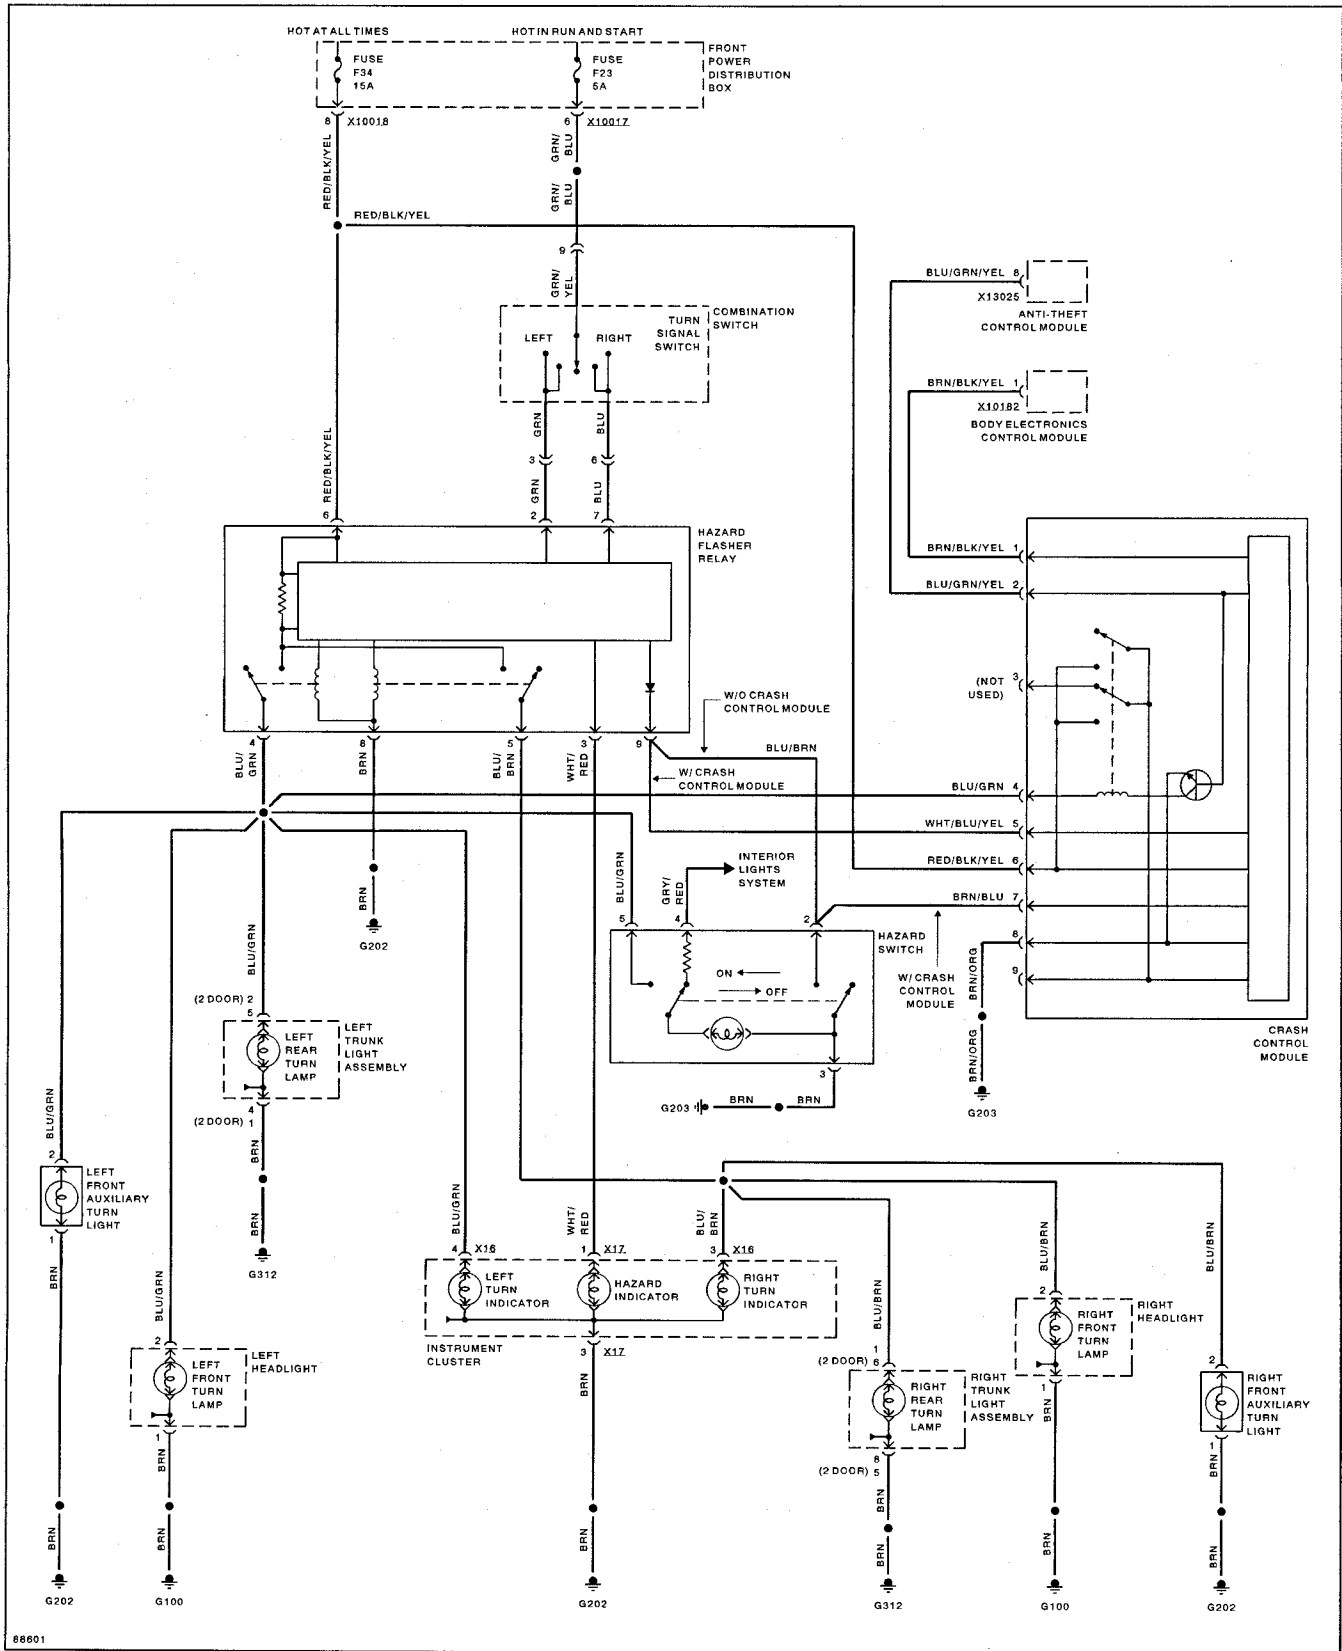


Exterior Lights

1998 Except 318ti (2 of 3)




Exterior Lights

1998 Except 318ti (3 of 3)

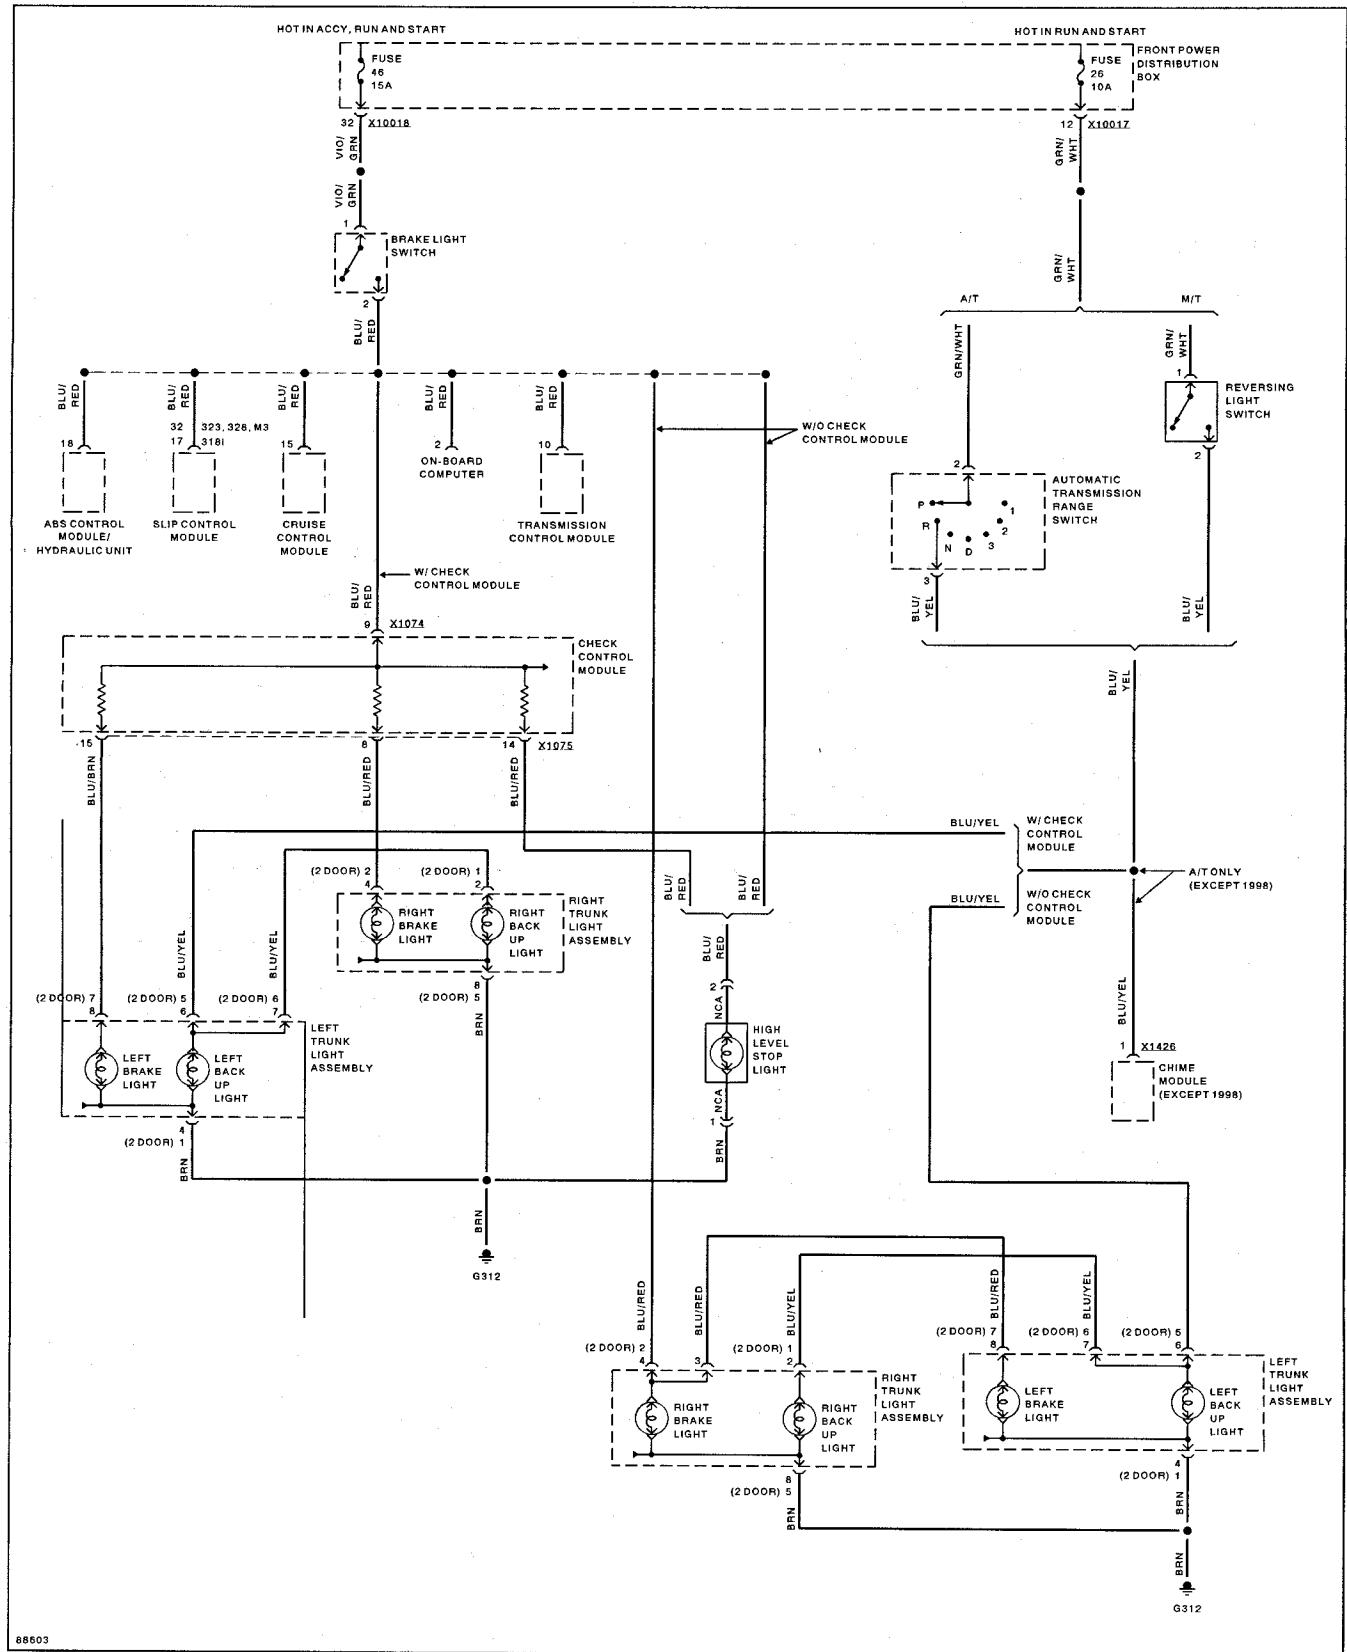


Exterior Lights

1995-98 318ti (1 of 2)

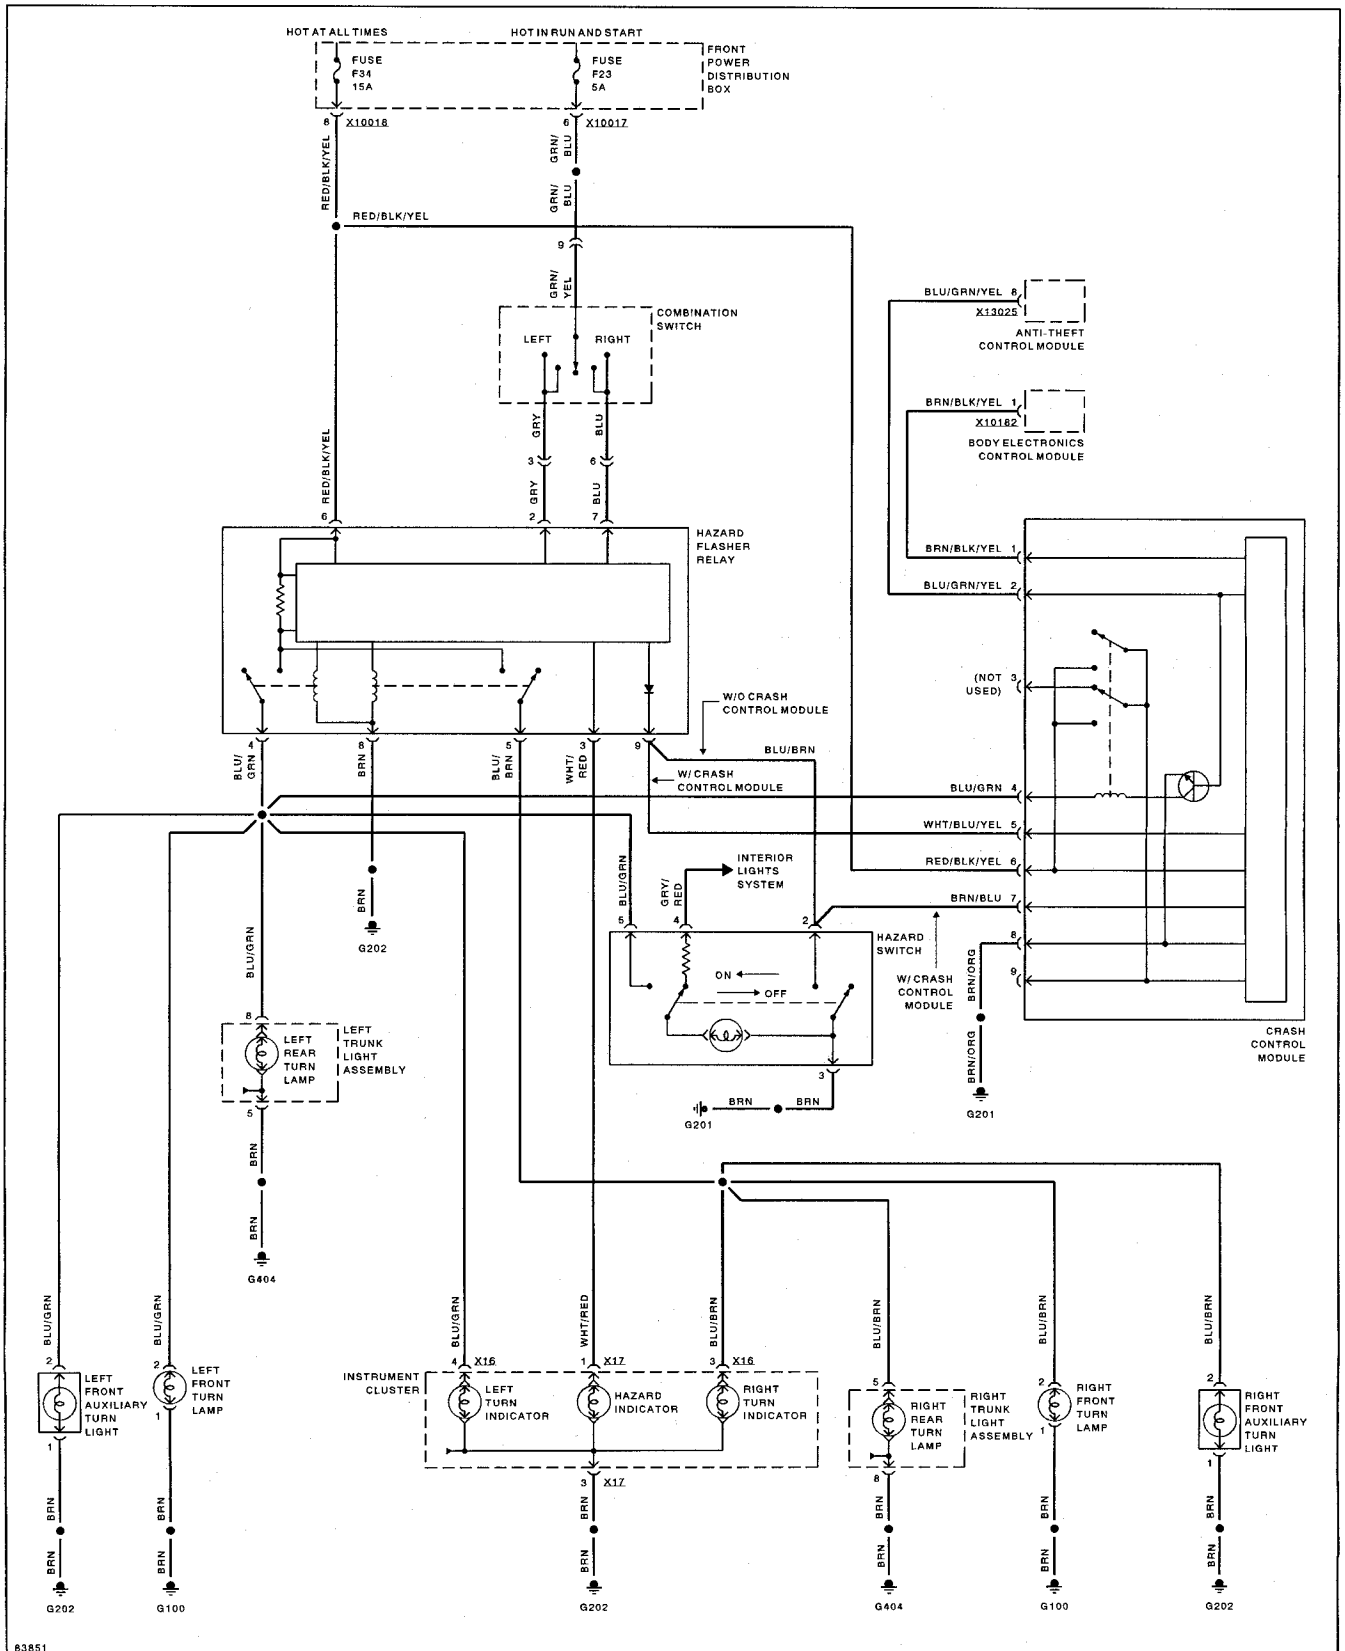

Exterior Lights 1995-98 318ti (2 of 2)

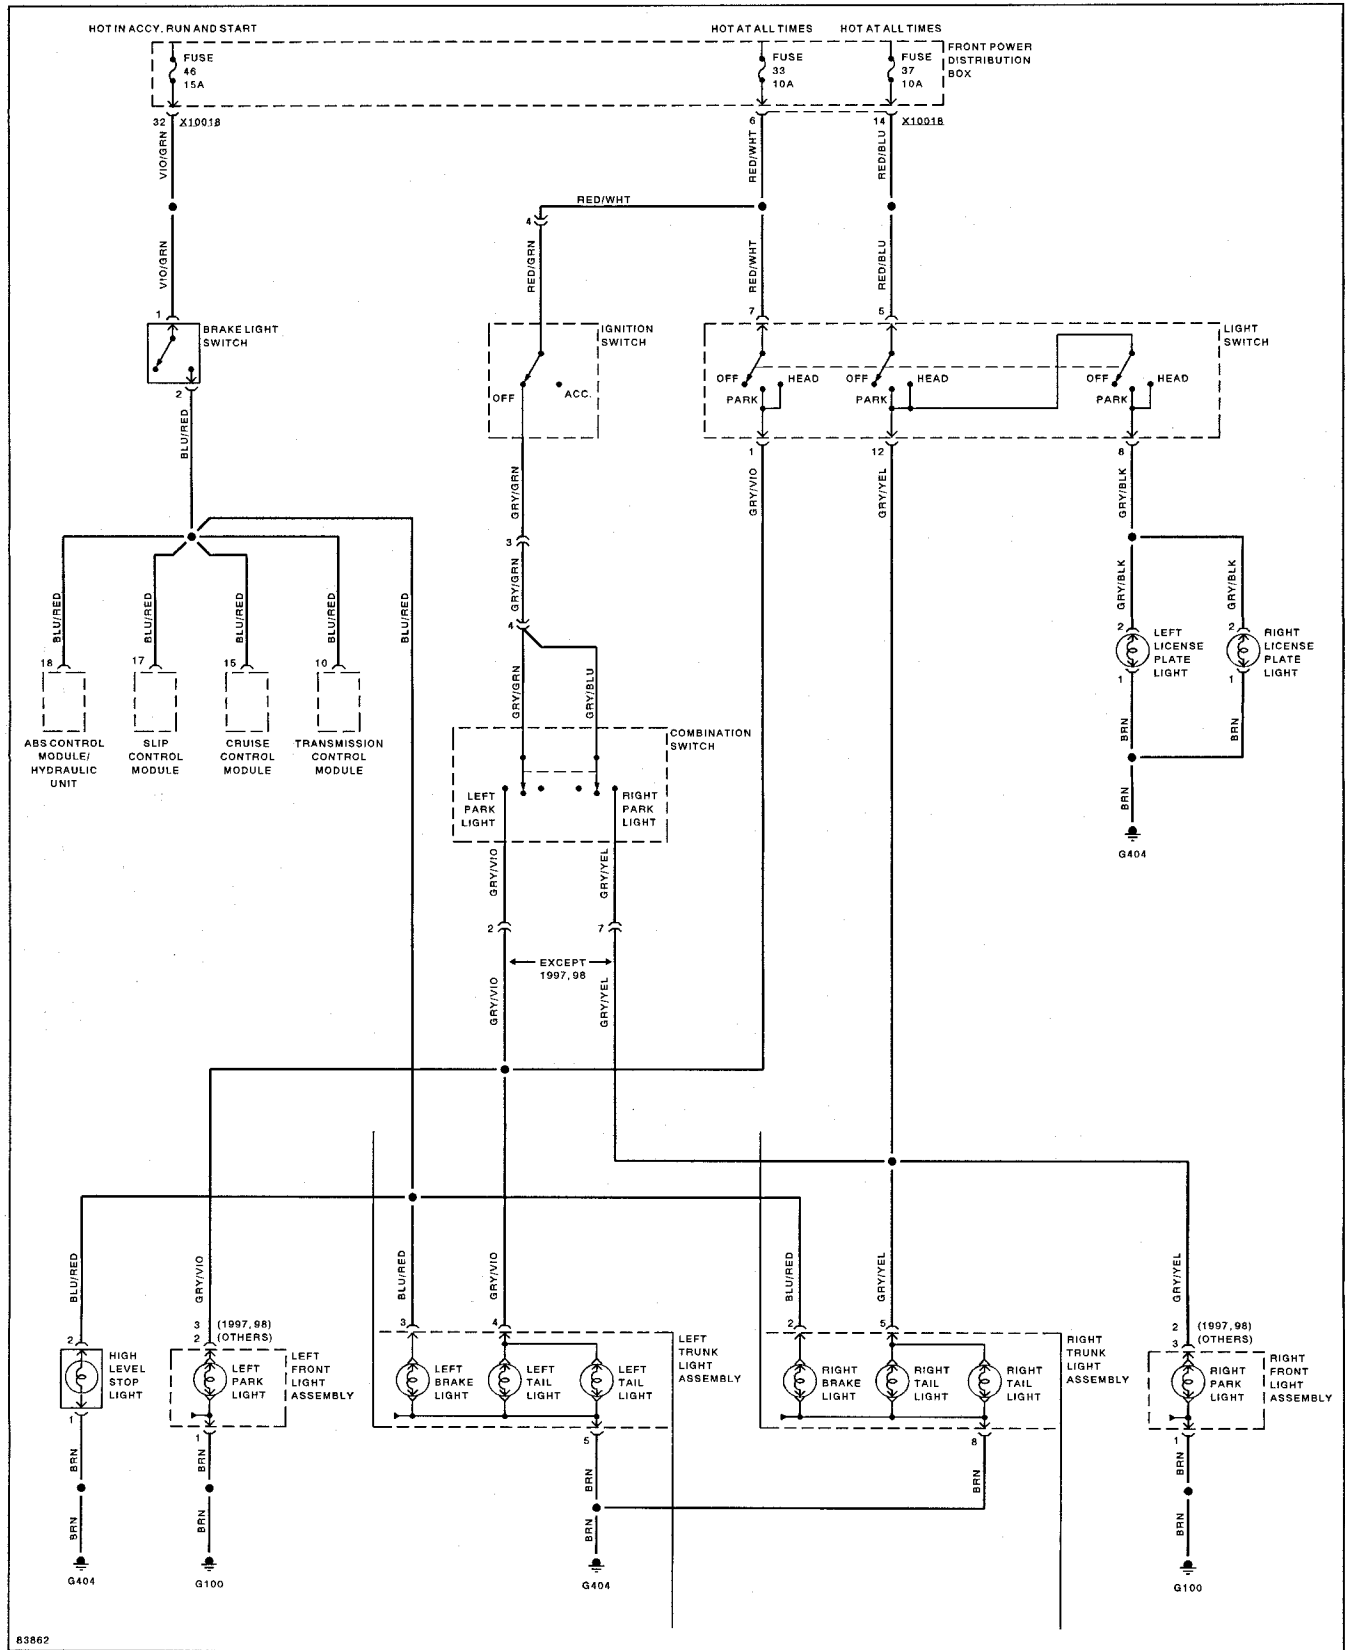


1992-93 (1 of 2)




Interior Lights/Illumination

1992-93 (2 of 2)

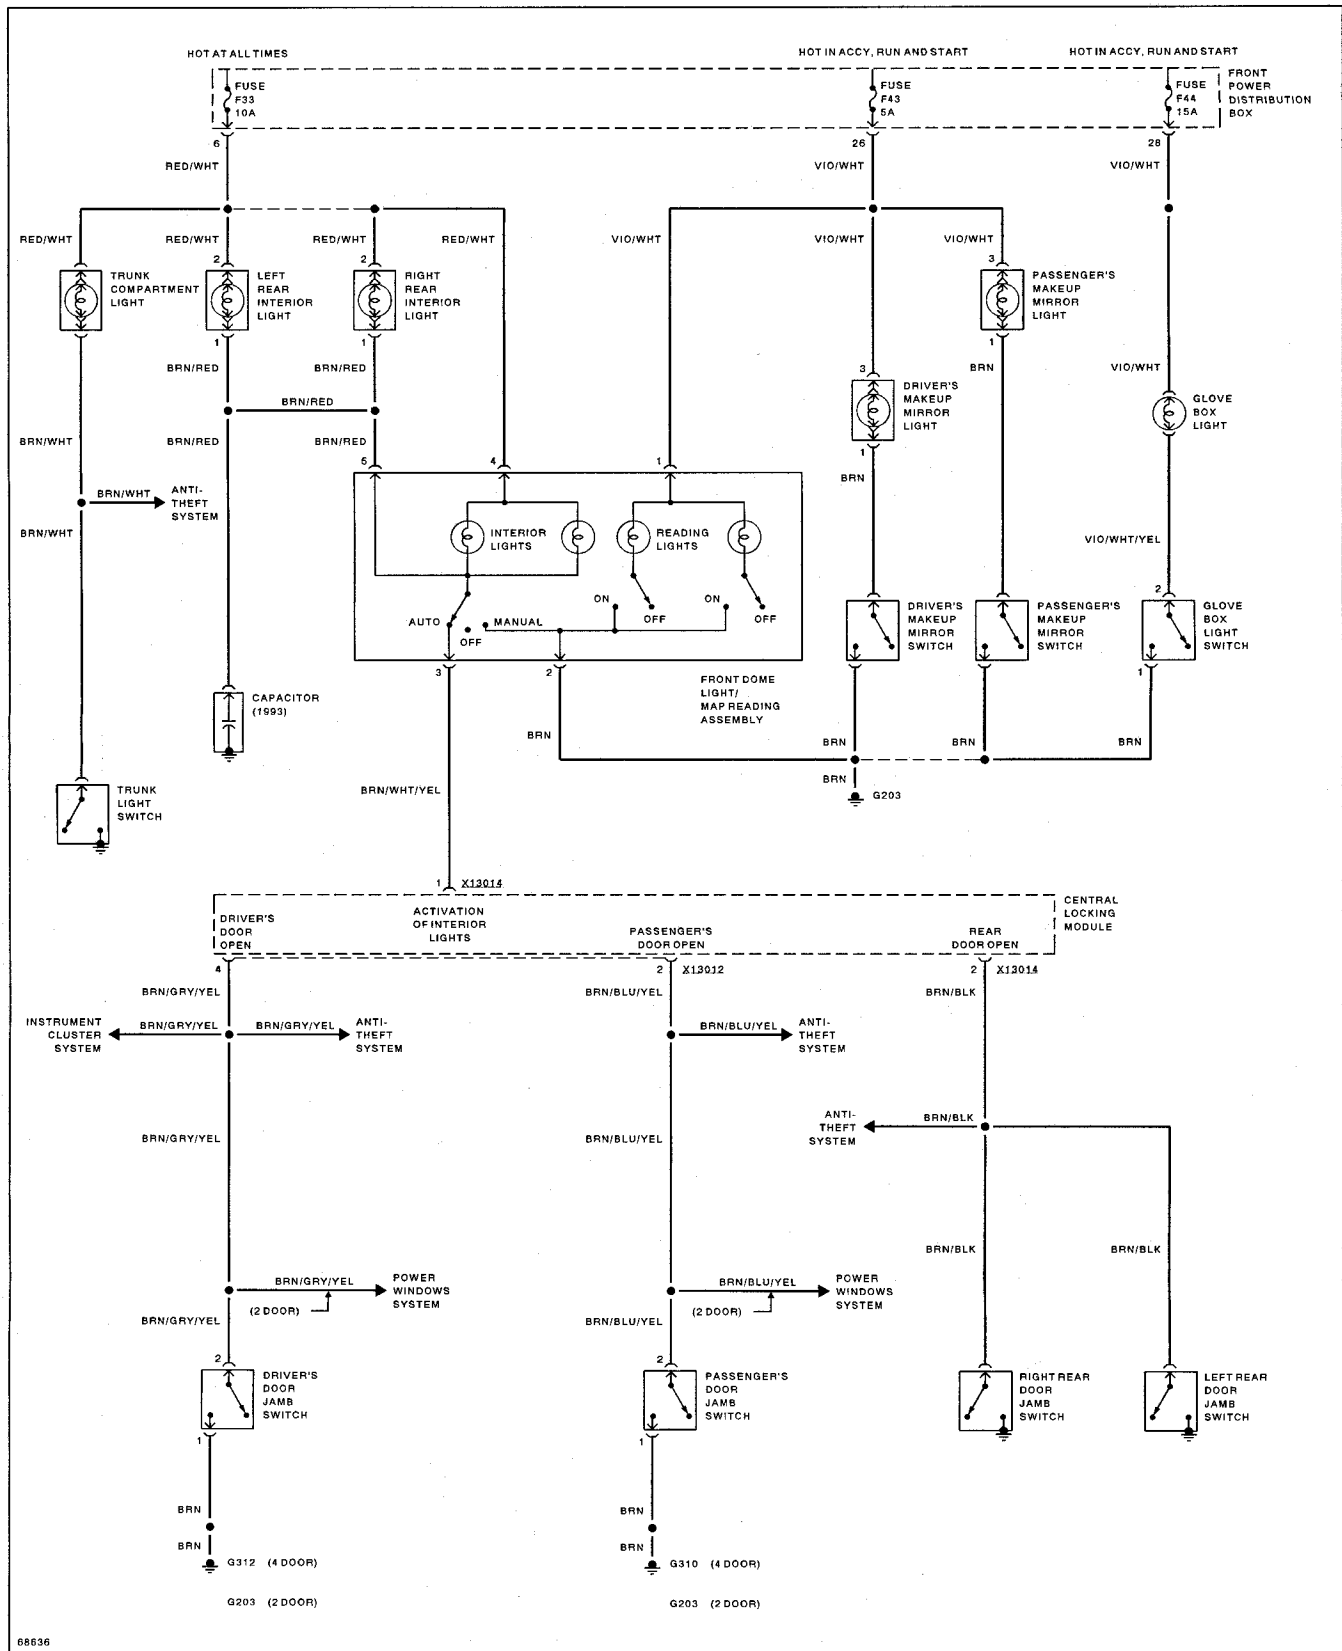


Interior Lights/Illumination

1994-97 Convertible (1 of 2)

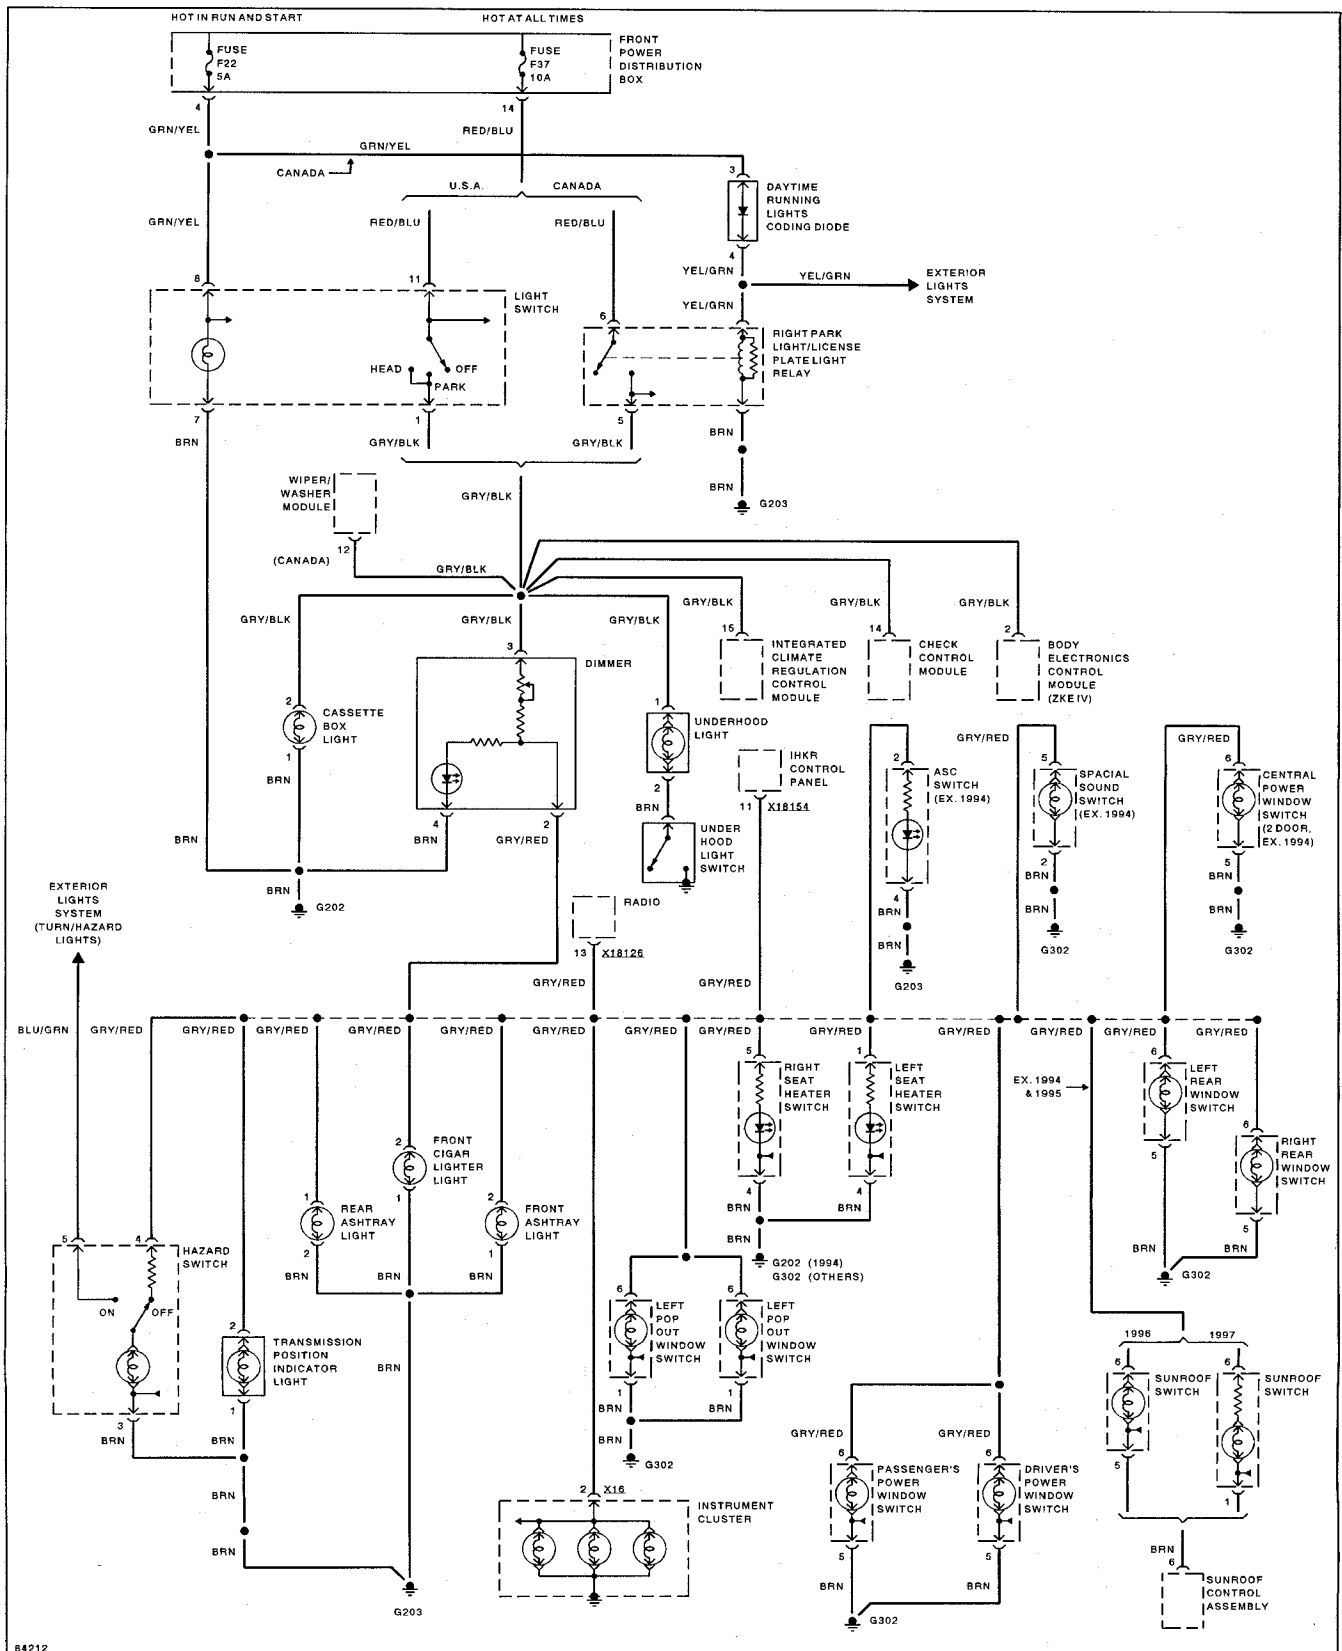


Interior Lights/Illumination

1994-97 Convertible (2 of 2)

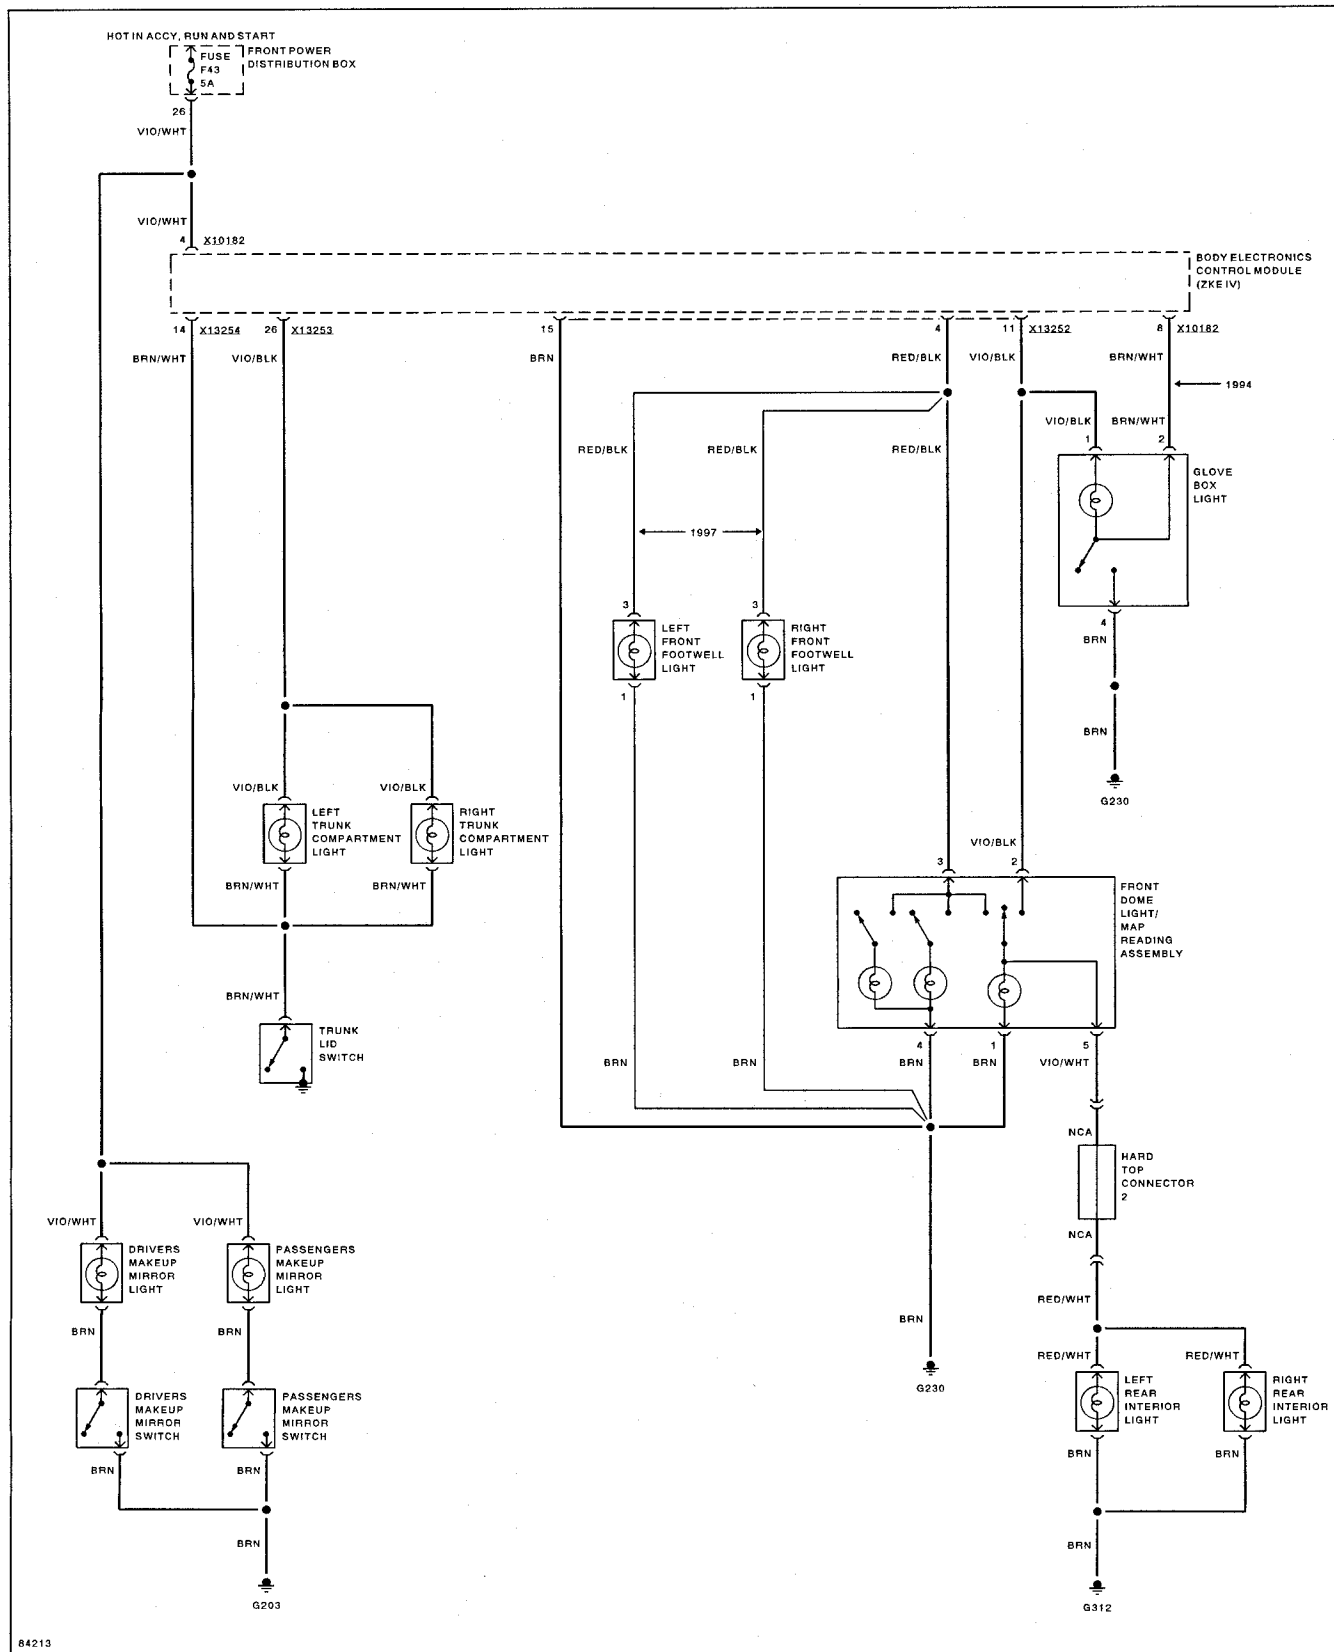


Interior Lights/Illumination 1998 Convertible

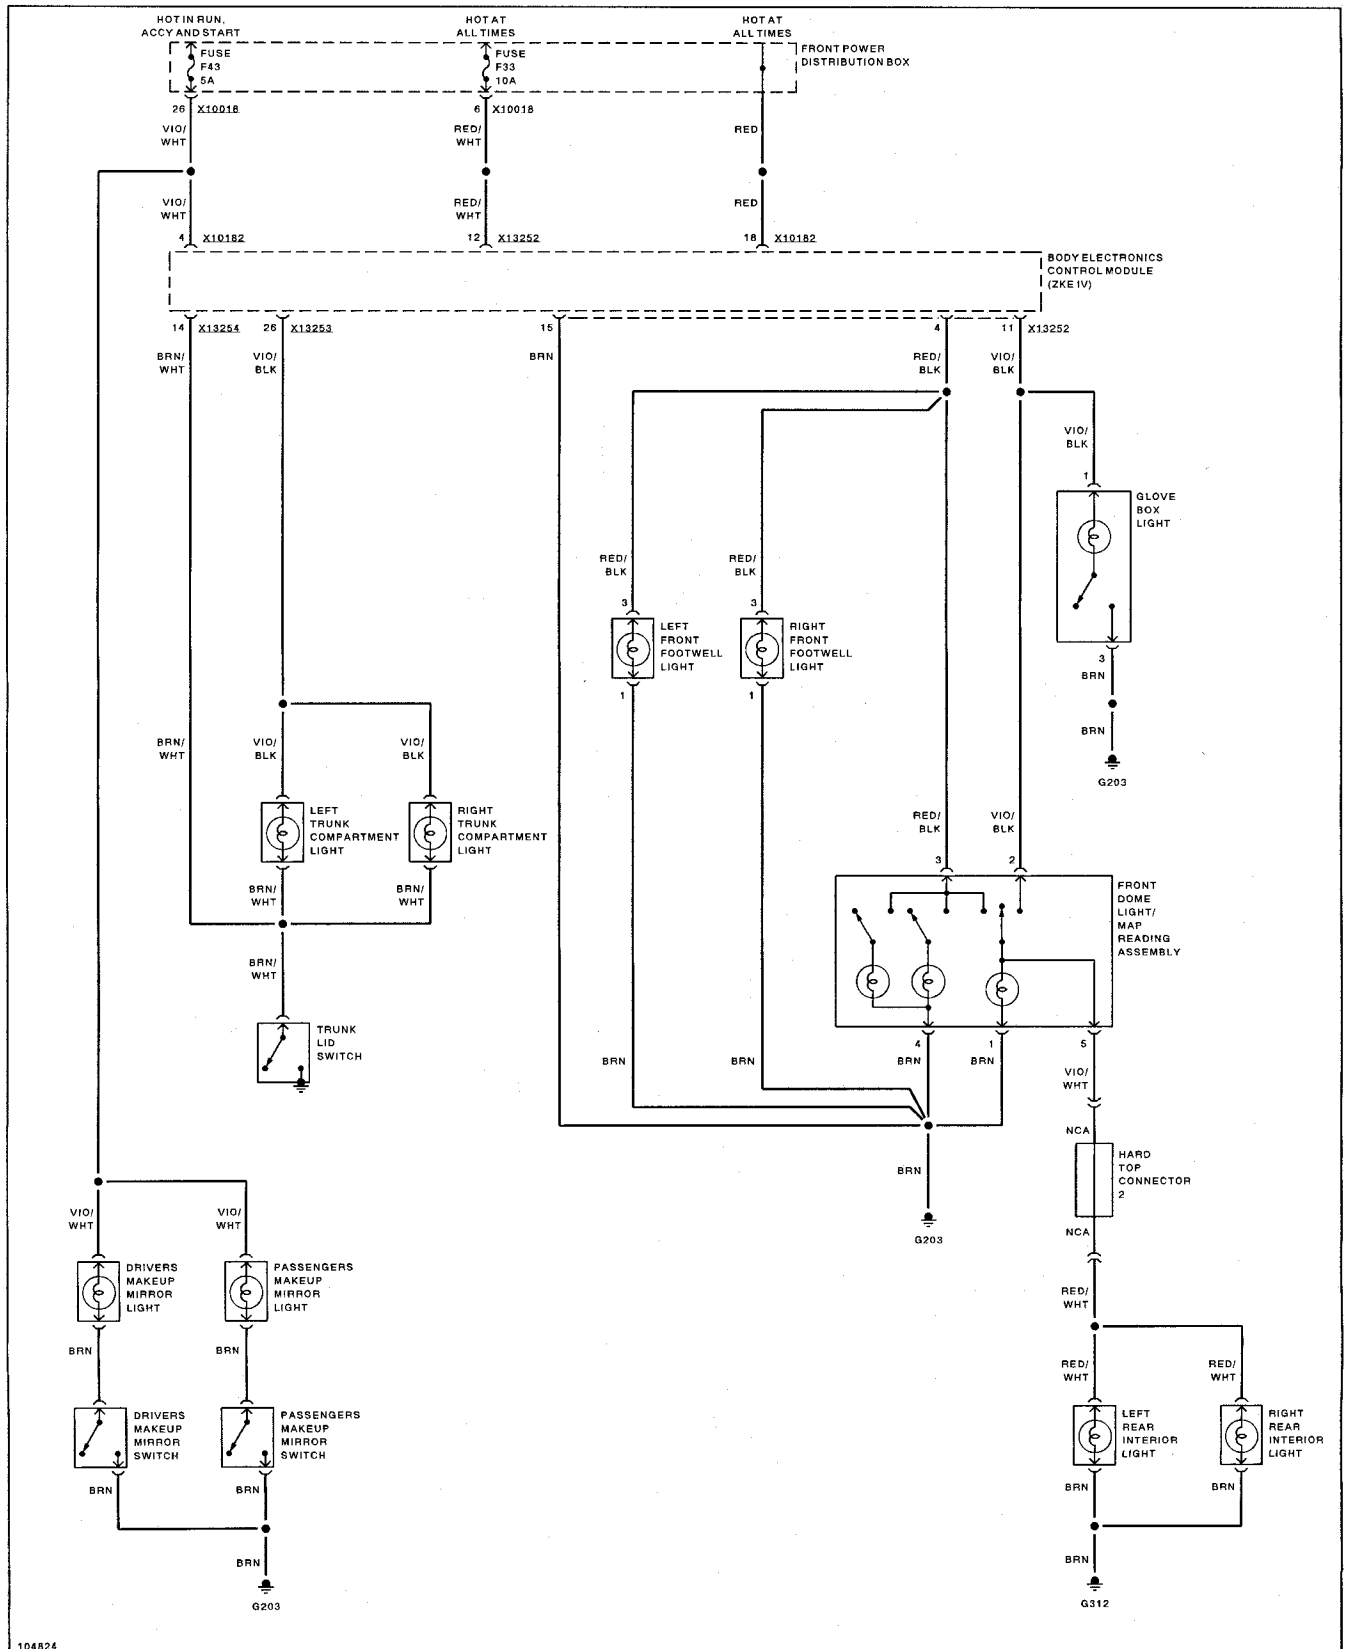

104824


Interior Lights/Illumination

1994-97 Except 318ti & Convertible (1 of 2)

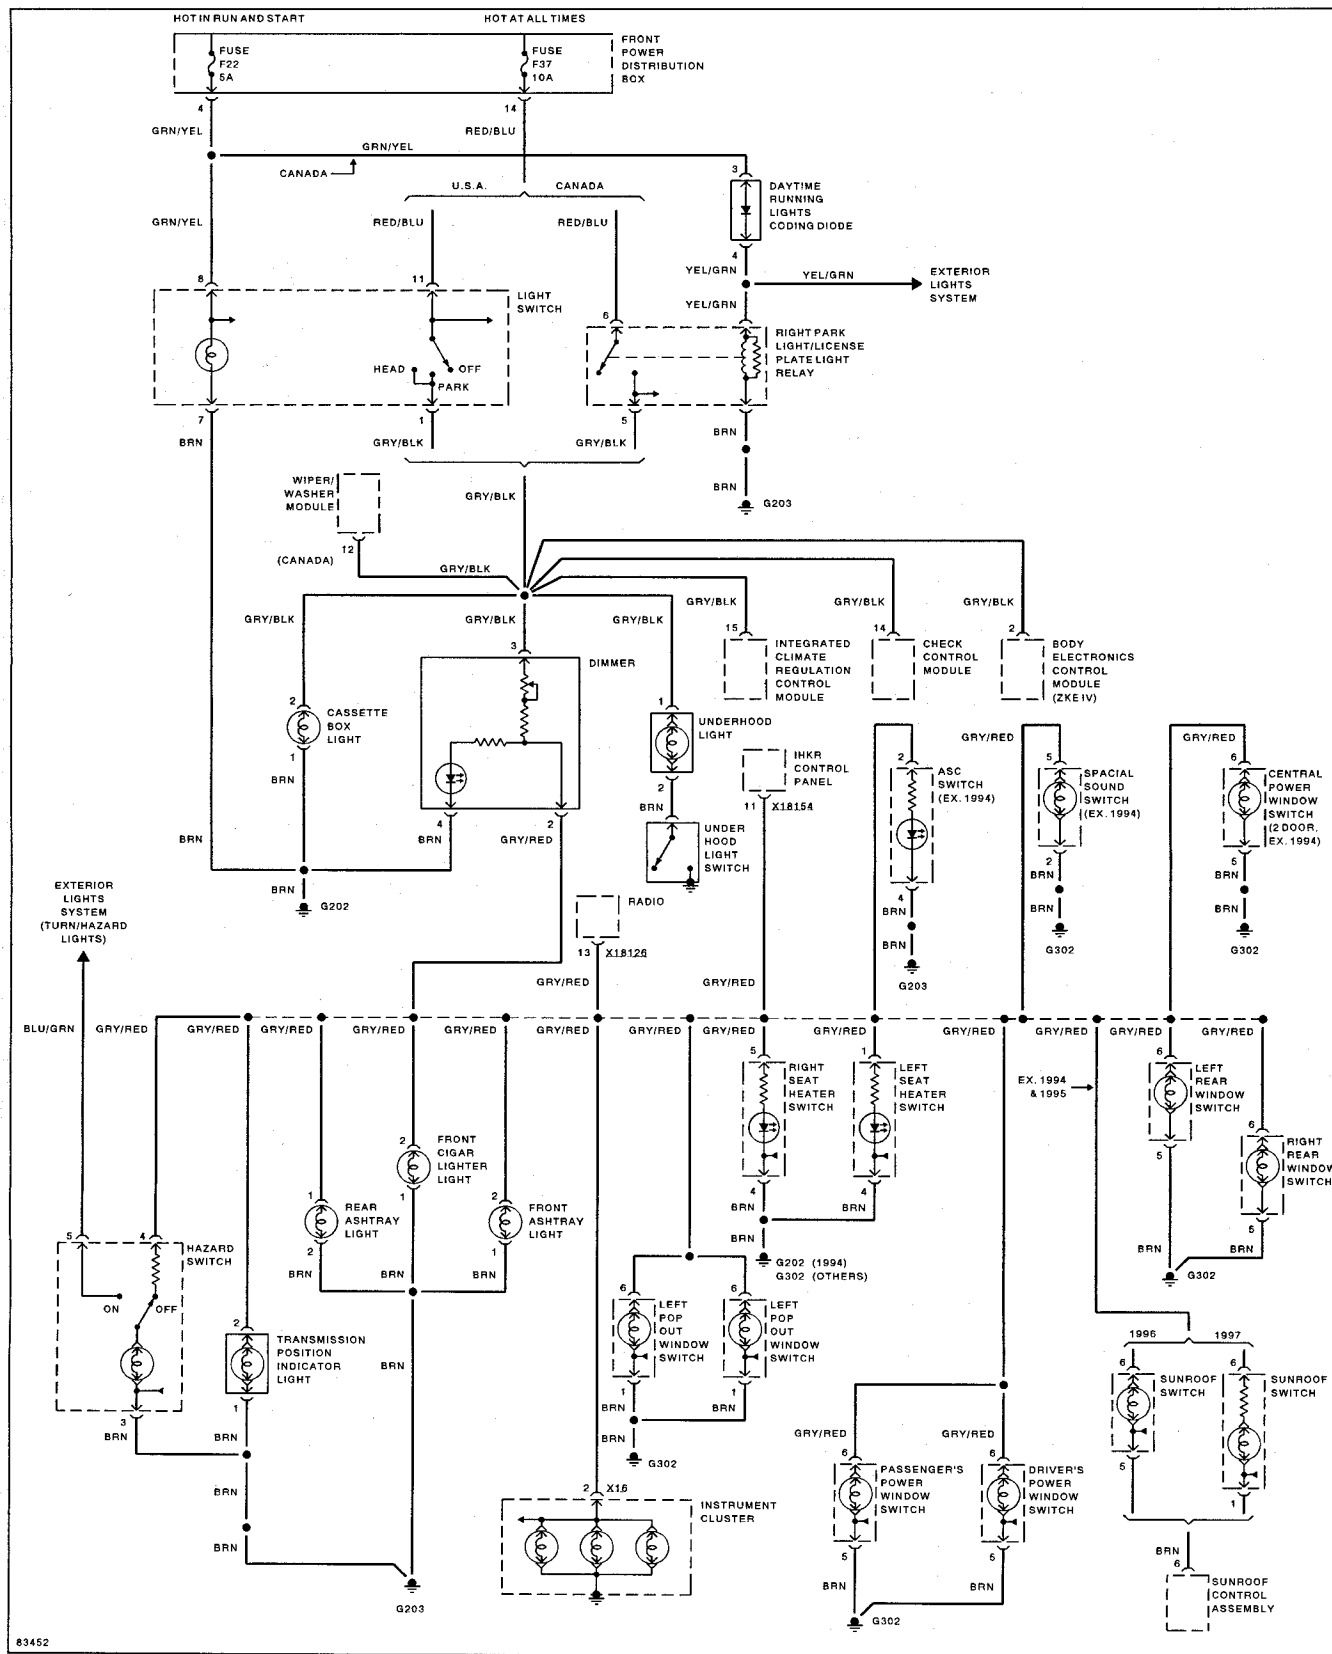


Interior Lights/Illumination

1994-97 Except 318ti & Convertible (2 of 2)

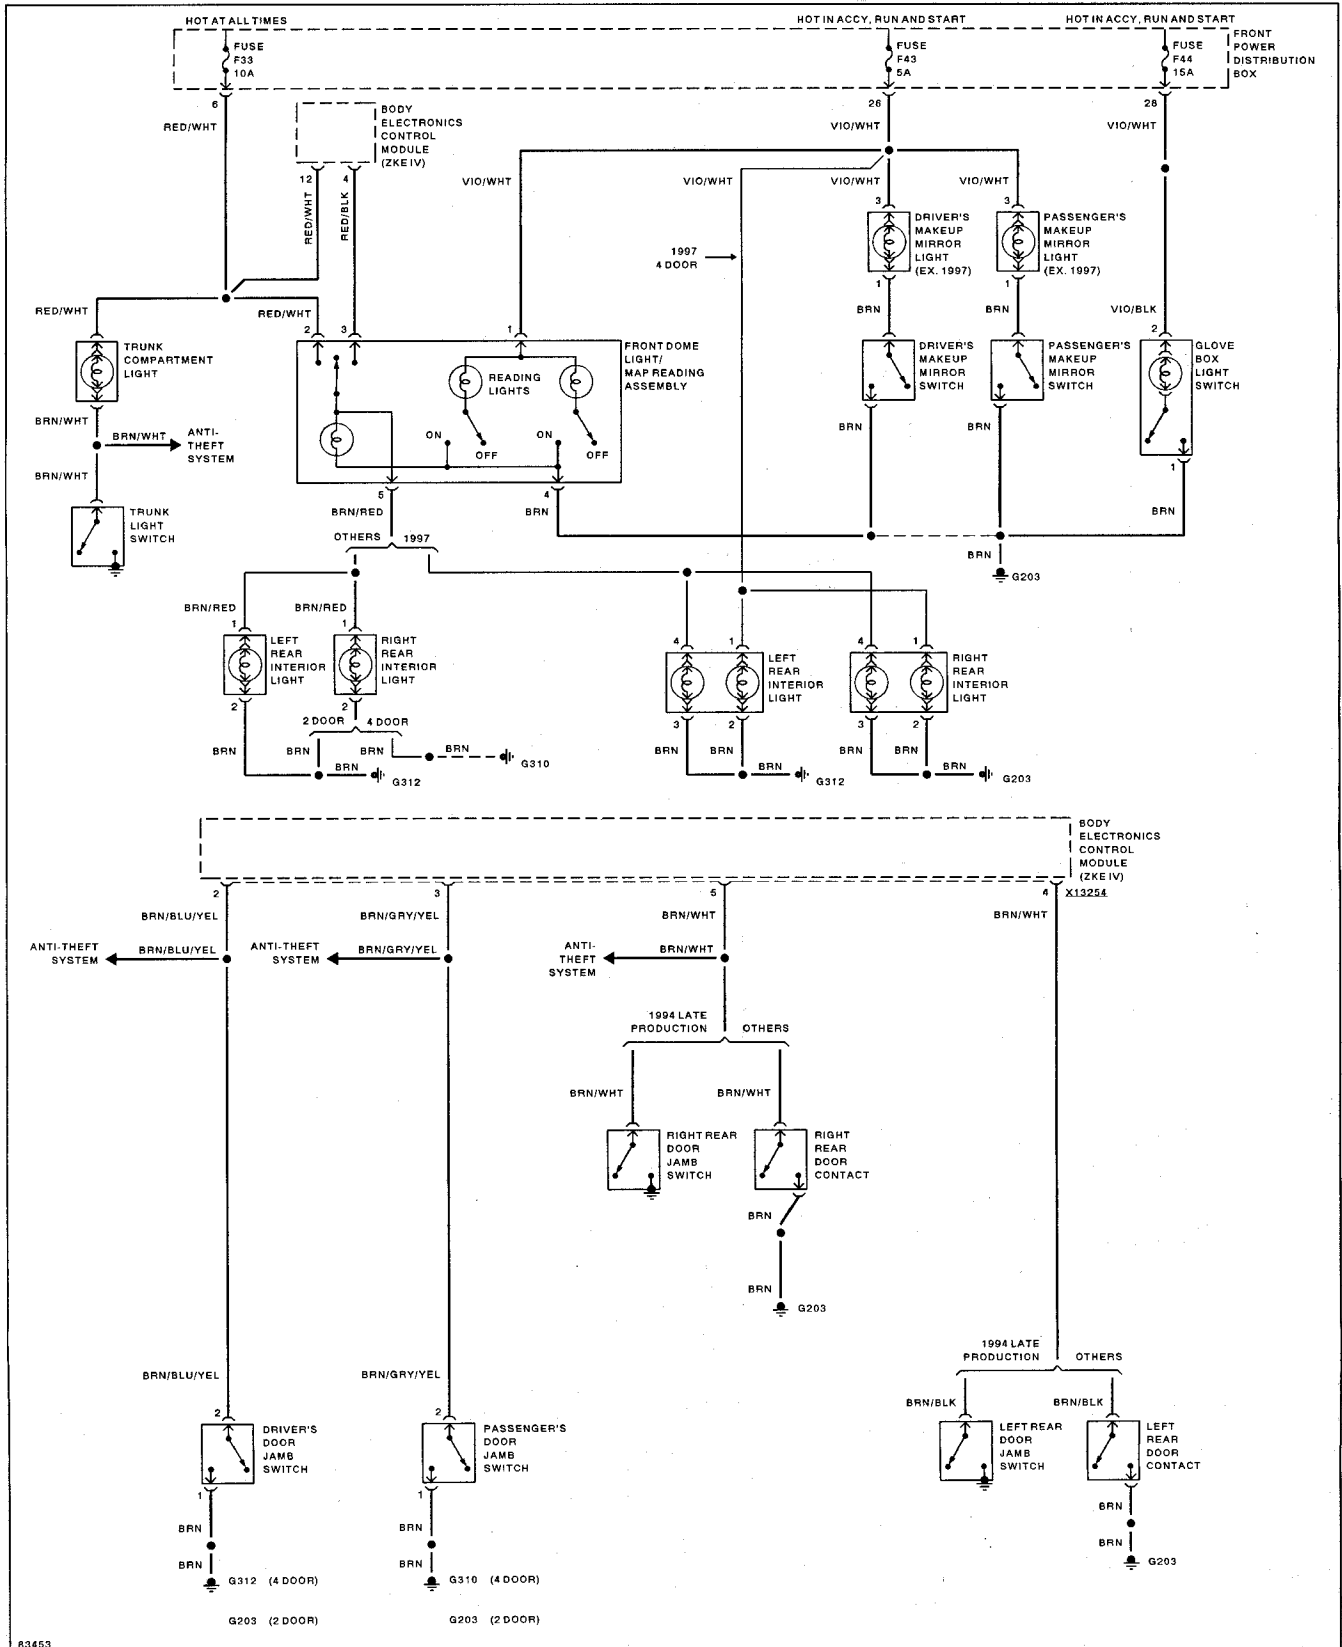

Interior Lights/Illumination

1998 Except 318ti & Convertible

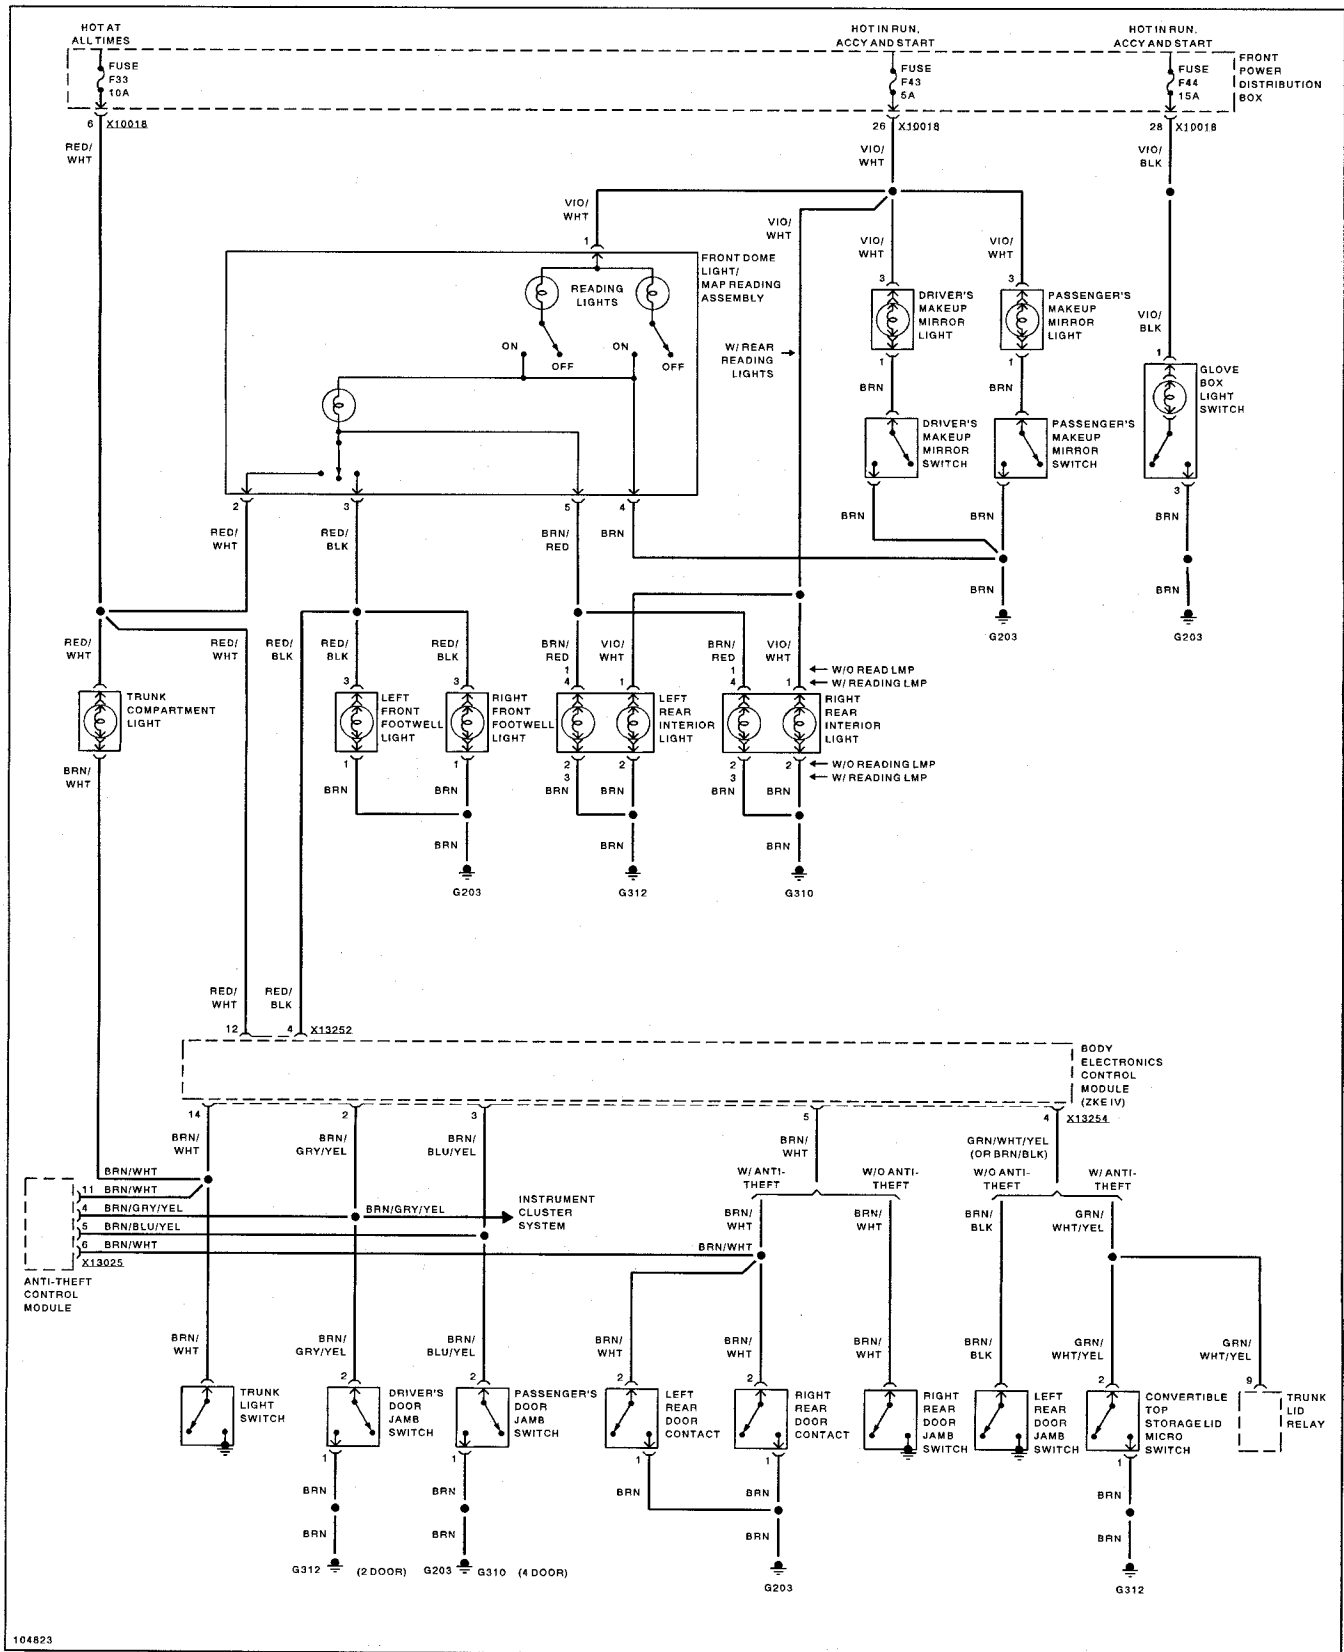


Interior Lights/Instrument Illumination

1998 Except 318ti & Convertible




Interior Lights/Illumination

1995-96 318ti (1 of 2)

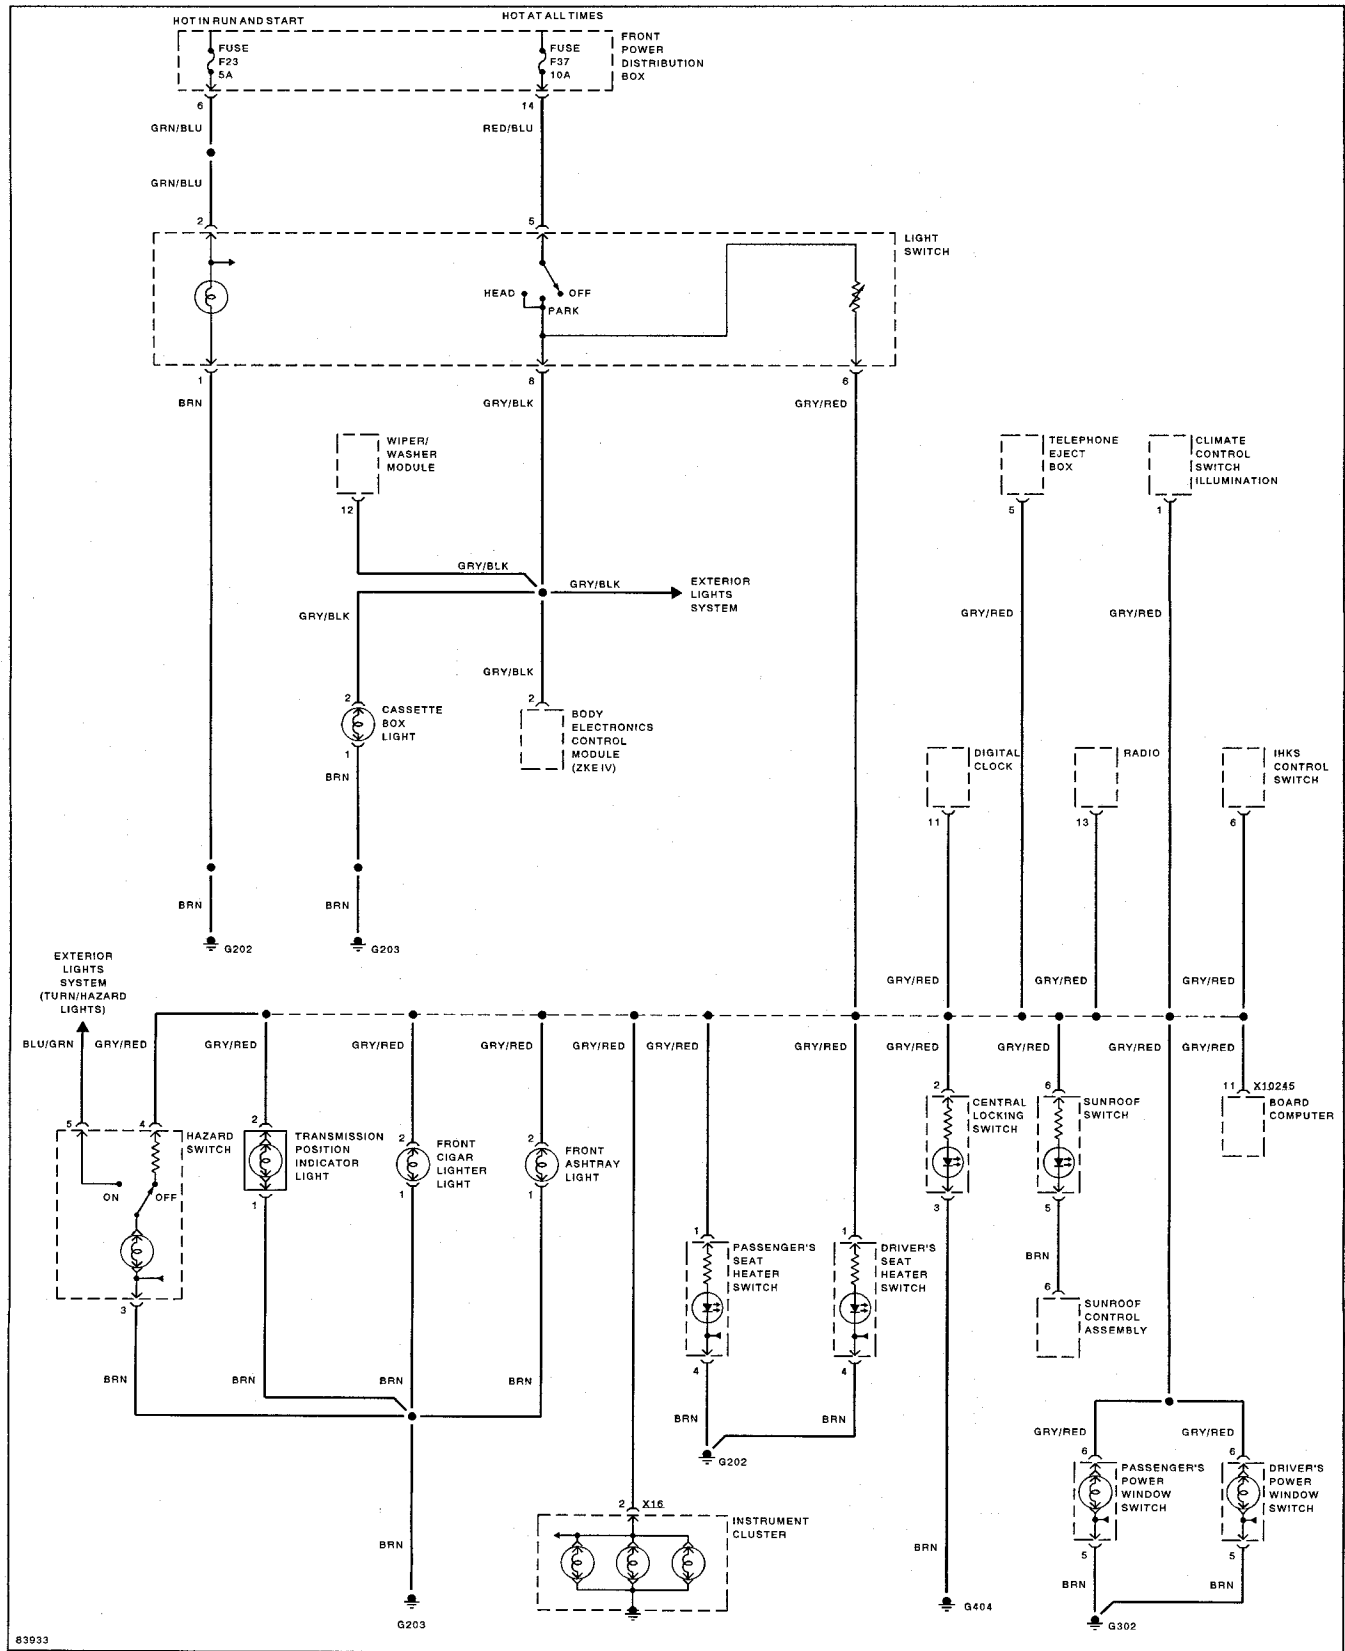


Interior Lights/Illumination

1995-96 318ti (2 of 2)

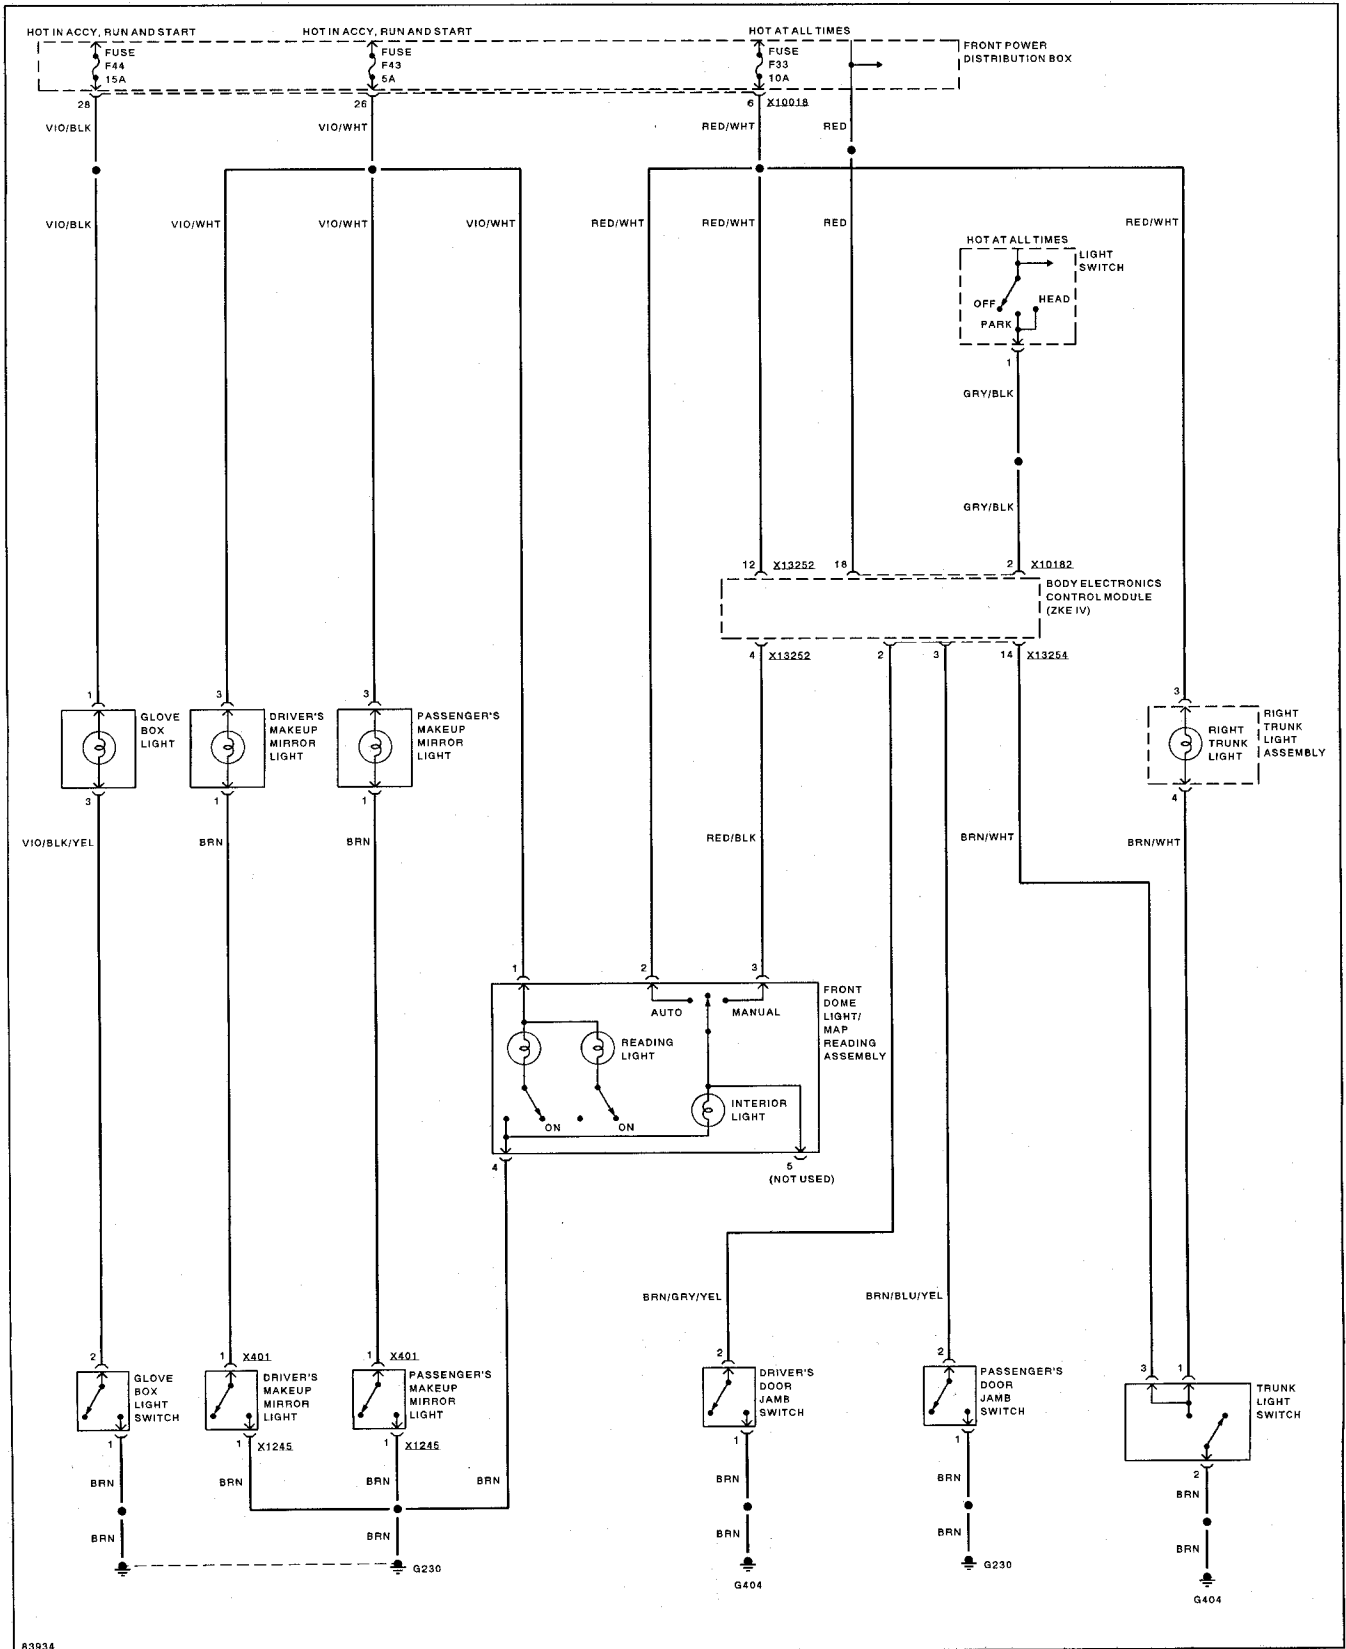


Interior Lights/Illumination

1997 318ti (1 of 2)

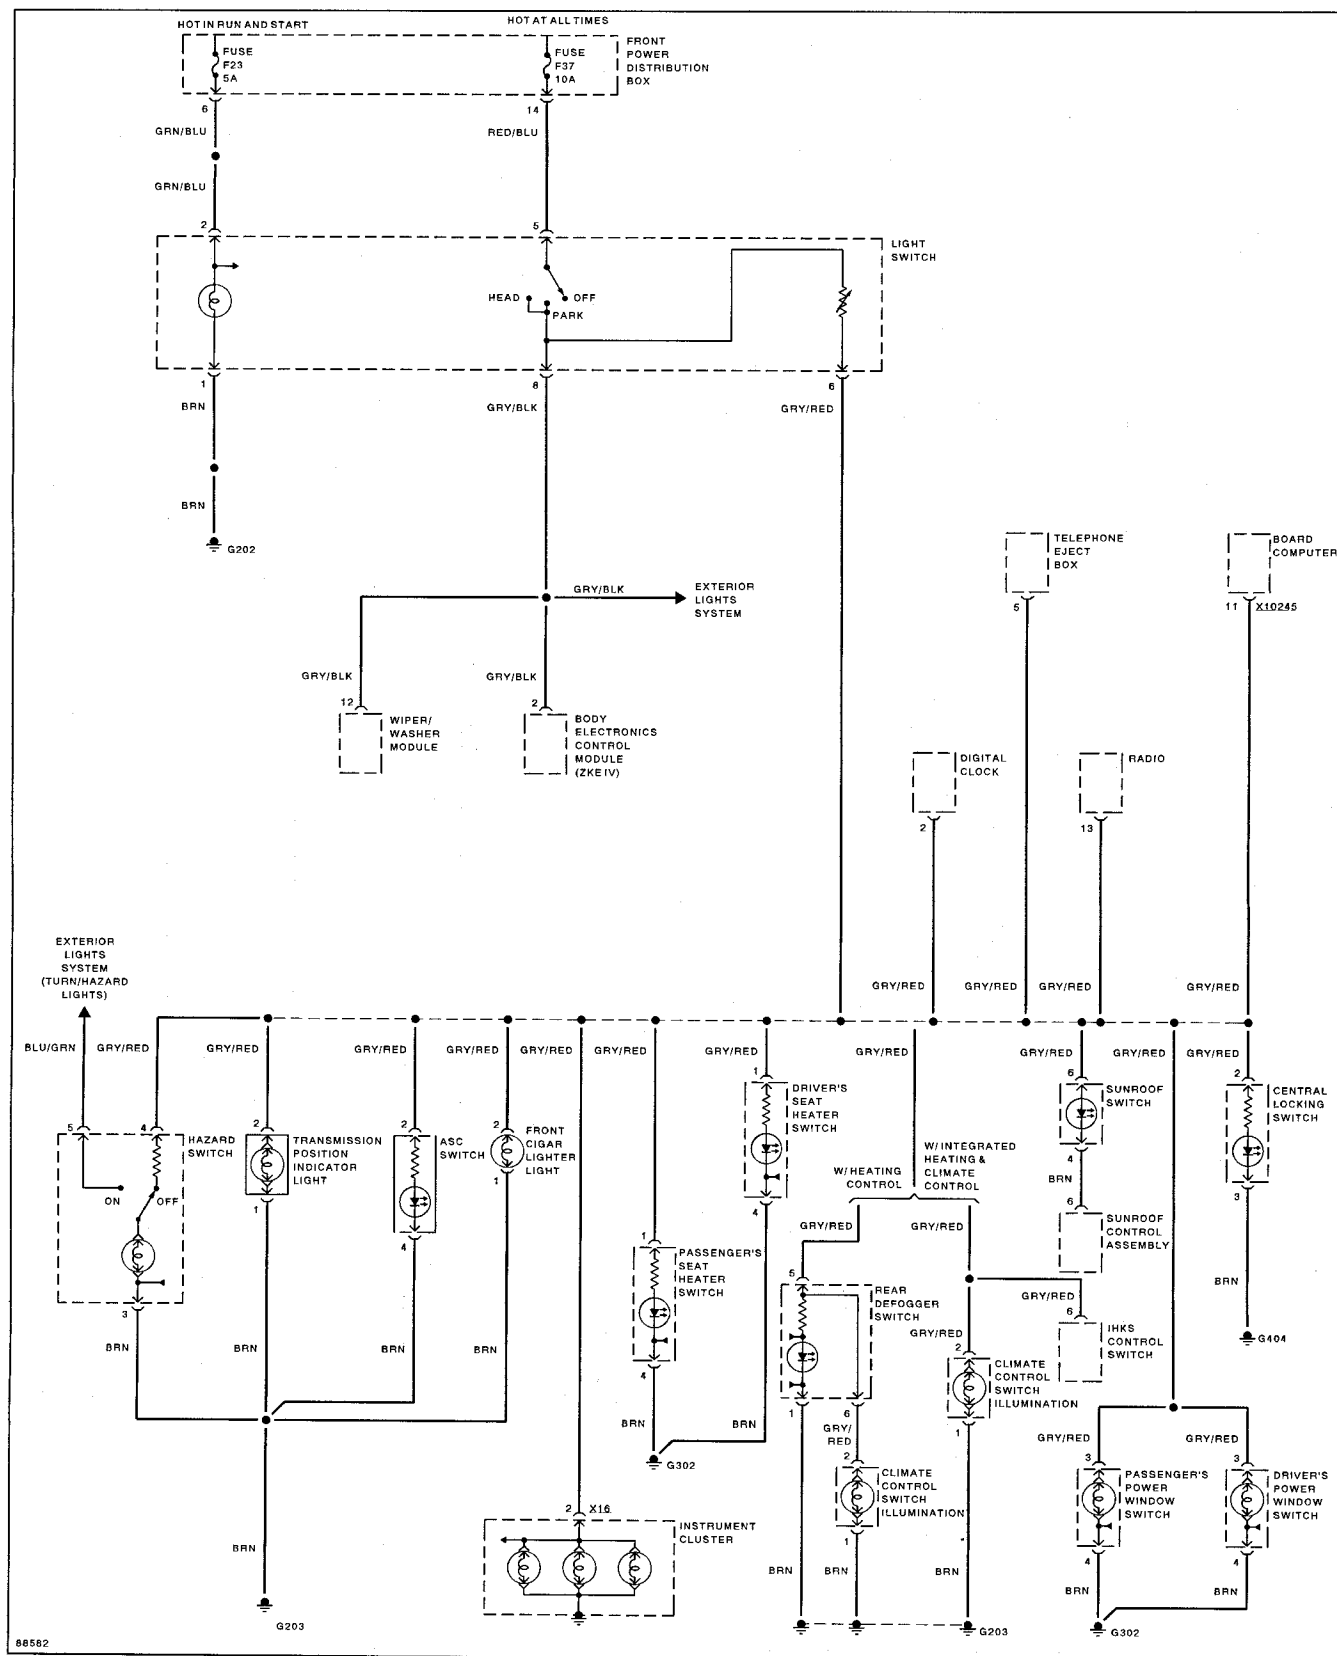


Interior Lights/Illumination

1997 318ti (2 of 2)

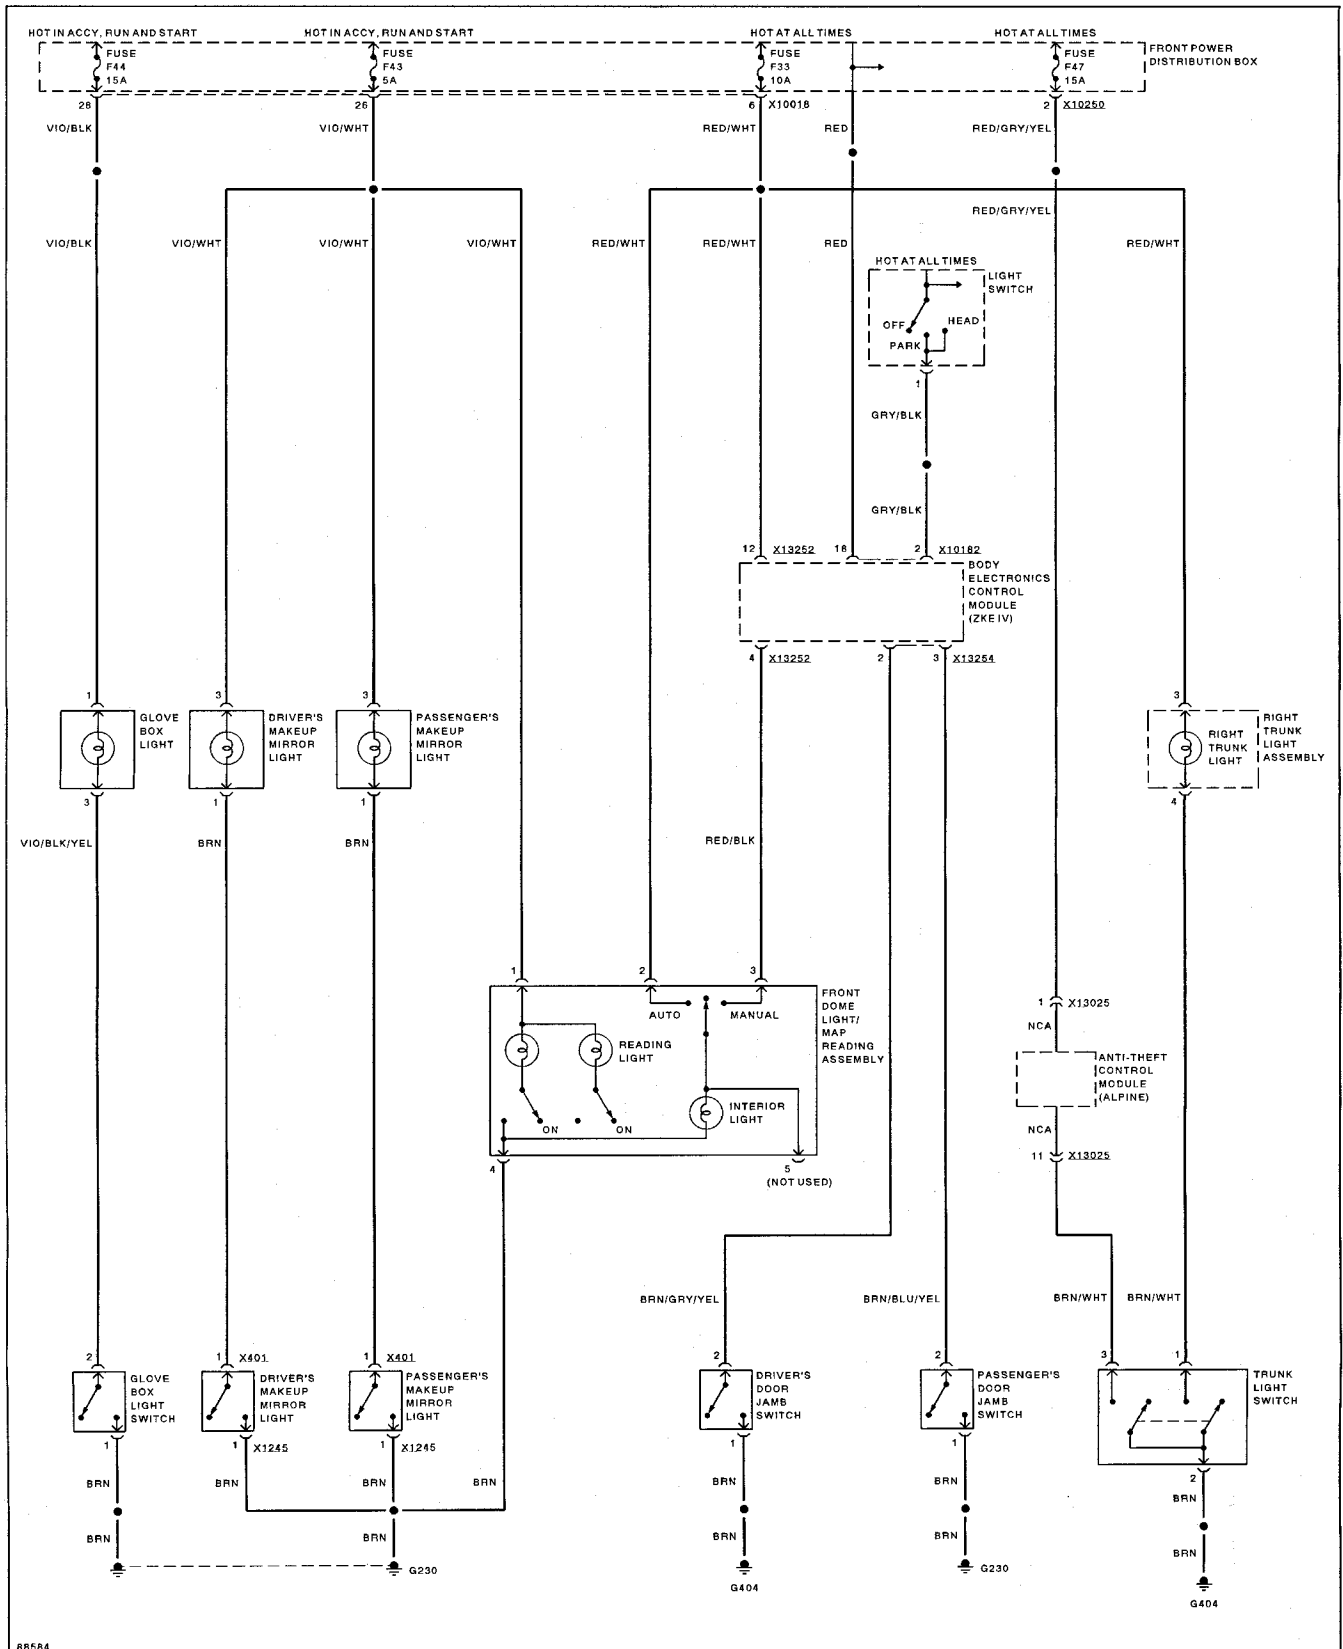


Interior Lights/Illumination

1998 318ti

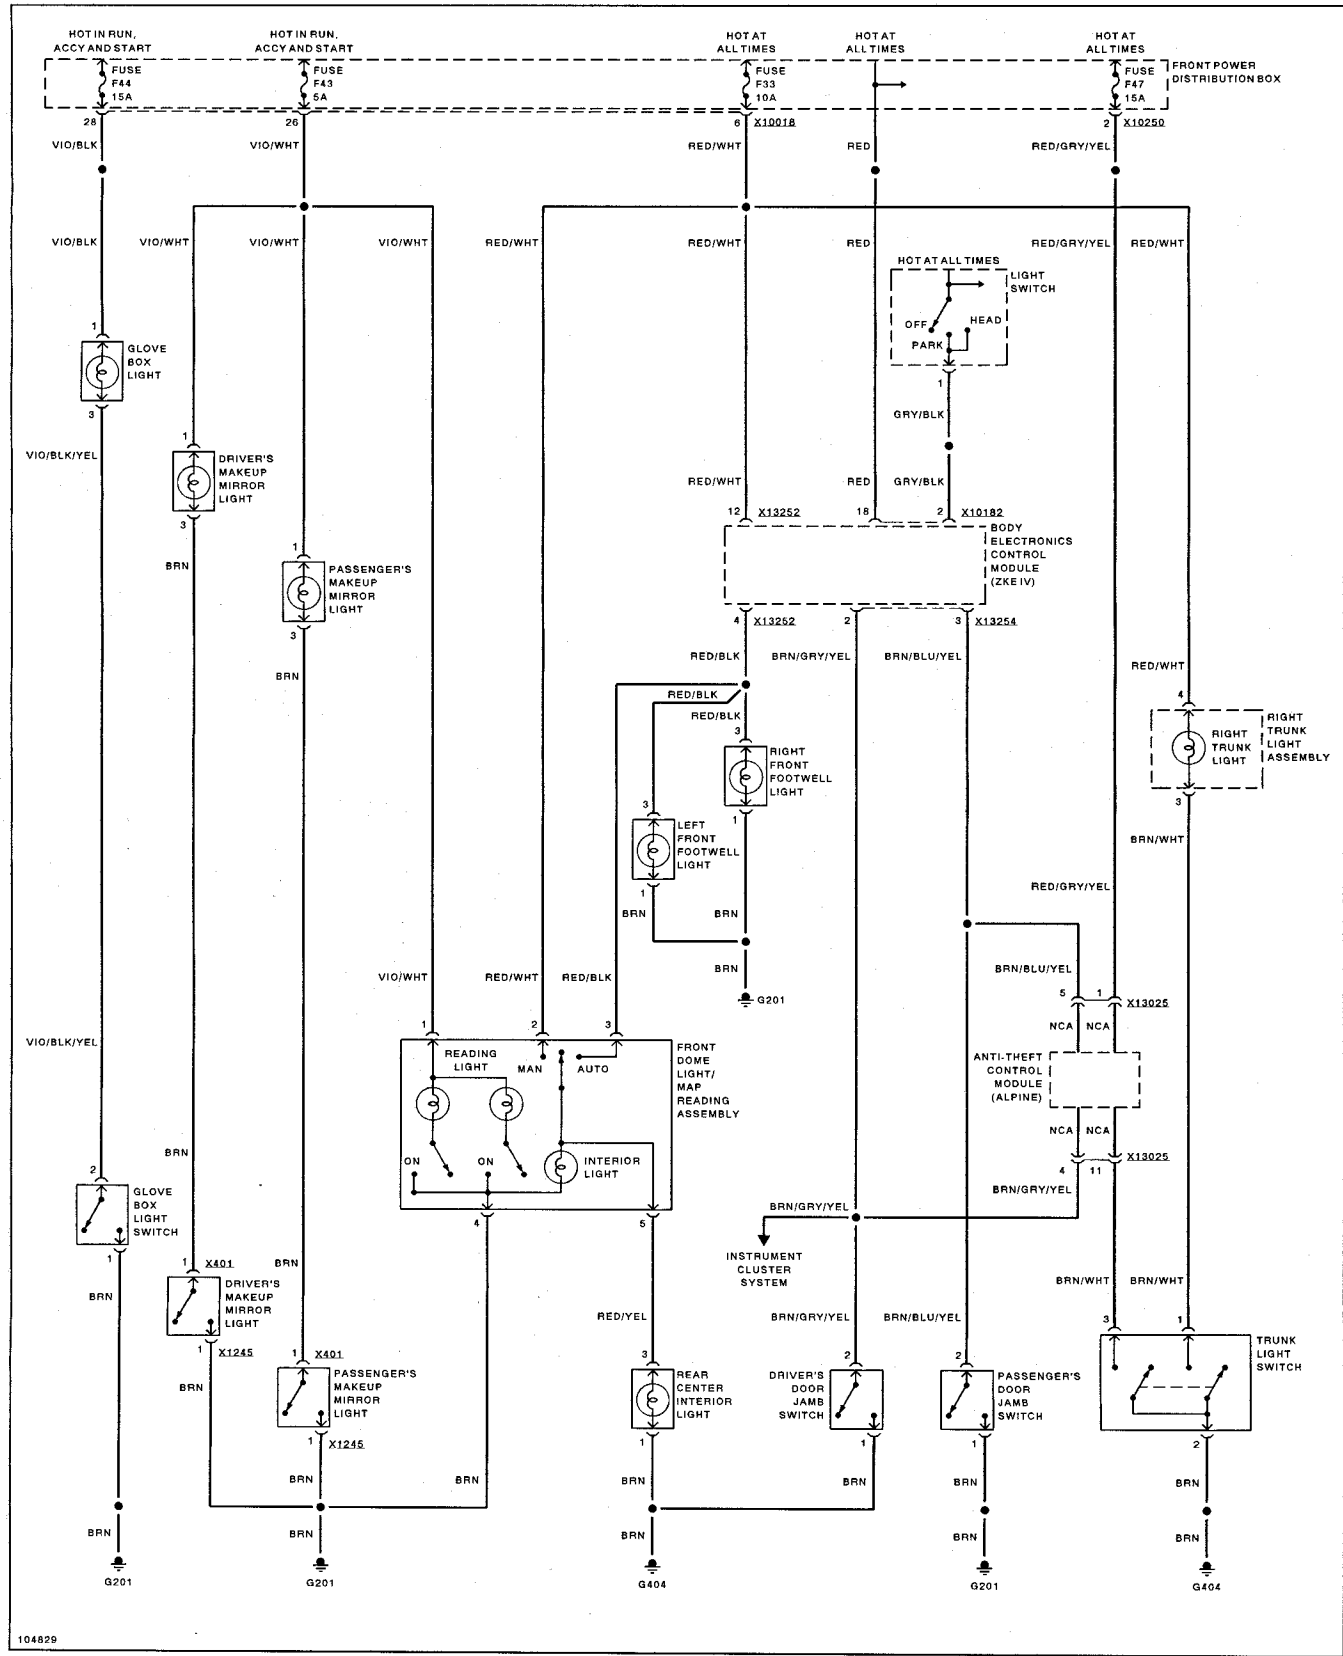


Interior Lights/Instrument Illumination


1998 318ti

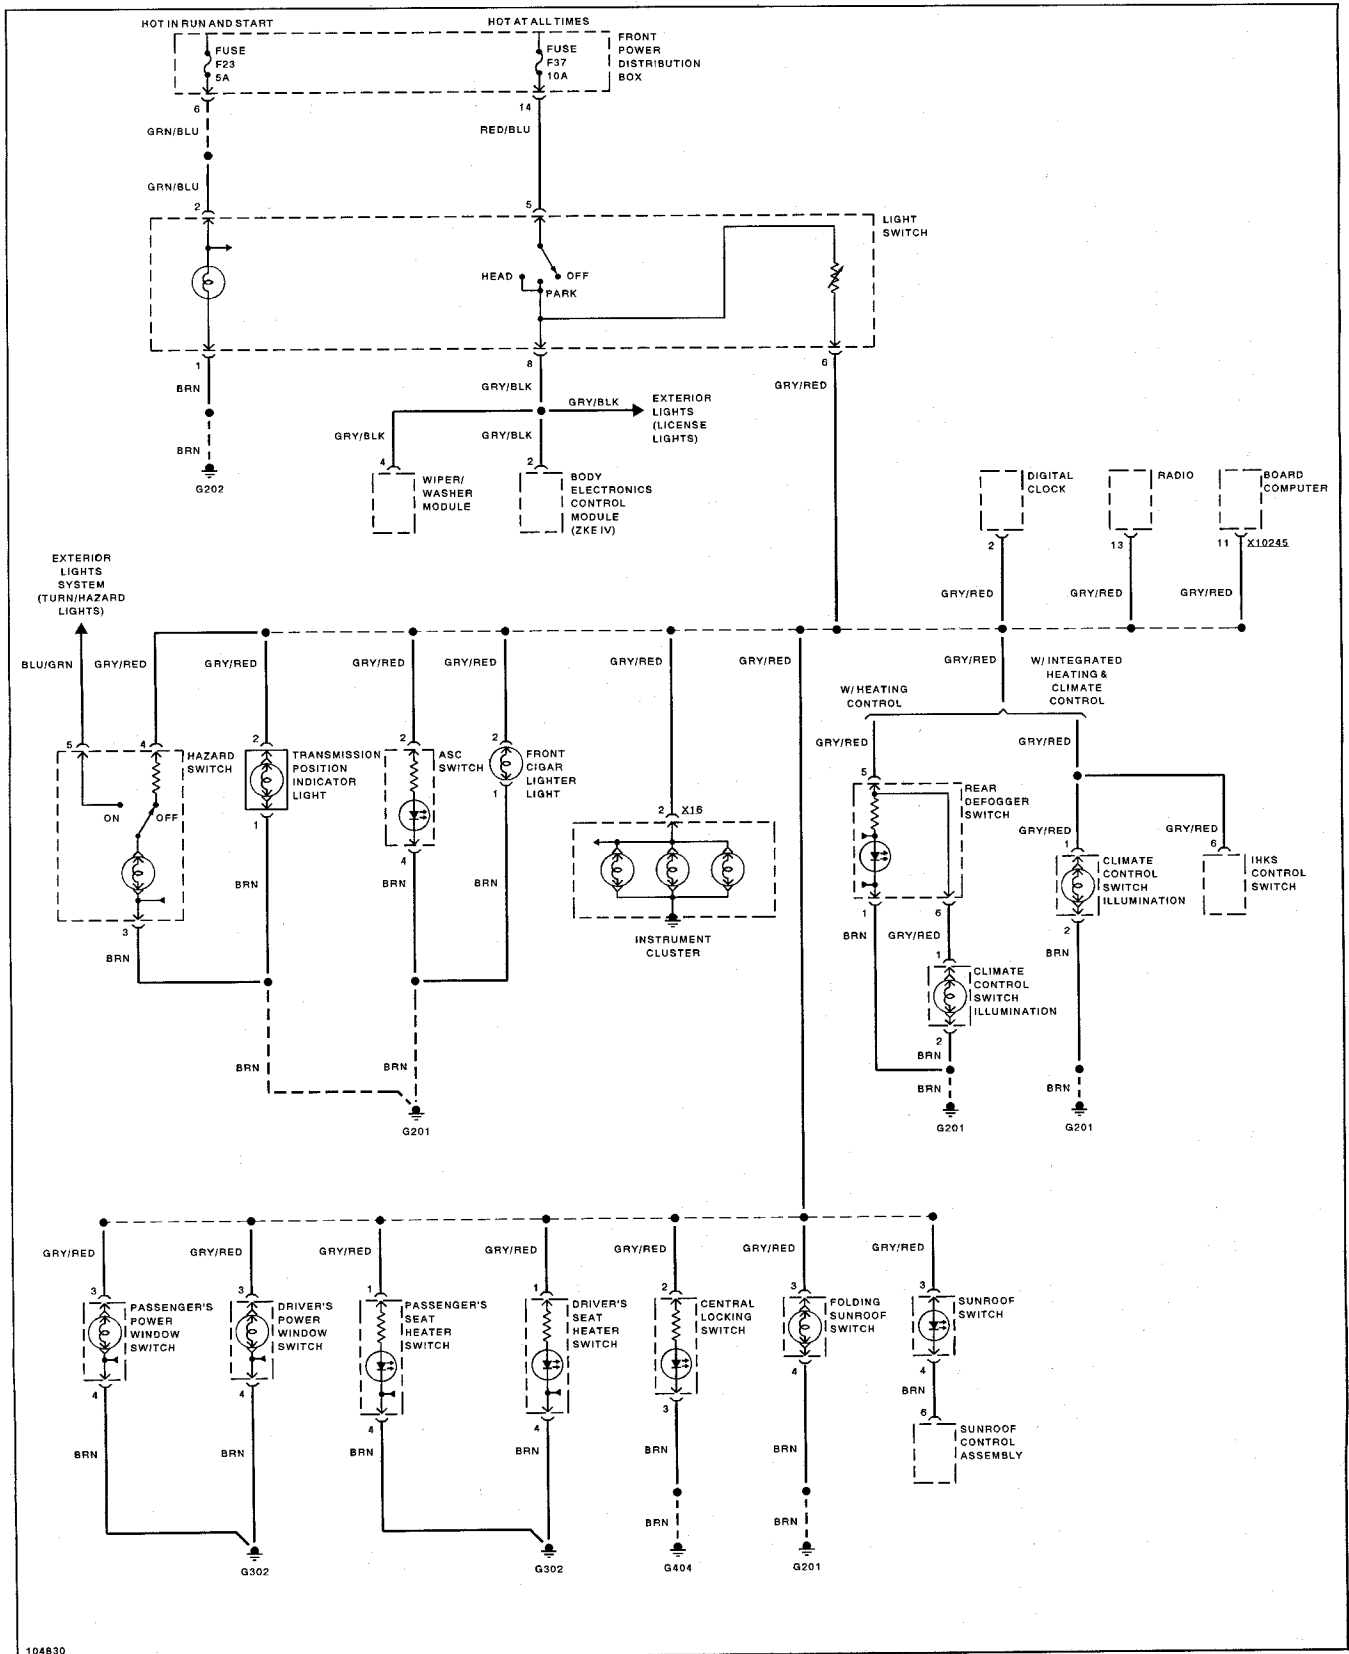


Power Door Locks

1992

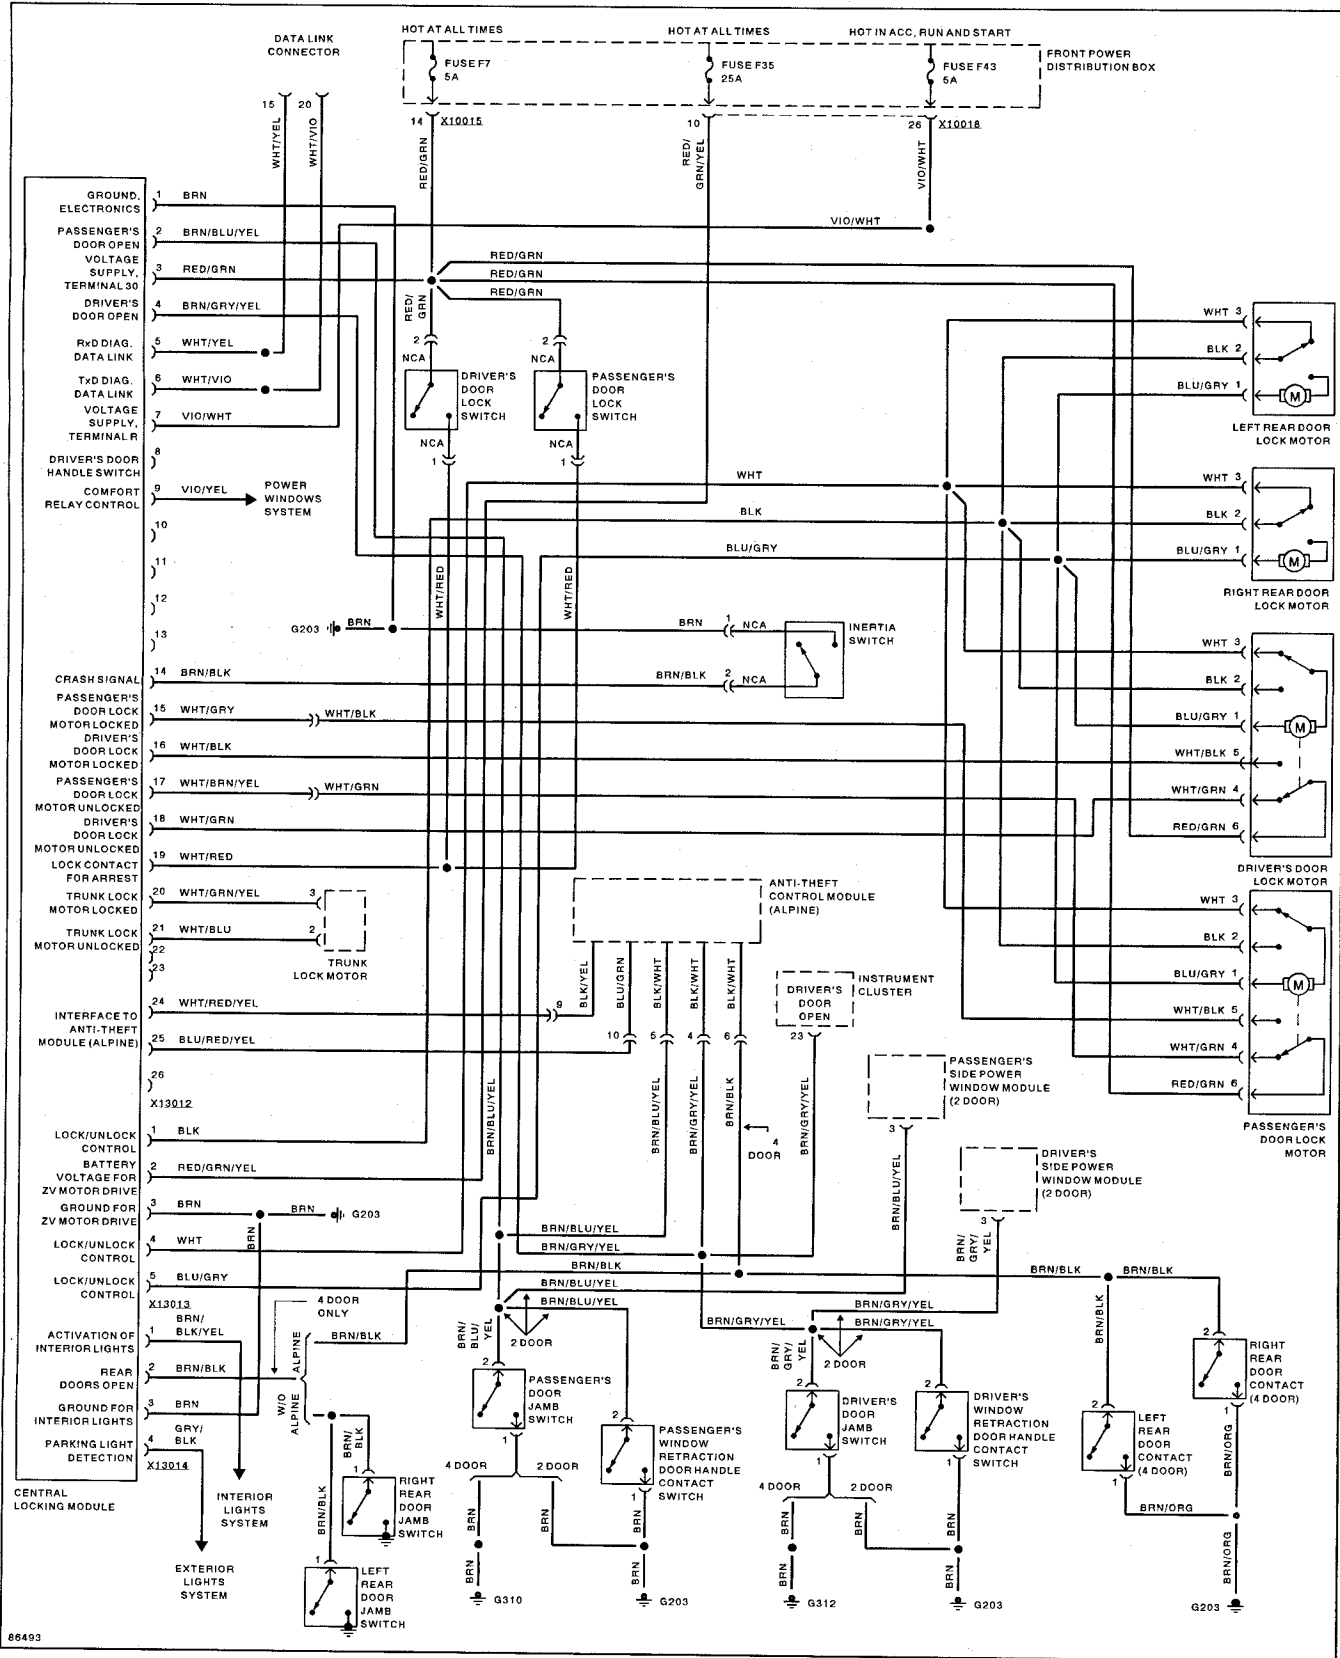

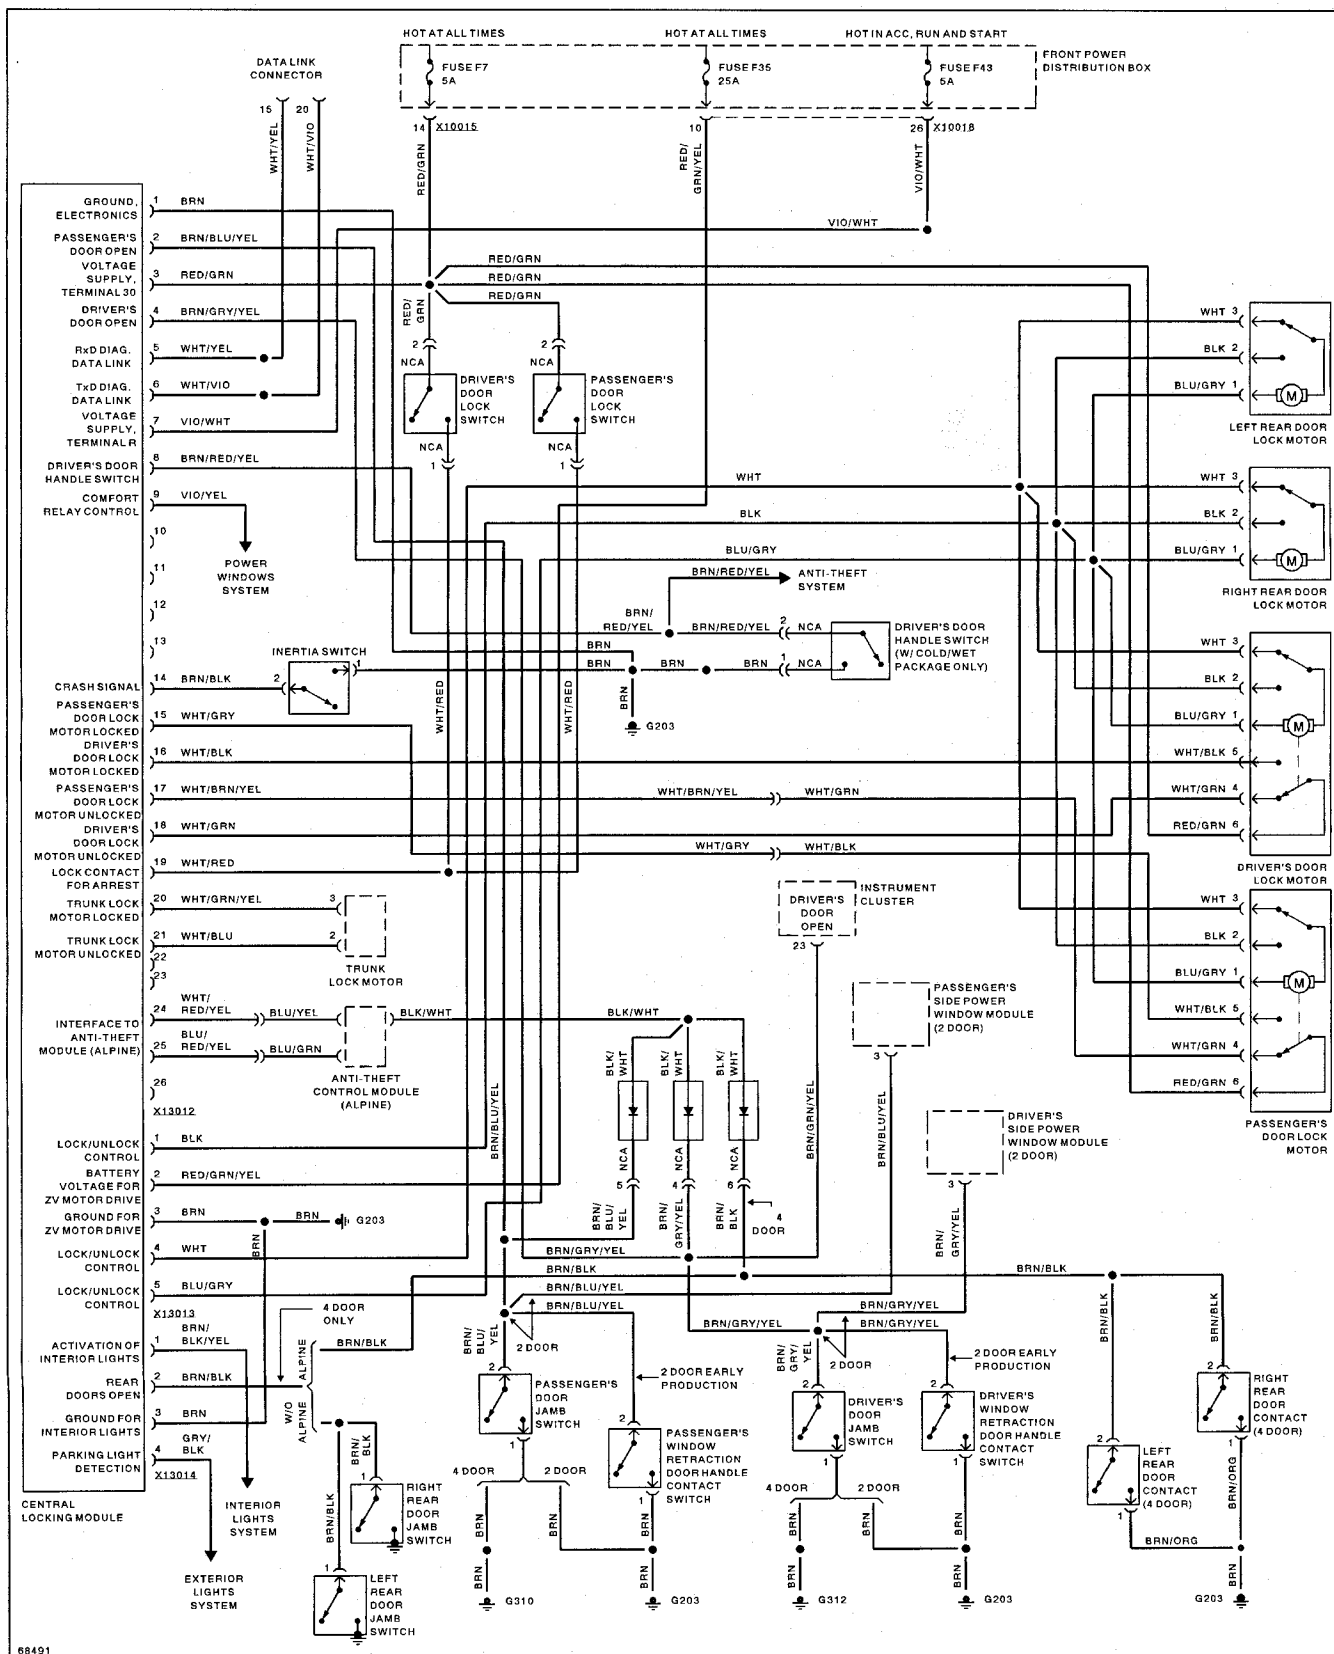


CE
SW
(F
PR
19

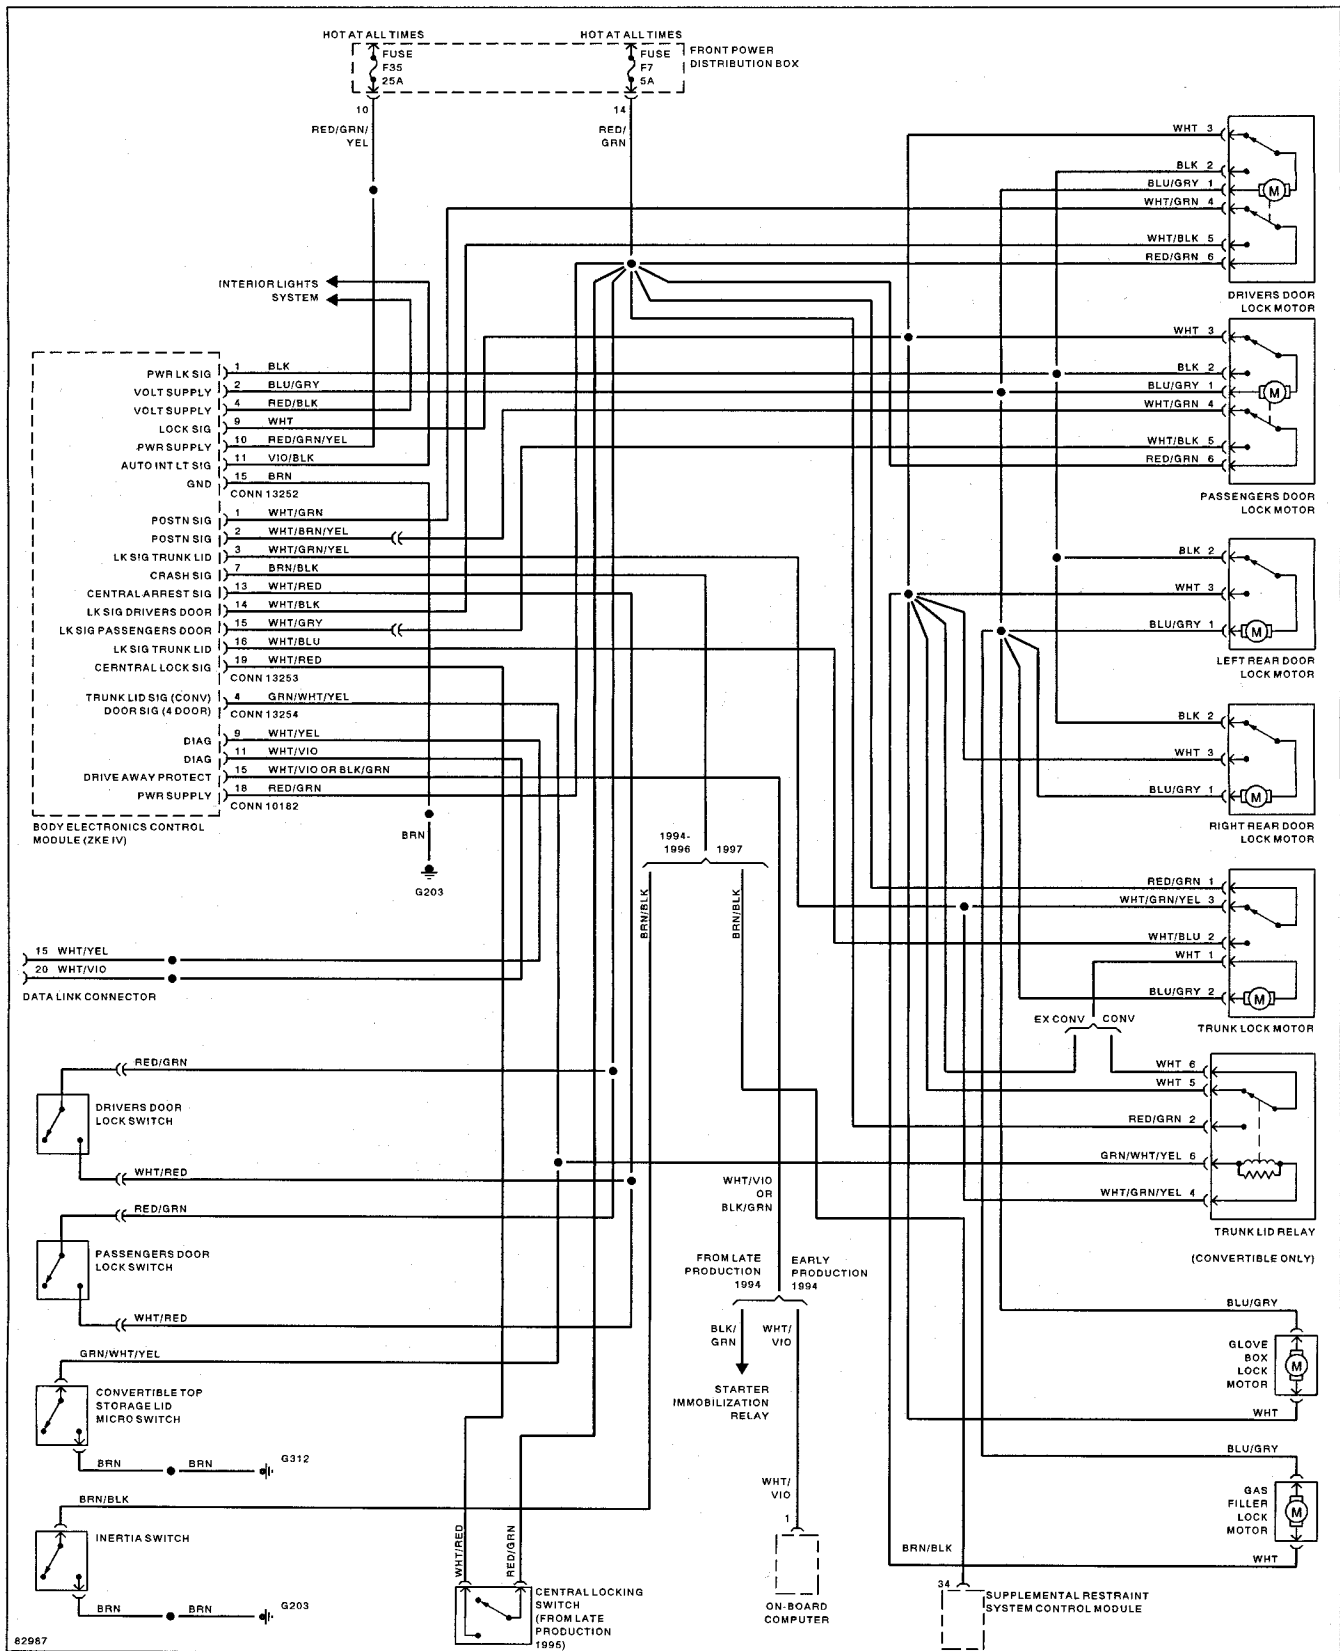


Power Door Locks

1998 Except 318ti

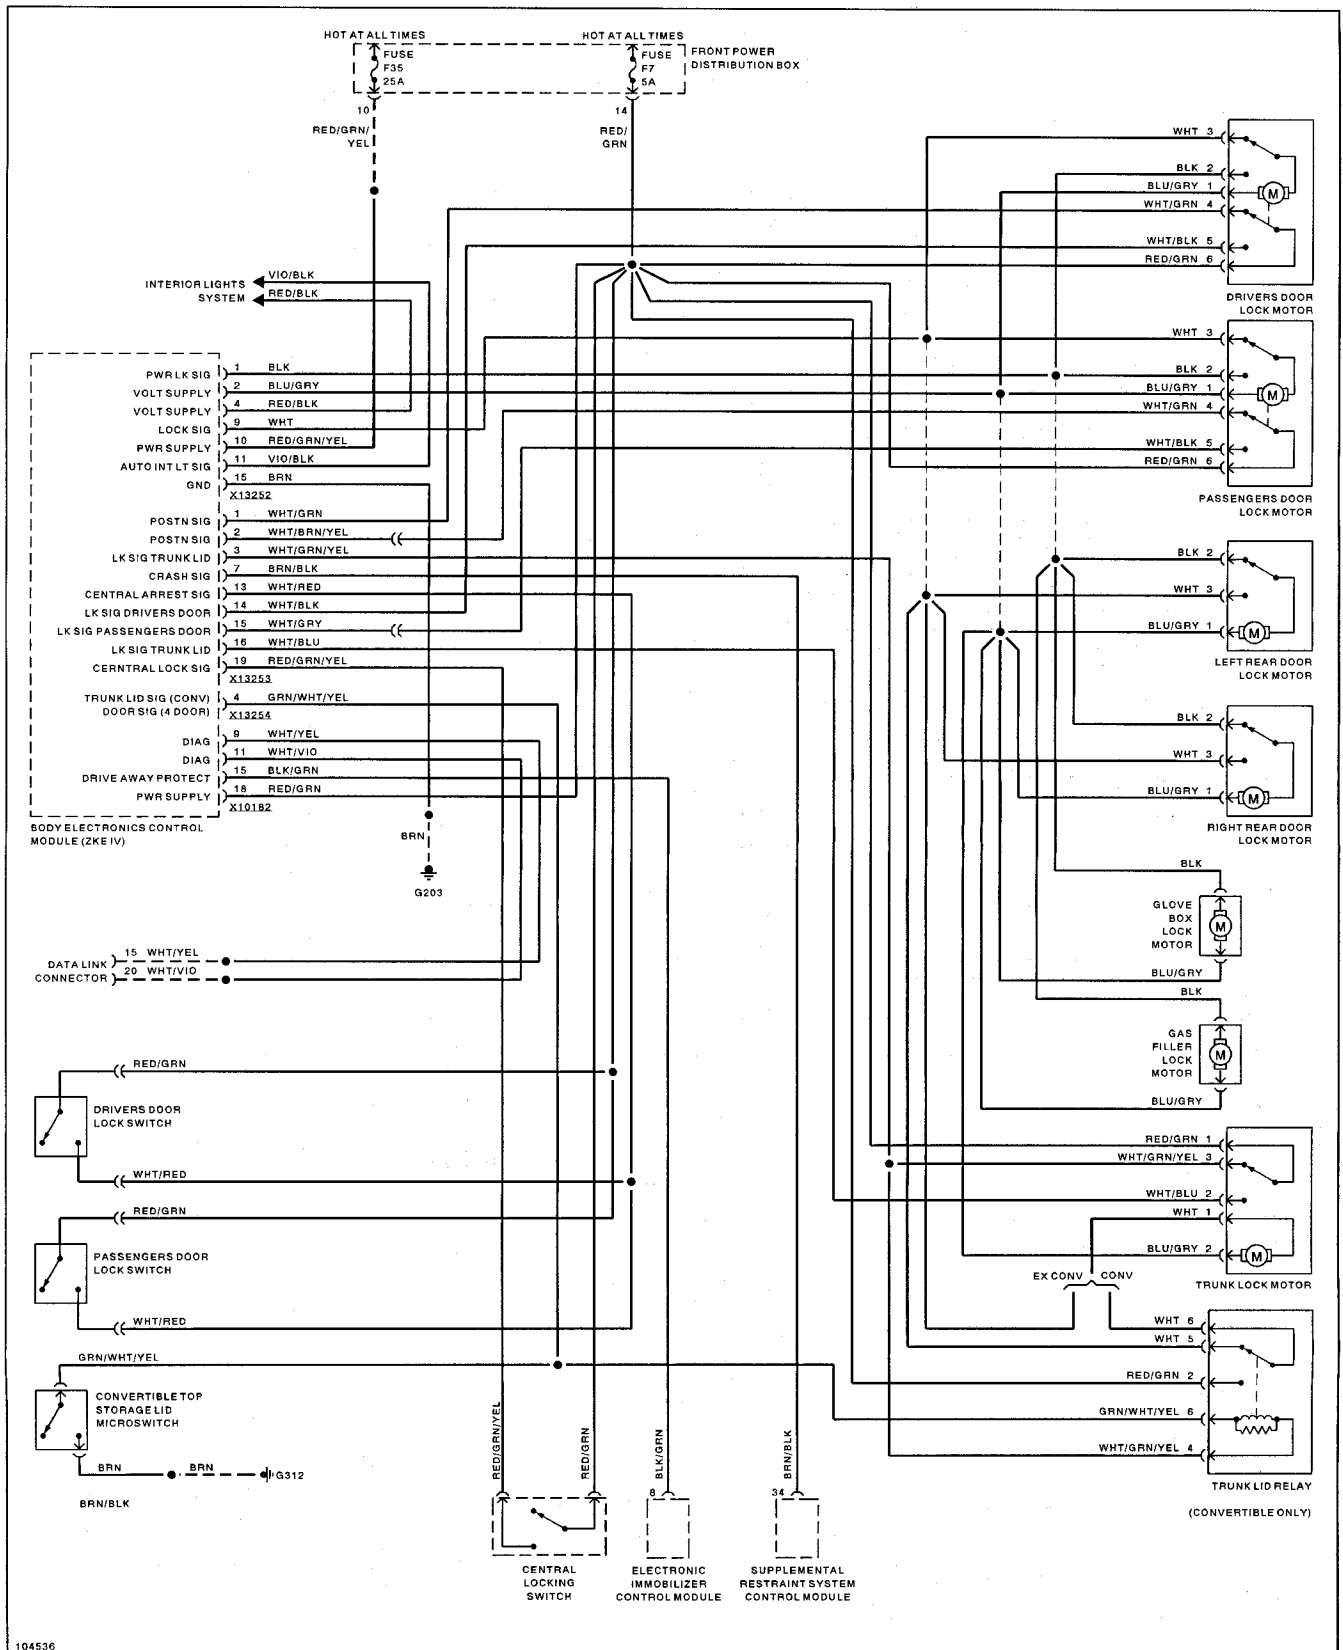


Power Door Locks

1995-1998 318ti

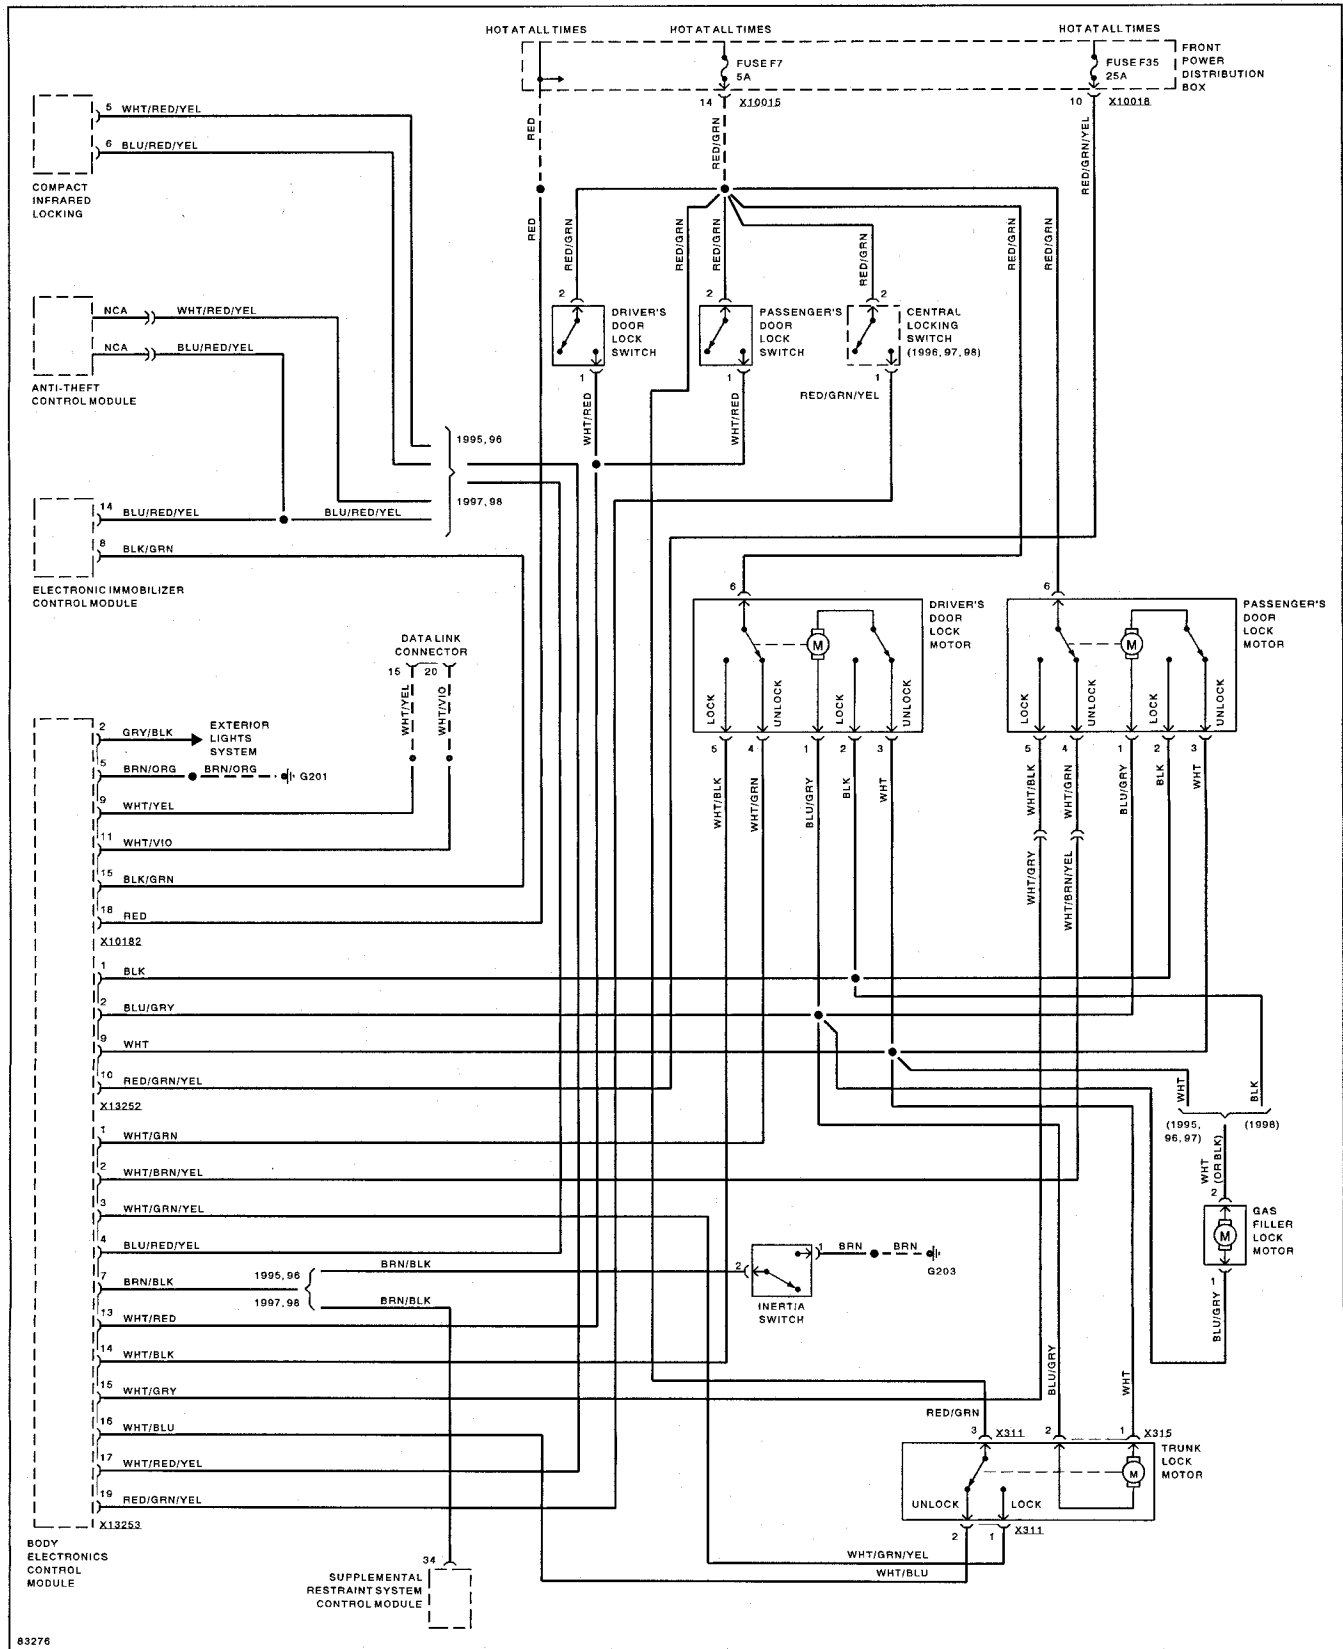


Power Windows

1992 318is & 325is

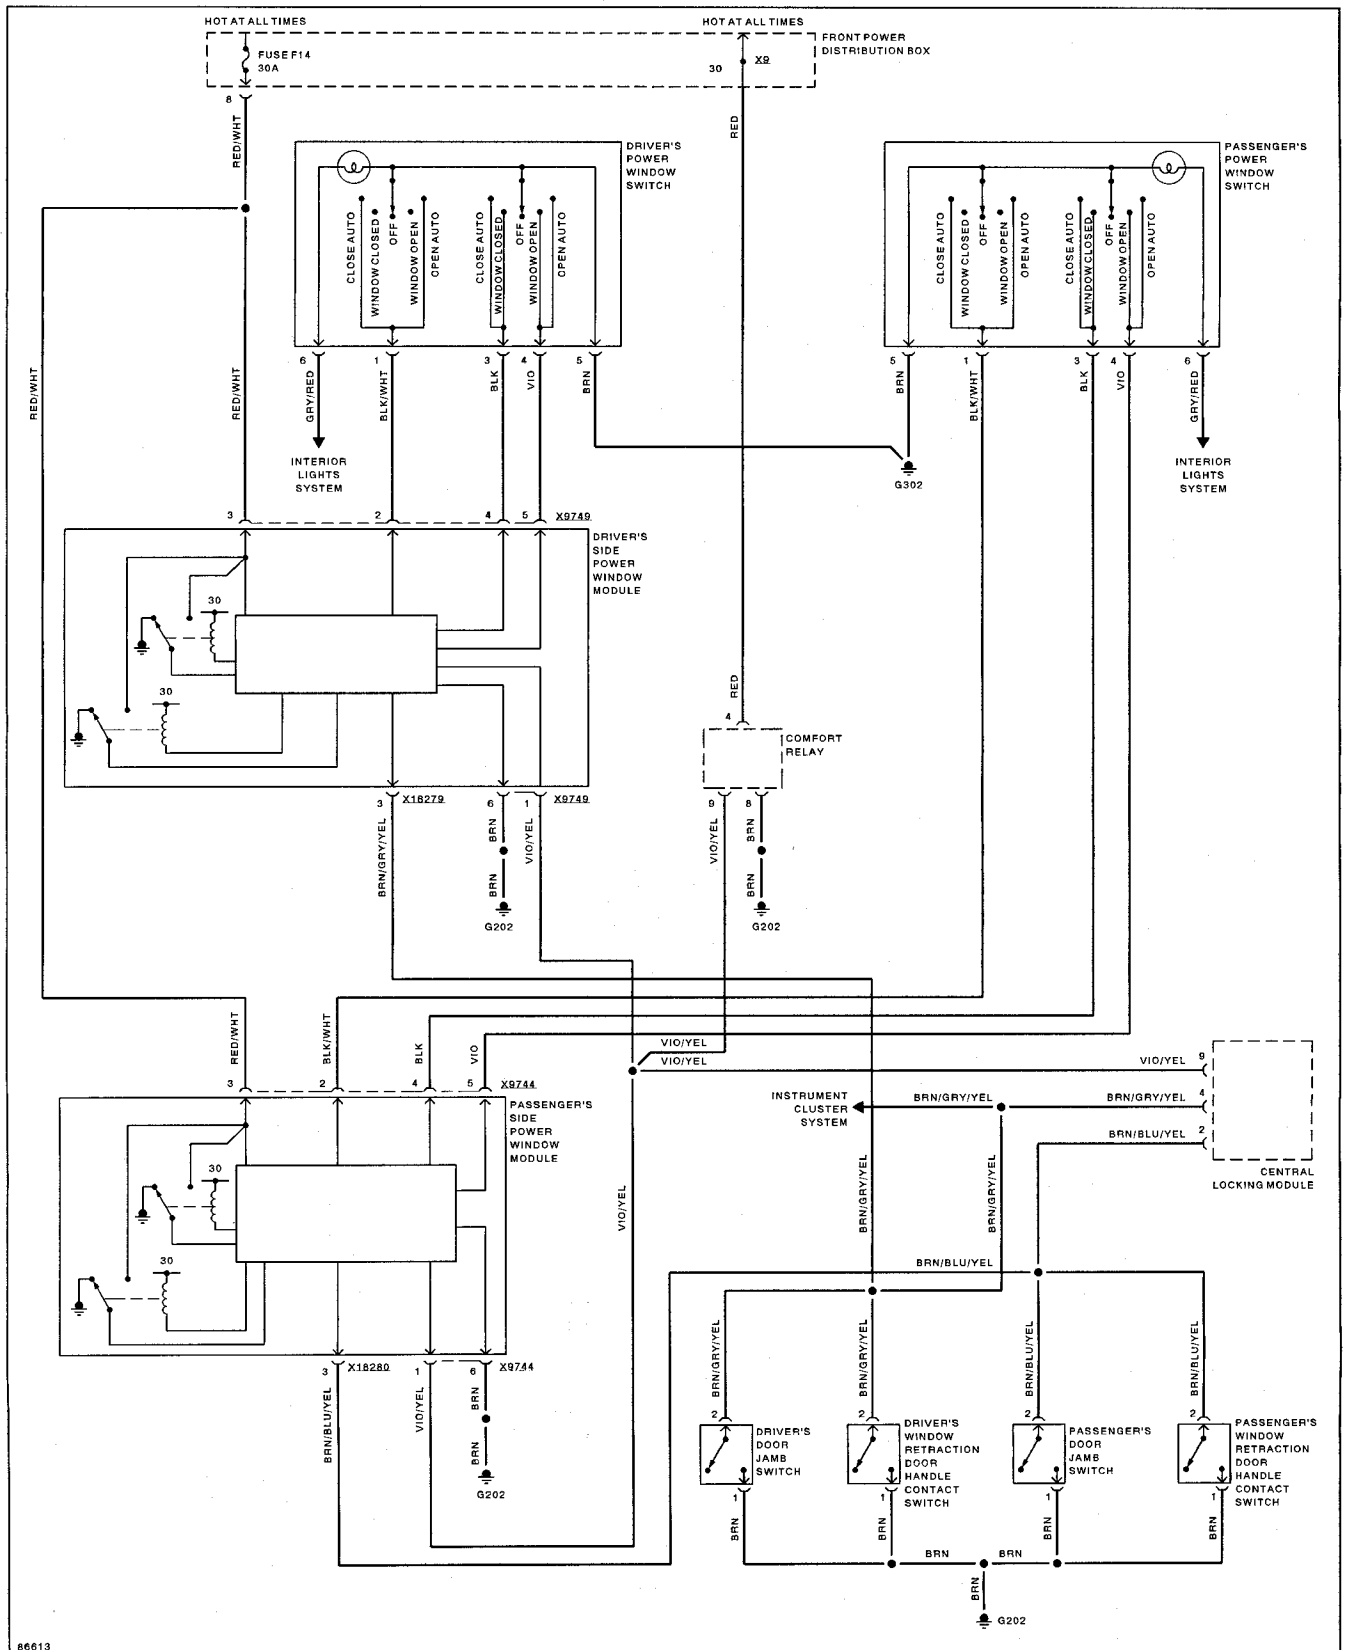


Power Windows

1993 318is & 325is

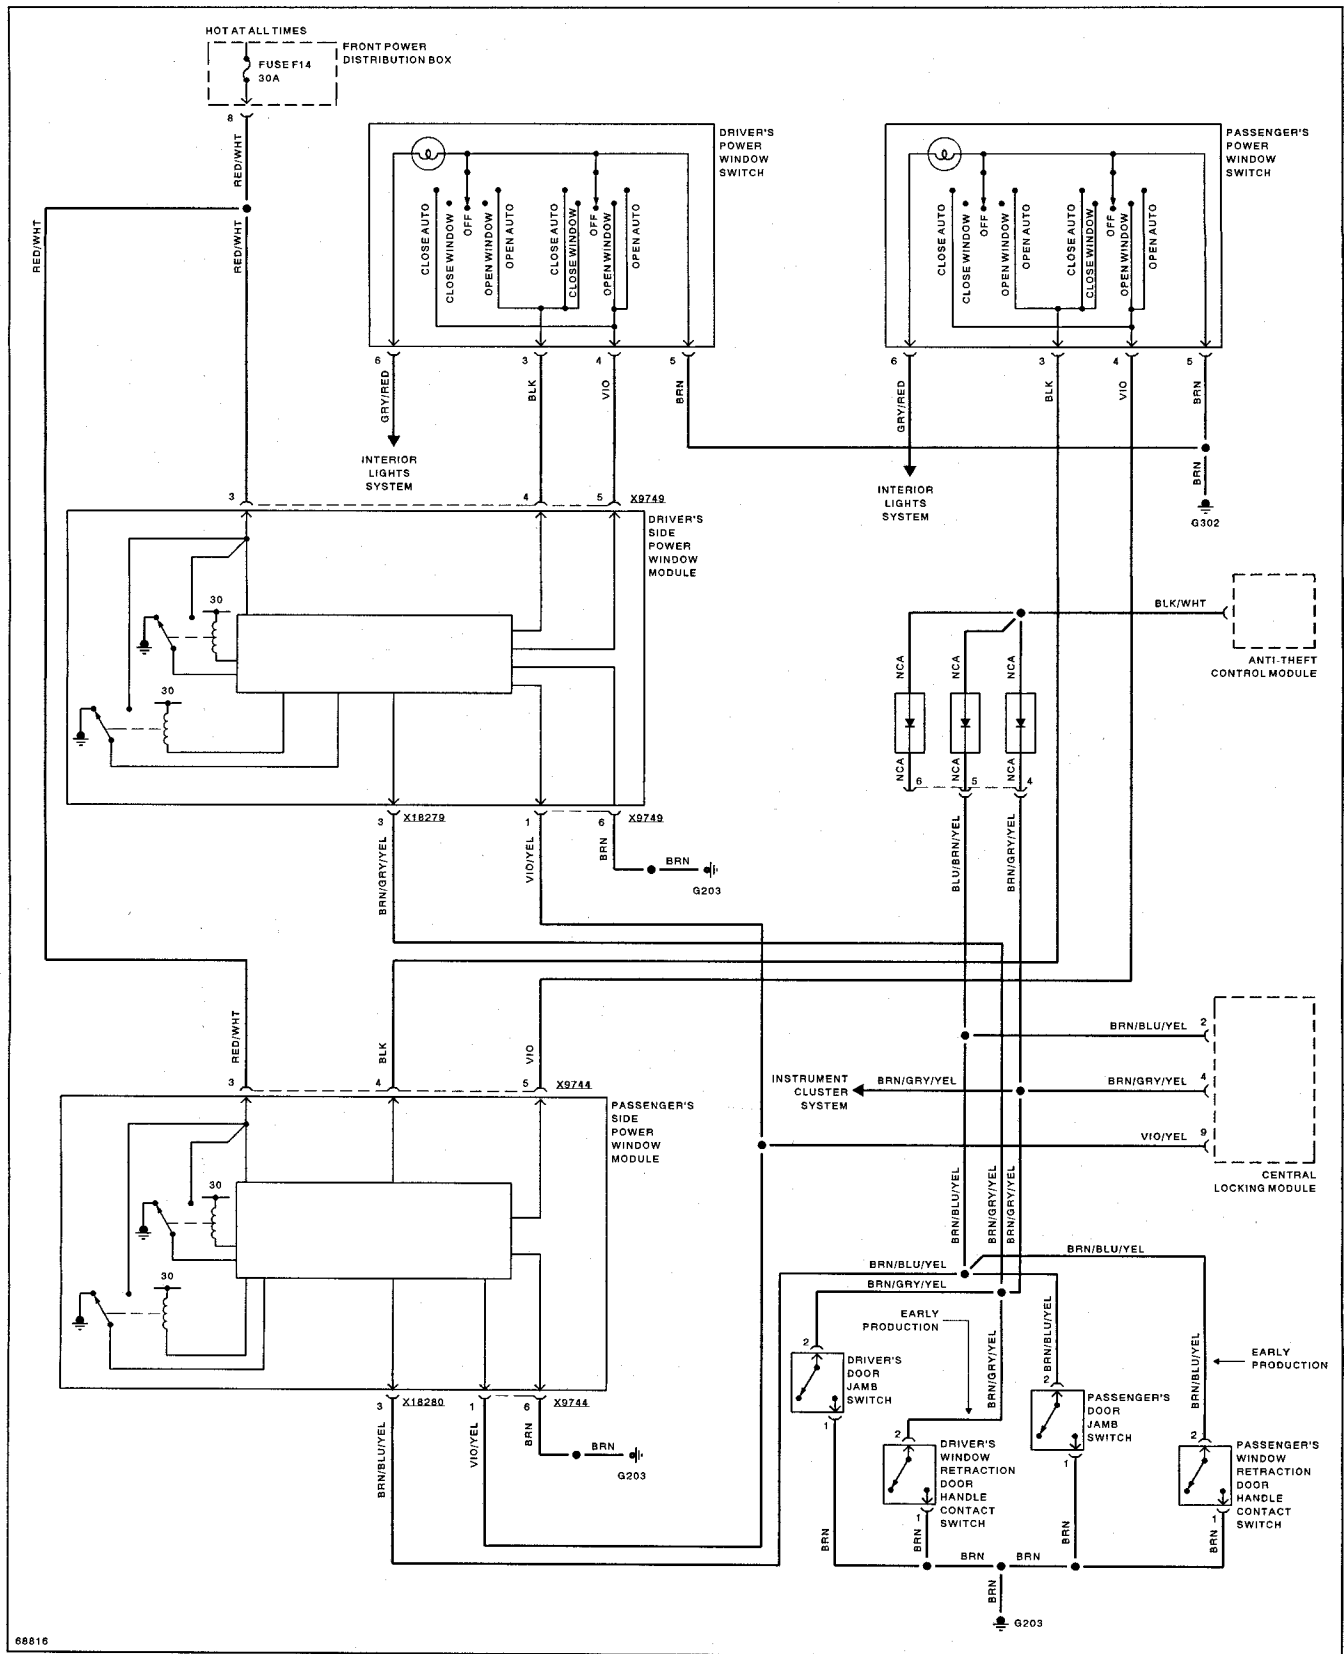


Power Windows

1992-93 318i & 325i

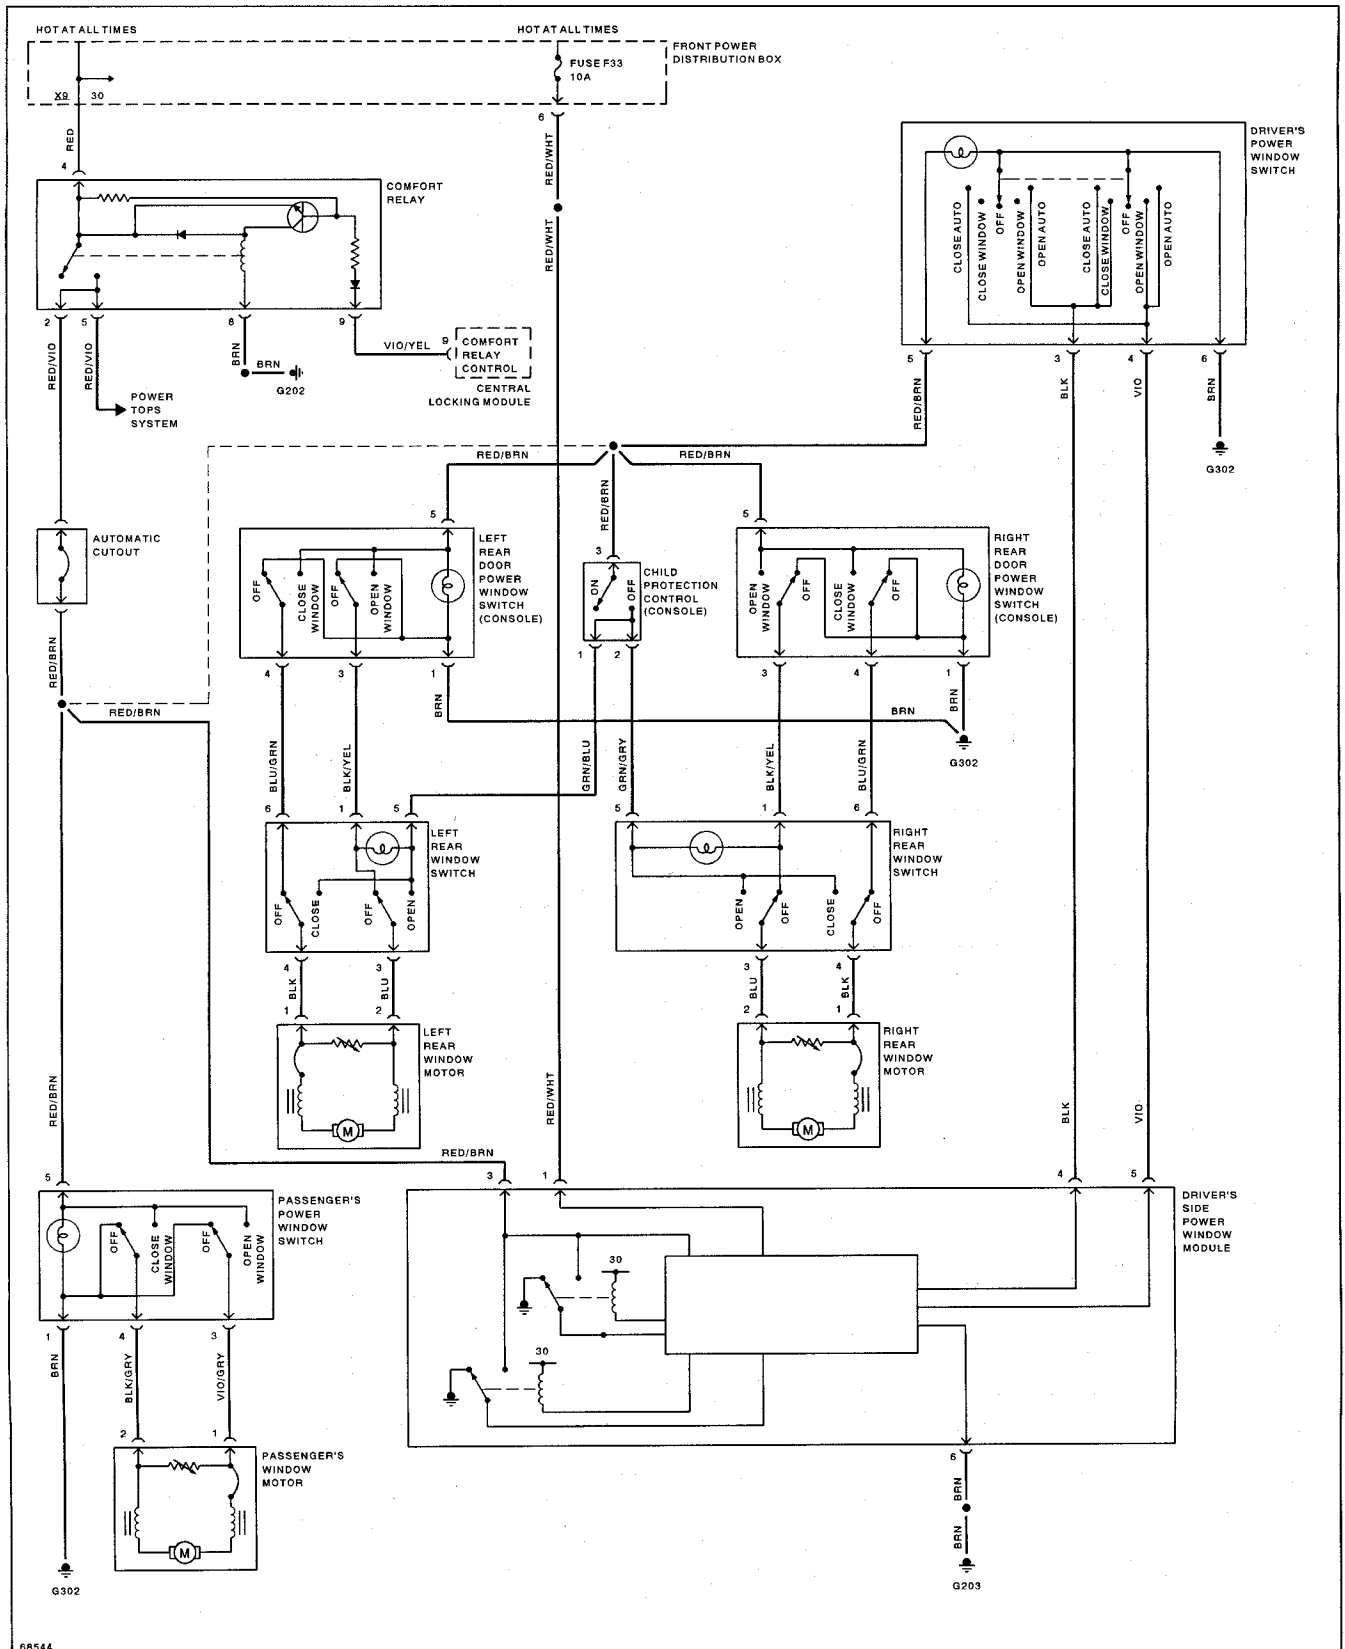


Power Windows

1994-97 Except 318ti (1 of 2)

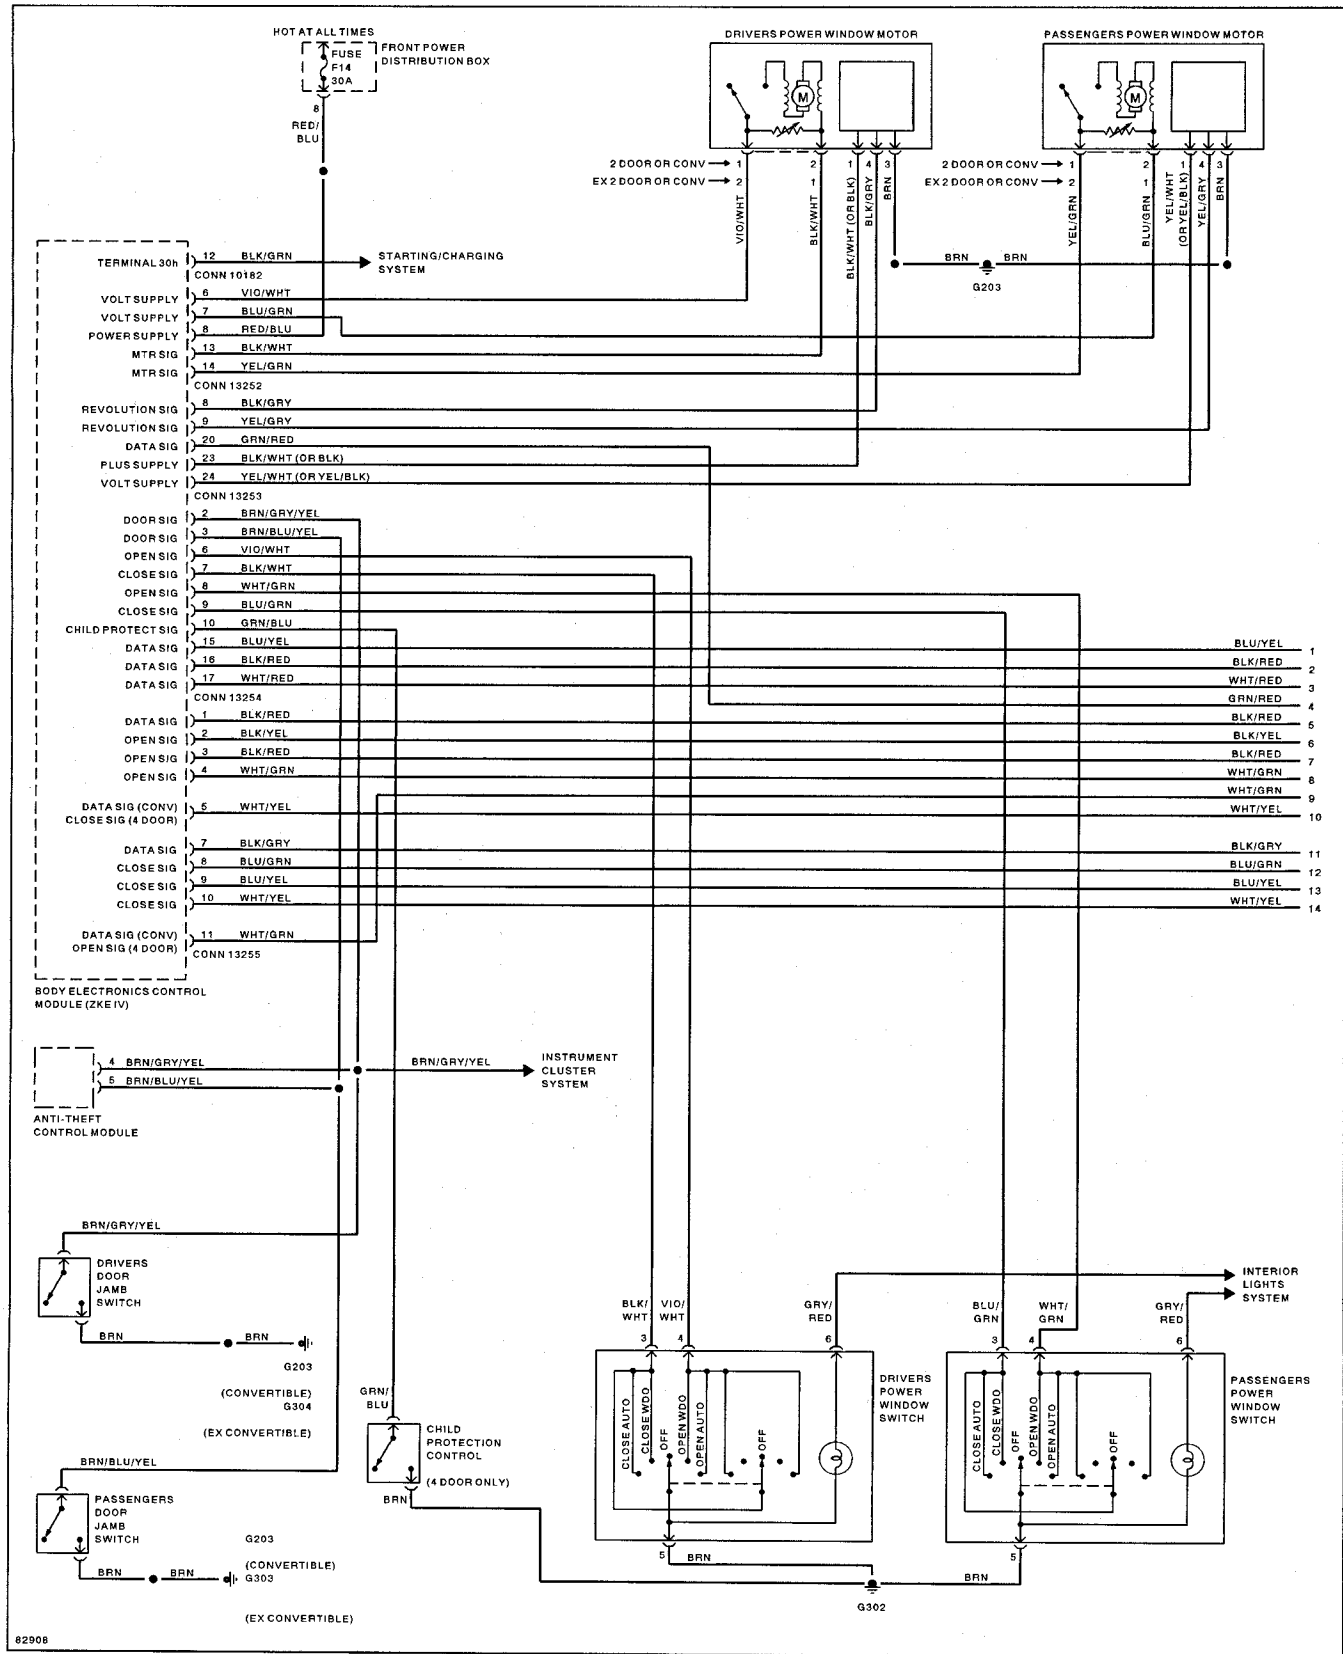


Power Windows

1994-97 Except 318ti (2 of 2)

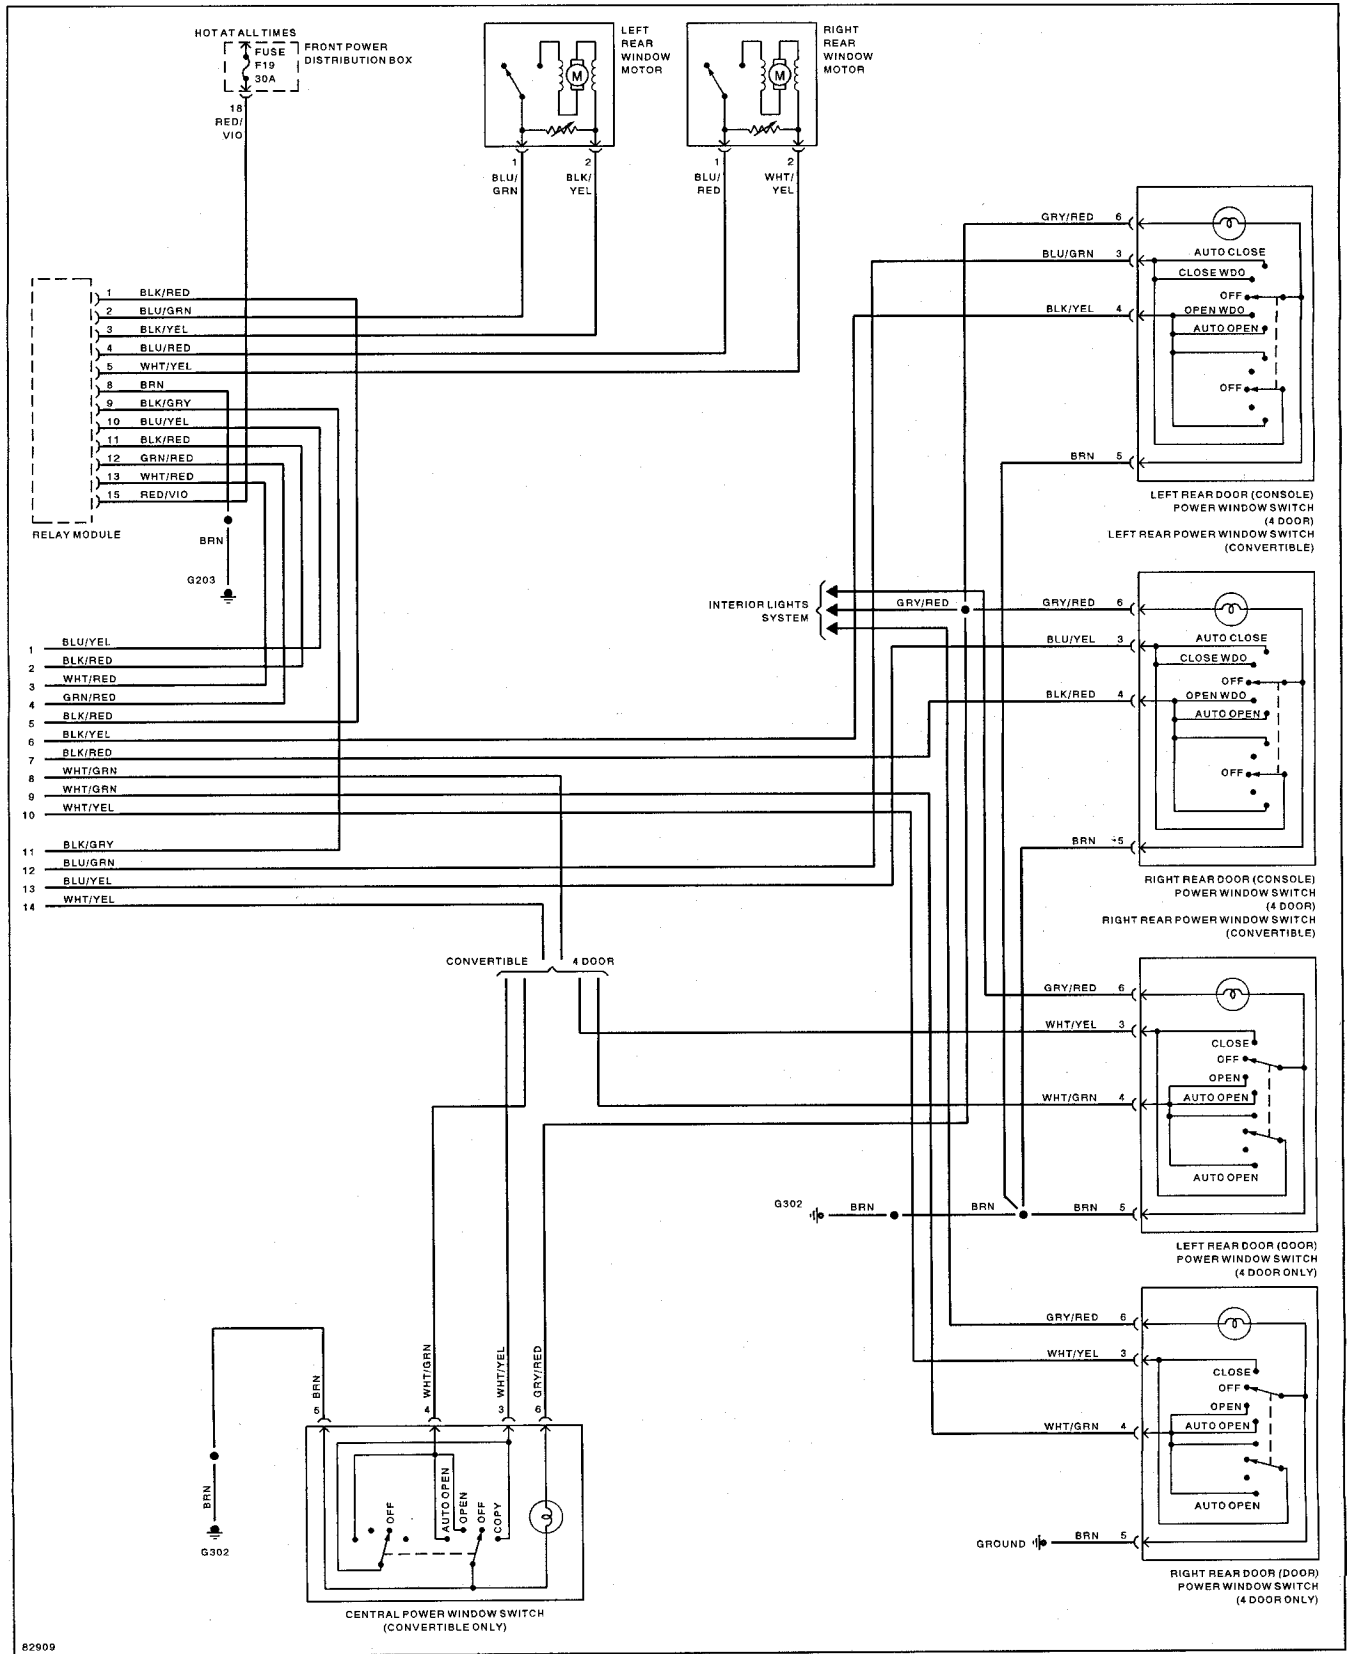


Power Windows

1998 Except 318i, 318ti (1 of 2)

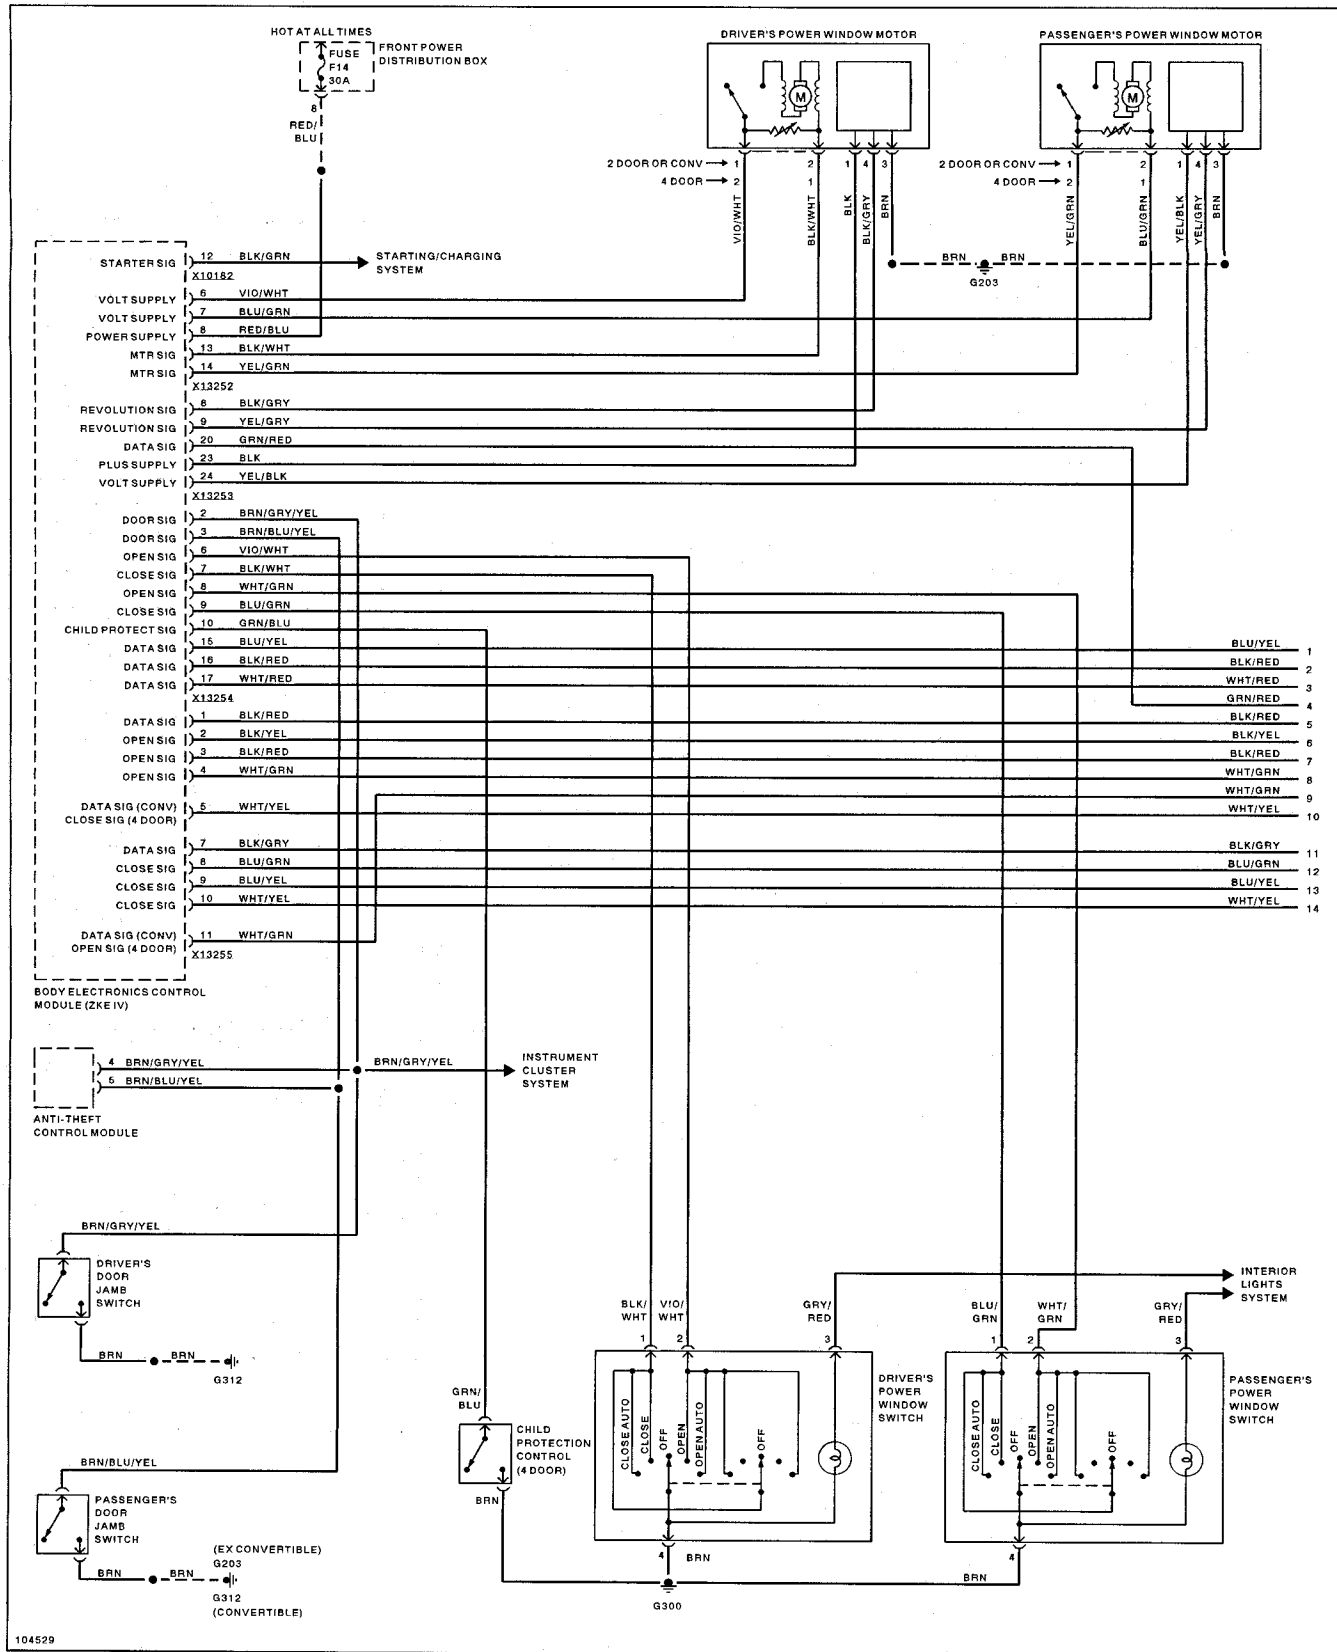


Power Windows

1998 Except 318i, 318ti (2 of 2)

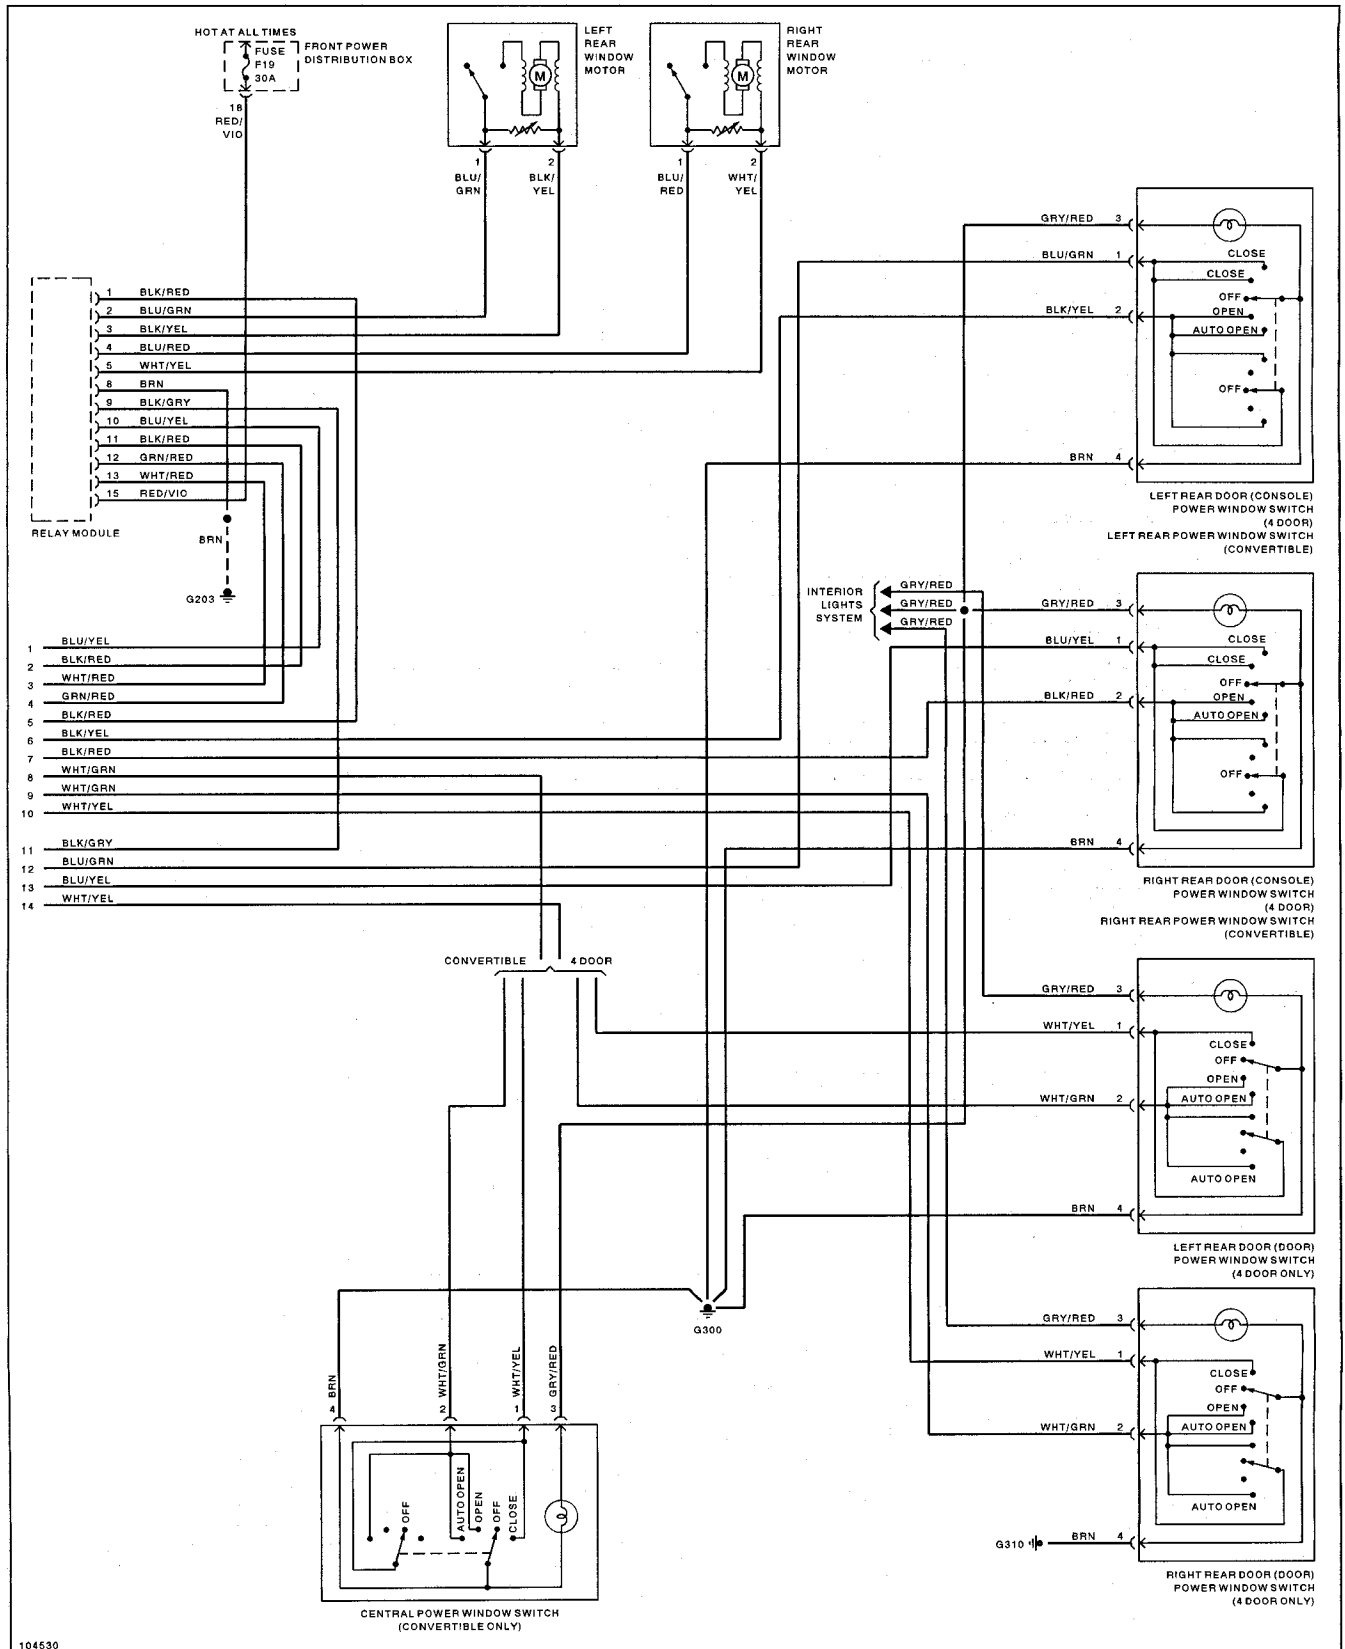


Power Windows

1995-96 318ti

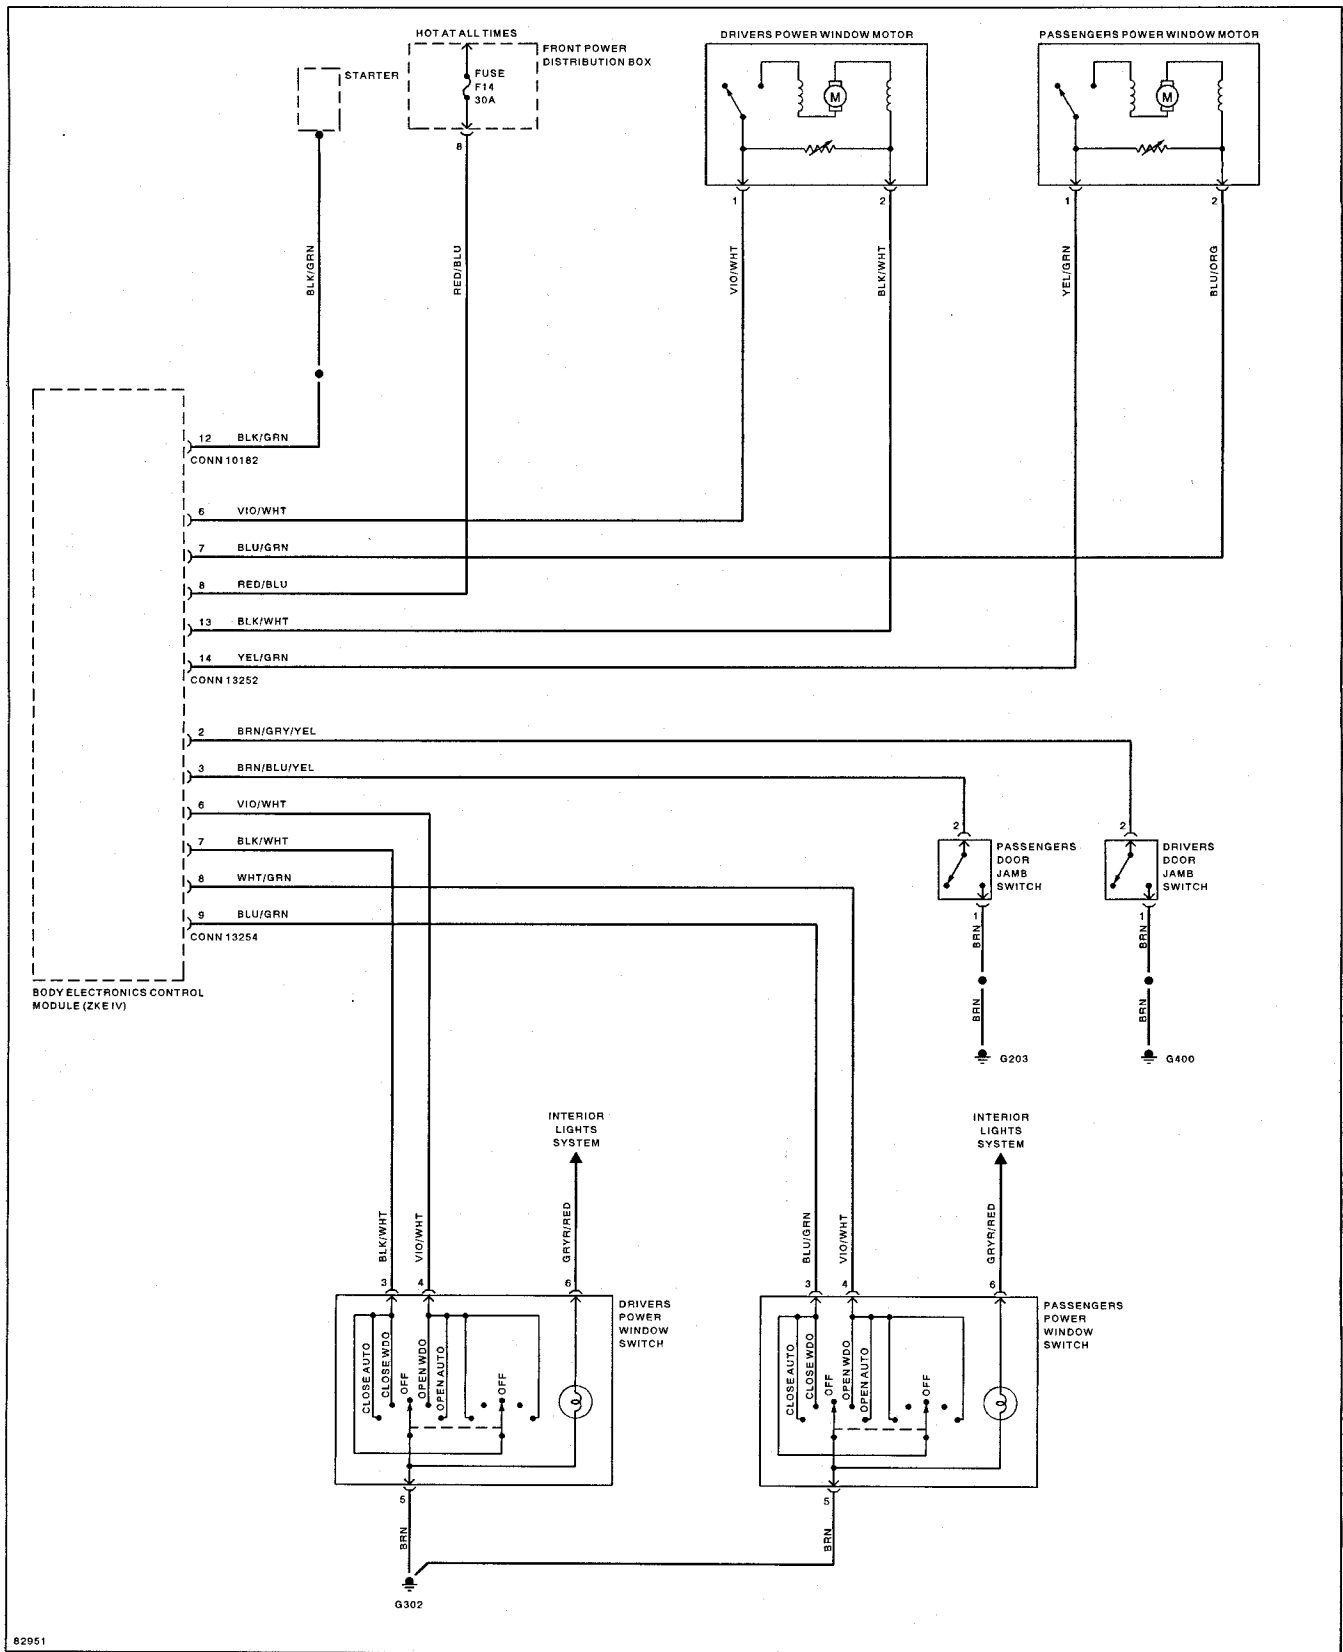

Power Windows


1997 318ti

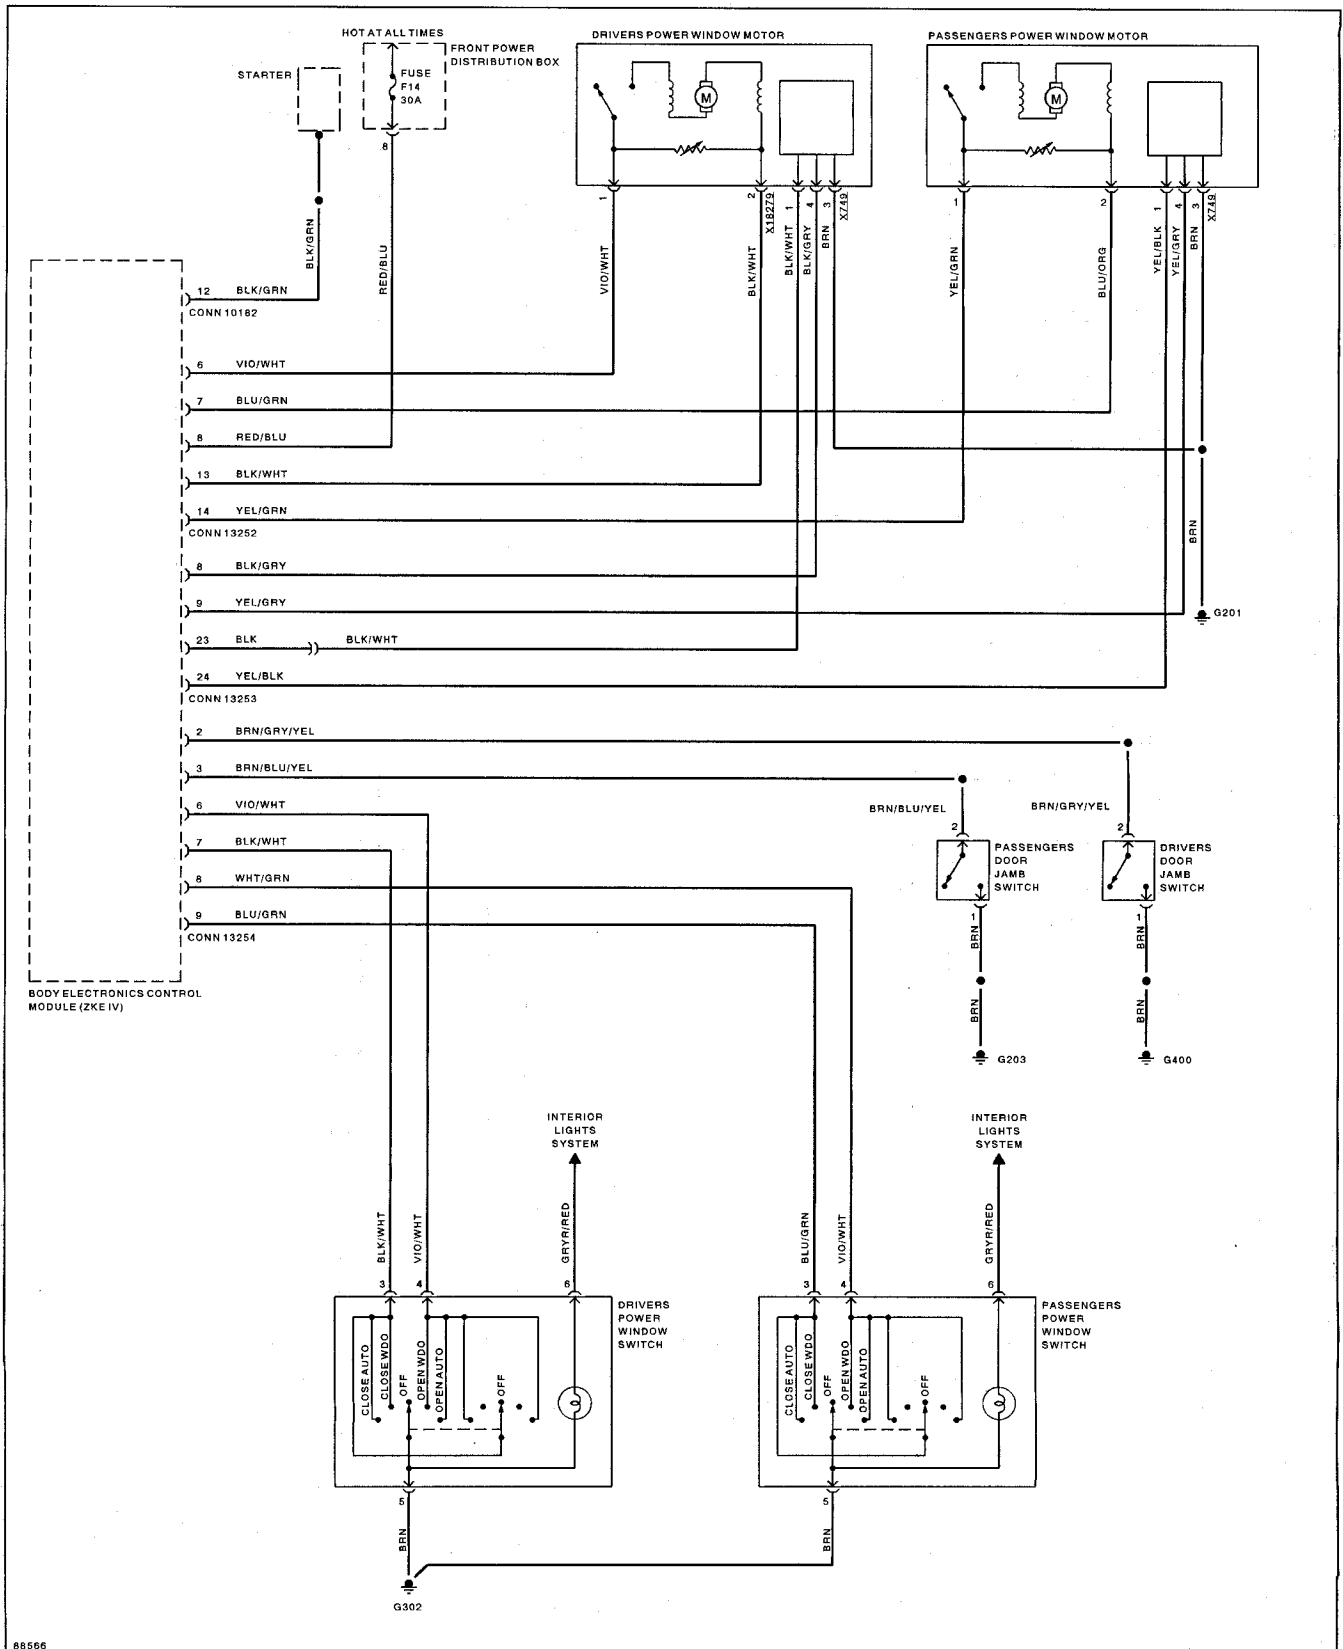


88566

Power Windows


1998 318ti

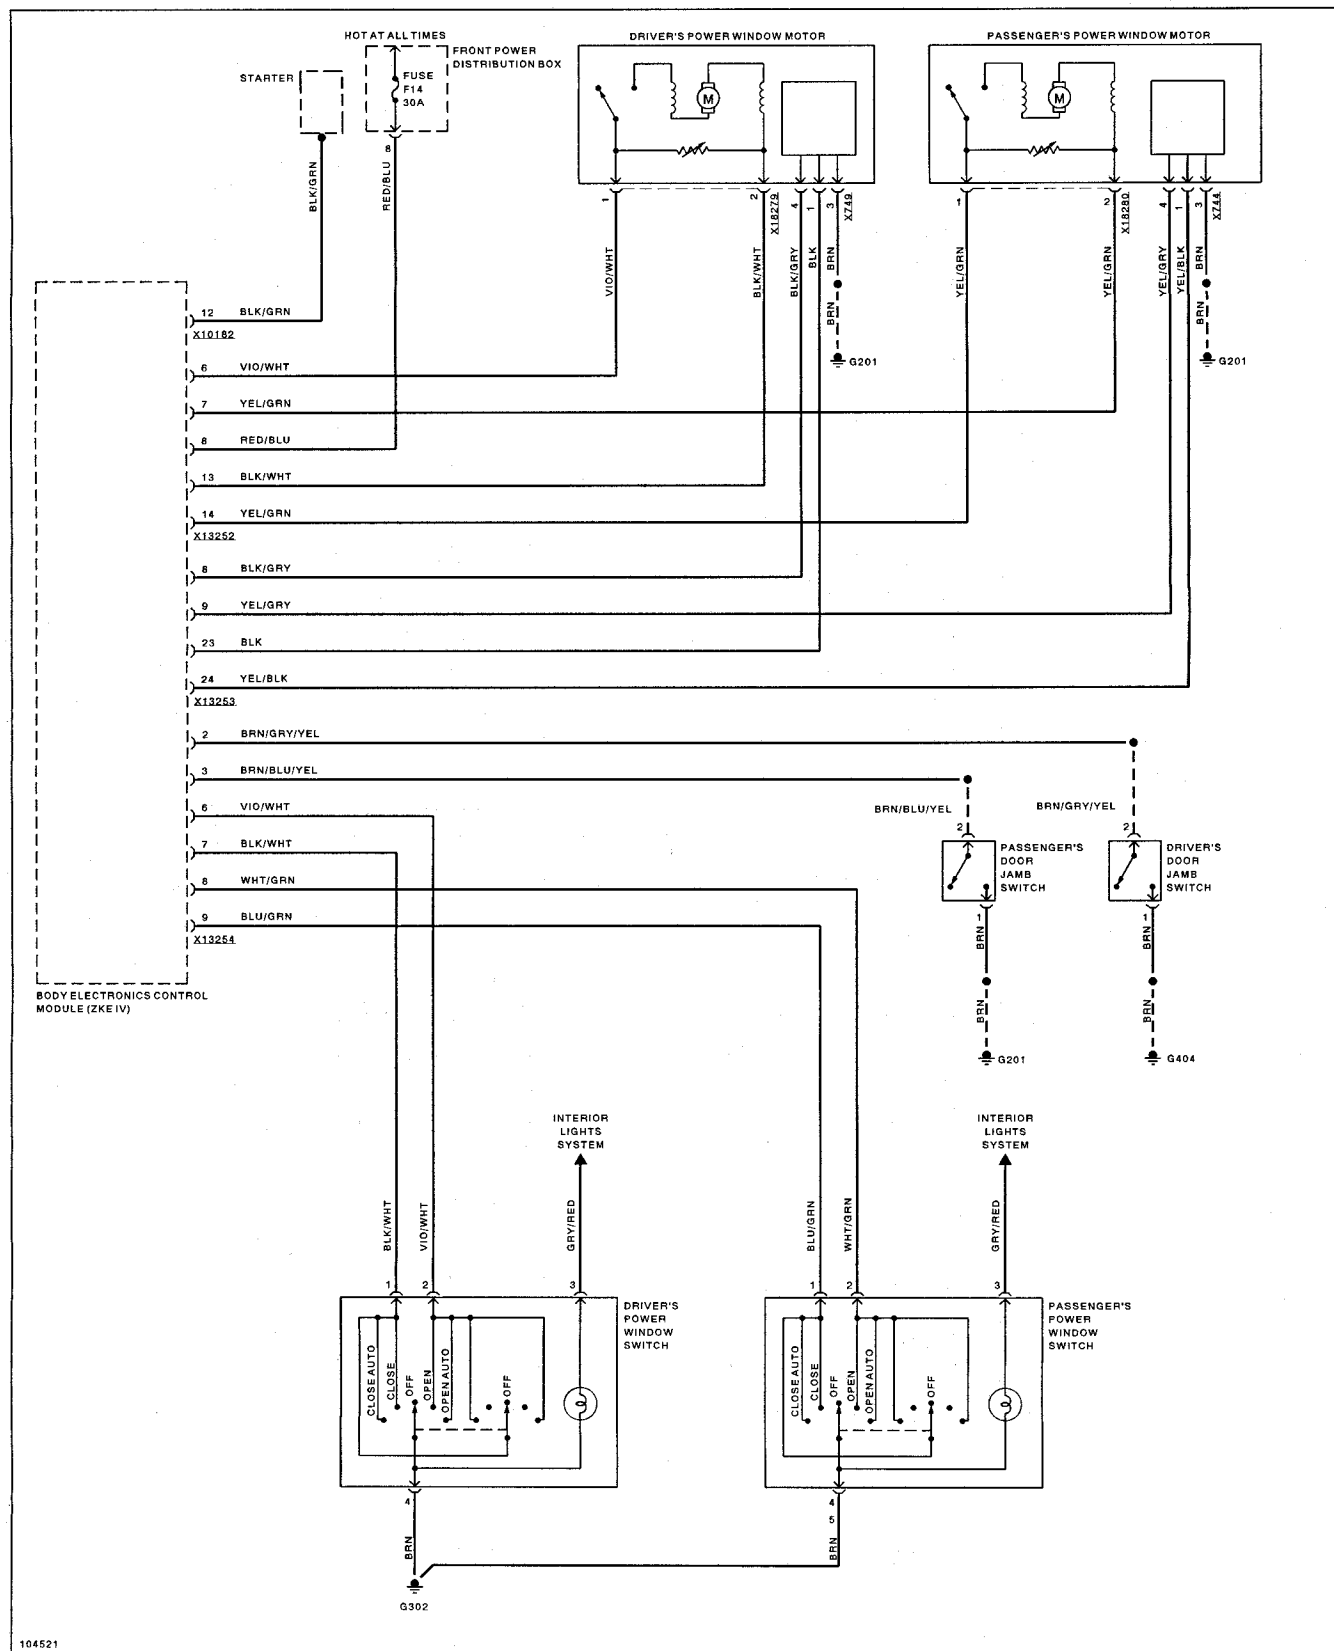

Power Mirrors

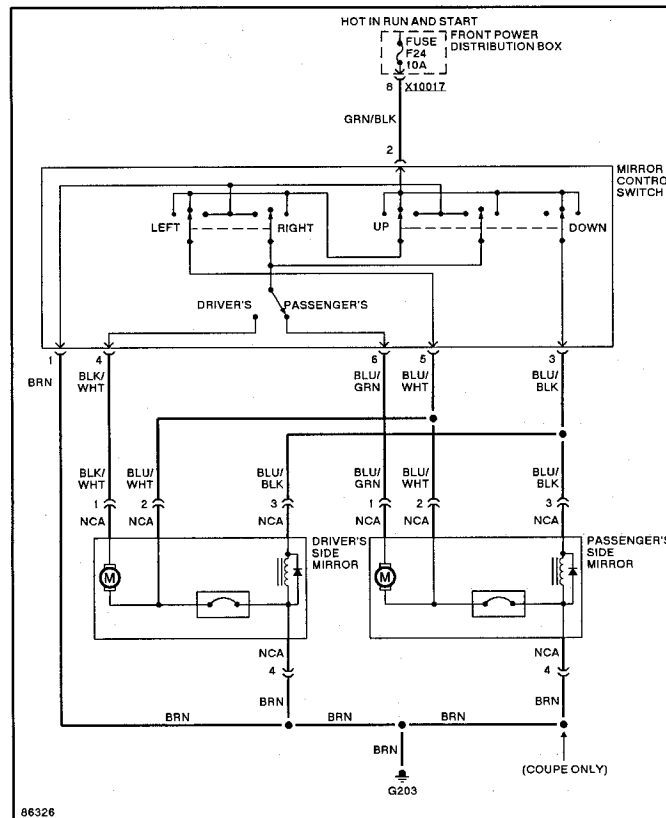


1992

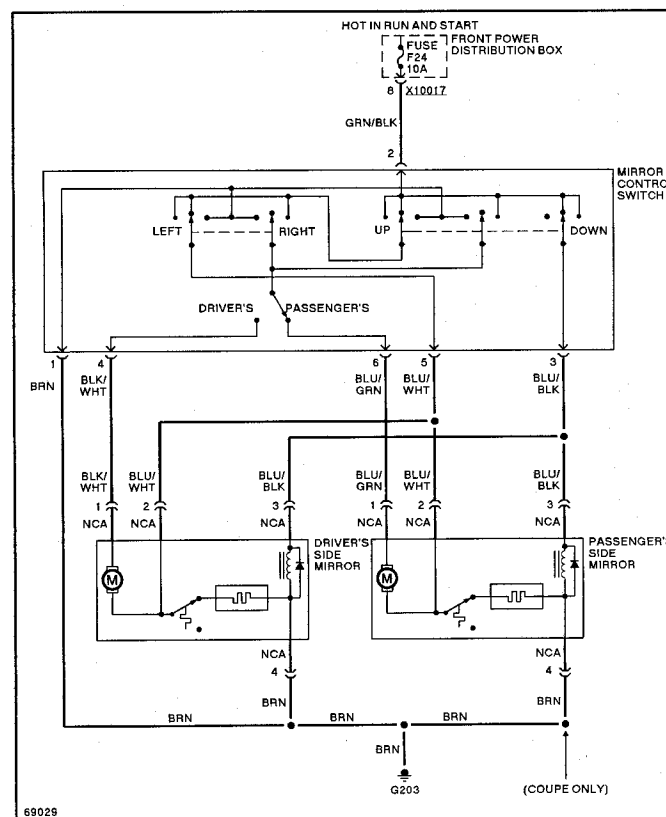


1993

Power Mirrors


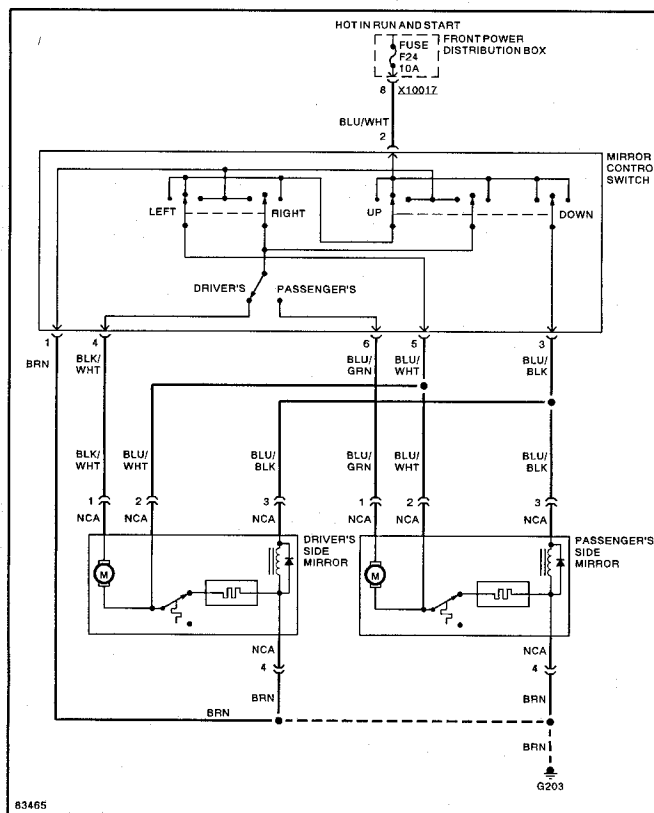


**1994-98
Except 318ti**

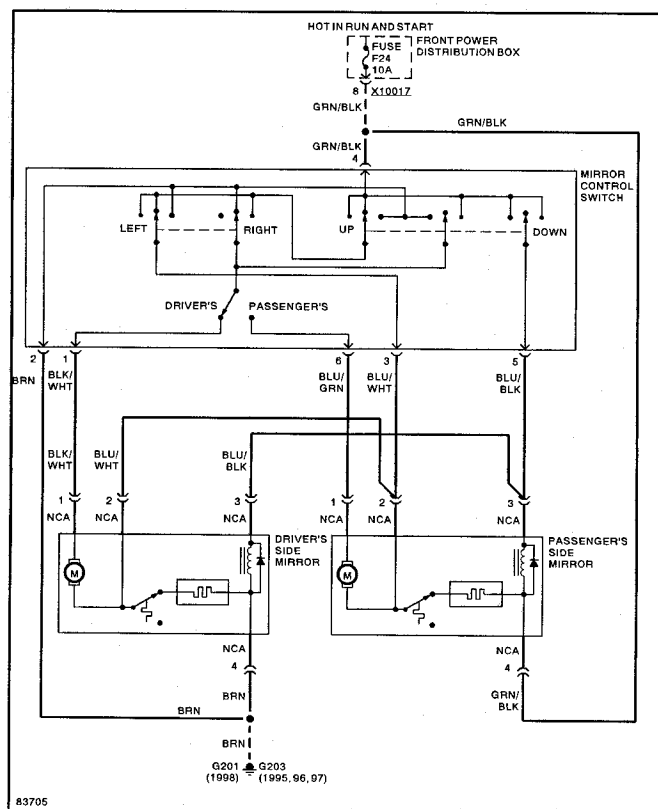


**1995-97
318ti**

Power Seats

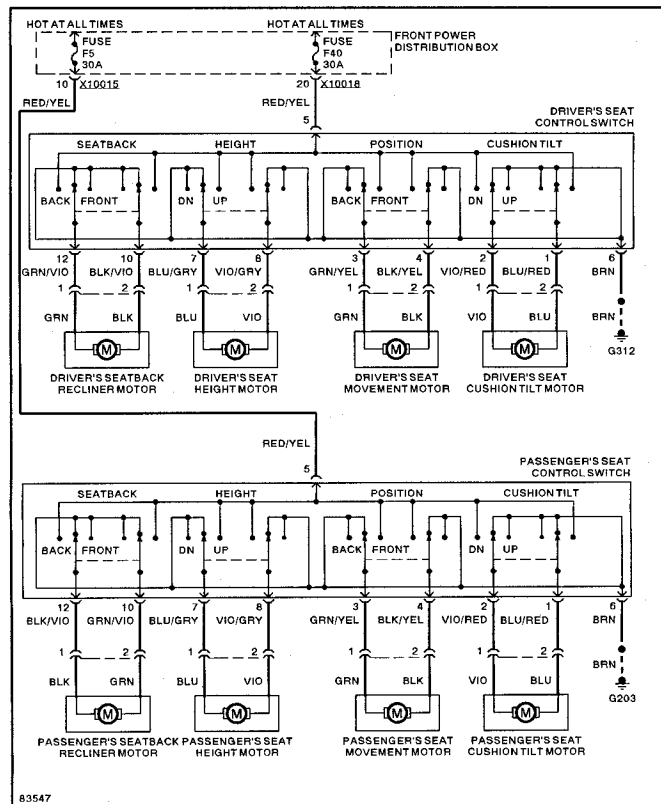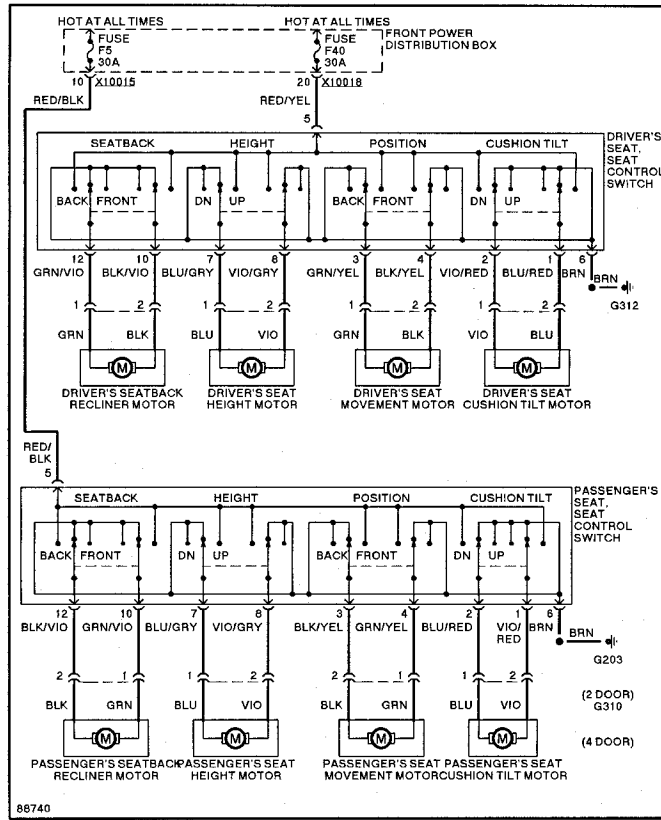


Power Seats

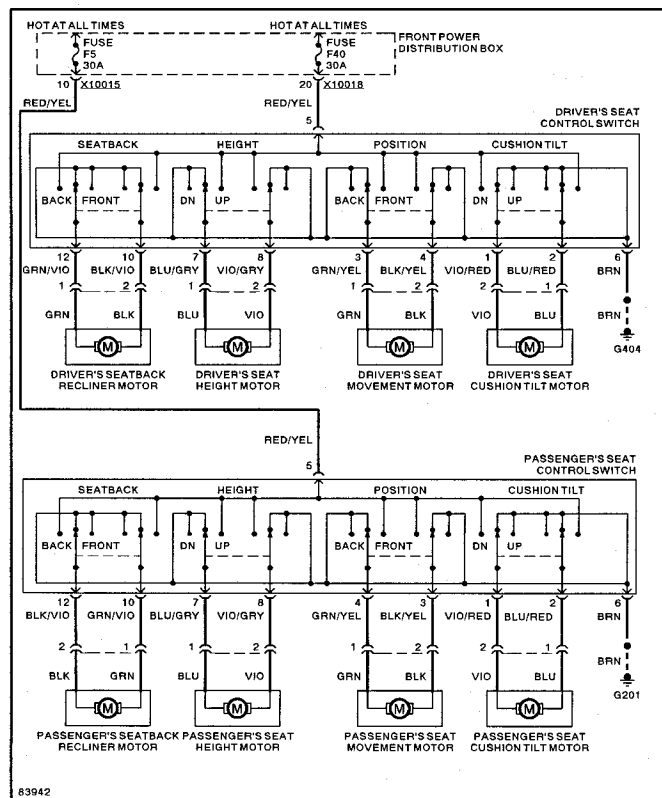

1995-98
318ti


Heated Seats

1992-98 Except 318ti

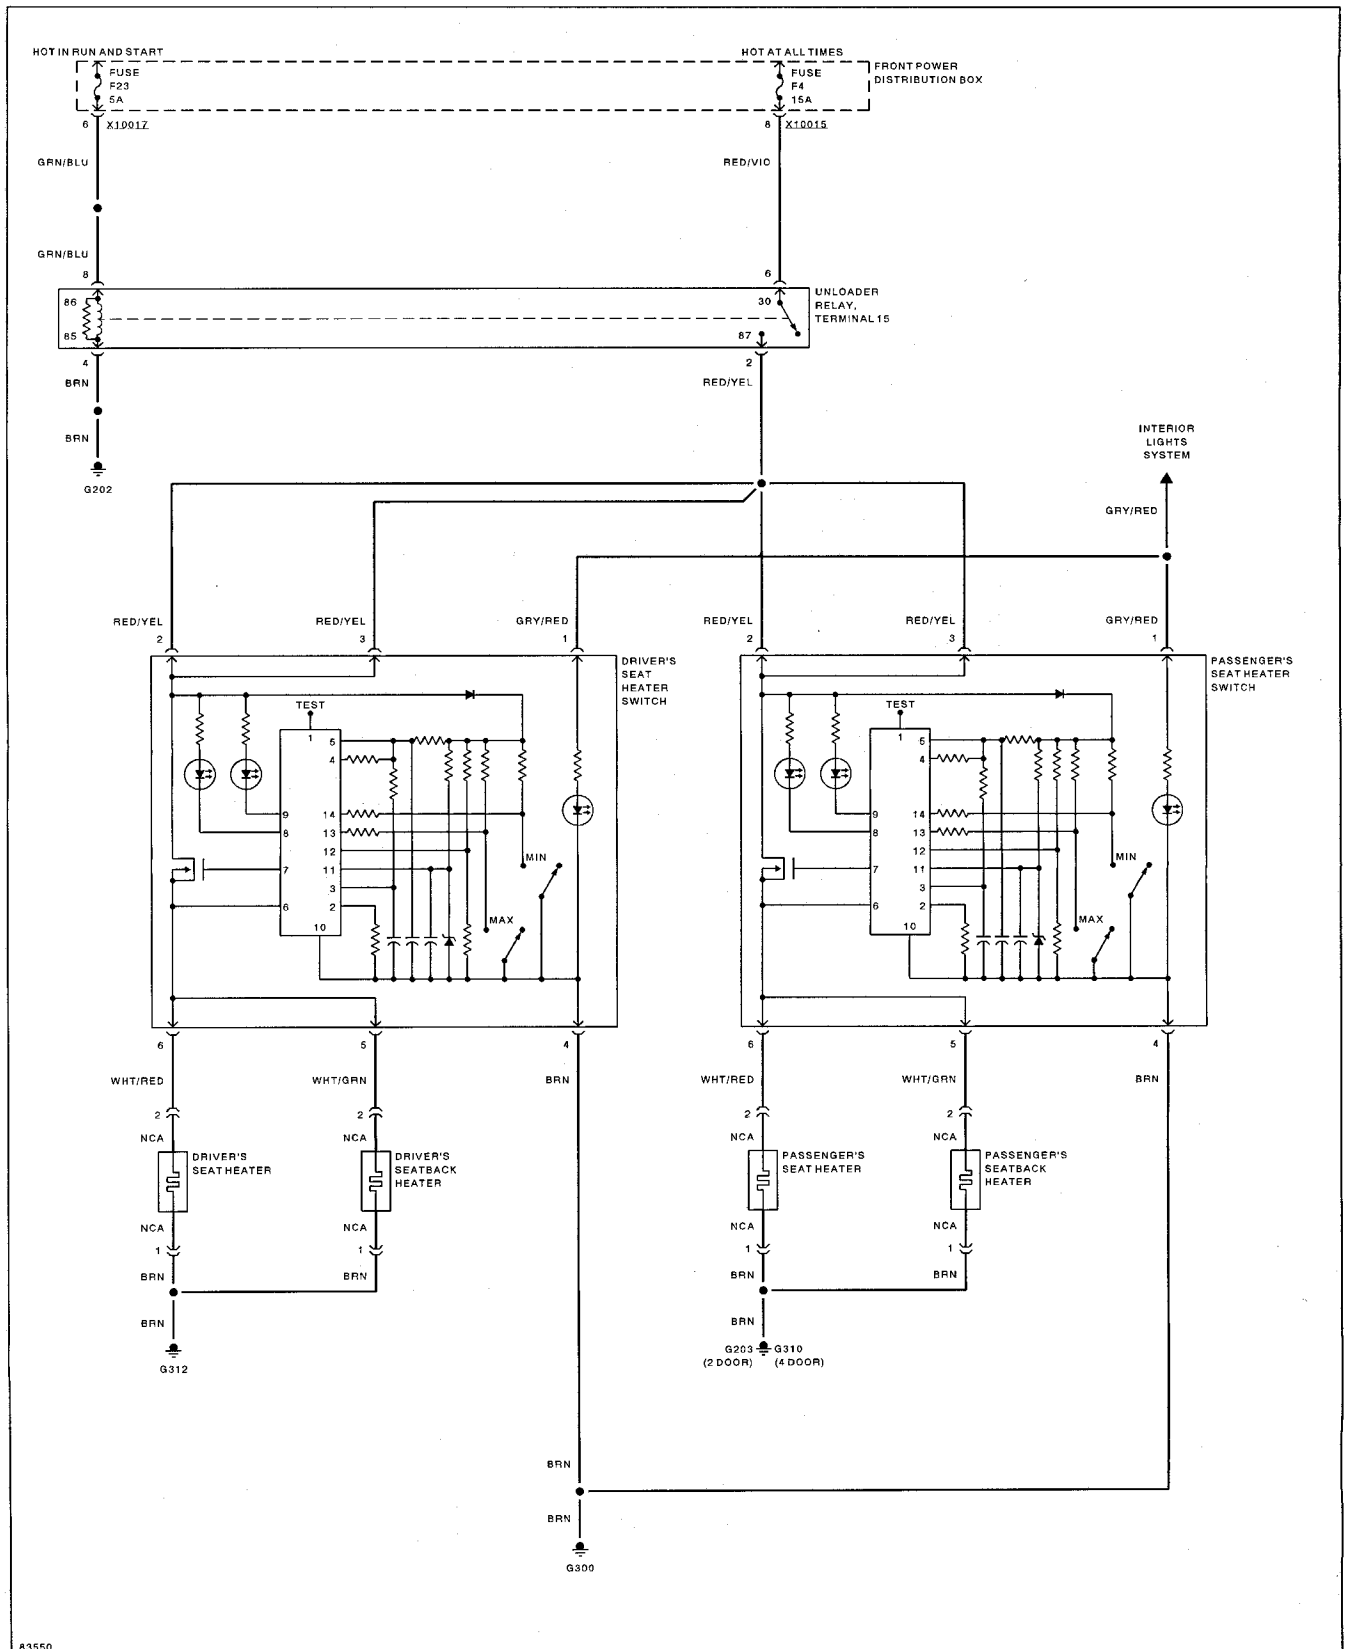


Heated Seats

1995-97 318ti


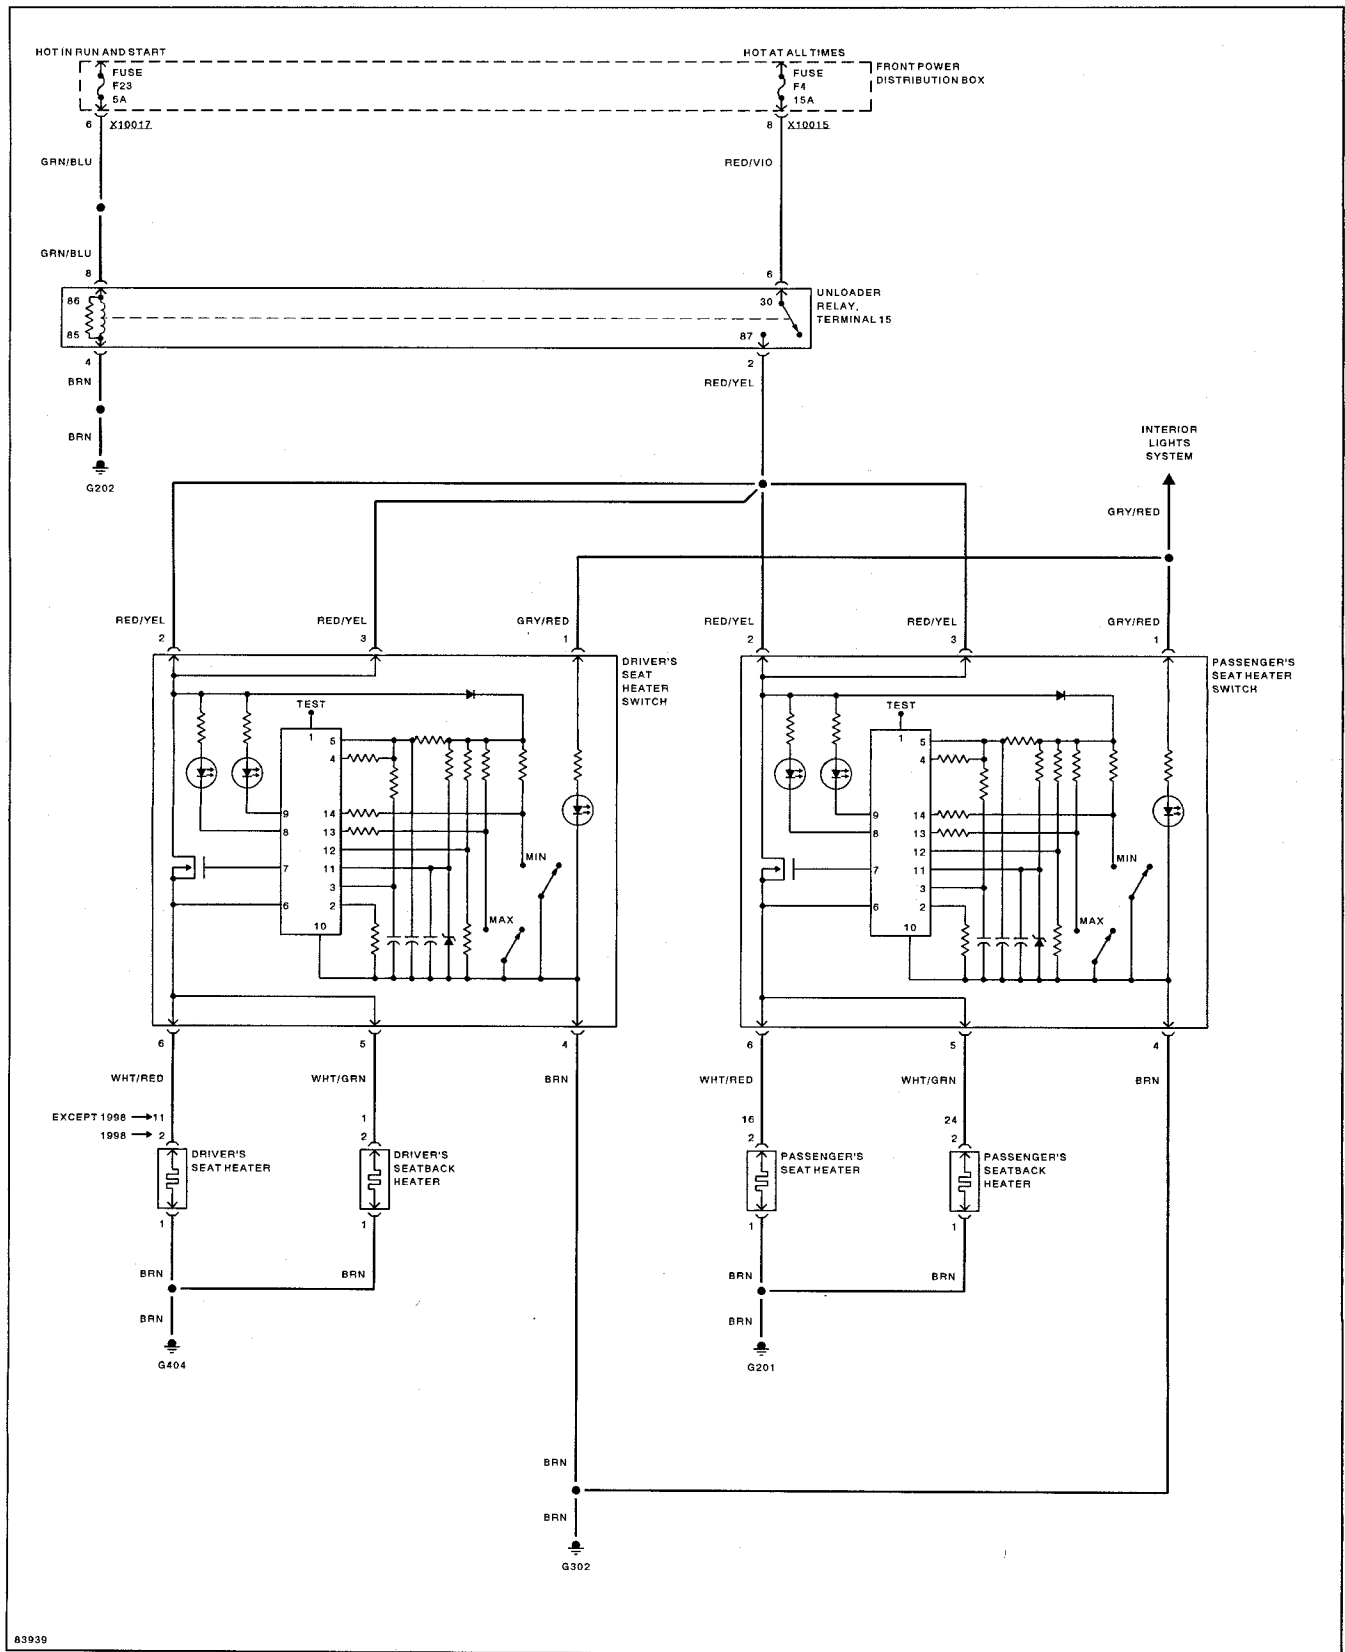


Lumbar Control

1998

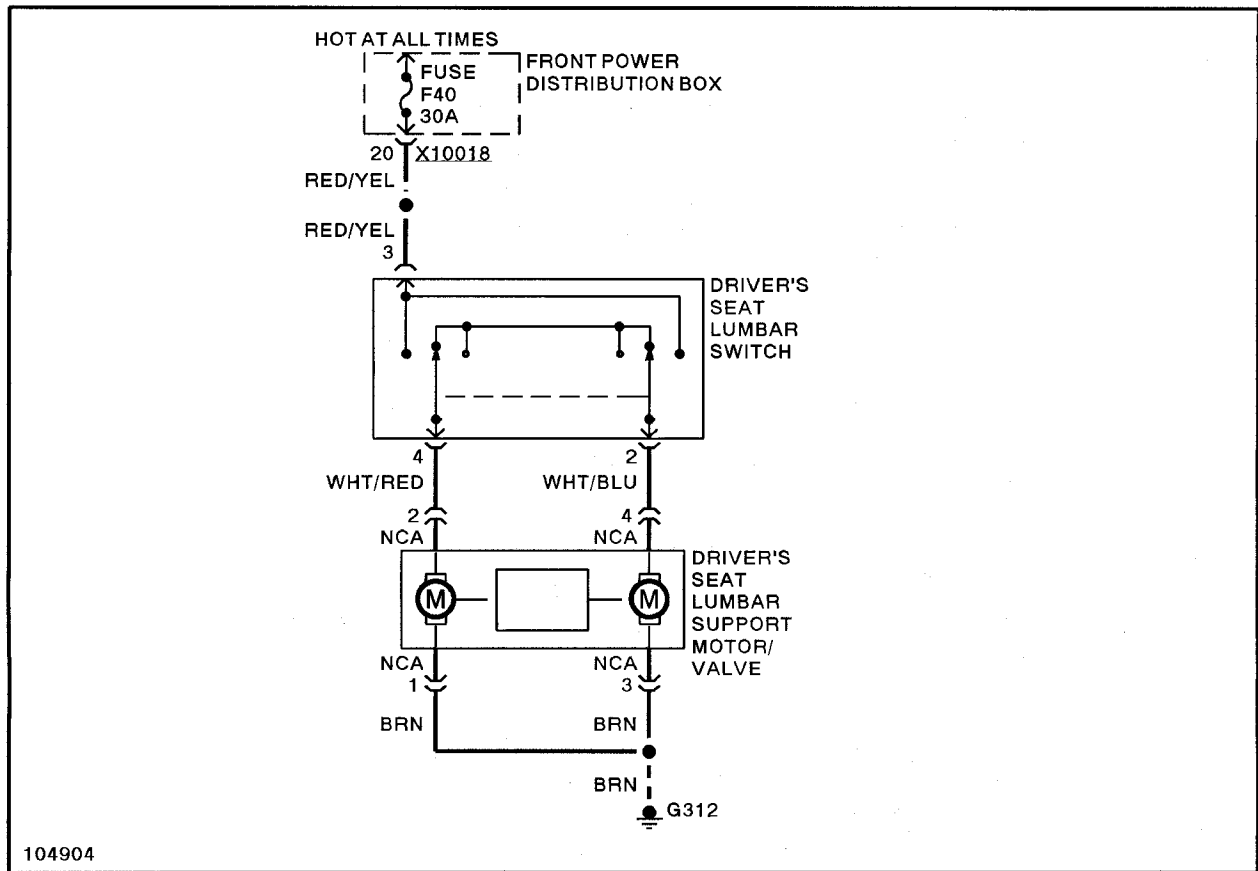


Power Sunroof

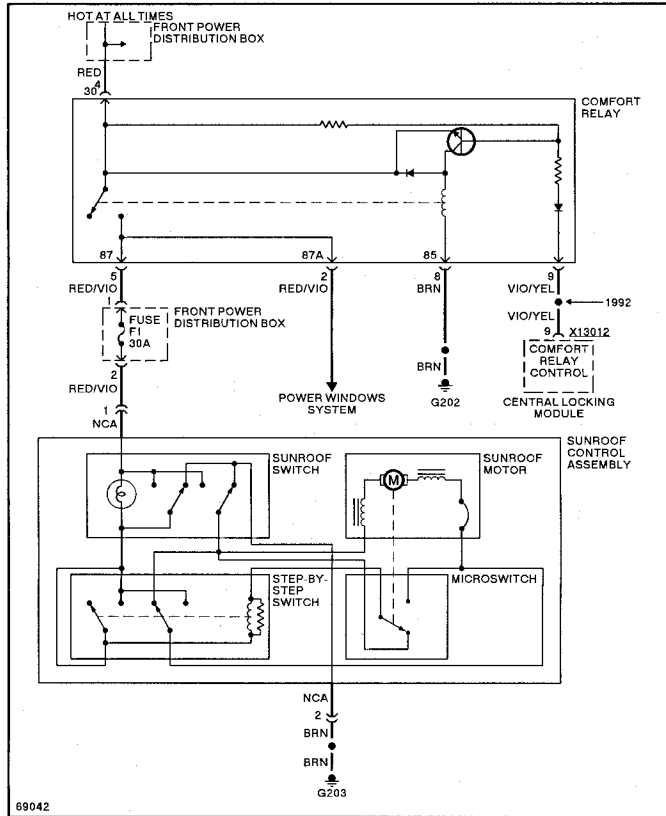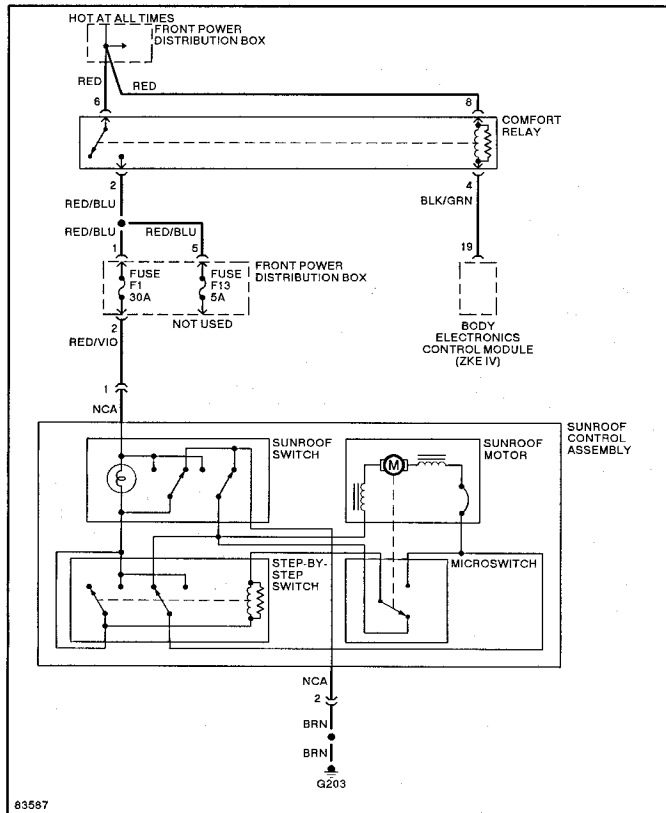
**1992-93**

1994

Power Sunroof

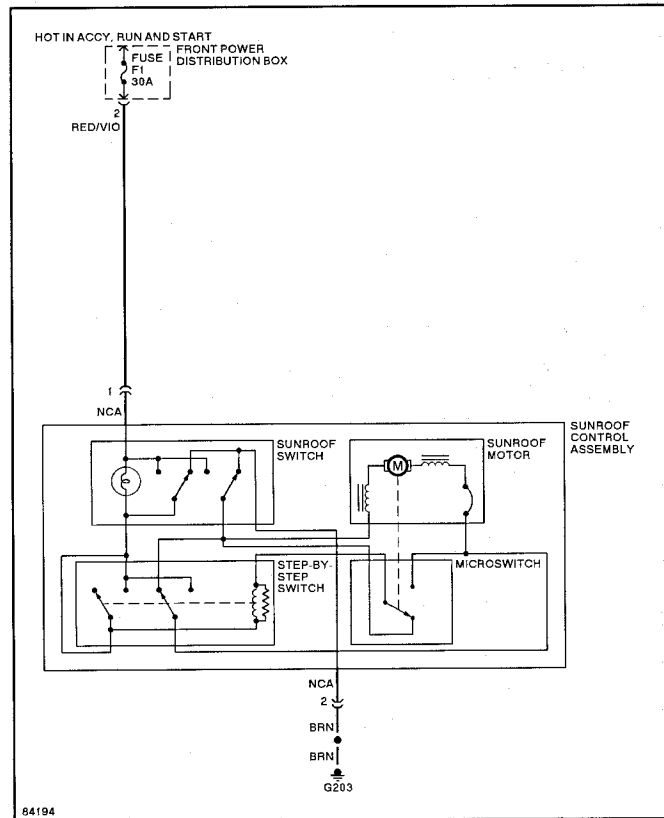


**1995
Except 318ti**

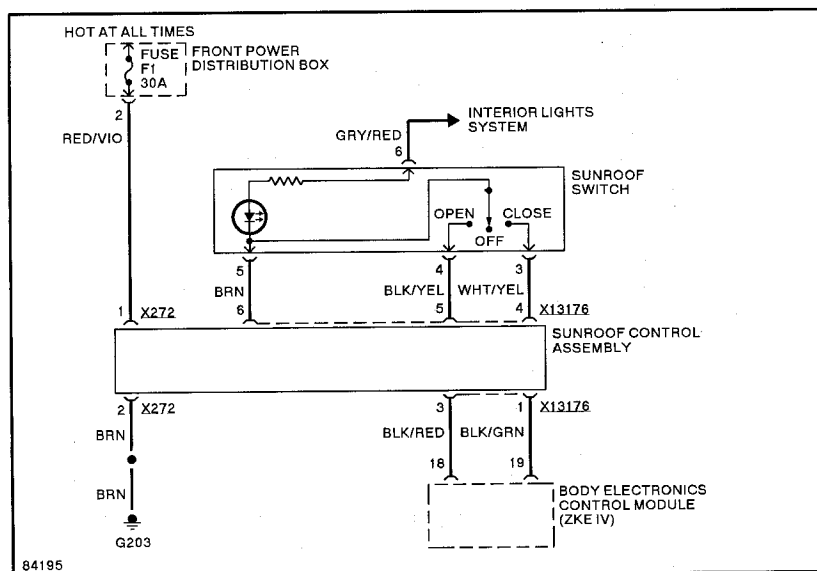


**1996-97
Except 318ti**


Power Sunroof 1998 Except 318ti

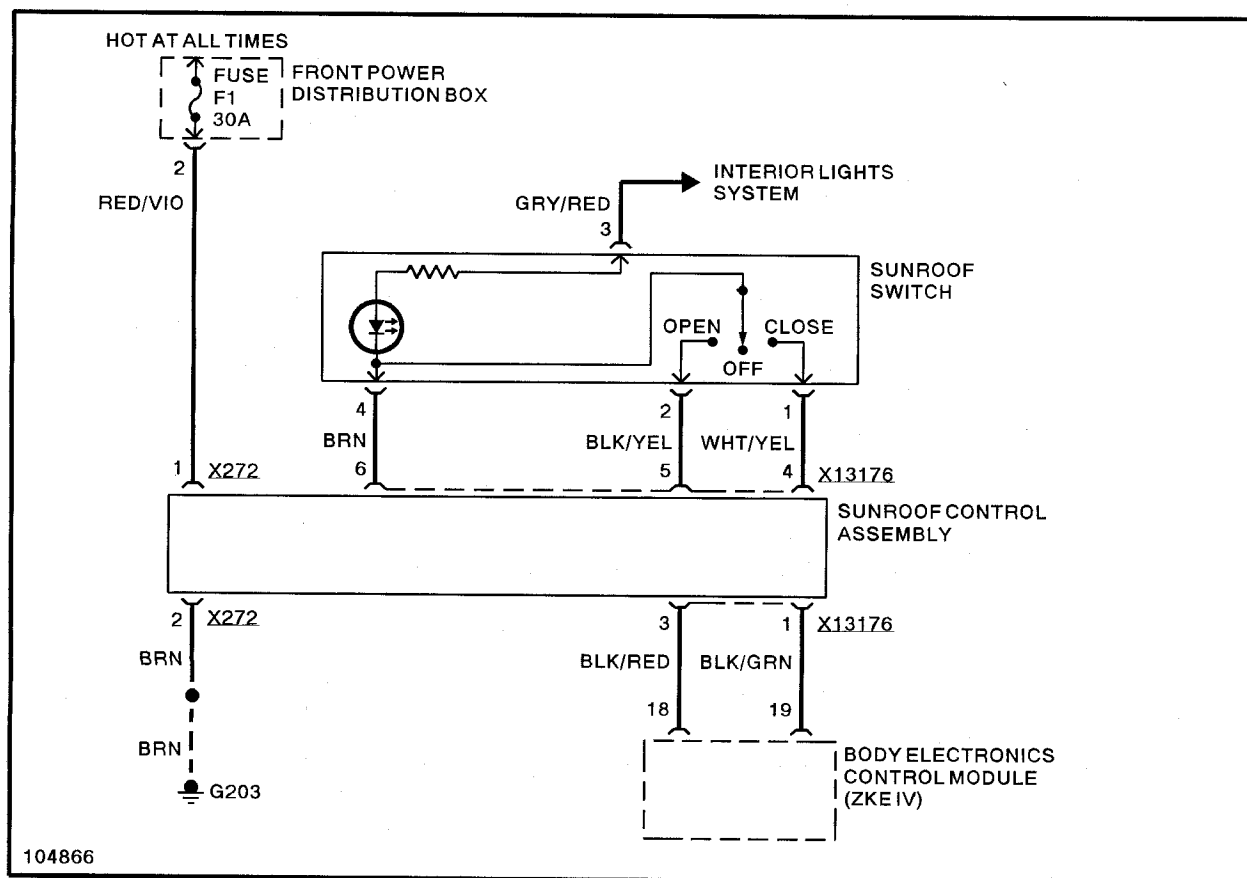

Power Sunroof

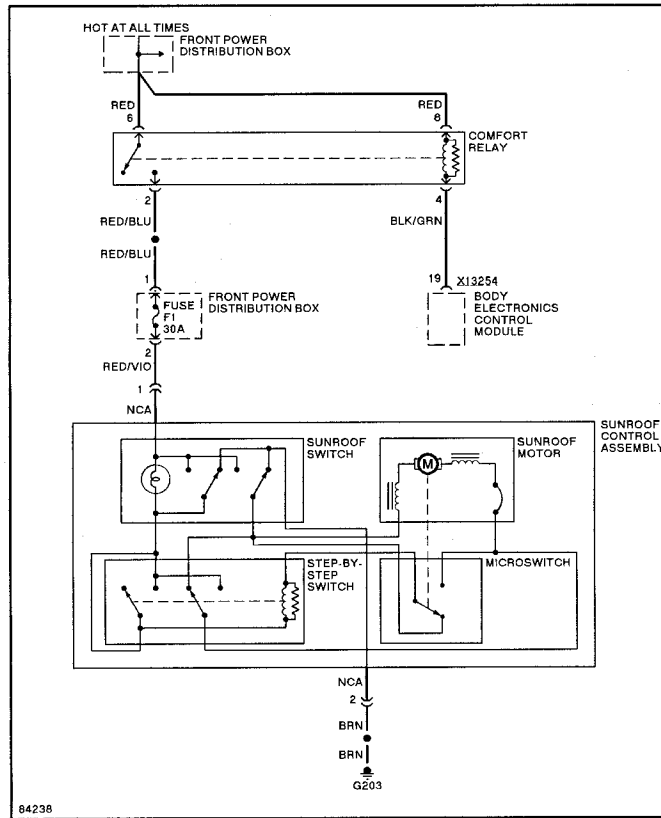


**1995 Early
Production
318ti**

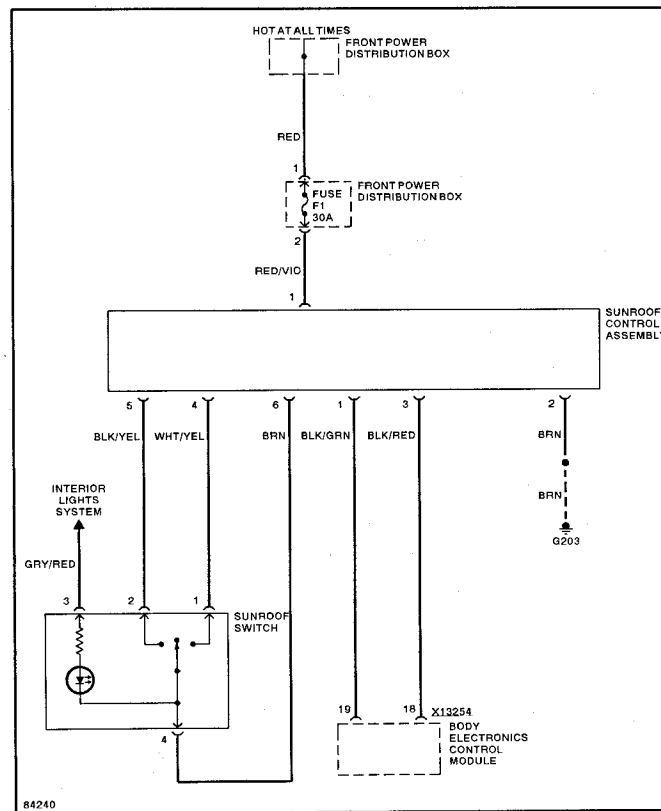


**1995 Late
Production &
1996-98 318ti
Sliding Sunroof**

Power Sunroof

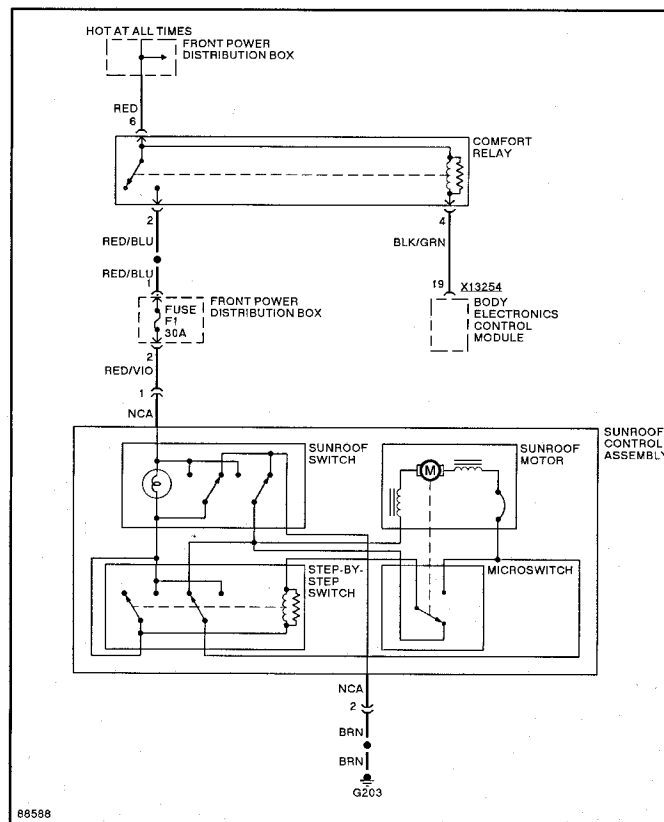

**1997
318ti Folding
Sunroof**

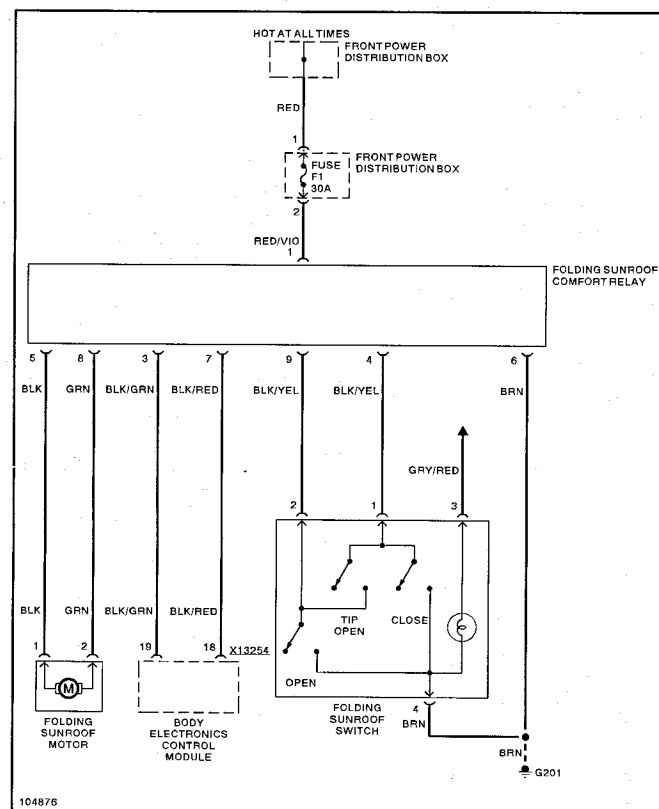


**1998
318ti Folding
Sunroof**

Convertible Top





Convertible Top


1998

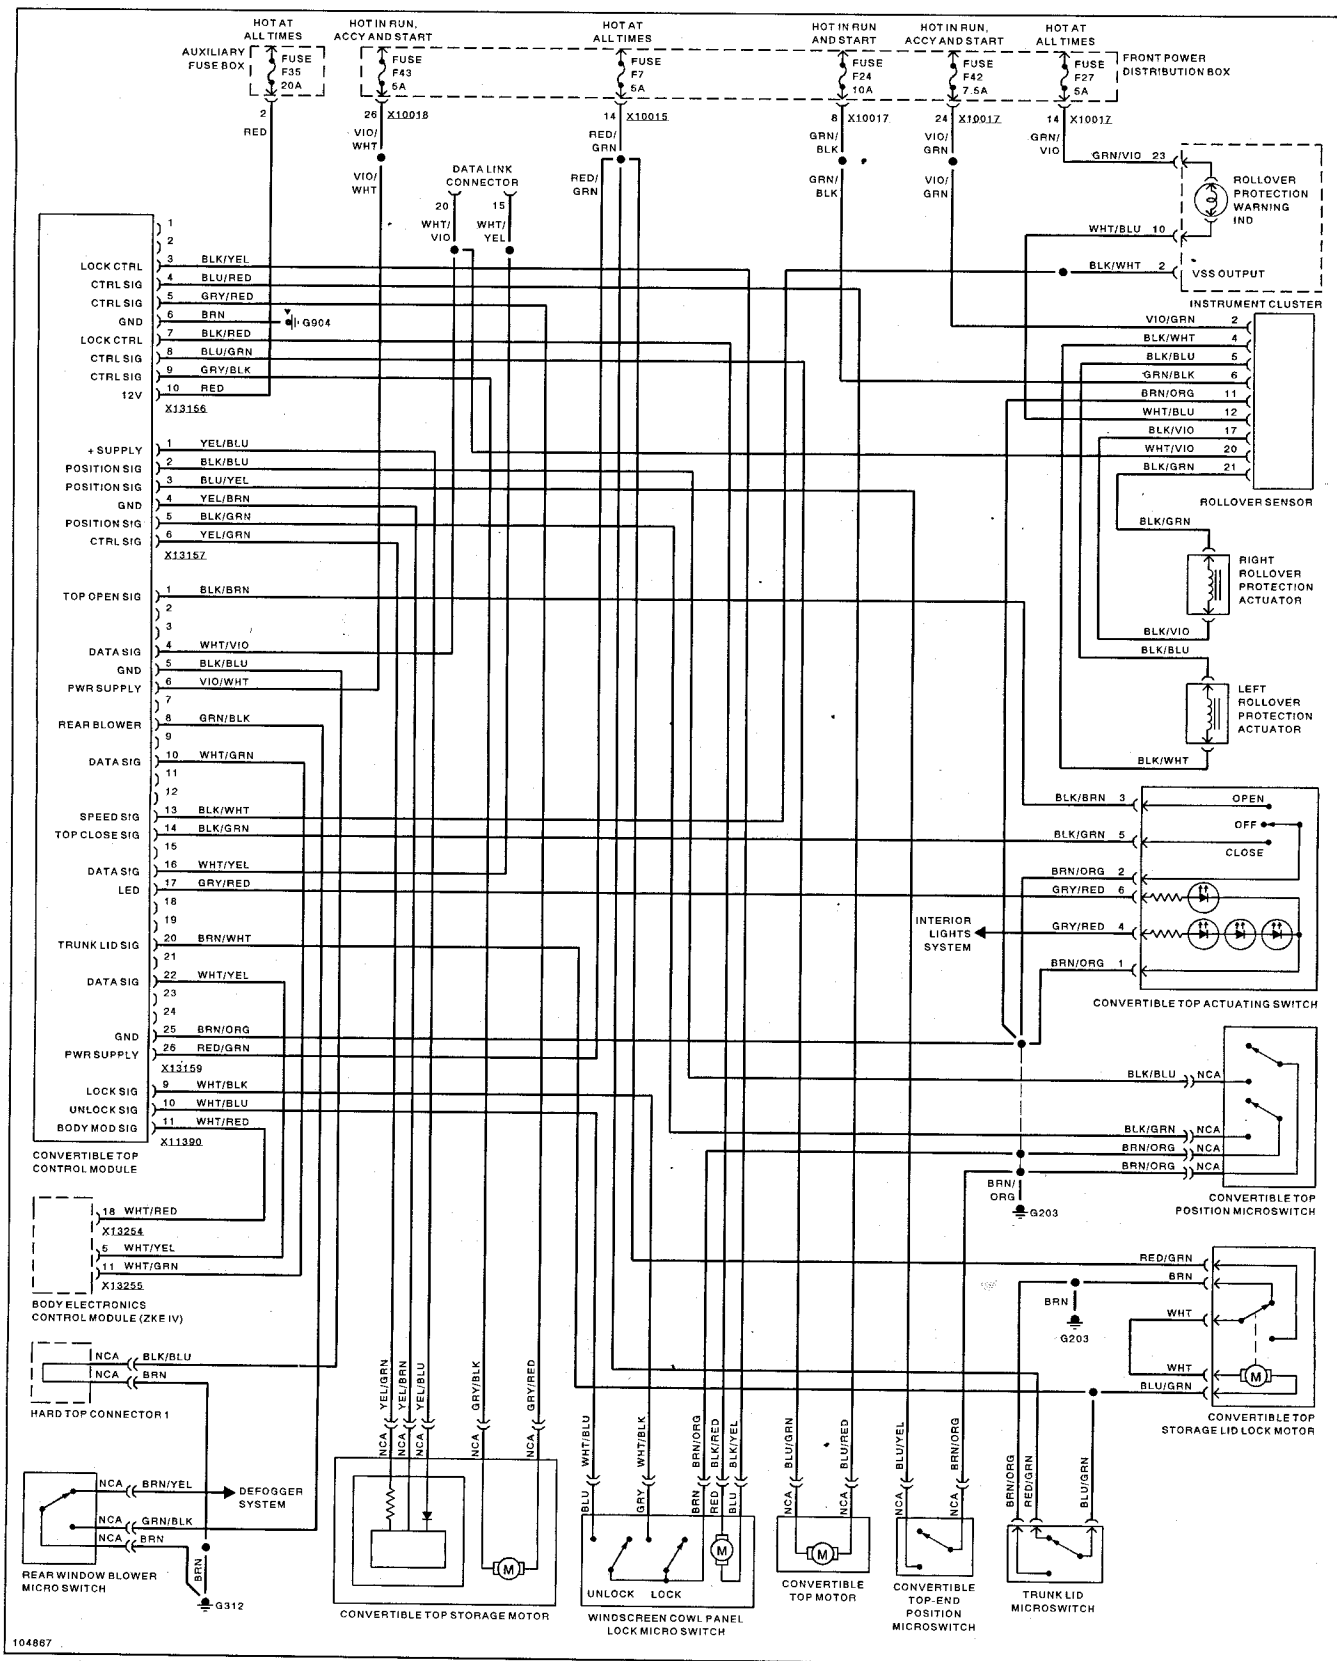



Radio/Cassette/CD/Speakers

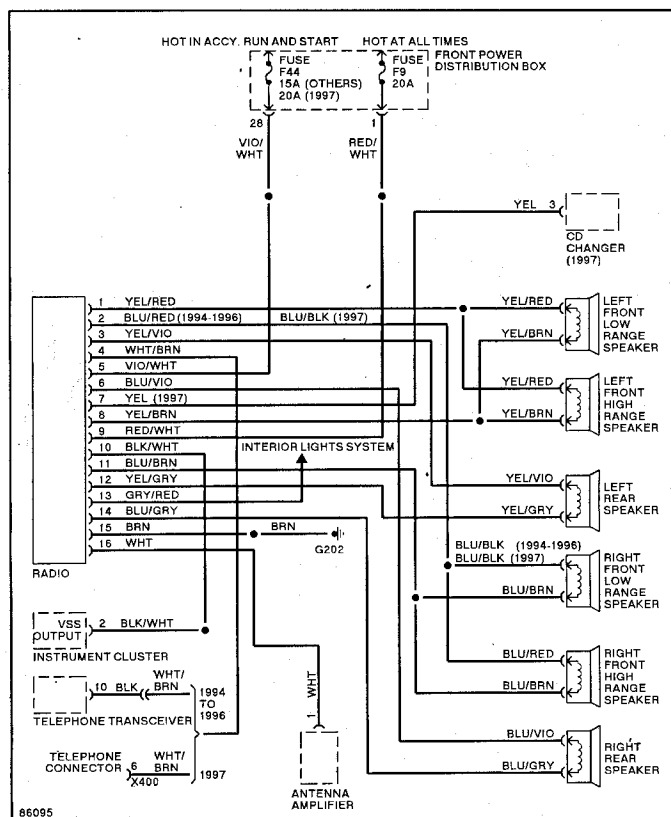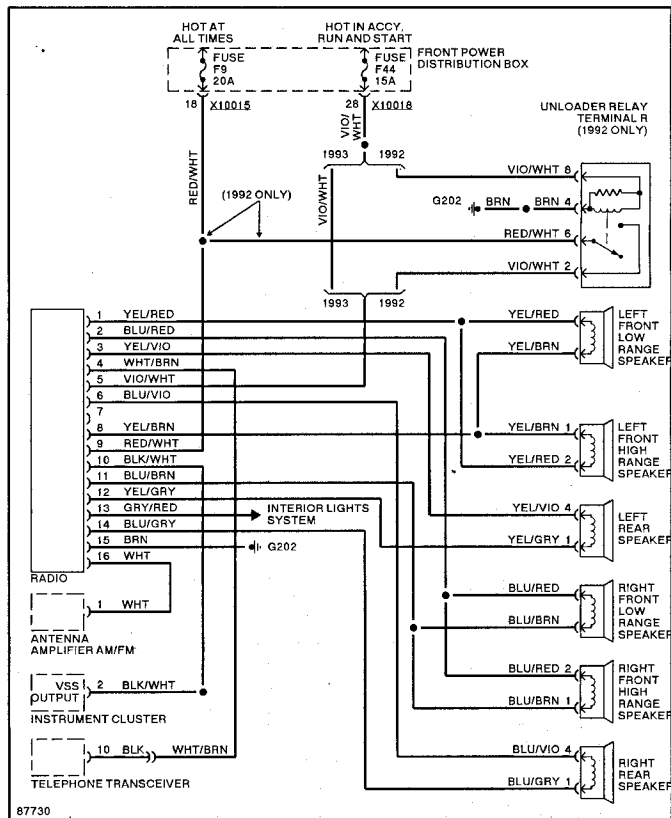

Radio/Cassette/CD/Speakers 1998 Except 318ti 6 Speaker System

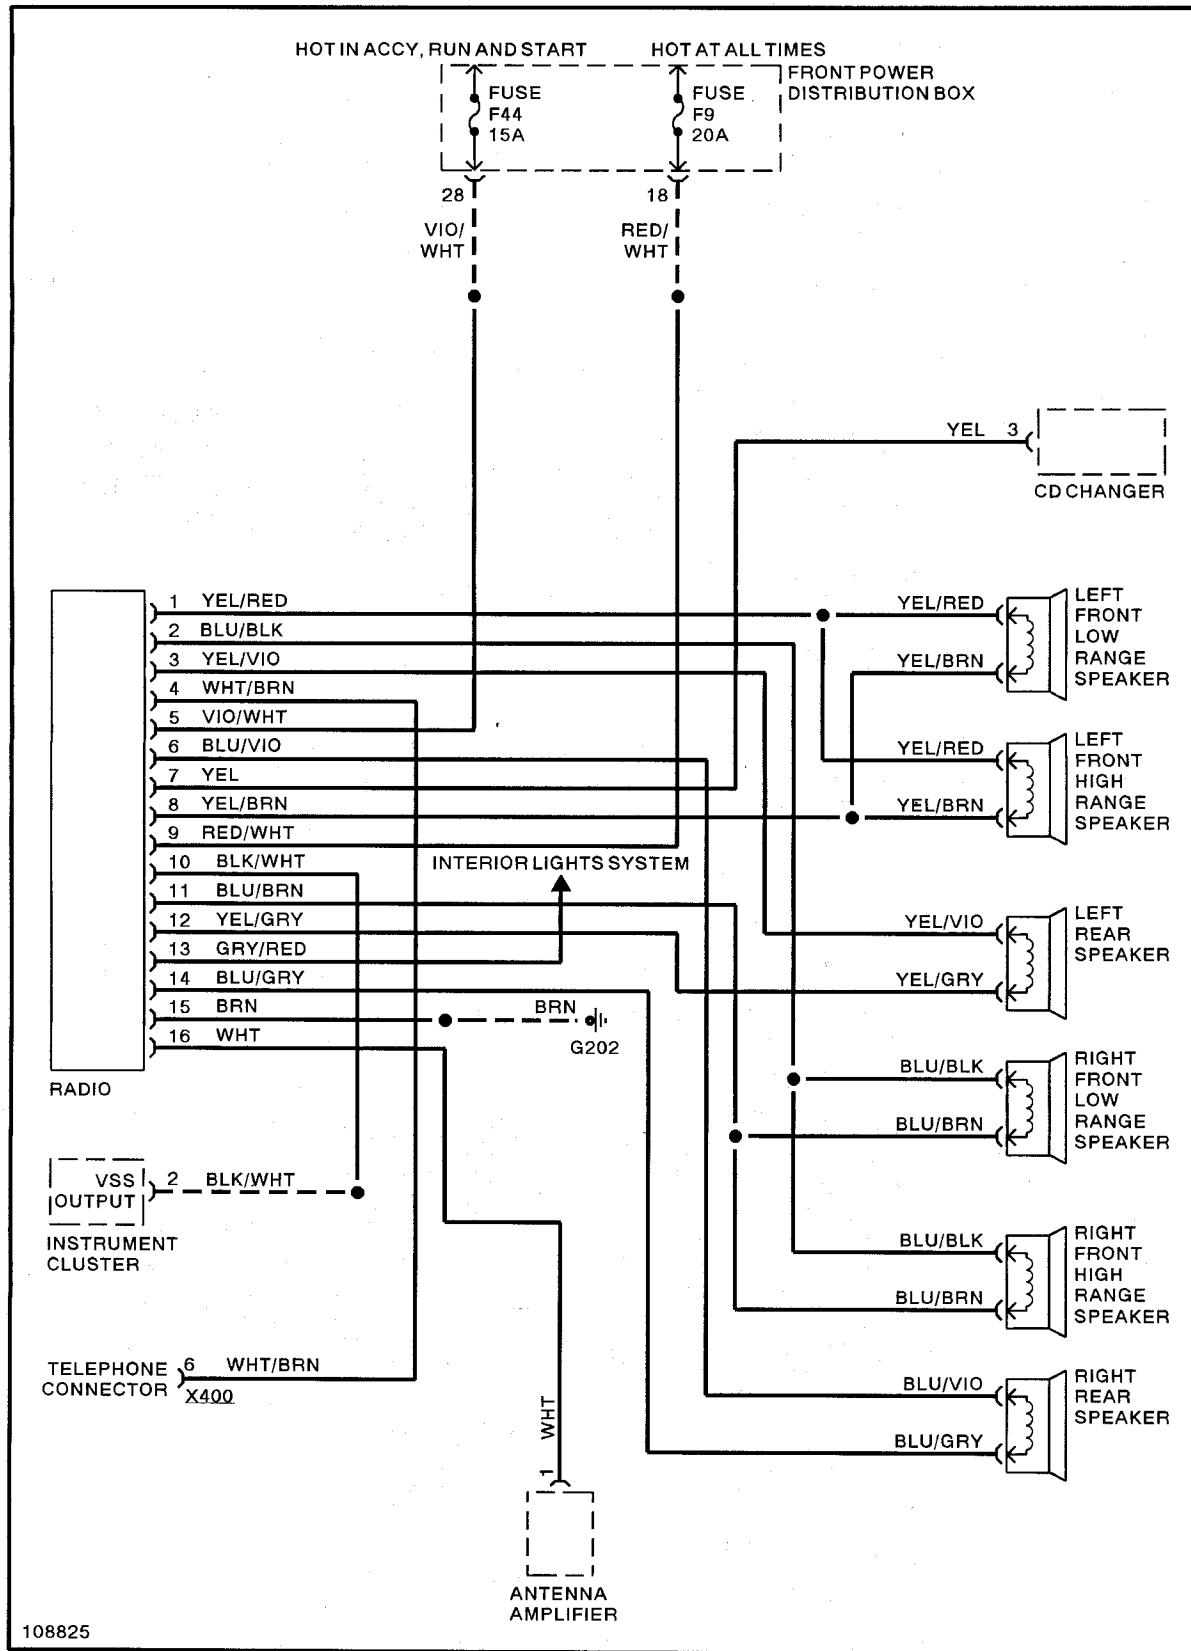


Radio/Cassette/CD/Speakers

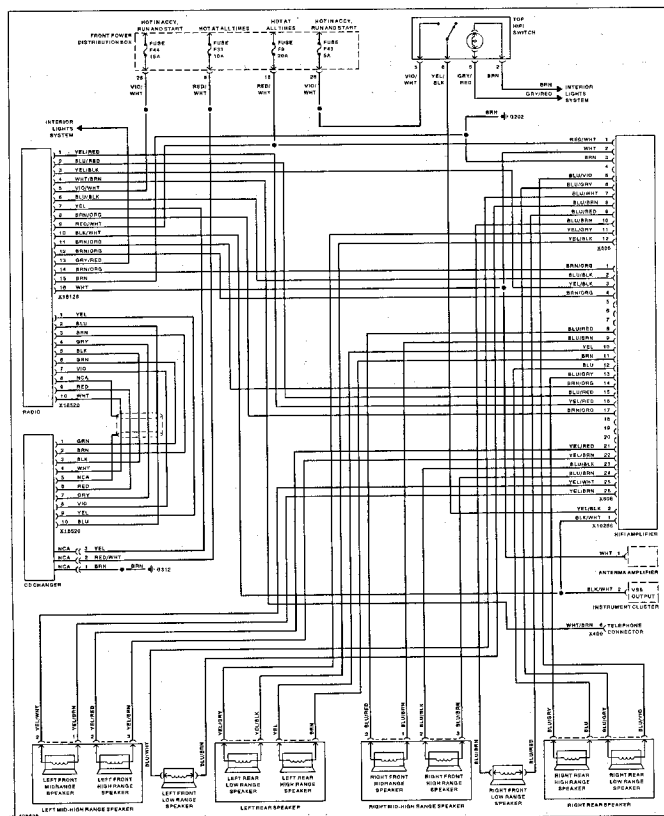
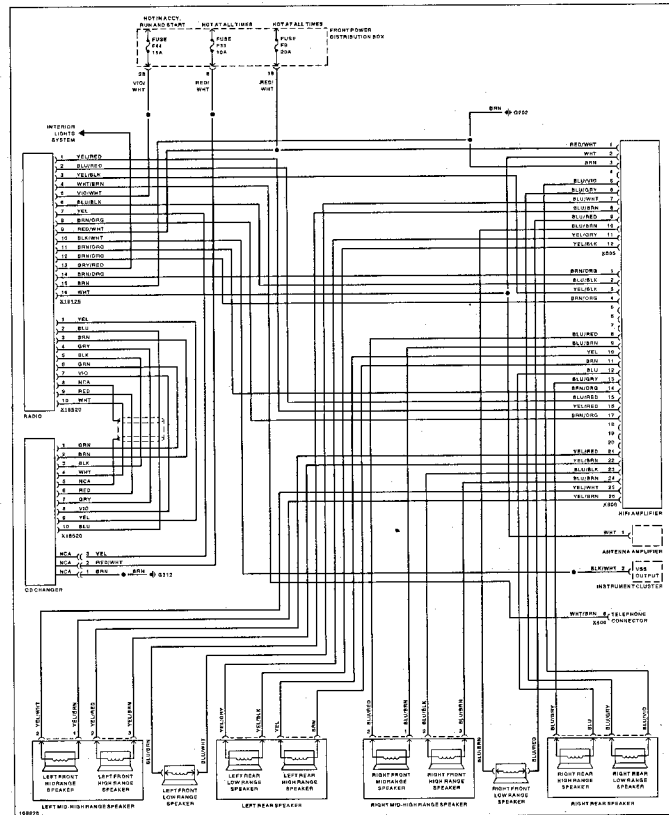


Radio/Cassette/CD/Speakers

1998 Convertible 10 Speaker w/CD & Top HiFi System

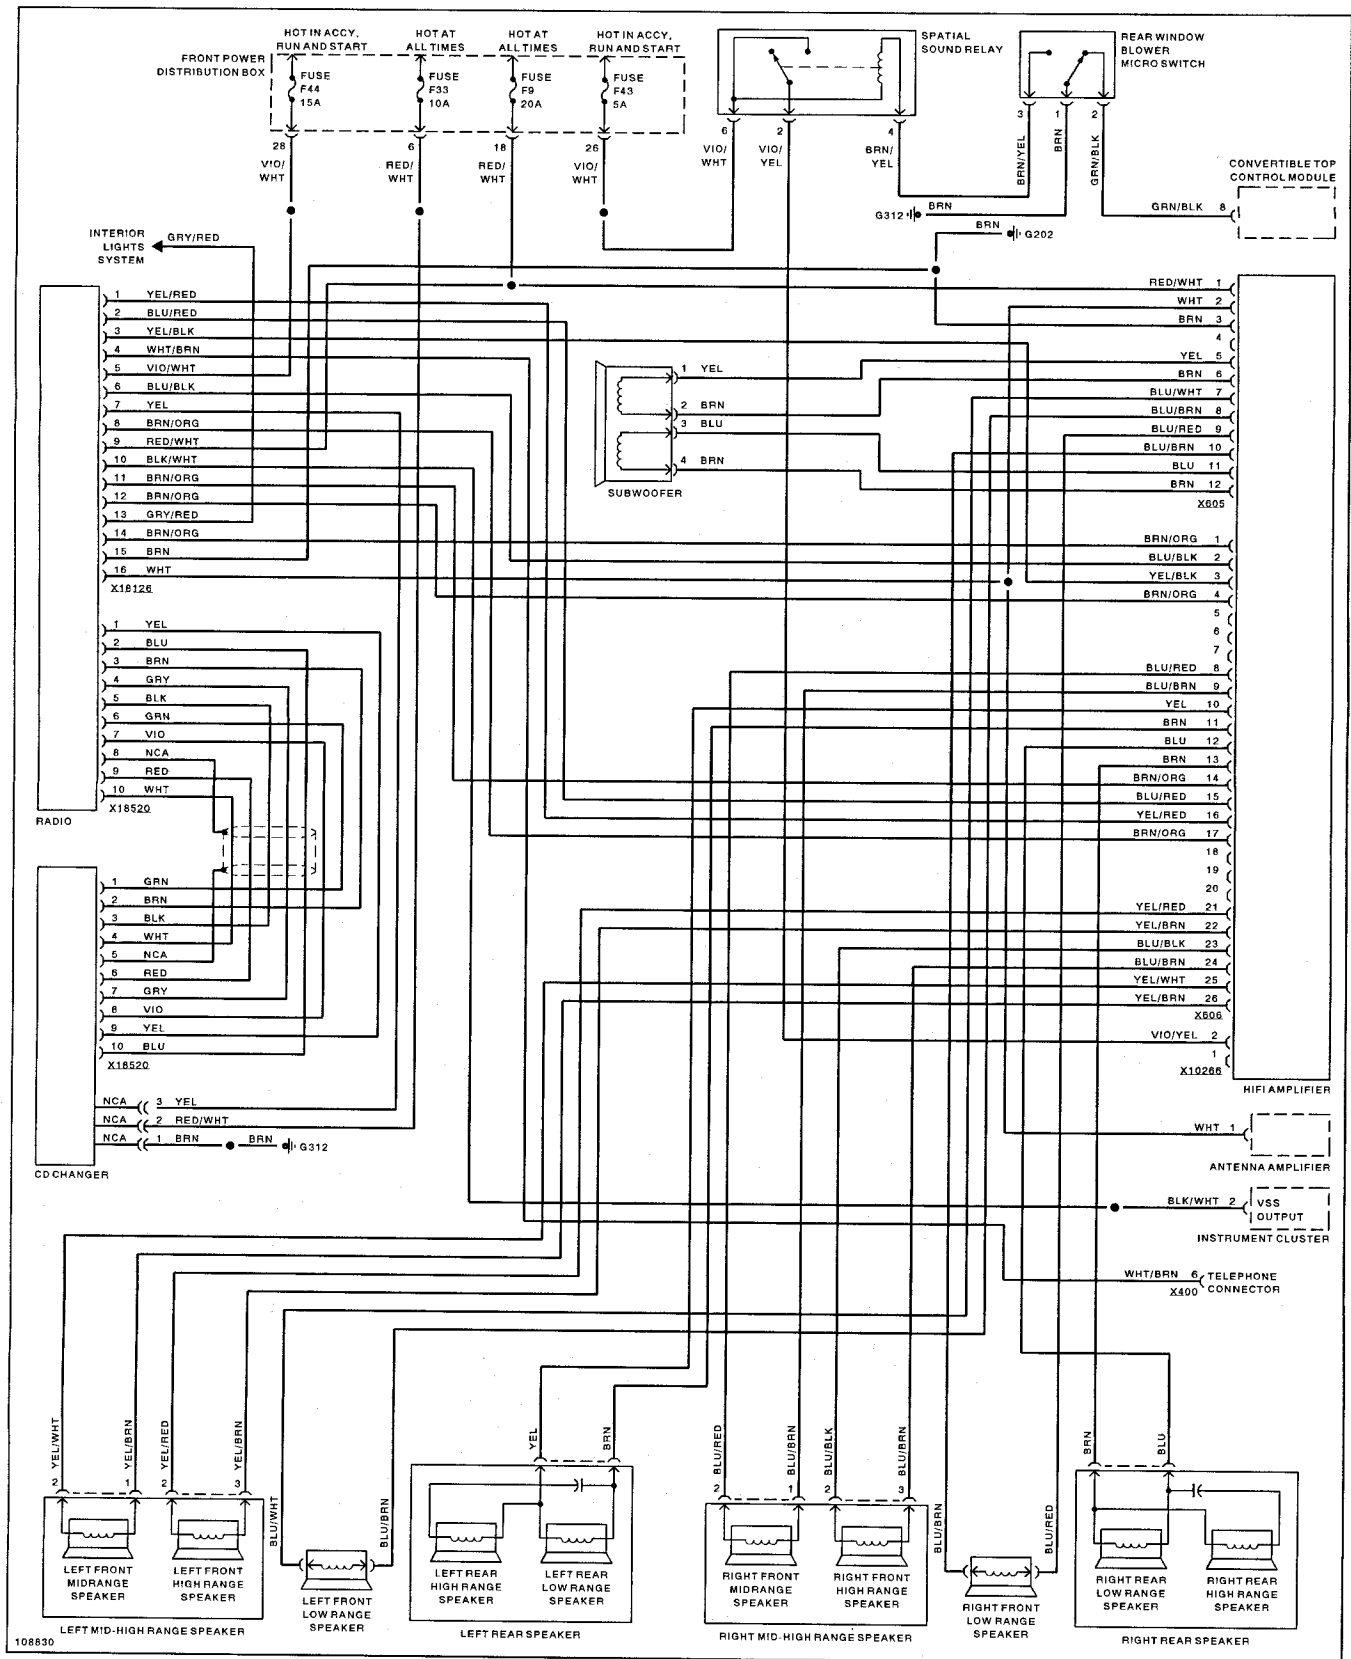


Radio/Cassette/CD/Speakers

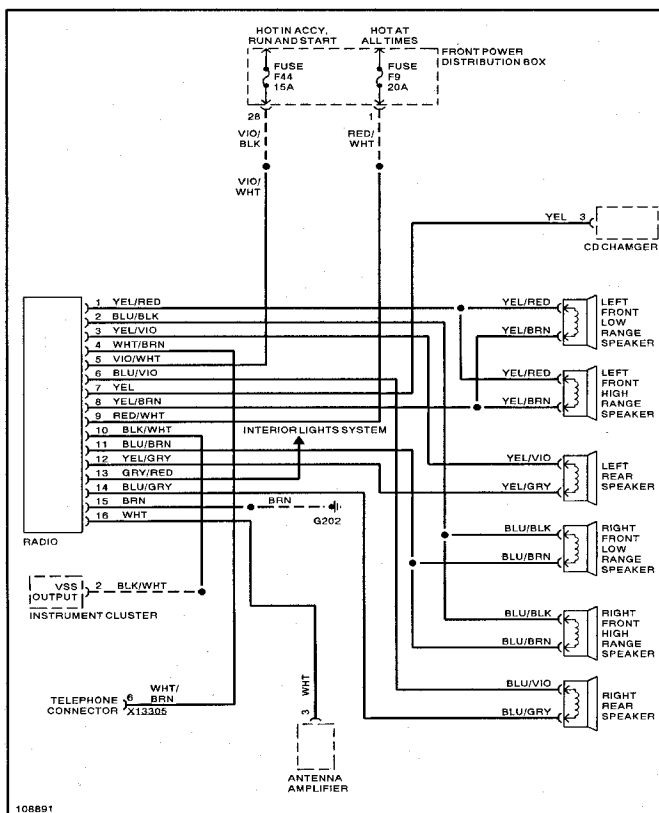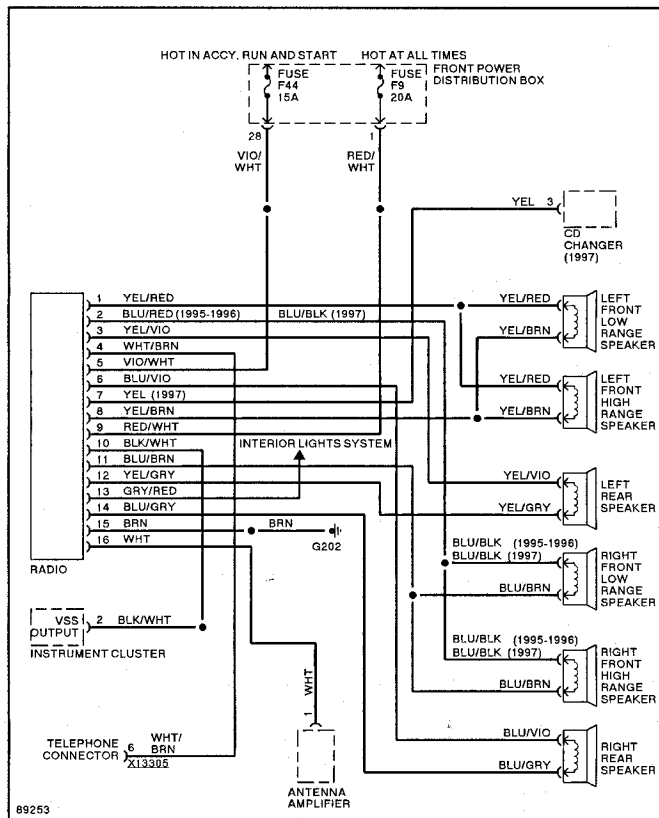


Radio/Cassette/CD/Speakers

1998 318ti 10 Speaker w/CD Changer System

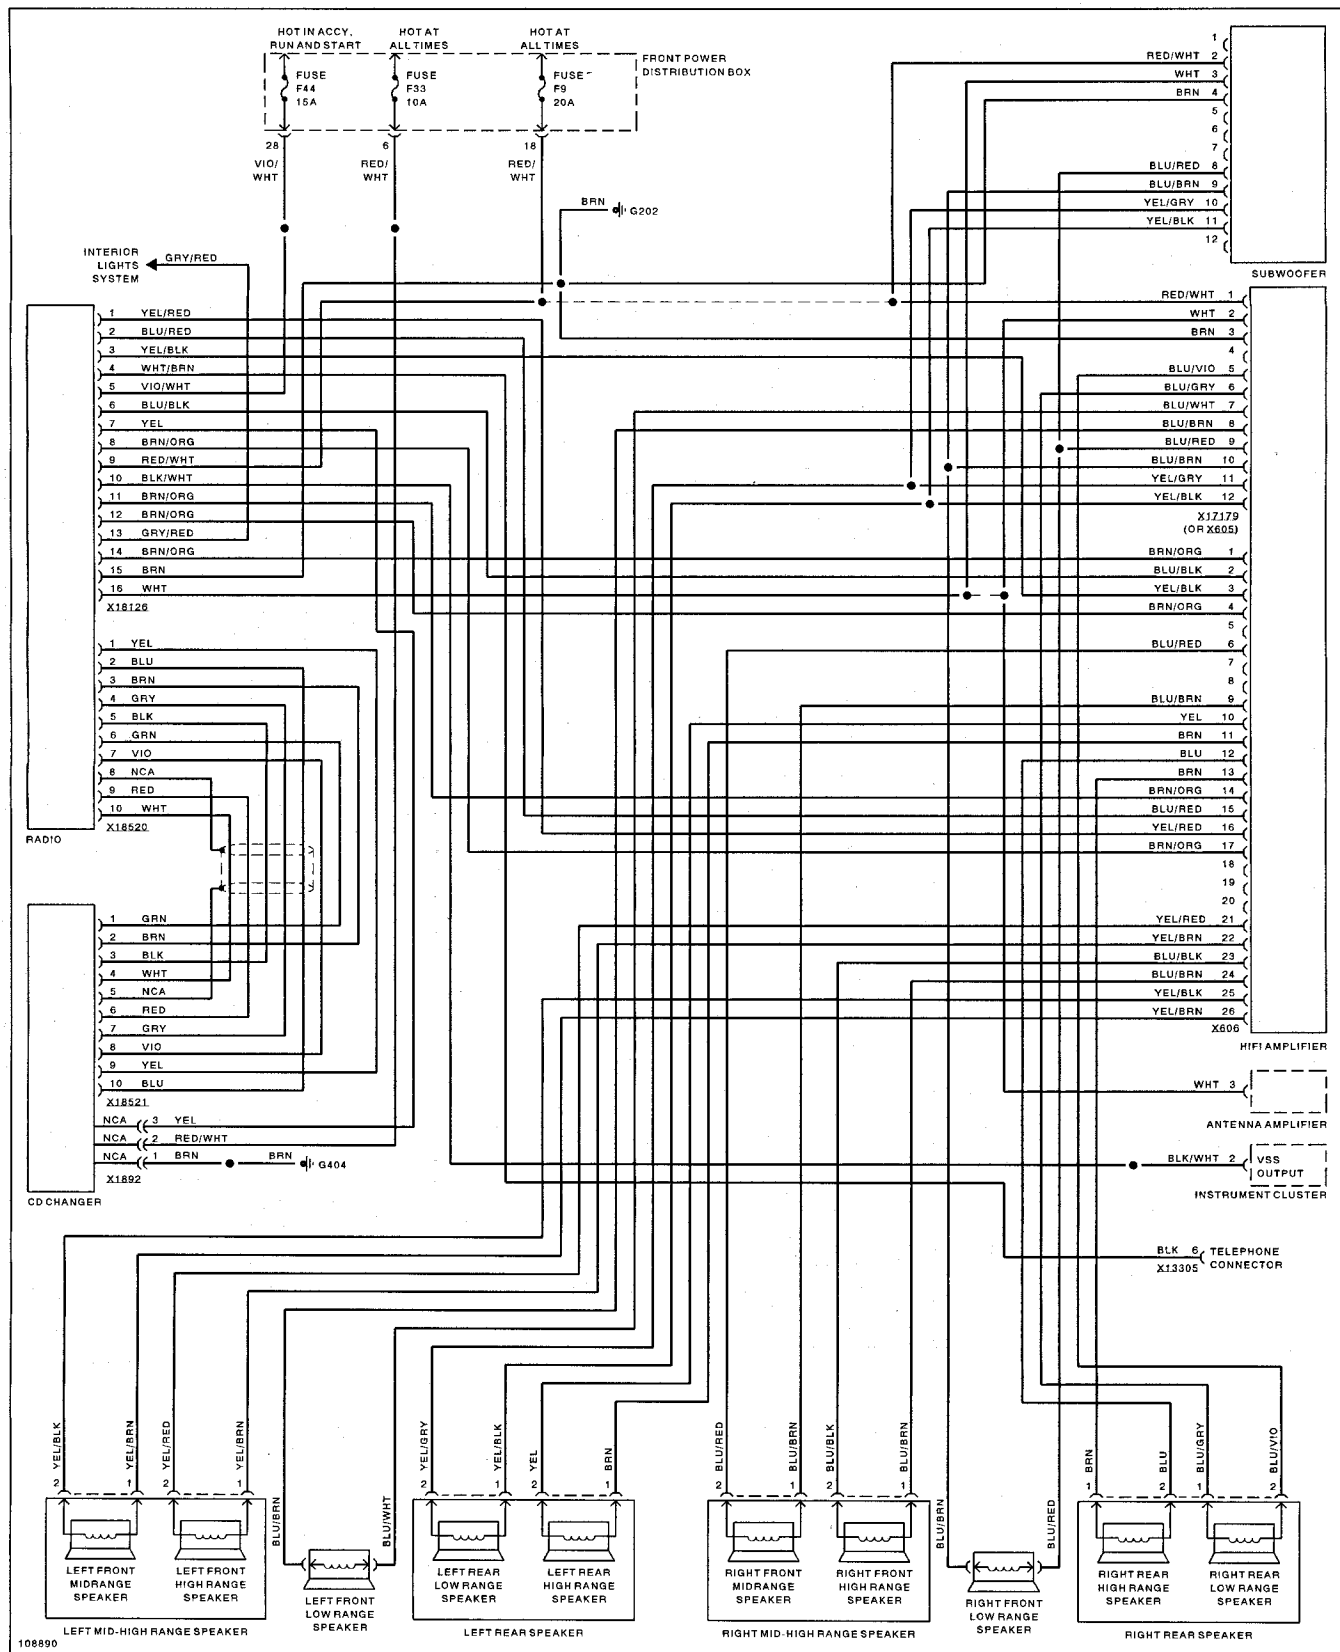


Radio/Cassette/CD/Speakers

1992 10 Speaker System

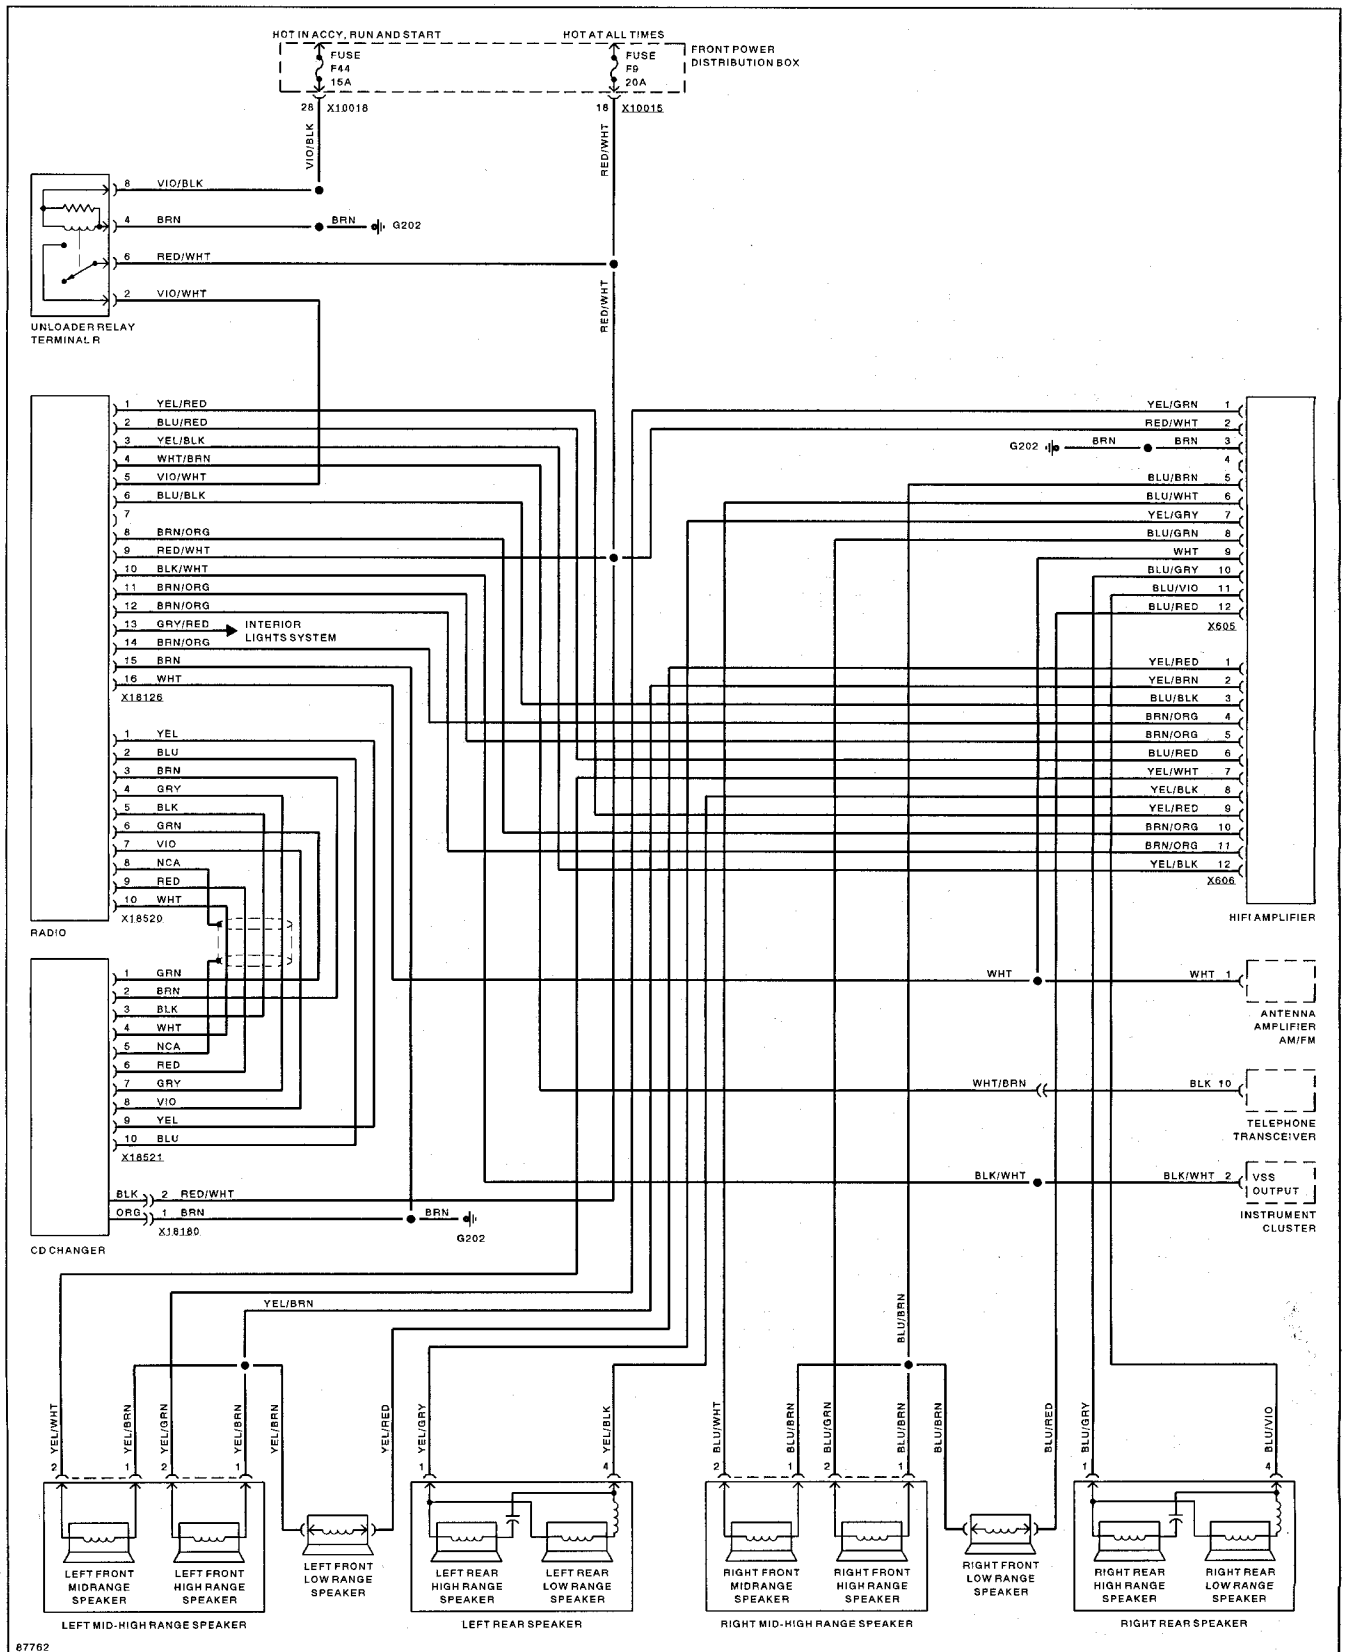


Radio/Cassette/CD/Speakers

1993 Early Production 10 Speaker System

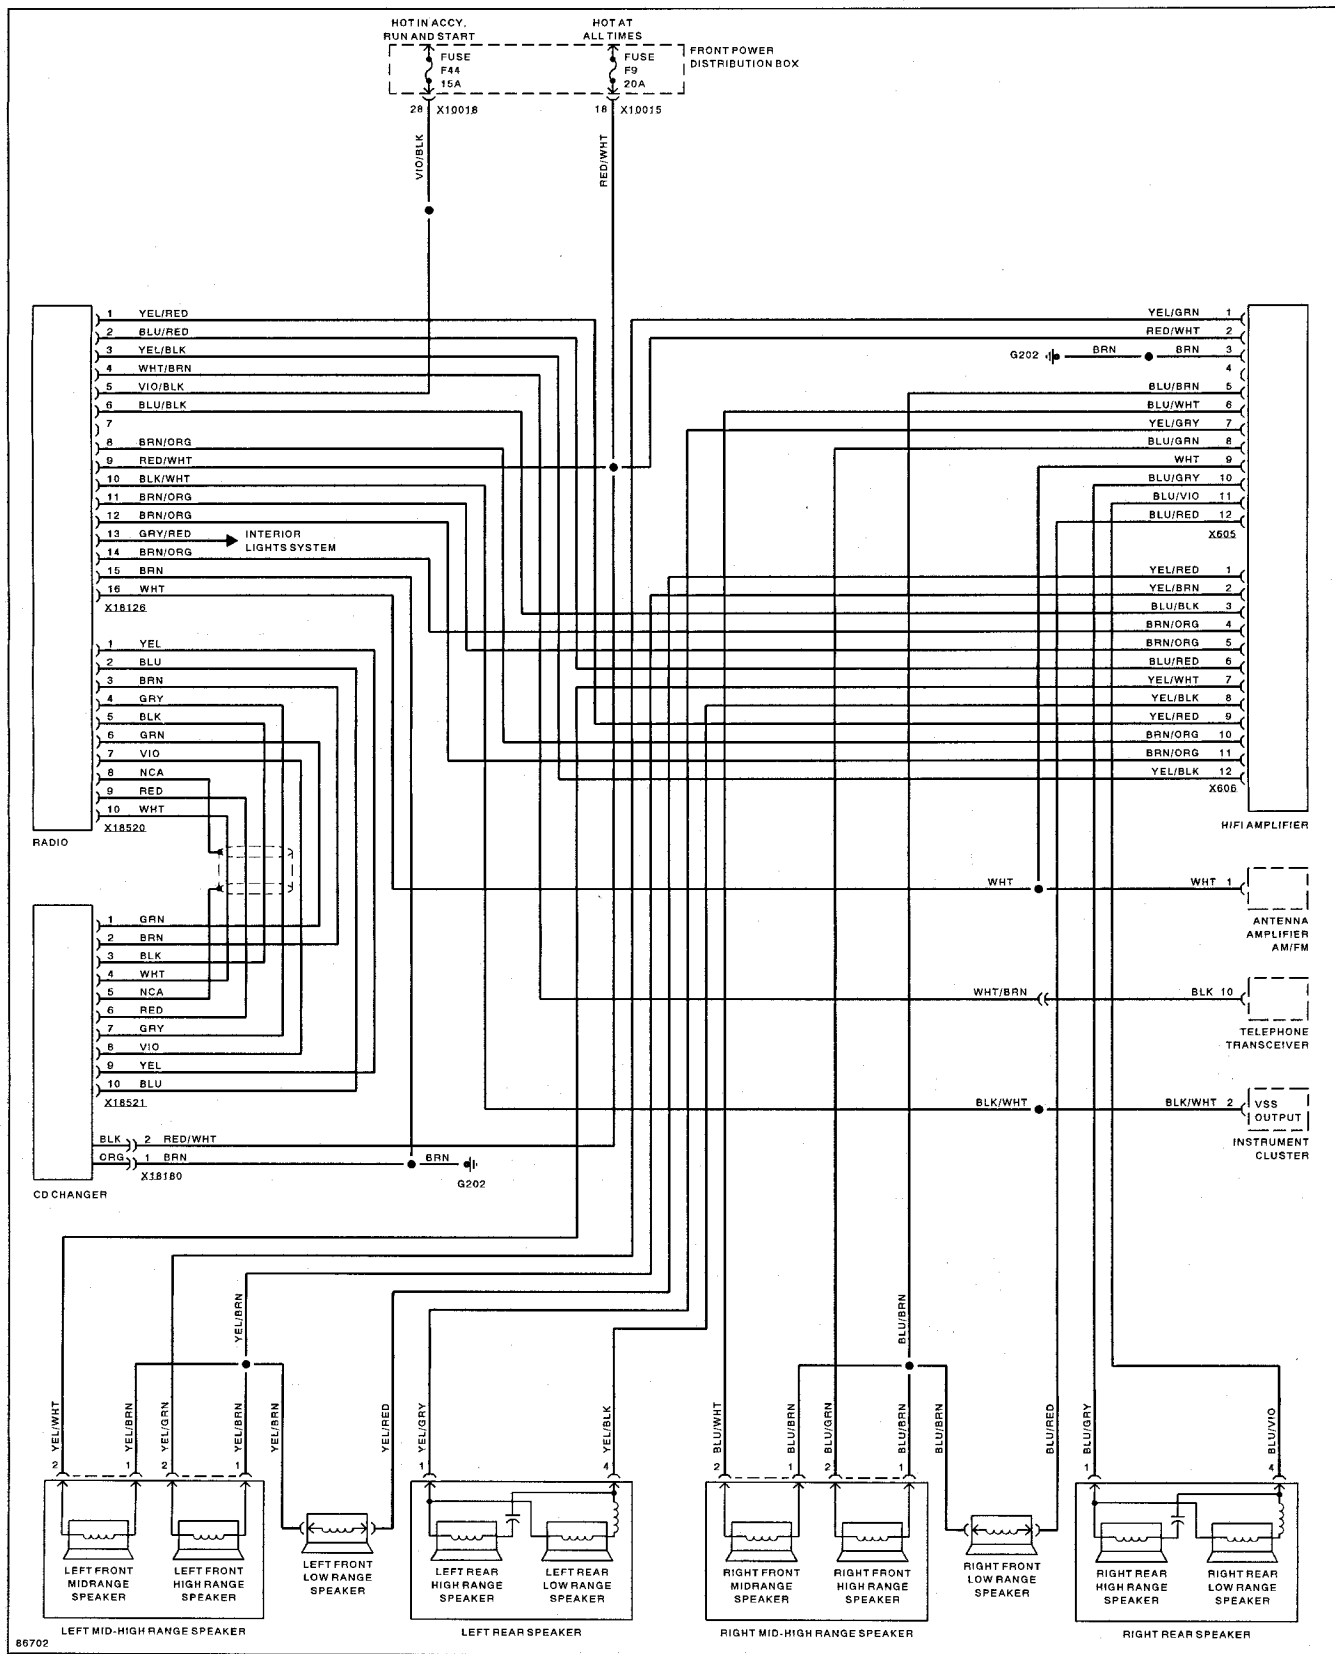


Radio/Cassette/CD/Speakers

1993 Late Production 10 Speaker System

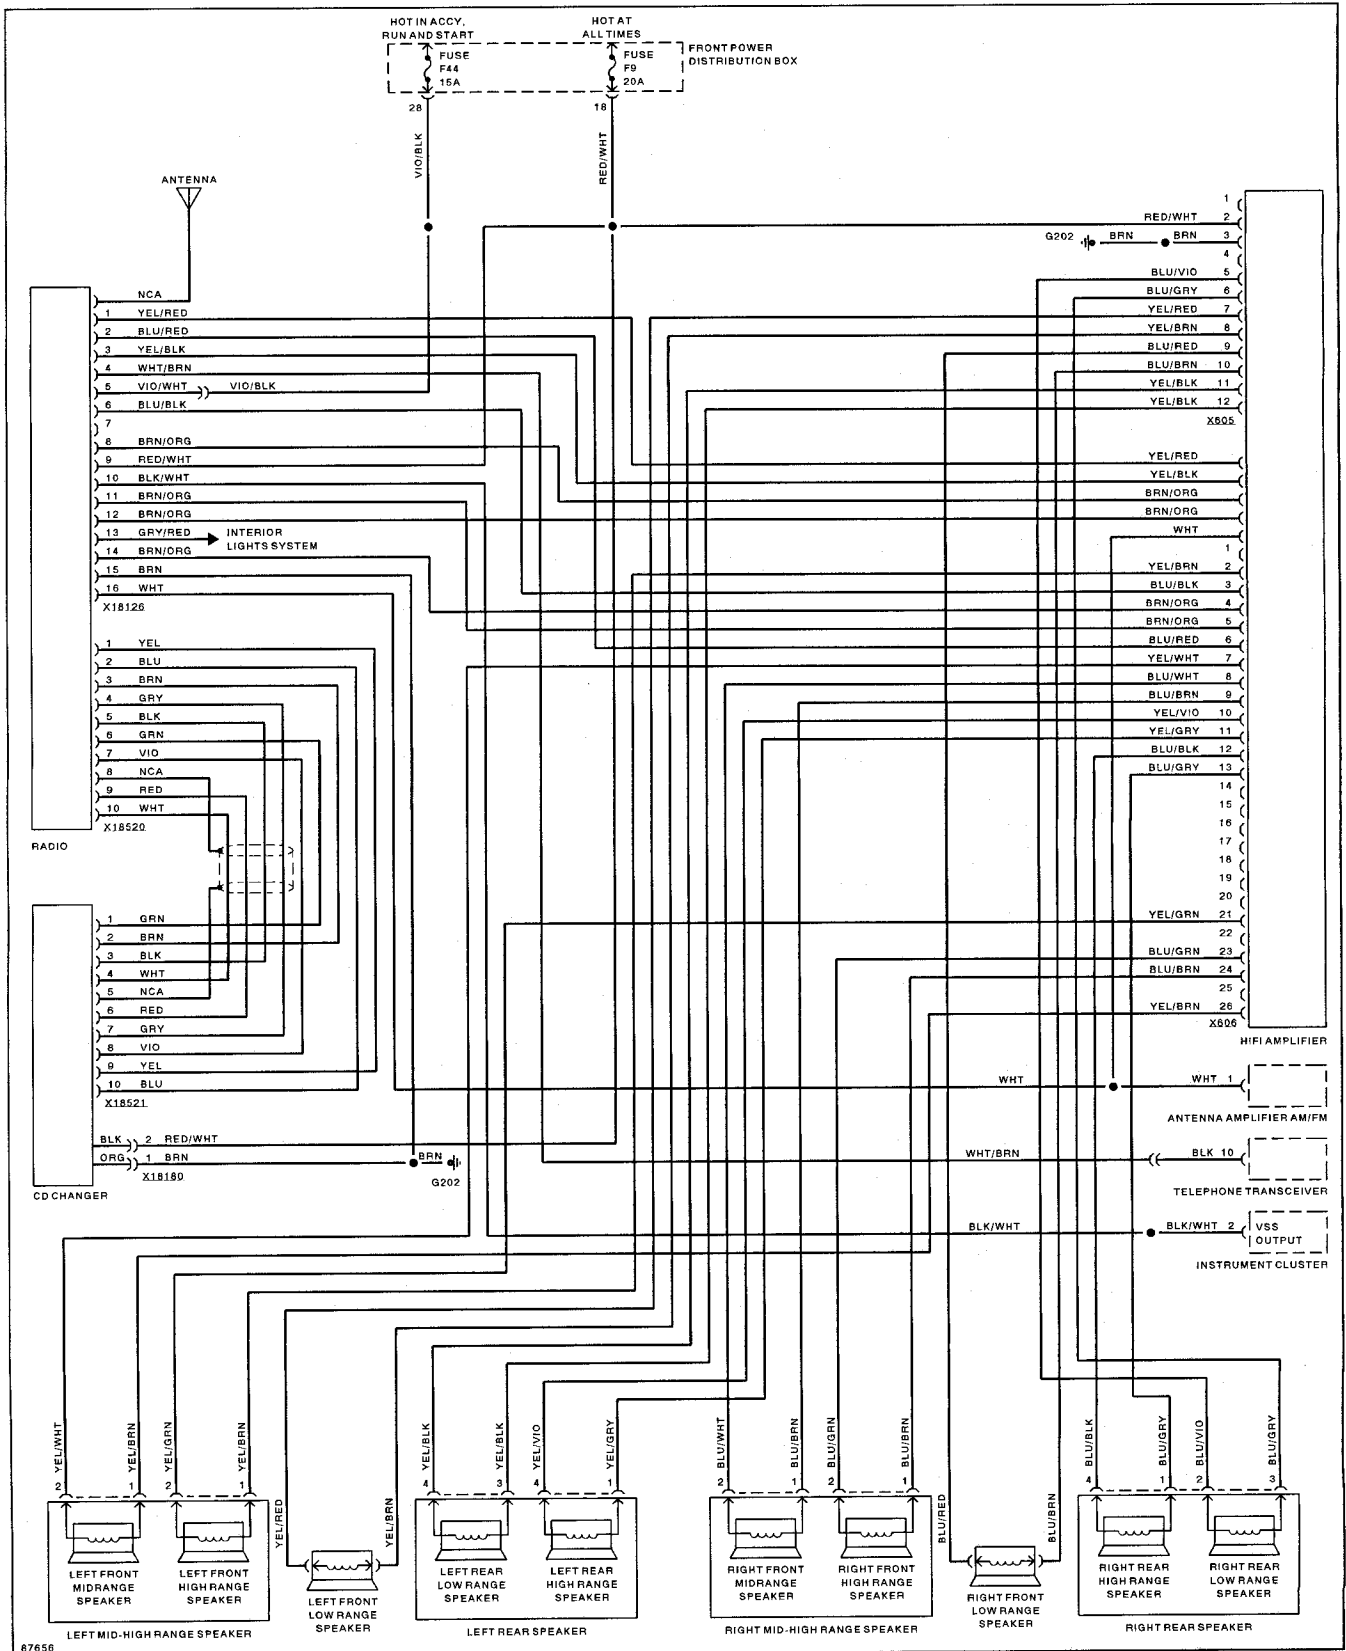

Radio/Cassette/CD/Speakers 1994-97 Except 318ti 10 Speaker System

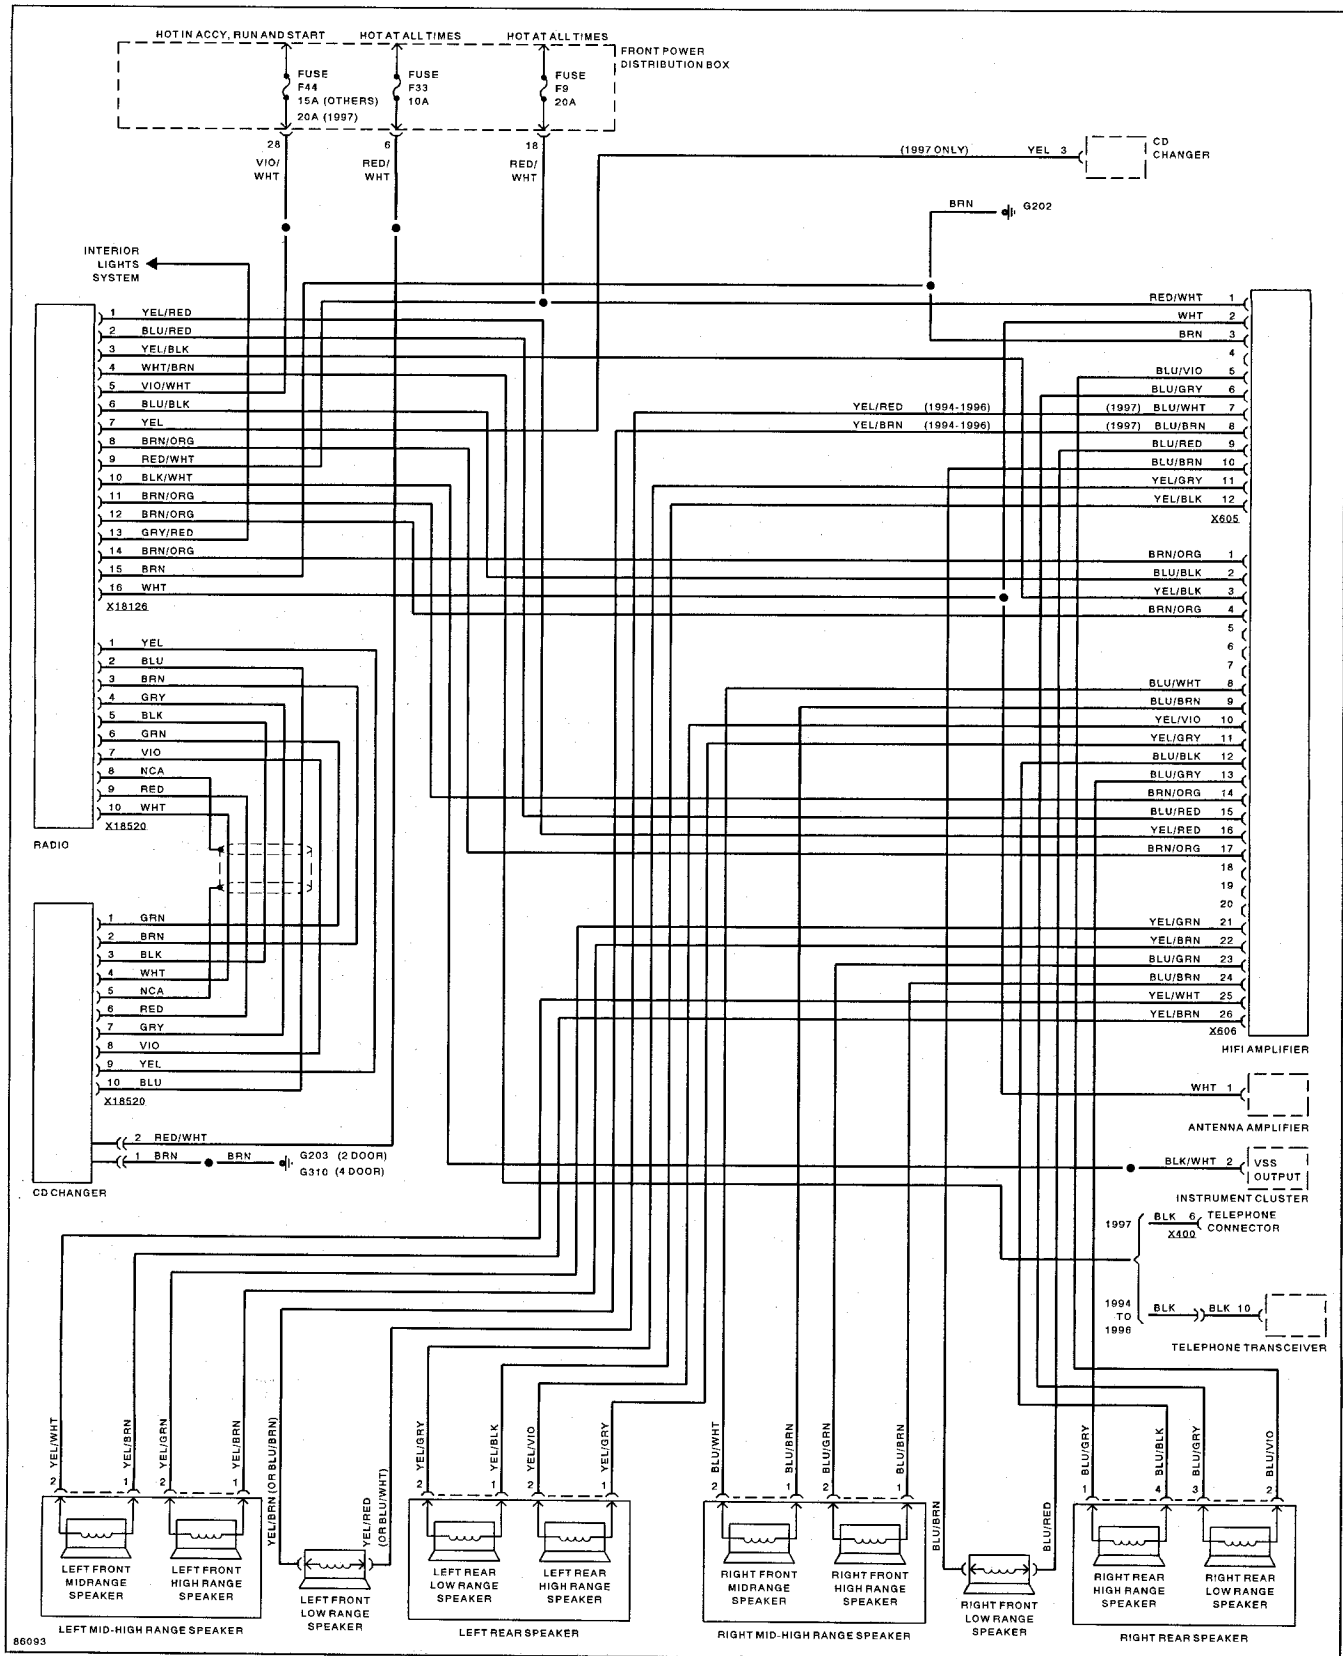

Radio/Cassette/CD/Speakers

1995-97 318ti 10 Speaker System

