

ACCESSORIES & EQUIPMENT

Transmitter Battery (w/Smart Key) (Service Information) - Sienna


TRANSMITTER BATTERY (W/ SMART KEY SYSTEM)

REPLACEMENT

REPLACEMENT

1. REPLACE TRANSMITTER BATTERY

- a. Push the release hook knob in the direction indicated by the arrow in the illustration. Pull the emergency key out of the transmitter.

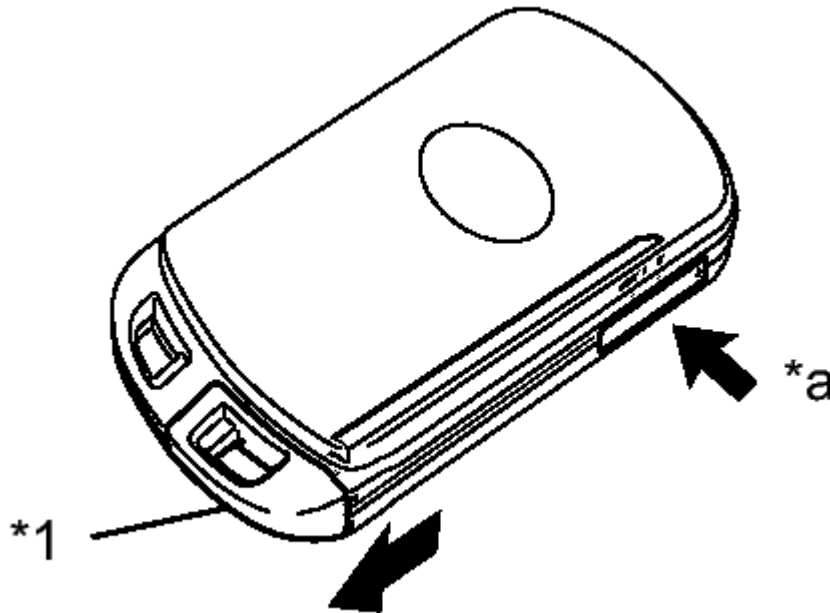

Y

Fig. 1: Removing Emergency Key Out Of Transmitter
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

TEXT IN ILLUSTRATION

*1	Emergency Key
*a	Push

- b. Using a screwdriver with its tip wrapped in protective tape, remove the transmitter cover.

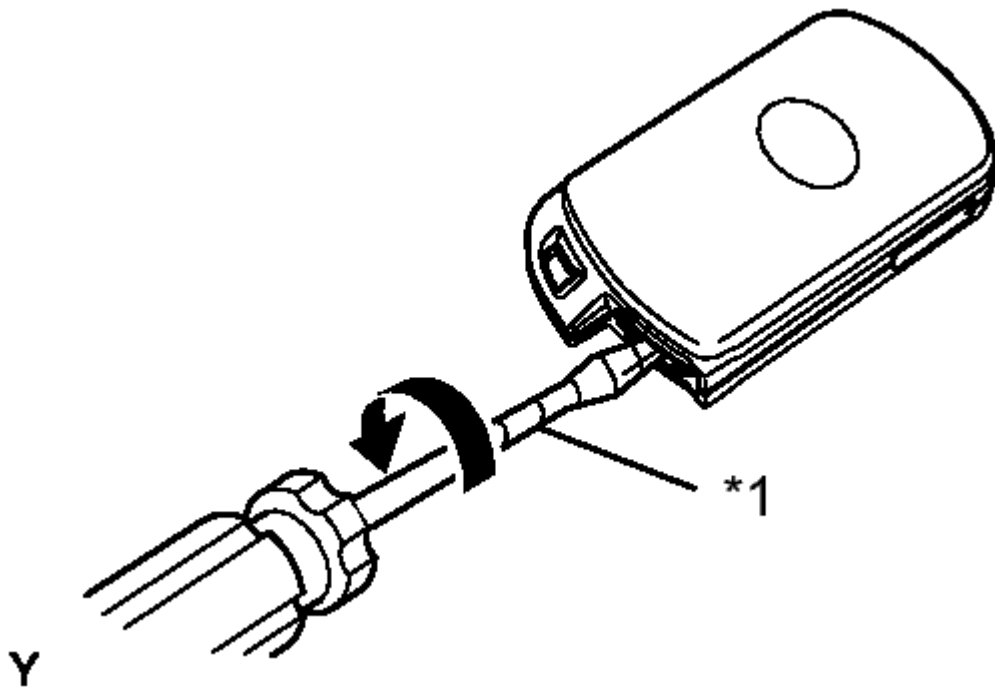


Fig. 2: Prying Transmitter Cover


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

TEXT IN ILLUSTRATION

*1	Protective Tape
----	--------------------

NOTE: **Do not forcibly pry the cover.**

- c. Remove the battery (lithium battery).

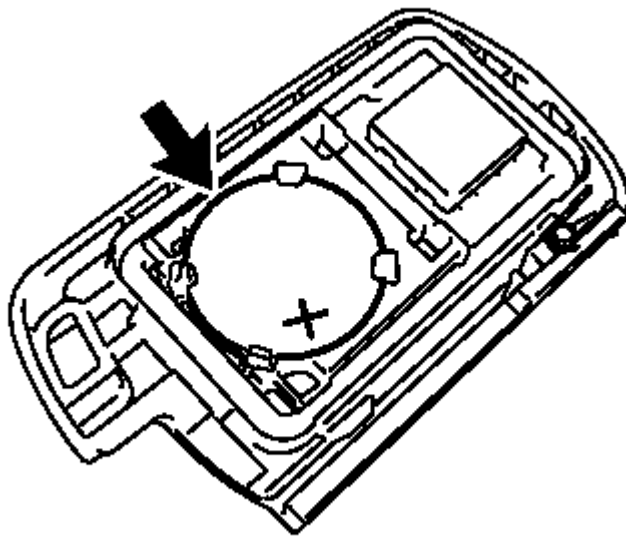

Y

Fig. 3: Removing Transmitter Battery

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

NOTE:


- Do not push the terminals with your finger.
- Do not forcibly pry up the battery (lithium battery). The terminals may be damaged.
- Do not touch the battery with wet hands. Water may cause rust.
- Do not touch or move any components inside the transmitter. It may interfere with proper operation.

d. Install a battery (lithium battery) with the positive (+) side facing up, as shown in the illustration.

NOTE:

- Make sure that the positive (+) side and the negative (-) side of the transmitter battery are correctly matched with the transmitter terminals.
- Do not bend the transmitter battery electrode during insertion.
- Keep the transmitter cover interior free of dust and oil.

e. Engage the hook and install the transmitter cover.

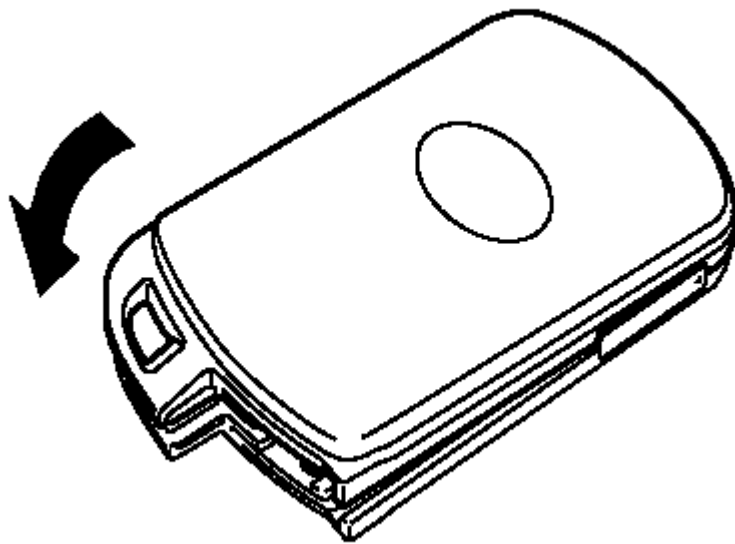


Y

Fig. 4: Installing Transmitter Cover

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- f. Insert the emergency key into the transmitter.

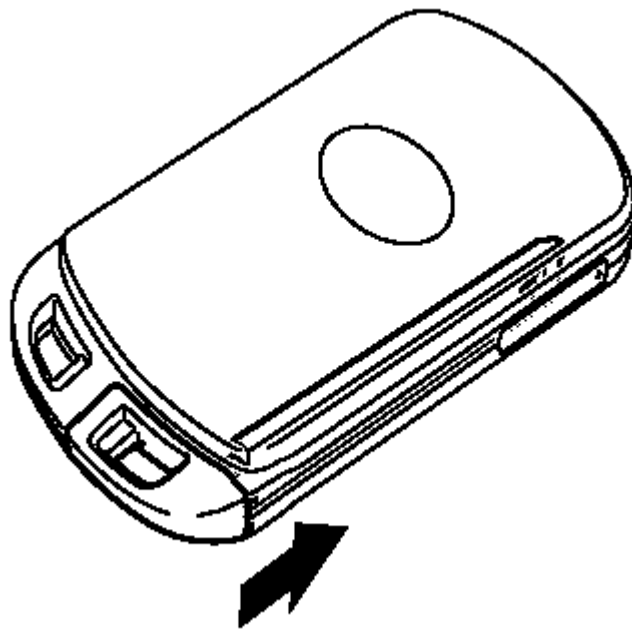

Y

Fig. 5: Inserting Emergency Key Into Transmitter

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- g. After the installation, press any of the transmitter switches. Check that the LED illuminates.