



Ground Points in Engine Compartment

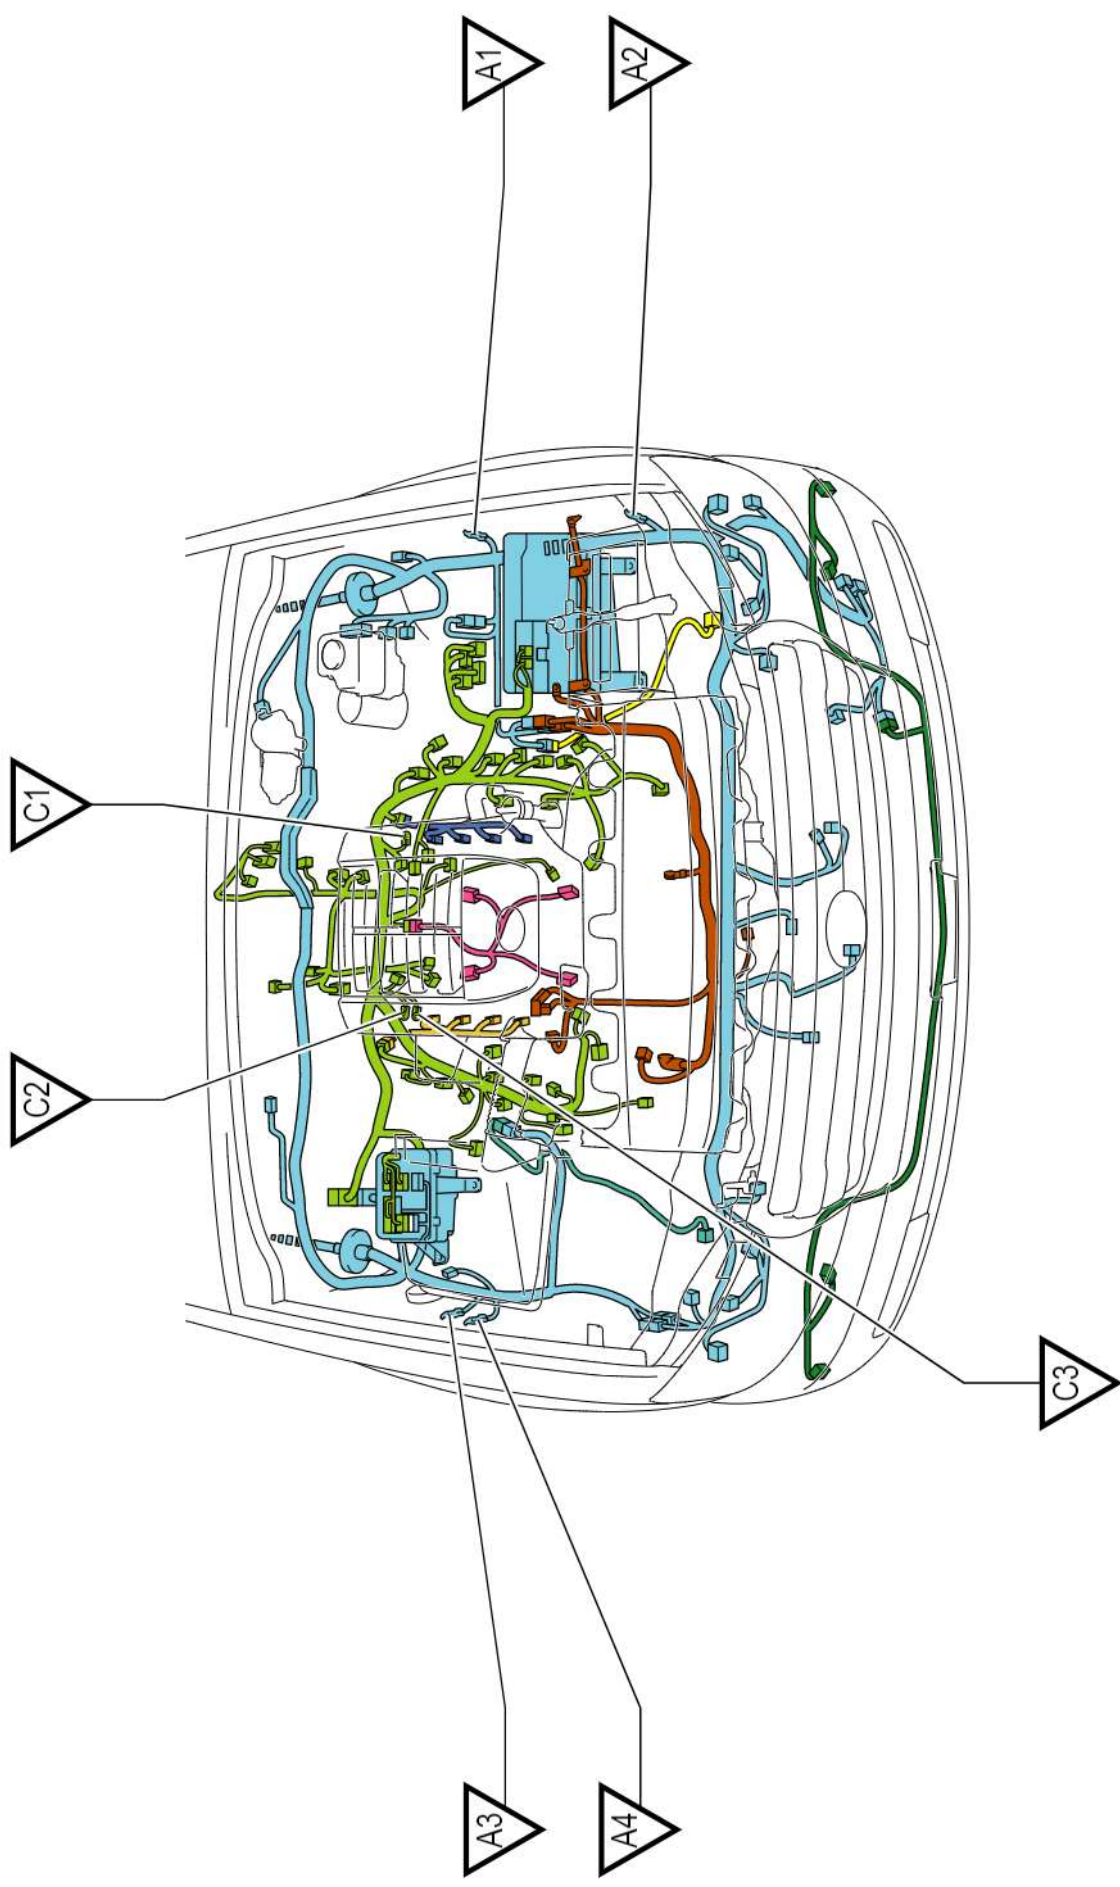


Position of Parts in Engine Compartment

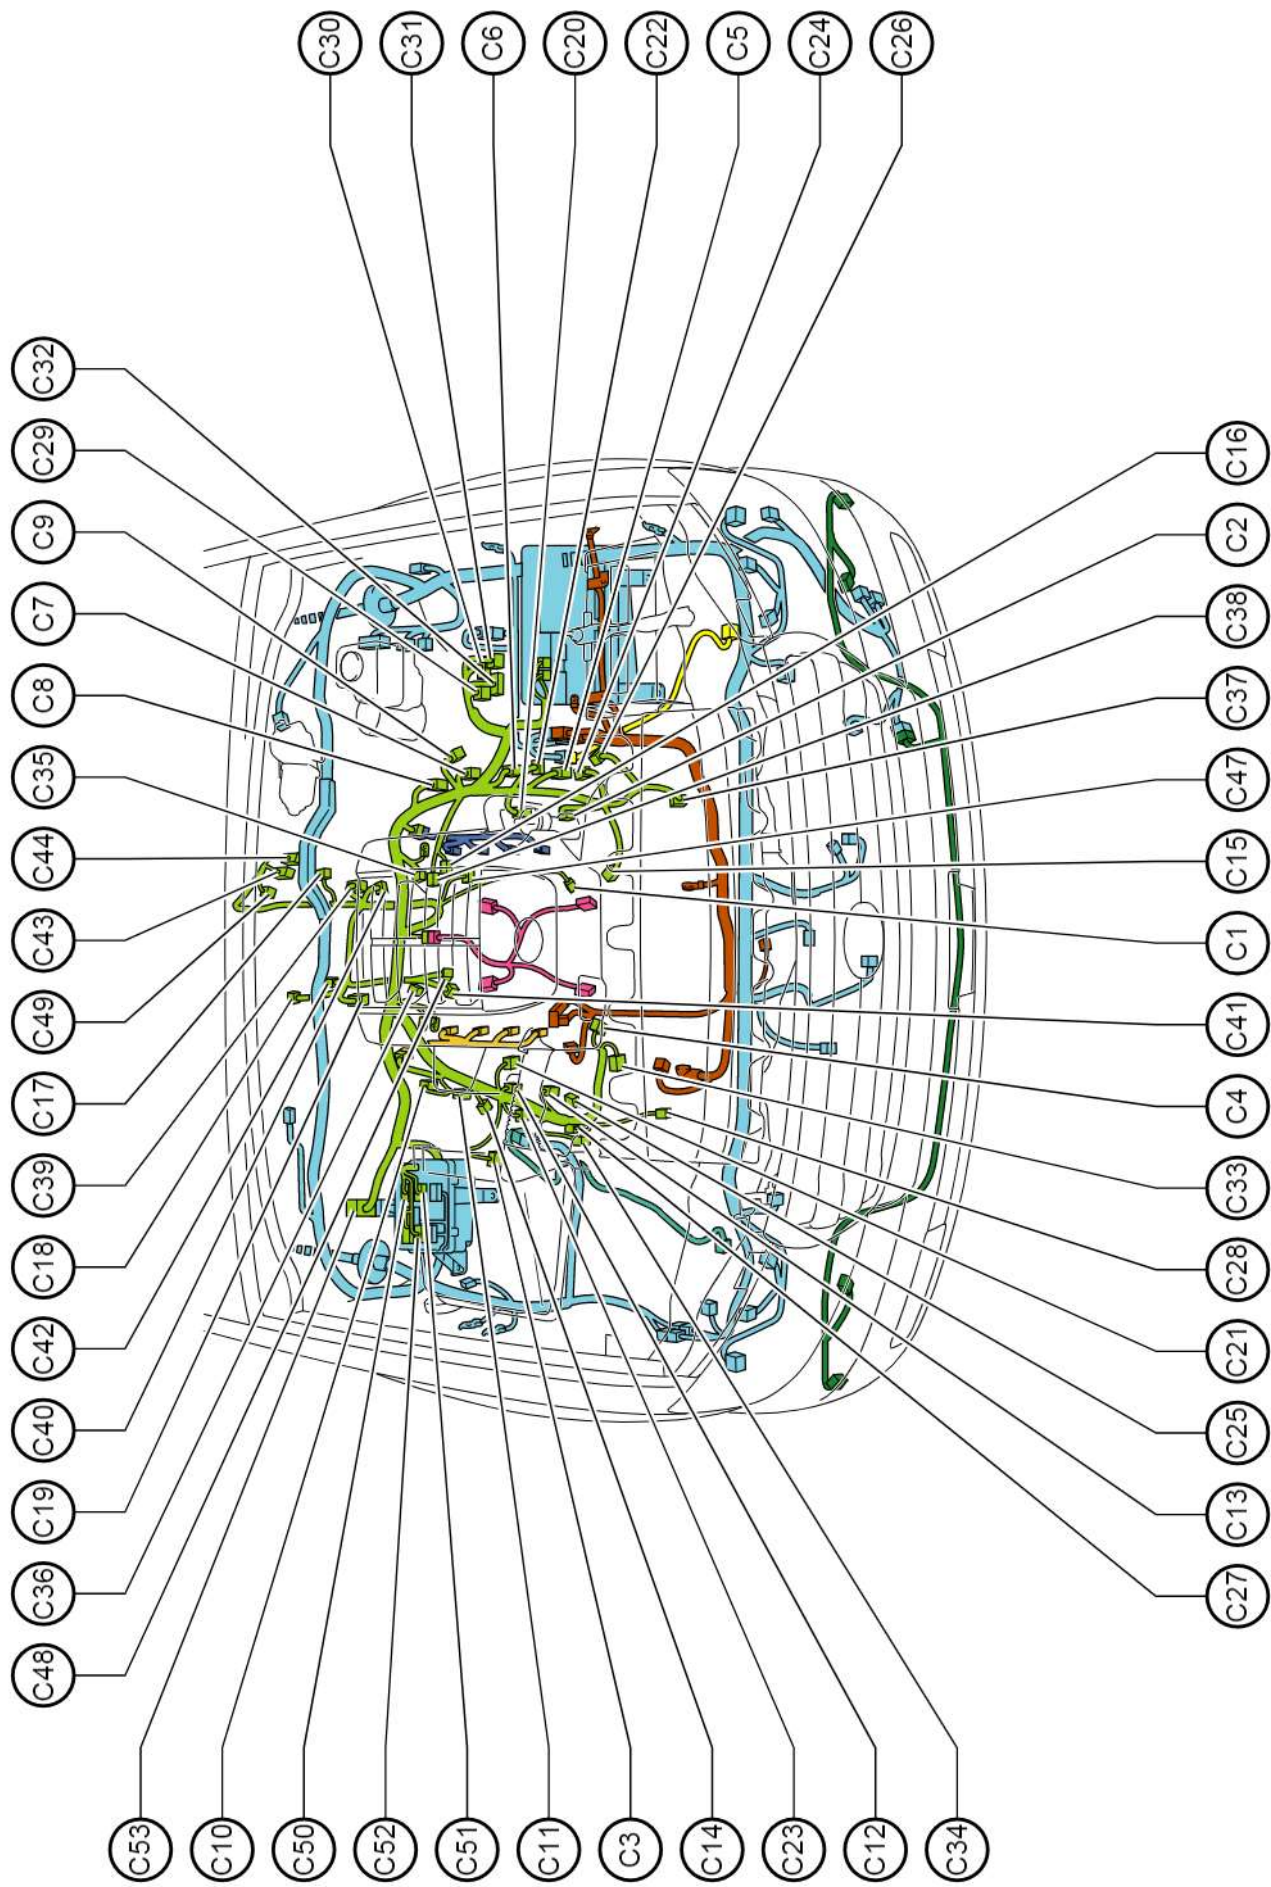












Position of Parts in Engine Compartment

C 1	Crankshaft Position Sensor	
C 2	Camshaft Position Sensor	
C 3	Mass Air Flow Meter	
C 4	Throttle Body Assembly	
C 5	Ignition Coil Assembly No.1	
C 6	Ignition Coil Assembly No.3	
C 7	Ignition Coil Assembly No.5	
C 8	Ignition Coil Assembly No.7	
C 9	Noise Filter (Ignition Bank 1)	
C 10	Ignition Coil Assembly No.8	
C 11	Ignition Coil Assembly No.6	
C 12	Ignition Coil Assembly No.4	
C 13	Ignition Coil Assembly No.2	
C 14	Noise Filter (Ignition Bank 2)	
C 15	E.F.I. Engine Coolant Temperature Sensor	
C 16	Purge VSV	
C 17	Oxygen Sensor (Bank 1 Sensor 2)	
C 18	Oxygen Sensor (Bank 2 Sensor 2)	
C 19	Park/Neutral Position Switch	
C 20	WT Sensor (Bank 1 Intake Side)	
C 21	WT Sensor (Bank 2 Intake Side)	
C 22	WT Sensor (Bank 1 Exhaust Side)	
C 23	WT Sensor (Bank 2 Exhaust Side)	
C 24	Camshaft Timing Oil Control Valve (Bank 1 Intake Side)	
C 25	Camshaft Timing Oil Control Valve (Bank 2 Intake Side)	
C 26	Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)	
C 27	Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)	
C 28	Power Steering Oil Pressure Sensor	
C 29	Air Injection Control Driver (Bank 1)	
C 30	Air Injection Control Driver (Bank 1)	
C 31	Air Injection Control Driver (Bank 2)	
C 32	Air Injection Control Driver (Bank 2)	
C 33	Air Pump Assembly (Bank 1)	
C 34	Air Pump Assembly (Bank 2)	
C 35	Air Switching Valve (Bank 1)	
C 36	Air Switching Valve (Bank 2)	
C 37	Cooler Compressor Assembly	
C 38	VSV (ACIS)	
C 39	Electronically Controlled Transmission Solenoid	
C 40	Electronically Controlled Transmission Solenoid	
C 41	Transmission Revolution Sensor (Turbine)	
C 42	Transmission Revolution Sensor (Counter Gear)	
C 43	Transfer Shift Actuator Assembly	
C 44	Transfer Shift Actuator Assembly	

Position of Parts in Engine Compartment

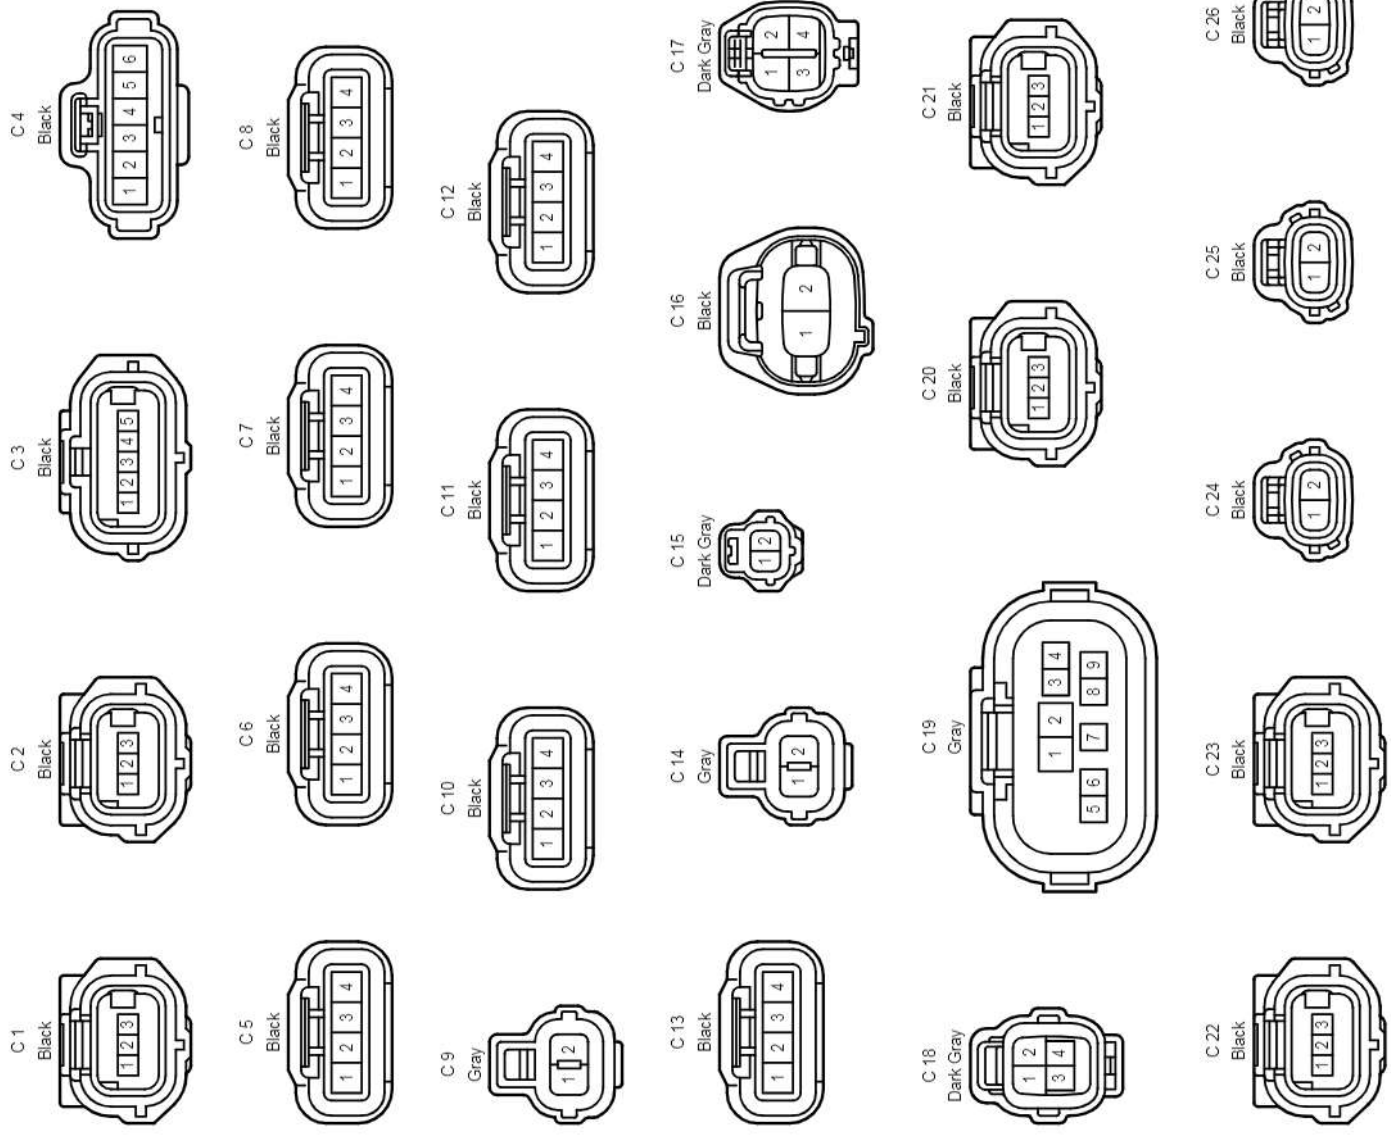


Position of Parts in Engine Compartment

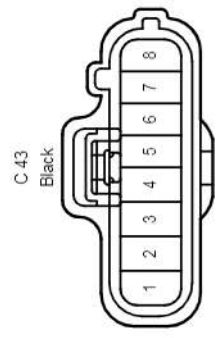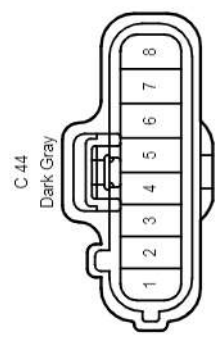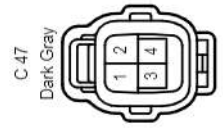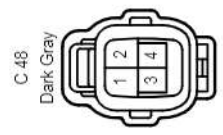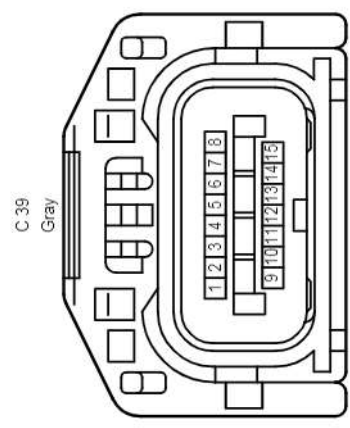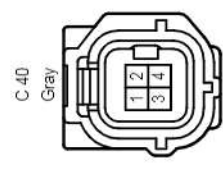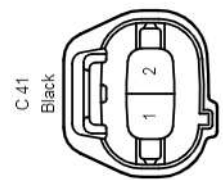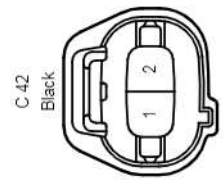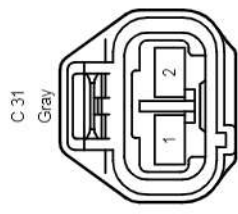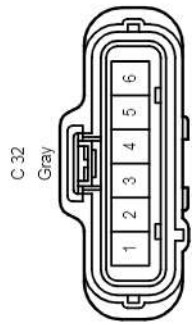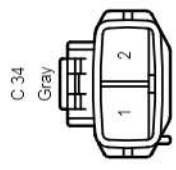


Position of Parts in Engine Compartment

C 53
Black

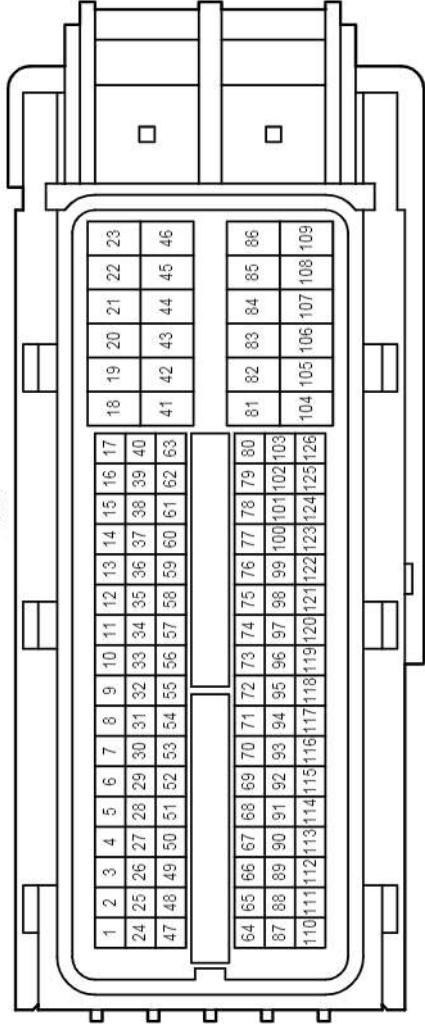
















Position of Parts in Engine Compartment

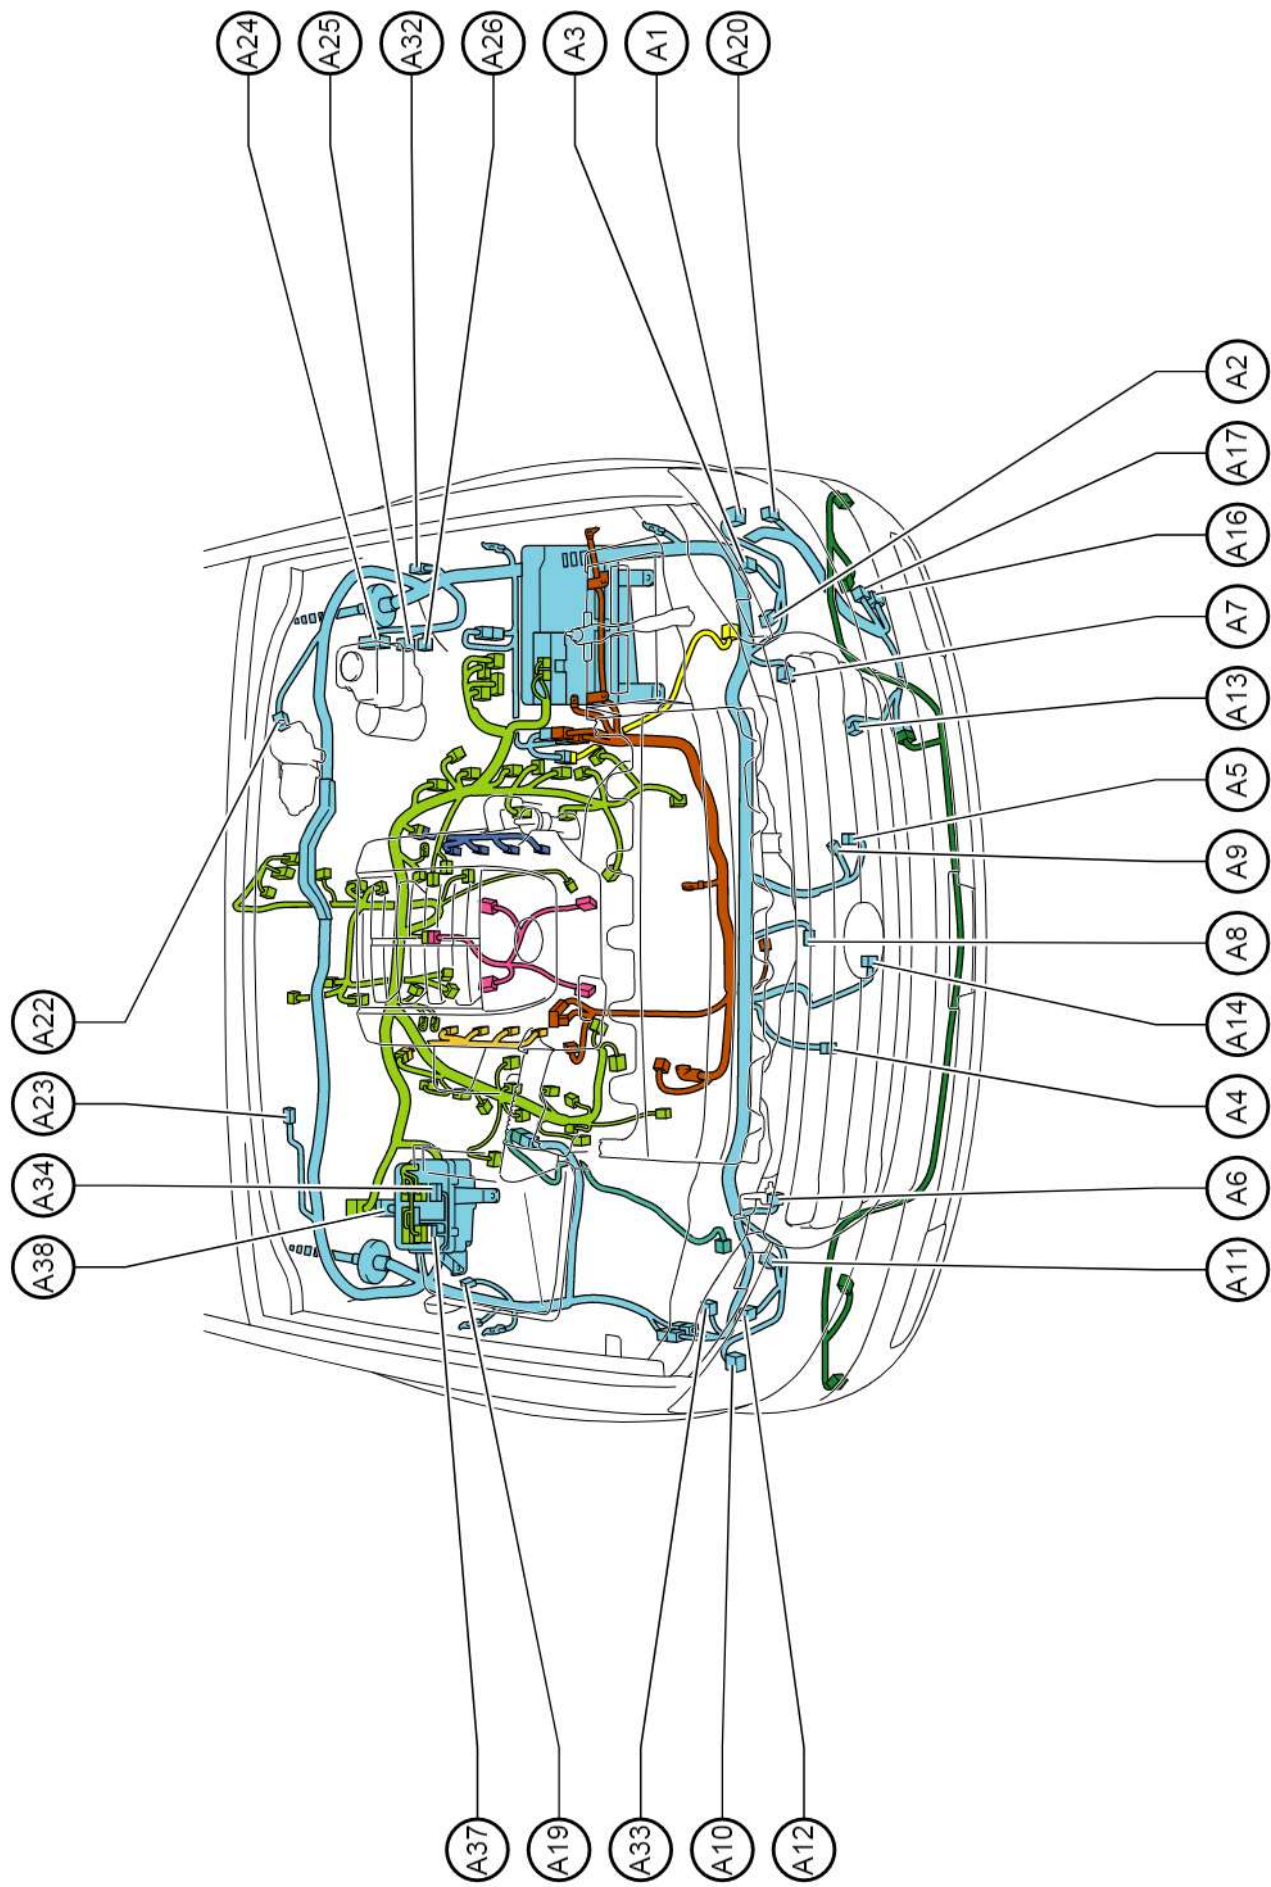

Position of Parts in Engine Compartment


A	1	Headlight Assembly LH
A	2	Headlight Assembly LH
A	3	Headlight Assembly LH
A	4	High Pitched Horn Assembly
A	5	Low Pitched Horn Assembly
A	6	Front Airbag Sensor RH
A	7	Front Airbag Sensor LH
A	8	Engine Hood Courtesy Switch
A	9	Condenser Blower Motor Assembly
A	10	Headlight Assembly RH
A	11	Headlight Assembly RH
A	12	Headlight Assembly RH
A	13	A/C Pressure Sensor
A	14	Ambient Temperature Sensor
A	16	Windshield Washer Motor and Pump Assembly
A	17	Headlight Cleaner Control Relay and Motor
A	19	Security Horn Assembly
A	20	Wireless Door Lock Buzzer
A	22	Windshield Wiper Motor Assembly
A	23	Front Wiper Deicer (Windshield Glass)
A	24	Skid Control ECU with Actuator Assembly
A	25	Skid Control ECU with Actuator Assembly
A	26	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A	32	Noise Filter (Ghost Buster)
A	33	Daytime Running Light Resistor
A	34	Junction Connector
A	37	Junction Connector
A	38	ECM

Position of Parts in Engine Compartment

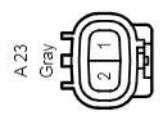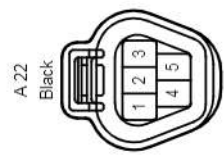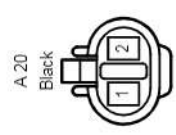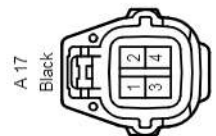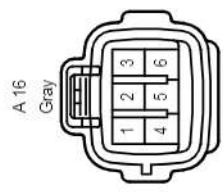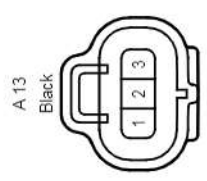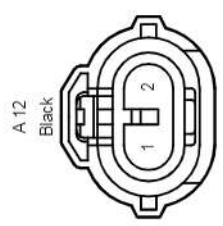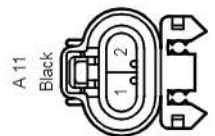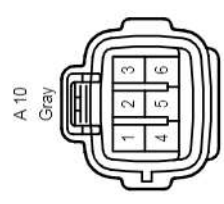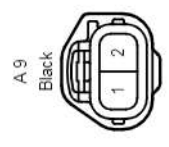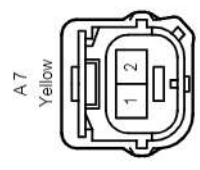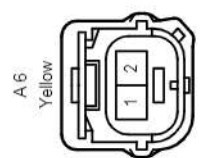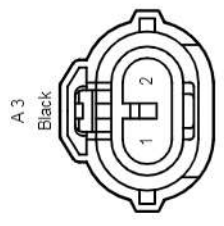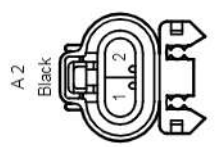
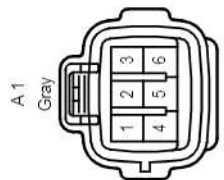


A 24
Black


A 25
Black

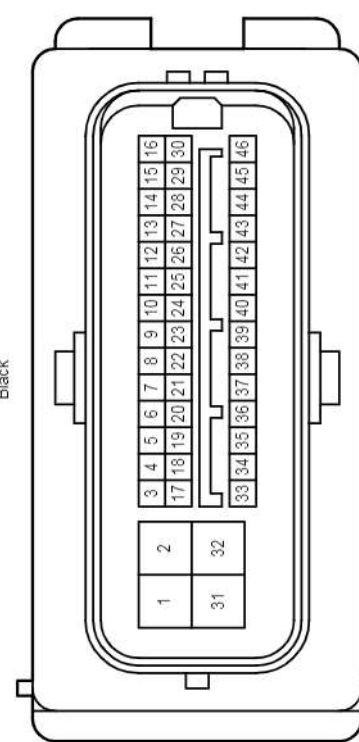

Position of Parts in Engine Compartment

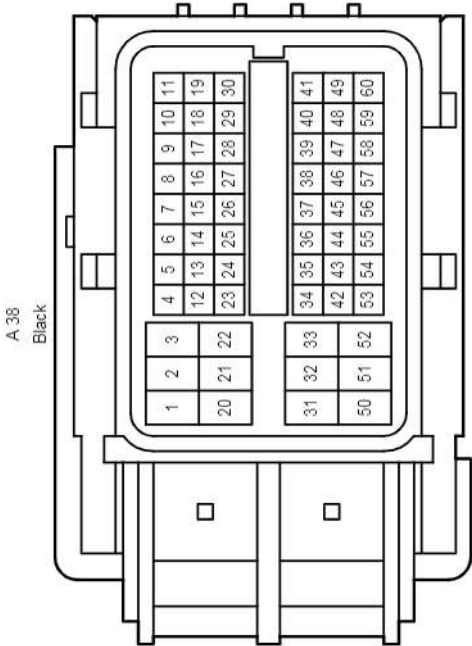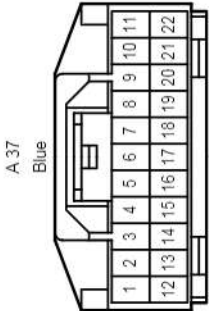

Position of Parts in Engine Compartment

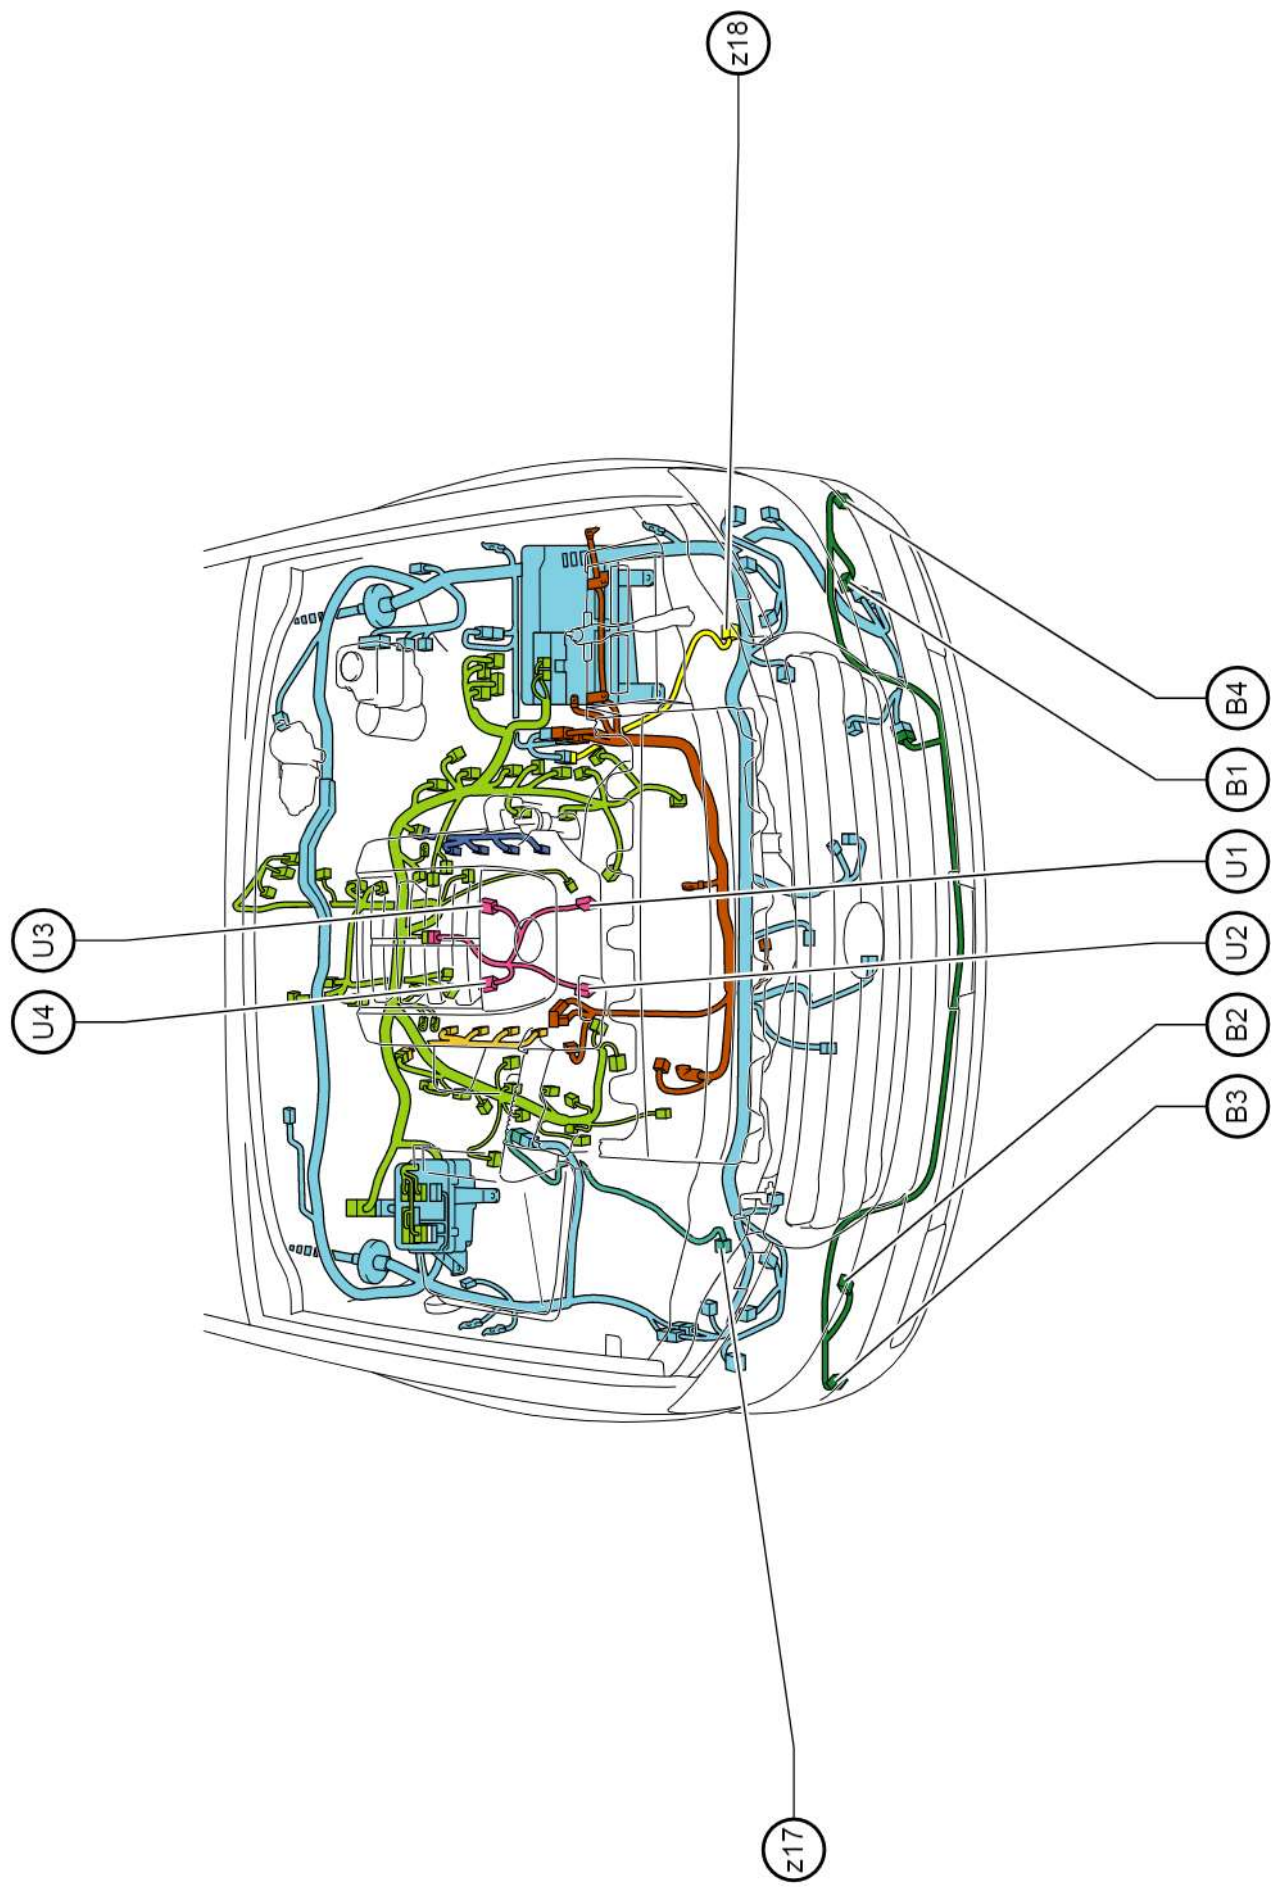


Position of Parts in Engine Compartment


B	1	Fog Light Assembly LH
B	2	Fog Light Assembly RH
B	3	No.1 Ultrasonic Sensor RH
B	4	No.1 Ultrasonic Sensor LH
U	1	Knock Control Sensor (Bank 1 Sensor 1)
U	2	Knock Control Sensor (Bank 2 Sensor 1)
U	3	Knock Control Sensor (Bank 1 Sensor 2)
U	4	Knock Control Sensor (Bank 2 Sensor 2)
z	17	Front Speed Sensor RH
z	18	Front Speed Sensor LH

Position of Parts in Engine Compartment


B 1
Brown

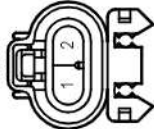


B 2
Brown

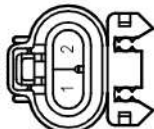

B 3
Black

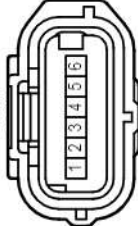

B 4
Black

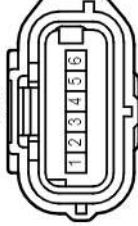

U 1
Black



U 2
Gray



U 3
Black



U 4
Gray




z 17
Black













z 18
Black




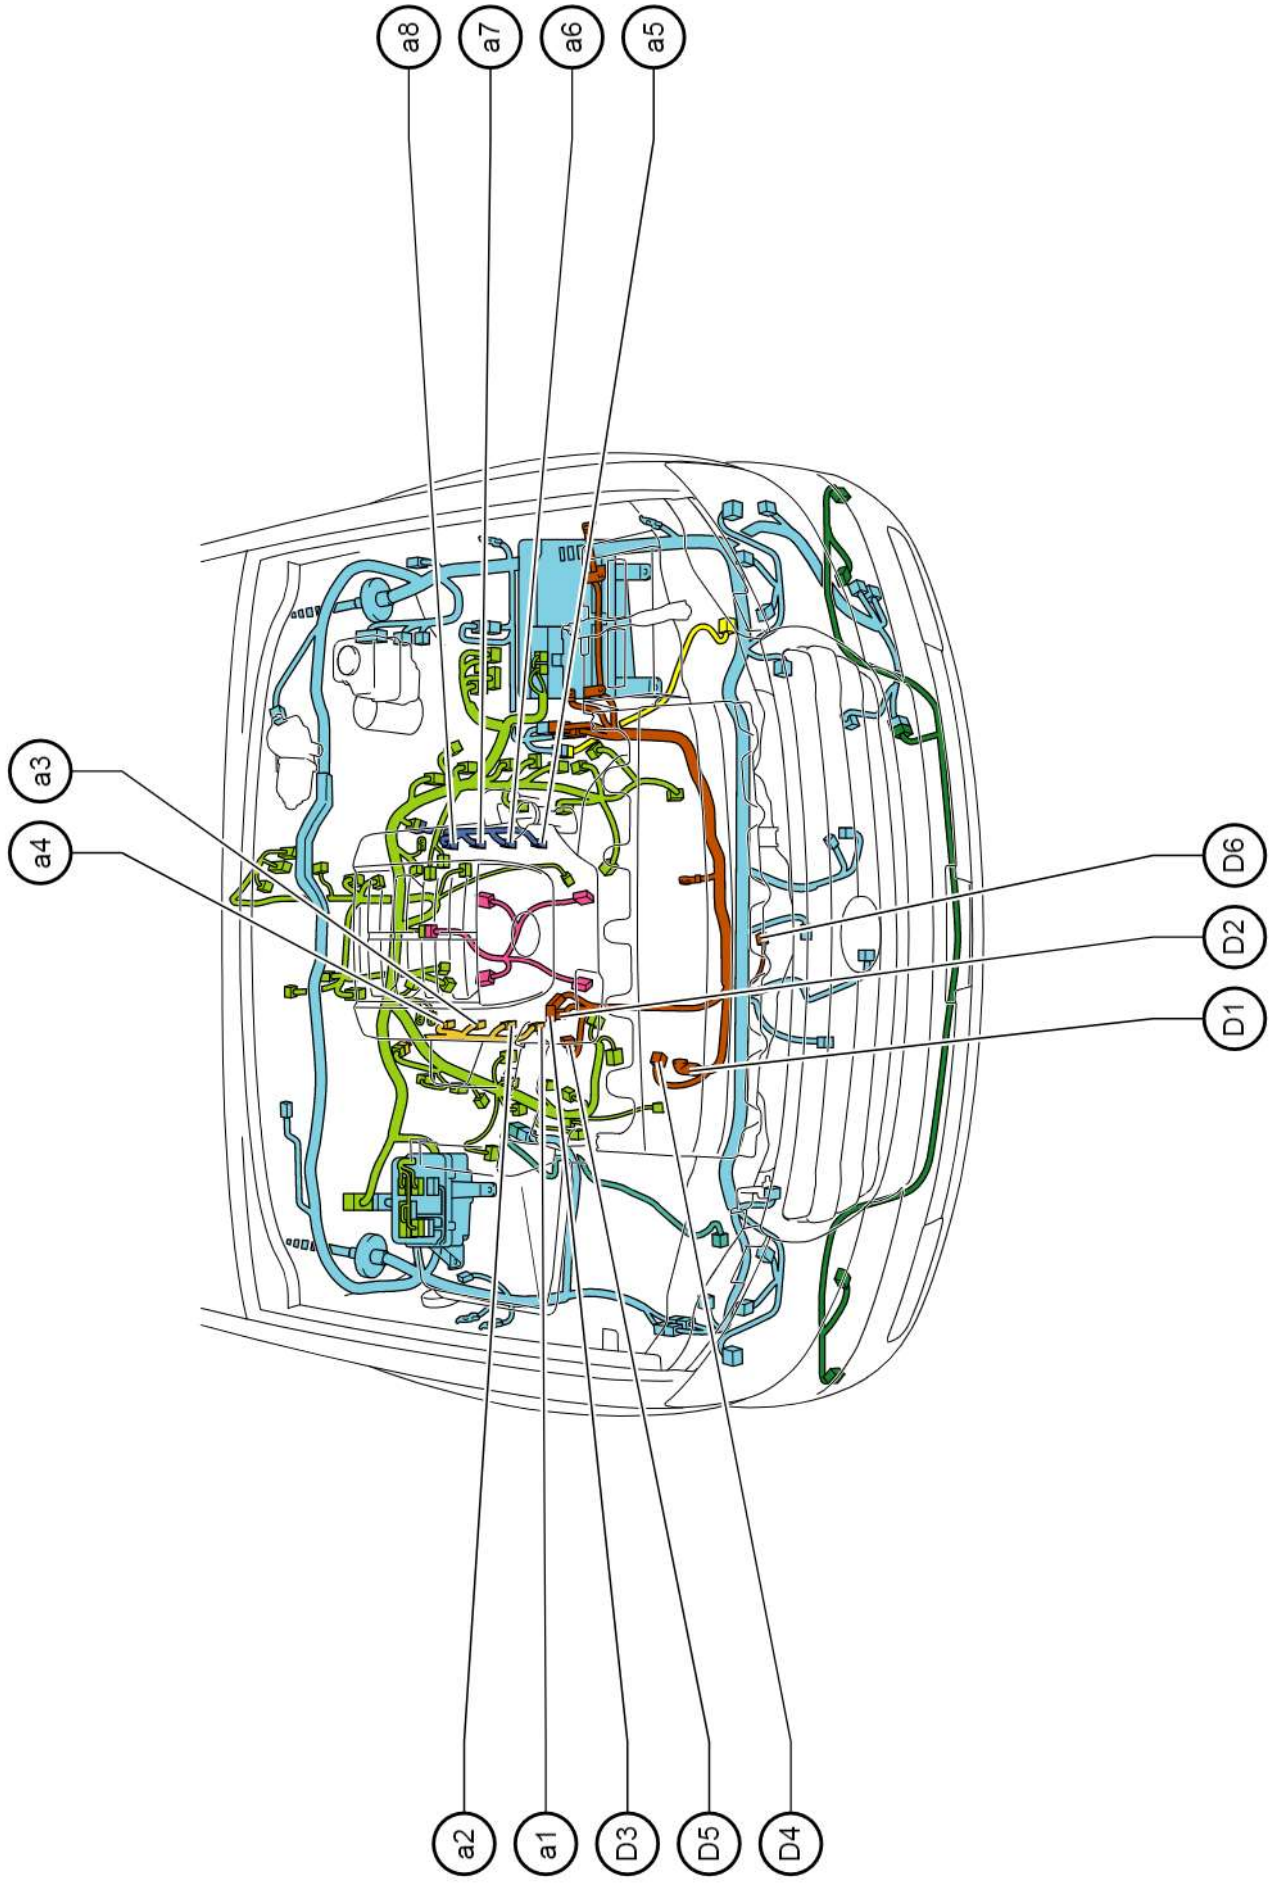


- D 1 Generator Assembly
- D 2 Starter Assembly
- D 3 Starter Assembly
- D 4 Generator Assembly
- D 5 Engine Oil Level Sensor
- D 6 Oil Pressure Sender Gage Assembly
- a 1 Fuel Injector Assembly No.2
- a 2 Fuel Injector Assembly No.4
- a 3 Fuel Injector Assembly No.6
- a 4 Fuel Injector Assembly No.8
- a 5 Fuel Injector Assembly No.1
- a 6 Fuel Injector Assembly No.3
- a 7 Fuel Injector Assembly No.5
- a 8 Fuel Injector Assembly No.7

Position of Parts in Engine Compartment

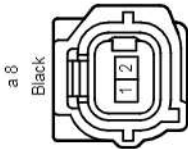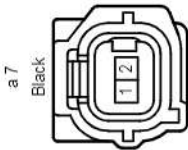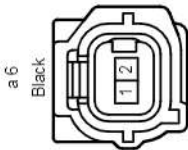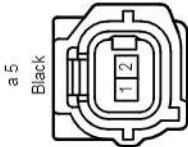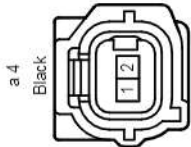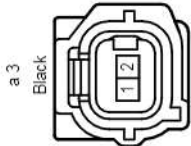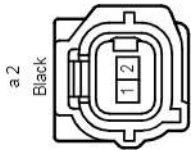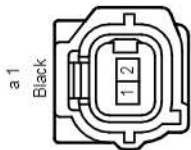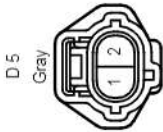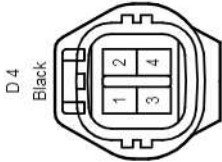


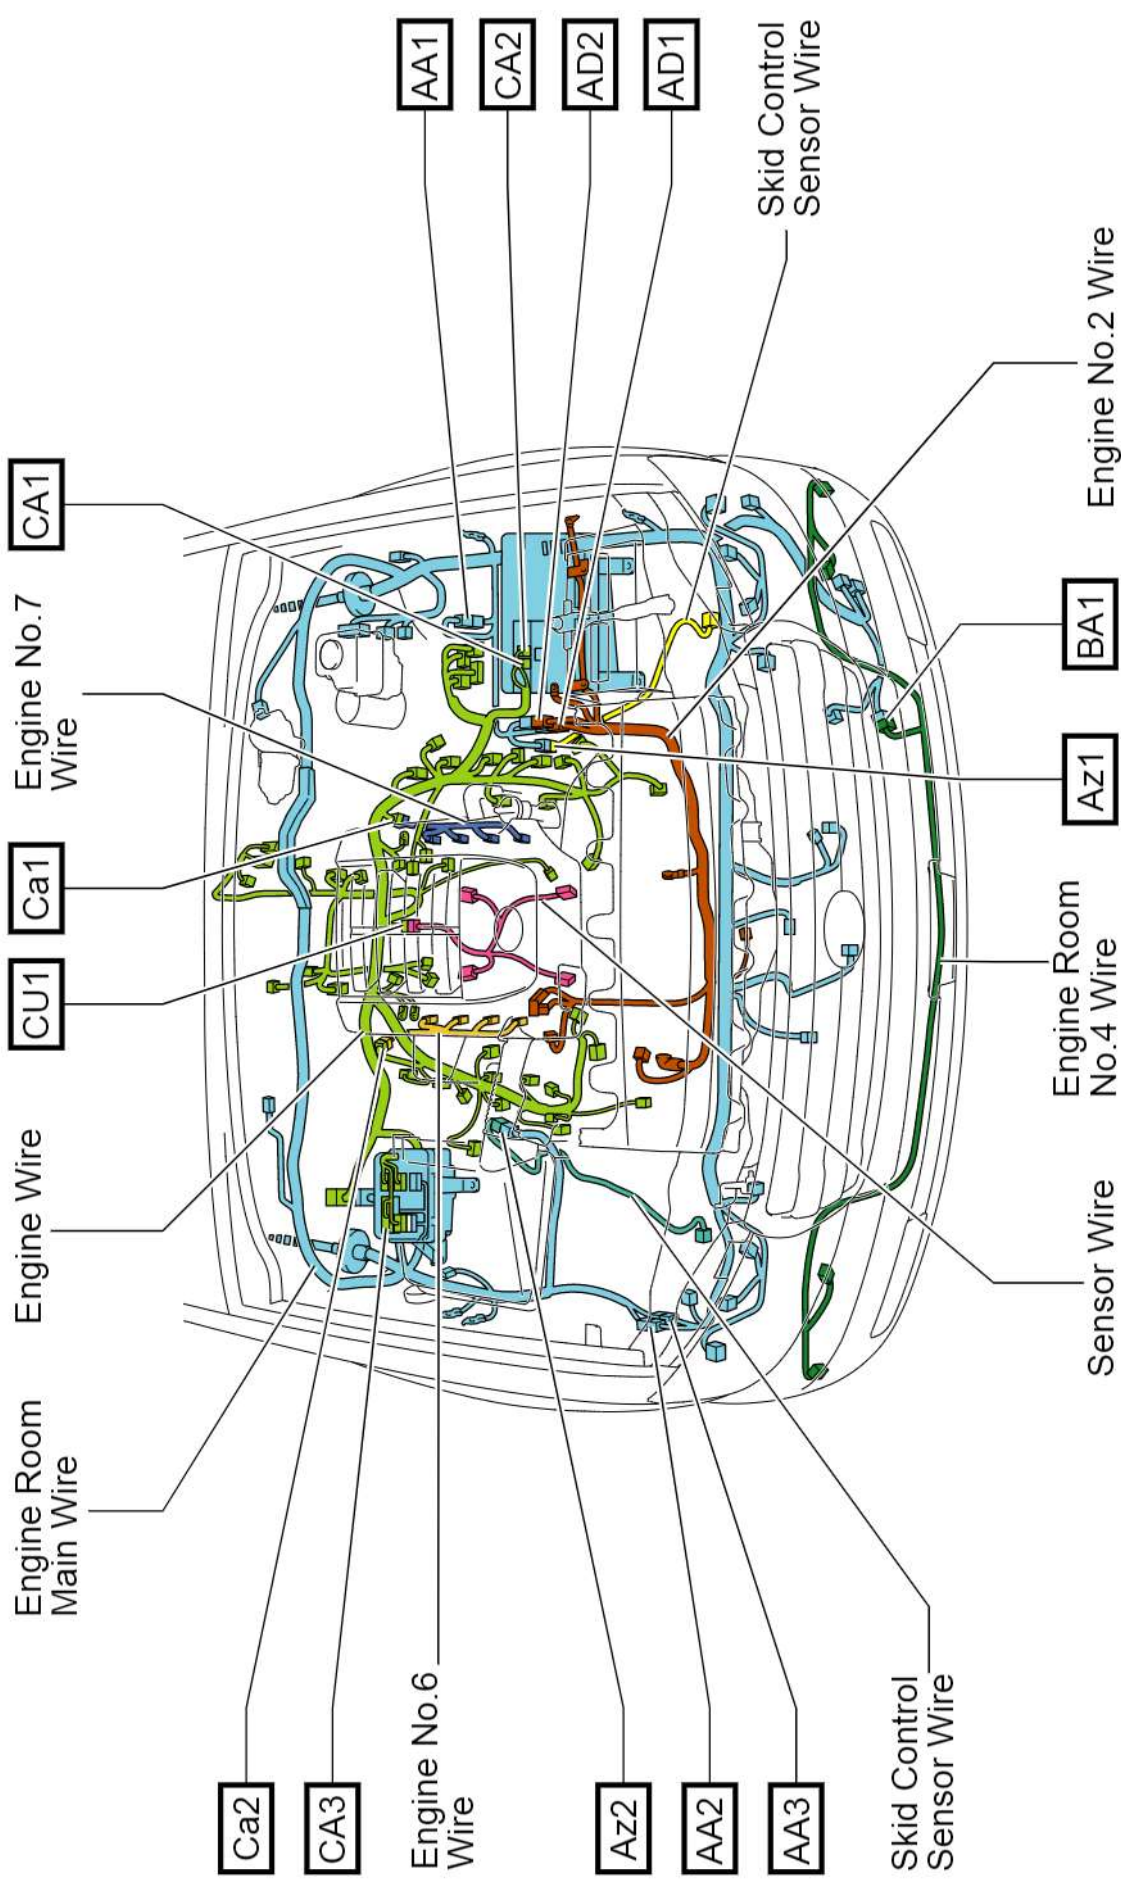

Wire and Wire in Engine Compartment

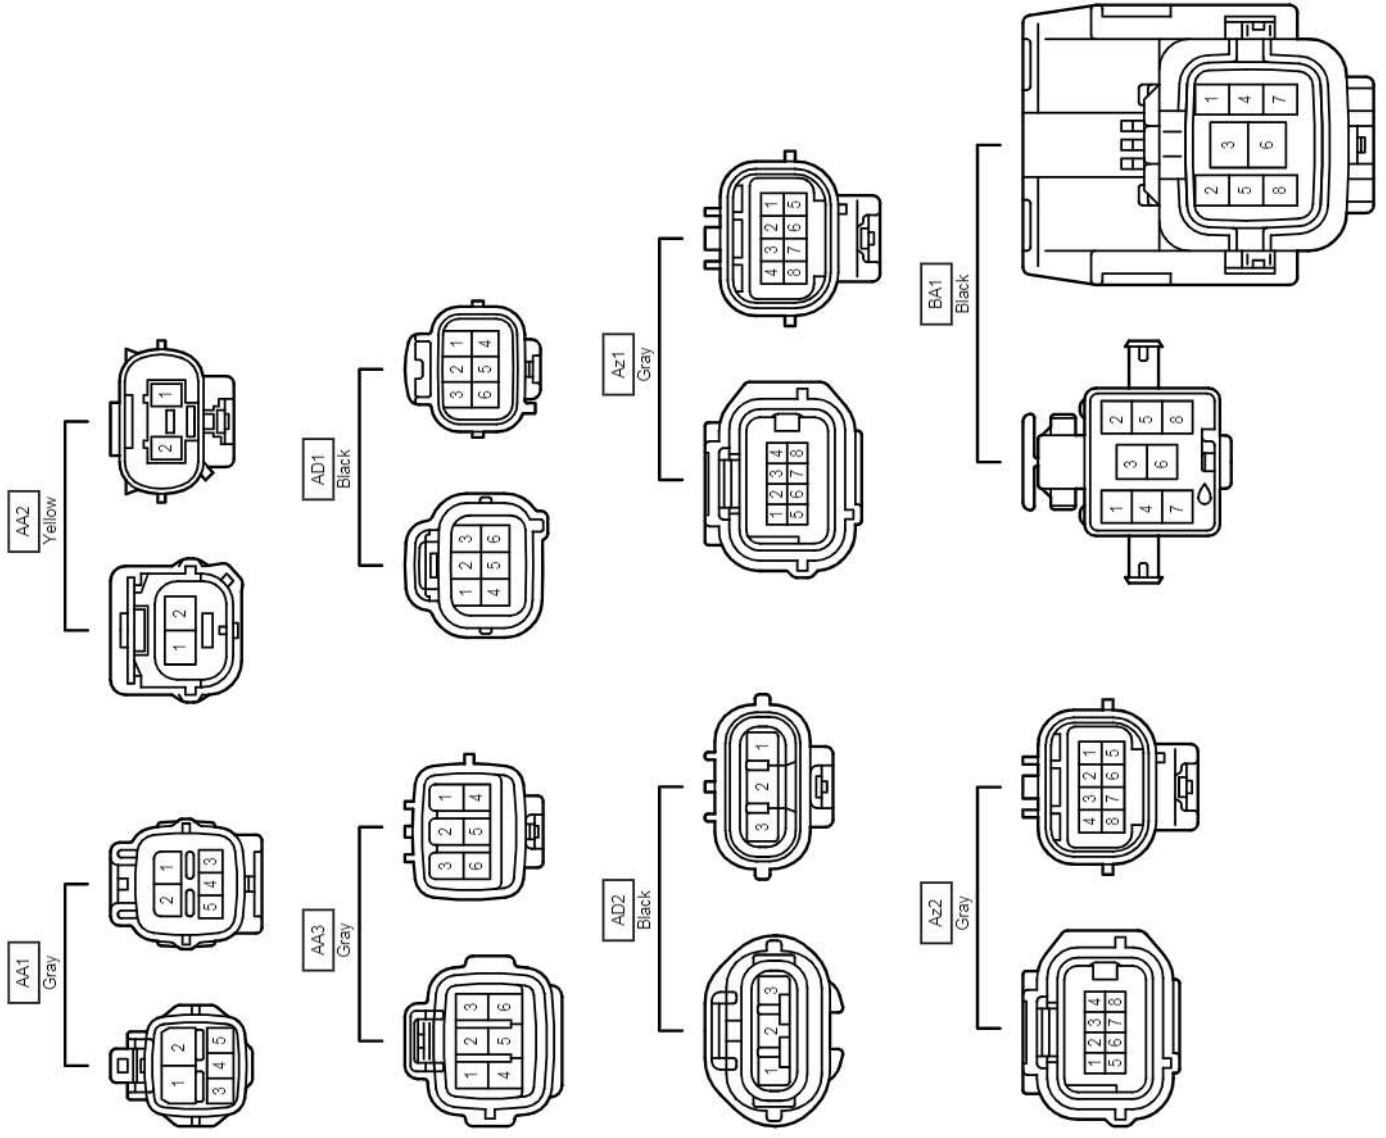


Wire and Wire in Engine Compartment

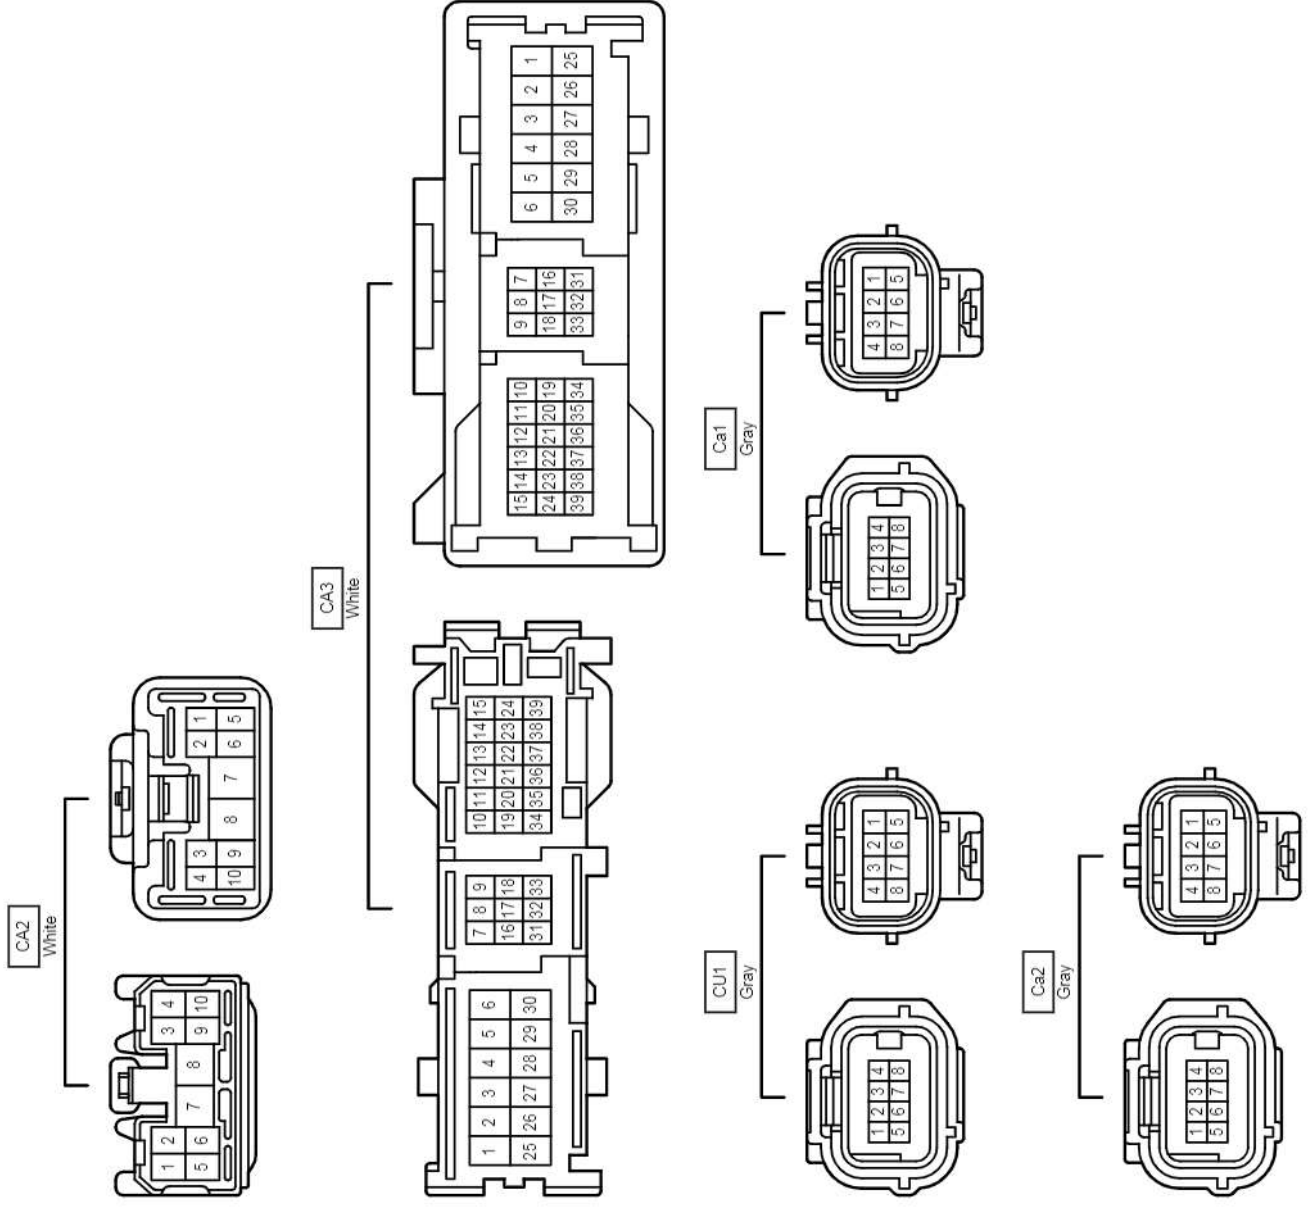


Antenna Cord Sub-Assembly Navigation Antenna Assembly Antenna Cord Sub-Assembly



Navigation Antenna Cord Sub-Assembly Amplifier Antenna Assembly

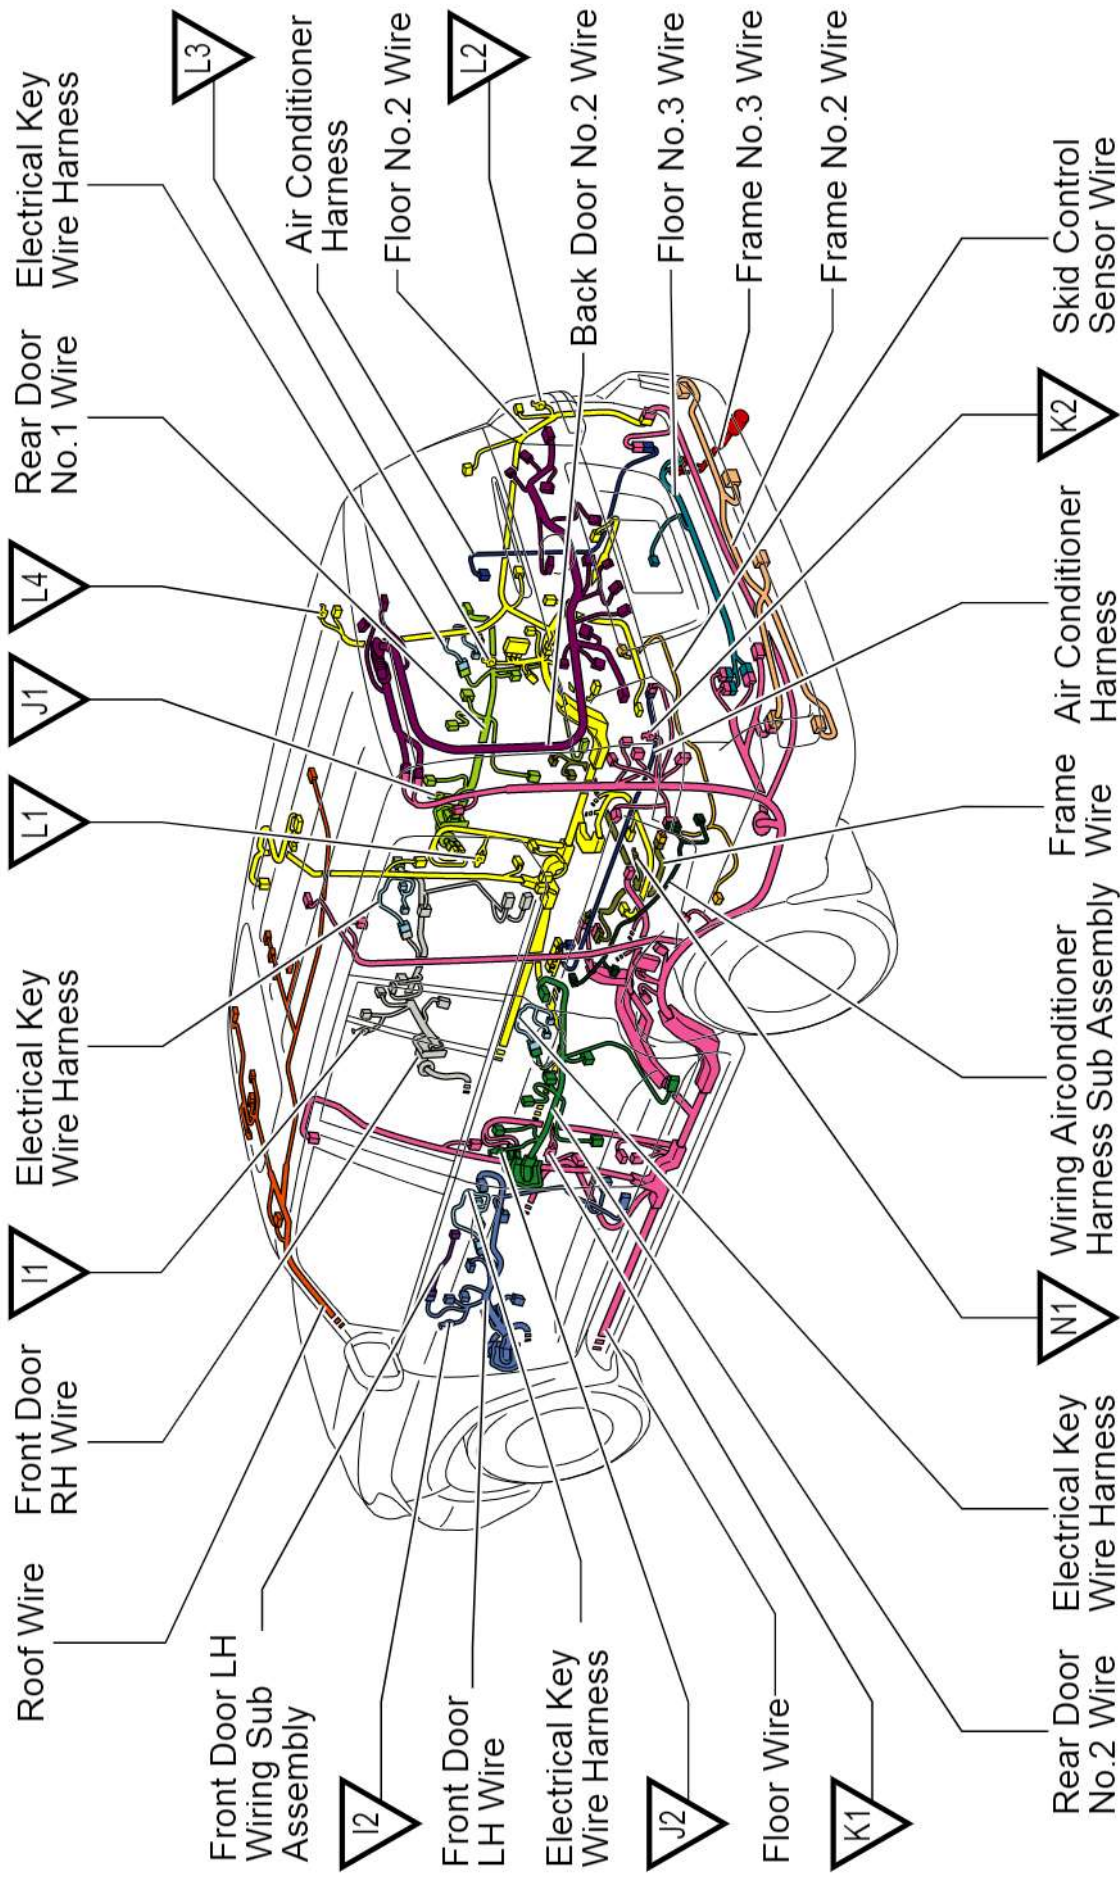


Position of Parts in Body

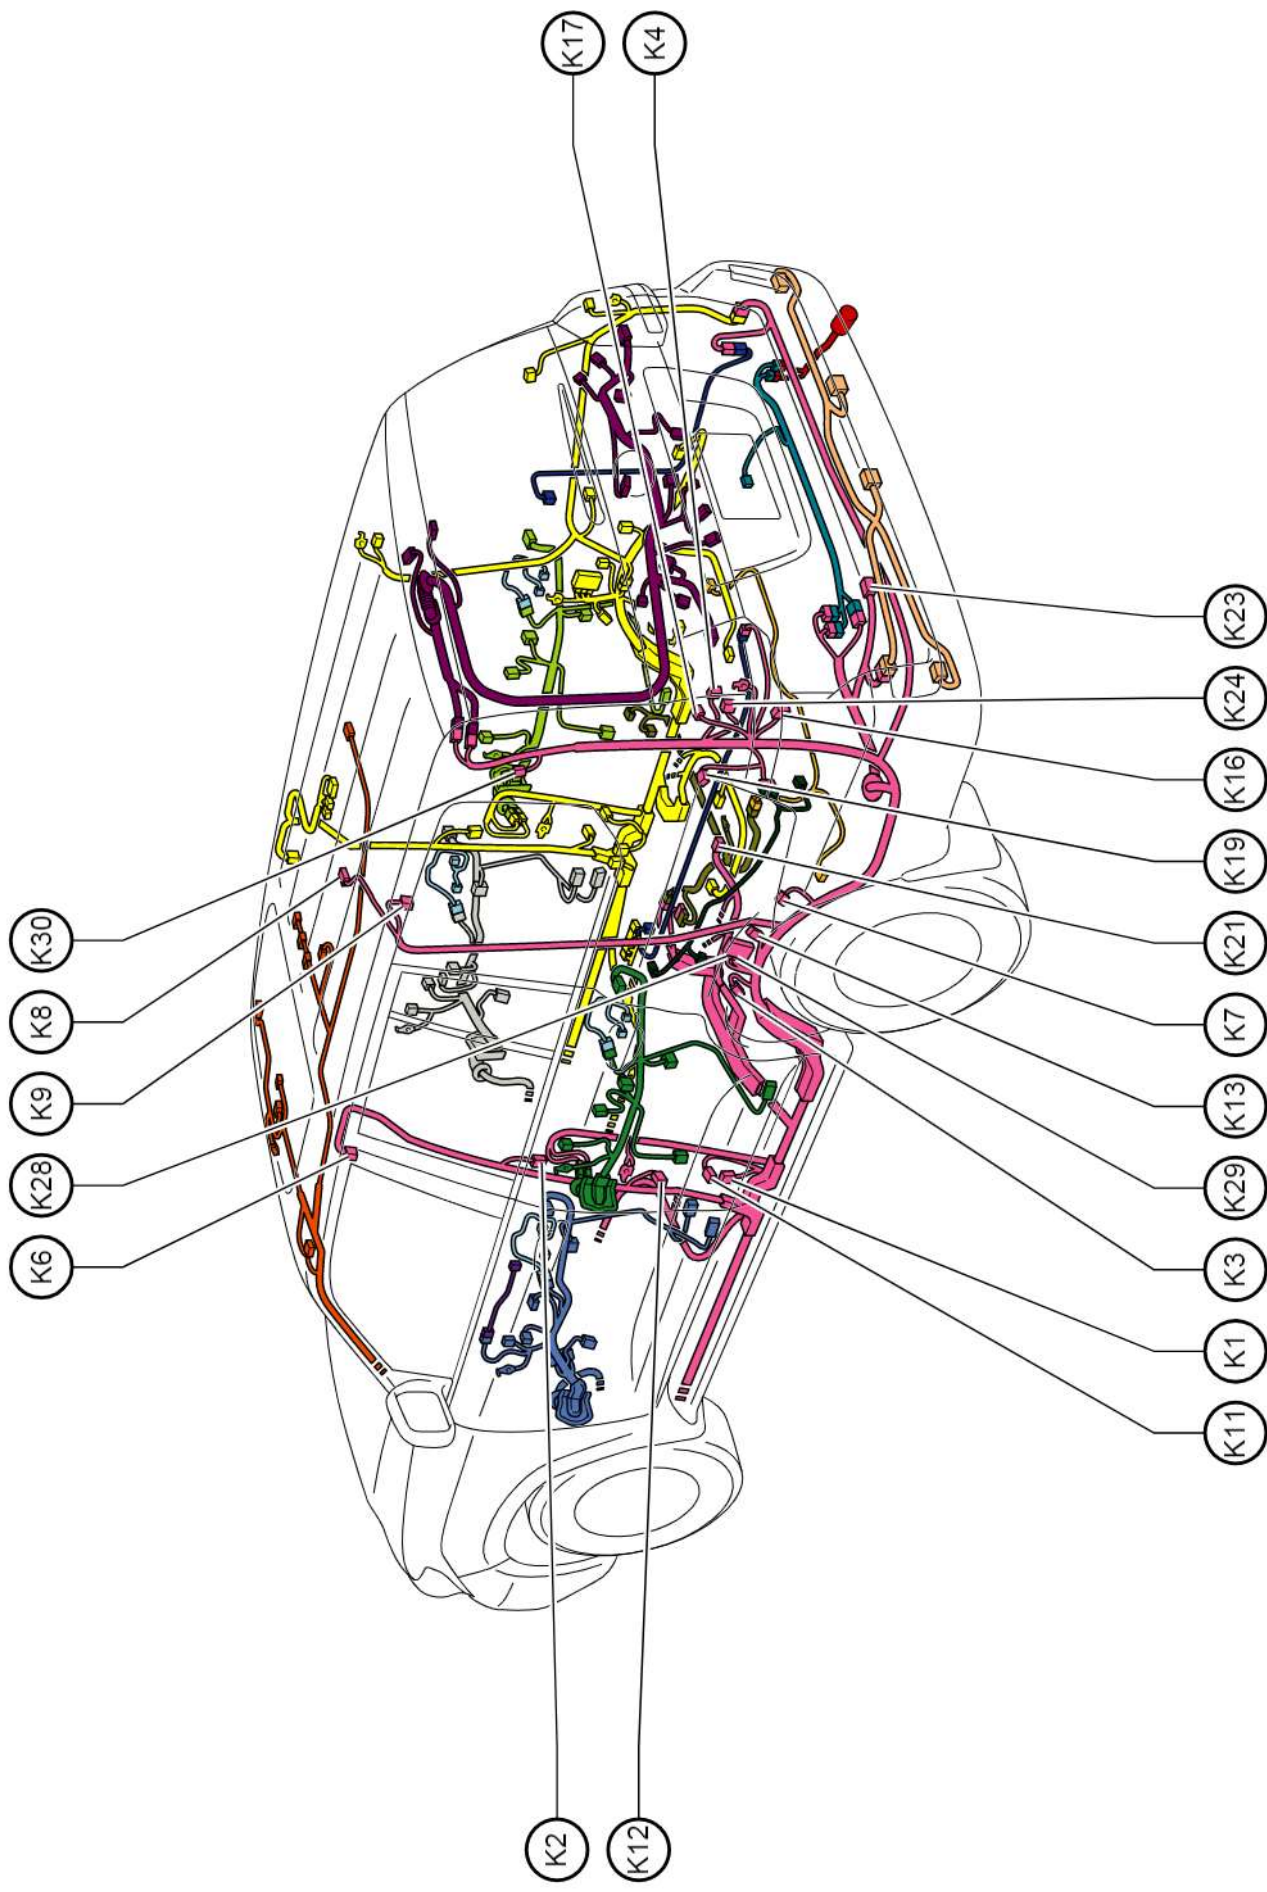


Position of Parts in Body

K	1	Front Pretensioner LH
K	2	Front Door Courtesy Light Switch Assembly LH
K	3	Rear Door Courtesy Light Switch Assembly LH
K	4	Rear Combination Light Assembly LH
K	6	Curtain Shield Airbag Assembly Circuit LH
K	7	Rear Side Airbag Sensor Assembly LH
K	8	Tire Pressure Warning Antenna and Receiver
K	9	Curtain Shield Airbag Assembly Circuit LH
K	11	Front Pre-Collision Seat Belt Motor LH
K	12	Front Tension Reducer LH
K	13	Rear Pretensioner LH
K	16	Voltage Inverter Assembly
K	17	Power Outlet 115V Socket
K	19	Rear A/C Blower Assembly
K	21	Cooler Thermistor LH
K	23	Outside Luggage Electrical Key Antenna
K	24	Towing Converter
K	28	Junction Connector
K	29	Junction Connector
K	30	Diode (High Mounted Stop Light)




















Position of Parts in Body

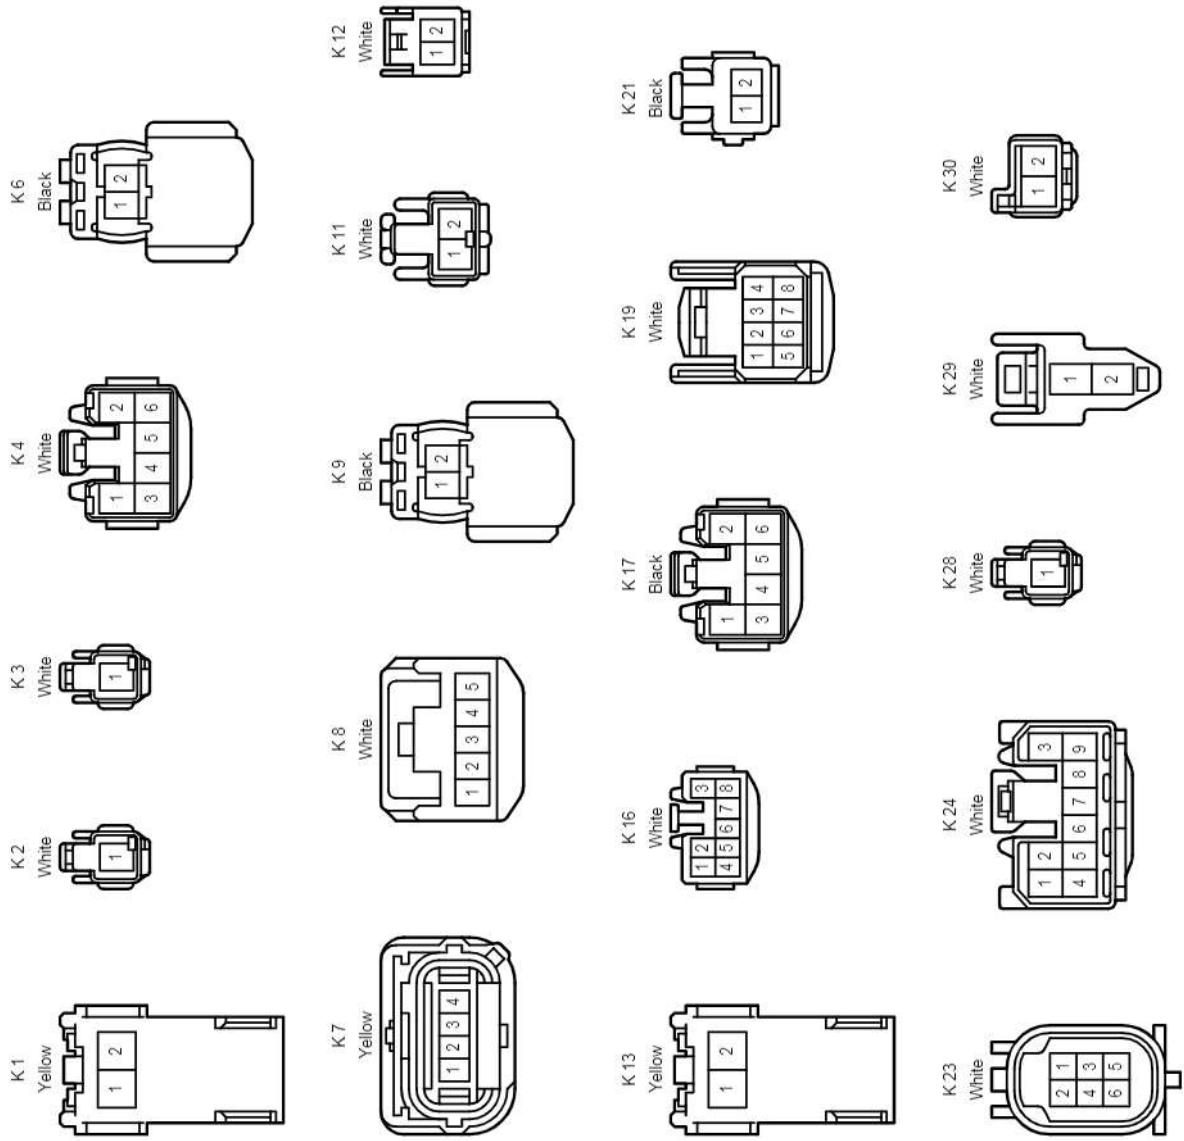











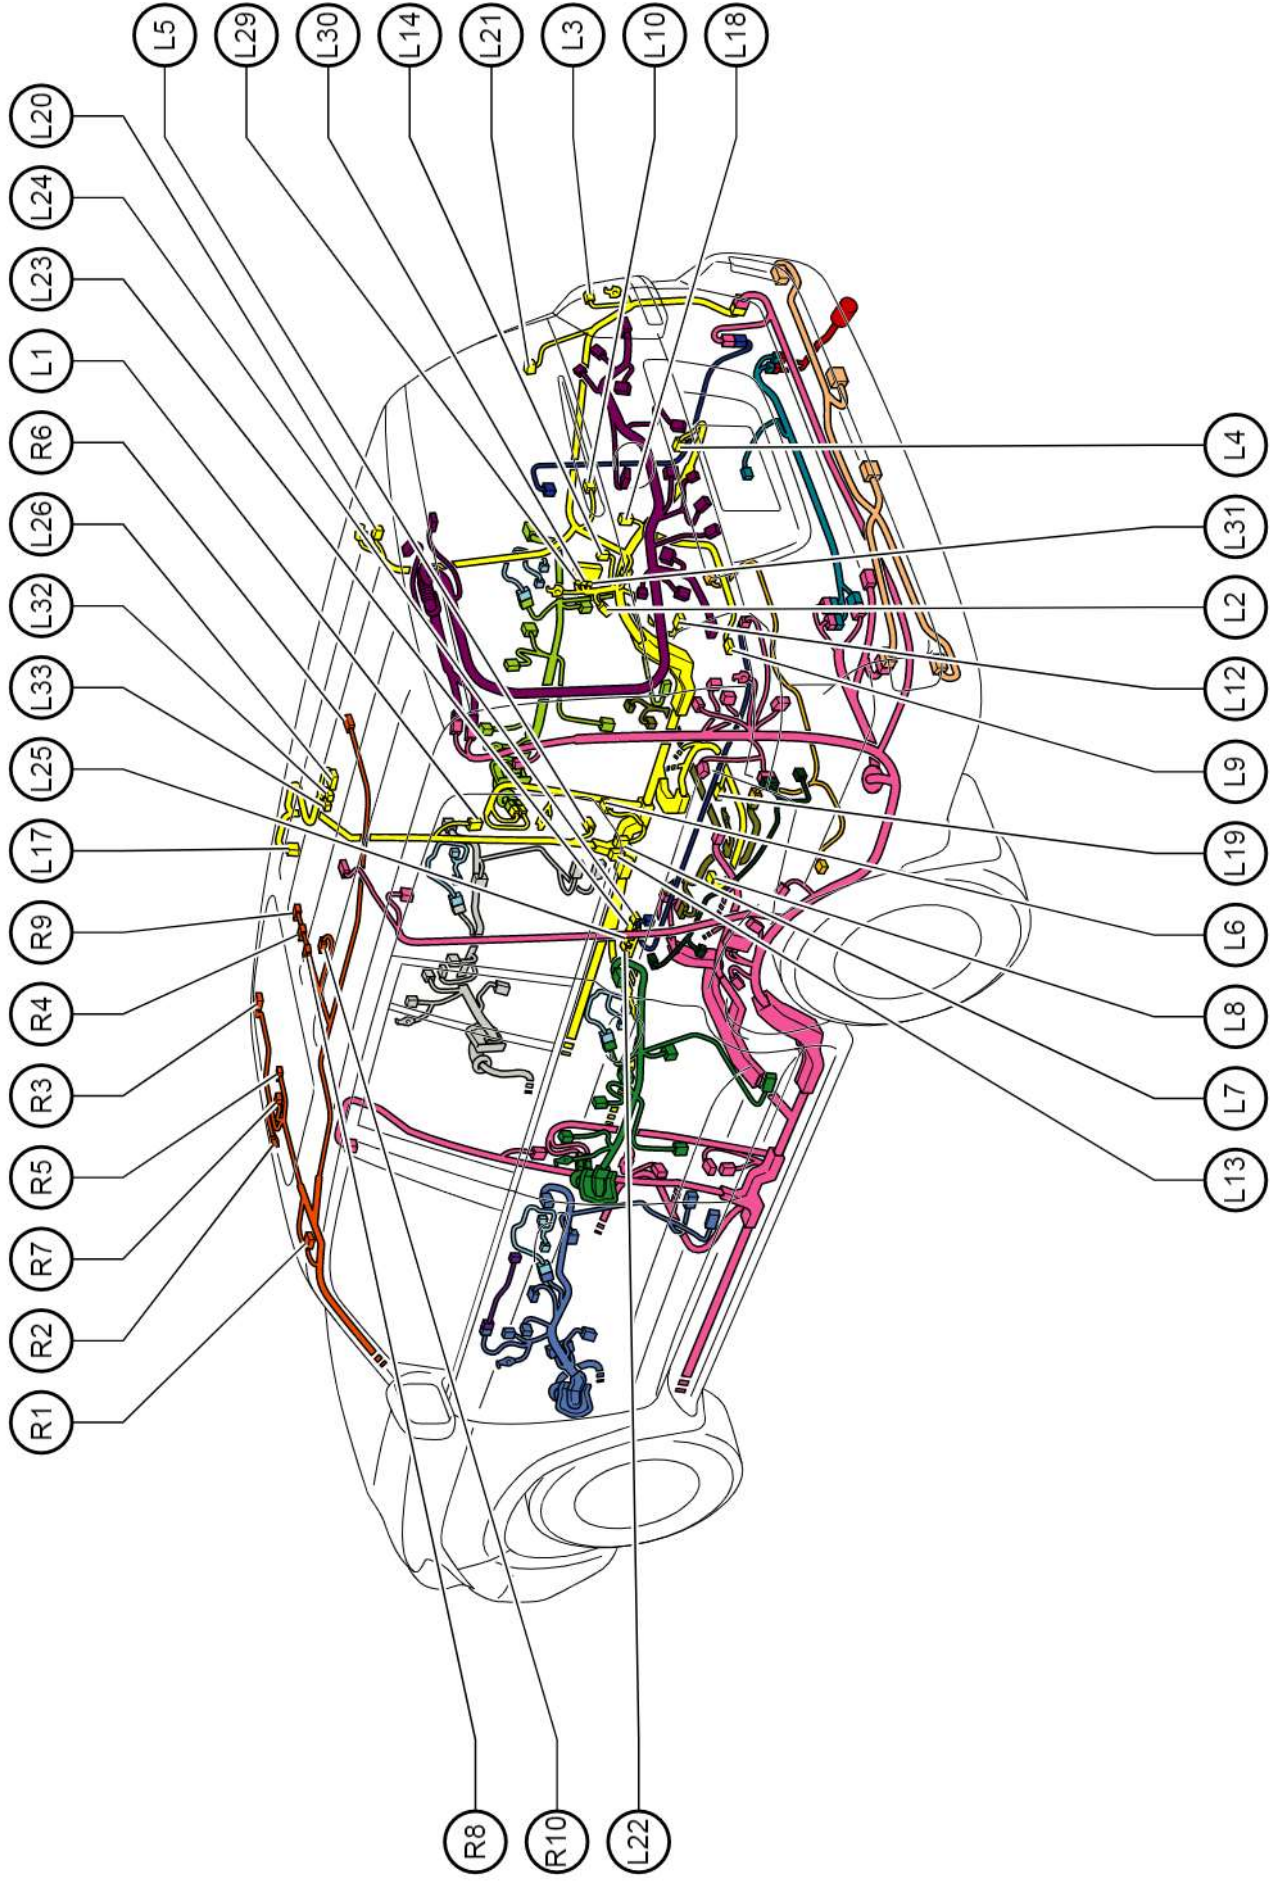


L	1	Front Door Courtesy Light Switch Assembly RH
L	2	Rear Door Courtesy Light Switch Assembly RH
L	3	Rear Combination Light Assembly RH
L	4	No.1 with Box Speaker Assembly
L	5	Front Pre-Collision Seat Belt Motor RH
L	6	Front Tension Reducer RH
L	7	Seat Belt Tension Sensor
L	8	Rear Indoor Electrical Key Oscillator
L	9	Indoor Luggage Compartment Electrical Key Oscillator
L	10	Tire Pressure Warning ECU
L	12	Cooler Thermistor RH
L	13	Front Pretensioner RH
L	14	Rear Pretensioner RH
L	17	Curtain Shield Airbag Assembly RH
L	18	Rear Side Airbag Sensor Assembly RH
L	19	Rear Floor Side Airbag Sensor
L	20	Curtain Shield Airbag Assembly RH
L	21	Door Control Receiver
L	22	Multi-Display Selector
L	23	Multi-Display Selector
L	24	Multi-Display Selector
L	25	Multi-Display Selector
L	26	Television Display Assembly
L	29	Junction Connector
L	30	Junction Connector
L	31	Junction Connector
L	32	Television Display Assembly
L	33	Television Display Assembly
R	1	Visor Assembly □ H
R	2	Inner Rear View Mirror Assembly
R	3	Visor Assembly RH
R	4	No.2 Room Light Assembly
R	5	Sliding Roof Control ECU
R	6	No.3 Room Light Assembly
R	7	Overhead Module
R	8	No.2 Room Light Assembly
R	9	No.2 Room Light Assembly
R	10	No.1 Room Light Assembly

   
Position of Parts in Body

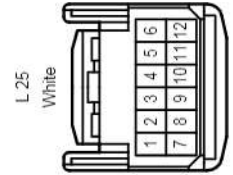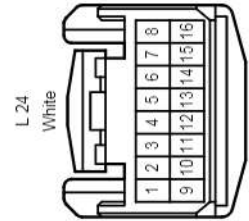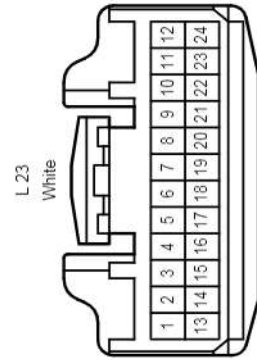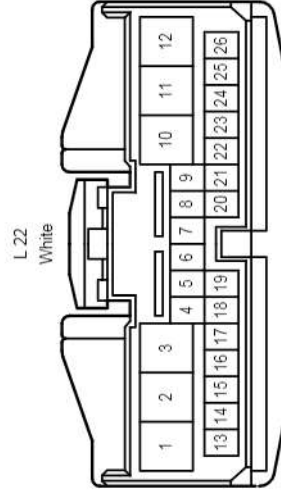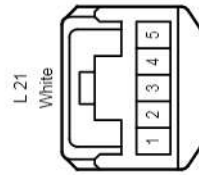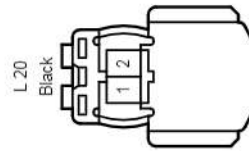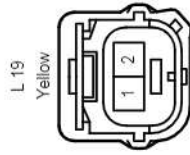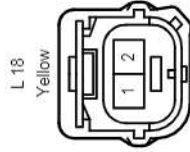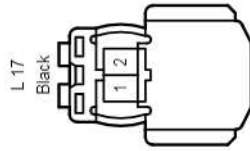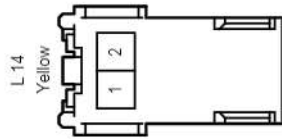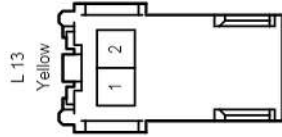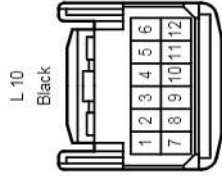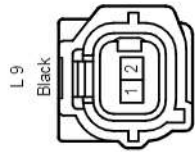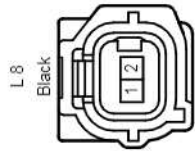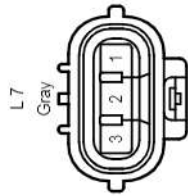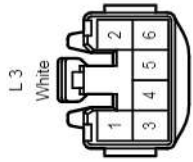

Position of Parts in Body

  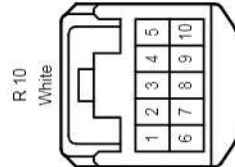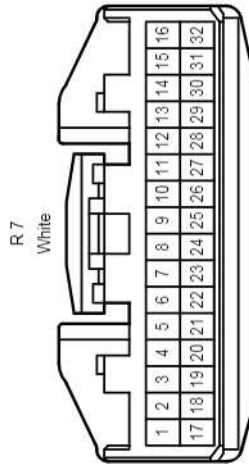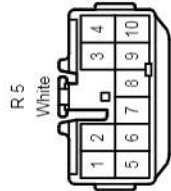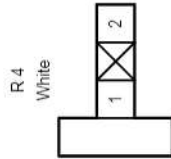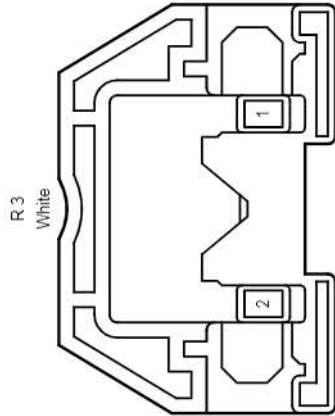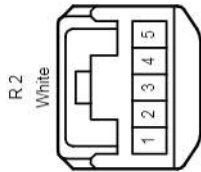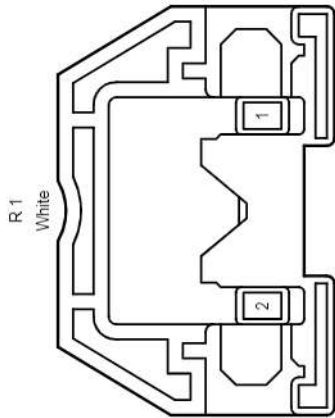  

















Position of Parts in Body

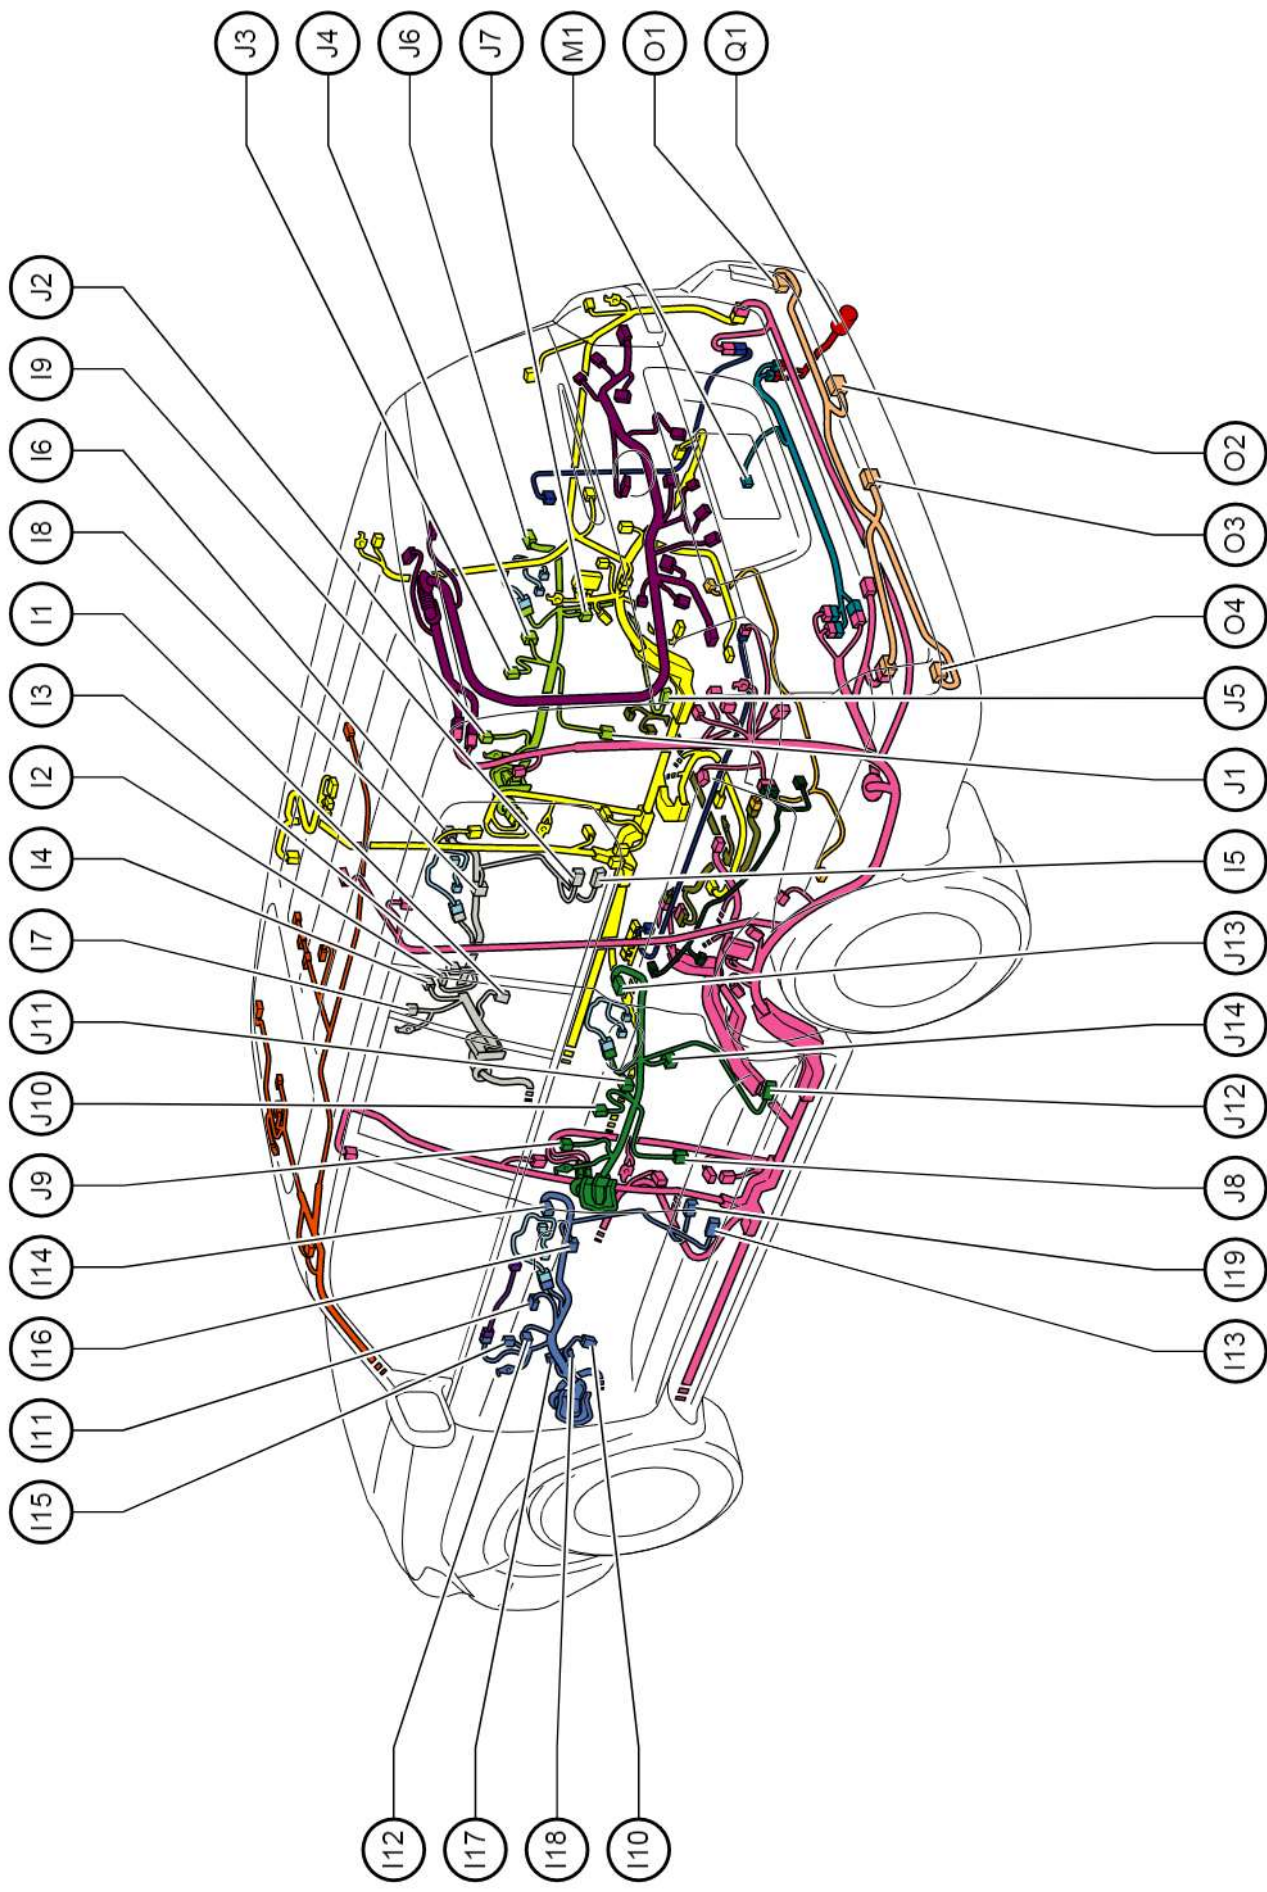


Position of Parts in Body

I	1	Front No.1 Speaker Assembly RH
I	2	Front Door Control Switch Assembly RH
I	3	Front Power Window Regulator Switch Assembly RH
I	4	Front Power Window Regulator Motor Assembly RH
I	5	Front Door Courtesy Light Assembly RH
I	6	Front Door Lock Assembly RH
I	7	Outer Rear View Mirror Assembly RH
I	8	Diode (Front Door Courtesy Switch RH)
I	9	Front Side Airbag Sensor Assembly RH
I	10	Front No.1 Speaker Assembly LH
I	11	Multiplex Network Master Switch Assembly
I	12	Front Power Window Regulator Motor Assembly LH
I	13	Front Door Courtesy Light Assembly LH
I	14	Front Door Lock Assembly LH
I	15	Outer Rear View Mirror Assembly LH
I	16	Diode (Front Door Courtesy Switch LH)
I	17	Outer Mirror Control ECU Assembly
I	18	Outer Mirror Control ECU Assembly
I	19	Front Side Airbag Sensor Assembly LH
J	1	Rear Speaker Set RH
J	2	Rear No.3 Speaker Assembly RH
J	3	Rear Power Window Regulator Switch Assembly RH
J	4	Rear Power Window Regulator Motor Assembly RH
J	5	Rear Door Courtesy Light Assembly RH
J	6	Rear Door Lock Assembly RH
J	7	Diode (Rear Door Courtesy Switch RH)
J	8	Rear Speaker Set LH
J	9	Rear No.3 Speaker Assembly LH
J	10	Rear Power Window Regulator Switch Assembly LH
J	11	Rear Power Window Regulator Motor Assembly LH
J	12	Rear Door Courtesy Light Assembly LH
J	13	Rear Door Lock Assembly LH
J	14	Diode (Rear Door Courtesy Switch LH)
M	1	Canister Pump Module
O	1	No.2 Ultrasonic Sensor RH
O	2	No.3 Ultrasonic Sensor RH
O	3	No.3 Ultrasonic Sensor LH
O	4	No.2 Ultrasonic Sensor LH
Q	1	Trailer Socket

     
Position of Parts in Body

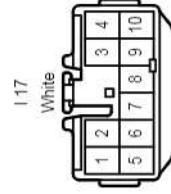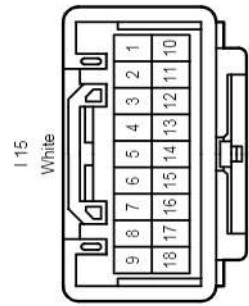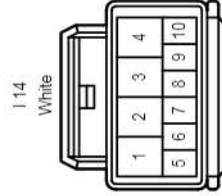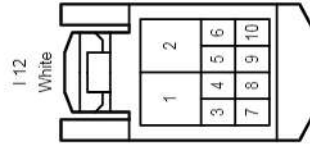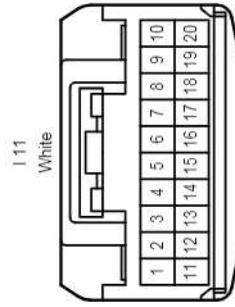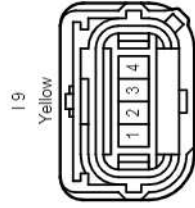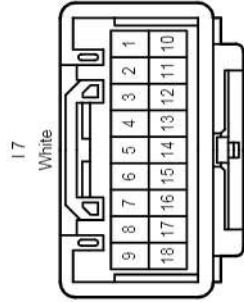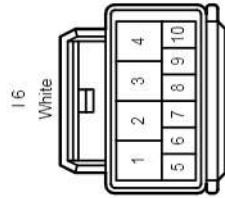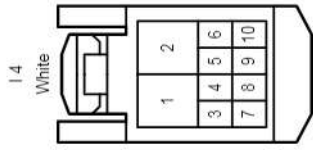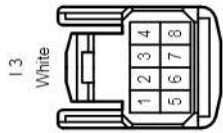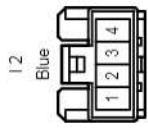

I 18
White

 

I 19
Yellow

 






J 1
White




J 2
Black




Position of Parts in Body

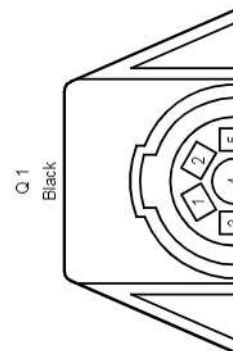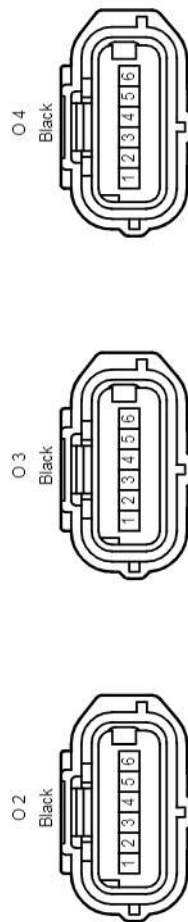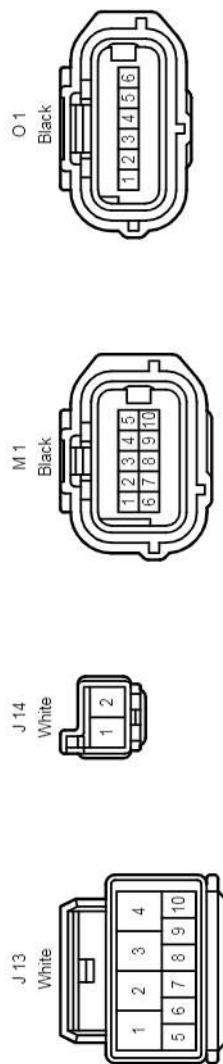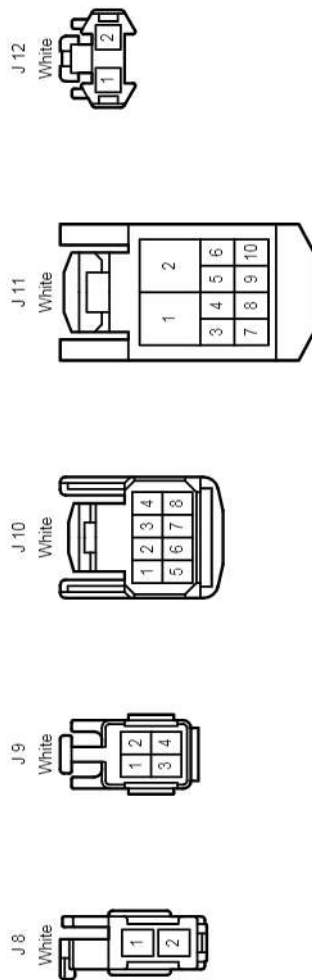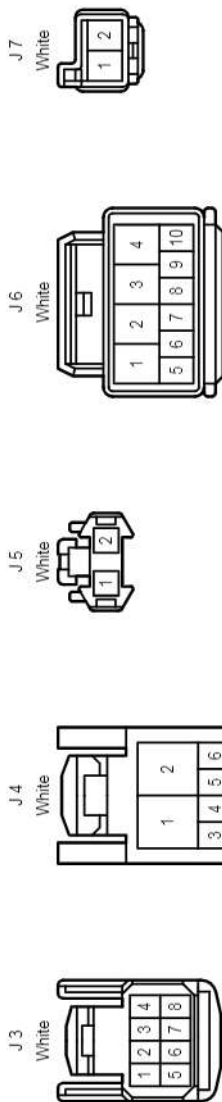

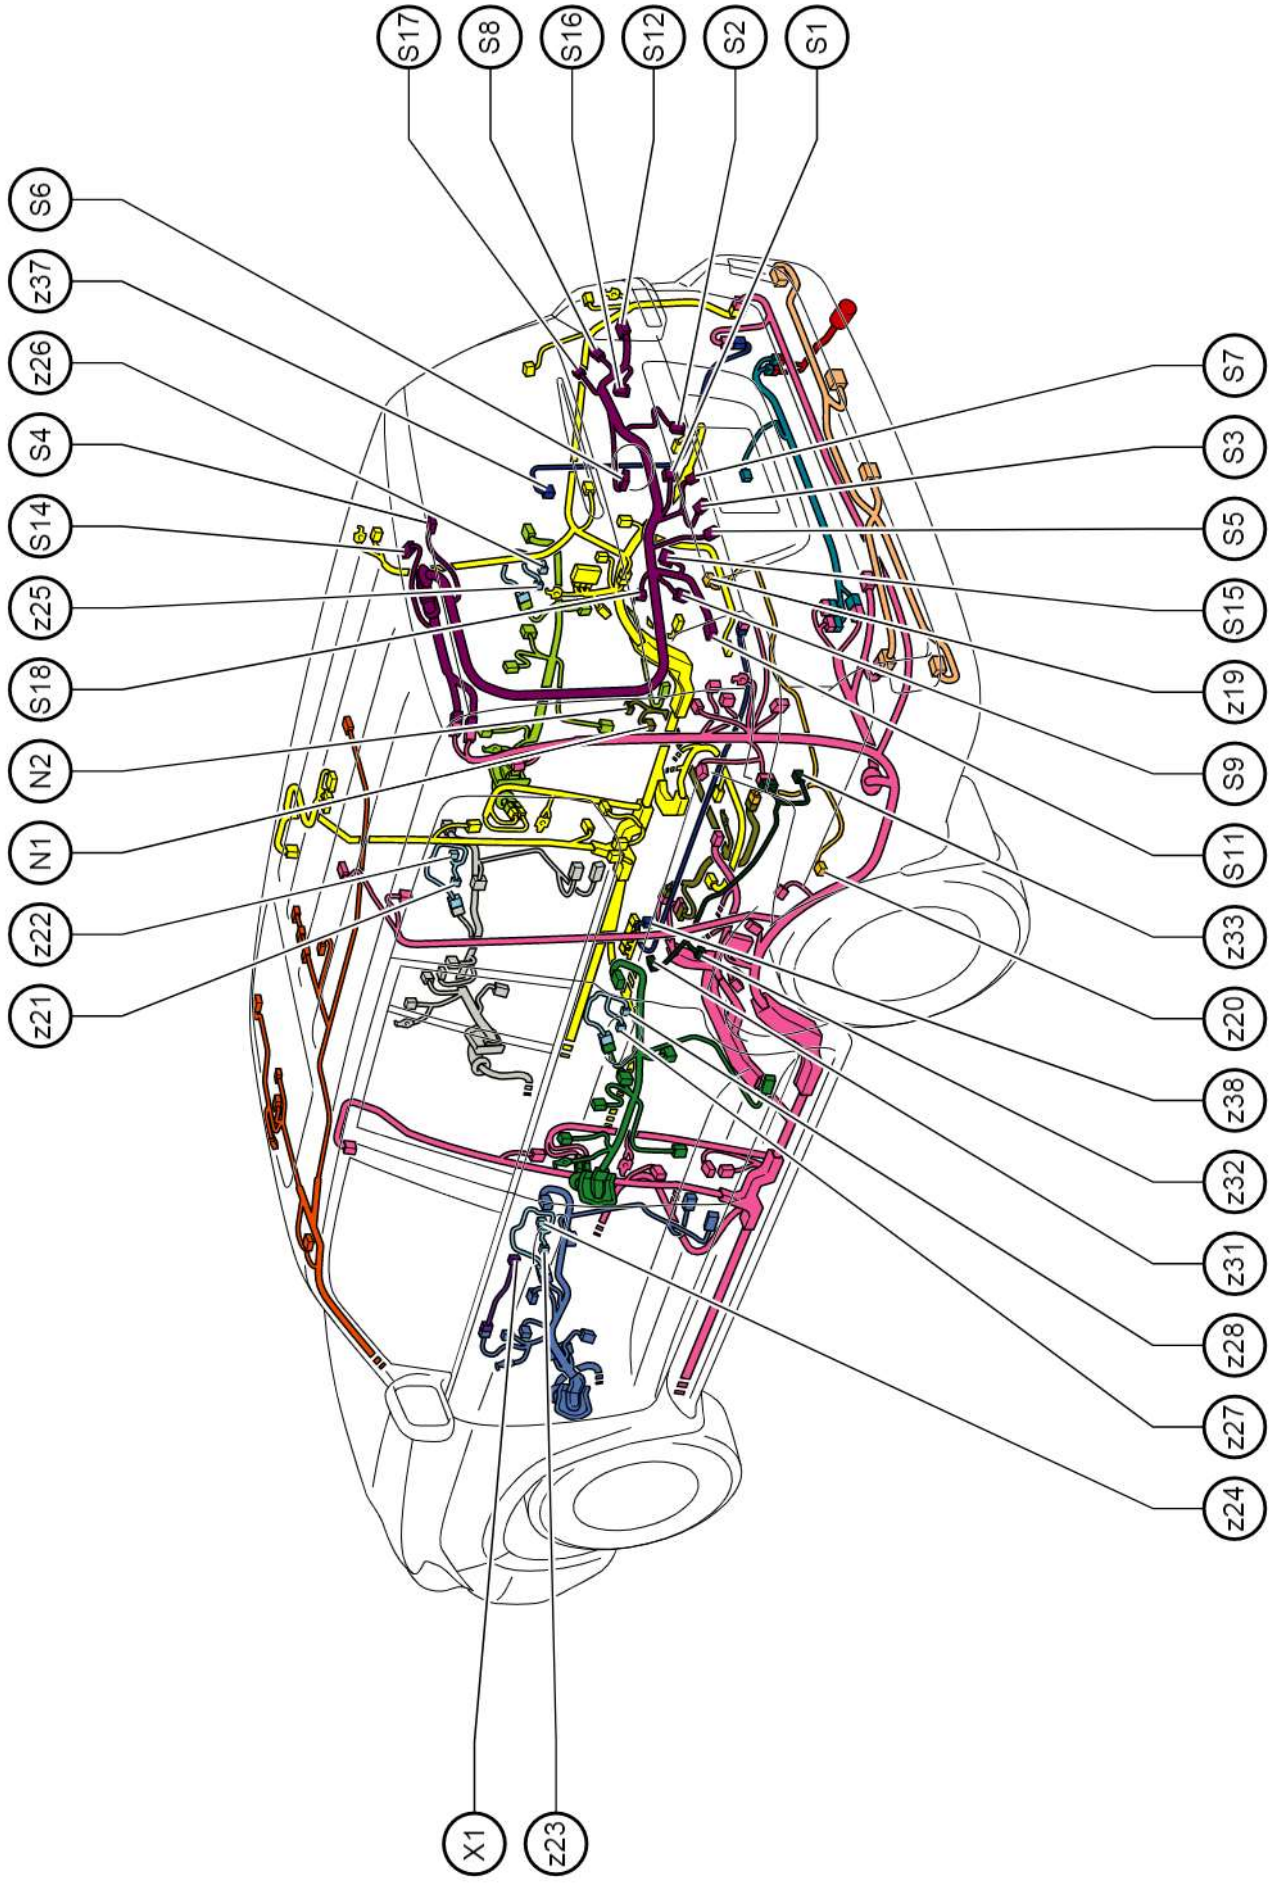

N	1	Fuel Sender Gage Assembly	
N	2	Fuel Pump Control ECU Assembly	
S	1	Back Door Lock Assembly	
S	2	License Plate Light Assembly RH	
S	3	License Plate Light Assembly LH	
S	4	Center Stop Light Assembly	
S	5	Rear Television Camera Assembly	
S	6	Rear Wiper Motor Assembly	
S	7	Back Door Opener Switch Assembly	
S	8	Rear Header Speaker Assembly RH	
S	9	Rear Header Speaker Assembly LH	
S	11	Rear Light Assembly LH	
S	12	Rear Light Assembly RH	
S	14	Noise Filter (Rear Window Defogger and Stop)	
S	15	Junction Connector	
S	16	Junction Connector	
S	17	Rear Window Defogger (Back Door Glass)	
S	18	Rear Window Defogger (Back Door Glass)	
X	1	Seat Memory Switch LH	
z	19	Rear Speed Sensor RH	
z	20	Rear Speed Sensor LH	
z	21	Front Door Outside Handle Assembly RH	
z	22	Front Door Electrical Key Oscillator RH	
z	23	Front Door Outside Handle Assembly LH	
z	24	Front Door Electrical Key Oscillator LH	
z	25	Rear Door Outside Handle Assembly RH	
z	26	Rear Door Electrical Key Oscillator RH	
z	27	Rear Door Outside Handle Assembly LH	
z	28	Rear Door Electrical Key Oscillator LH	
z	31	Rear Blower with Fan Motor Sub-Assembly	
z	32	Blower Motor Control	
z	33	Rear Cooling Unit Expansion Valve	
z	37	Rear No.1 Cooler Thermistor RH	
z	38	Rear No.1 Cooler Thermistor LH	


Position of Parts in Body

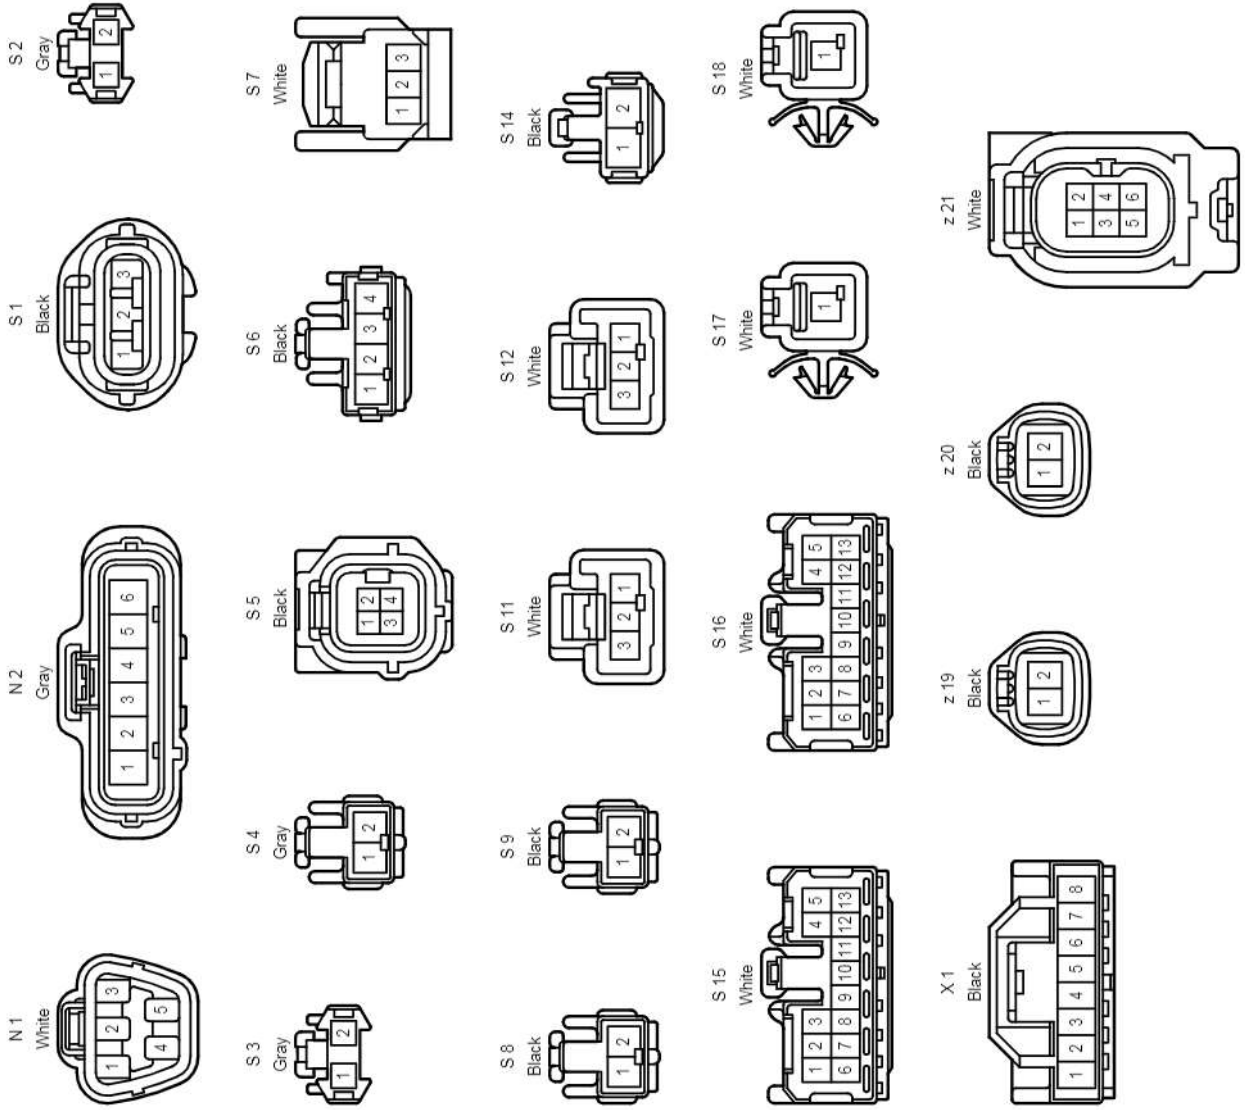


cardiagn.com

Position of Parts in Body


z 26
Black

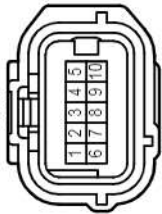


z 27
White

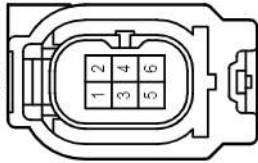


z 28
Black

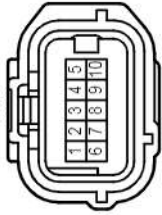

z 31
Black

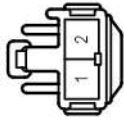

z 32
Black

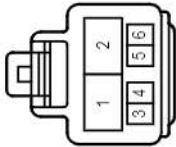


z 37
White




z 38
White





z 33
Black

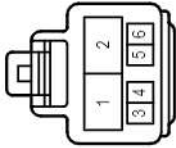


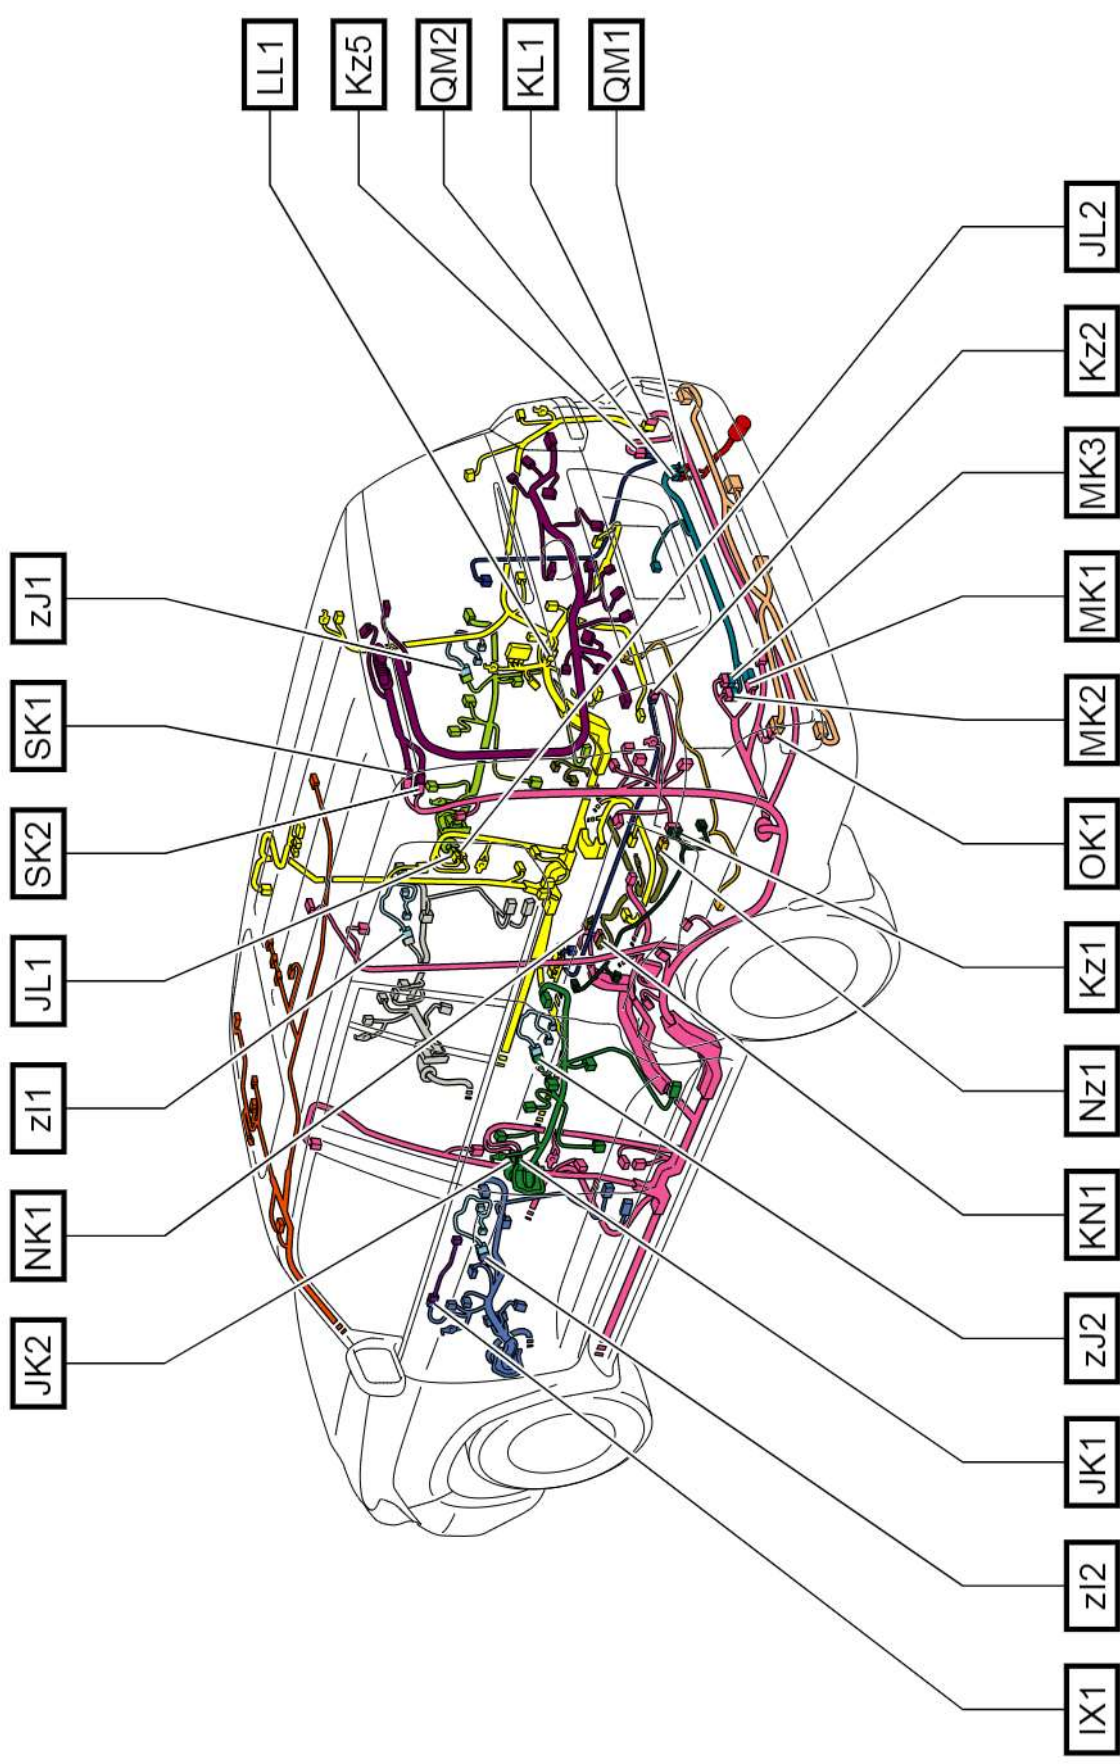


Wire and Wire in Body



IX1
White

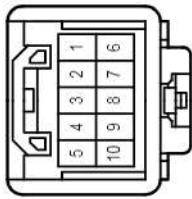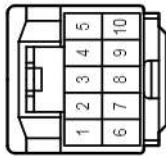



JK1
White

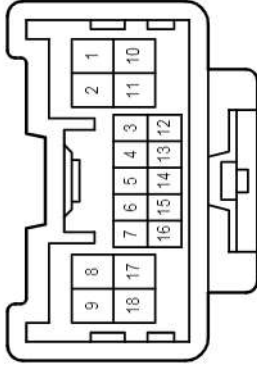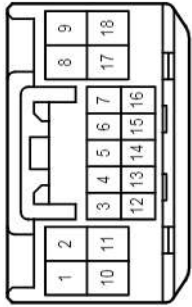



JK2
White

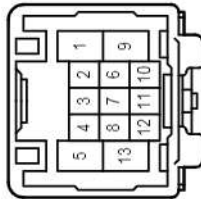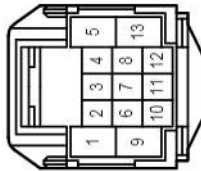



JL1
White

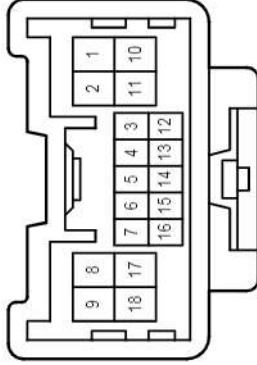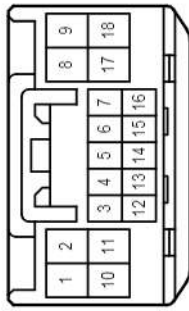


JL2
White

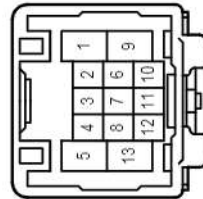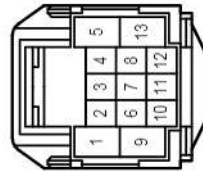



KL1
White

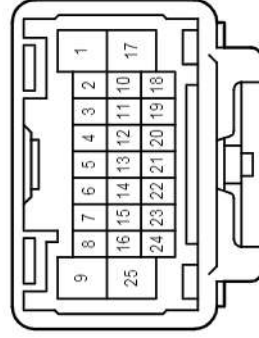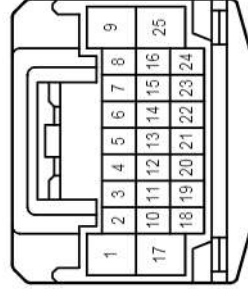


KN1
White

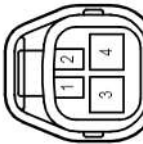


Kz1
Blue

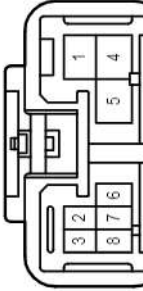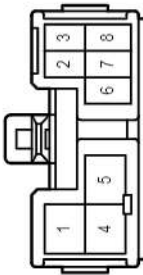

Wire and Wire in Body



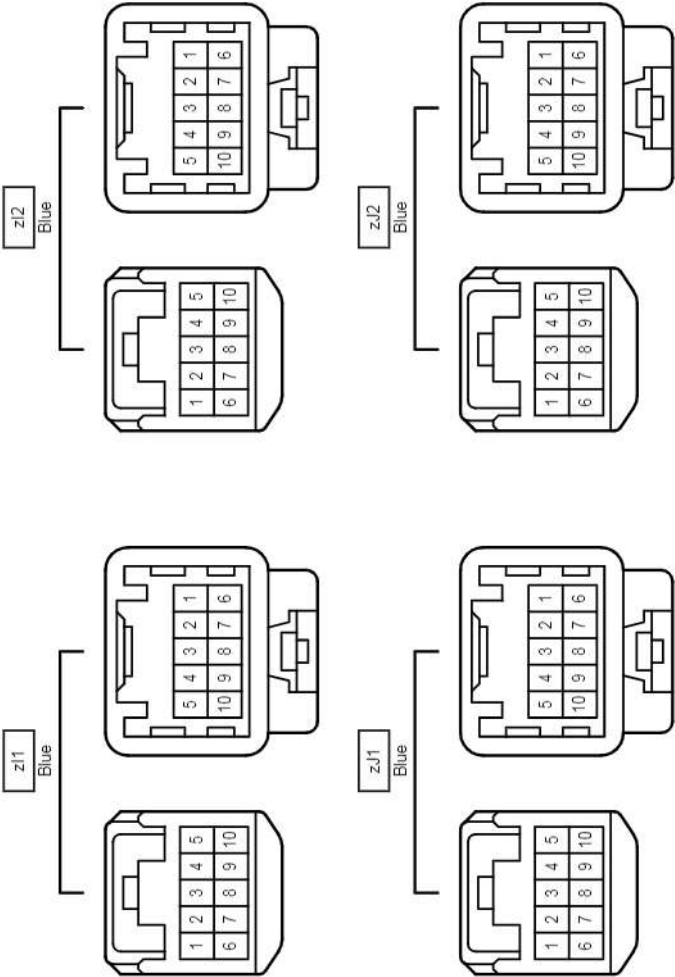


Position of Parts in Seat <Front Seat>

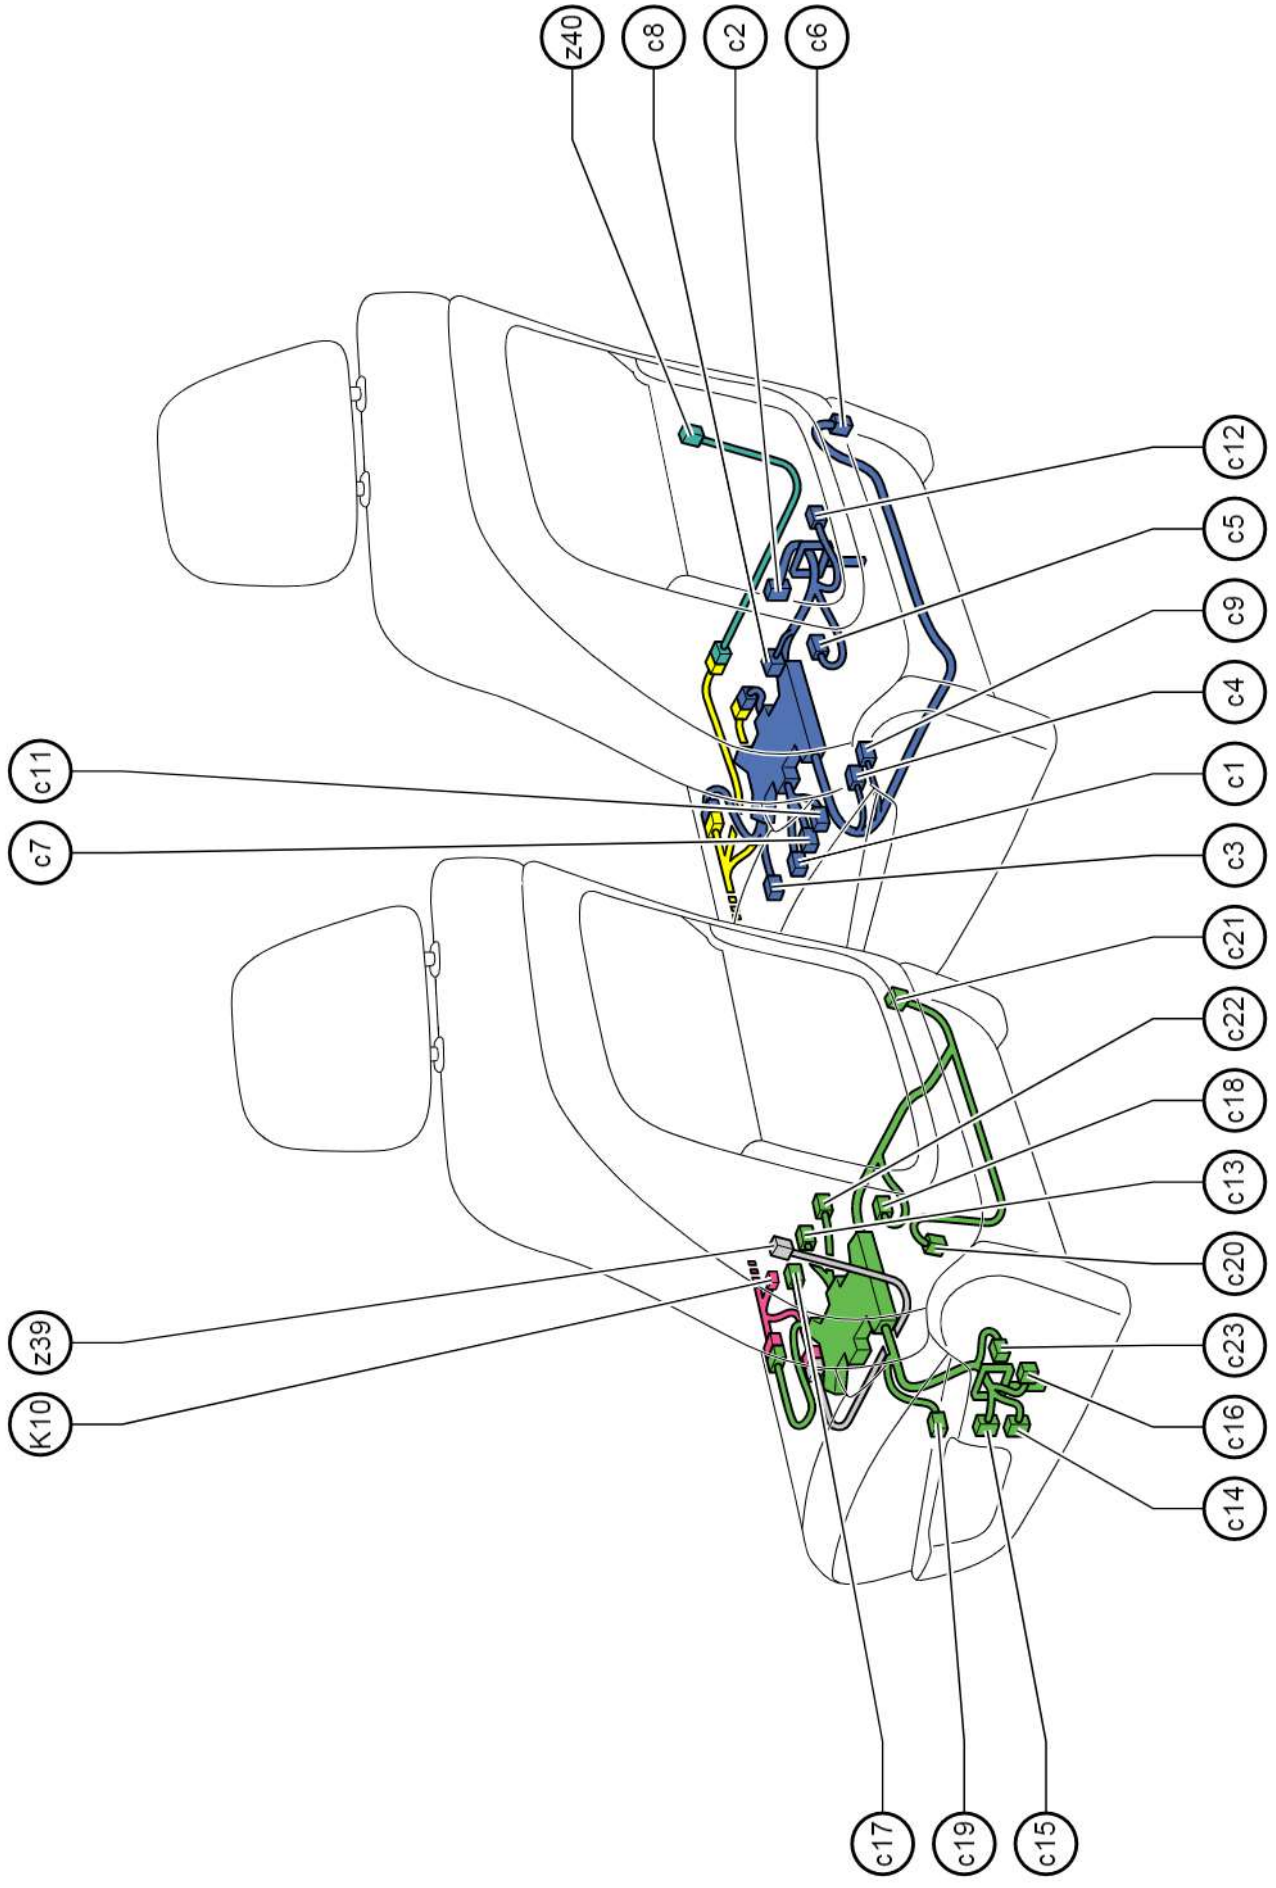



K	10	Front Seat Inner Belt Assembly LH
c	1	Front Seat Heater Assembly RH
c	2	Front Power Seat Switch Assembly RH
c	3	Front Power Seat Slide Position Motor Assembly RH
c	4	Front Power Seat Lift Position Motor Assembly RH
c	5	Front Power Seat Vertical Position Motor Assembly RH
c	6	Front Power Seat Reclining Position Motor Assembly RH
c	7	Front Seat Inner Belt Assembly RH
c	8	Occupant Detection ECU
c	9	Occupant Detection Sensor
c	11	Front Seat Inner Belt Assembly RH
c	12	Junction Connector
c	13	Front Seat Heater Assembly LH
c	14	Front Position Control ECU and Switch Assembly LH
c	15	Front Position Control ECU and Switch Assembly LH
c	16	Front Power Seat Switch Assembly LH
c	17	Front Power Seat Slide Position Motor Assembly LH
c	18	Front Power Seat Lift Position Motor Assembly LH
c	19	Front Power Seat Vertical Position Motor Assembly LH
c	20	Front Power Seat Reclining Position Motor Assembly LH
c	21	Front Lumbar Support Forward and Back Motor Assembly LH
c	22	Front Seat Inner Belt Assembly LH
c	23	Junction Connector
z	39	Front Side Airbag Squib Circuit LH
z	40	Front Side Airbag Squib Circuit RH

Position of Parts in Seat <Front Seat>

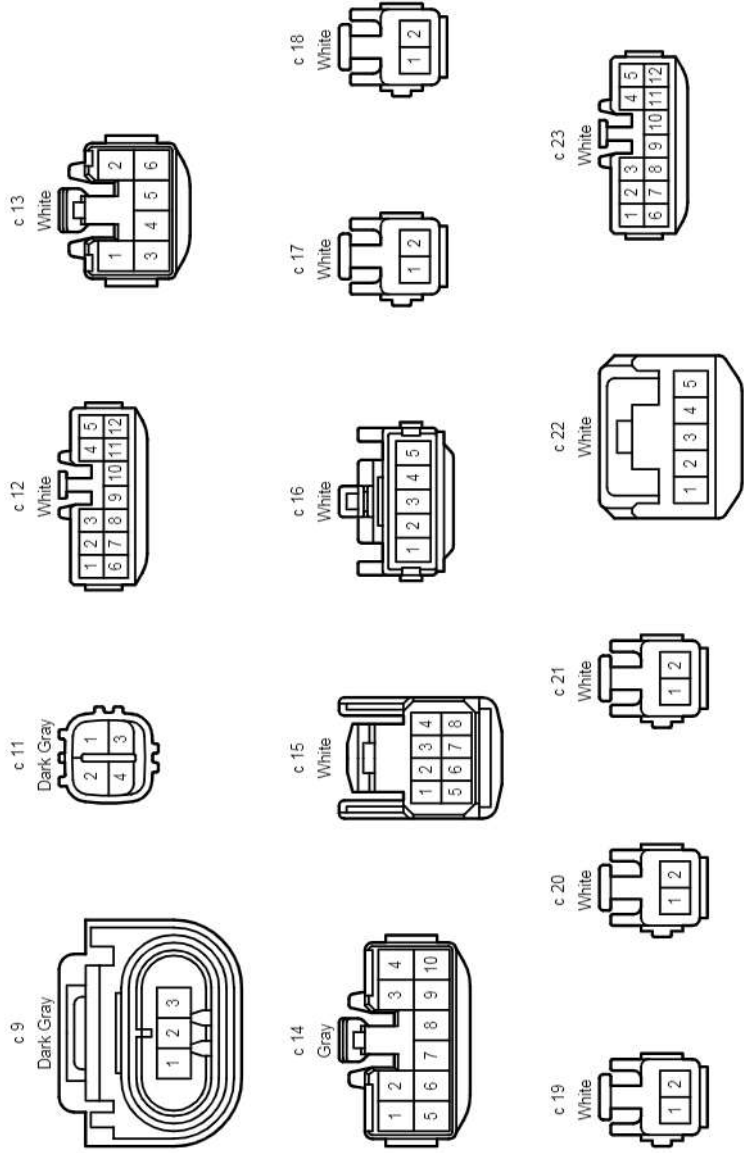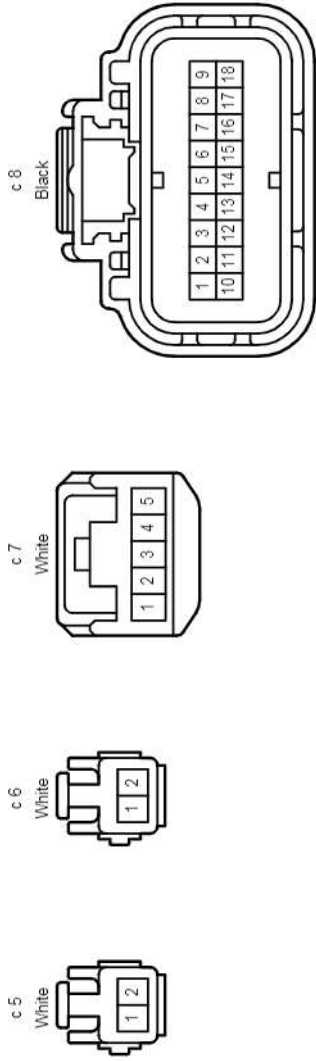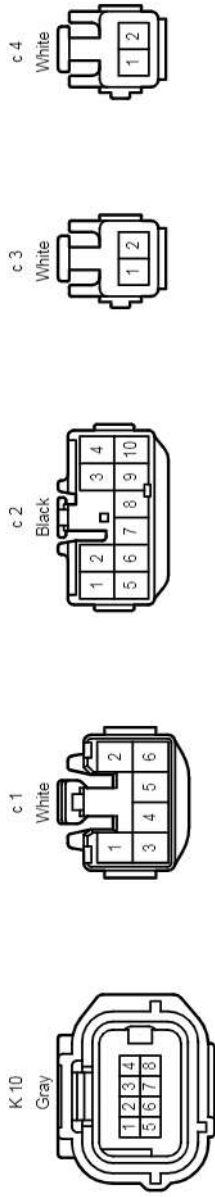


cardiagn.com

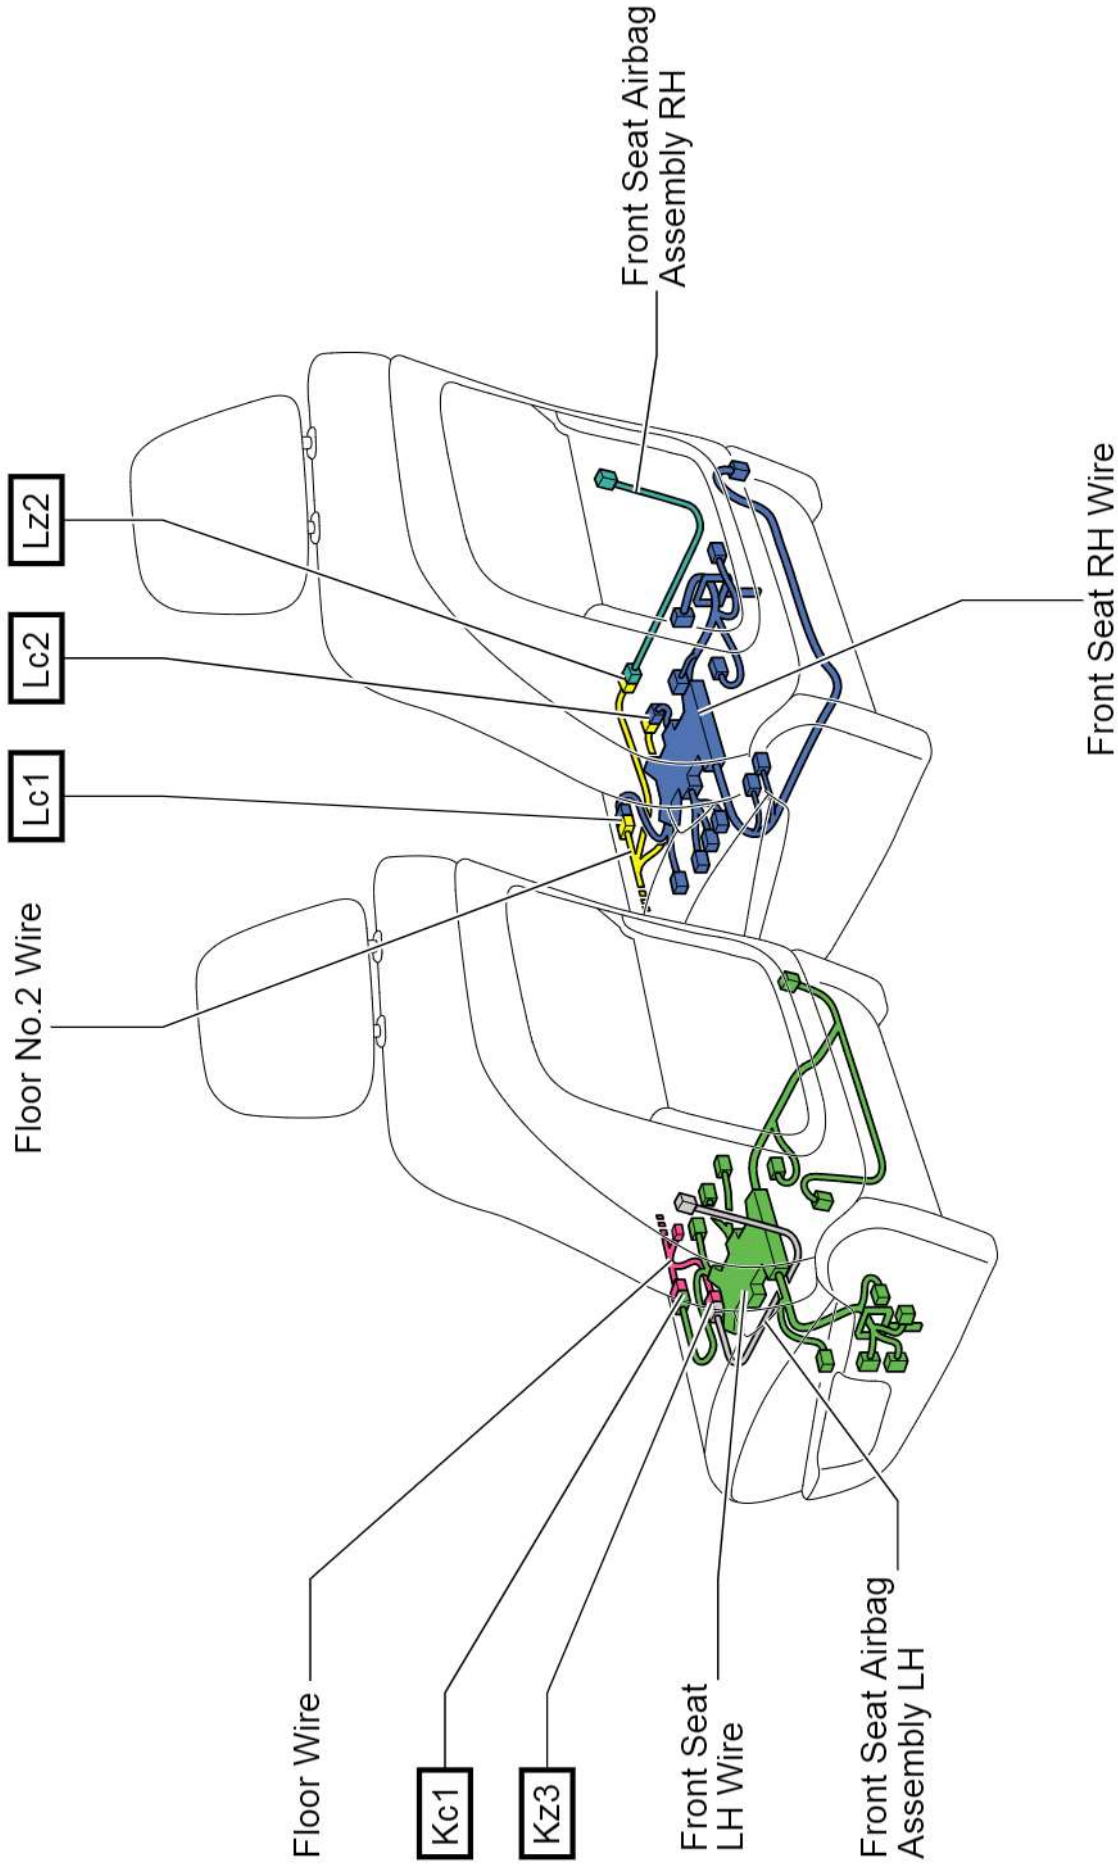

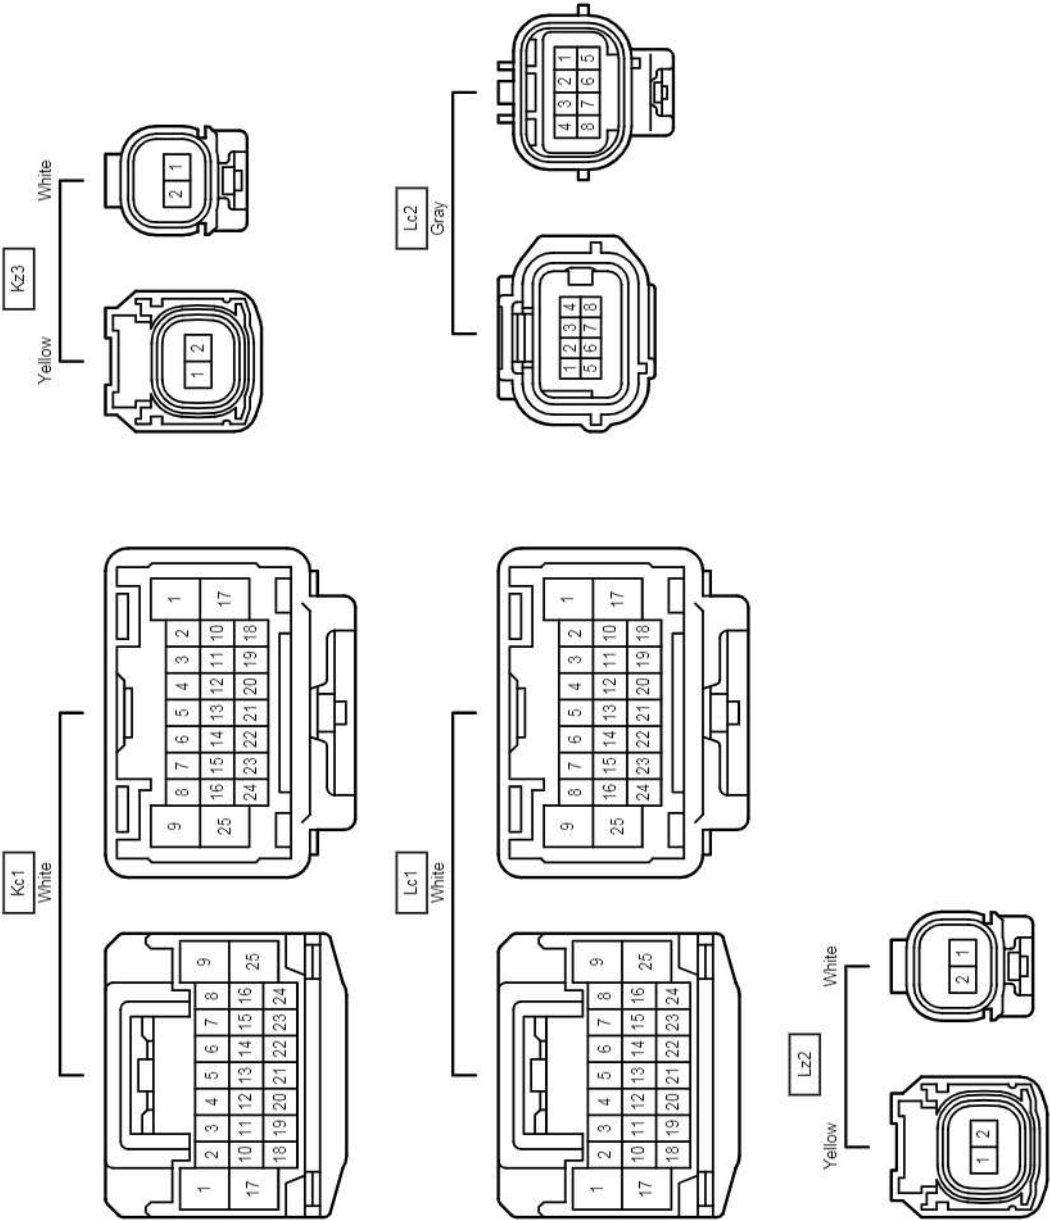






















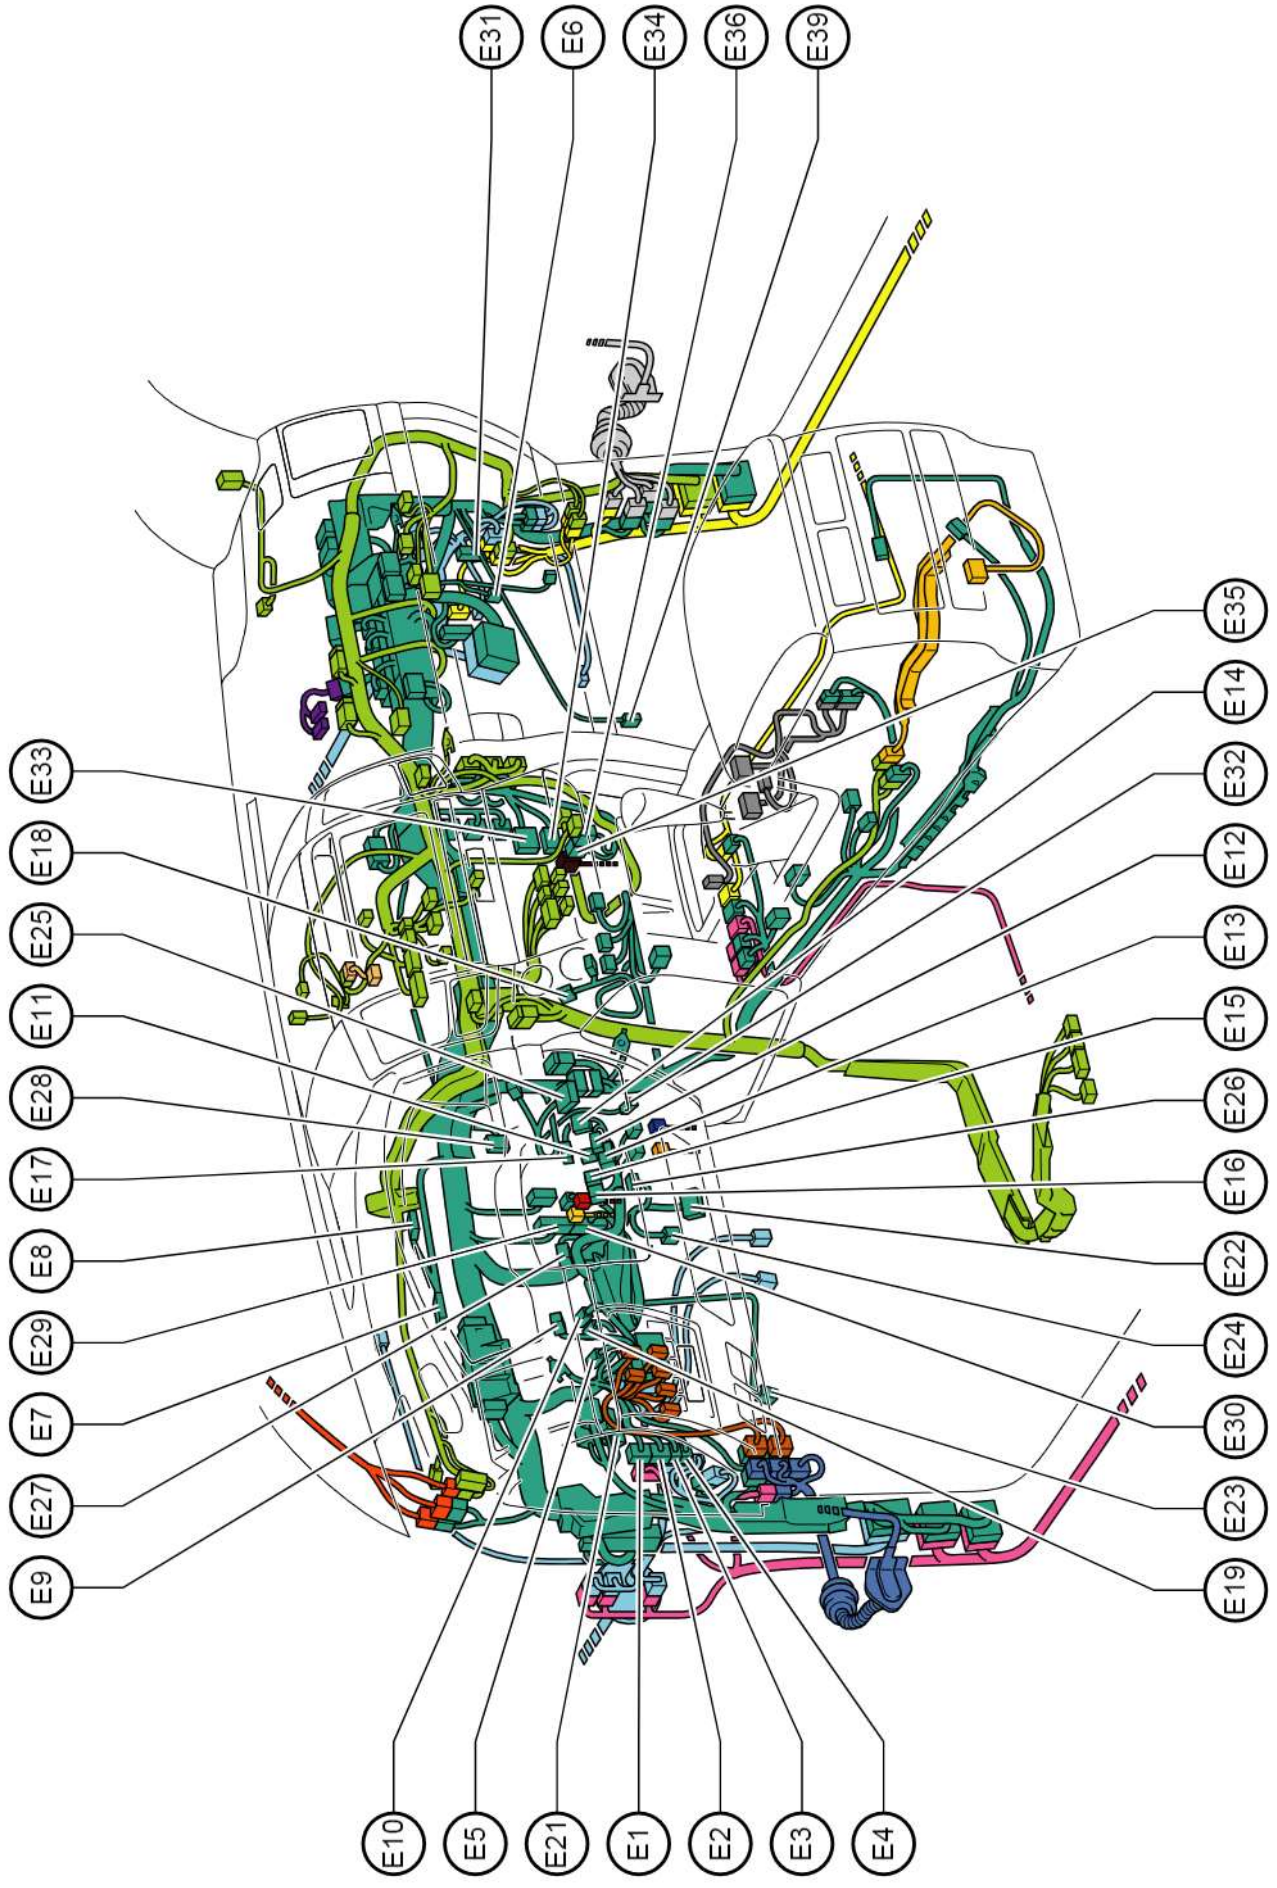

Position of Parts in Instrument Panel


E 1	Main Body ECU	E 23	Tire Pressure Warning Reset Switch
E 2	Main Body ECU	E 24	Lower No.1 Instrument Panel Airbag Assembly
E 3	Main Body ECU	E 25	VSC Off Switch
E 4	Main Body ECU	E 26	Steering Lock Actuator Assembly
E 5	Skid Control Buzzer Assembly	E 27	Multiplex Tilt and Telescopic ECU
E 6	Option Connector (Bus Buffer)	E 28	ID Code Box
E 7	Combination Meter Assembly	E 29	Certification ECU Assembly
E 8	Combination Meter Assembly	E 30	Certification ECU Assembly
E 9	Light Control Rheostat	E 31	Network Gateway ECU
E 10	No.1 Clearance Warning Buzzer	E 32	Room Temperature Sensor
E 11	Steering Sensor	E 33	Quick Heater Assembly
E 12	Spiral Cable Sub-Assembly	E 34	Quick Heater Assembly
E 13	Spiral Cable Sub-Assembly	E 35	A/C Amplifier Assembly
E 14	Headlight Dimmer Switch Assembly	E 36	A/C Amplifier Assembly
E 15	Windshield Wiper Switch Assembly	E 39	Glove Box Light Assembly
E 16	Windshield Wiper Switch Assembly		
E 17	Power Tilt Motor		
E 18	Engine Switch		
E 19	Turn Signal Flasher Assembly		
E 21	Towing Brake Controller		
E 22	DLC3		

   Position of Parts in Instrument Panel

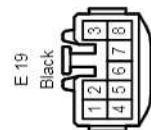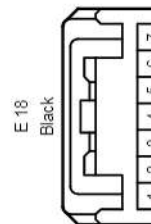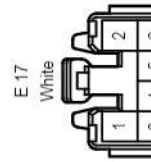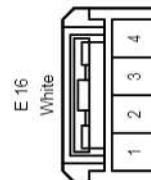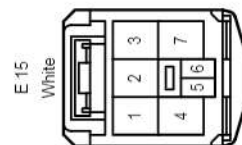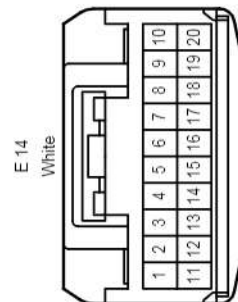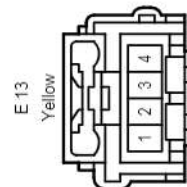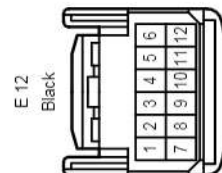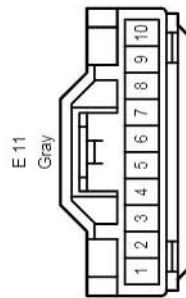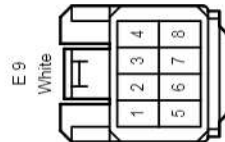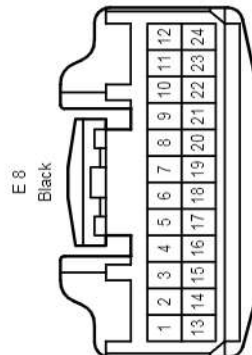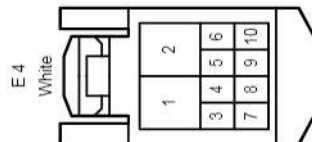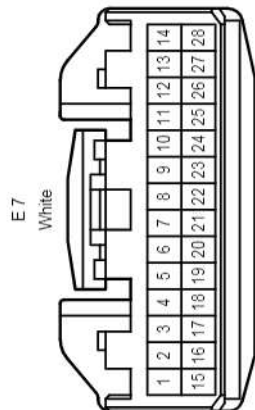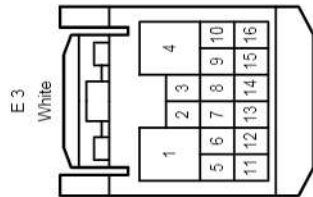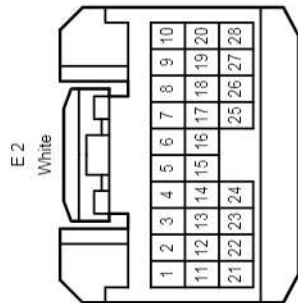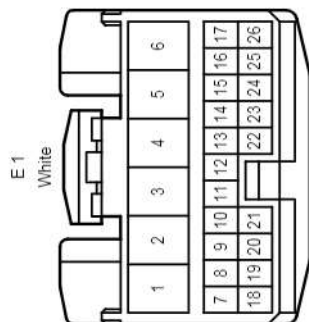


Position of Parts in Instrument Panel


E 21
White

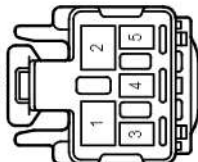


E 22
White

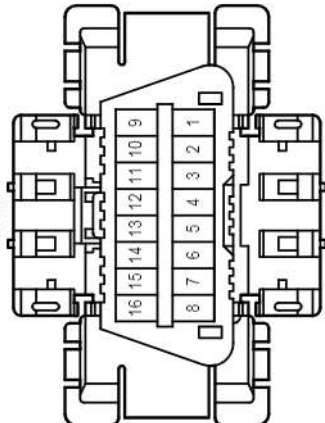


E 23
Black

 


E 24
Black

 


E 25
Black

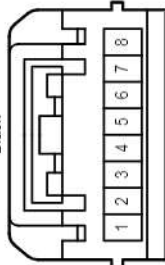


E 26
Black

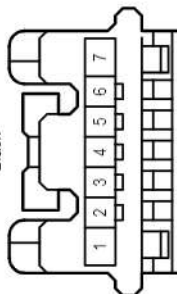


E 27
White

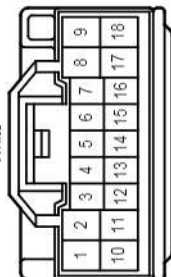


E 28
White

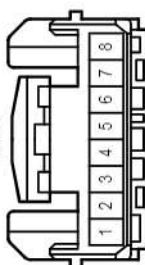


E 29
White

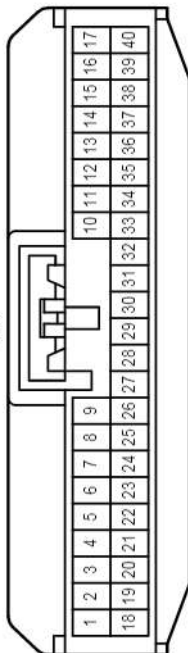

E 30
White

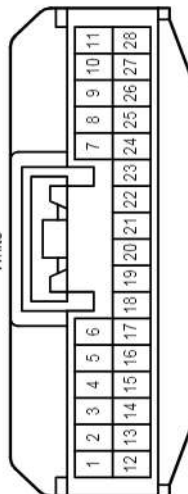


E 31
White

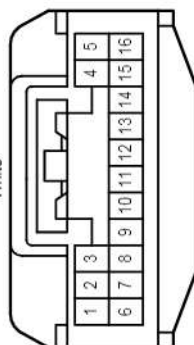


E 32
Black




E 33
White


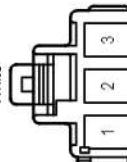


E 34
White

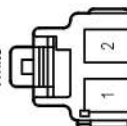


E 35
White

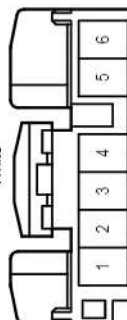

 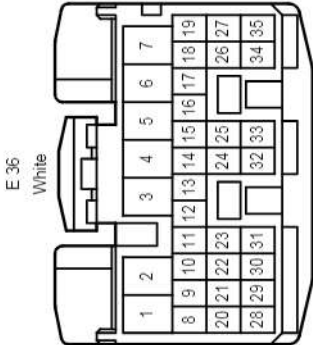

E 36
White

E 39
Black

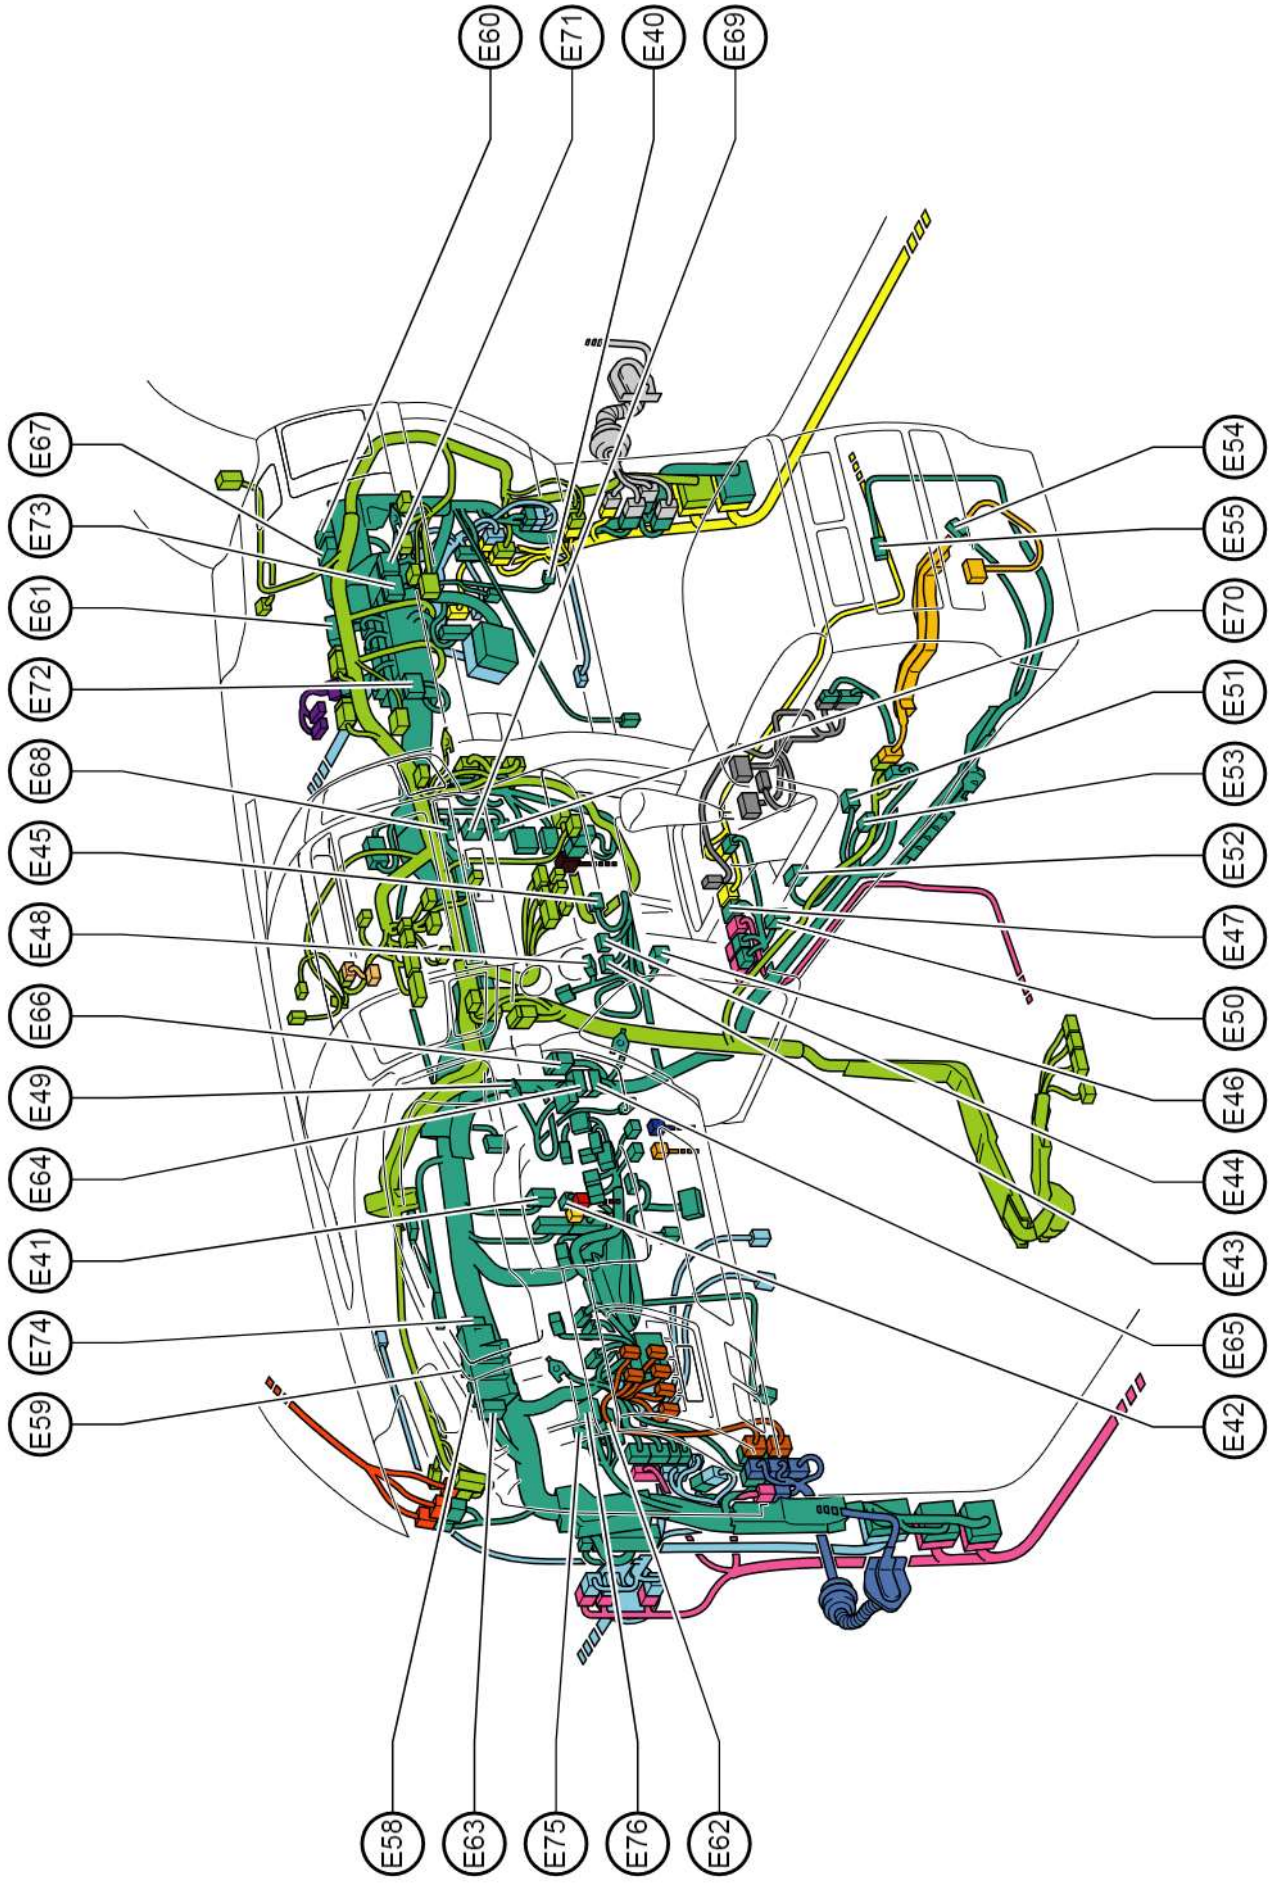

Position of Parts in Instrument Panel

E 40 Lower No.2 Instrument Panel Airbag Assembly

E 41 Seat Belt Control ECU

E 42 Seat Belt Control ECU

E 43 Cigarette Lighter Assembly

E 44 Cigarette Lighter Illumination Assembly

E 45 Ash Receptacle Light Sub-Assembly

E 46 Power Outlet Socket Assembly

E 47 Center Airbag Sensor Assembly

E 48 Transfer Position Switch

E 49 Center Differential Lock Switch

E 50 Yaw Rate Sensor Assembly

E 51 Shift Lock Control ECU Sub-Assembly

E 52 Transmission Control Switch

E 53 Parking Brake Switch Assembly

E 54 Cooling Box Assembly

E 55 No.2 A/C Control Assembly

E 58 Junction Connector

E 59 Junction Connector

E 60 Junction Connector

E 61 Junction Connector

E 62 Junction Connector

E 63 Junction Connector

E 64 Junction Connector

E 65 Junction Connector

E 66 Junction Connector

E 67 Junction Connector

E 68 Junction Connector

E 69 Junction Connector

E 70 Junction Connector

E 71 Junction Connector

E 72 Junction Connector





E 73 Junction Connector

E 74 Junction Connector

E 75 Junction Connector


E 76 Junction Connector

Position of Parts in Instrument Panel

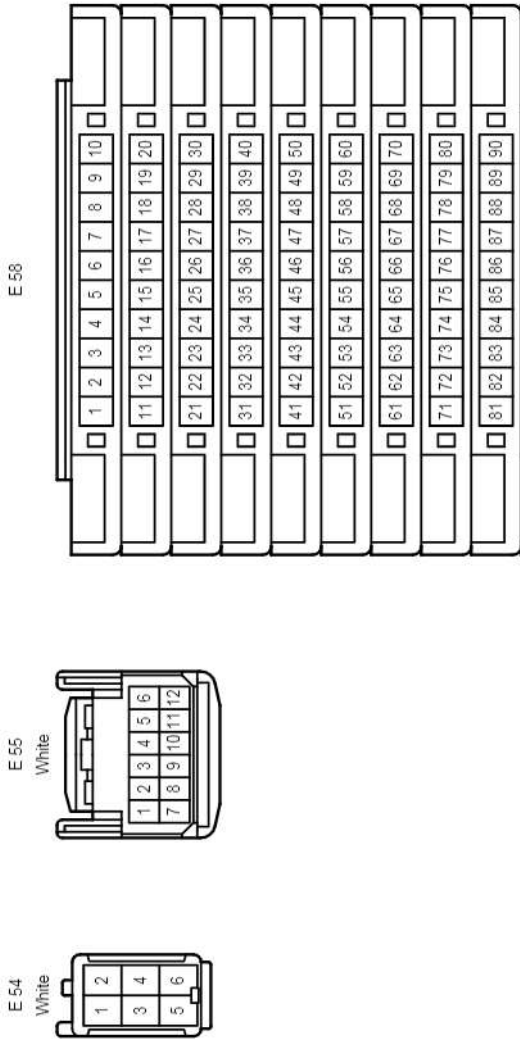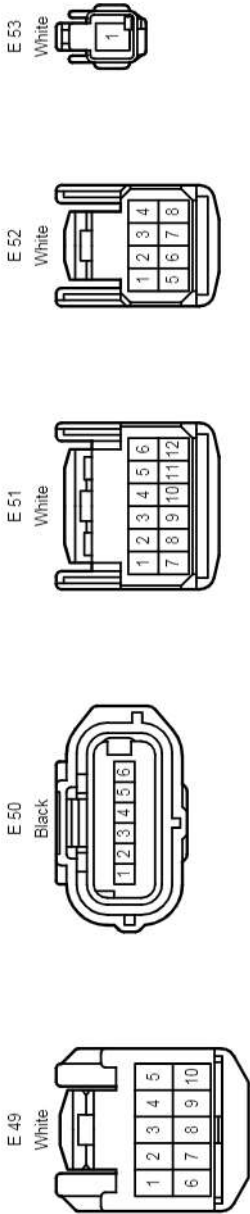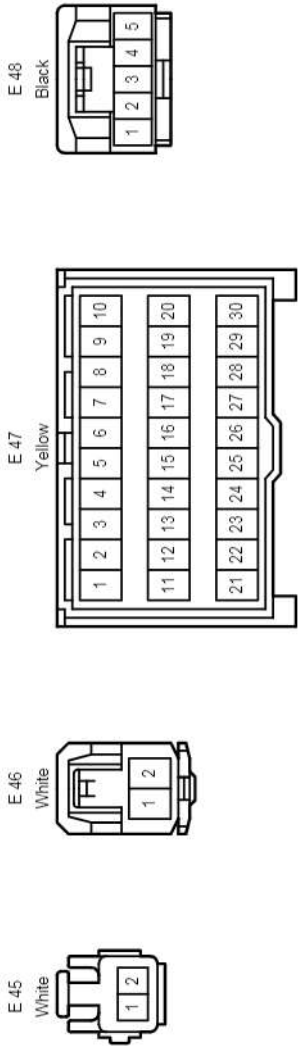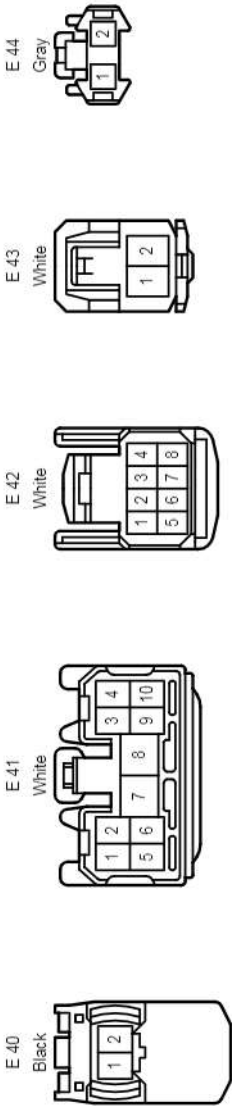


Position of Parts in Instrument Panel


E 59

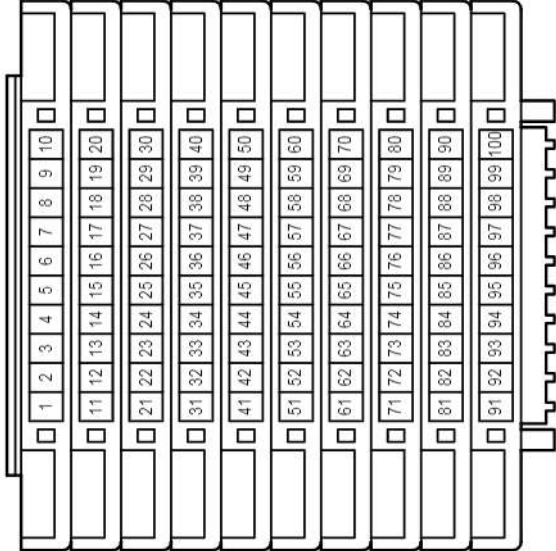


E 60

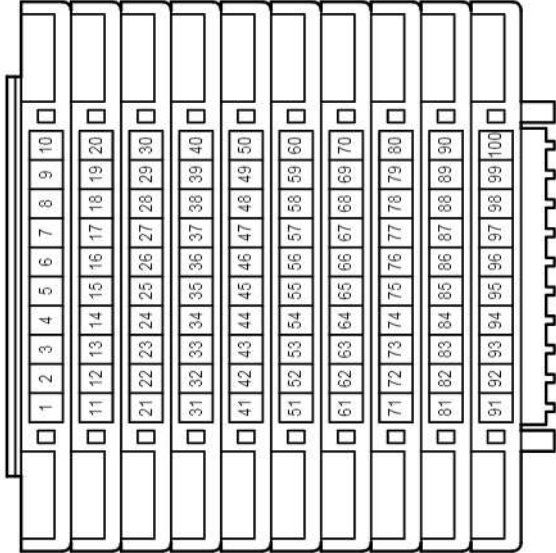


E 61

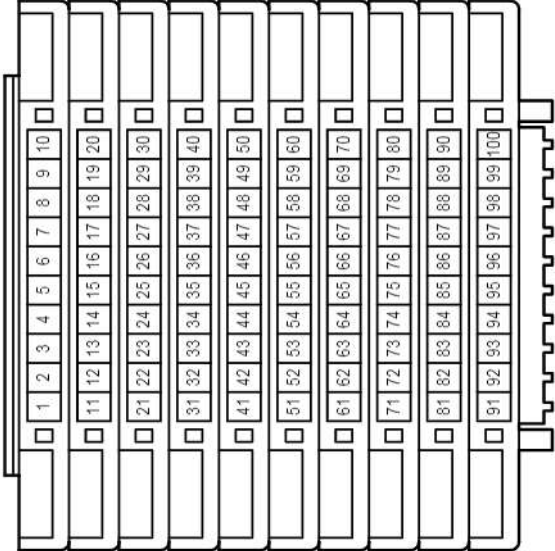


E 62
White

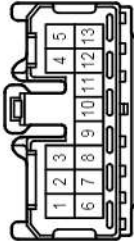

E 63
Gray

 


E 64
Black

 


E 65
Black



 E 66
White




E 67
White

 


cardiagn.com

Position of Parts in Instrument Panel


E 71
Gray

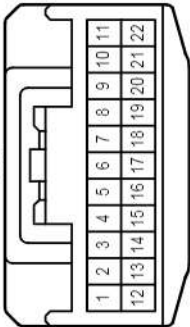


E 72
Gray

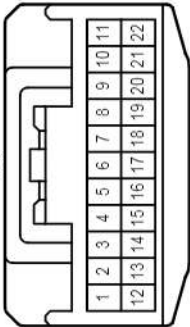


E 73
Gray

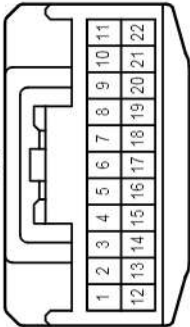


E 74
Gray

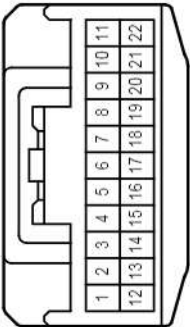


E 75
Gray

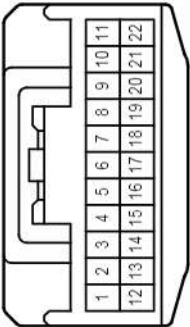

E 76
Gray

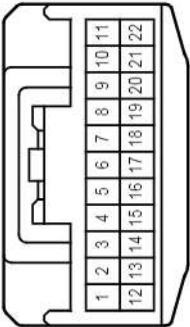


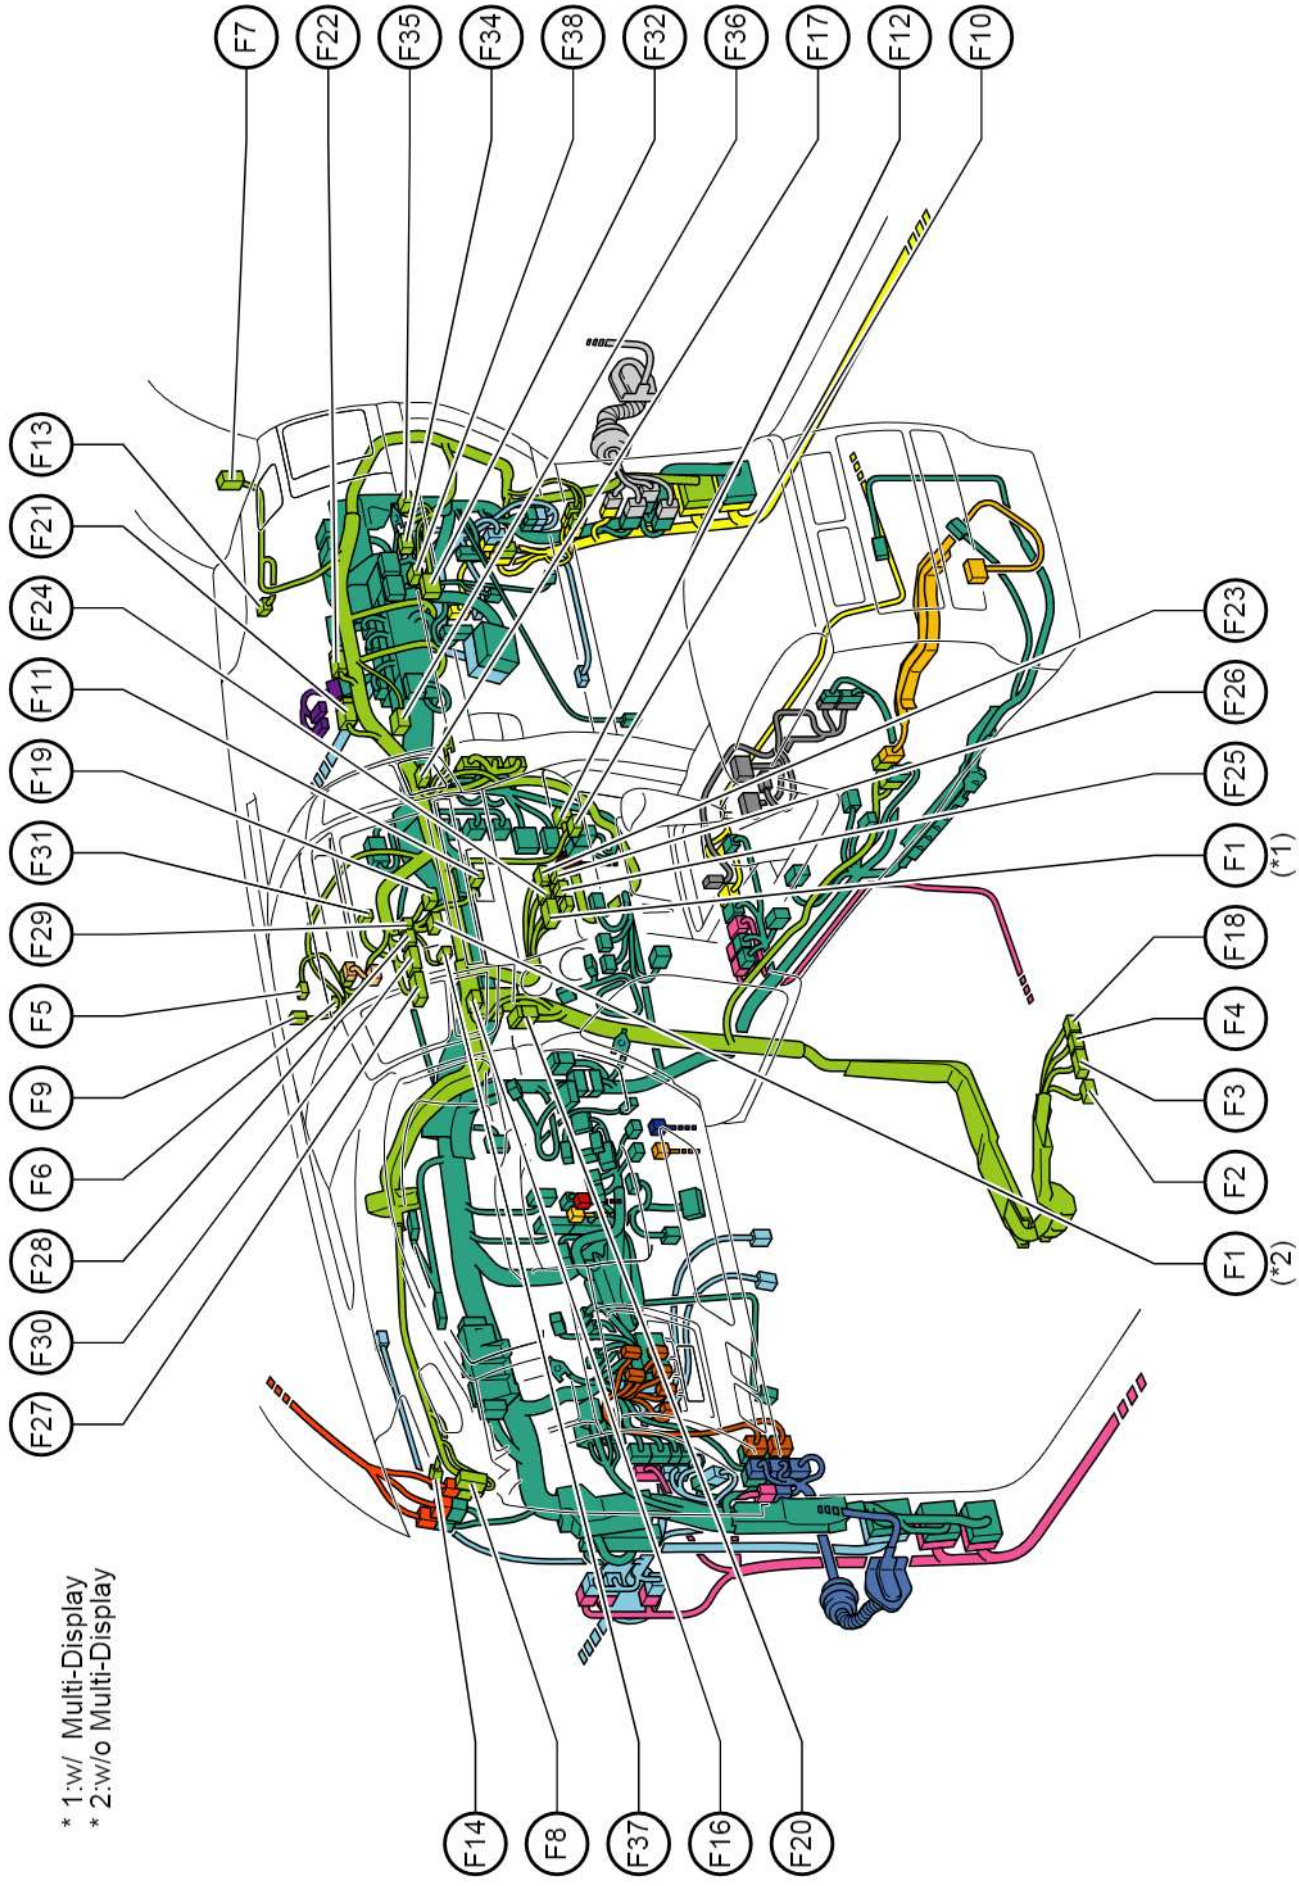

Position of Parts in Instrument Panel


F 1	Radio Receiver Assembly
F 2	Stereo Component Amplifier Assembly
F 3	Stereo Component Amplifier Assembly
F 4	Stereo Component Amplifier Assembly
F 5	Amplifier Antenna Assembly
F 6	Front No.4 Speaker Assembly
F 7	Front No.2 Speaker Assembly RH
F 8	Front No.2 Speaker Assembly LH
F 9	Automatic Light Control Sensor
F 10	A/C Control Assembly
F 11	Hazard Warning Signal Switch Assembly
F 12	Clearance Warning ECU Assembly
F 13	Front No.3 Speaker Assembly RH
F 14	Front No.3 Speaker Assembly LH
F 16	Temperature Control Switch Assembly LH
F 17	Temperature Control Switch Assembly RH
F 18	Stereo Component Amplifier Assembly
F 19	Radio Receiver Assembly
F 20	Junction Connector
F 21	Junction Connector
F 22	Junction Connector
F 23	Radio Receiver Assembly
F 24	Radio Receiver Assembly
F 25	Radio Receiver Assembly
F 26	Radio Receiver Assembly
F 27	Multi-Display
F 28	Multi-Display
F 29	Multi-Display
F 30	Multi-Display
F 31	Multi-Display
F 32	Navigation ECU
F 34	Navigation ECU
F 35	Navigation ECU
F 36	Navigation Antenna Assembly
F 37	Multi-Display
F 38	Navigation ECU

Position of Parts in Instrument Panel

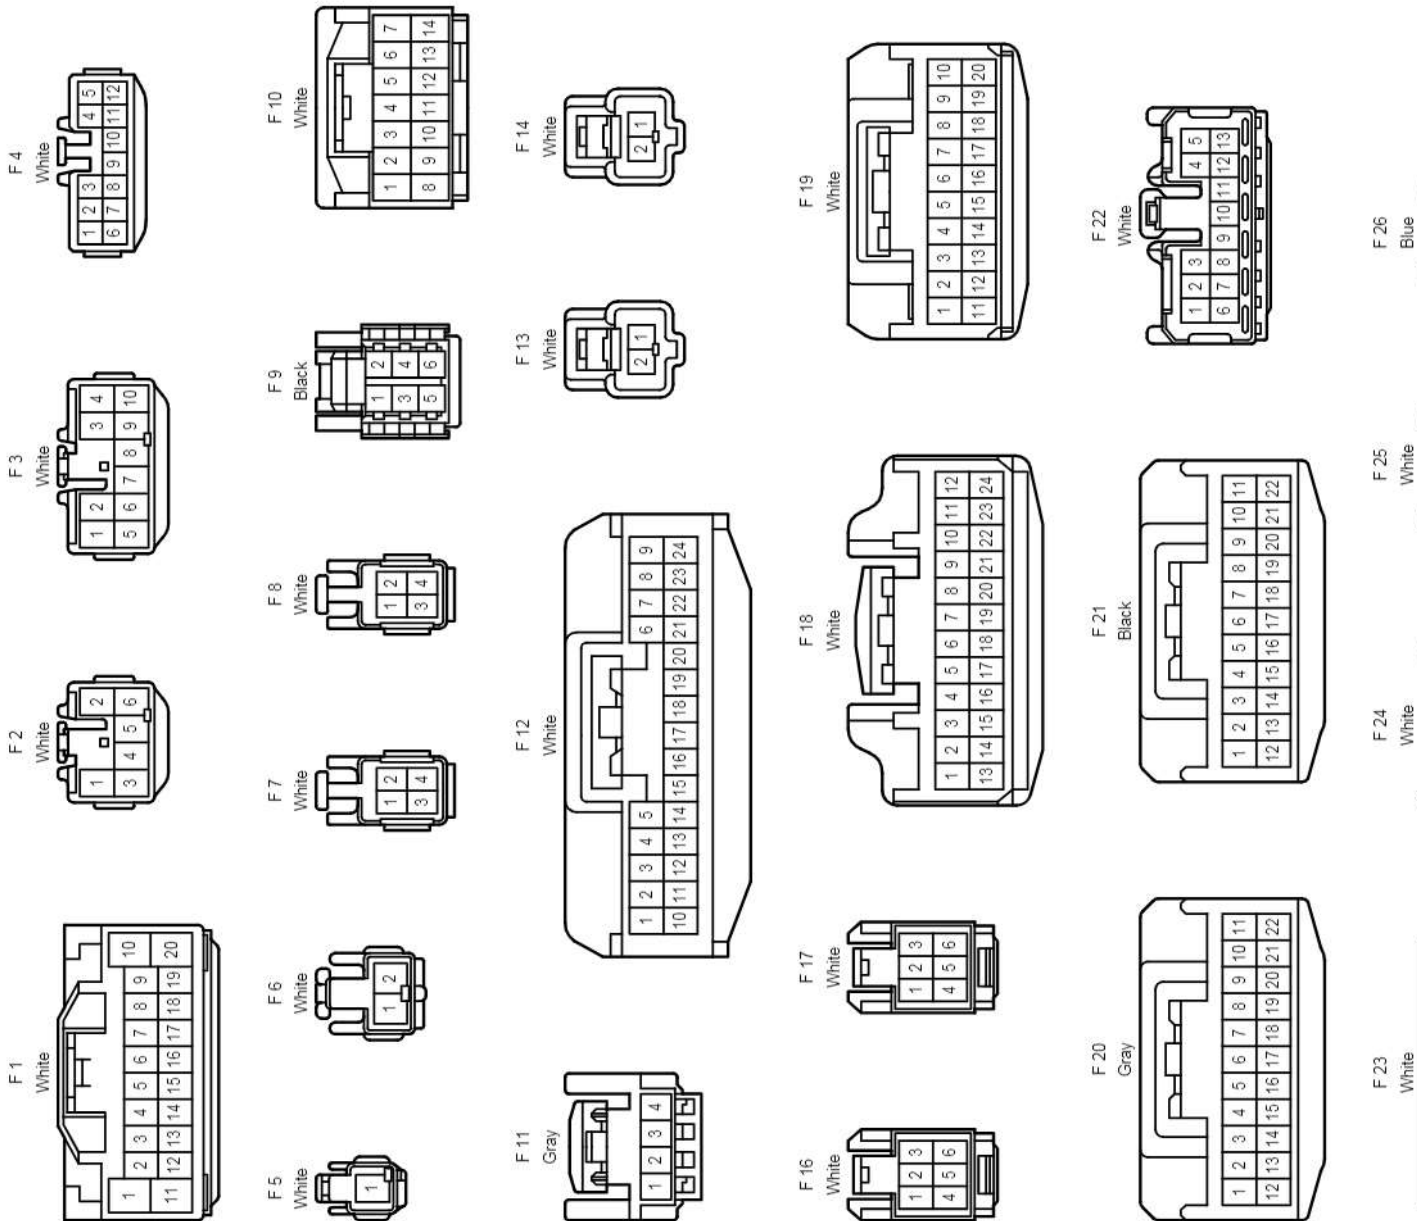


Position of Parts in Instrument Panel


F 27
White

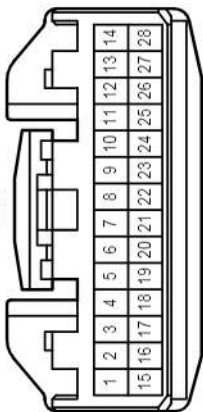


F 28
White

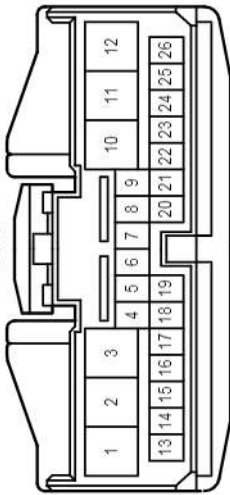


F 29
Blue

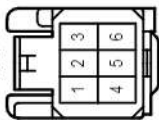


F 30
White

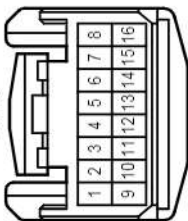


F 31
White

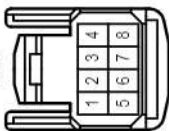


F 32
White

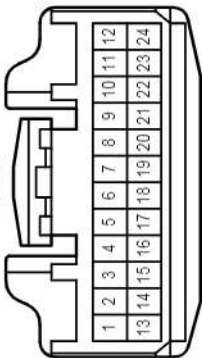


F 34
White

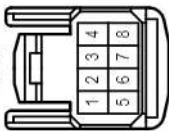

F 35
Gray

 


F 36
Gray

 

F 37
Blue



 F 38
White








Position of Parts in Instrument Panel








Position of Parts in Instrument Panel


A	27	Four Wheel Drive Control ECU
A	28	Four Wheel Drive Control ECU
A	29	Front Blower with Fan Motor Sub-Assembly
A	30	Stop Light Switch Assembly
A	31	Accelerator Pedal Sensor Assembly
A	39	Stop Light Control Relay Assembly
G	1	Outer Mirror Switch Assembly
G	2	Outer Mirror Switch Assembly
G	3	Curtain Airbag Cutoff Switch
G	4	Headlight Cleaner Switch Assembly
G	5	Back Sonar or Clearance Sonar Switch Assembly
G	6	Main Switch Assembly
K	27	Center Airbag Sensor Assembly
L	27	Center Airbag Sensor Assembly
P	1	Headphone Terminal
V	1	Seat Heater Switch
V	2	No.1 Stereo Jack Adapter Assembly
V	3	Front Indoor Electrical Key Oscillator
V	4	Suspension Control Switch
b	1	Front Passenger Side Squib Circuit
b	2	Front Passenger Side Squib Circuit
g	1	Clock Assembly
z	34	A/C Blower Assembly , A/C Amplifier Assembly
z	35	Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
z	36	Cruise Control Main Switch , Spiral Cable Sub-Assembly
z	43	Driver Side Squib 2nd Step Circuit , Spairal Cable Sub-Assembly
z	44	Driver Side Squib 2nd Circuit , Spairal Cable Sub-Assembly

Position of Parts in Instrument Panel

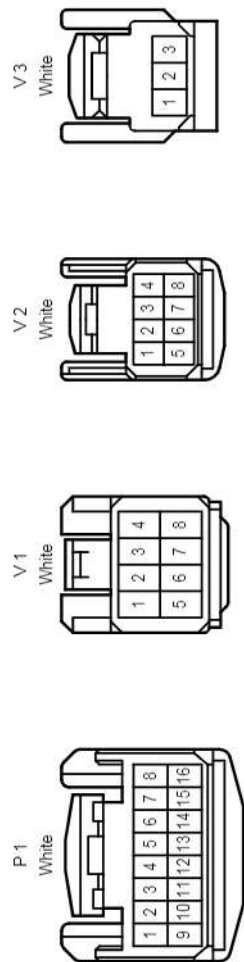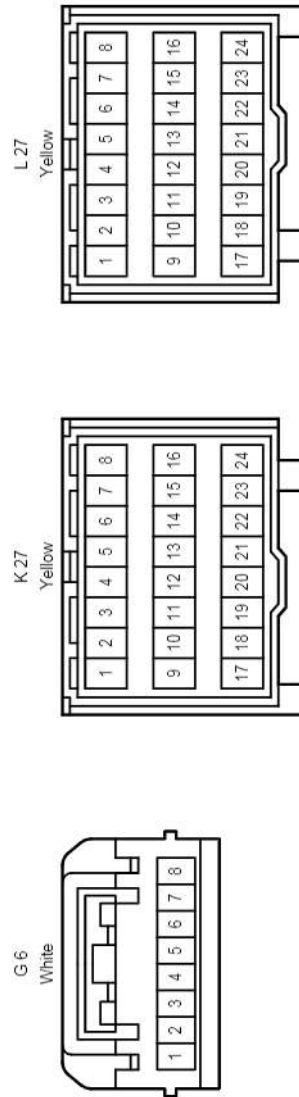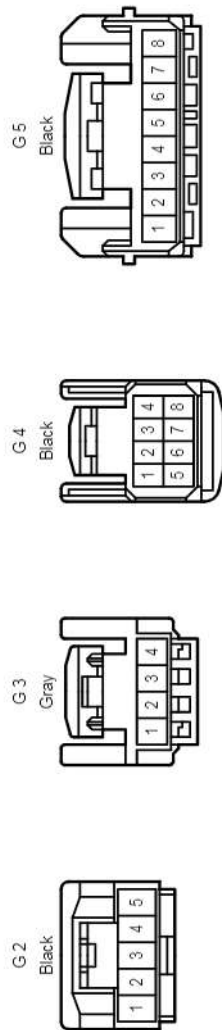
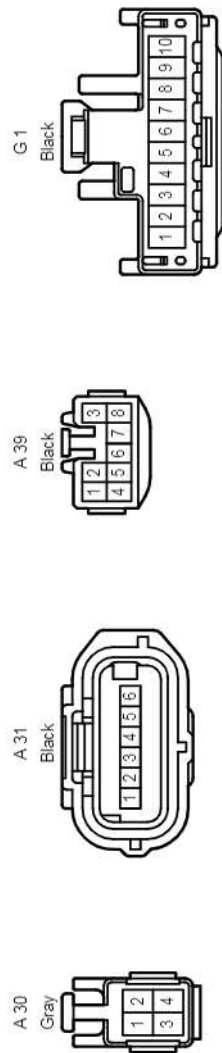
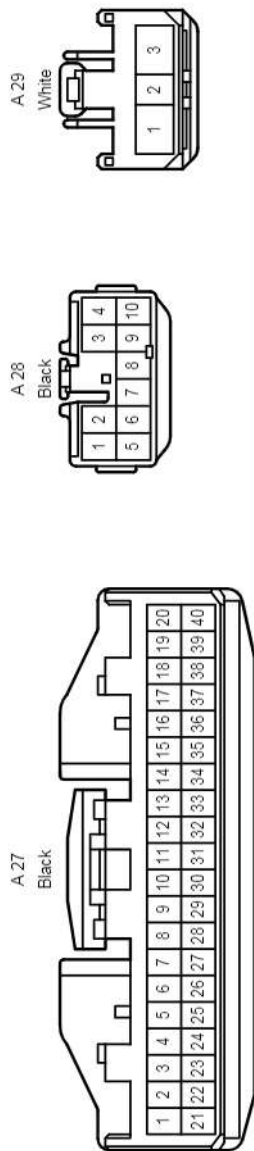


Position of Parts in Instrument Panel

   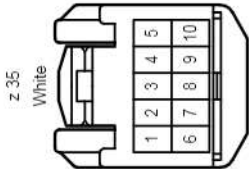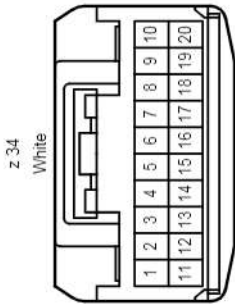

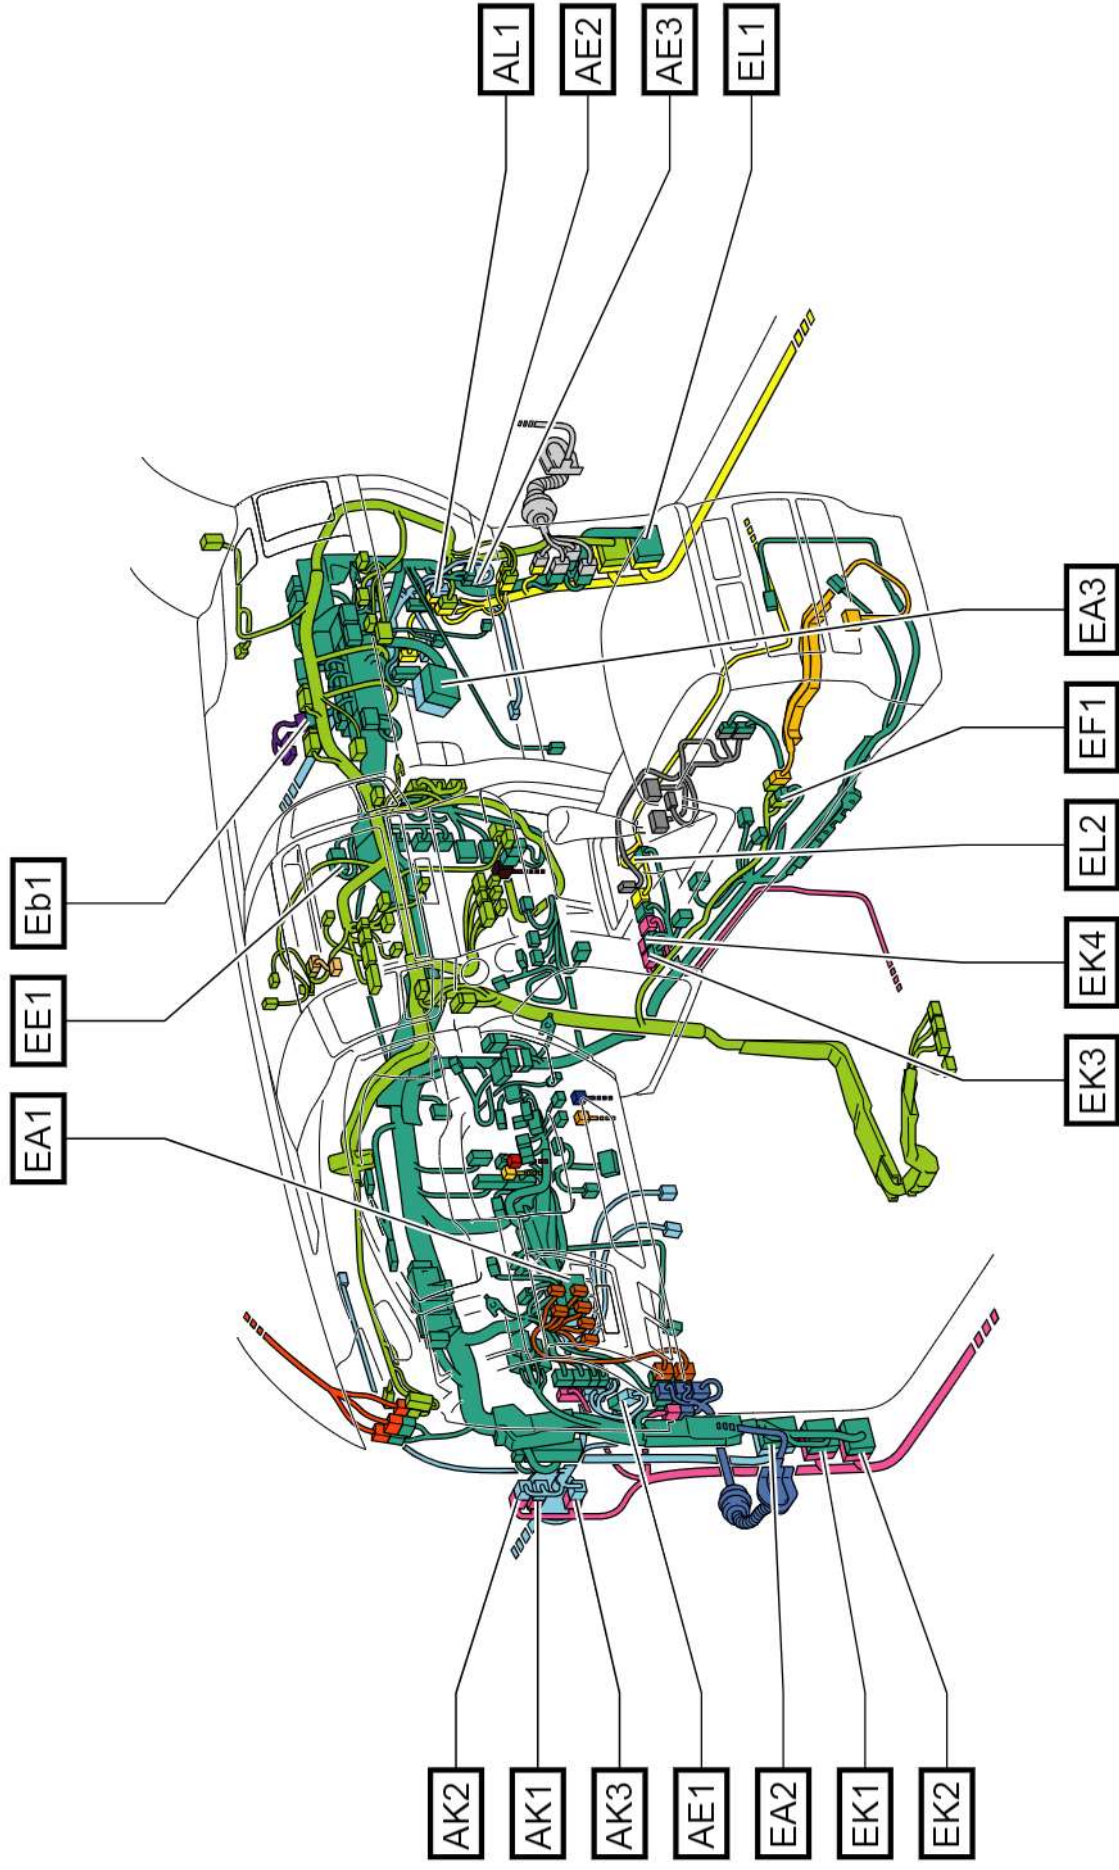


Wire and Wire in Instrument Panel

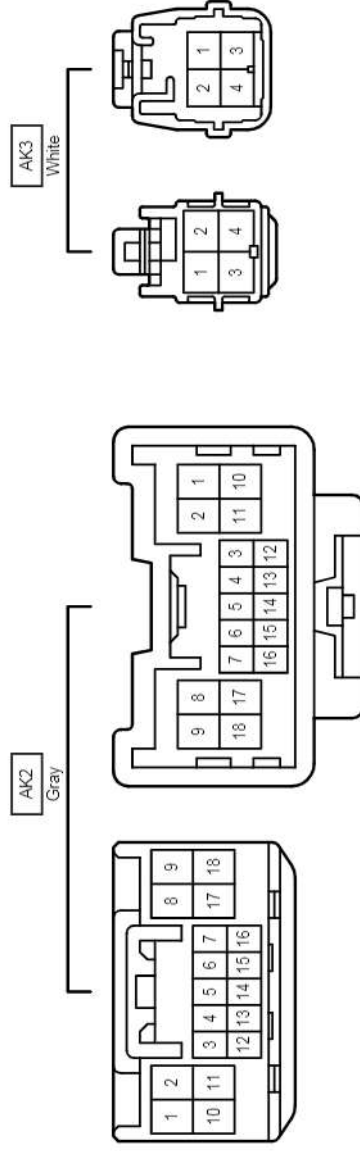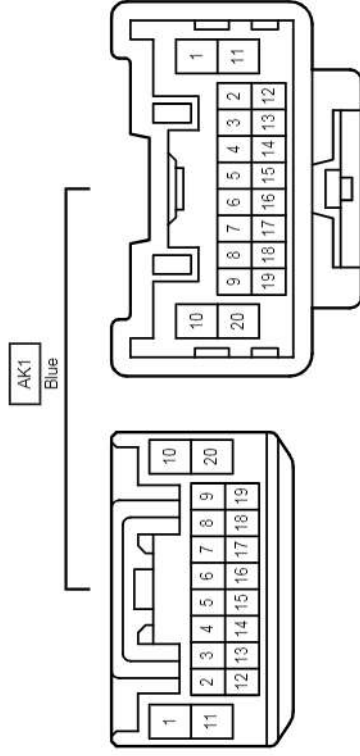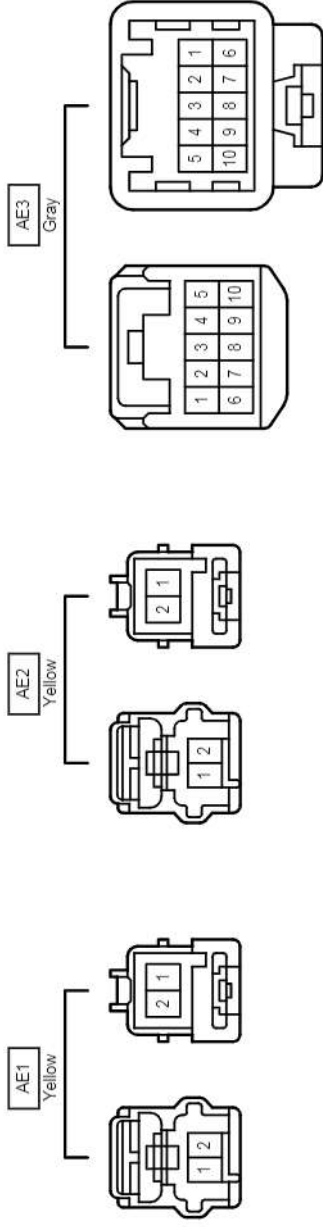


Wire and Wire in Instrument Panel

EA1
White

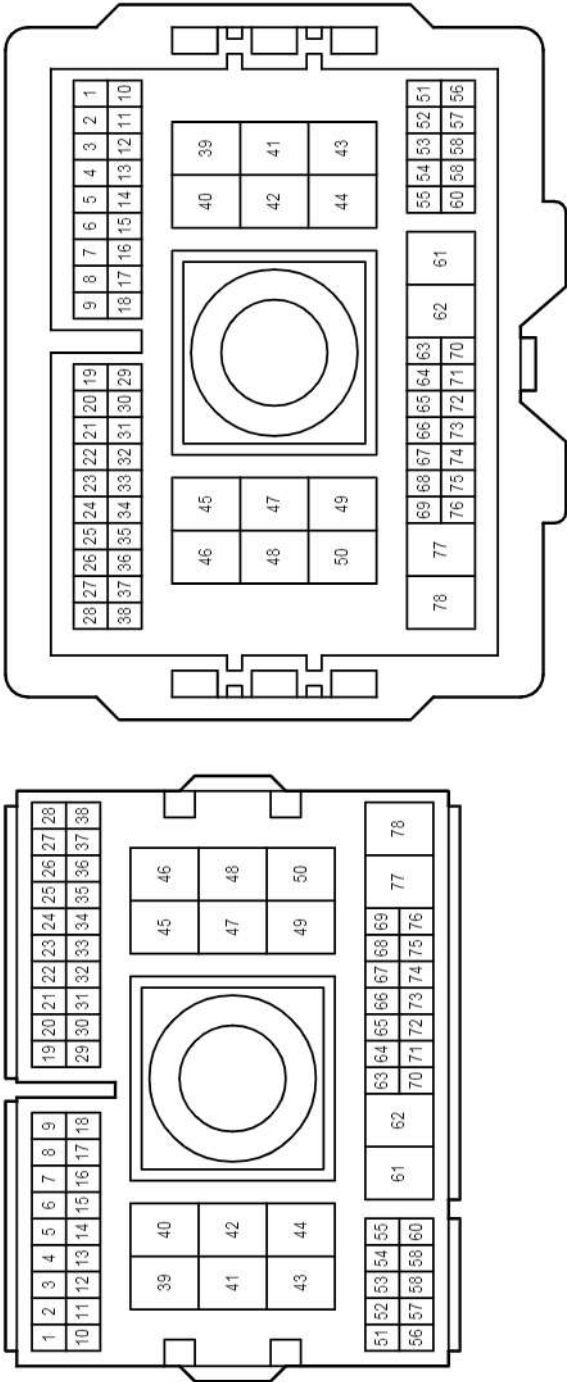


EA2
Gray

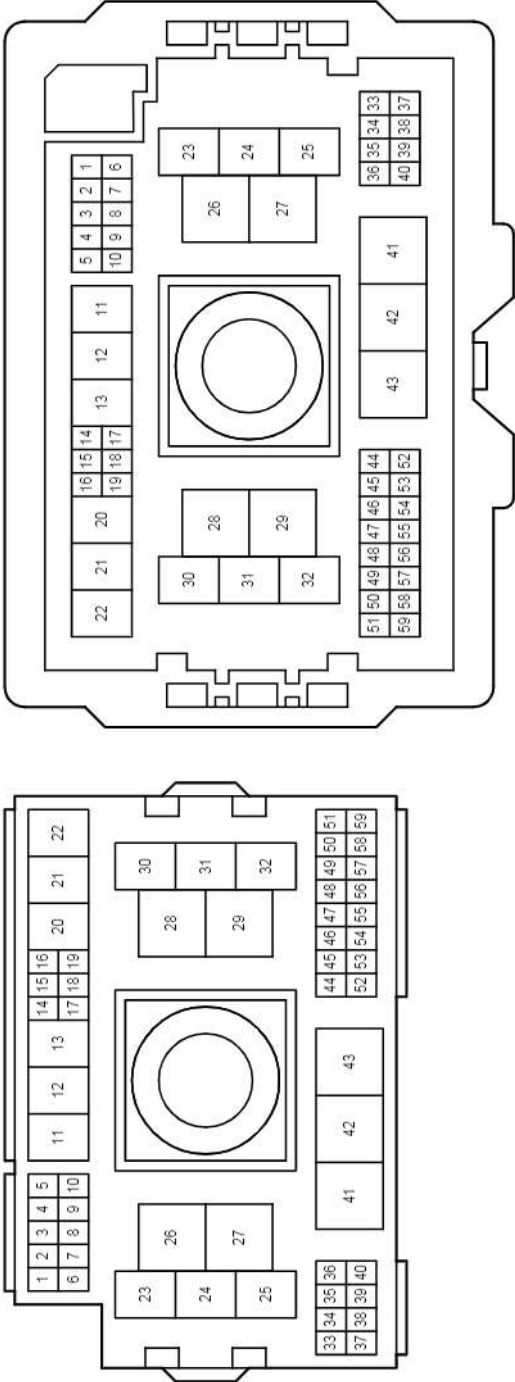





Wire and Wire in Instrument Panel

EA3
White

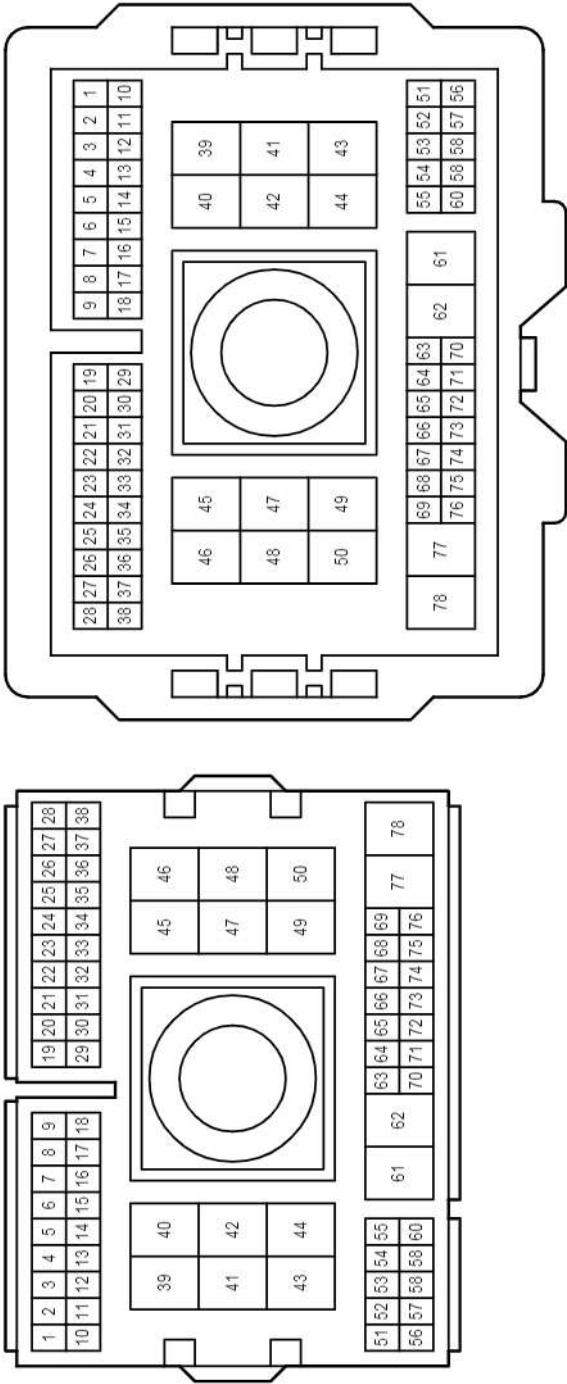


EE1
White

EF1
White

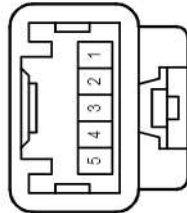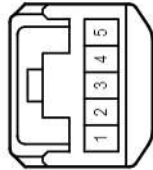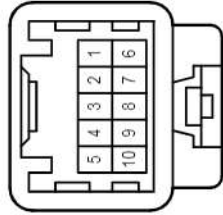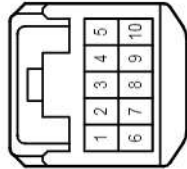



EK1
Blue

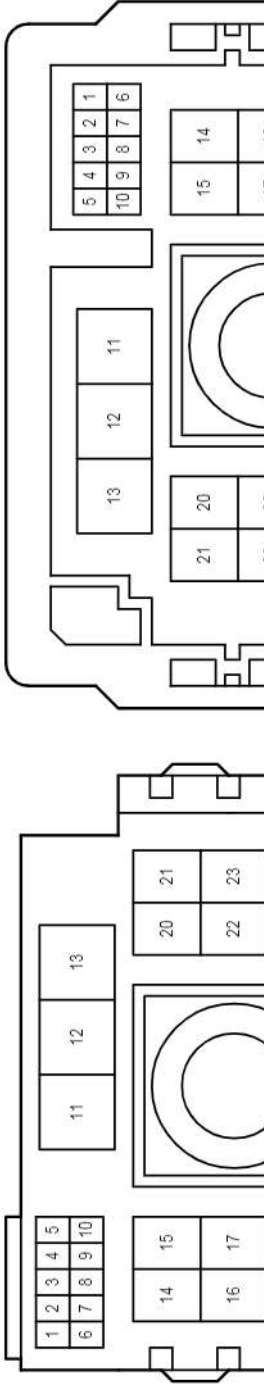



cardiagn.com

Wire and Wire in Instrument Panel

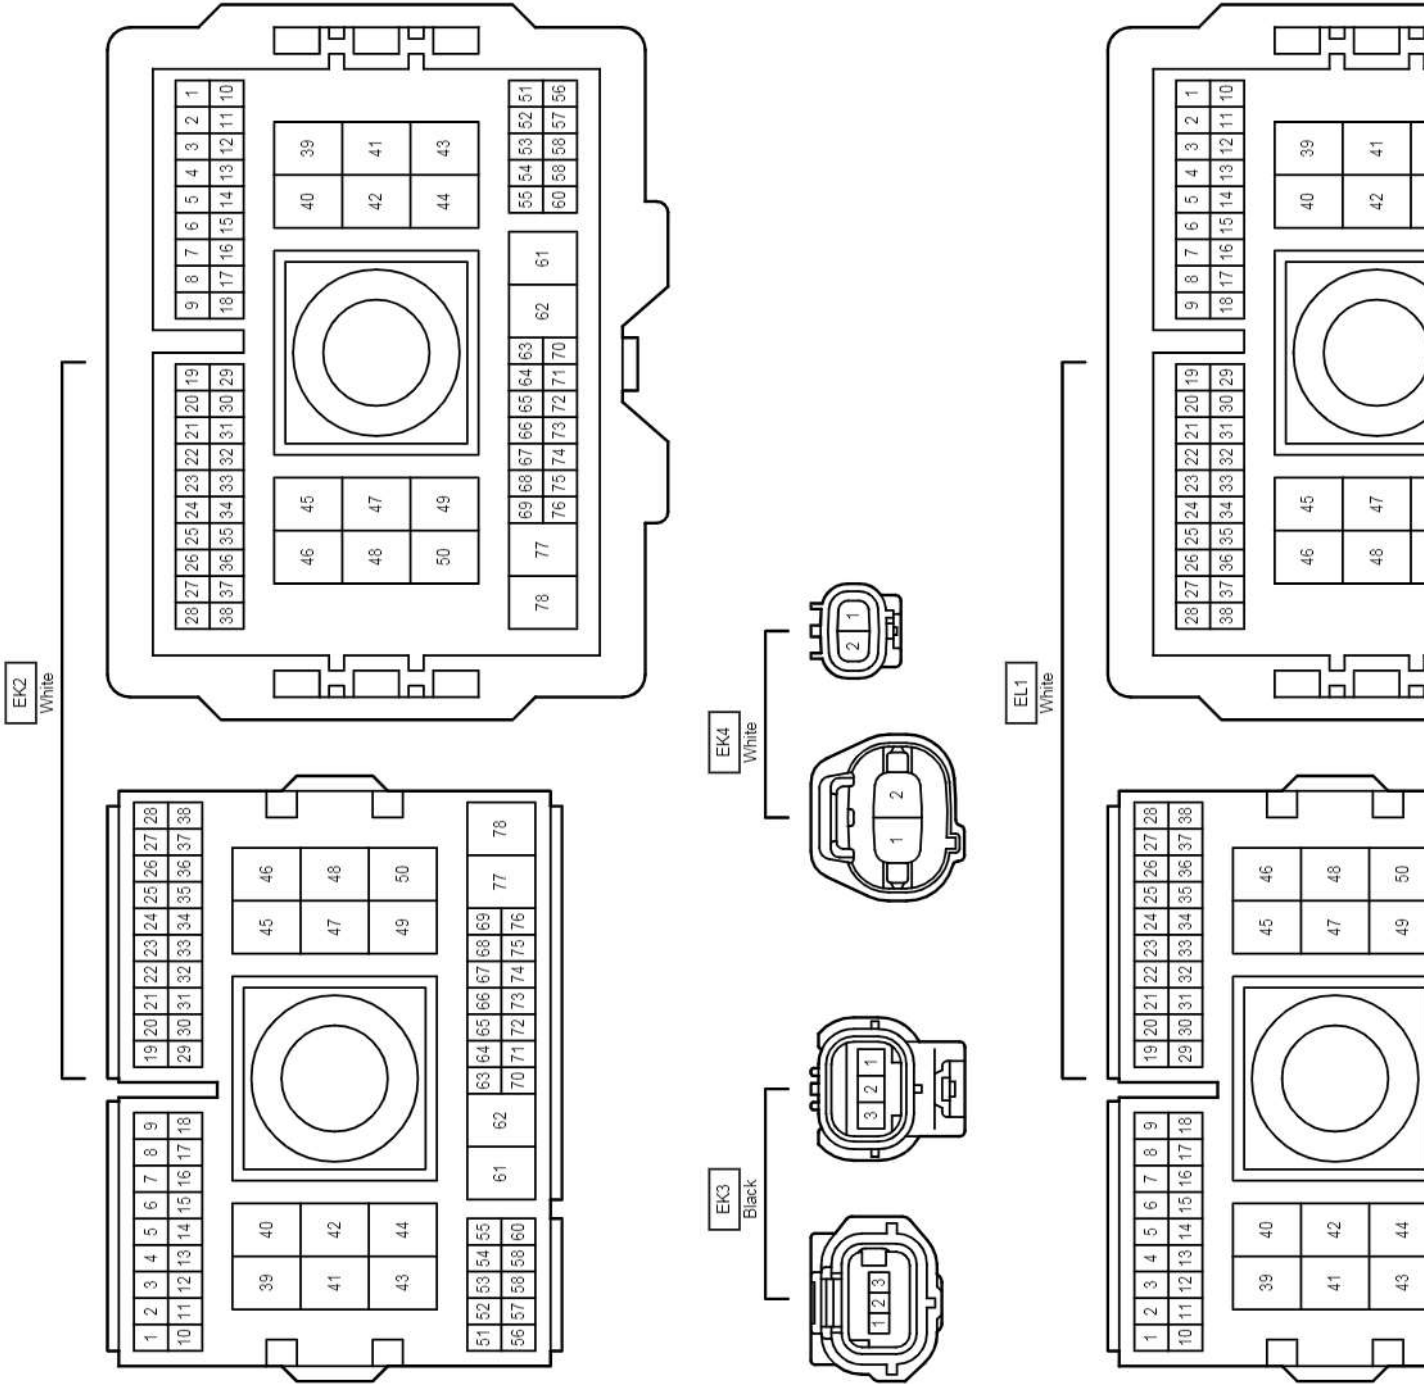


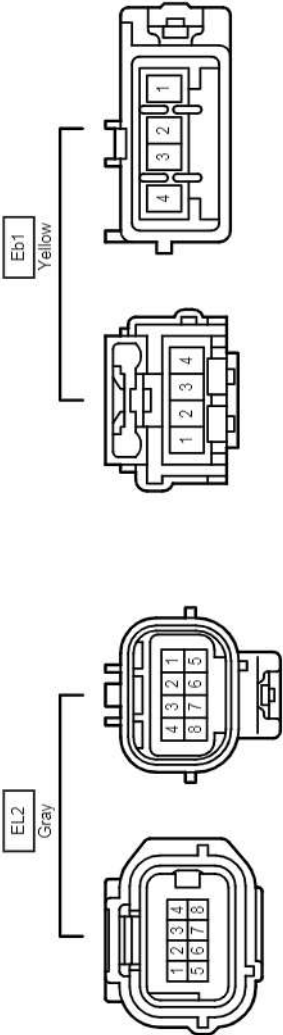


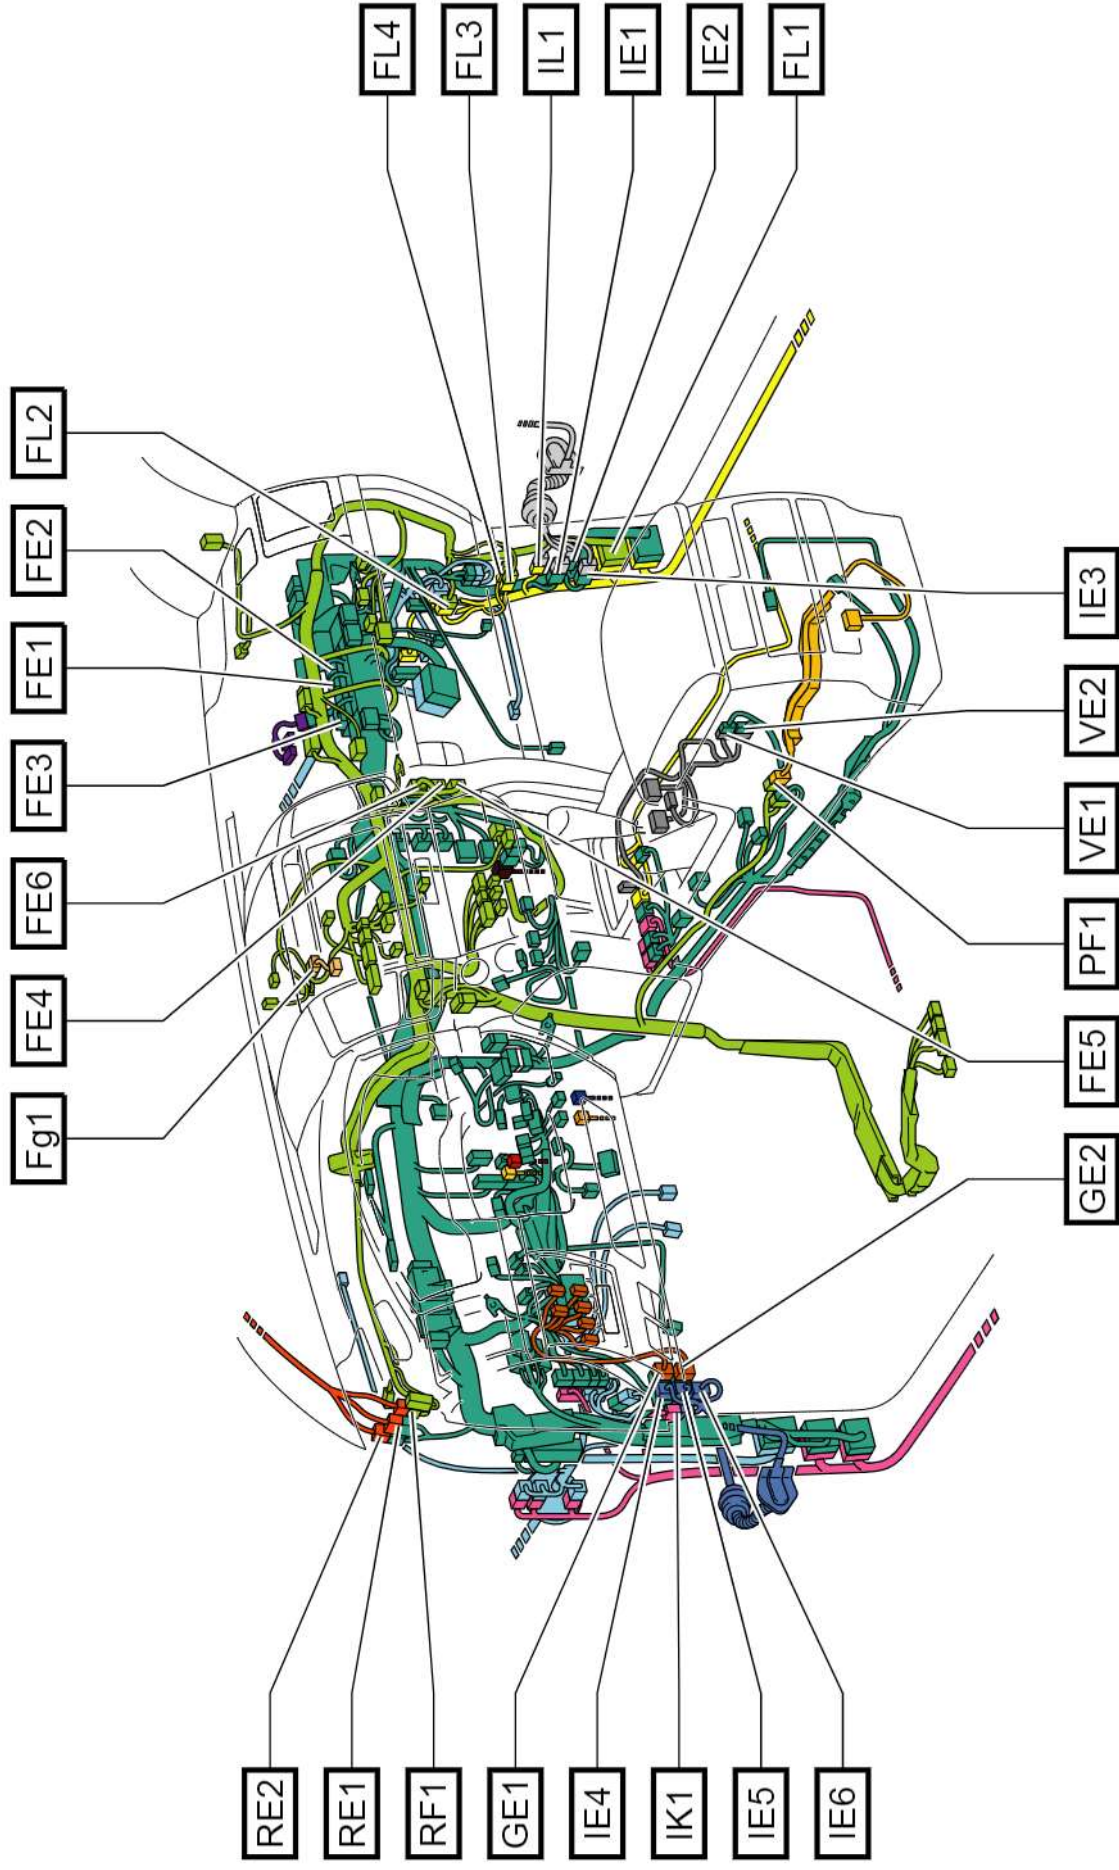


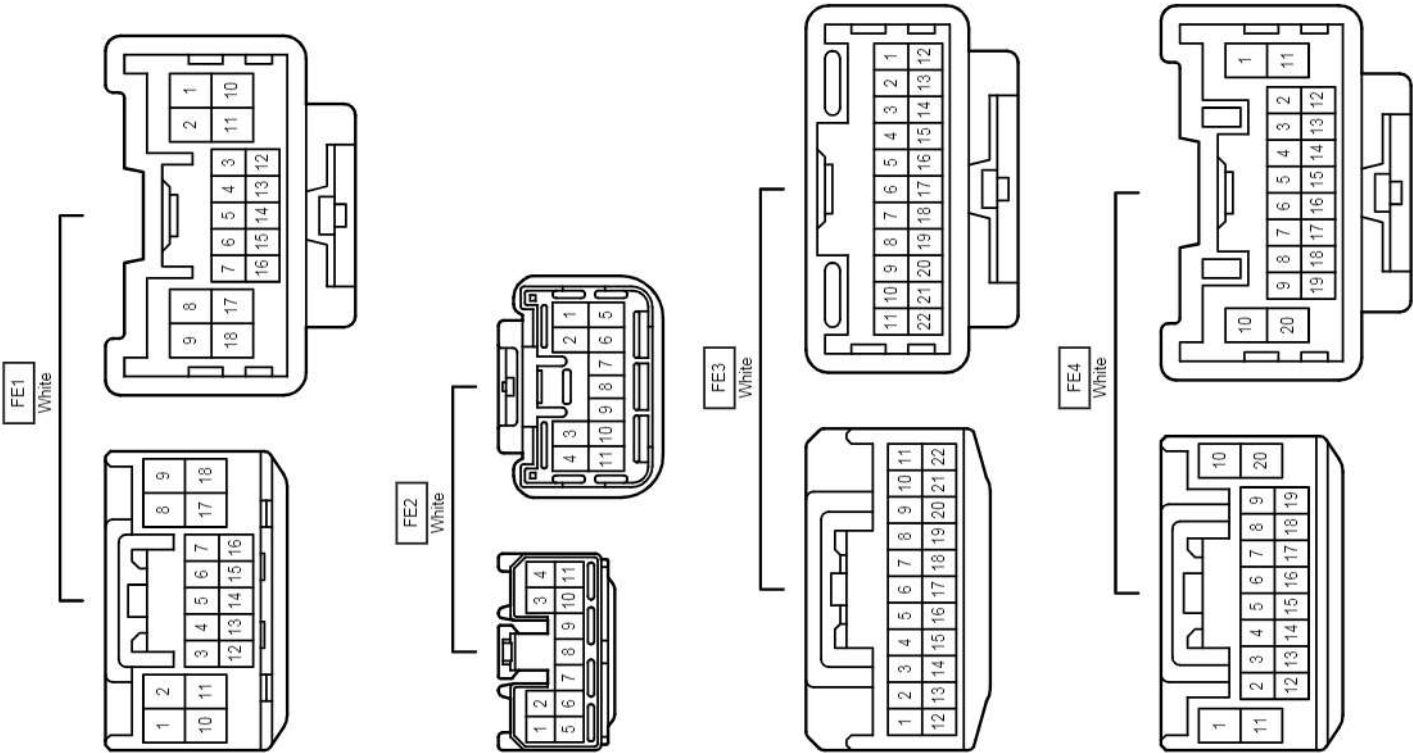


Wire and Wire in Instrument Panel

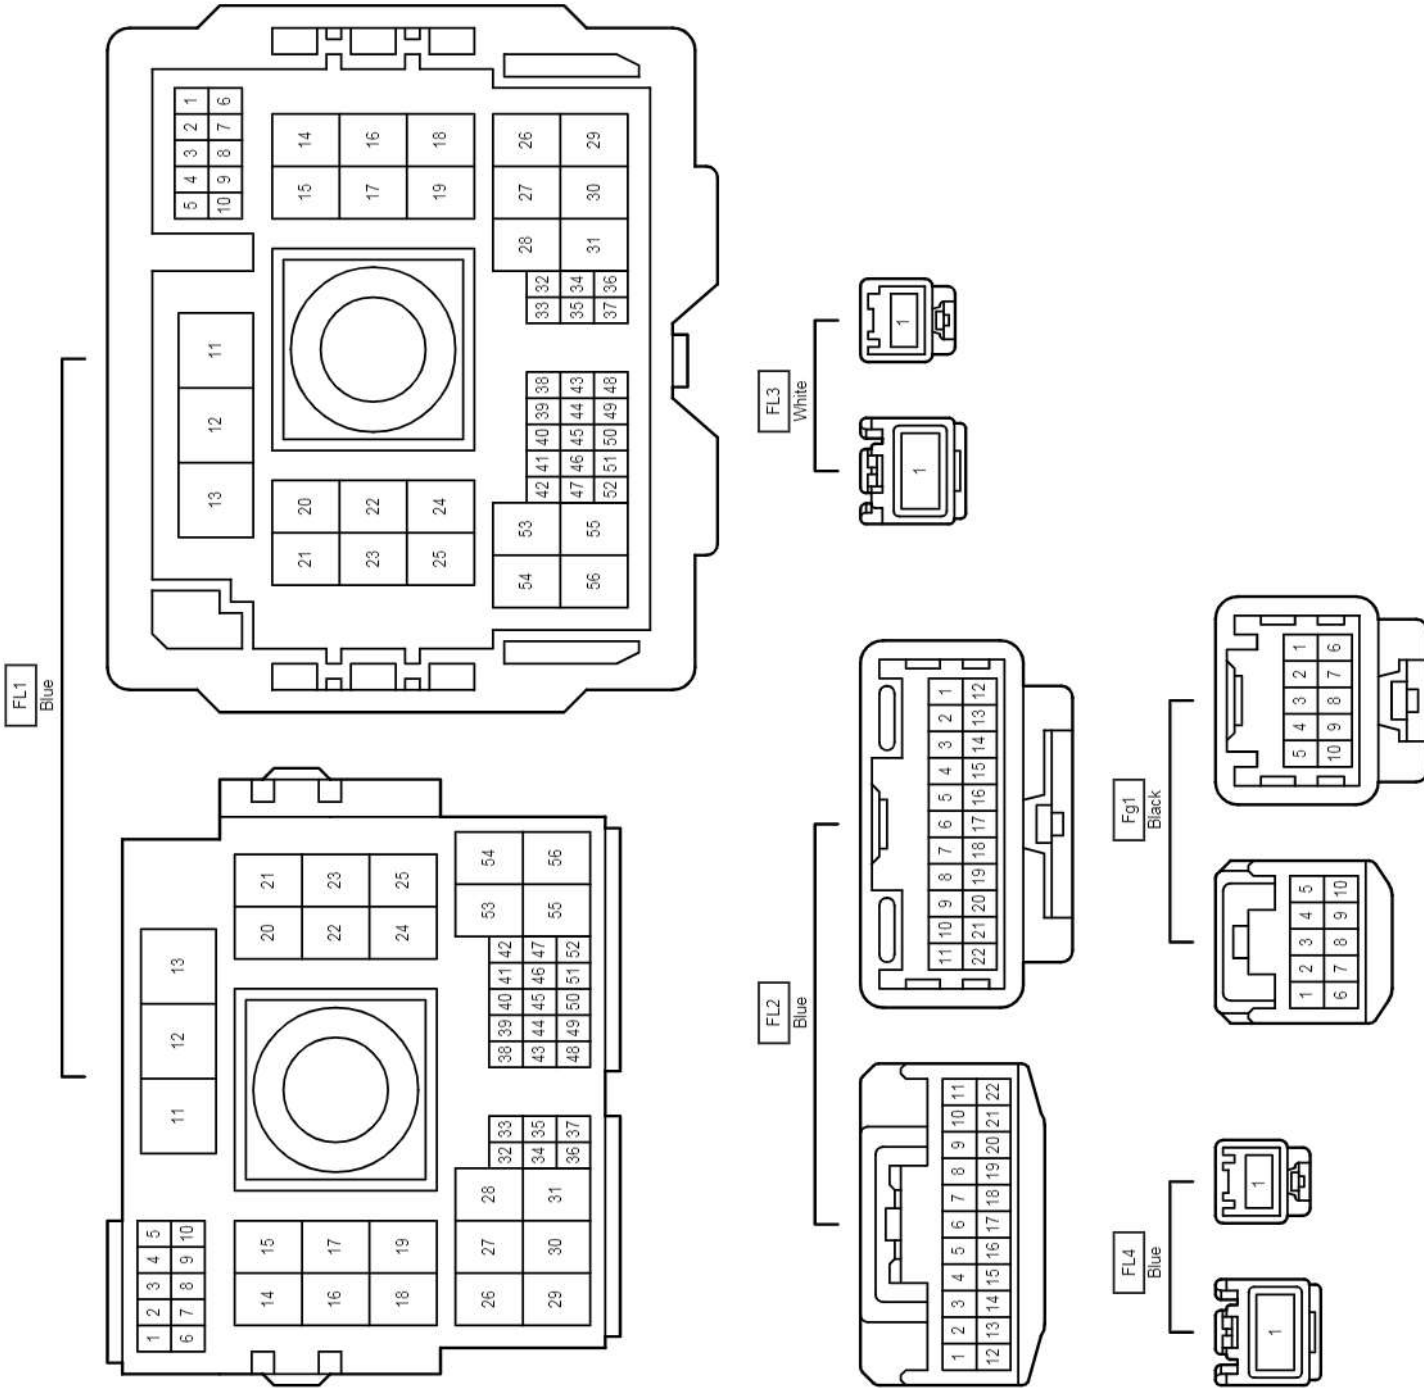


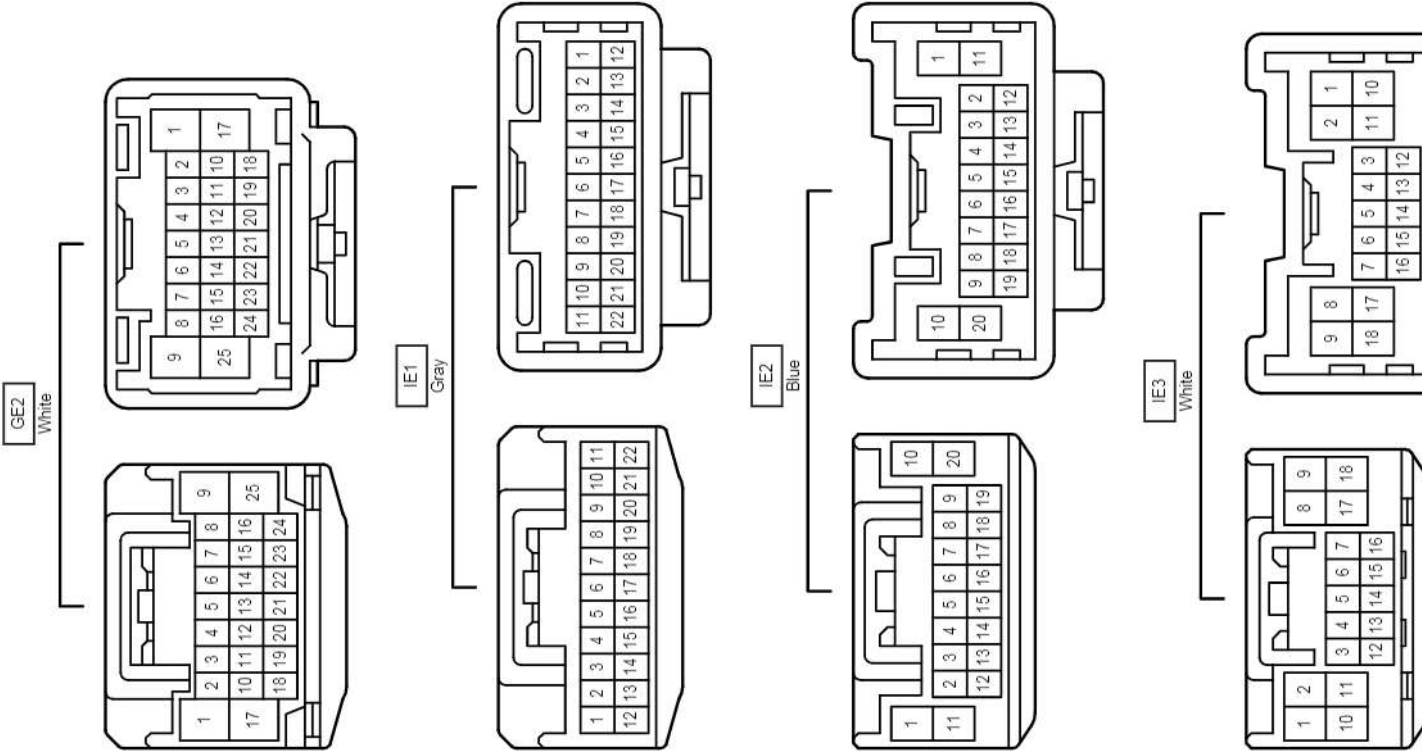

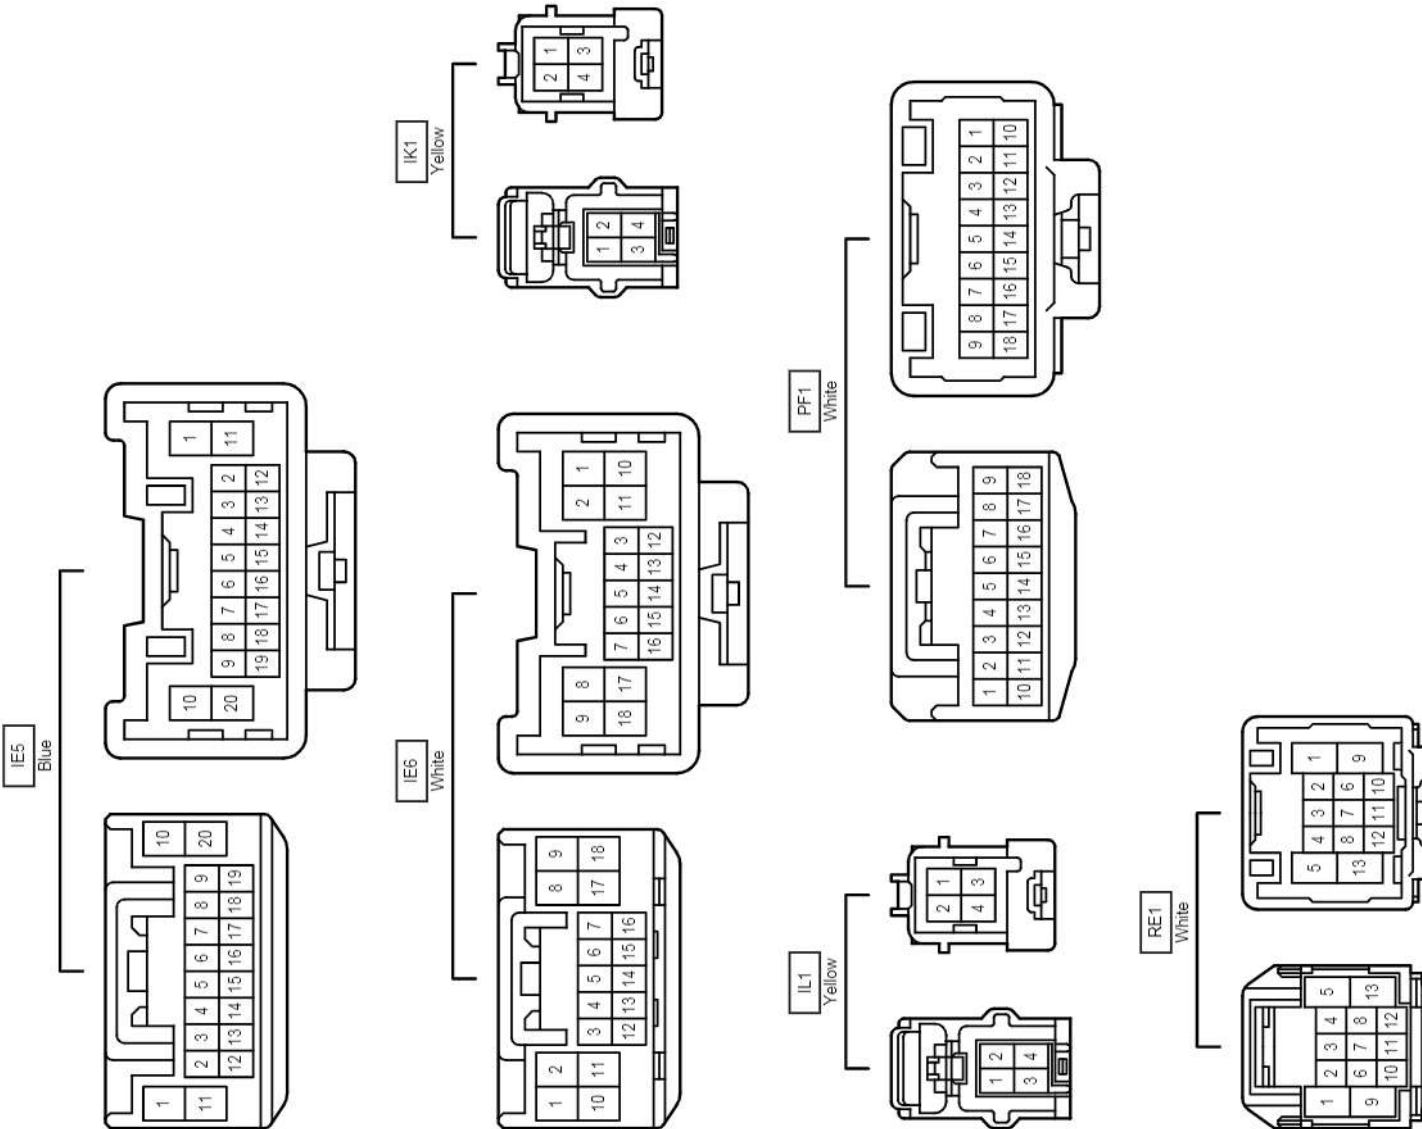

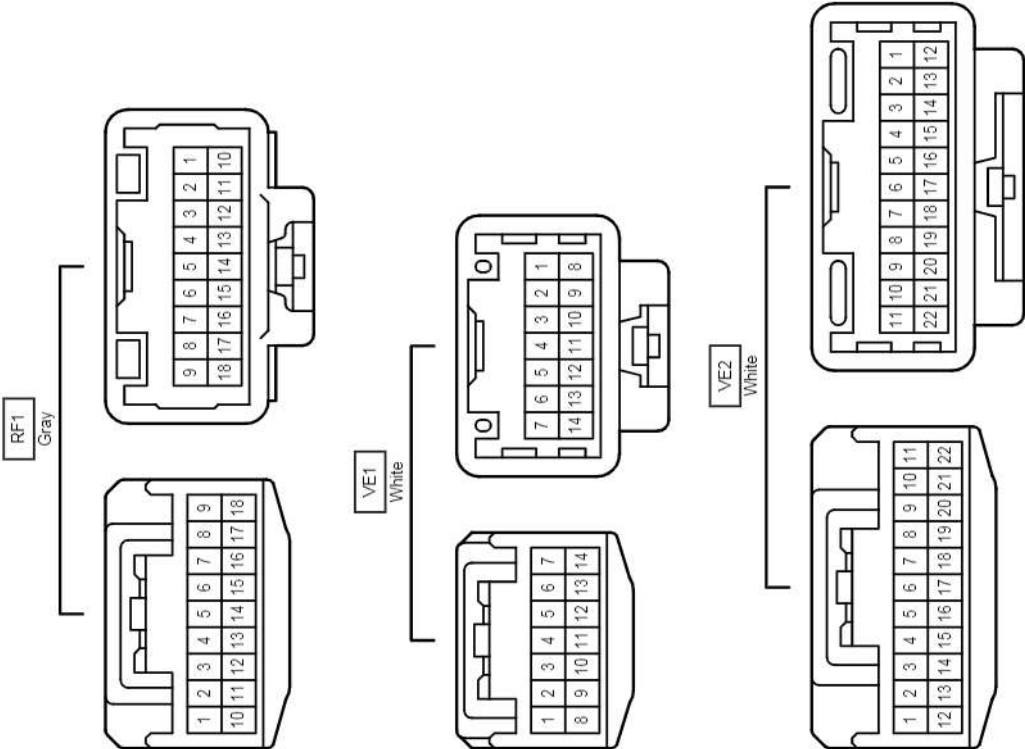

Position of Parts in Seat <Rear Seat>

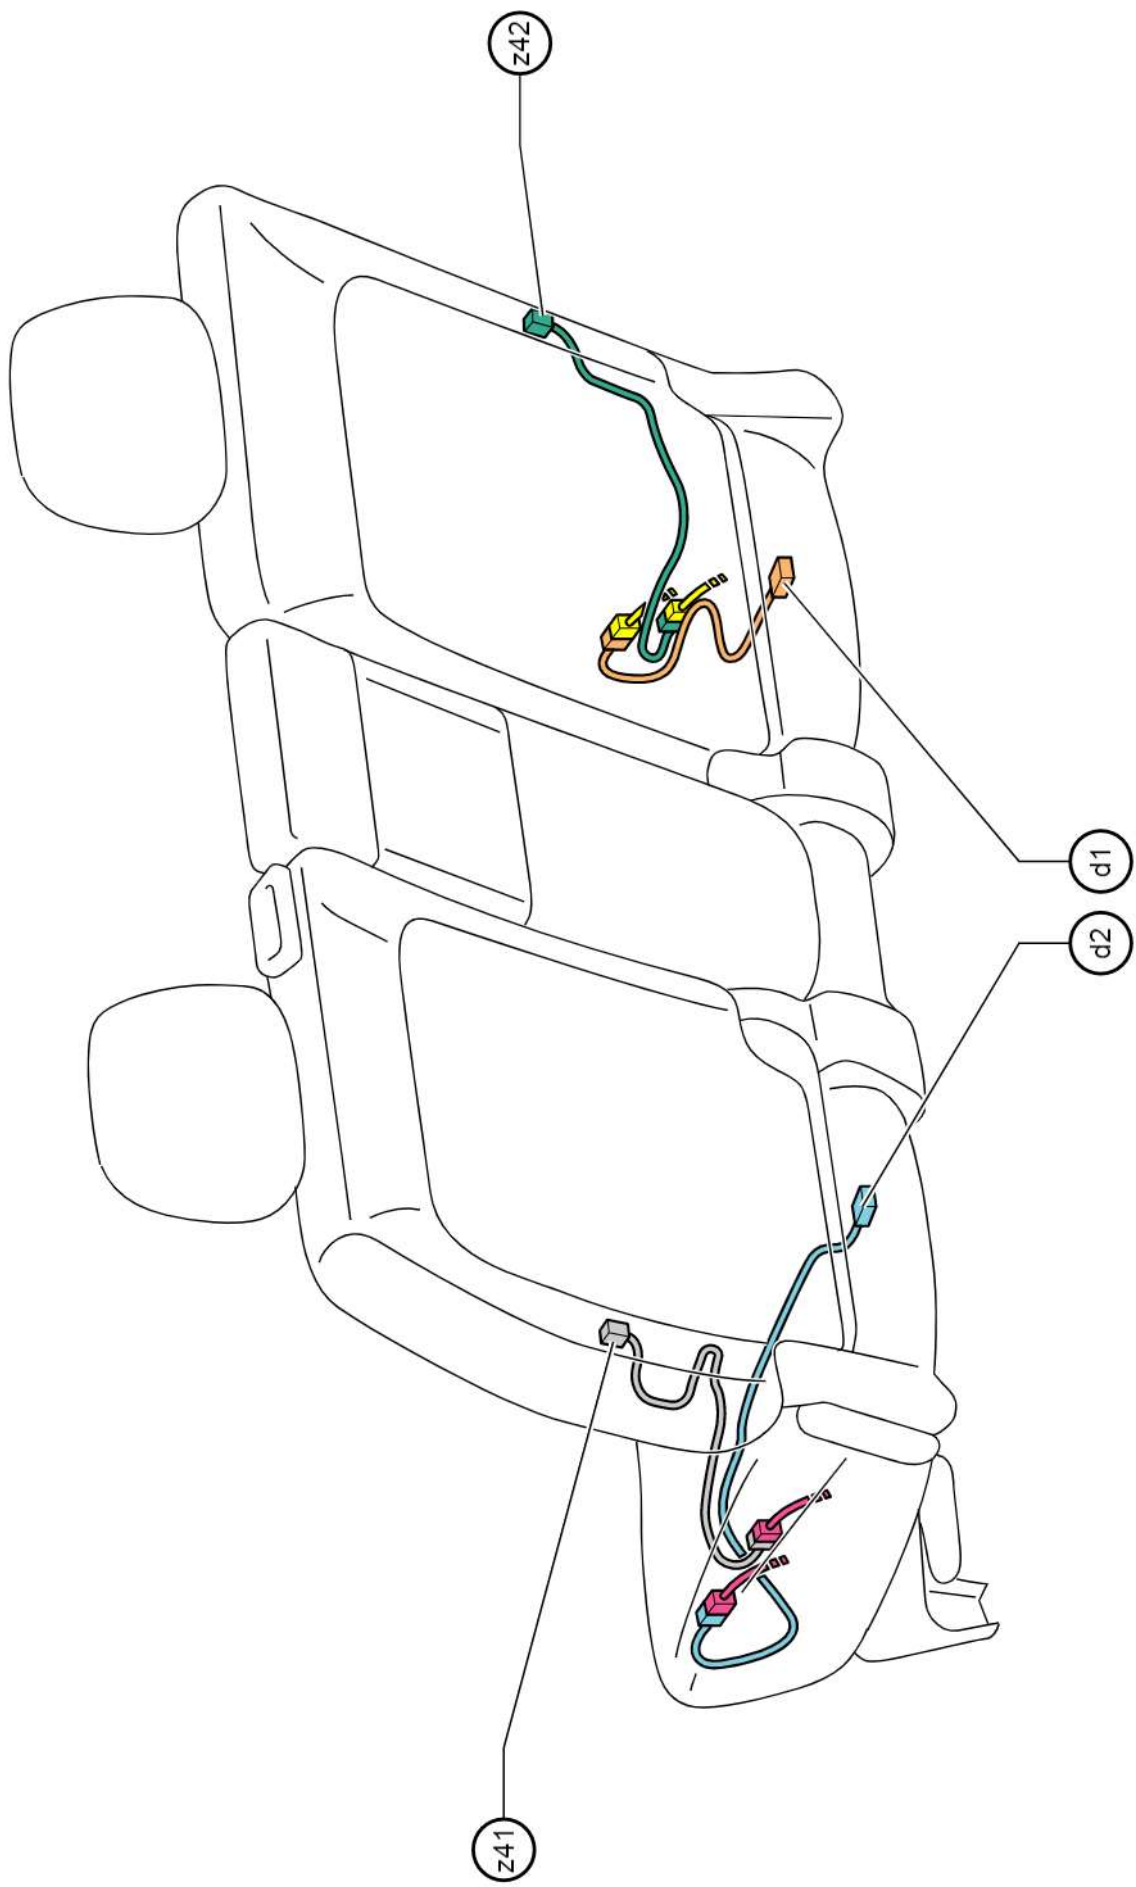

- d 1 Rear Seat Heater RH
- d 2 Rear Seat Heater LH
- z 41 Rear Side Airbag Squib Circuit LH
- z 42 Rear Side Airbag Squib Circuit RH

Position of Parts in Seat <Rear Seat>

